


Fish Tank Stand Assembly Instructions

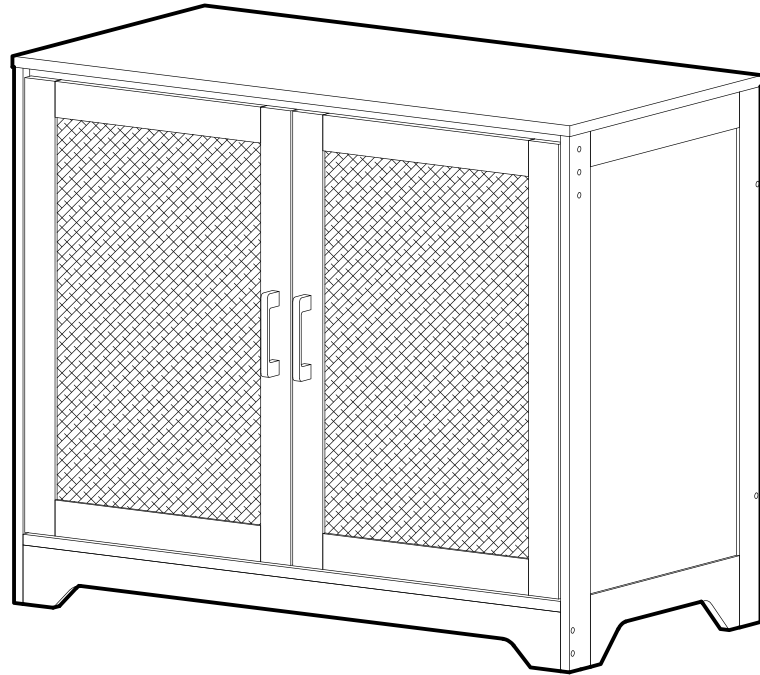

Scan QR code to
view assembly video



Universe Home Inc.

If you have any issues with the product,
please contact us.











☎ : +1 (877) 313 6212
(Mon–Fri, 8:00 am – 5:00 pm PT)

@ : info@universeh.com (24/7)

🌐 : unipawspro.com



Scan to submit a request
We'll reply within 1 business day

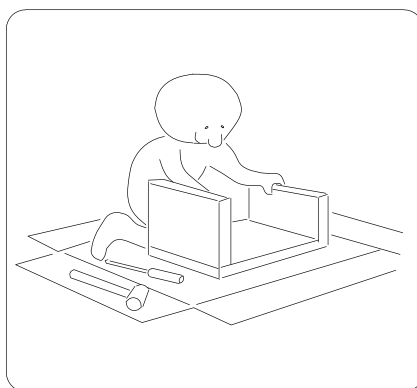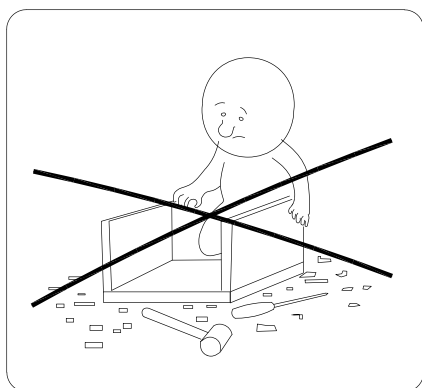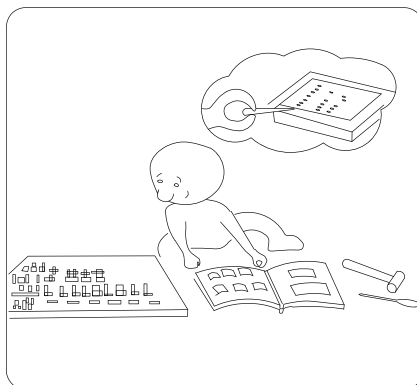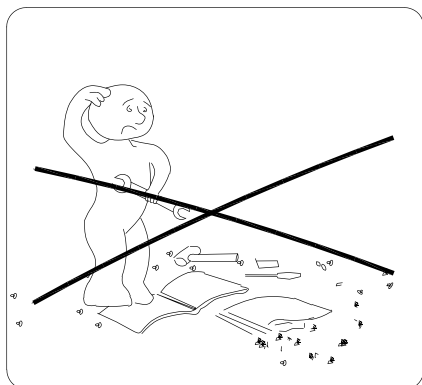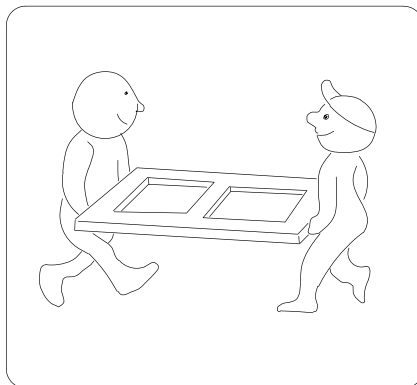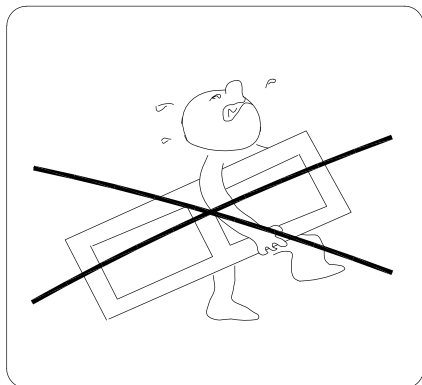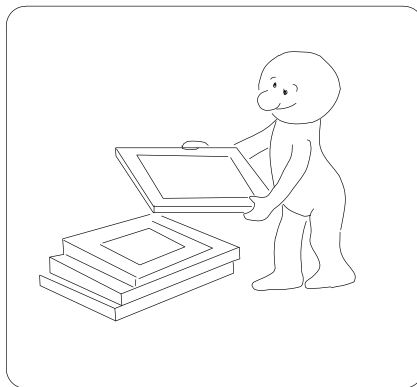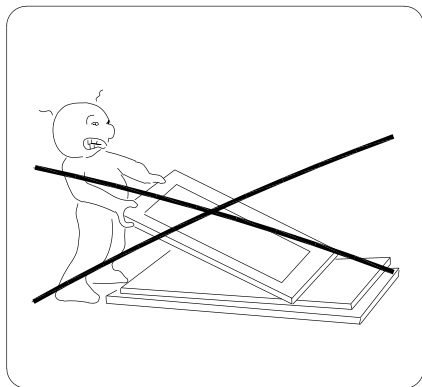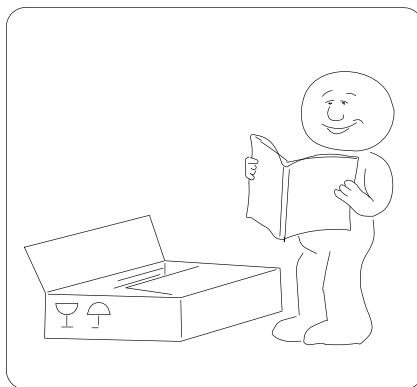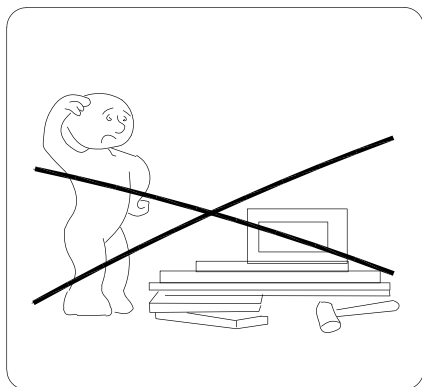



WARNING

1. PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE STARTING ASSEMBLY.
2. DO NOT LET ANY SHARP OBJECTS TOUCH OR RUB THE SURFACE OF THE PRODUCT.
3. WHEN ASSEMBLING, DO NOT LET CHILDREN PLAY AROUND THE WORKING AREA.
4. PLEASE CONFIRM ALL PARTS ARE CORRECT BEFORE STARTING THE ASSEMBLY PROCESS.
5. DO NOT TIGHTEN ALL BOLTS AND SCREWS COMPLETELY UNTIL THE ENTIRE UNIT HAS BEEN ASSEMBLED AND SET UP.

ADVISE


1. DO NOT SIT OR STAND ON THIS PRODUCT. IT IS INTENDED FOR PETS ONLY.
2. THIS PRODUCT SHOULD BE ASSEMBLED BY AN ADULT.
3. PLEASE PUT THE PRODUCT ON A SMOOTH SURFACE AFTER YOU ASSEMBLED IT.
4. PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
5. THE SCREW OF HINGE ON THE DOOR ALSO CAN BE ADJUSTABLE, TO MAKE IT EVEN THEN TIGHTEN ALL SCREWS.


TOOL NEEDED




SCREWDRIVER REQUIRED
- NOT INCLUDED

PARTS

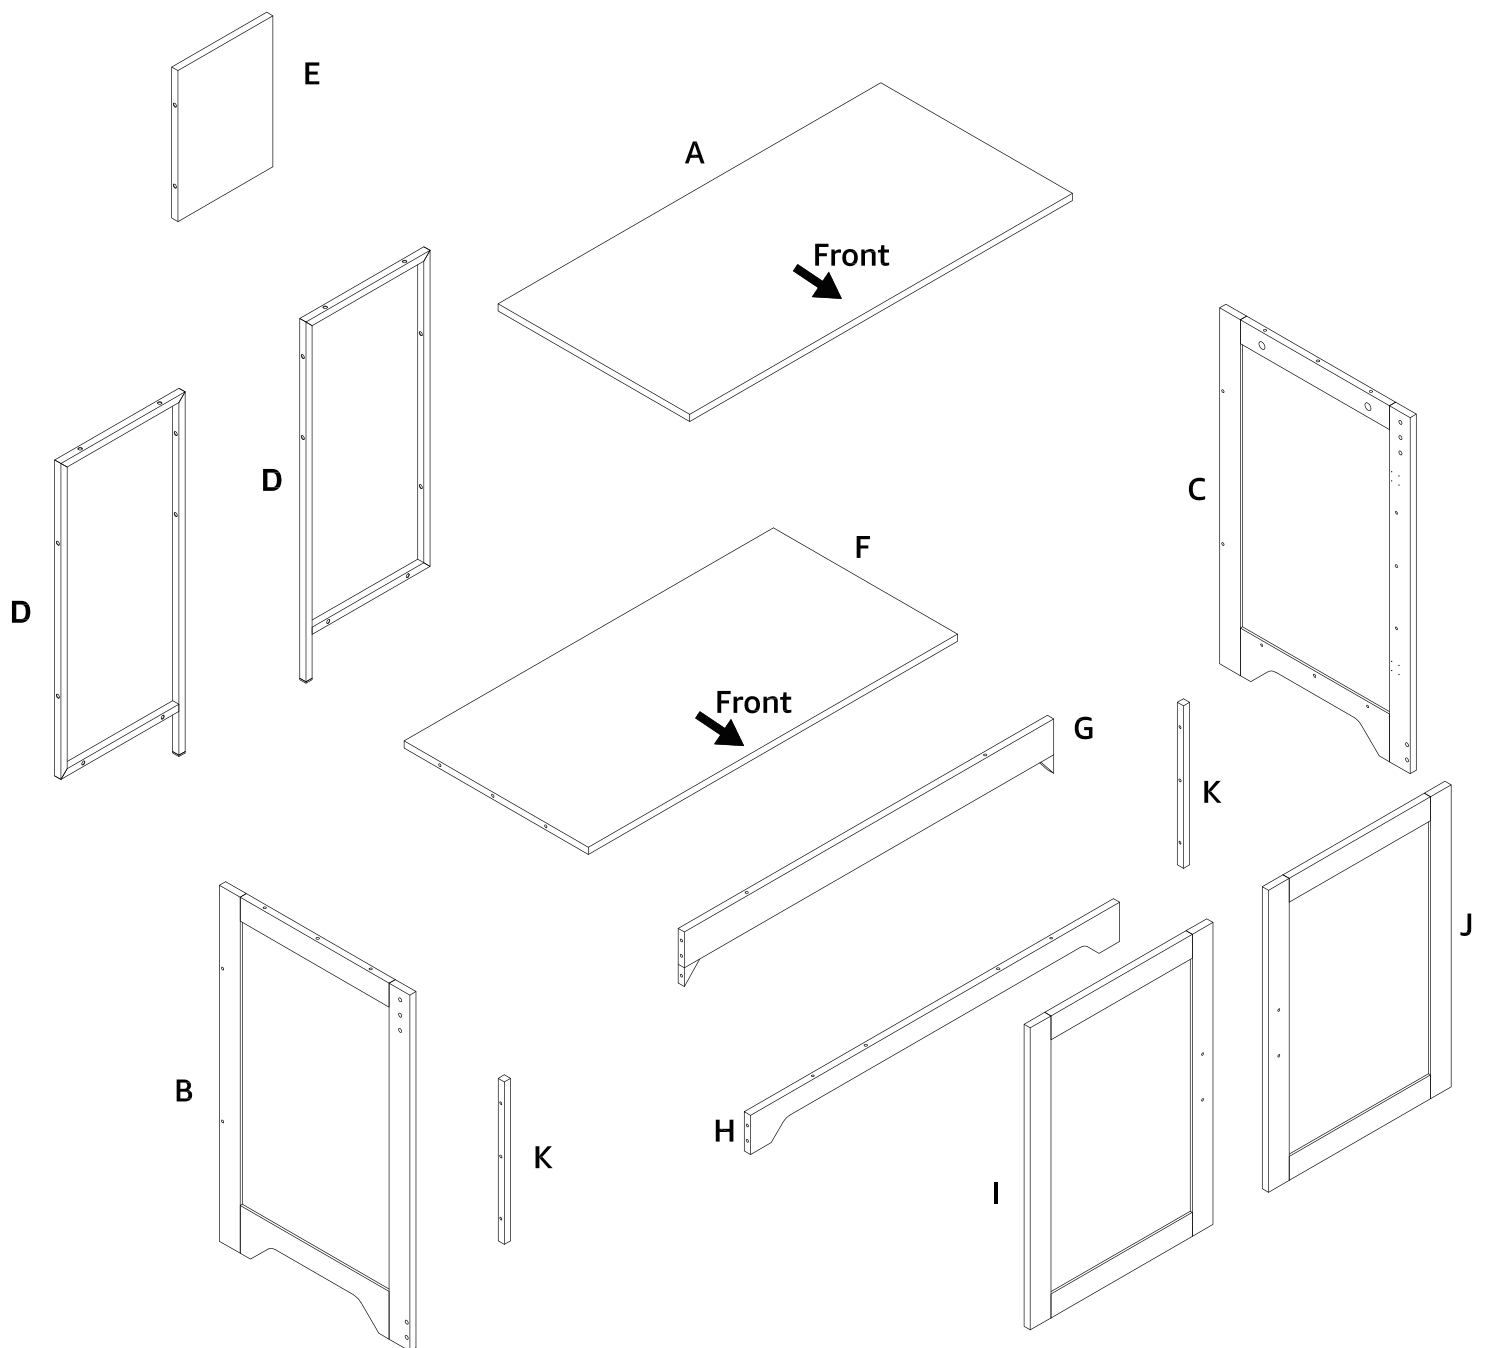


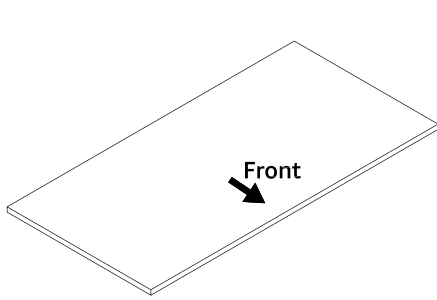


A
Top Panel
x1

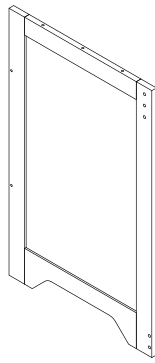


B
Left Side Panel
x1

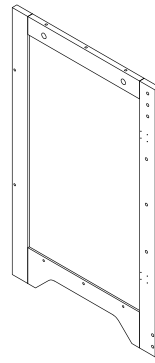


C
Right Side Panel
x1




D
Back Frame
x2




E
Back Panel
x1

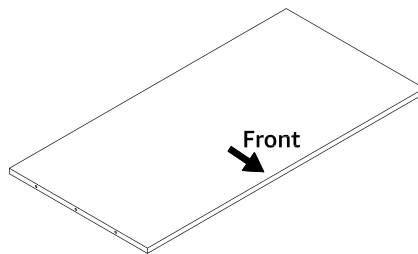


F
Bottom Panel
x1

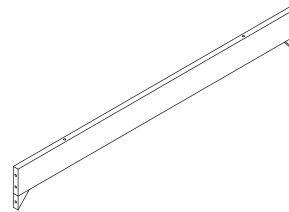


G
Upper-Front Panel
x1

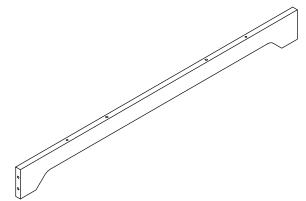

H
Support Bar
x1

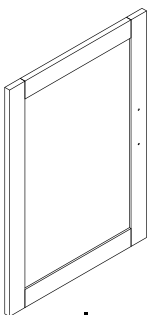

I
Left-Front Door
x1

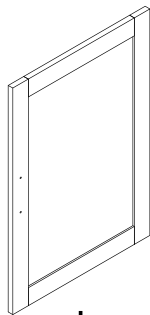


J
Right-Front Door
x1



K
Bar Iron
x2




HARDWARE

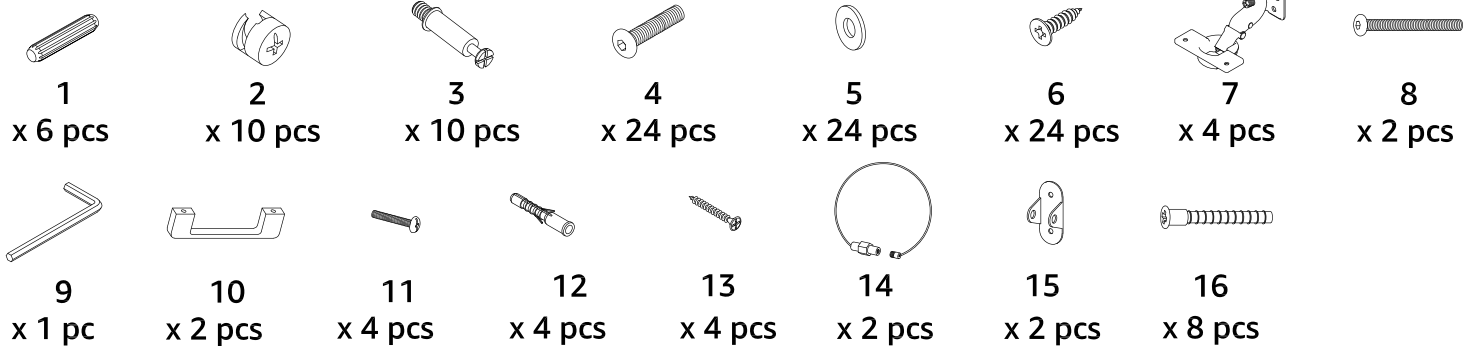

ASSEMBLY INSTRUCTIONS


1

- Insert Dowels (1) and Pins (3) into the Top Panel (A) and Side Panels (B, C).
- Attach Bar Irons (K) to Side Panels (B, C) using Screws (4) and Gaskets (5).

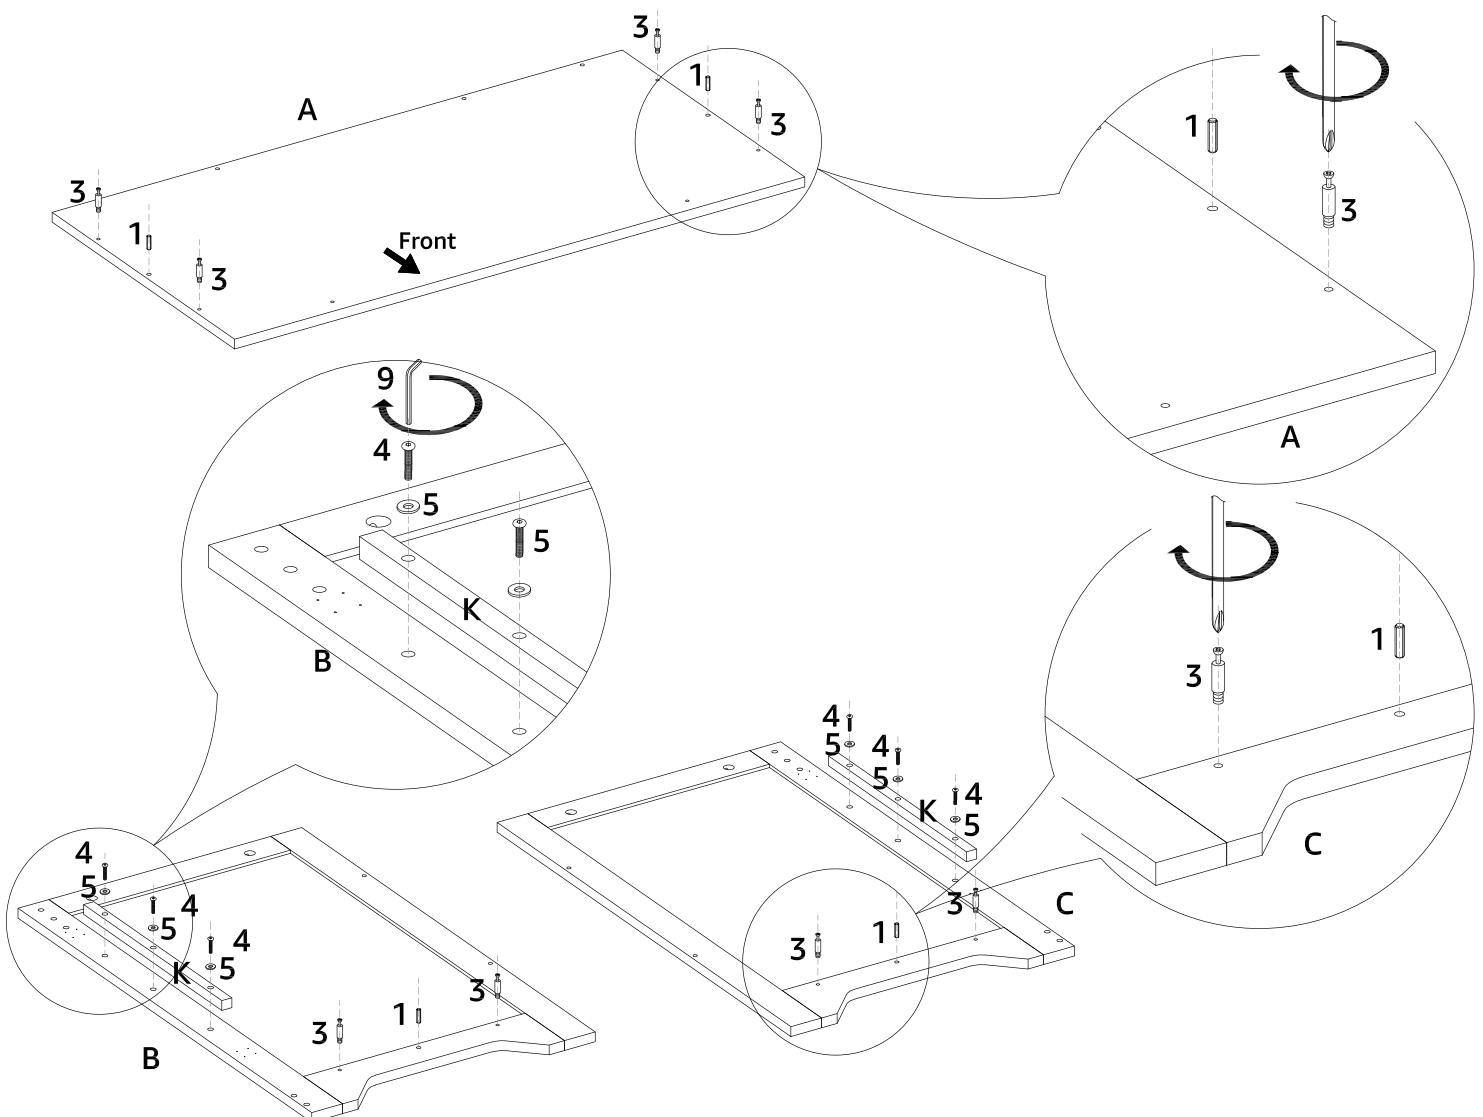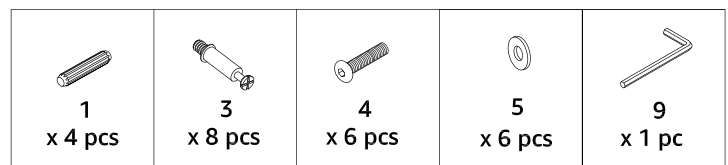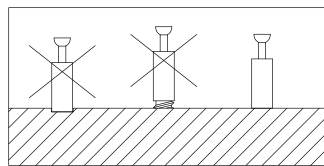


2

- Insert Dowels (1) and Pins (3) into the Bottom Panel (F).
- Attach the Support Bar (H) to the Bottom Panel (F) using Combiners (2).
- Connect Side Panels (B, C) to the Bottom Panel (F) using Screws (4) and Gaskets (5), then secure with Combiners (2).

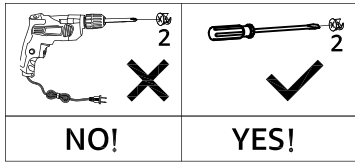

				
1 x 2 pcs	2 x 6 pcs	3 x 2 pcs	4 x 4 pcs	5 x 4 pcs

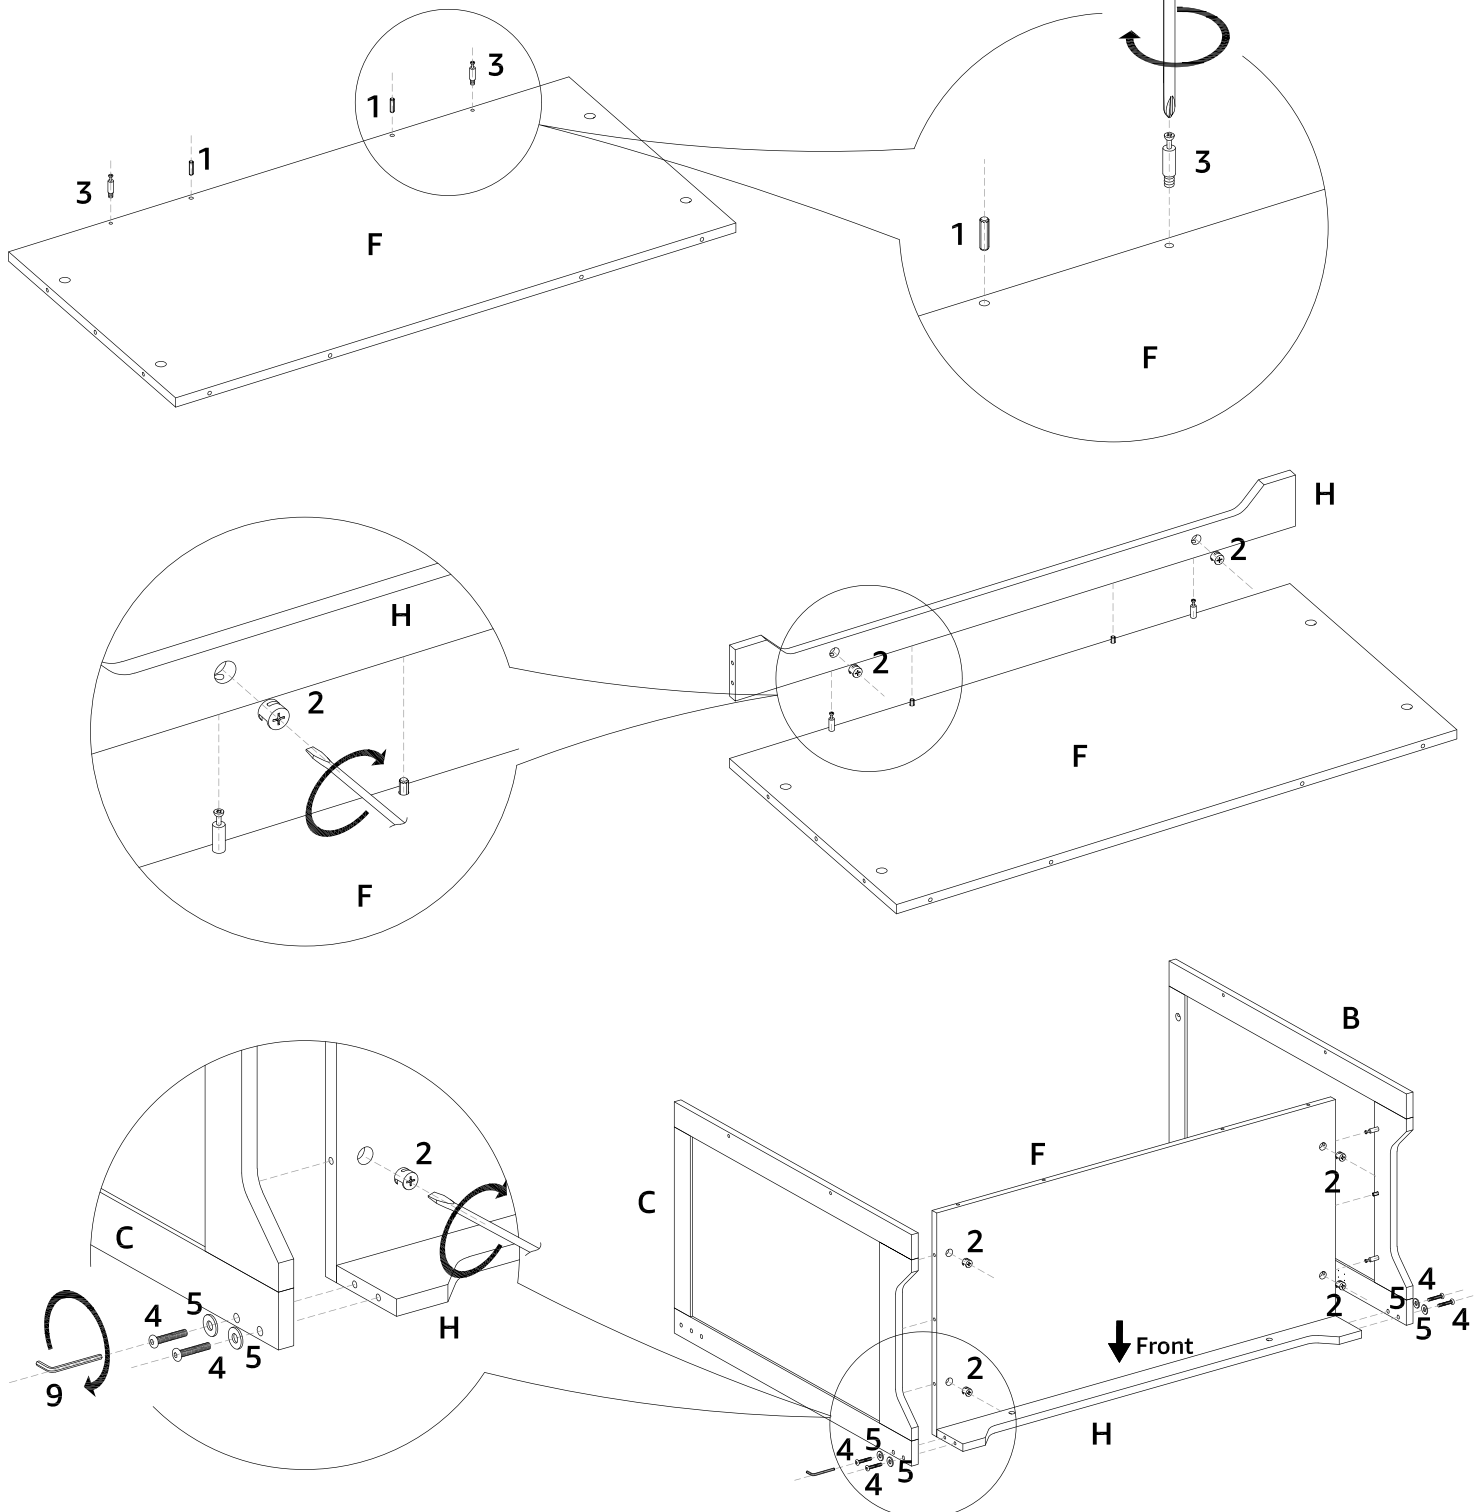


Contact us at: info@universeh.com

3



- Attach Back Frames (D) to Side Panels (B, C) and Bottom Panel (F) using Screws (4, 16) and Gaskets (5). (Note: Keep Screws (4) slightly loose).
- Secure the Back Panel (E) to the Frames (D) using Screws (16).
- Attach the Upper-Front Panel (G) to the Top Panel (A) using Screws (8).



			
4 x 4 pcs	16 x 8 pcs	5 x 4 pcs	8 x 2 pcs

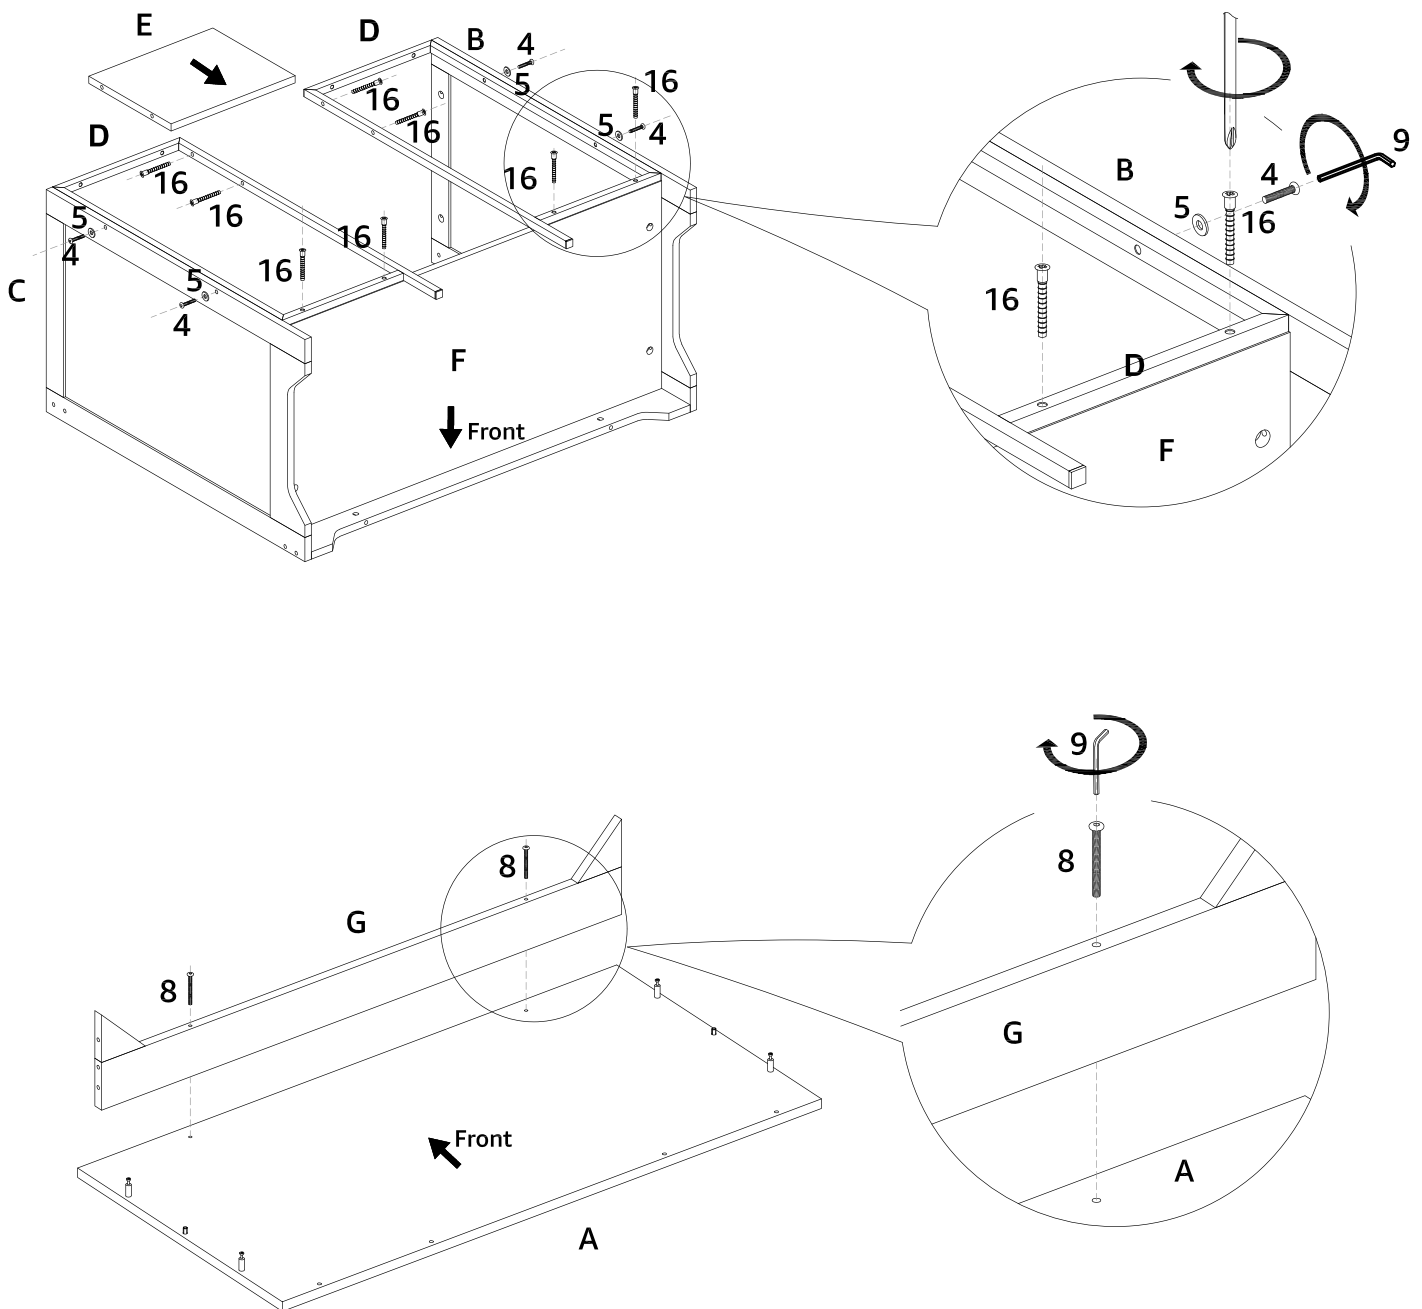

4




- Secure the Top Panel (A) to the main body using Screws (4), Gaskets (5), and Combiners (2).
- Secure the Bottom Panel (G) between the side panels using Screws (4) and Gaskets (5) with the Allen wrench (9).
- Now, fully tighten all loose screws from previous steps.

 2 x 4 pcs	 4 x 10 pcs	 5 x 10 pcs	  2 NO!	  2 YES!
---	--	--	---	--

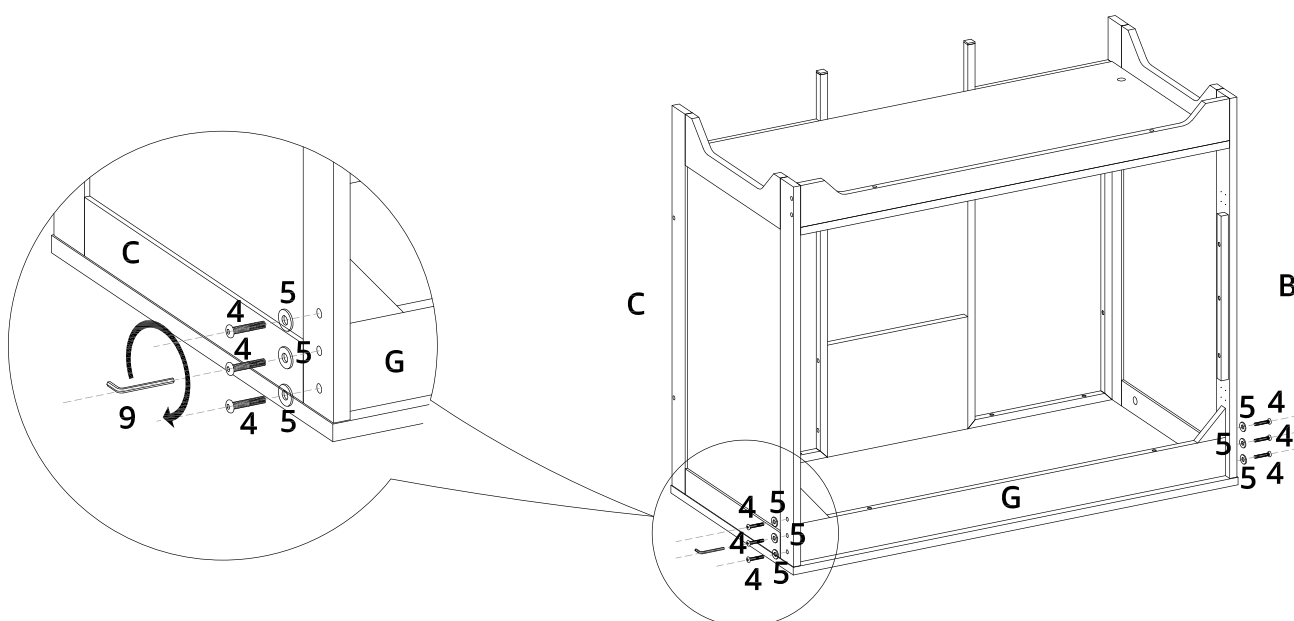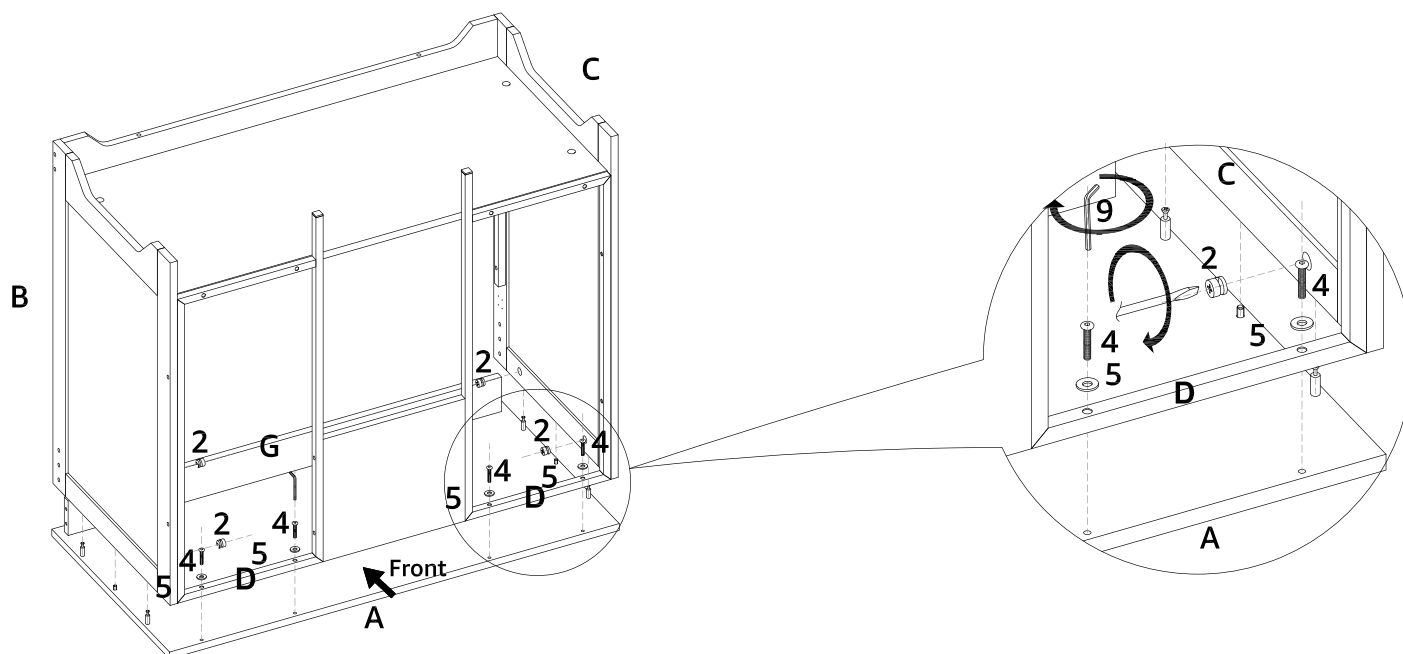

5



- Attach Hinges (7) to both Doors (I, J) using Screws (6).
- Mount the Doors (I, J) to the Side Panels (B, C) using Screws (6).

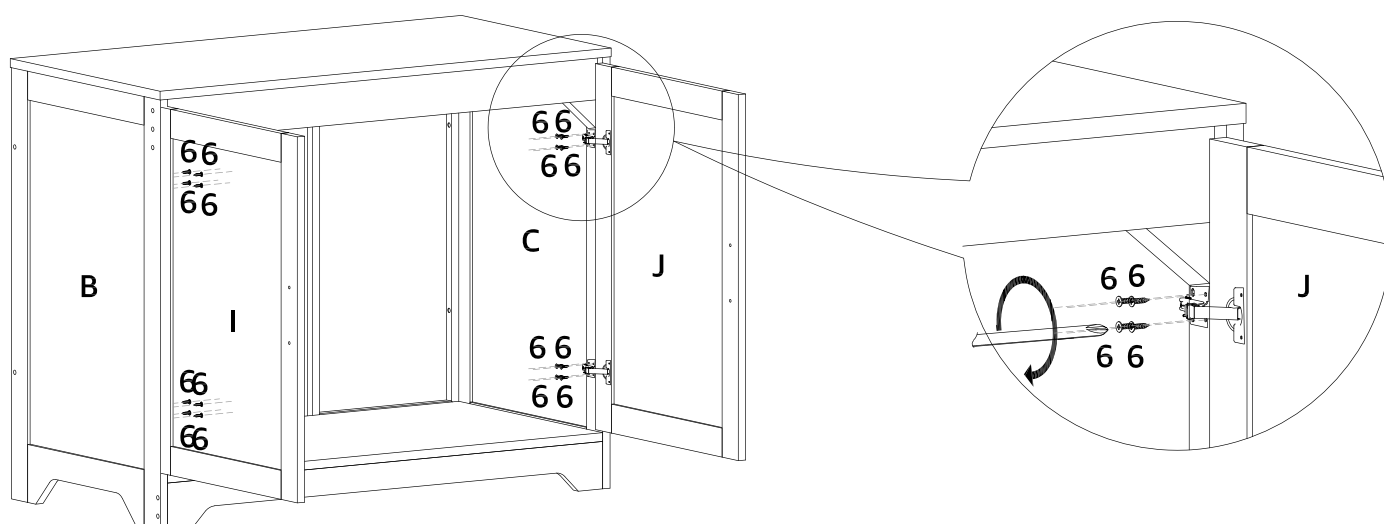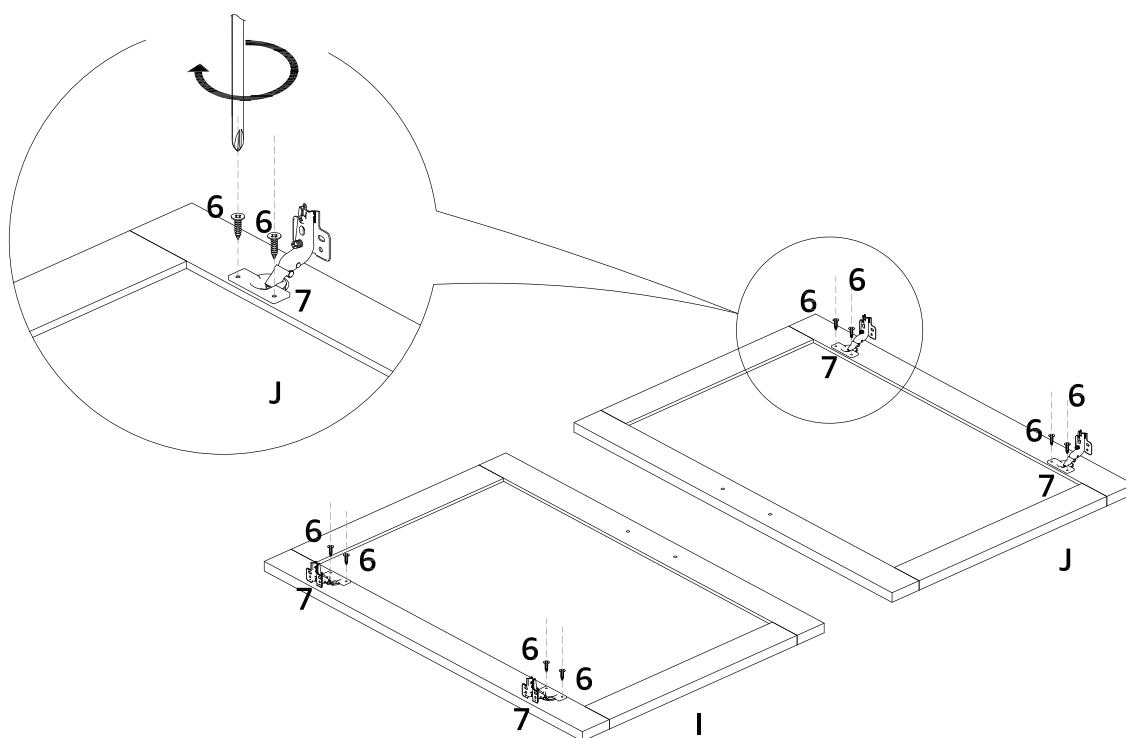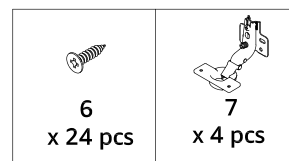

6

- Attach Handles (10) to the Doors (I, J) using Screws (11).
- For maximum safety, secure the cabinet to the wall using the provided wall anchor hardware (12, 13, 14, 15).

					
10 x 2 pcs	11 x 4 pcs	12 x 4 pcs	13 x 4 pcs	14 x 2 pcs	15 x 2 pcs

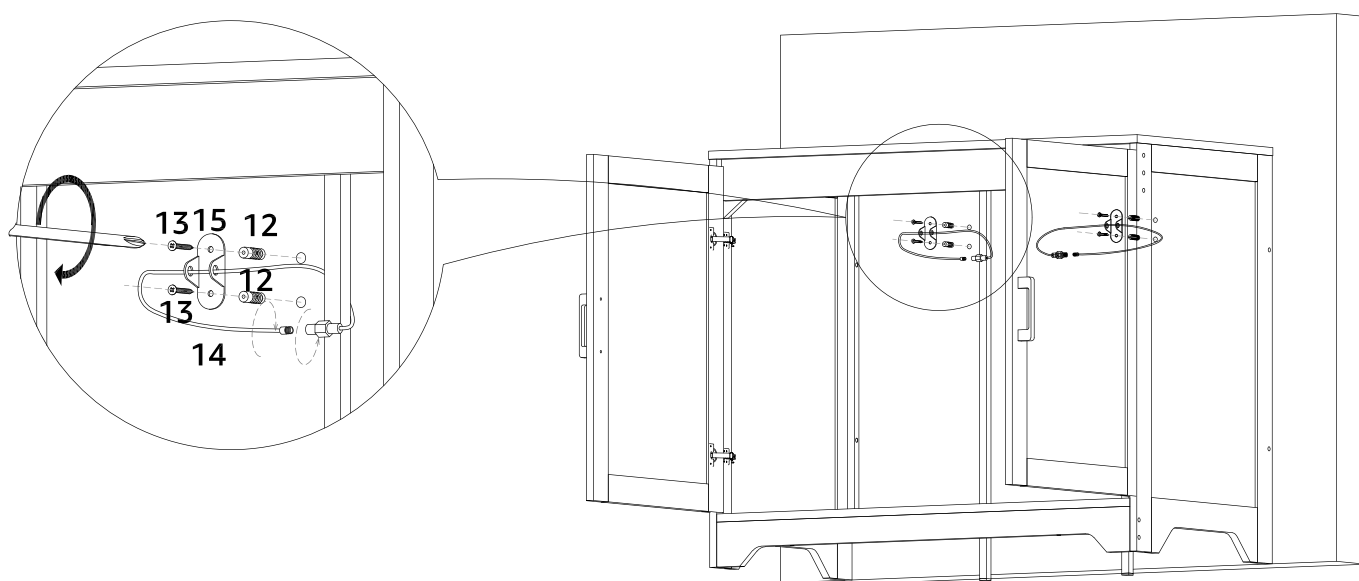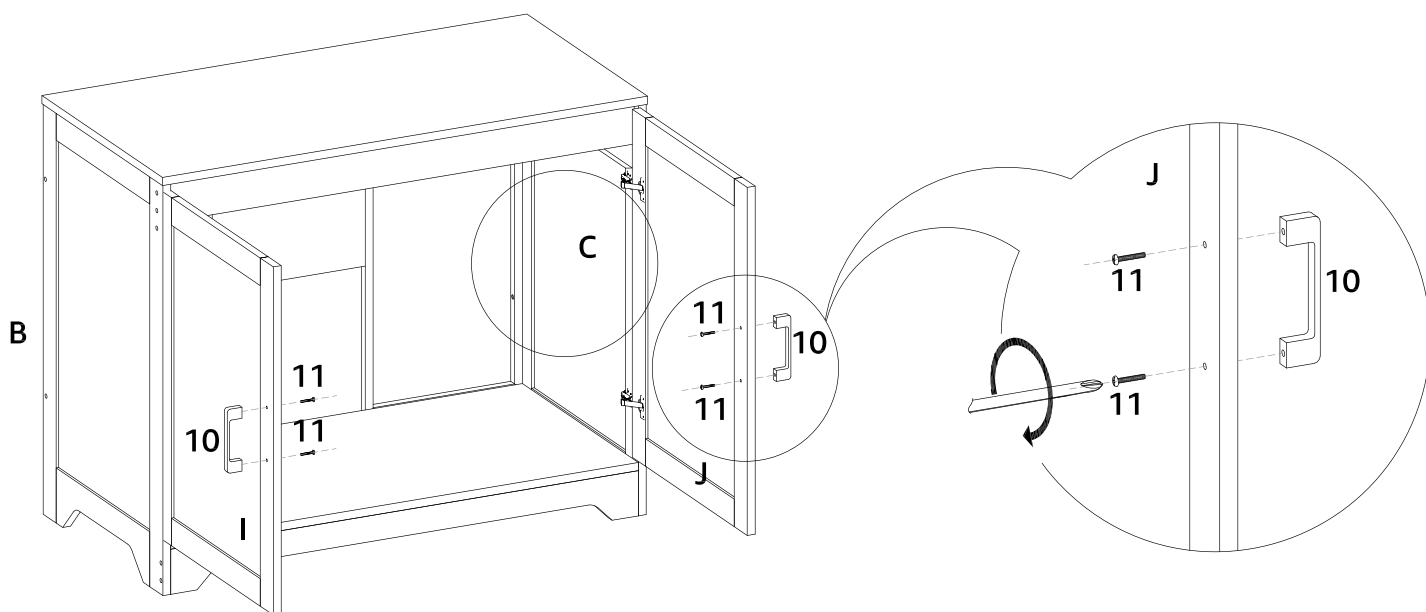


7




Tip: If the doors are uneven, slowly adjust the screws on the internal hinges until aligned.


Doors are not level
(Up/Down misalignment)

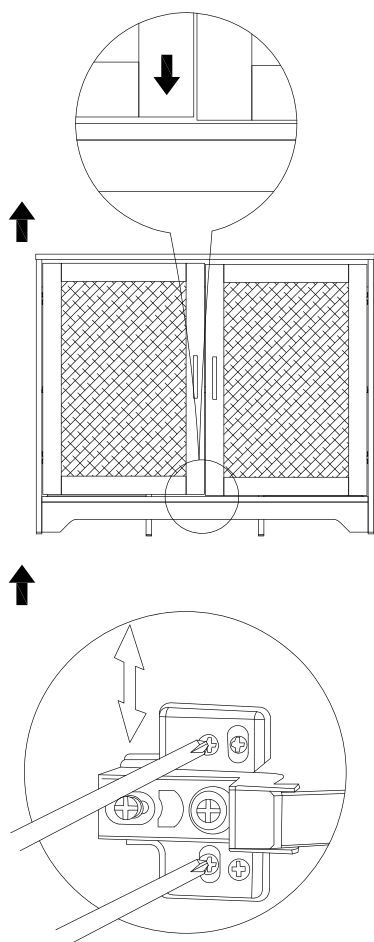

Doors are not flush
(In/Out misalignment)

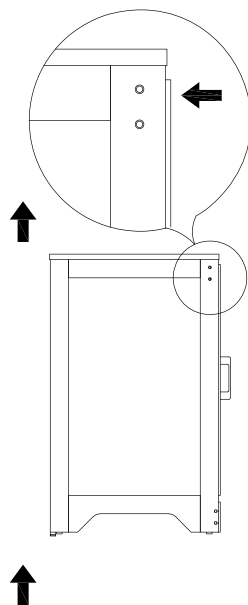

Gap between doors is uneven
(Left/Right gap)

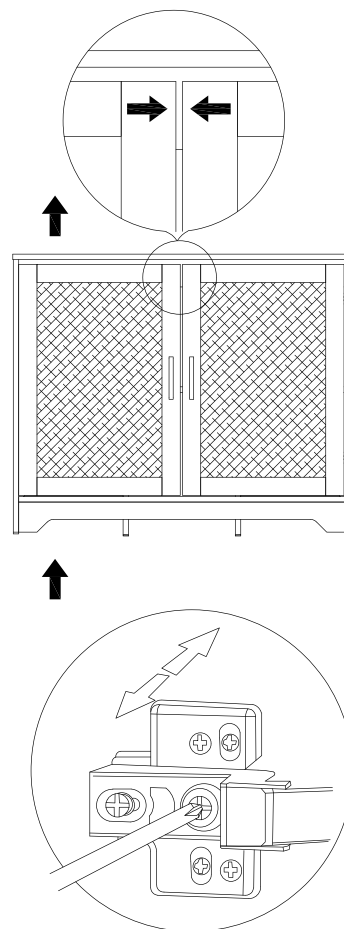

Scan QR code
for a video tutorial

