
Installation instructions

Thank You!


You're only a few steps away from your perfect raised garden bed with trellis or outdoor privacy screen with planters.

Before You Start







Please read the instructions carefully to familiarize yourself with every detail and step involved. Keep this manual for future reference. Find a suitable space to assemble your new Raised Garden Bed.


Important Notes

Small parts are included; we advise you to keep them away from children and pets.
We also suggest having another person help you assemble.

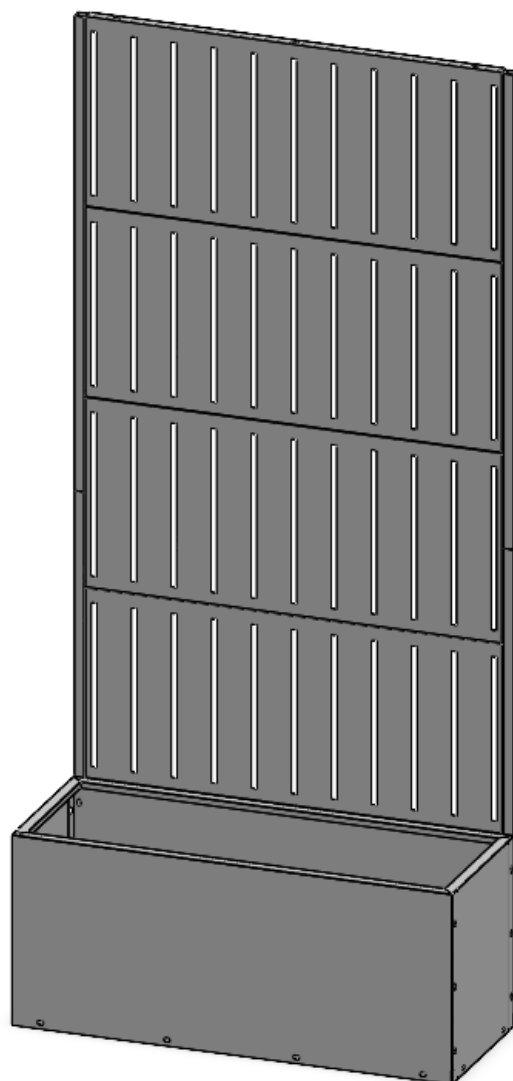


size : 1500*750*300

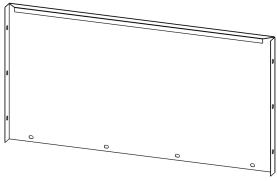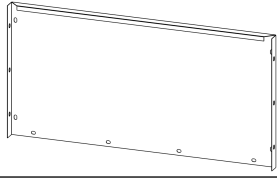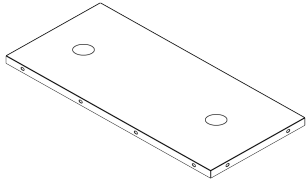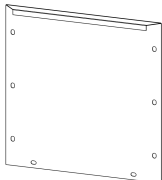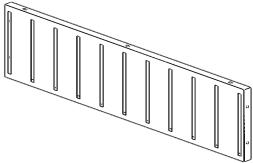NO.	PARTS	QTY
A		1PCS
B		1PCS
C		1PCS
D		2PCS
F		4PCS
G		2PCS
H		2PCS
I	 M6*12MM	49PCS
J		2PCS


NO.	PARTS	QTY
K	 M6	33PCS
L	 M6*30MM	4PCS
M		1PCS
N		1PCS

Assembly

1. Assemble panel A and panel D as shown in the picture and fix them with bolts I and screws K.

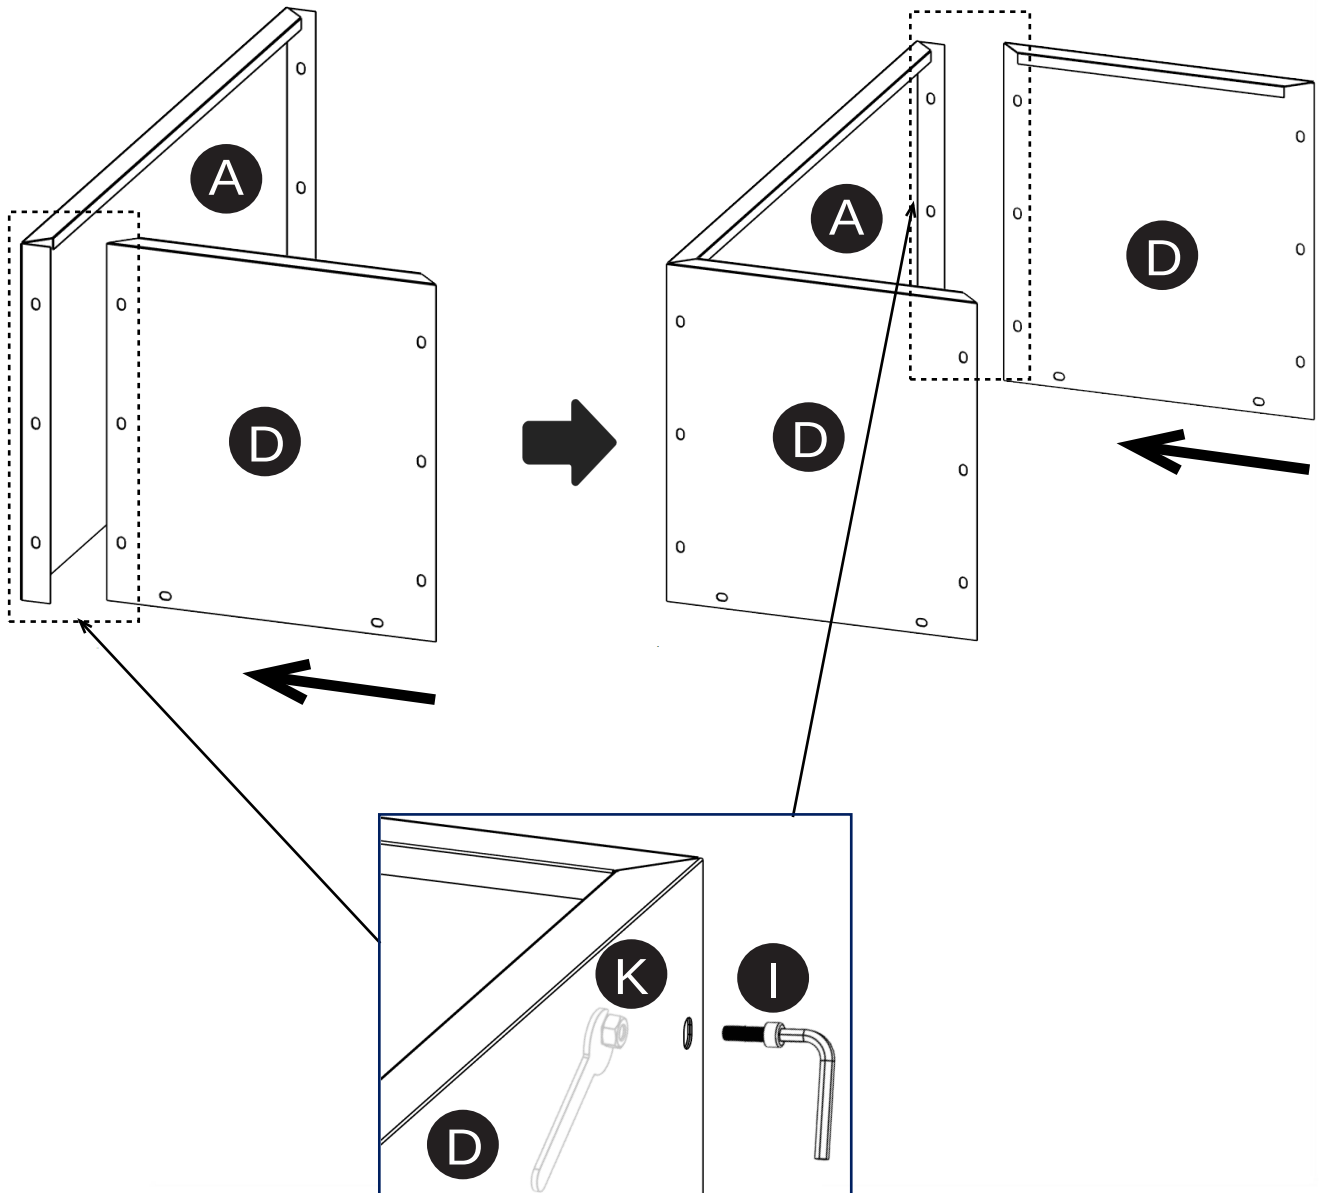


(IMAGE 1)

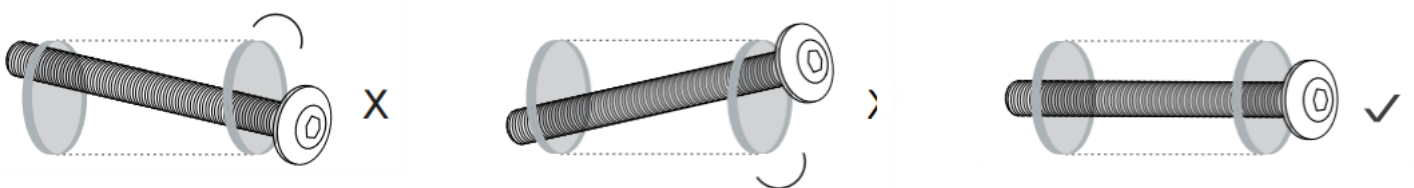

(IMAGE 2)


Assembly

2. Assemble the bottom plate C and the panel AD as shown in the figure, and secure them with bolts I and nuts K.

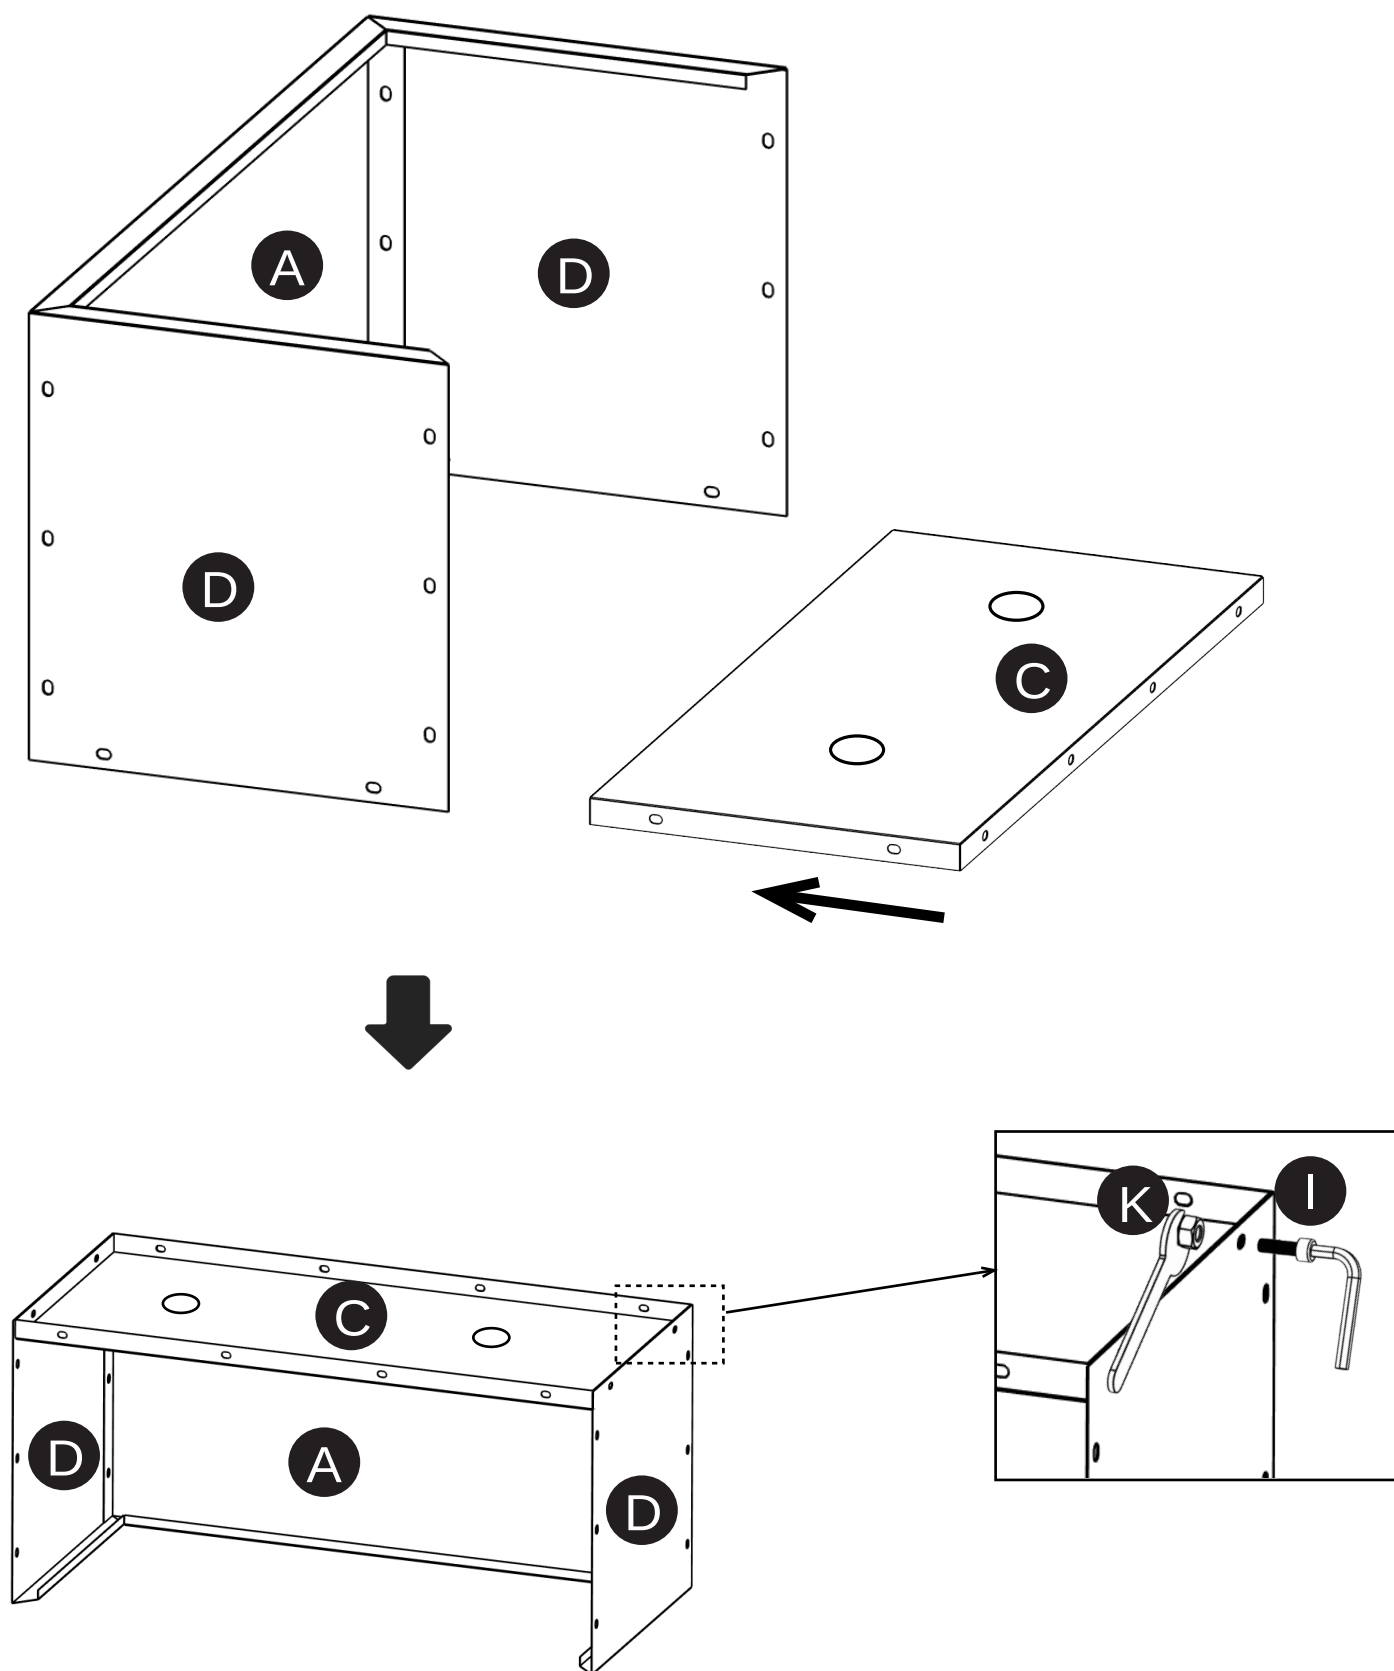


Assembly

3.As shown in the figure, assemble panel B and panel D of the bottom plate C and fix them with bolts I and nuts K.

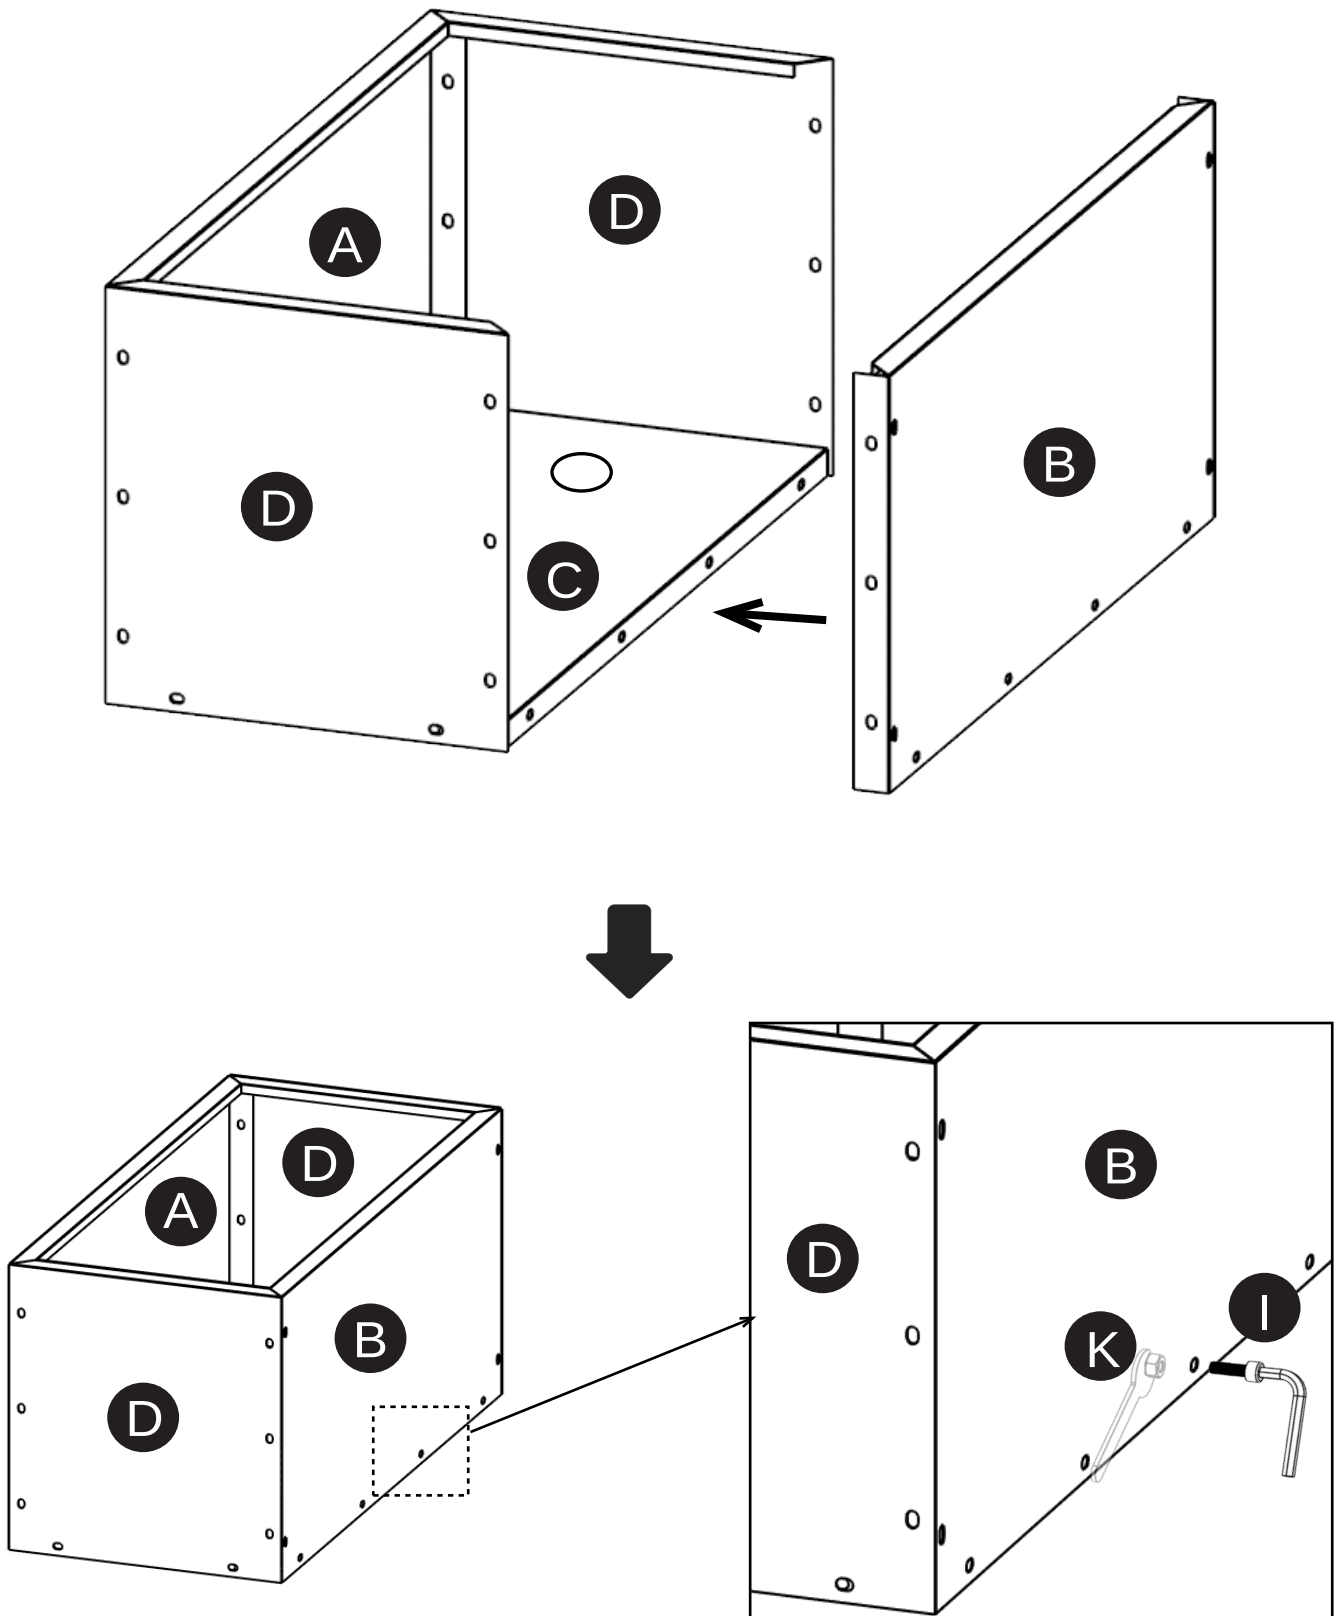


Assembly

4. Assemble fitting G with panel B as shown and secure with bolts L nut K.

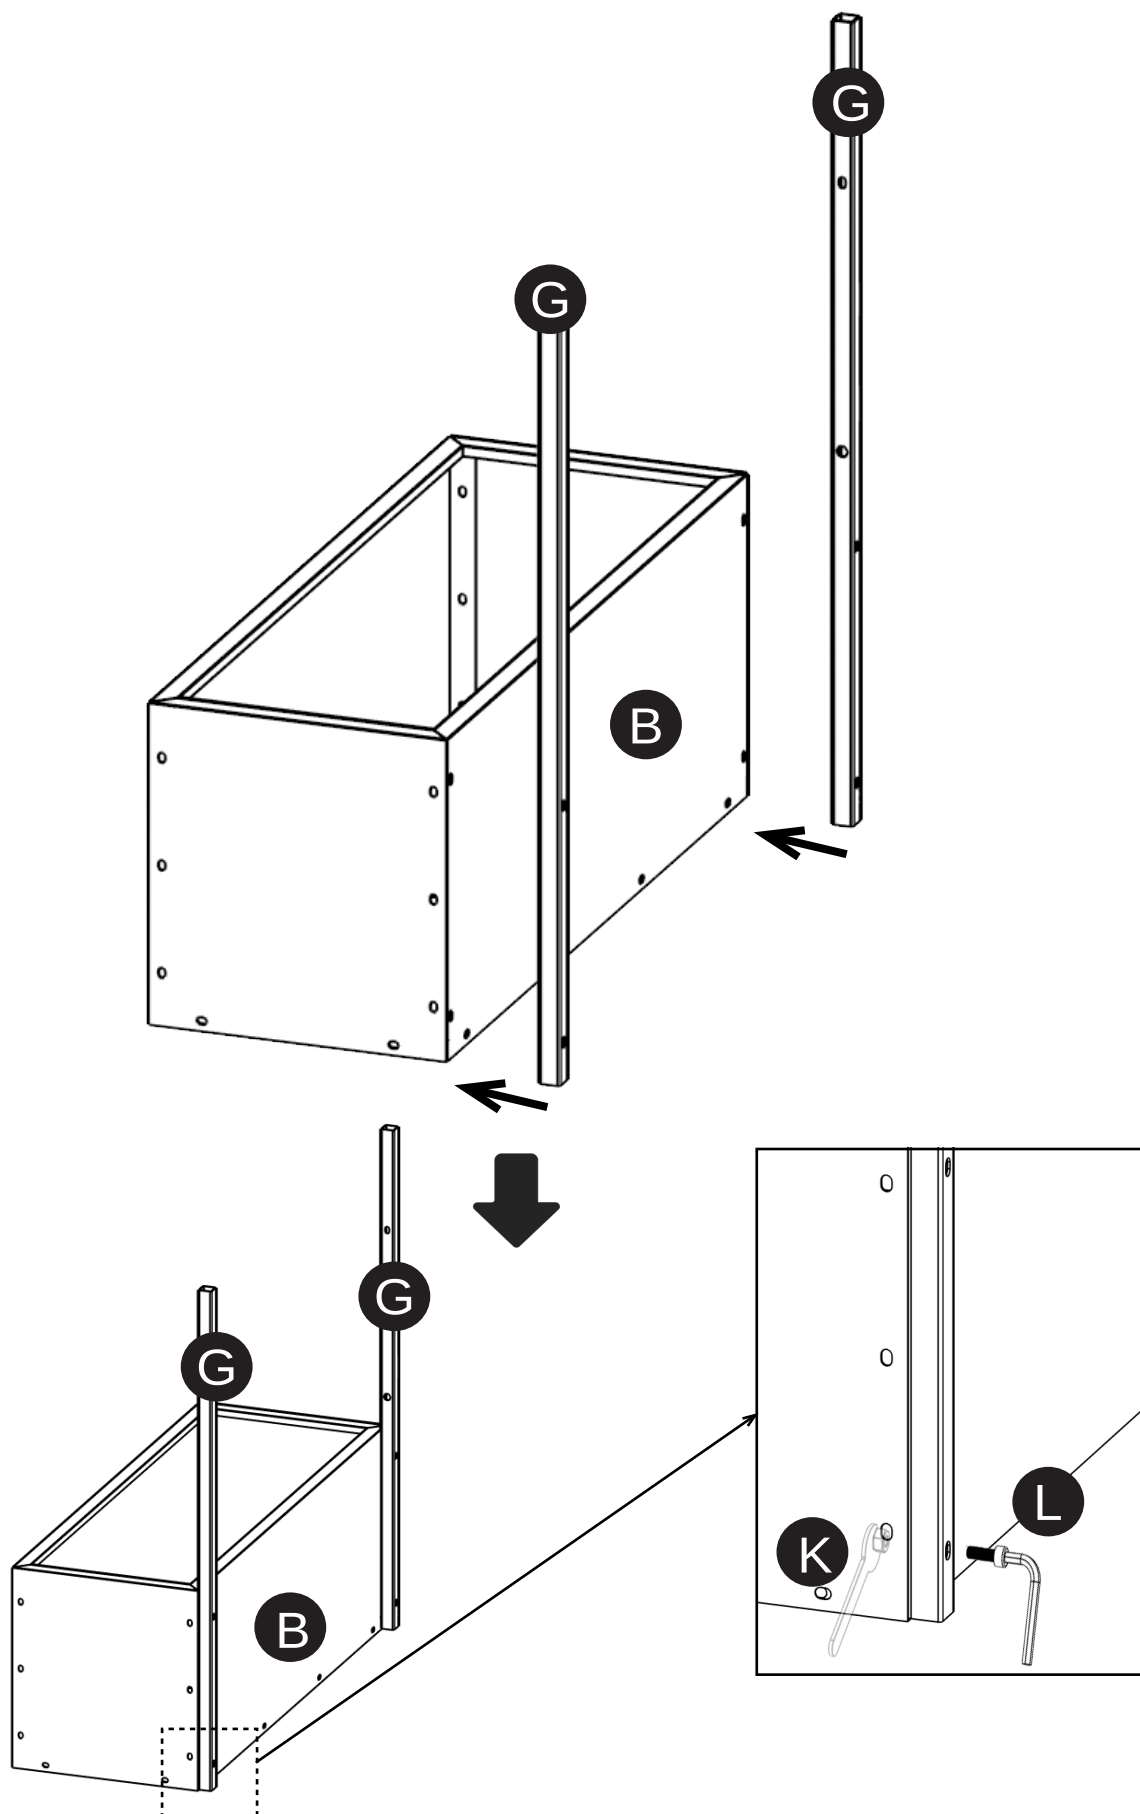


Assembly

5. Assemble panel F with accessory G as shown and secure it with bolt I.

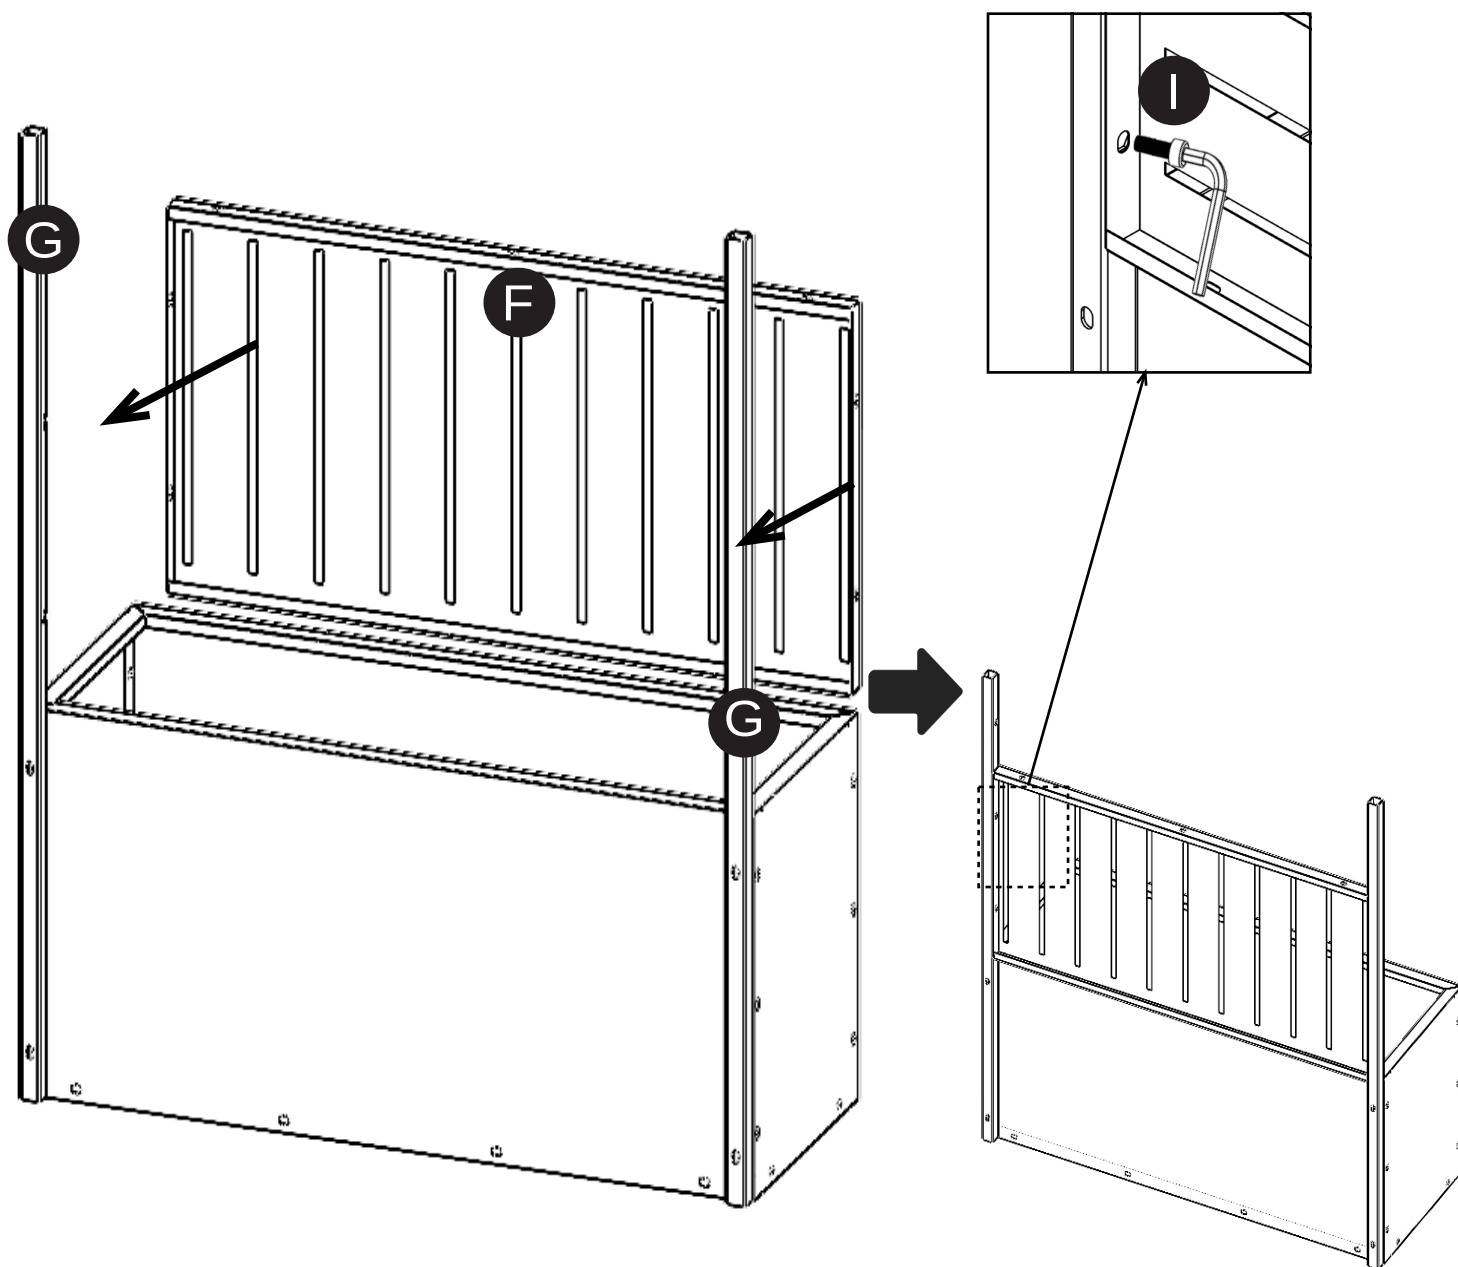


Assembly

6. Assemble accessory J with accessory G and secure with bolt I as shown in the figure.

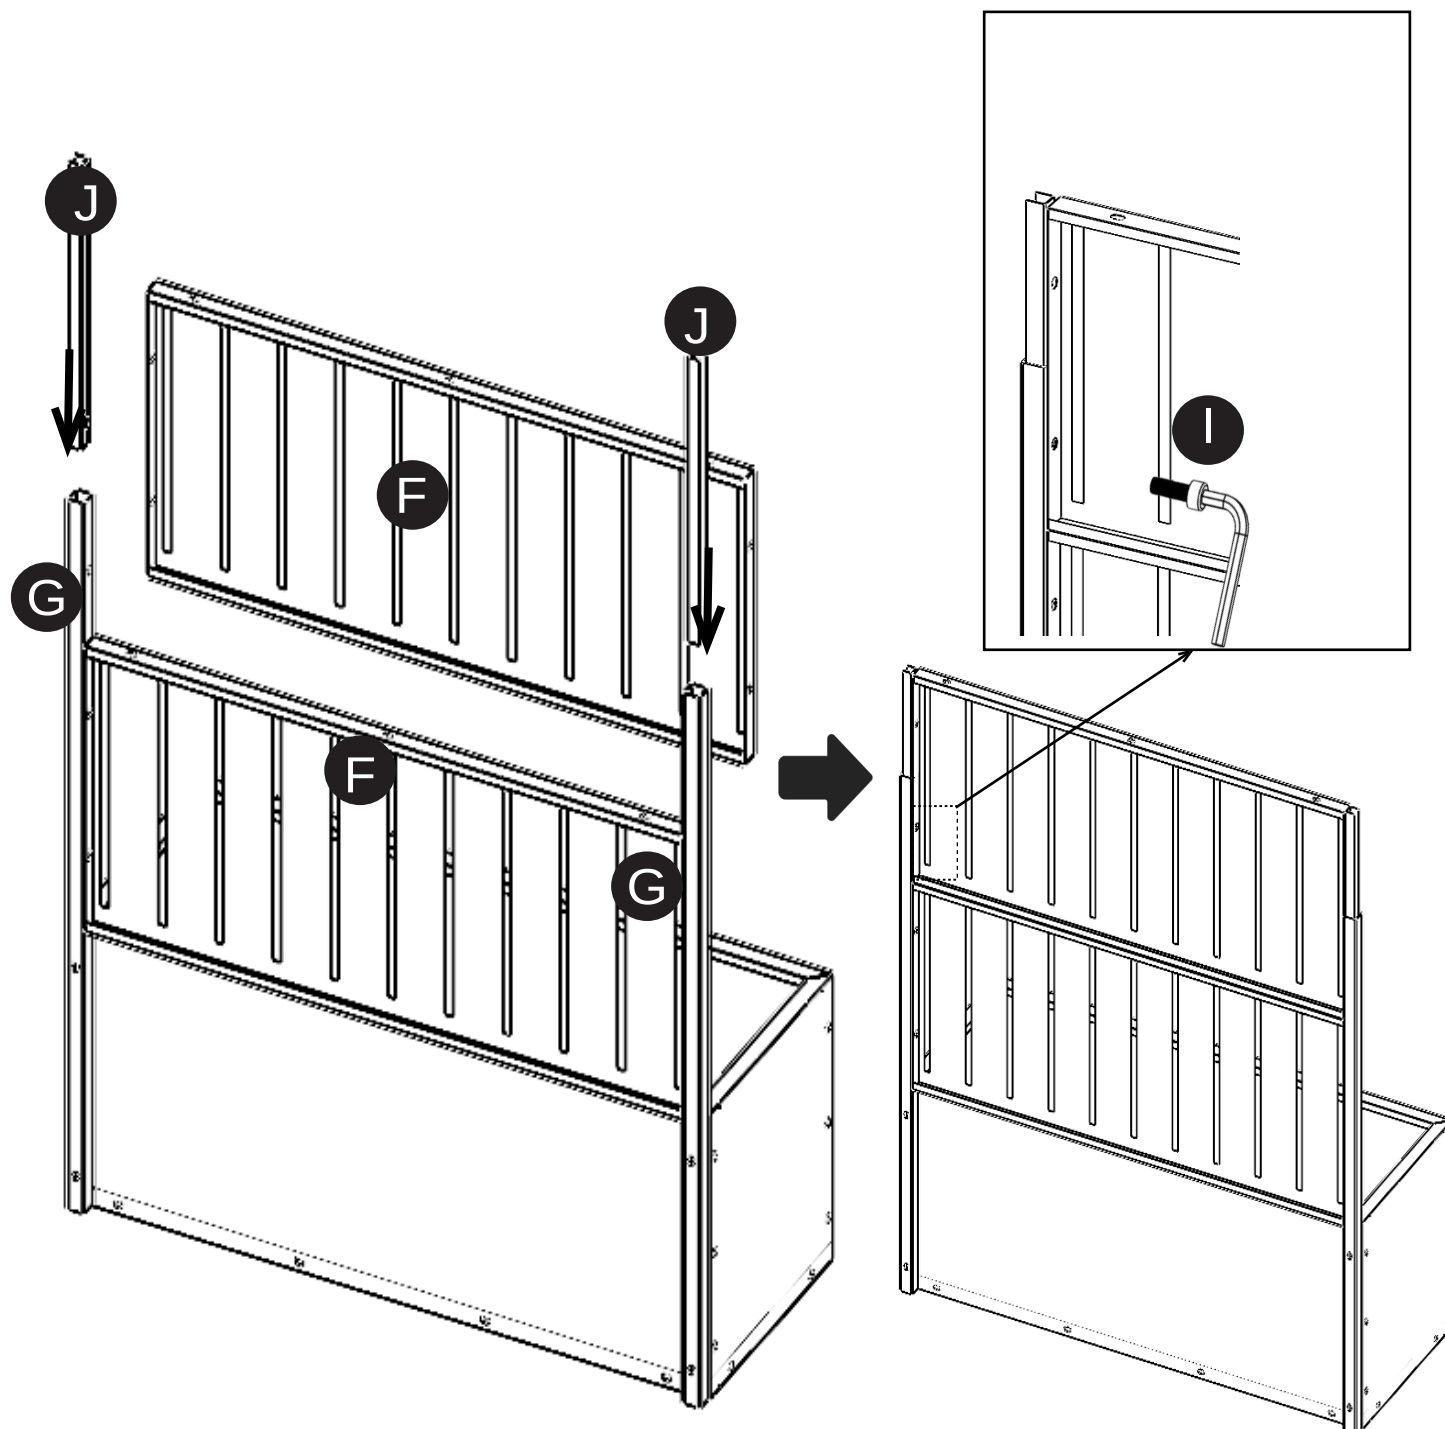


Assembly

7. Assemble part H with part J as shown in the figure and secure with bolt I.

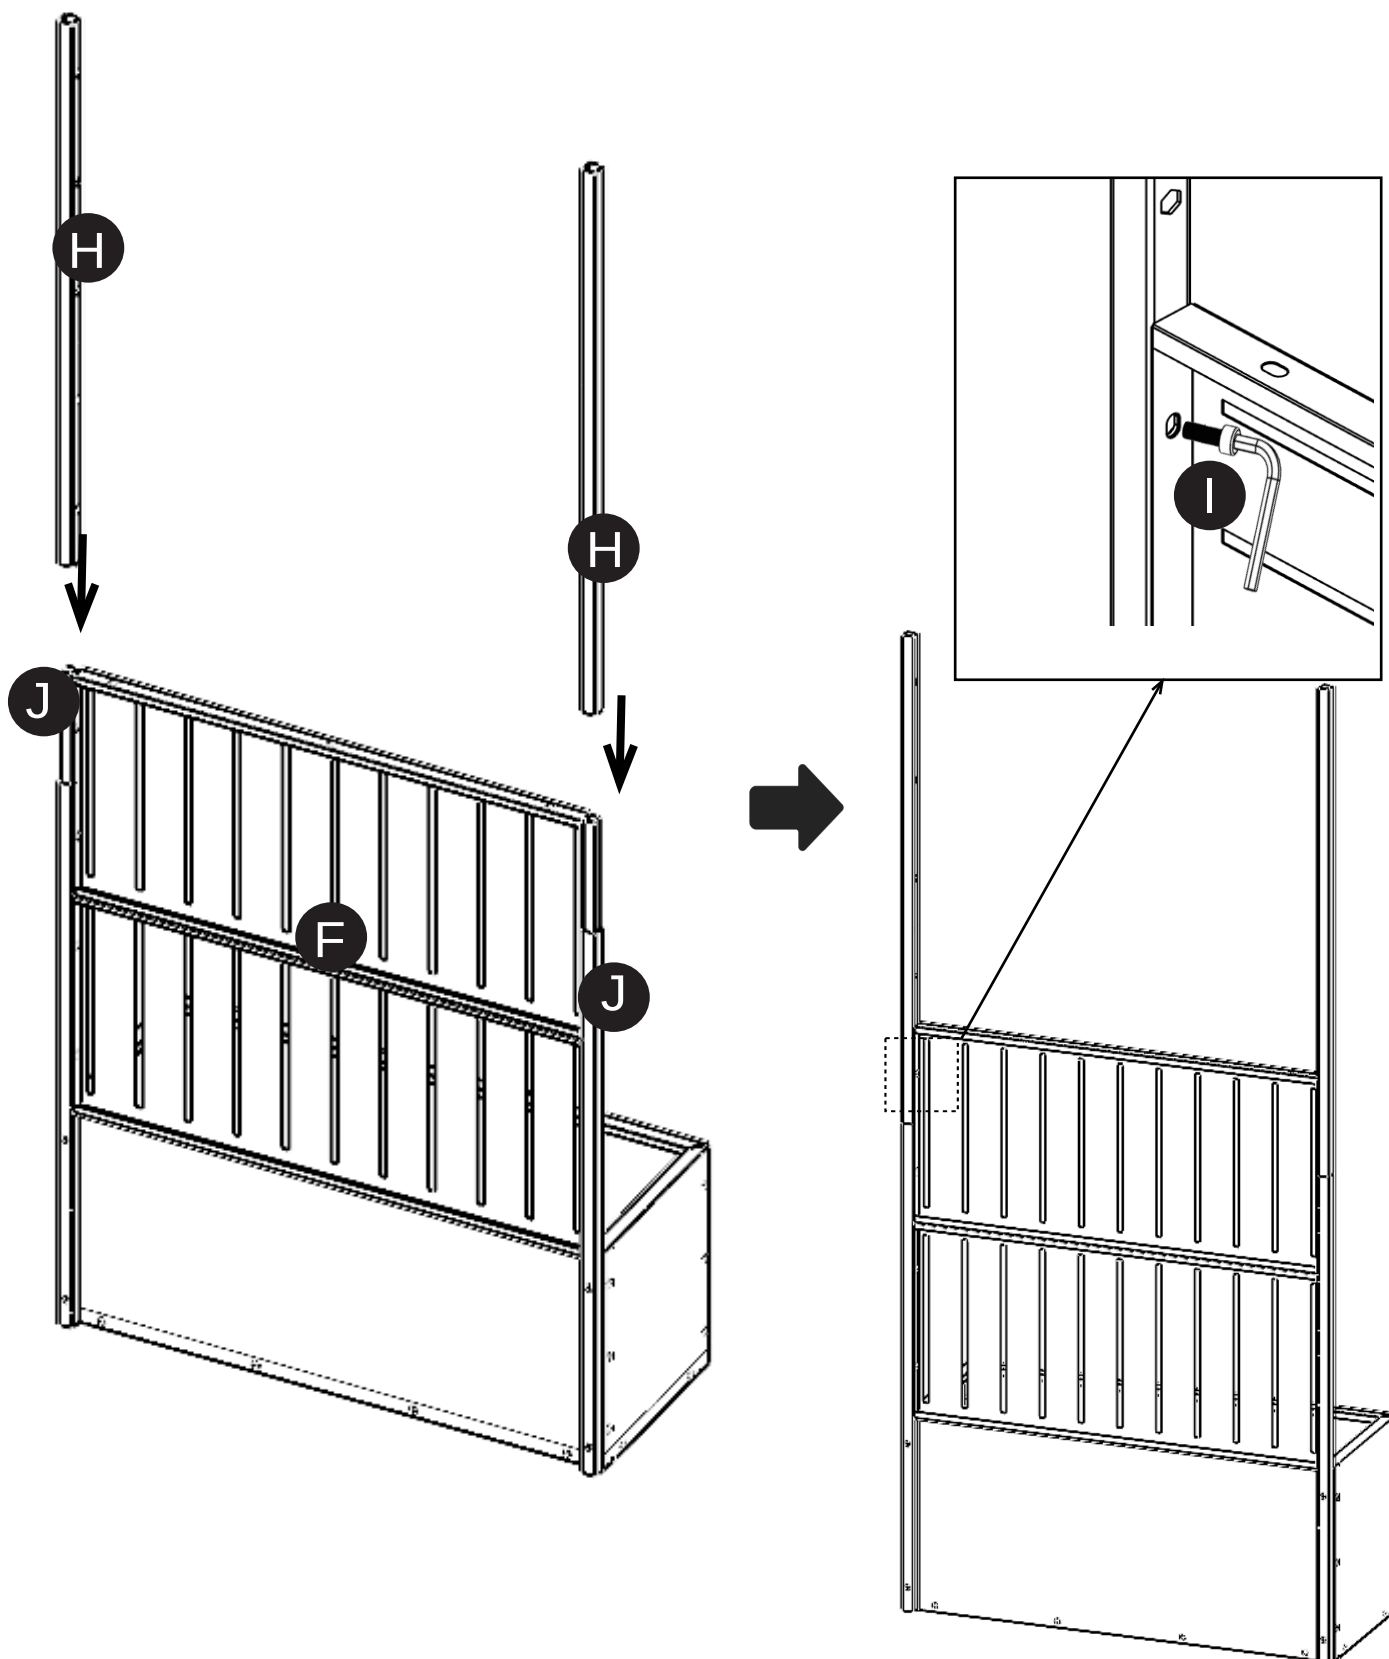

Assembly

8. As shown in the figure, assemble panel F with accessory H and fix it with bolt I; Fasten the two panels where they meet with bolts I screws K.

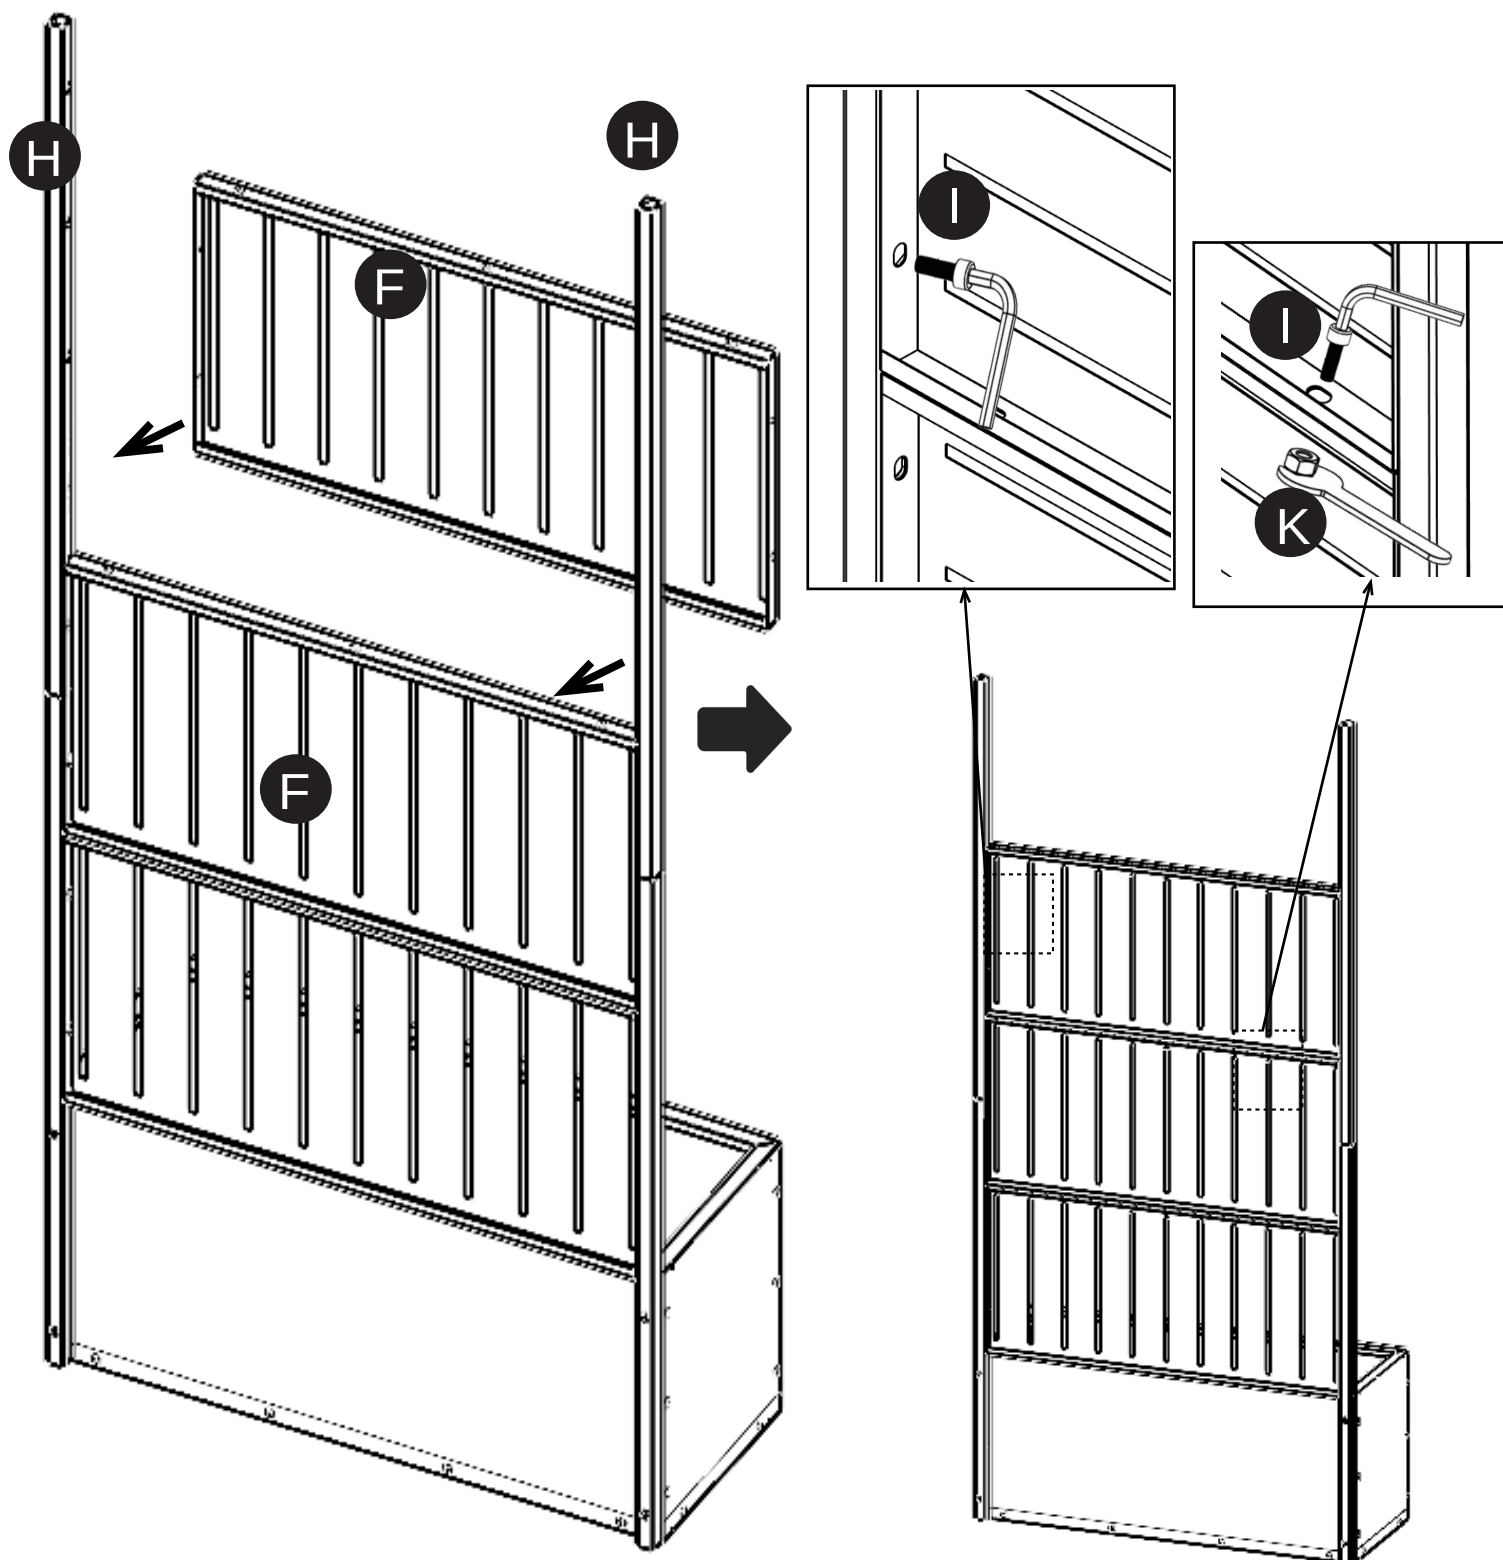

Assembly

9. As shown in the figure, assemble panel F with accessory H and fix it with bolt I; Fasten the two panels where they meet with bolts I screws K and then you have a complete product.

