



ASSEMBLY INSTRUCTIONS

WF313964

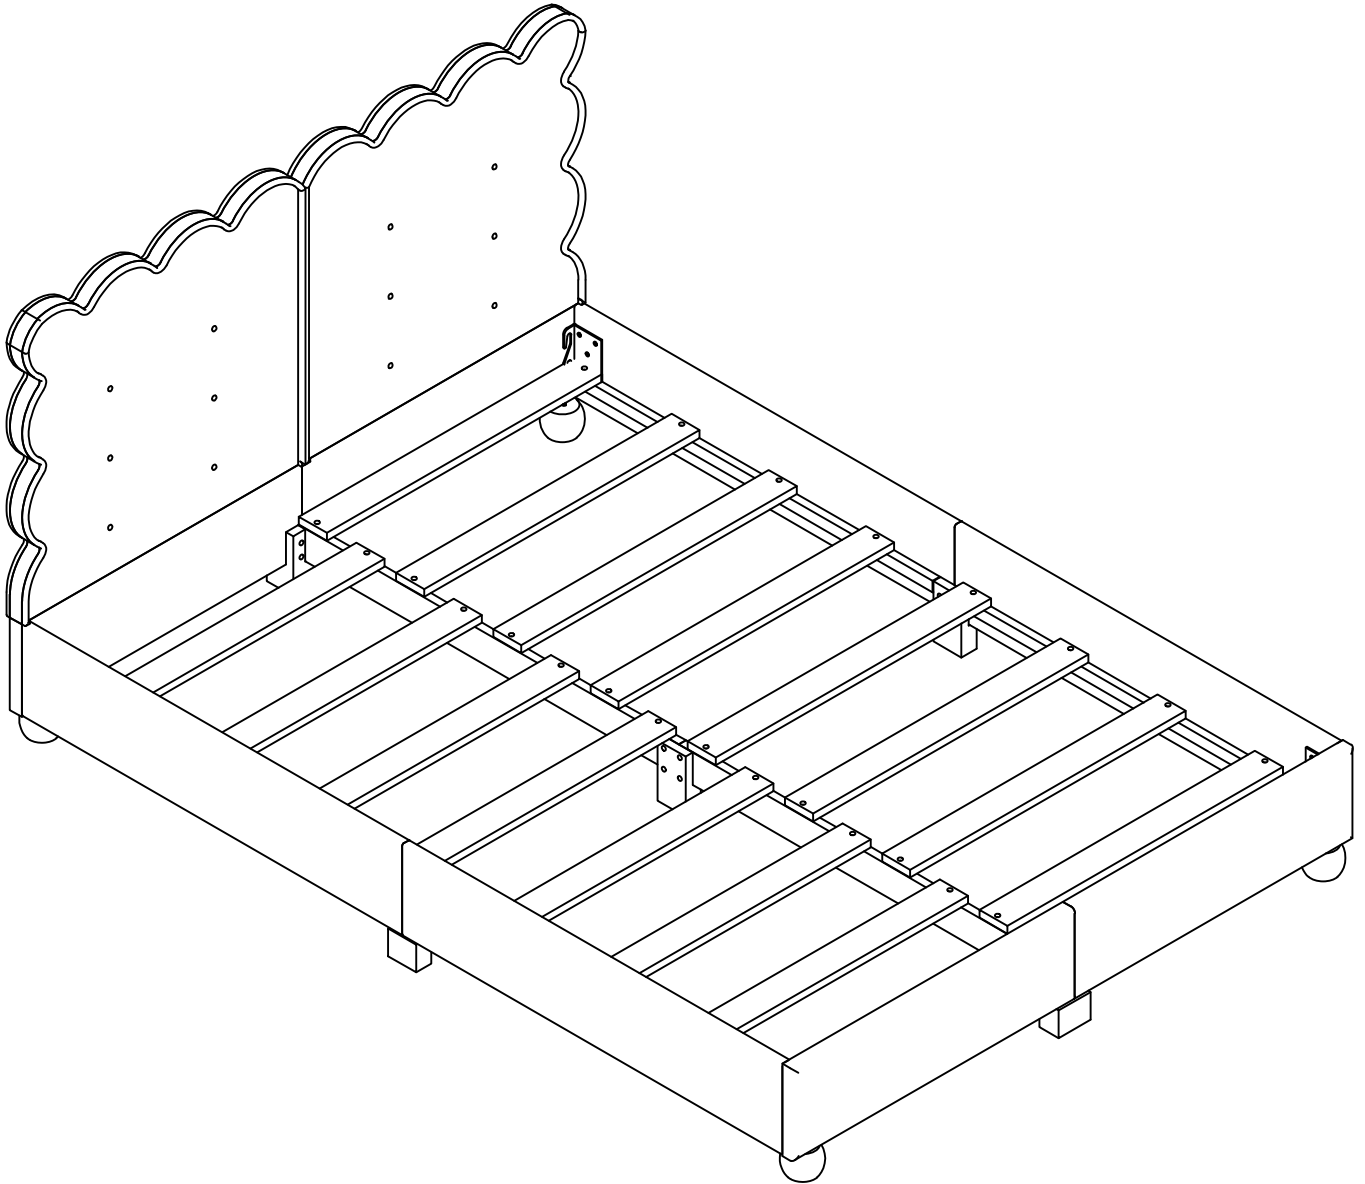


IMPORTANT NOTE:

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURF ACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE TOU BEGIN, KINDLKY FOLLOW THE ASSEBLY INSTRUCTIONS STEP BY.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE PINK BED IS FULLY SET-UP.

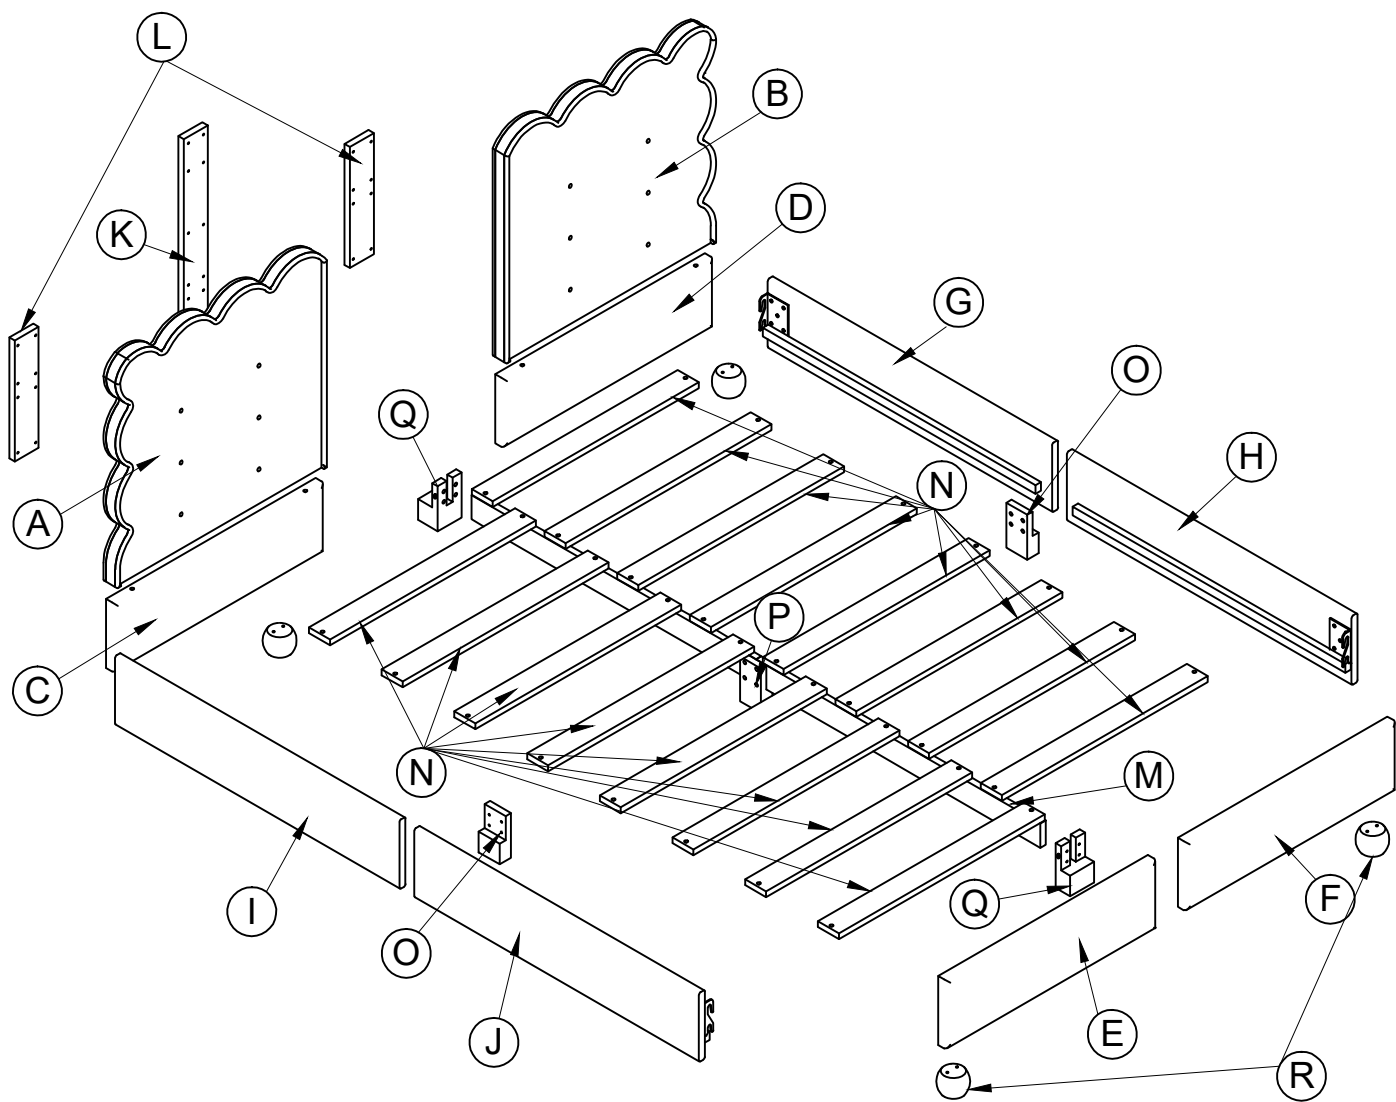


Part List For One

(A)

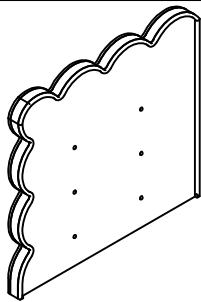


H Board Left (1pc)

(B)

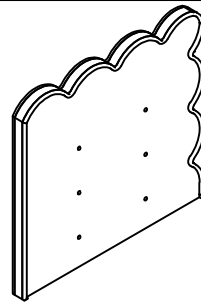


H Board Right (1pc)

(C)

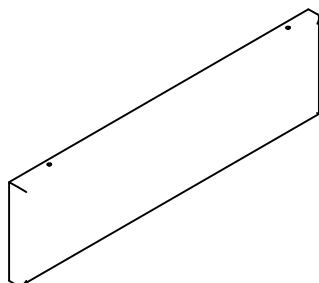


H Board Left Below (1pc)

(D)

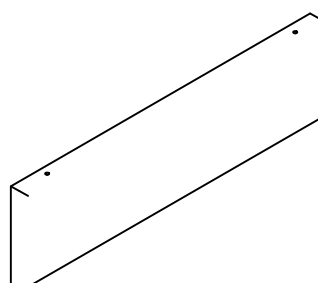


F Board Right Below (1pc)

(E)

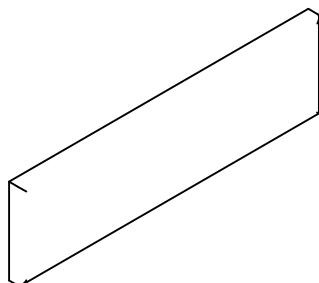


F Board Left (1pcs)

(F)

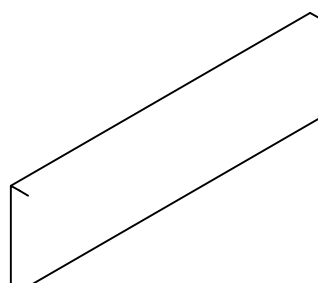


F Board Right (1pcs)

(G)

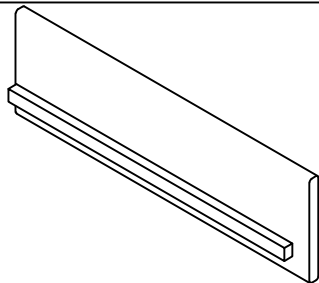


Rail 1 (1pc)

(H)

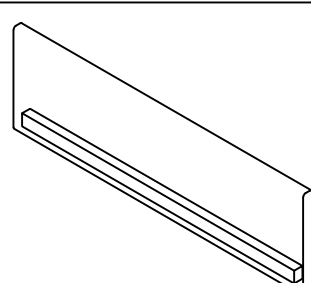


Rail 2 (1pc)

(I)

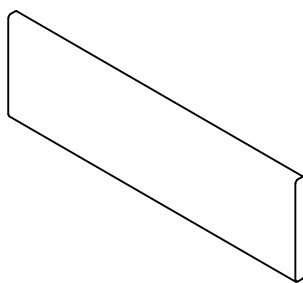


Rail 3 (1pc)

(J)

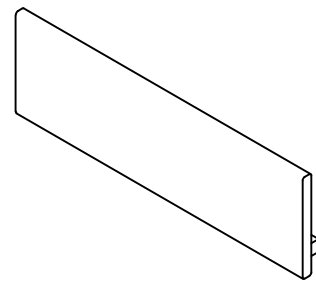


Rail 4 (1pc)

(K)









Support Bar 1 (1pc)

(L)










Support Bar 2 (2pcs)


Part List For One

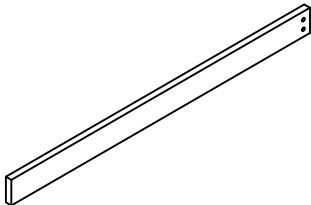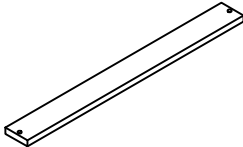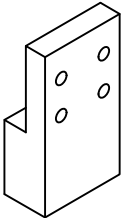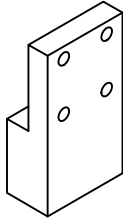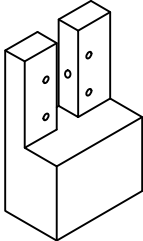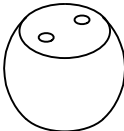
(M) 	(N) 
Center Support slats (2pcs)	Slats (16pcs)
(O) 	(P) 
Legs (2pcs)	Center 1 Legs (1pc)
(Q) 	(R) 
Center 2 Legs (2pcs)	Corner Legs (4PCS)

Hardware List For One

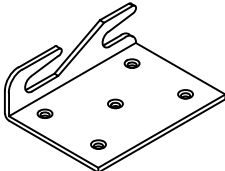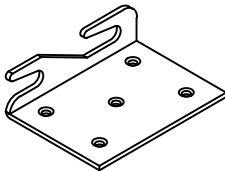
① 	② 	③  Ø 5/16" x 25mm	
Pass Metal Left (2 pcs)	Pass Metal Right (2 pcs)	Bolts (8pcs)	
④  M6x 30mm Bolts (4pcs)	⑤  M6 x 15mm Bolts (4pcs)	⑥  M3.5 x 15mm Screws (20 pcs)	
⑦  M4 x 30mm Screws (76 pcs)	⑧  M4 x 50mm Screws (10 pcs)	⑨  Ø10 x 30 Wood Dowel (4pcs)	⑩  4mm Allen Key (1pc)

STEP 1:

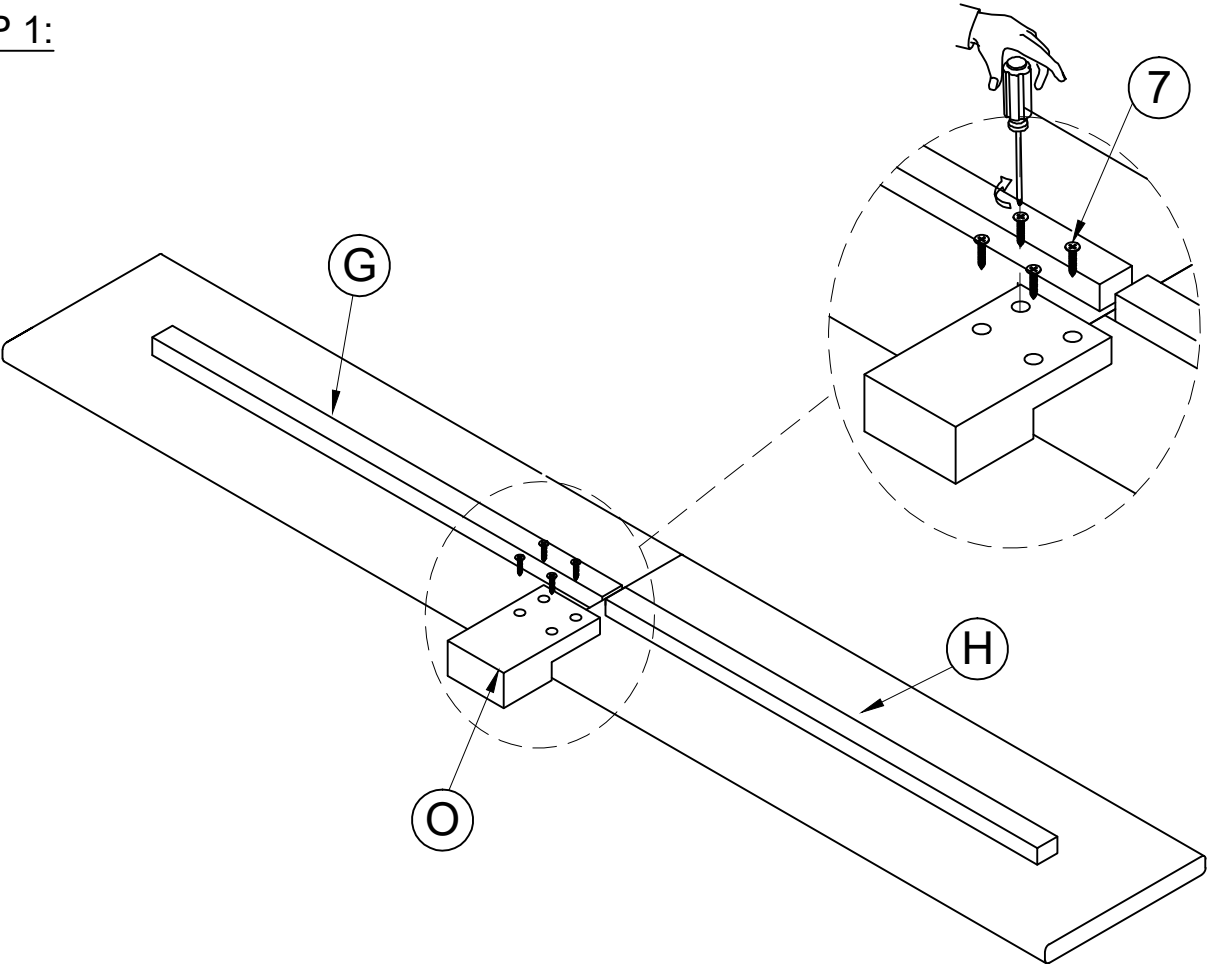


7	M4 x 30		4pcs
---	---------	---	------


STEP 2:

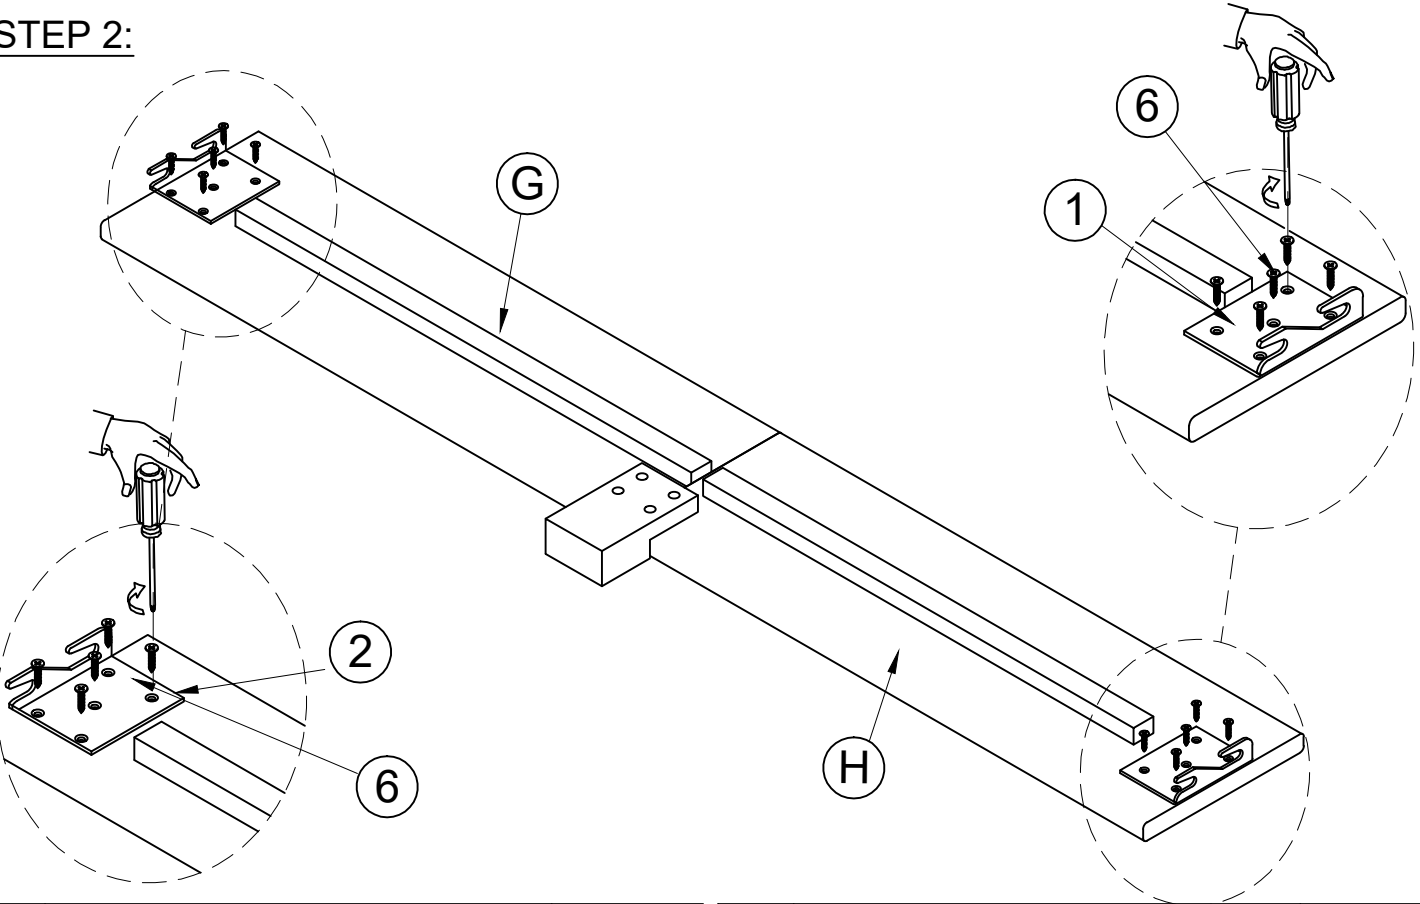


1	Pass Metal Left		1pc	2	Pass Metal Right		1pc
6	M3.5 x 15		10pcs				

STEP 3:

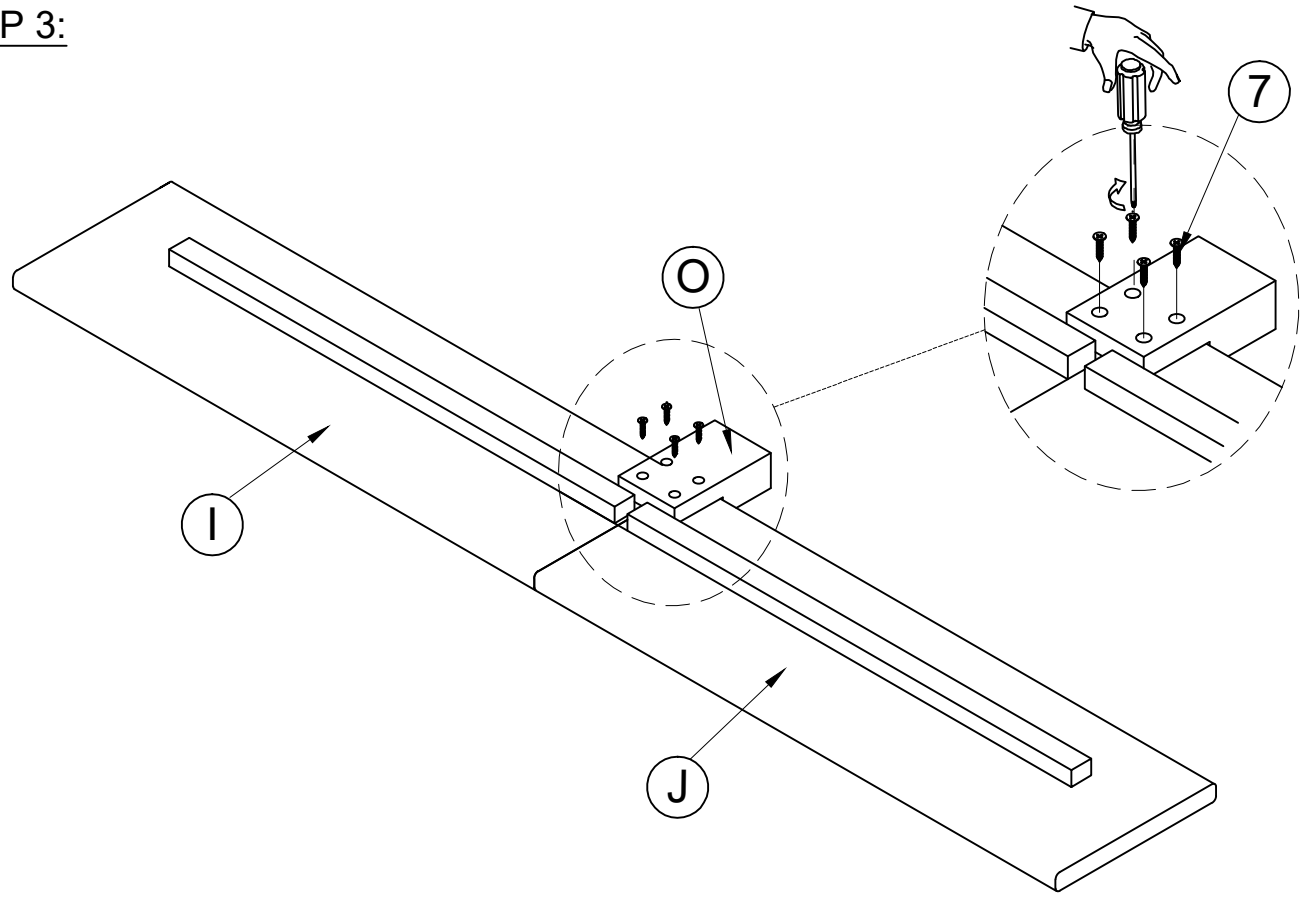


7	M4 x 30		4pcs
---	---------	---	------

STEP 4:

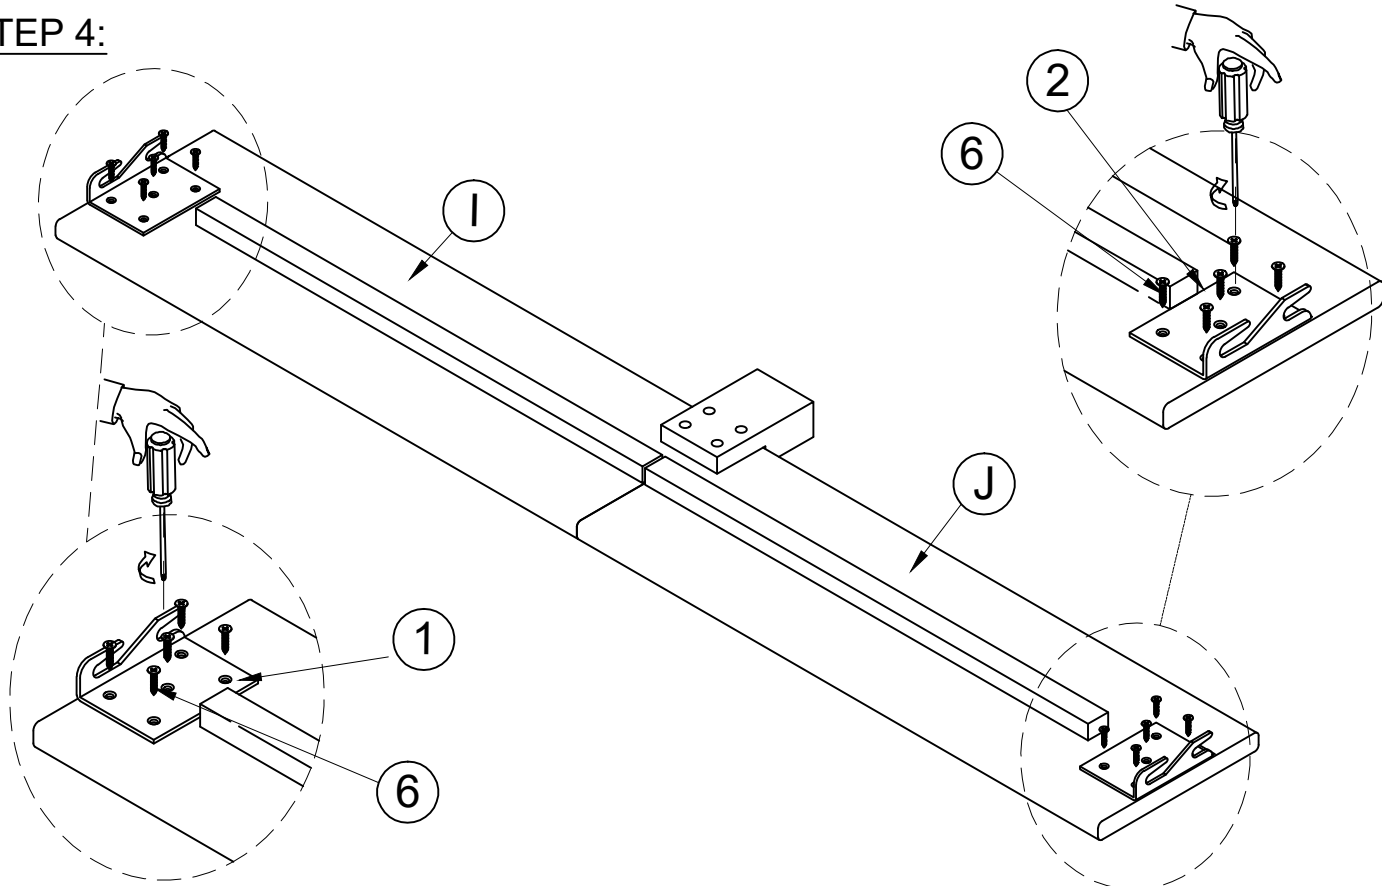


1	Pass Metal Left		1pc	2	Pass Metal Right		1pc
6	M3.5 x 15		10pcs				

STEP 5:

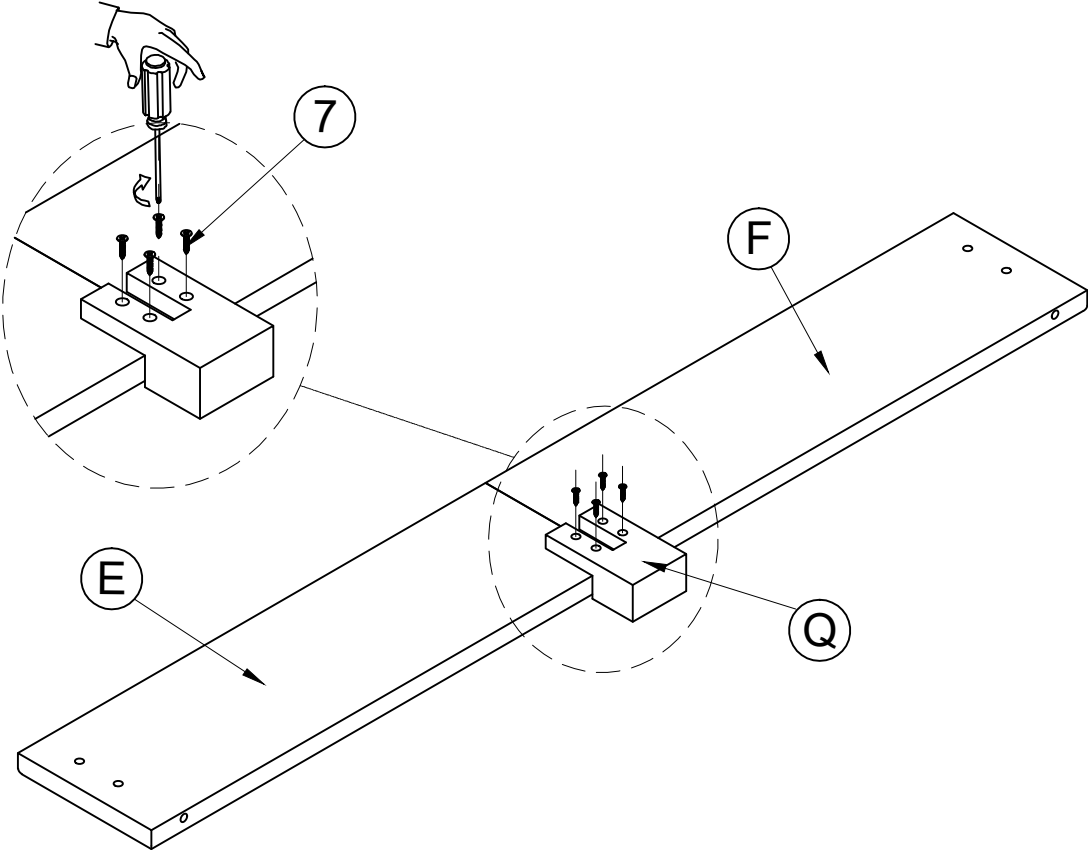


7

M4 x 30




4pcs

STEP 6:

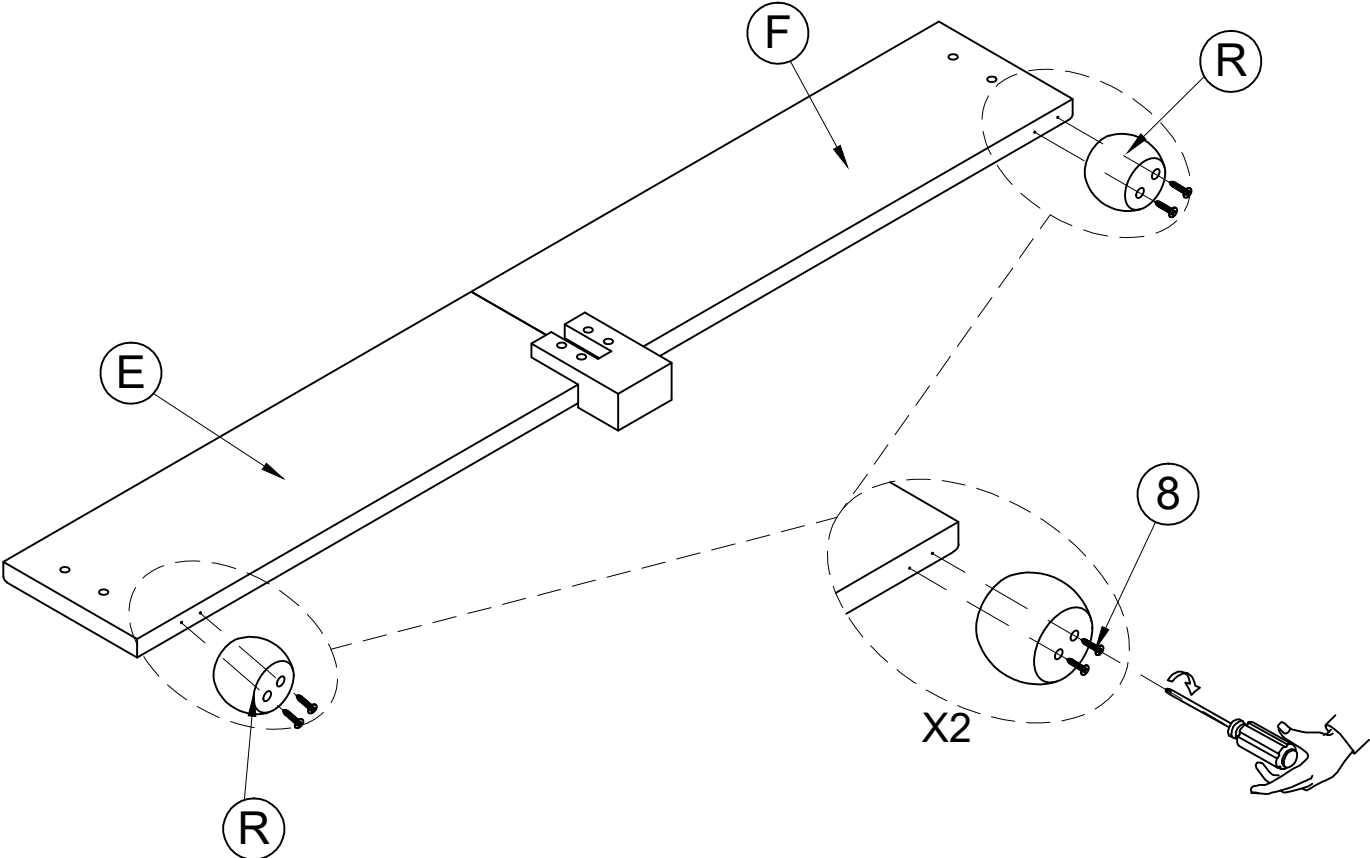


8

M4 x 50




4pcs


STEP 7: Do not fully tighten the bolts.

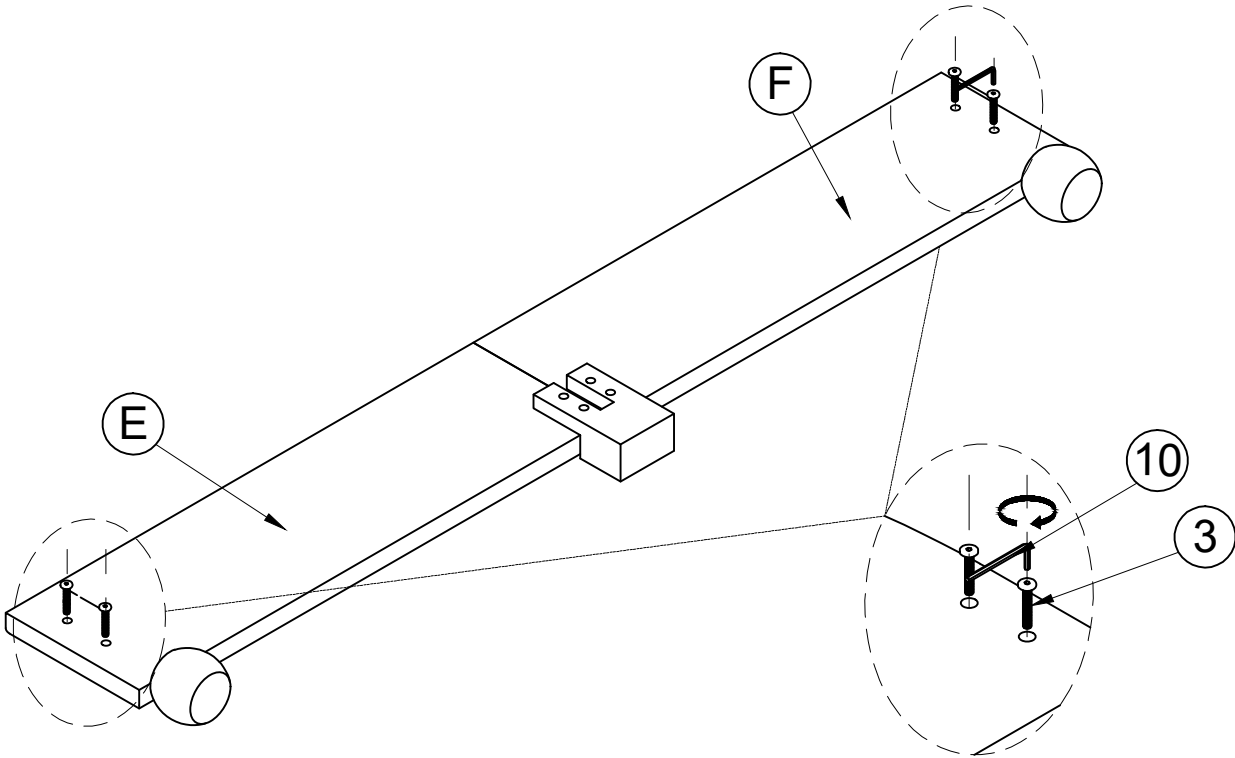


3	Ø 5/16" x 25mm		4pcs	10	Allen Key 4mm		1pc
---	----------------	---	------	----	---------------	---	-----


STEP 8:

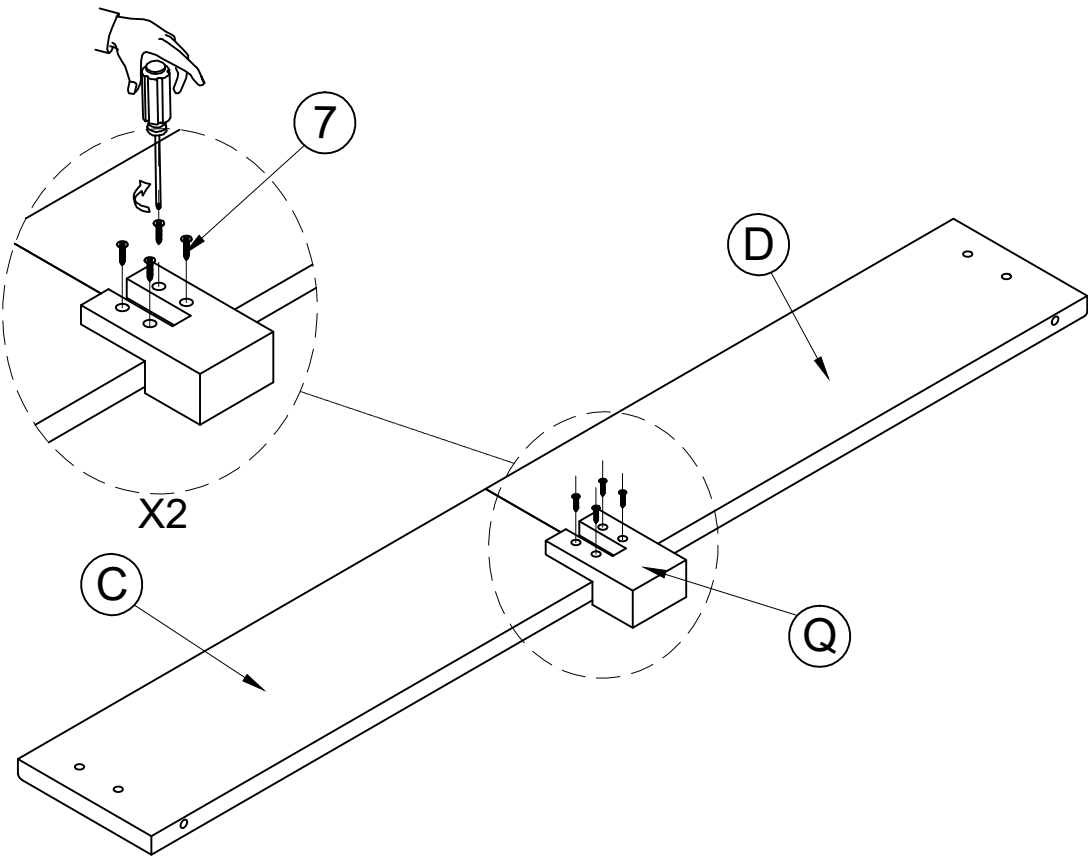


7	M4 x 30		4pcs
---	---------	---	------

STEP 9:

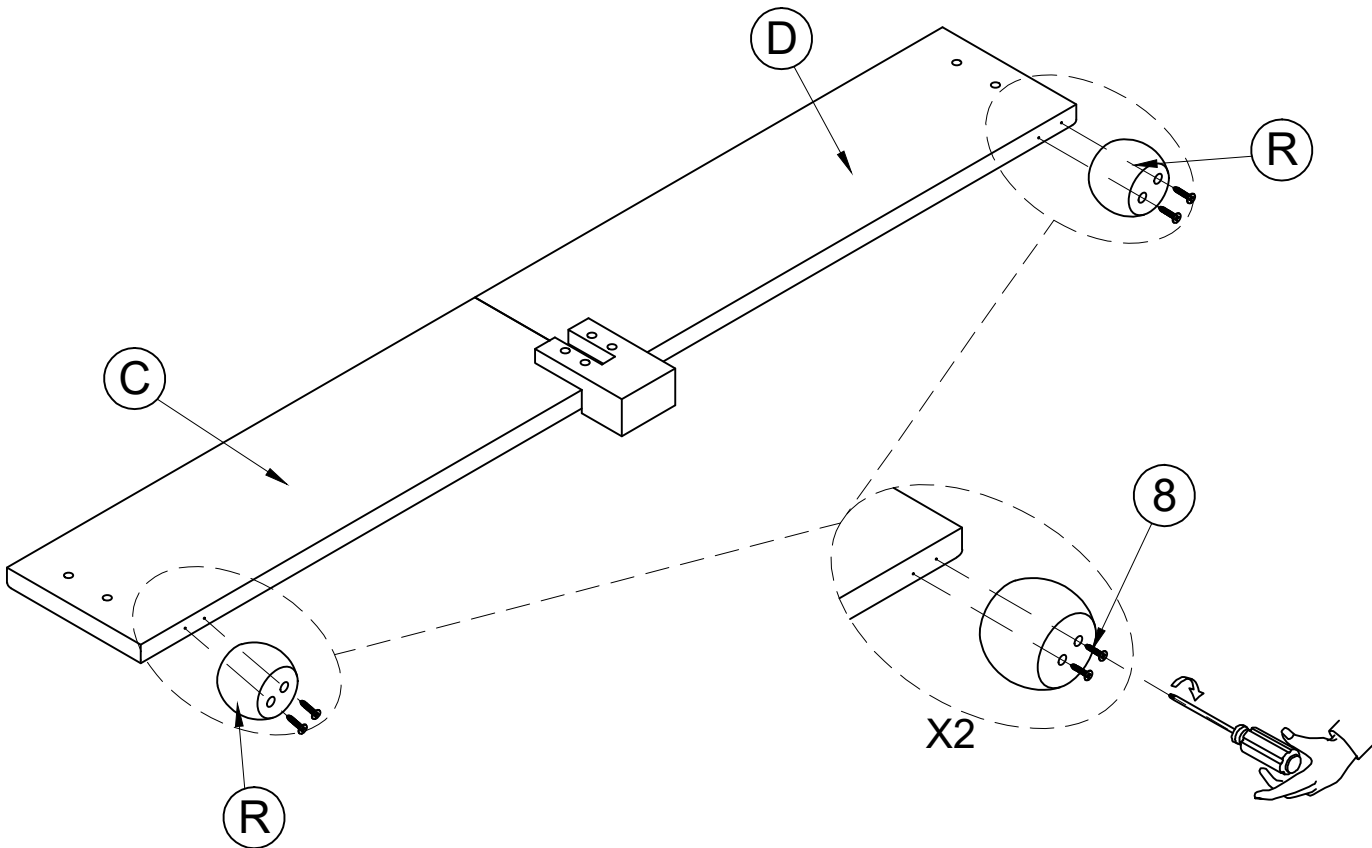


8	M4 x 50		4pcs
---	---------	---	------


STEP 10:

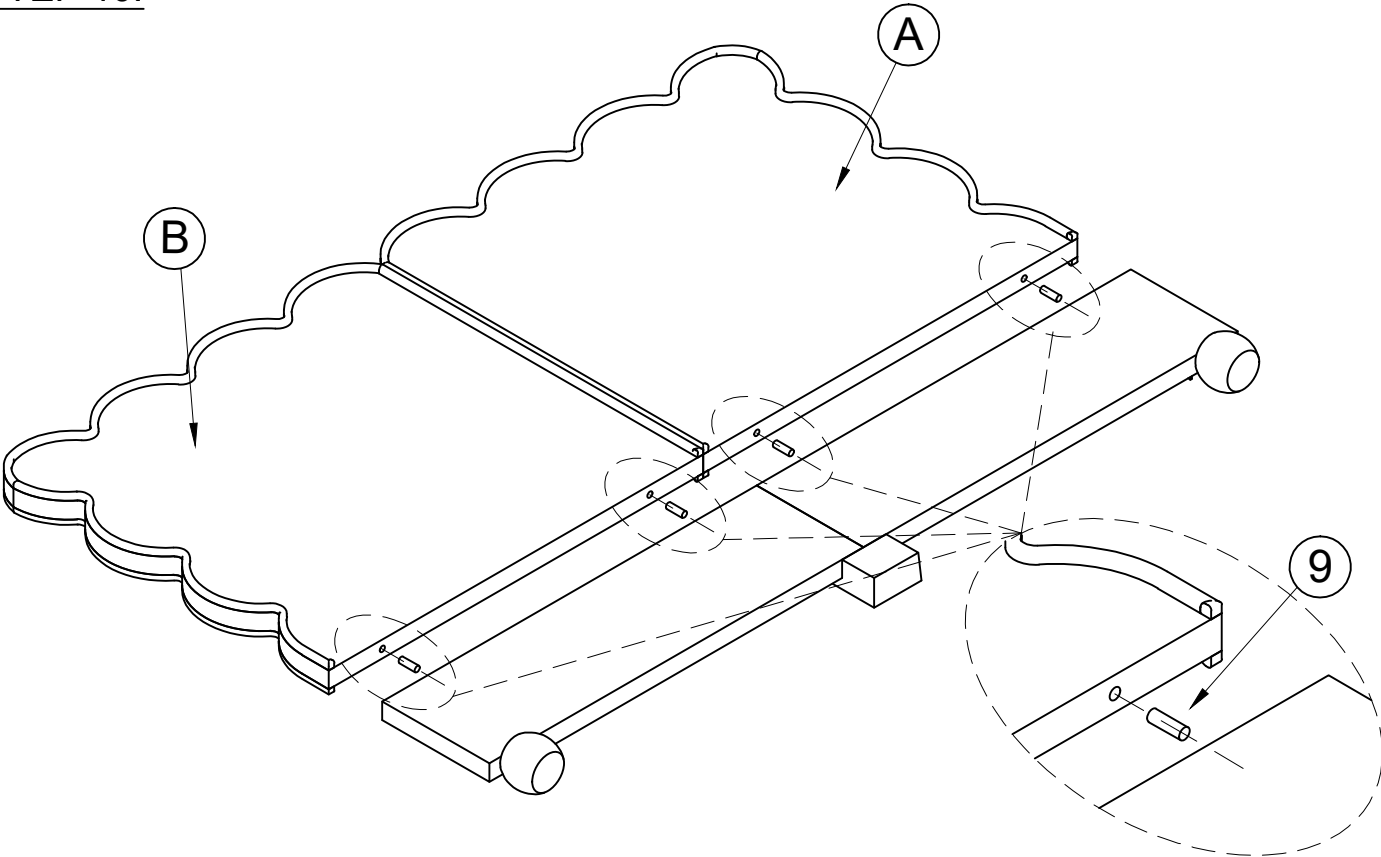


9	Ø 10 x 30		4pcs
---	-----------	---	------

STEP 11:

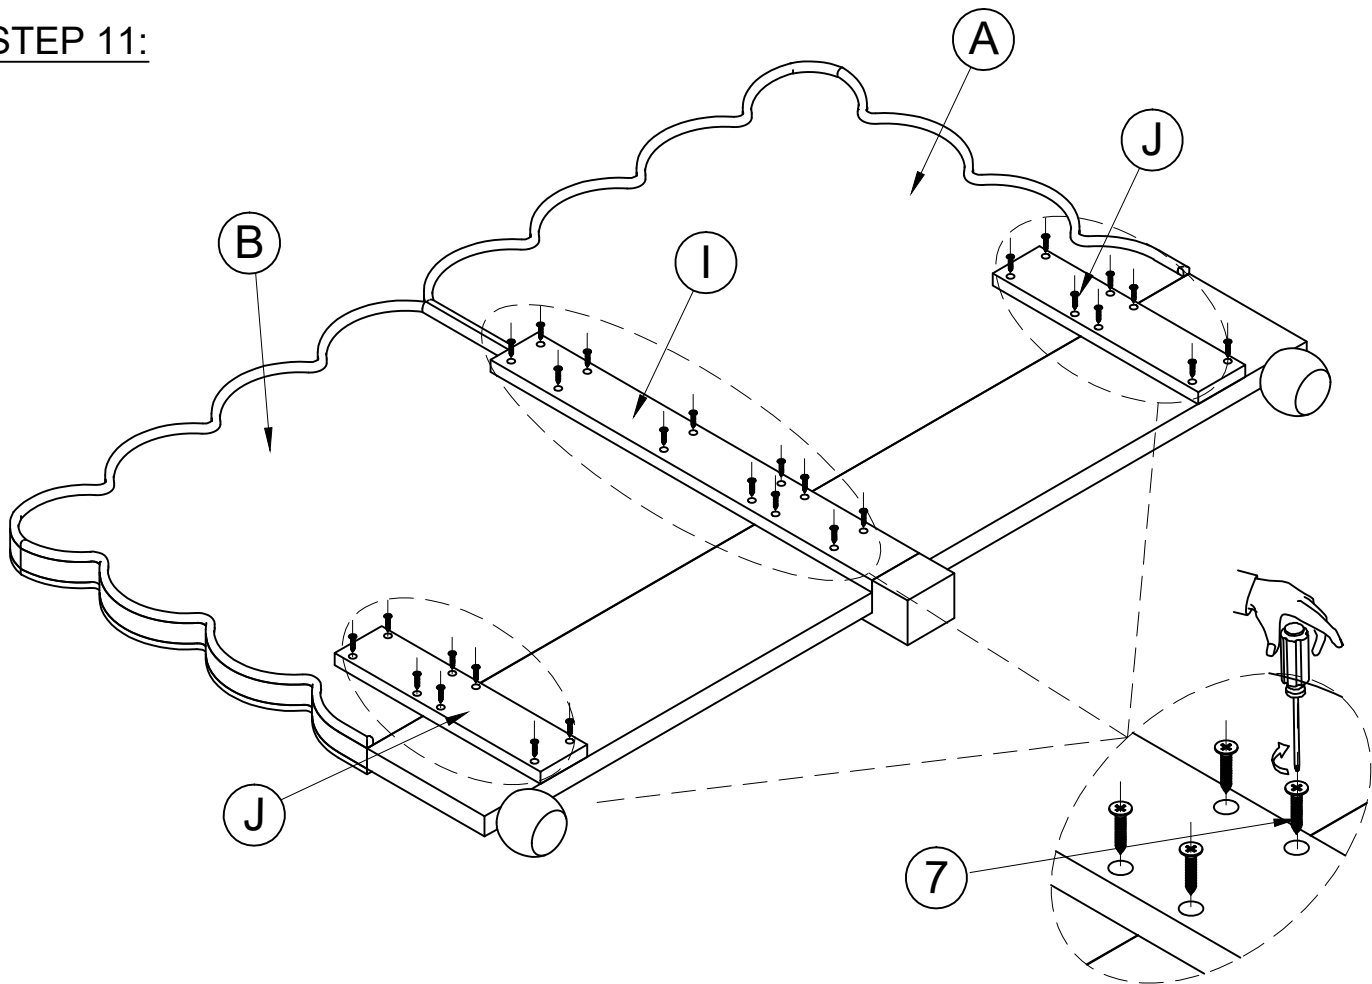


7	M4 x 30		28pcs
---	---------	---	-------

STEP 12: Do not fully tighten the bolts.

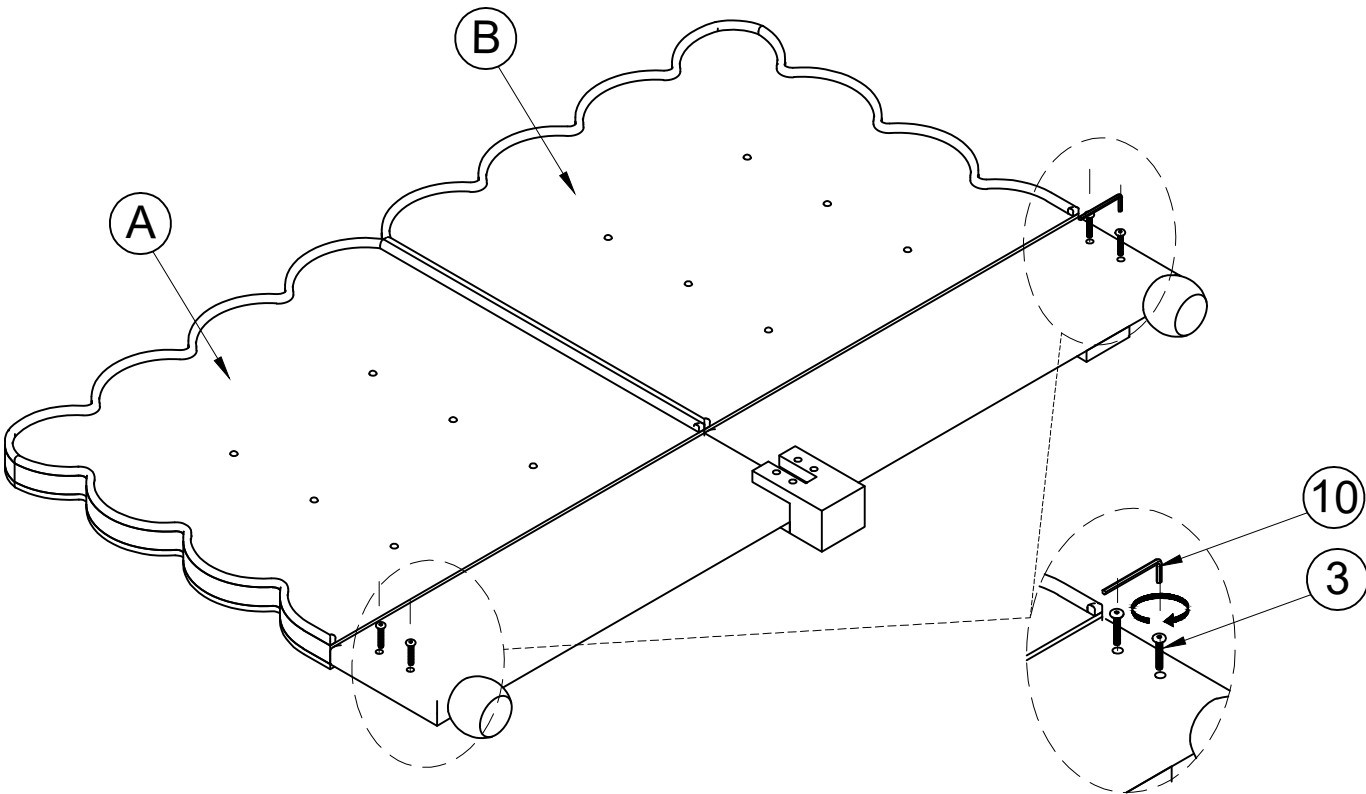


3	Ø 5/16" x 25mm		4pcs	10	Allen Key 4mm		1pc
---	----------------	---	------	----	---------------	---	-----

STEP 14: Using the Allen Key to tighten all bolts.

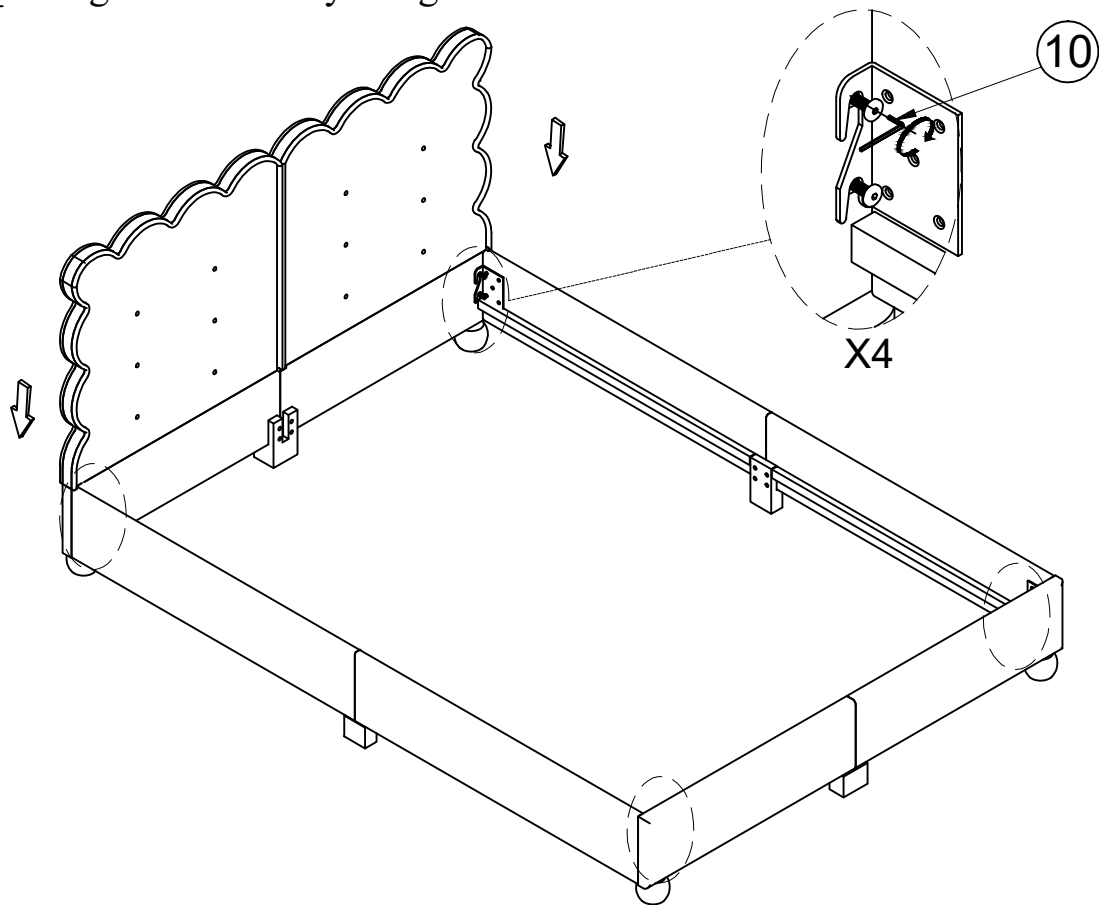


10	Allen Key 4mm		1pc
----	---------------	---	-----


STEP 11:

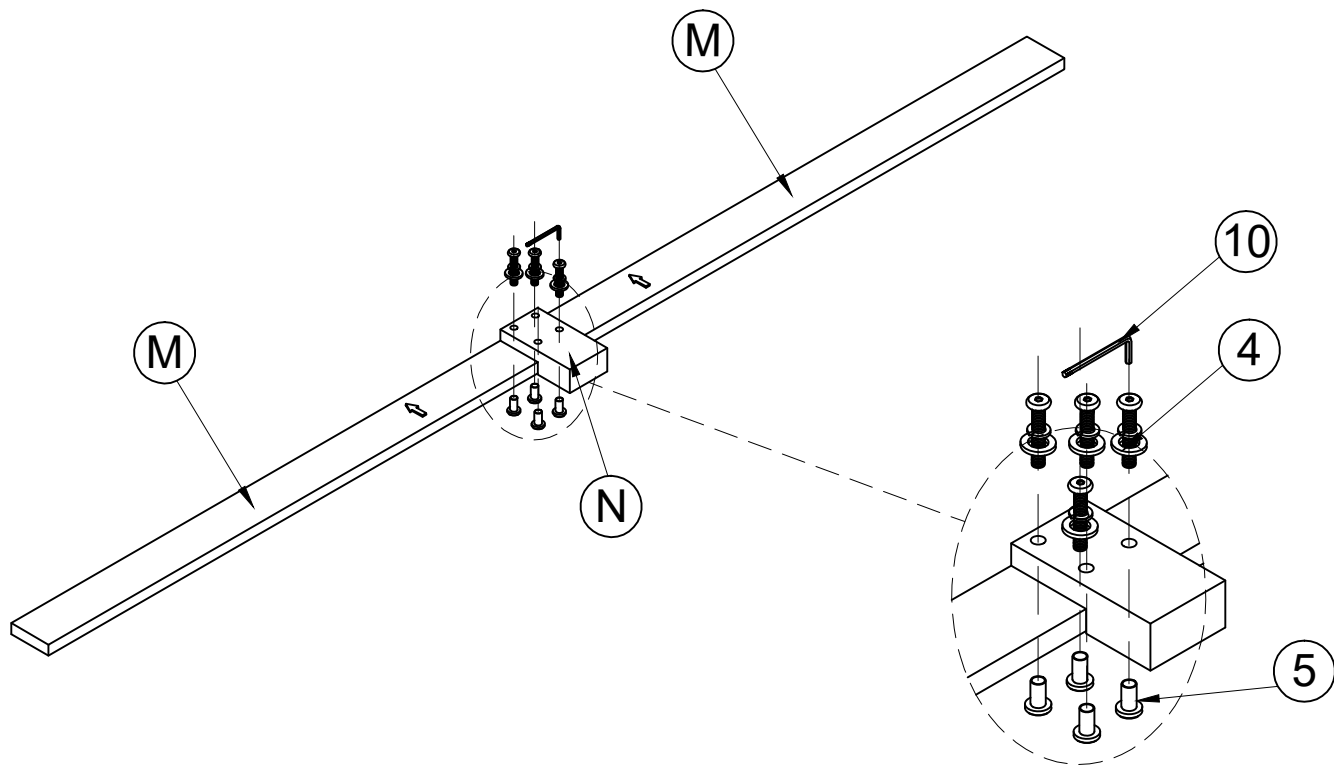


4	M6 x 30mm		4pcs	5	M6 x 15mm		4pcs
10	Allen Key 4mm		1pc				


STEP 12:

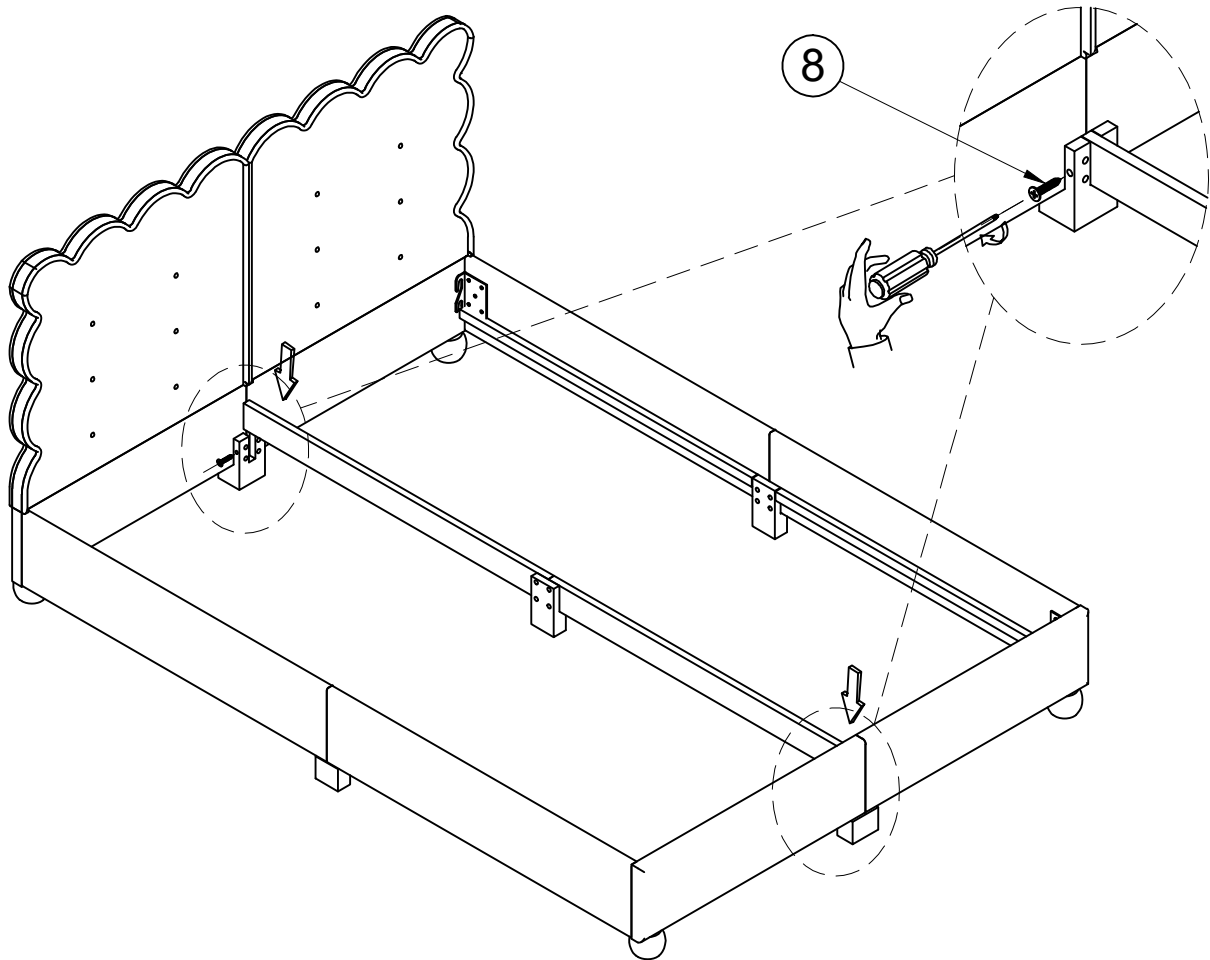

8	M4 x 50		2pcs
---	---------	---	------

STEP 13:

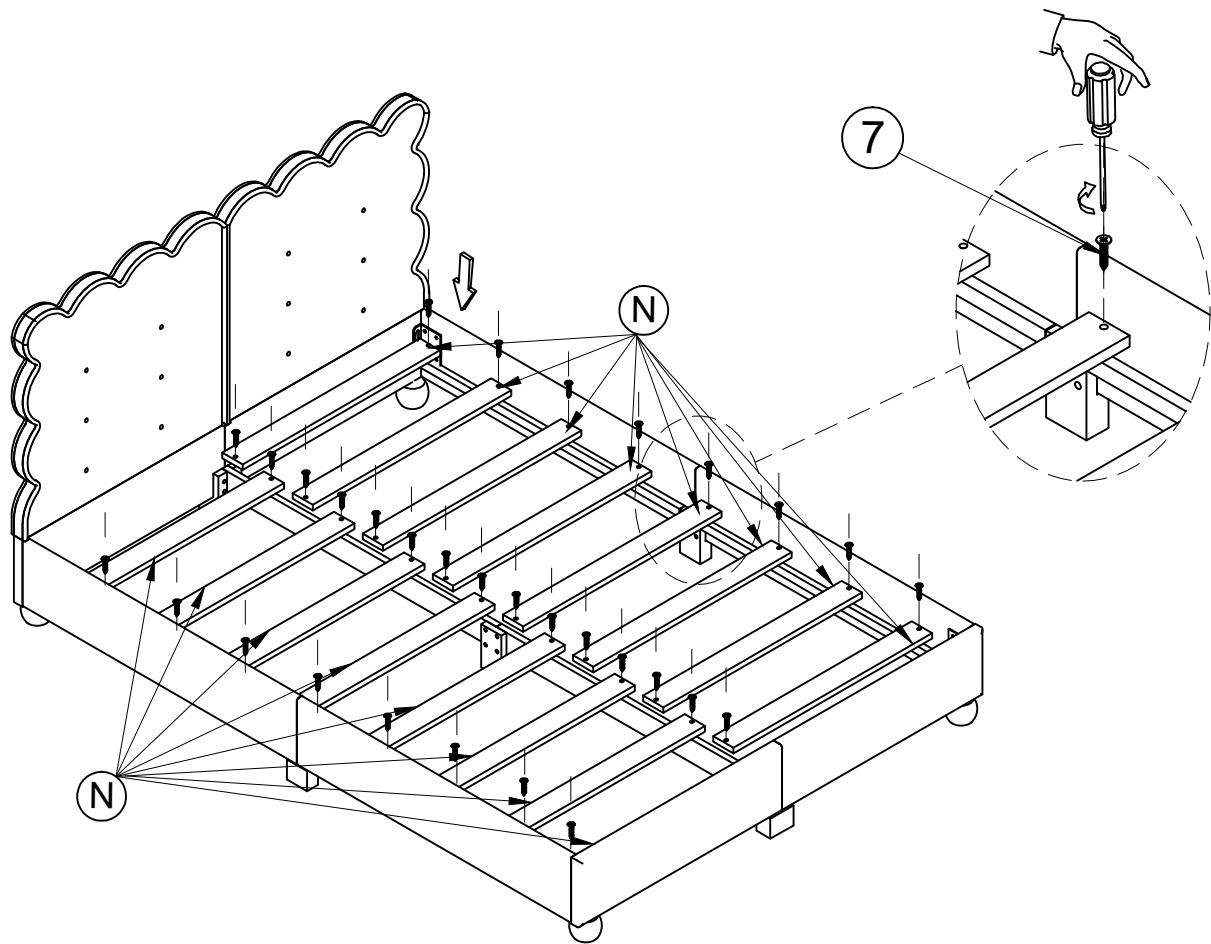

7	M4 x 30		32pcs
---	---------	---	-------

COMPLETE:

