

I870101264A

Start furnishing your dreams !

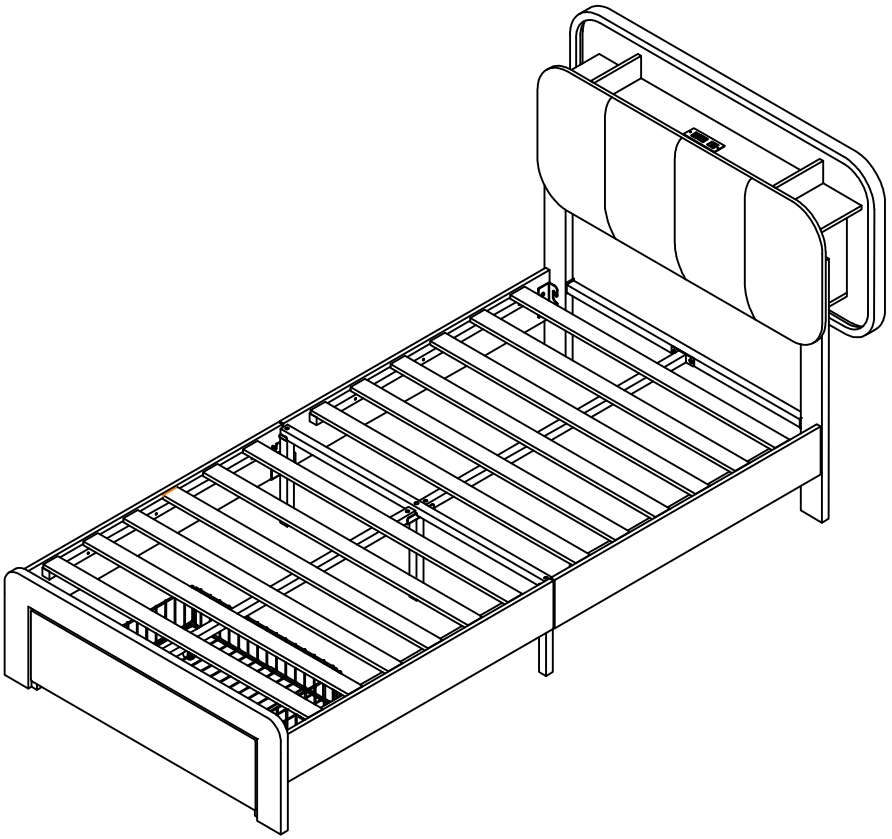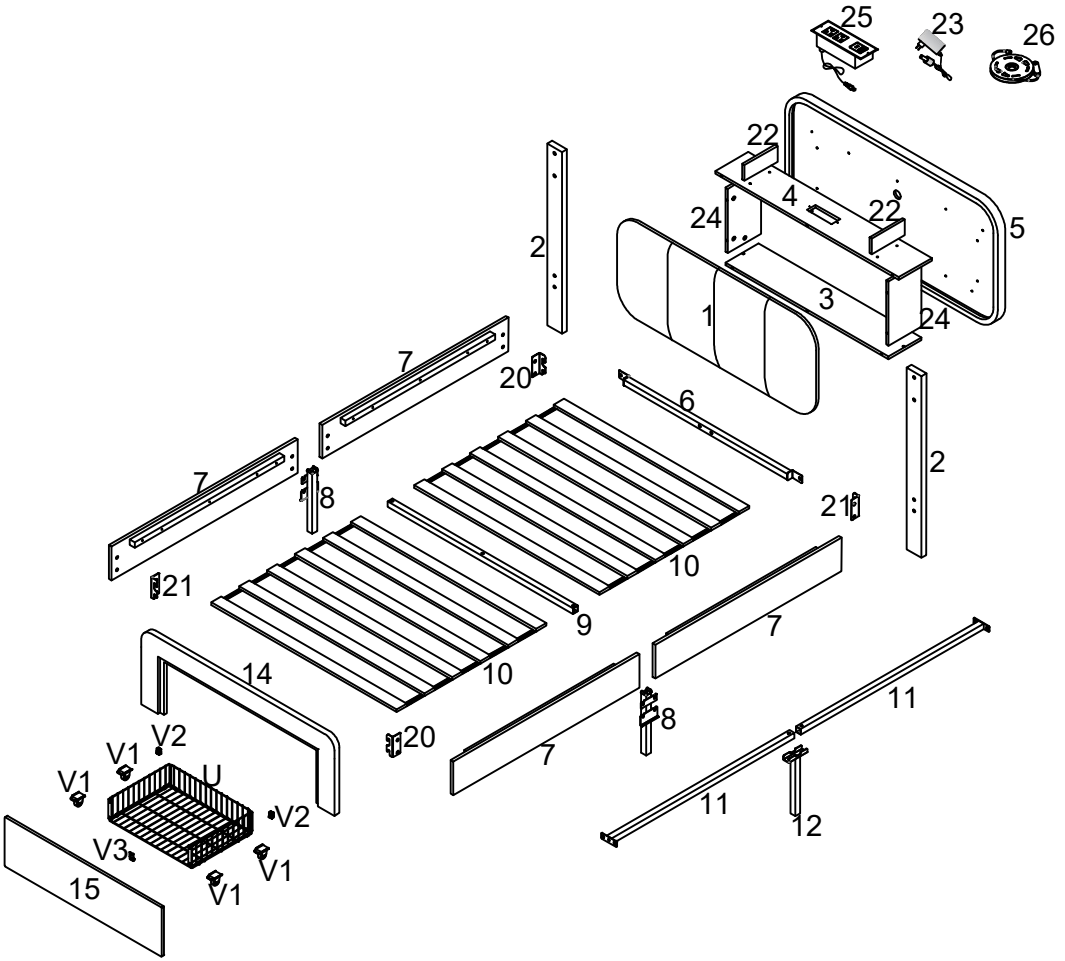

Please check that you have all the parts listed
before you start assembling,if you do find that something is
missing,do not continue assembly.Please contact us immediately.
NOTE:Please do not completely tighten
all the hardware until the entire assembly is complete!

Part list


25
23
26
22
4
24
22
5
2
3
1
24
7
20
6
2
7
8
21
21
10
9
7
14
10
11
V2
V1
20
8
V1
U
7
V2
11
V3
12
V1
15
V1

Hardware list



M8 x 50mm

A x 5



M8 x 40mm

B x 4



M8 x 16mm

C x 22



M8 x 14mm

D x 8



M6 x 14mm

E x 5



M3 x 14mm

F x 2



M5*40mm

G x 14

M6 x 35mm

H x 14



Ø15*Ø9.5

J x 14



M6 x 30mm

K x 4



M8

L x 1



M6

M x 1



M3

N x 1




M5

P x 1


1

H x 2

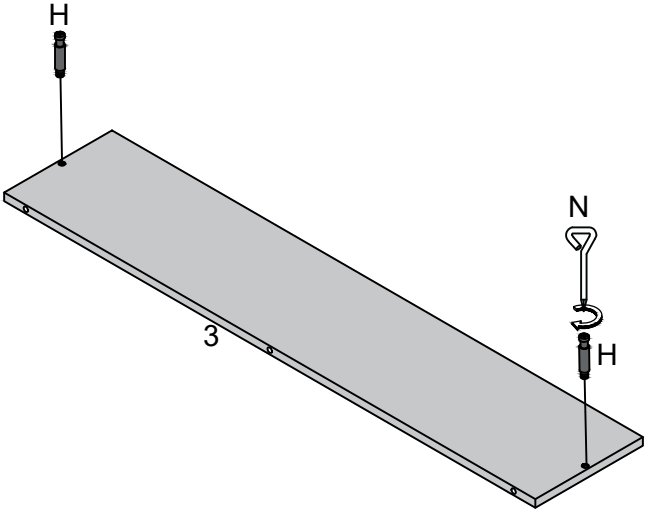


2

J x 2

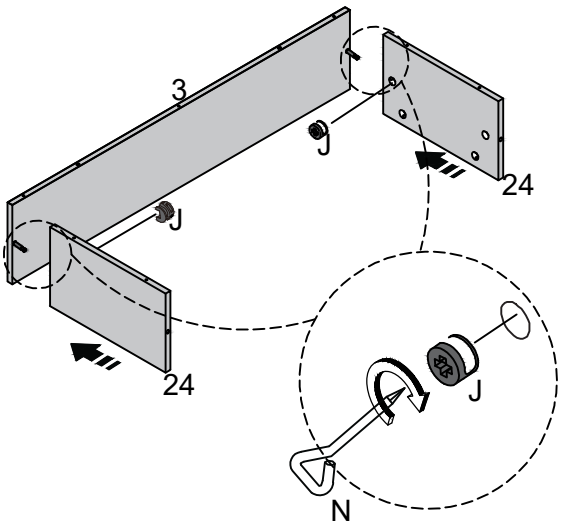


3

H x 2

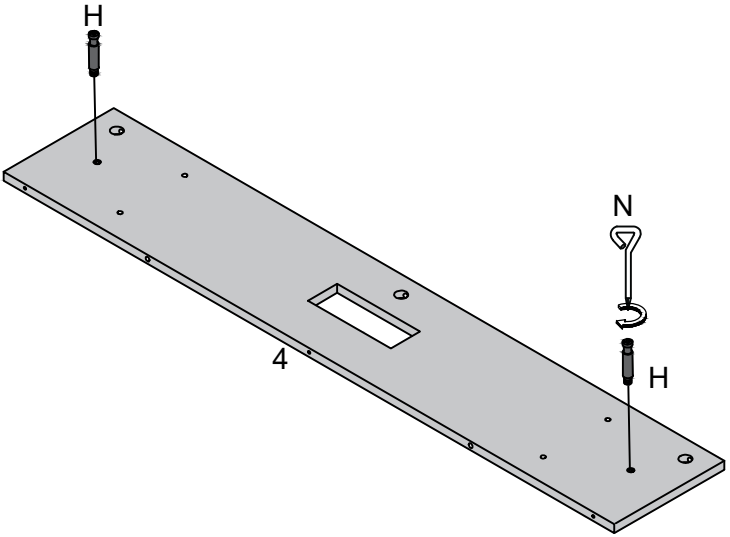


4


G x 4

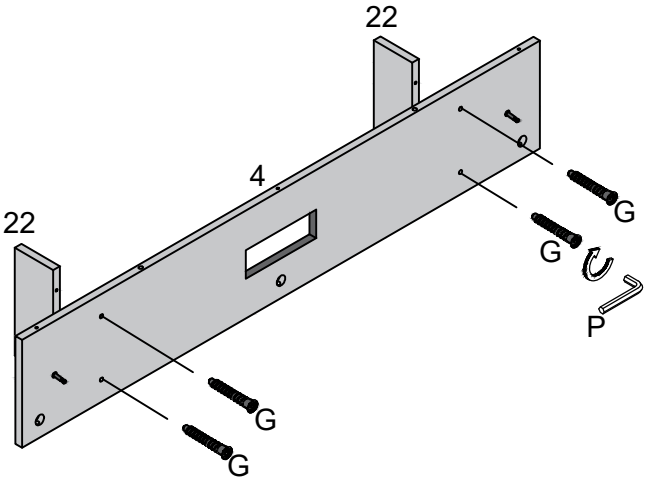


5

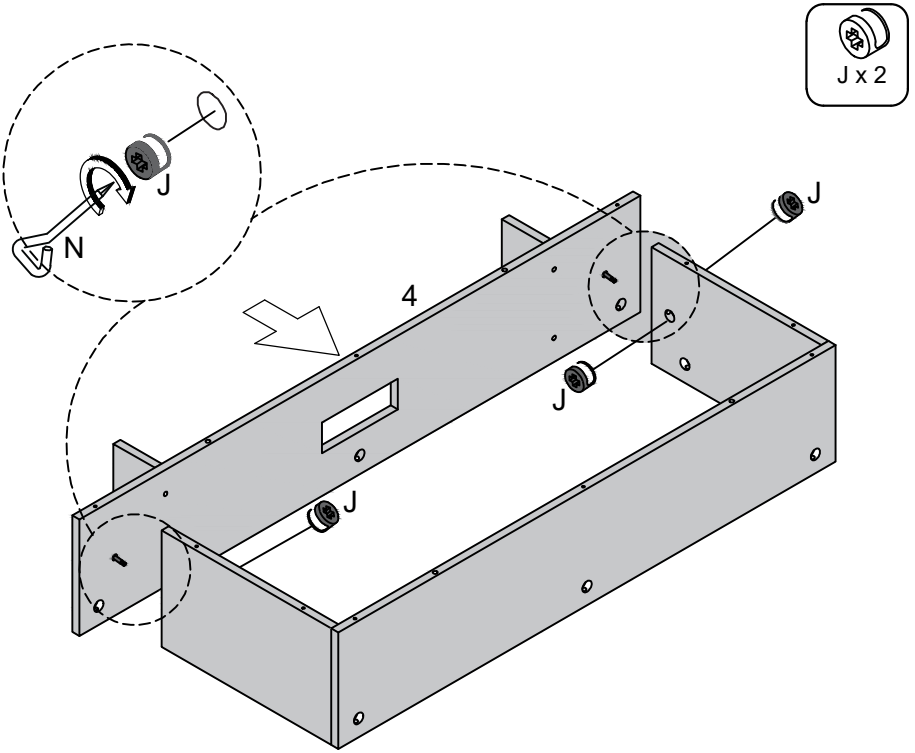
J x 2
J
N
4
J
J
J

6

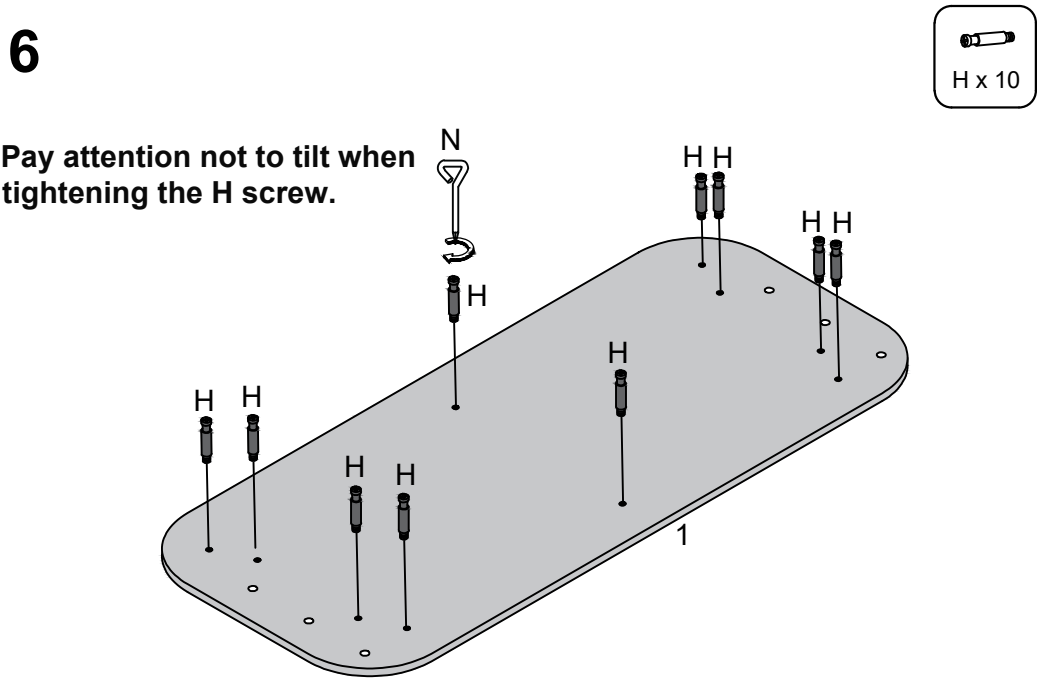

H x 10
Pay attention not to tilt when tightening the H screw.
N
H H
H H
H
H
H H
H H
H
1

7

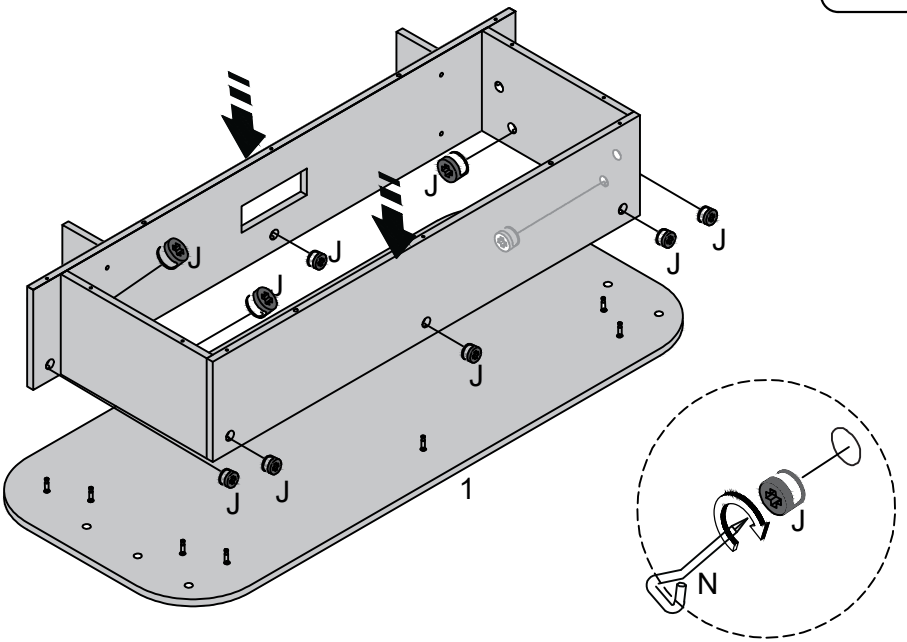


8


The height of the headboard is adjustable,install the 2 parts to the corresponding holes.

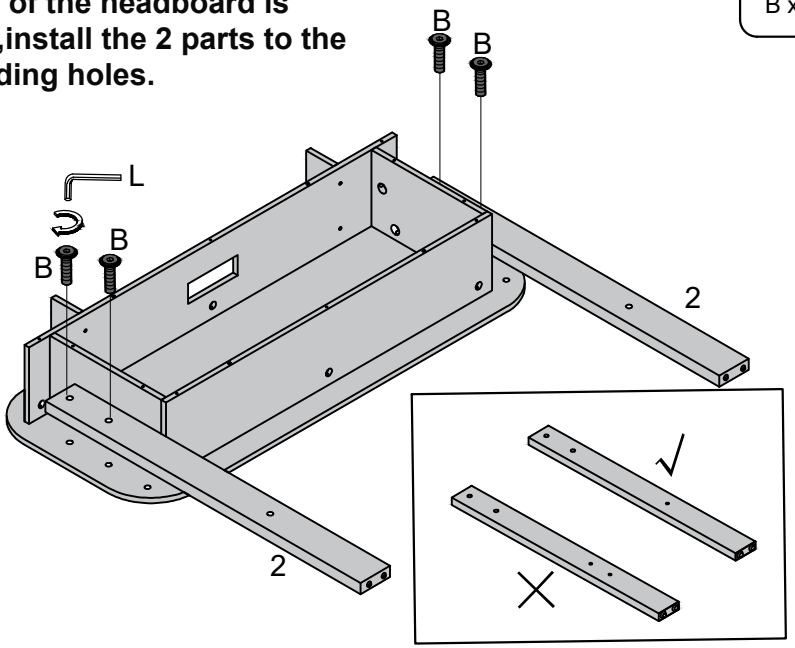


9

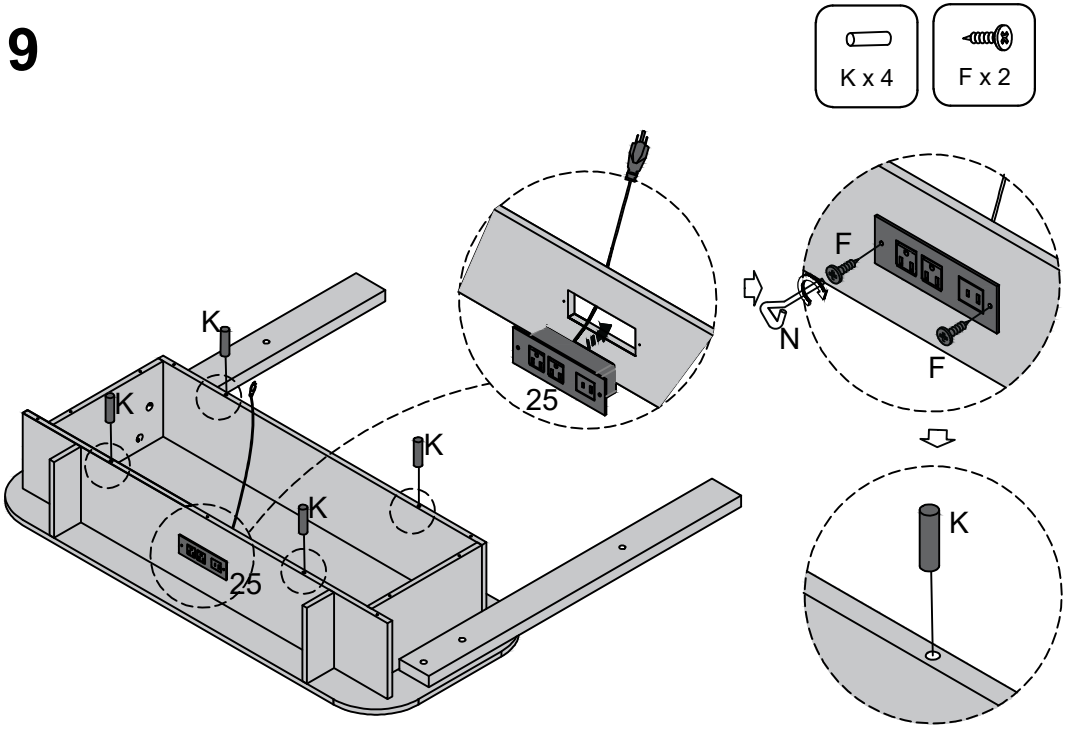

10

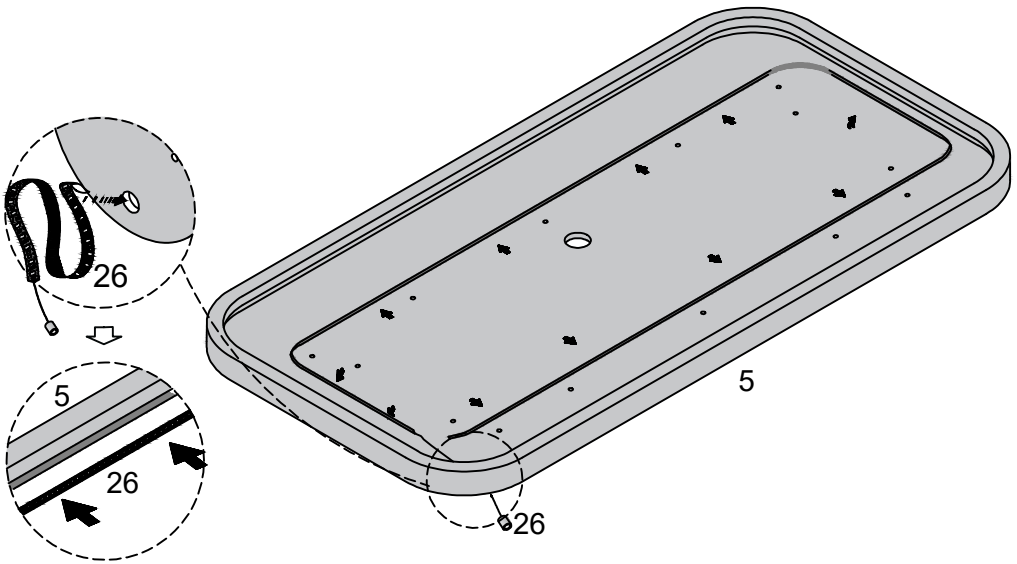


11

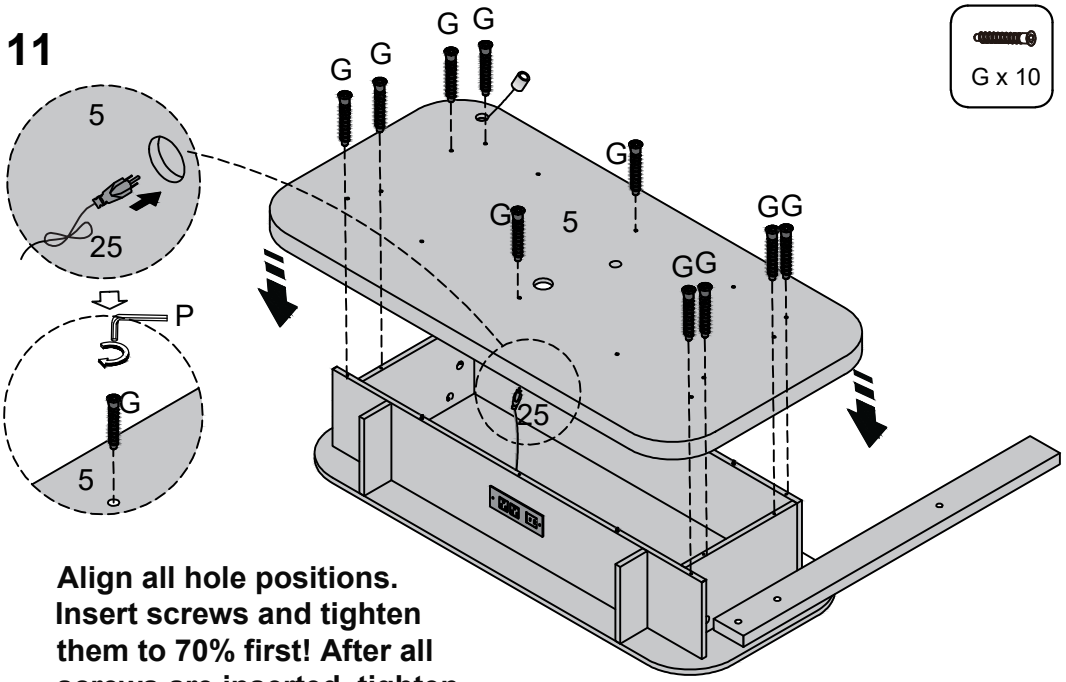


Align all hole positions. Insert screws and tighten them to 70% first! After all screws are inserted, tighten them completely.


12

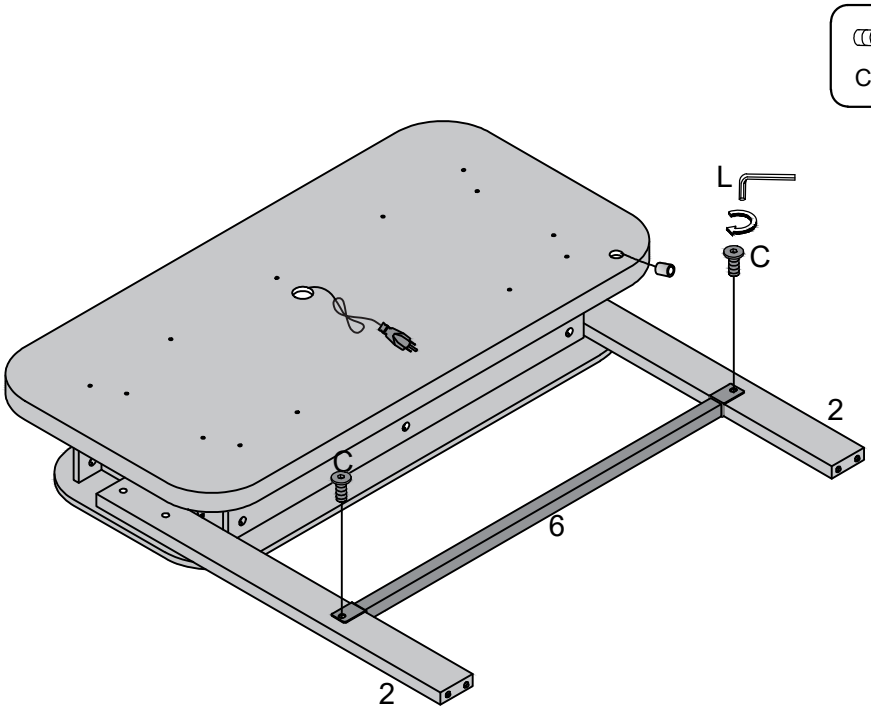

13

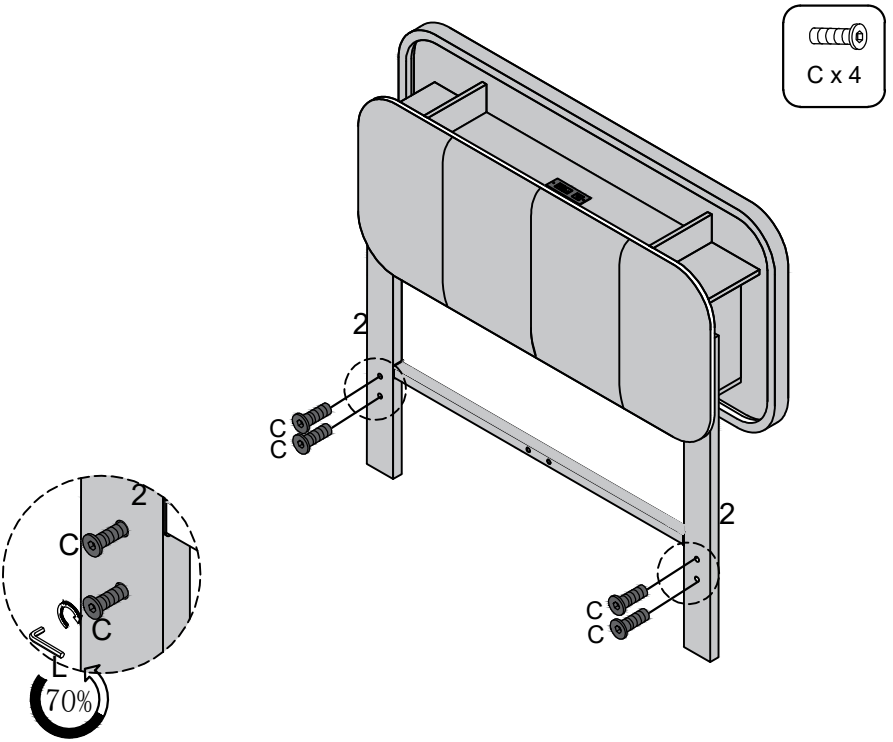


14

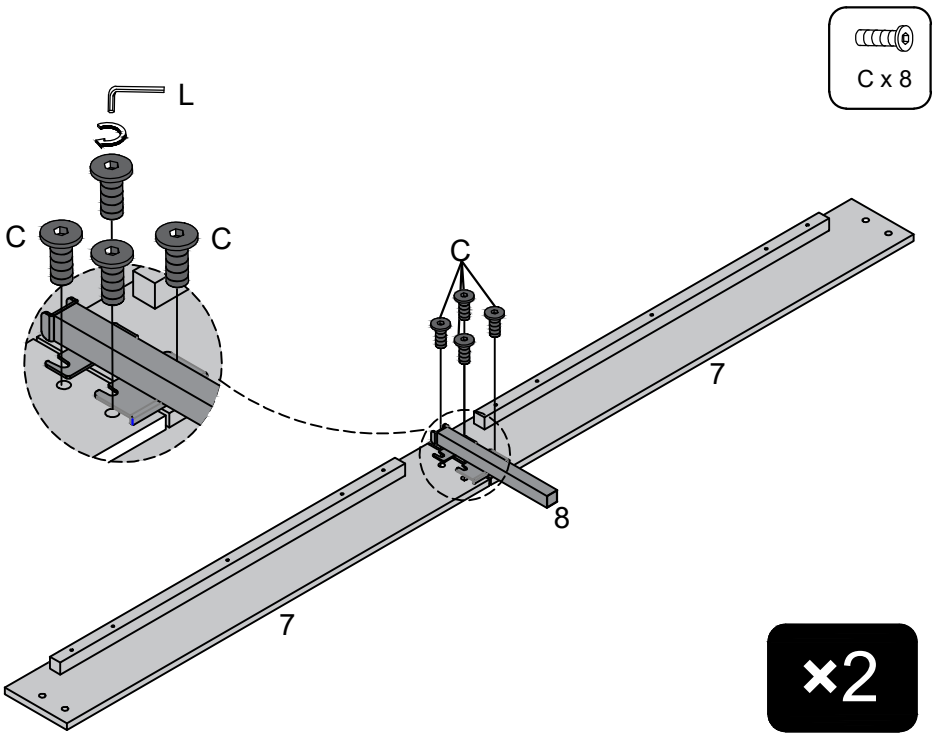

15




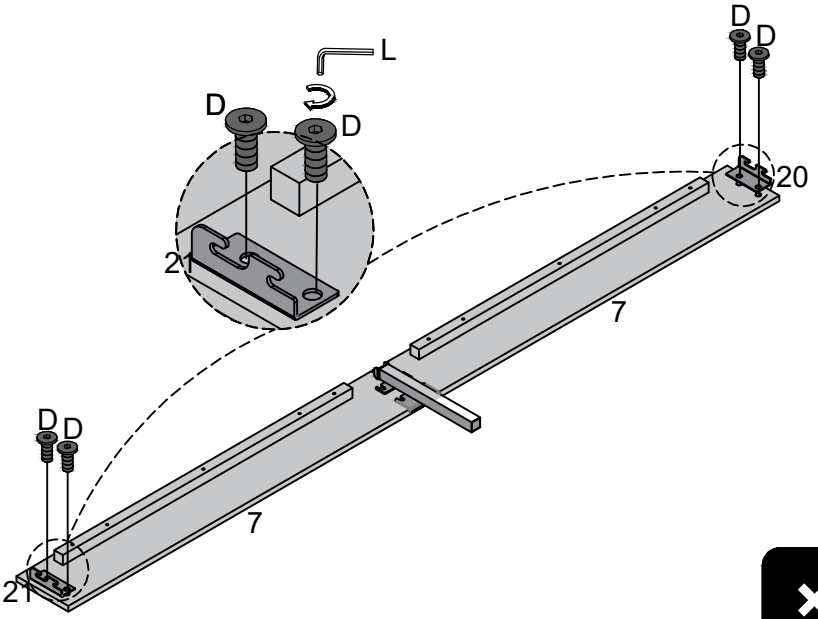


×2

16




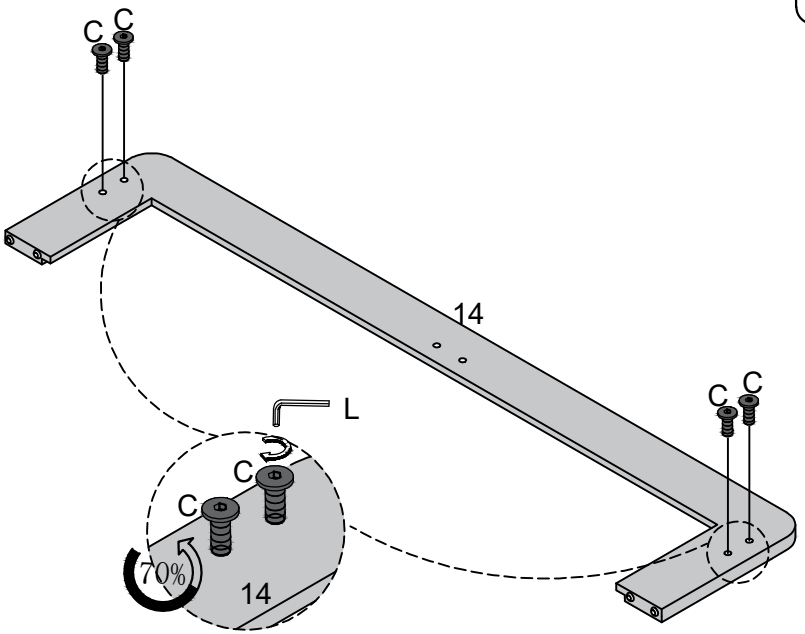


17

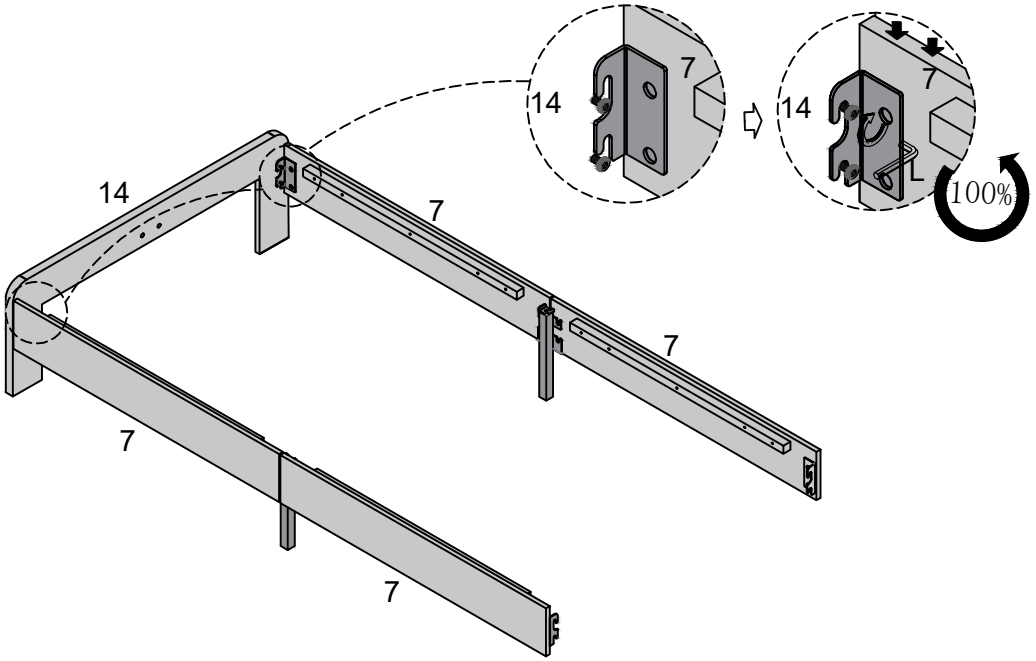


18

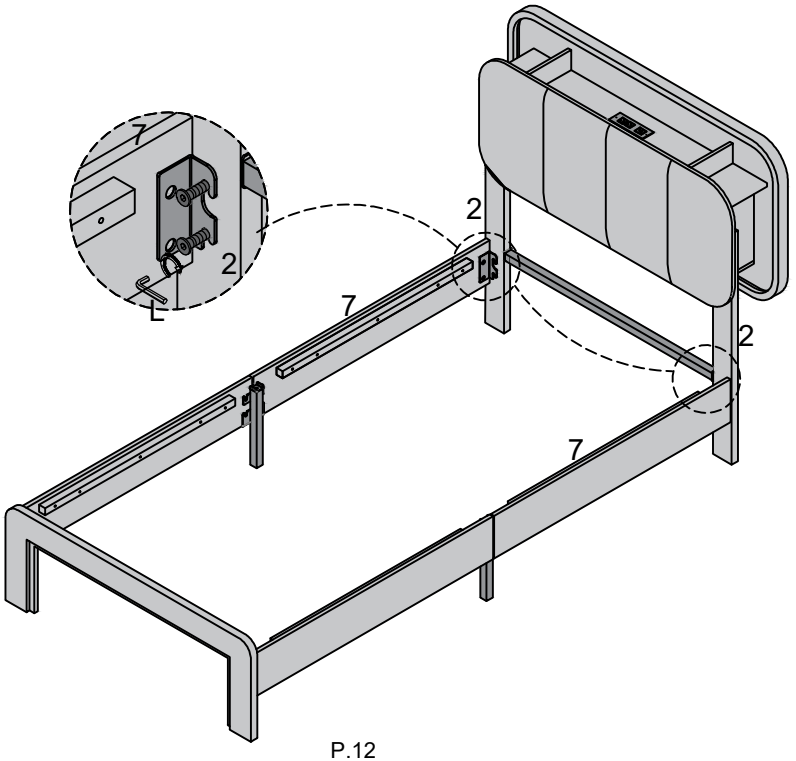


19

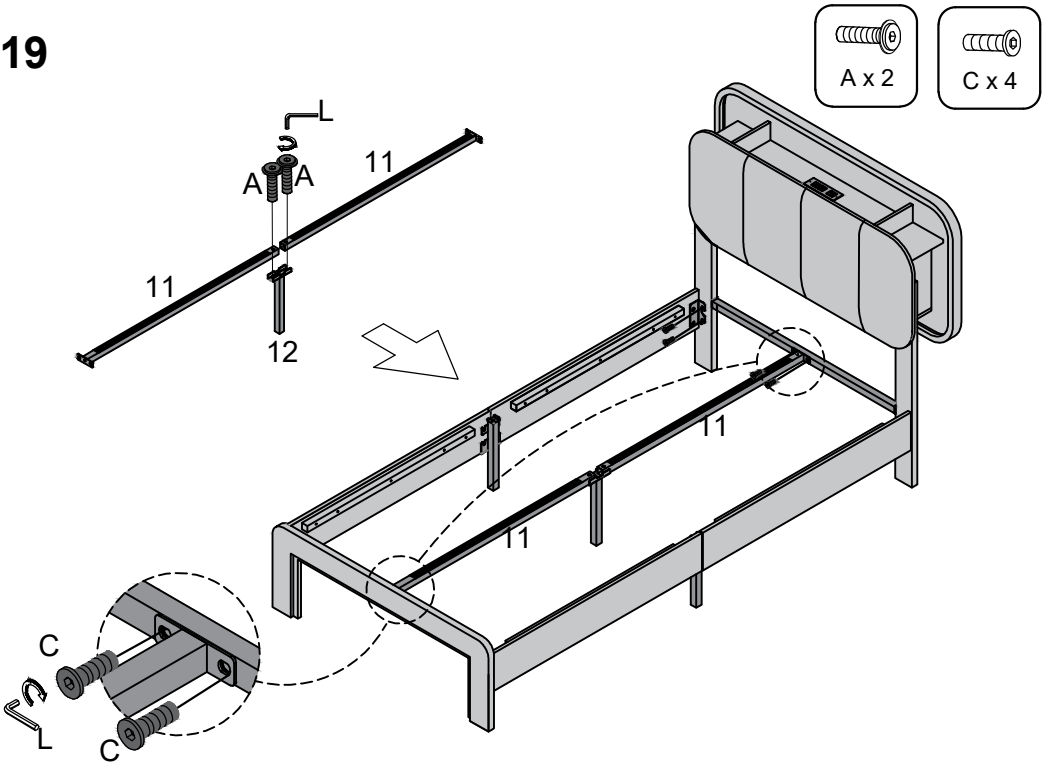


20

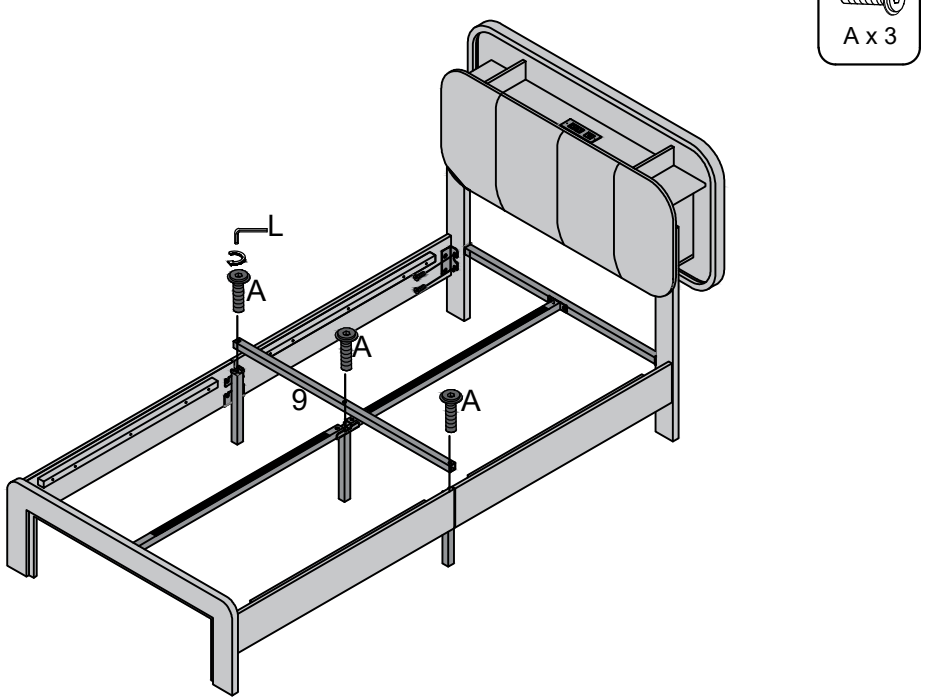

21

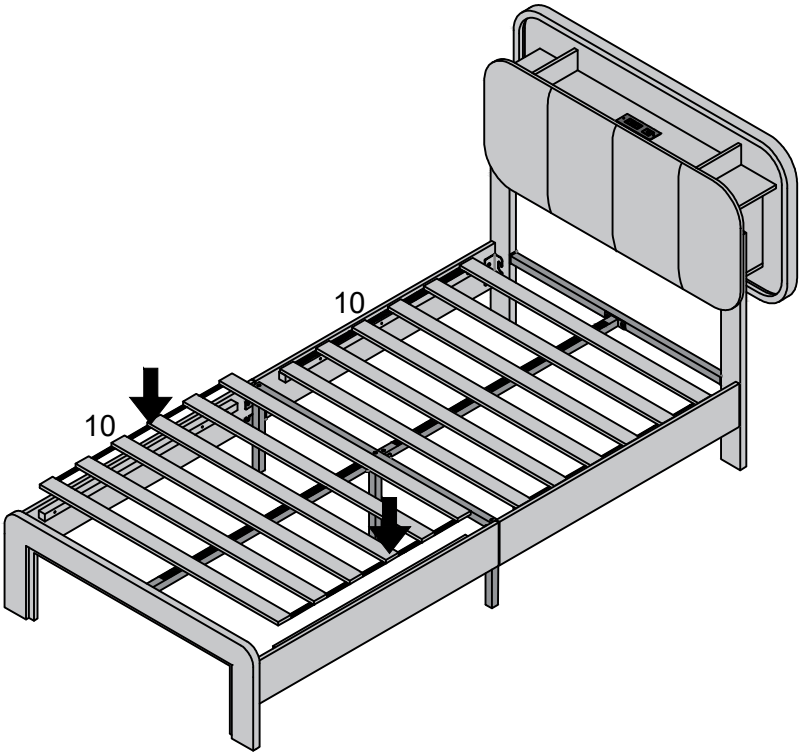


22

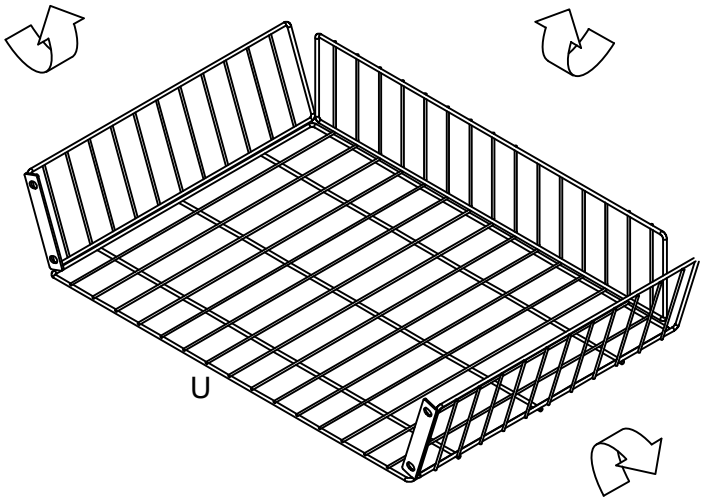


23



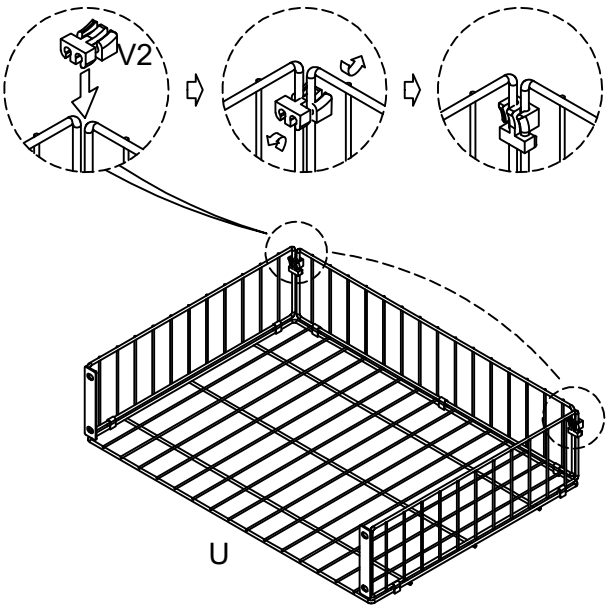



24



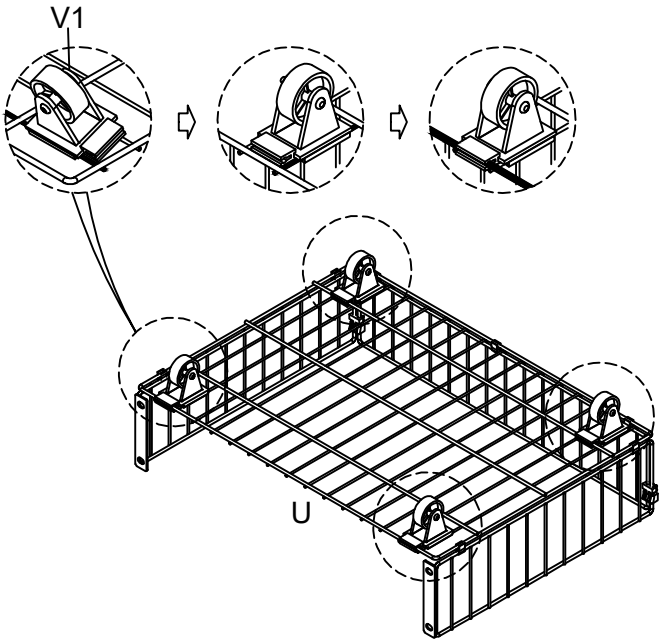


25




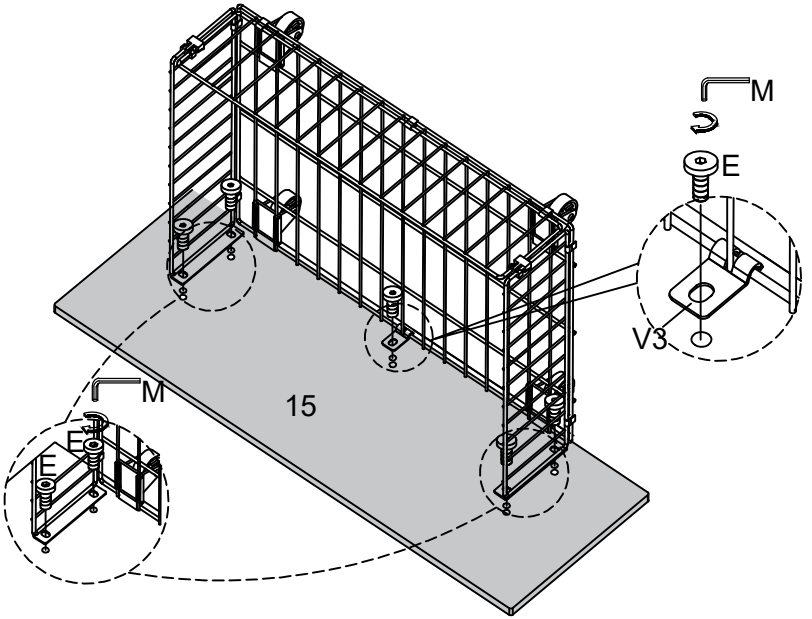

26

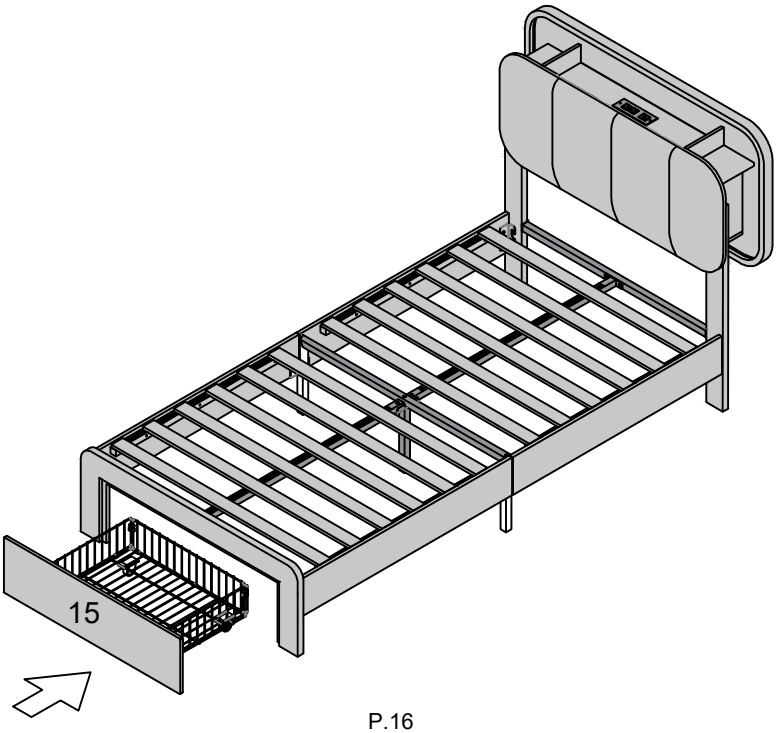

27

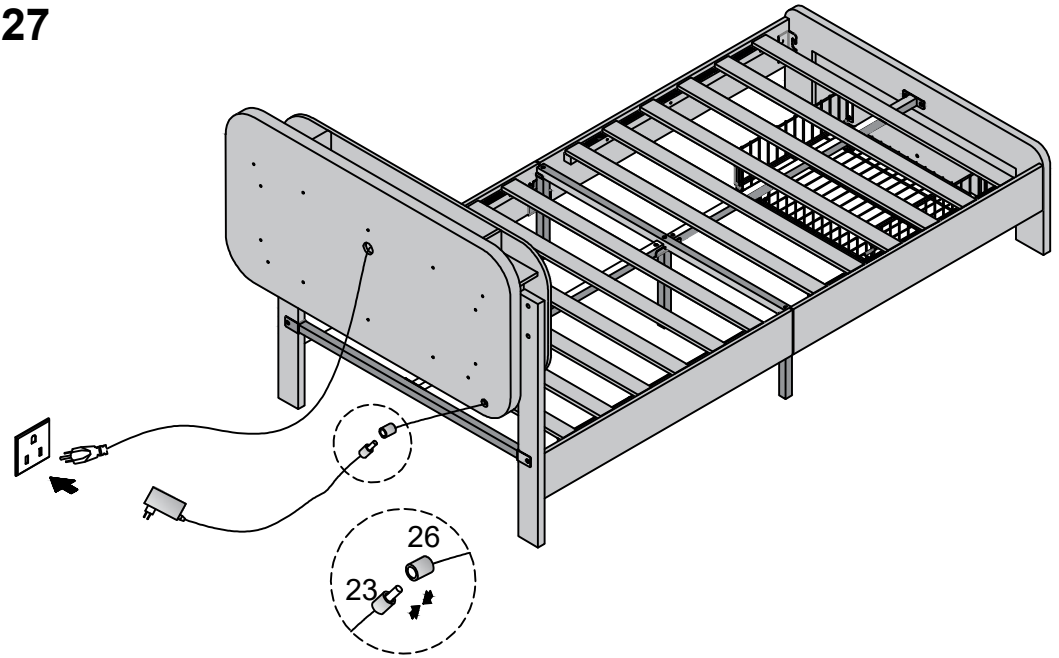

Final Assembly