


ASSEMBLY INSTRUCTION

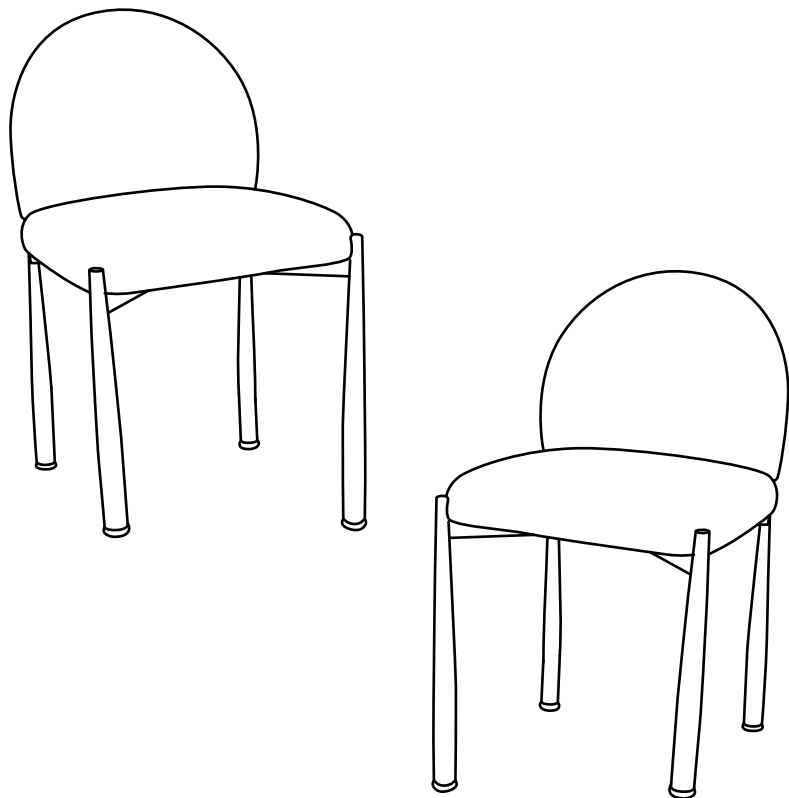


friendly reminder

To ensure a smooth, confusion-free installation, please:

Avoid opening all hardware bags at once, as some screws look alike.


Verify each bag's hardware with the parts list before assembling.

Open bags only when needed for each step.

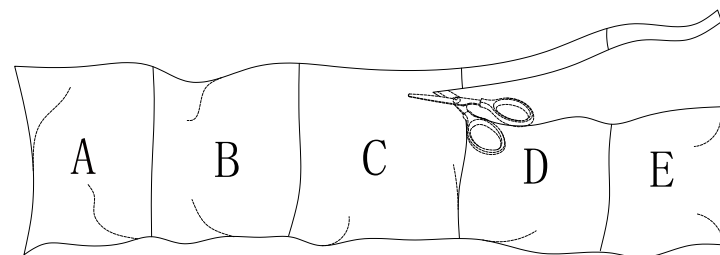


Ax1	Bx1	Cx1	Dx1	Ex4+1	Fx4+1	Gx1	Hx4+1	Ix4+1	Jx4+1	Kx1
				 M6x13mm	 M6x16x1.5mm	 M6x30mm	 M6x50mm	 M6x16x1.5mm		

1

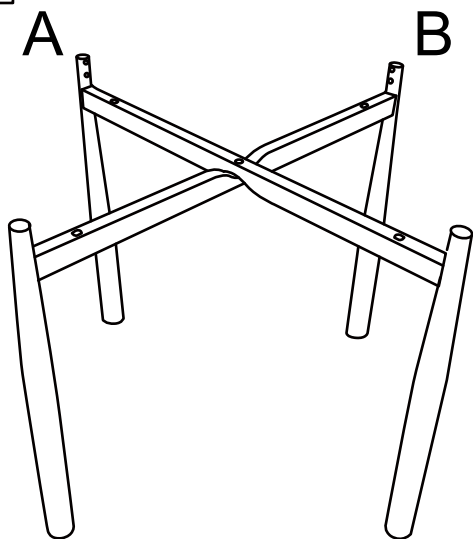

Place (A) onto (B).

2

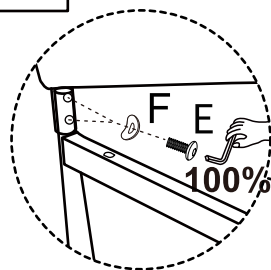

F x 4



M6x16x1.5mm

E x 4




M6x13mm

Insert (C) into (A) and (B).

Twist (E) through (F) into (A) (B) and (C) to secure them.

3

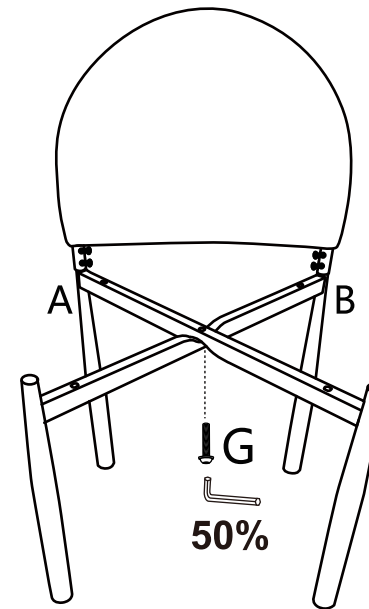

G x 1




M6x30mm

Twist (G) into (A) and (B).

Note: Tighten (G) to about 50% only.

4

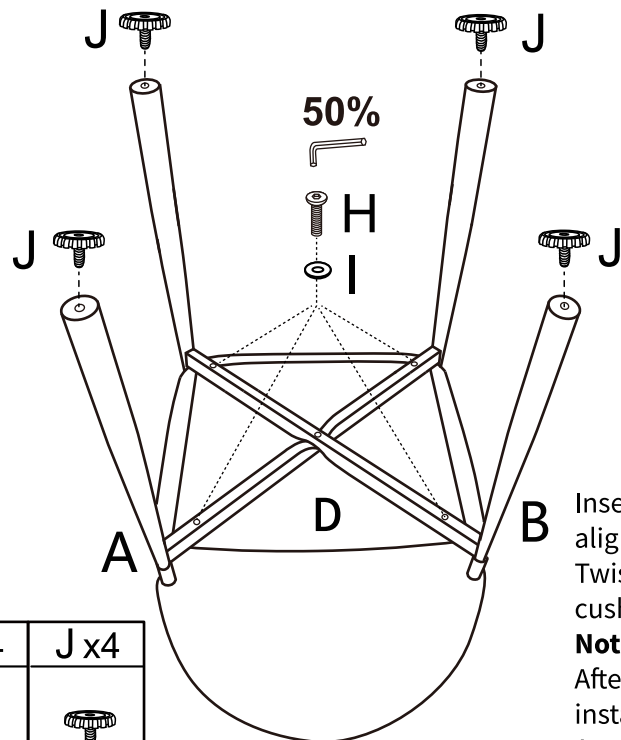

H x 4



M6x50mm

I x 4



M6x16x1.5mm

J x 4




Insert (D) firmly into the base frame, adjusting it to align the bottom holes.

Twist (H) through (I) into (A) (B) and the seat cushion (D) to connect them.

Note: Tighten the first three (H) to about 50% only. After installing the last (H), fully tighten all previously installed screws.

As shown, twist (J) into (A) and (B).

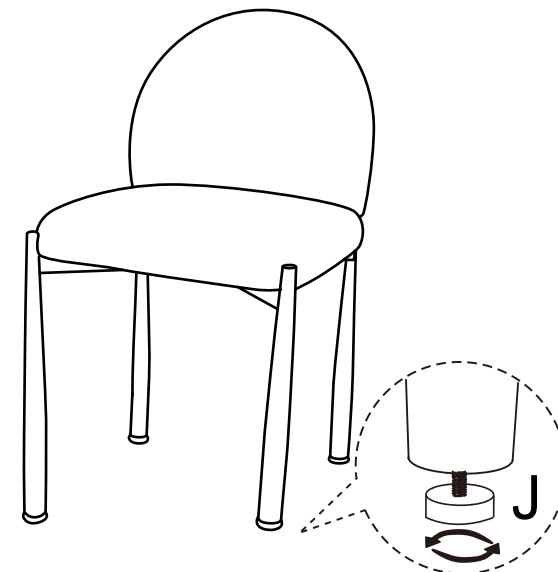

Assembly complete!

If you feel that the chair is leaning to one side due to uneven ground, rotate the foot pads to adjust it.