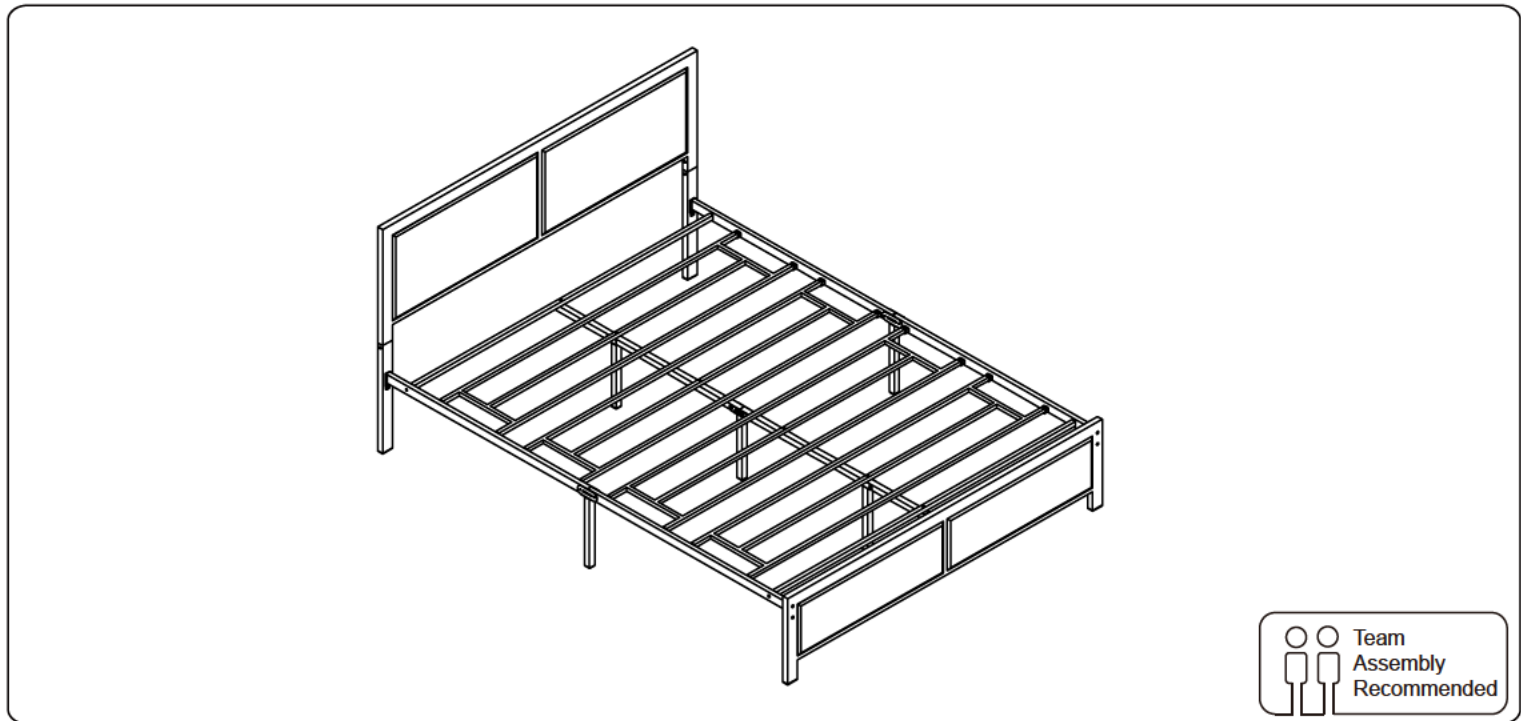




















# Bed Frame Installation Manual








Componets		Screws & Tools			
	① x1	(A) 	M8x40mm	x4	
	② x2	(B) 	M6x50mm	x2	
	③ x1	(C) 	M6x35mm	x8	
	⑤ x1	(D) 	M6x20mm	x16	
	⑥ x1	(E) 	M6x15mm	x10	
	⑦ x1	(L) 	M8	x8	
	⑧ x4	(M) 	M6x20mm	x4	
	⑨ x2	(N) 	M4	x2	

**1** Note: For easy setup intention, do not tighten screws during the installation process

 M6x15 6pcs  
 M4 2pcs

**2**

 M8x40 4pcs  
 M6x15 4pcs  
 M8 8pcs  
 M6x20 4pcs  
 M4 2pcs

