



















Computer Desk

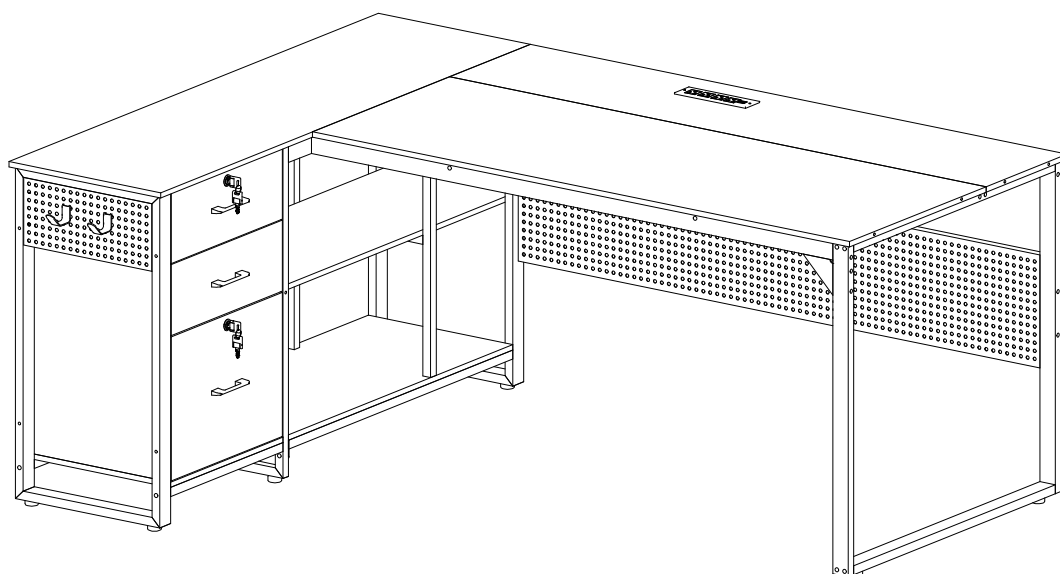

GAUTION:When tightening the screws,tighten sequentially.
Do not tighten any screws fully and then towards the next one.
When every part is OK,then tighten all the screws.


Version: 2.0

ASSEMBLY INSTRUCTION

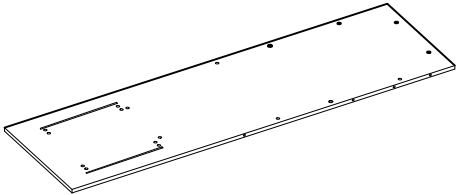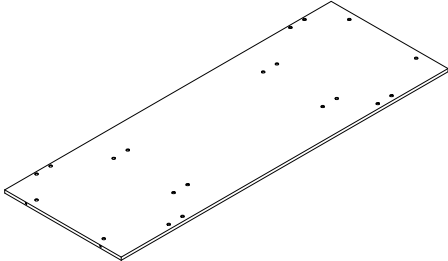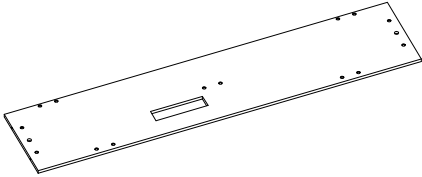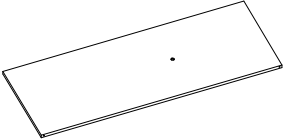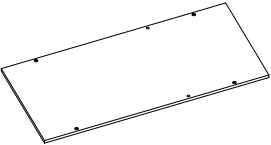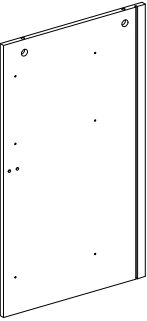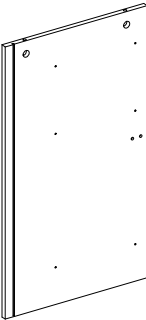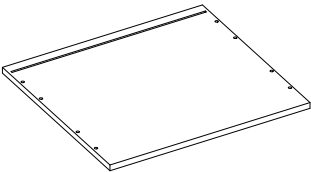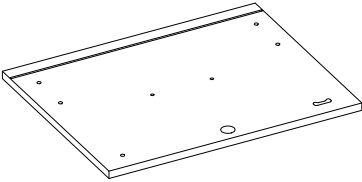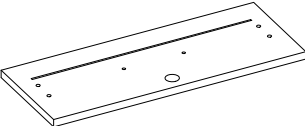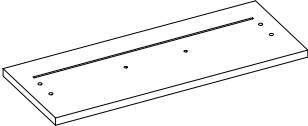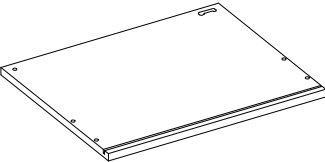①  X1	②  X1	③  X1
④  X1	⑤  X1	⑥  X1
⑦  X1	⑧  X1	⑨  X1
⑩  X1	⑪  X1	⑫  X1
⑬  X2	⑭  X1	⑮  X2


ASSEMBLY INSTRUCTION

16

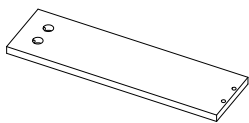


X2

17

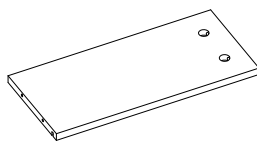


X1

18

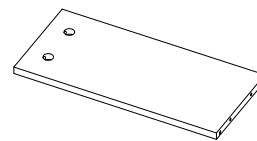


X1

19

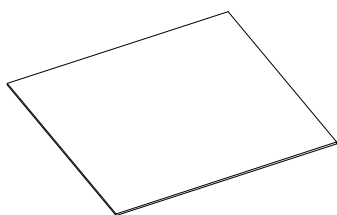


X3

20

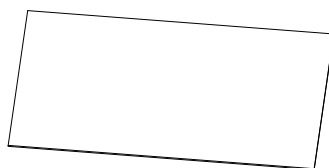


X1

21

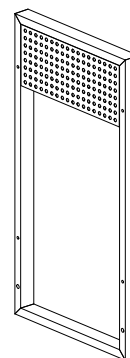


X1

22

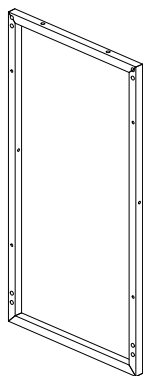


X1

23

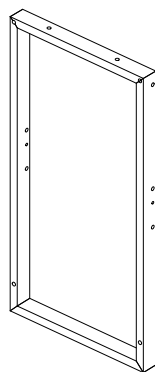


X1

24

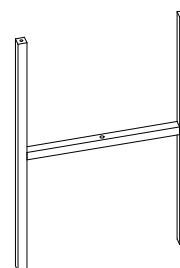


X1

25

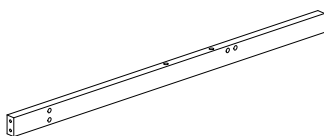


X2

26

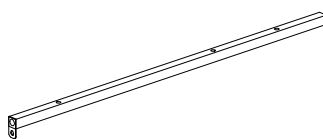


X2

27




X2

28

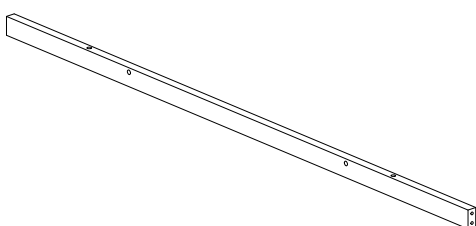


X1

29

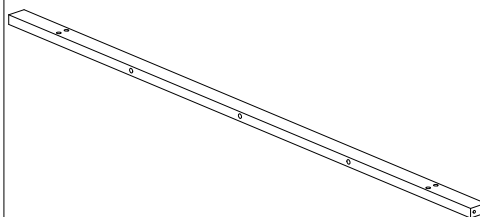






X1

30












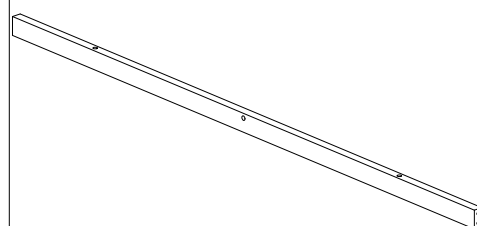


X1

ASSEMBLY INSTRUCTION

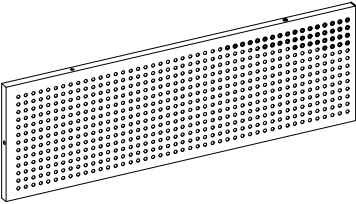31  X1	32  X1	33  X1
34  X1	35  X2	36  X1
37  X1	38  X2	


ASSEMBLY INSTRUCTION

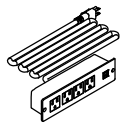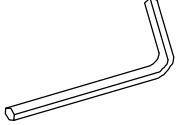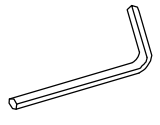A Ø6x50mm  X8	B M6x28mm  X34	C M6x40mm  X22	D M6x50mm  X15
E M6x60mm  X16	F M3.5x12mm  X28	G Ø6x40mm  (K) X20	H Ø15x9mm  X20
I M5x40mm  X20	J M4x16mm  X6	K  X3	L  X4
M M8  X8	N M6  X6	O  X1	P  X1
Q  X2	R Ø12mm  X12	S  X1	T  X2
U  X3	V     M4 M3 X1		
W M3.5x16mm  X8	X M6x12mm  X2		

ASSEMBLY INSTRUCTION


Install styles according to requirements

I

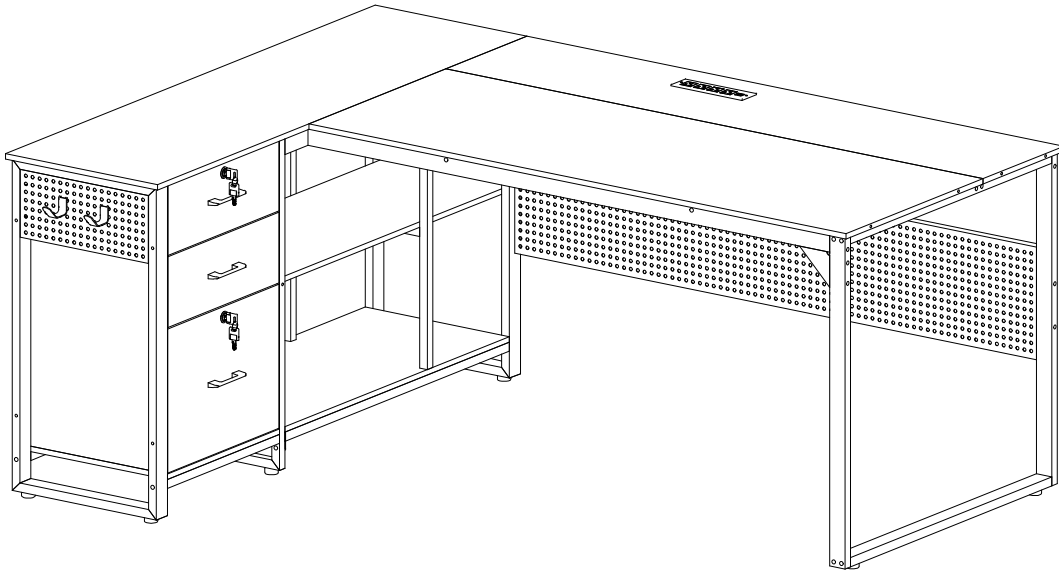

Page:8-25


II

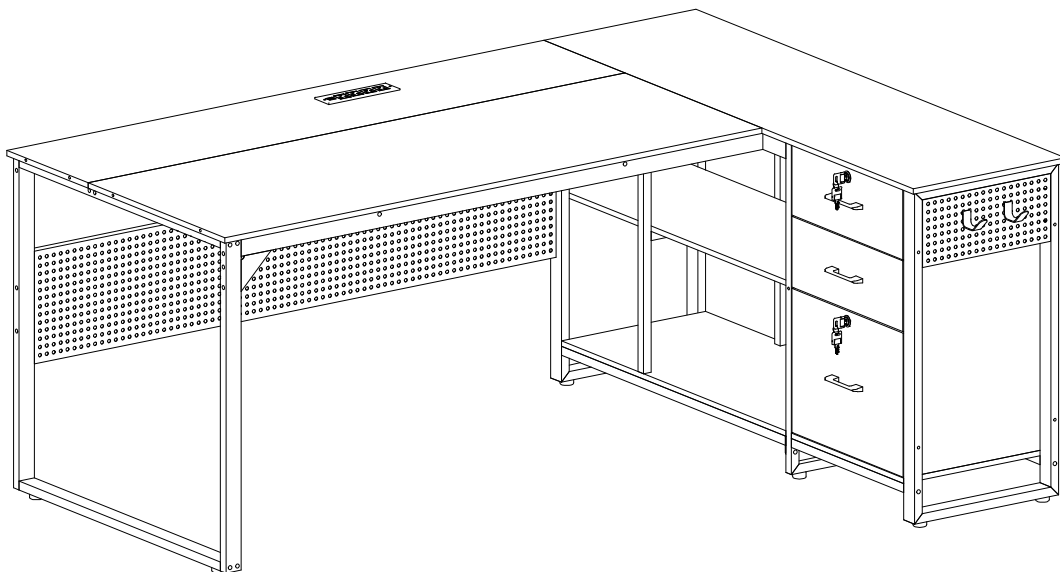


Page:8-17 26-33

ASSEMBLY INSTRUCTION

STEP 1


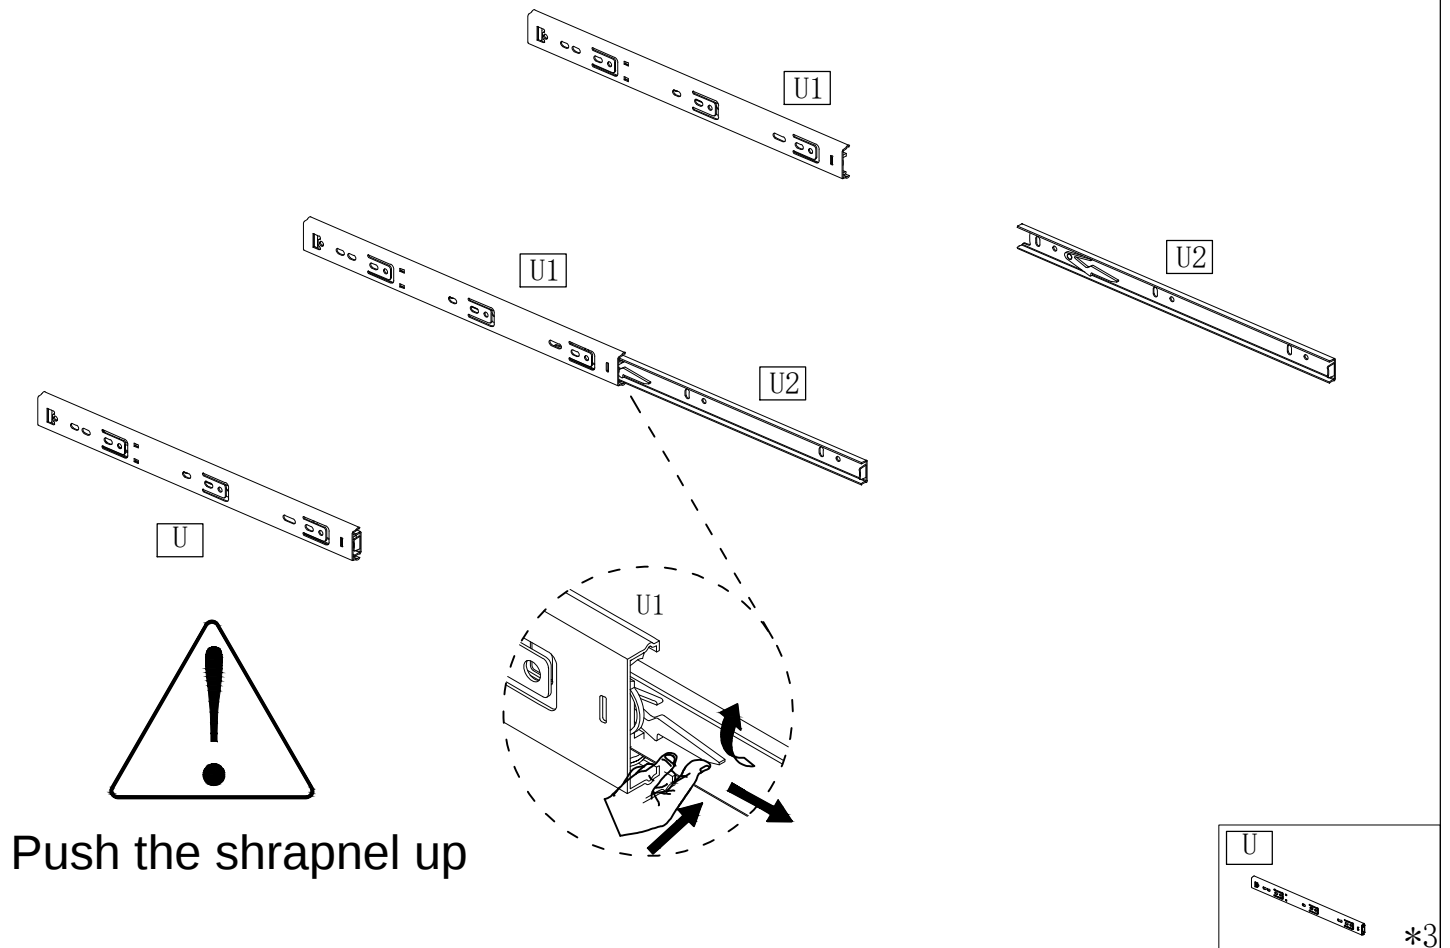


STEP 2

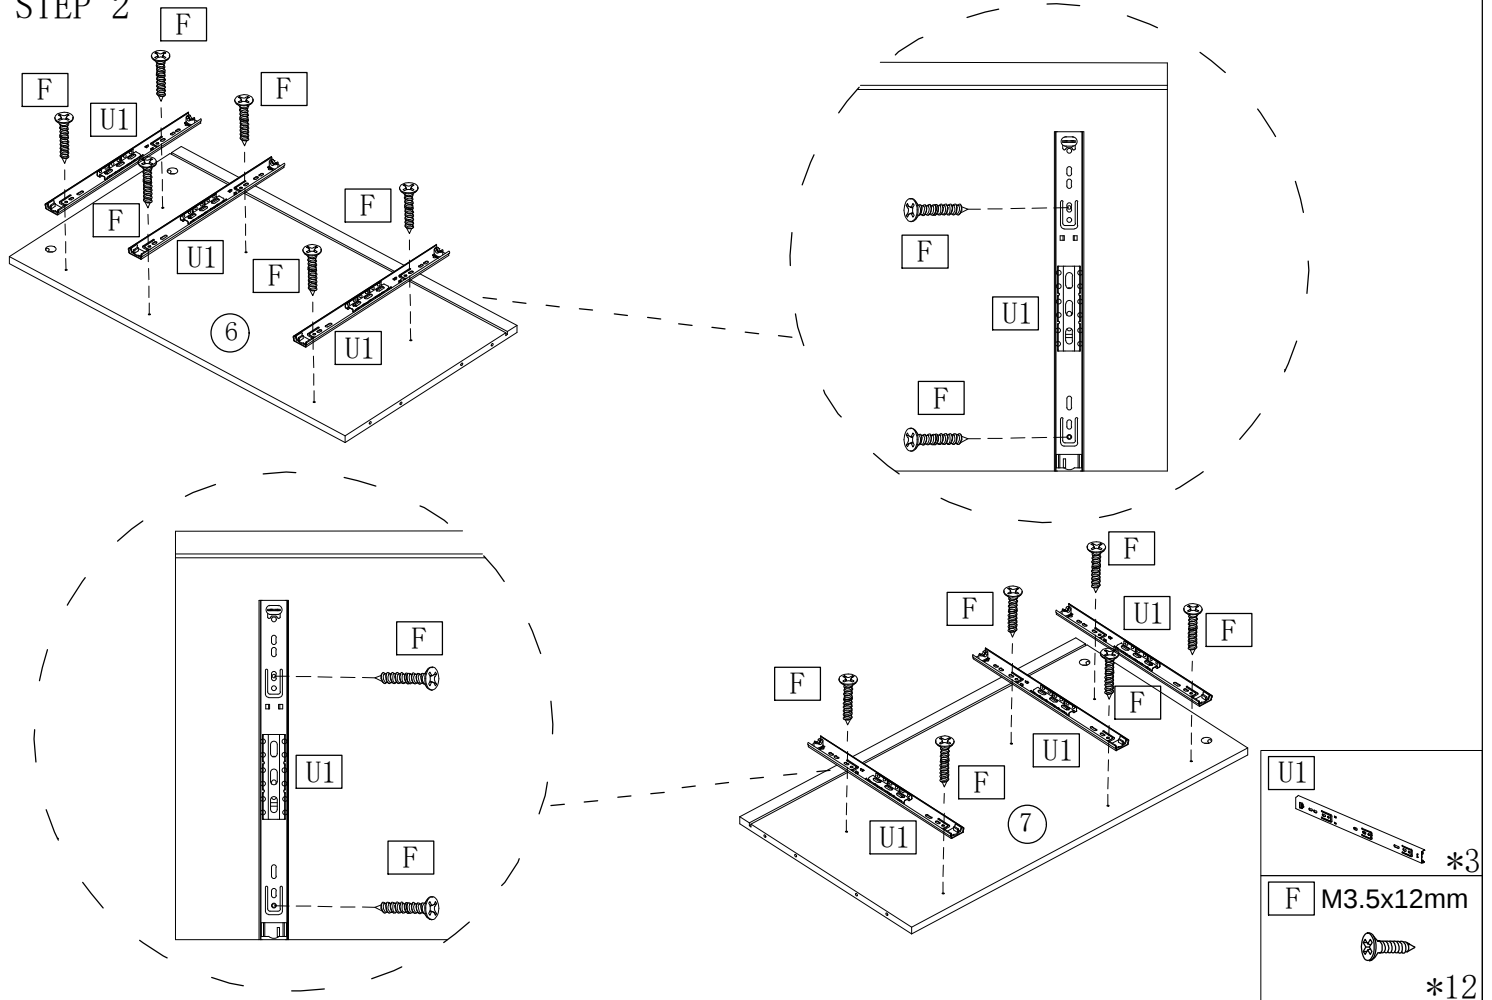

ASSEMBLY INSTRUCTION

STEP 3


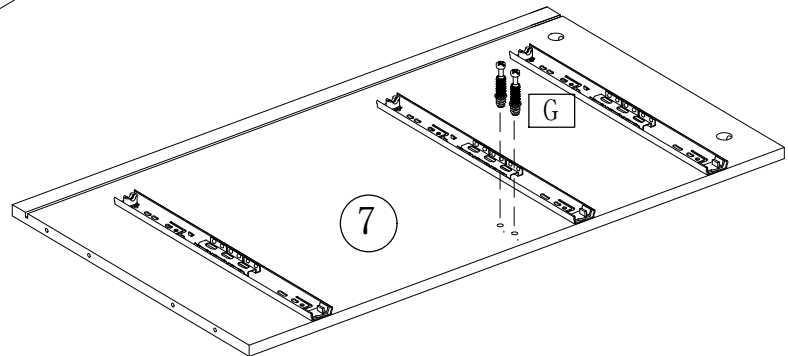
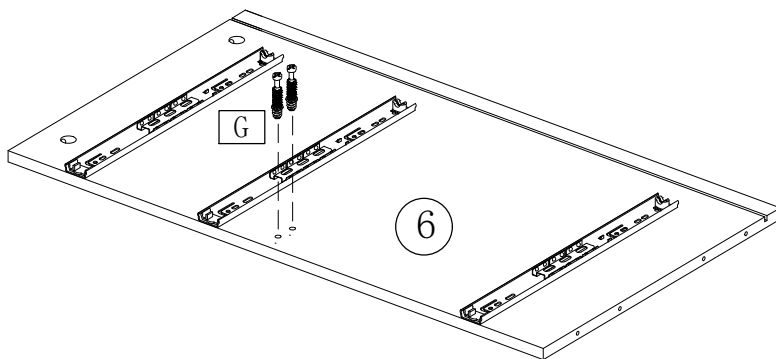


G Ø6x40mm



*4

STEP 4

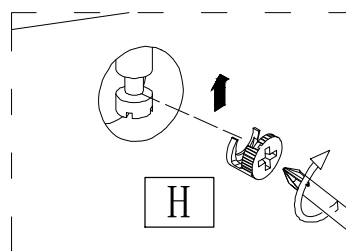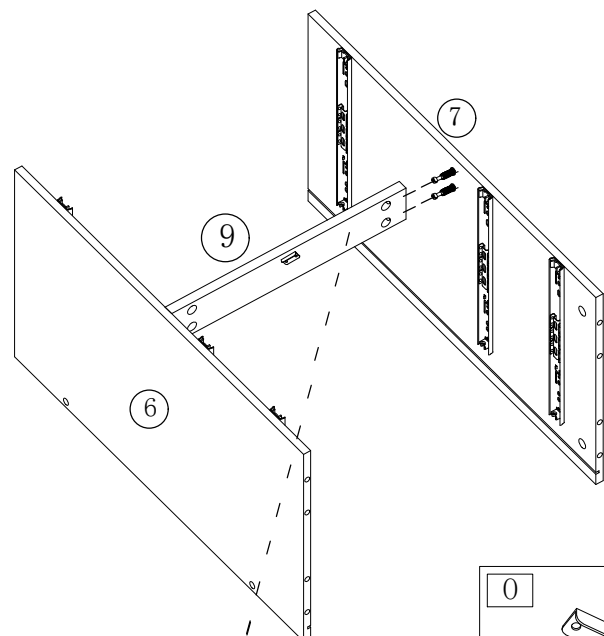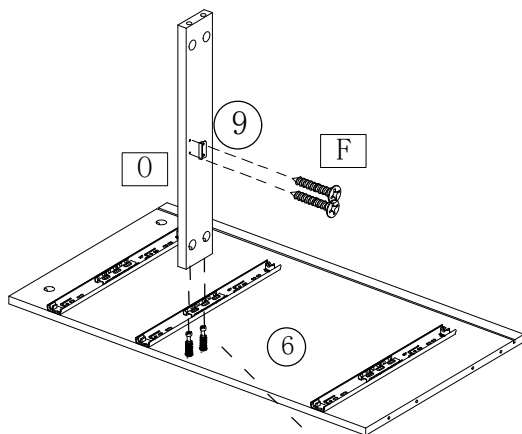

O



*1

F

M3.5x12mm



*2

H


Ø15x9mm



*4


ASSEMBLY INSTRUCTION

STEP 5

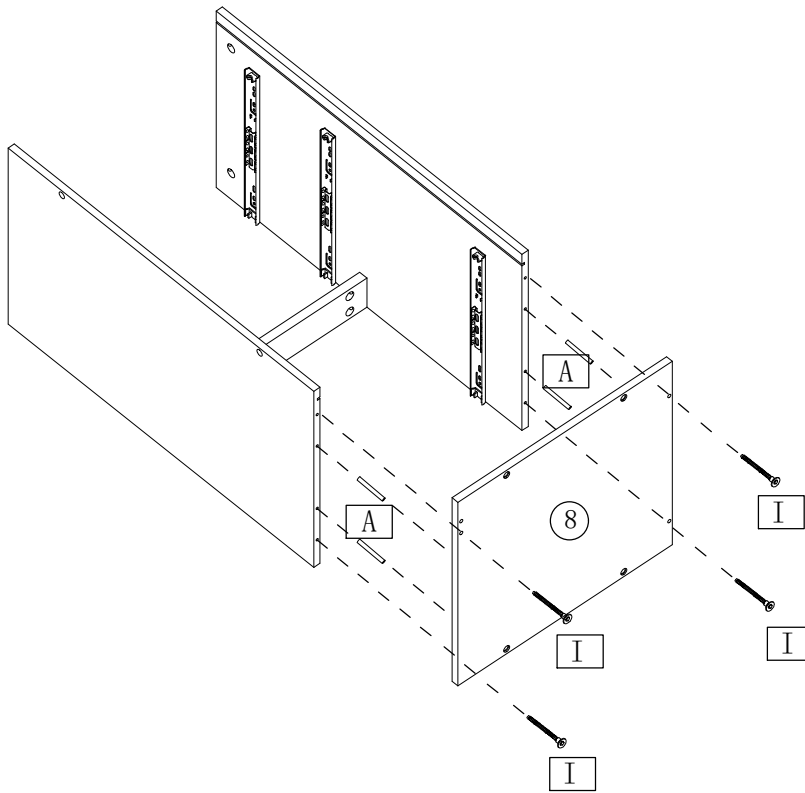





A	M6x50mm
	*4
I	M5x40mm
	*4

STEP 6





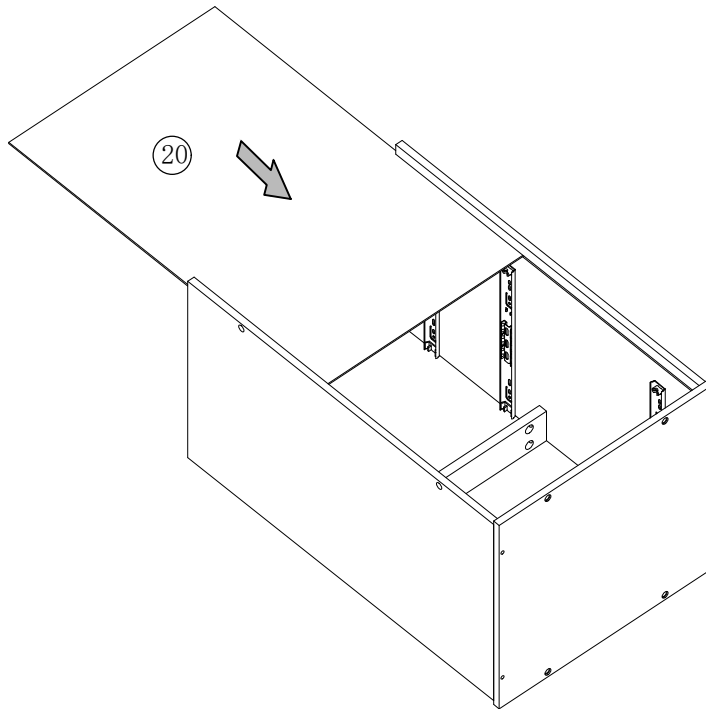


ASSEMBLY INSTRUCTION

STEP 7

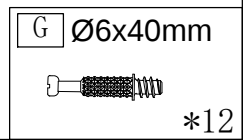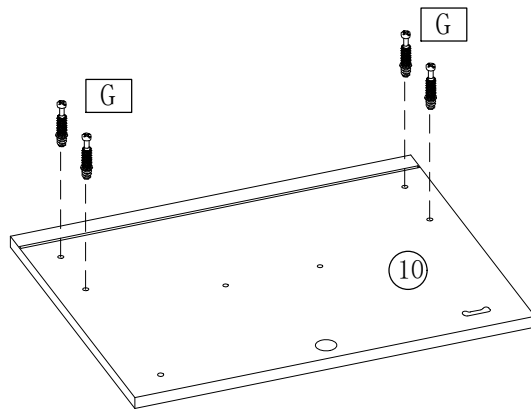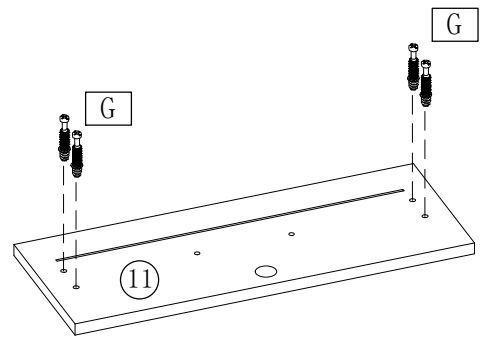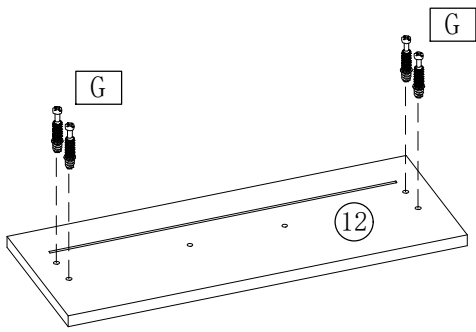


STEP 8

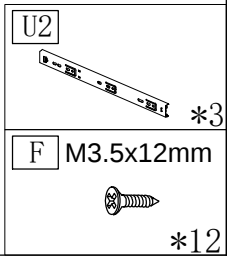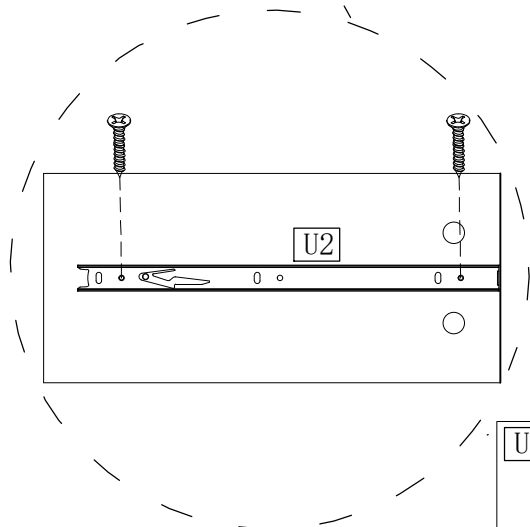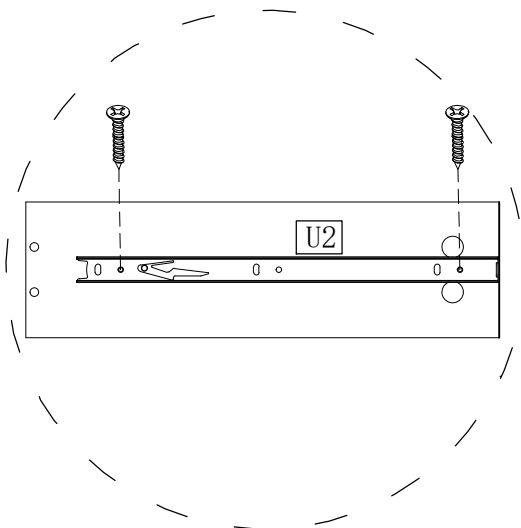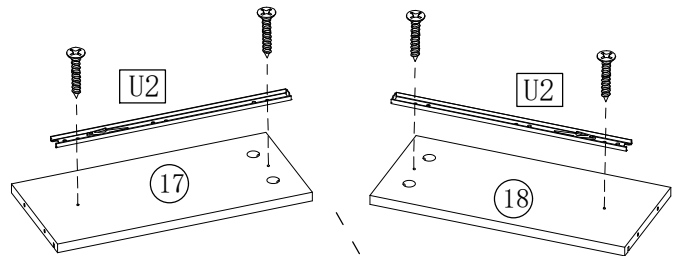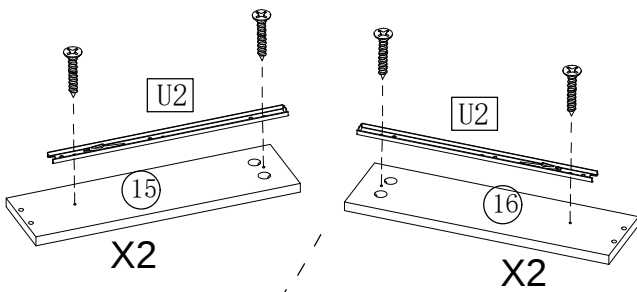


ASSEMBLY INSTRUCTION

STEP 9

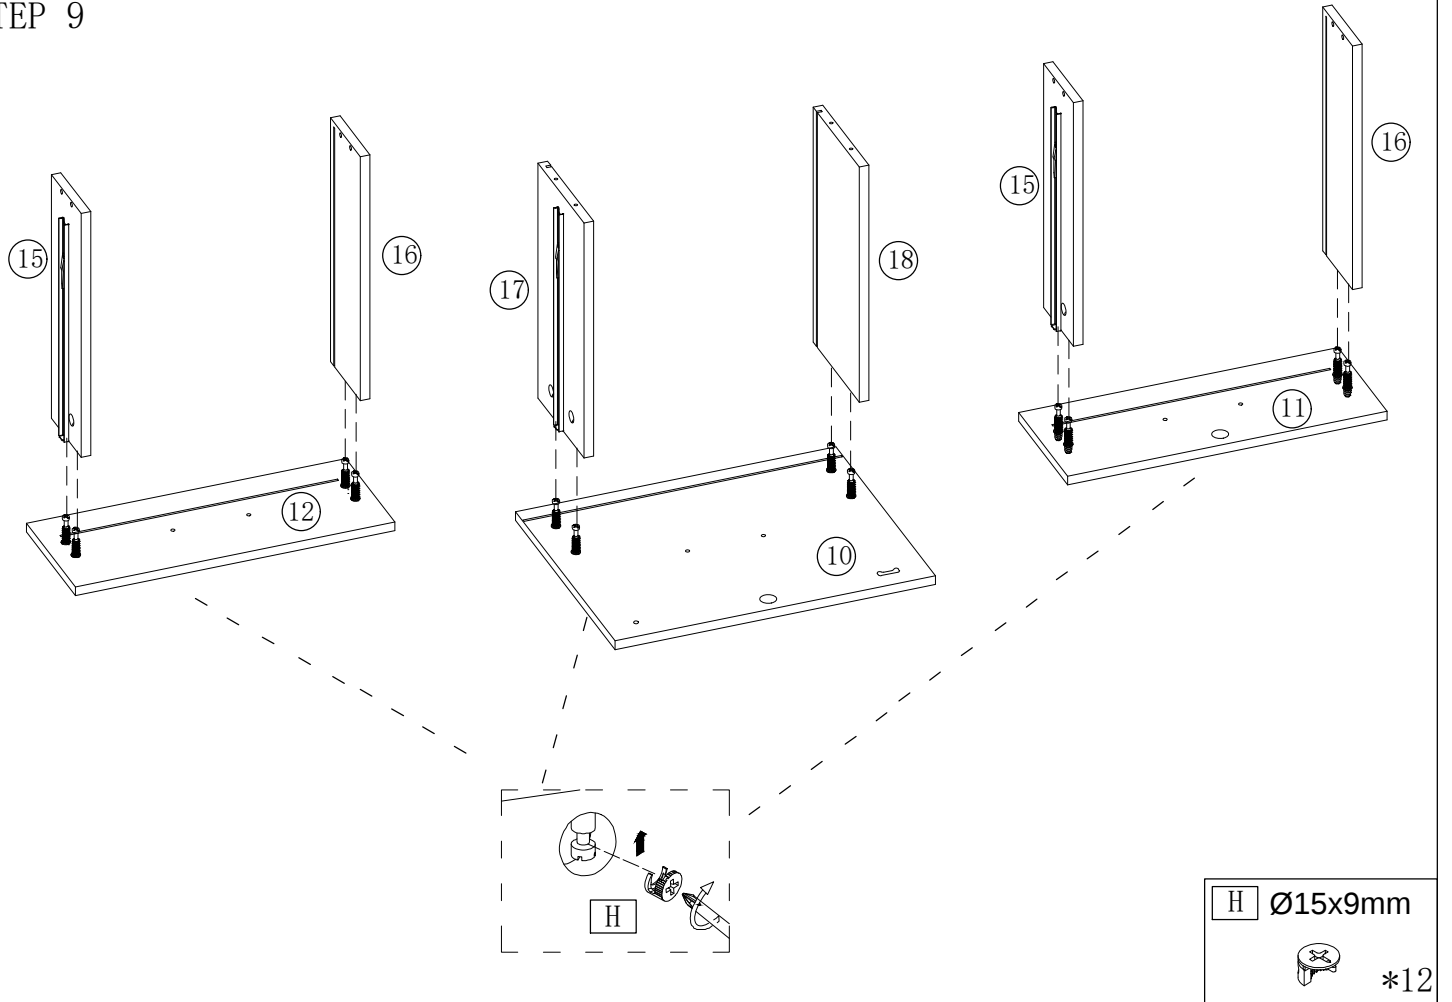


STEP 10

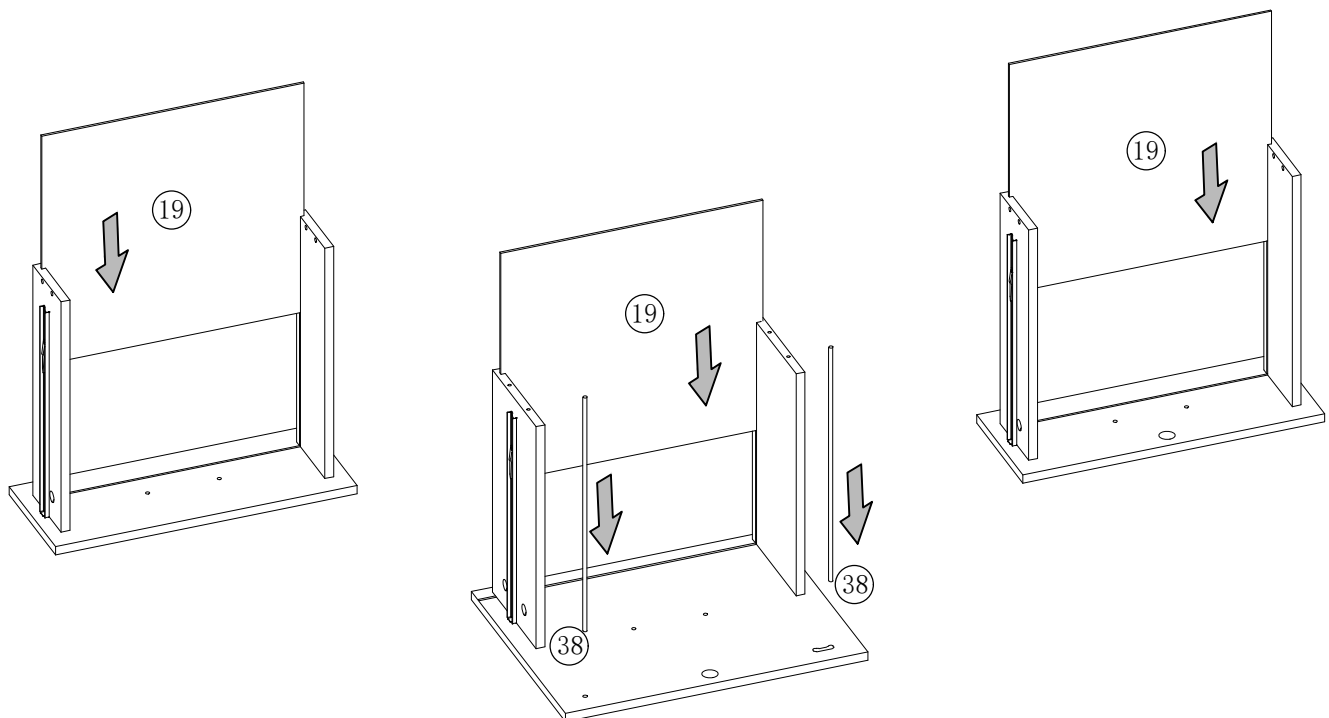


ASSEMBLY INSTRUCTION

STEP 11

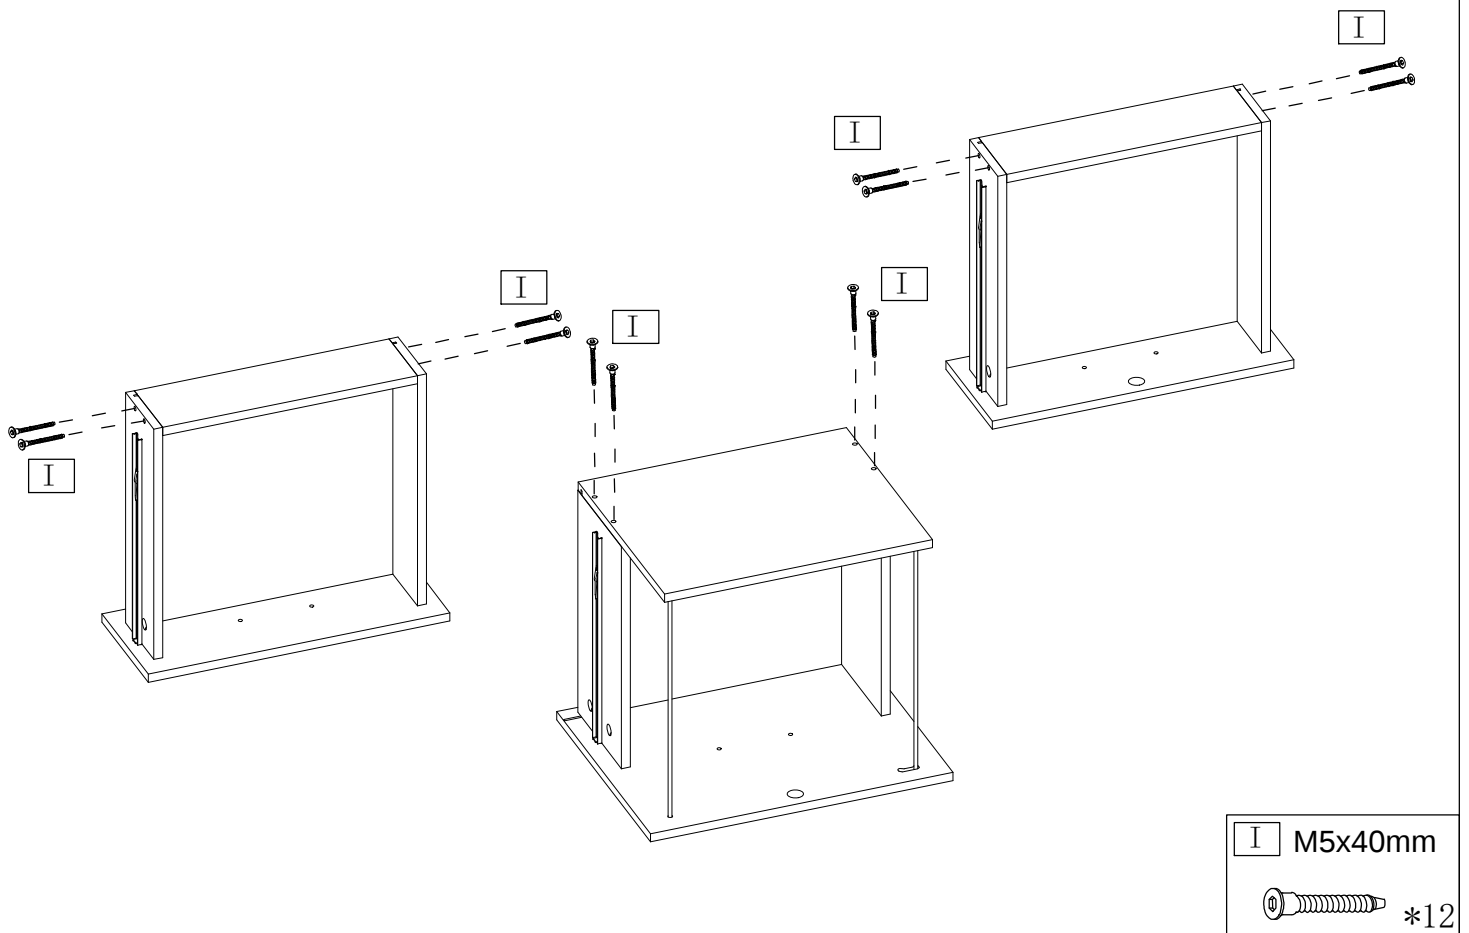


STEP 12

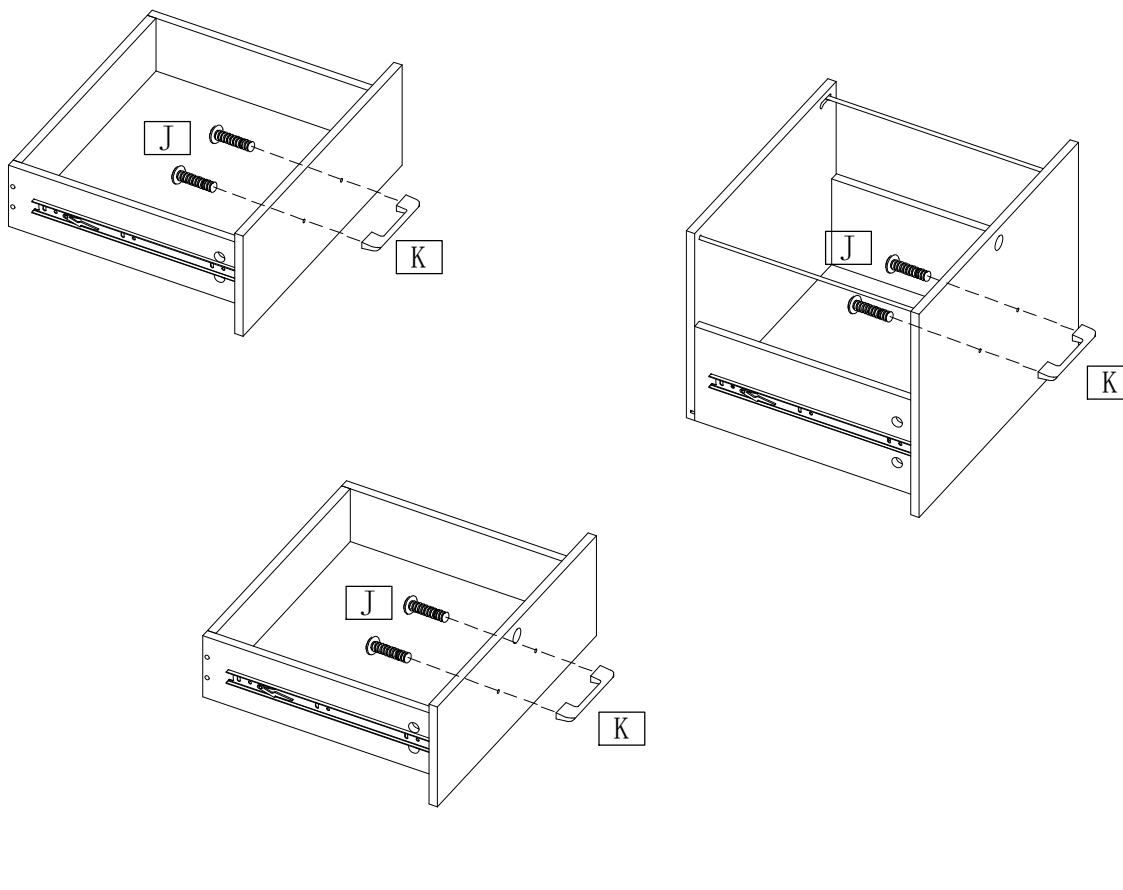


ASSEMBLY INSTRUCTION

STEP 13

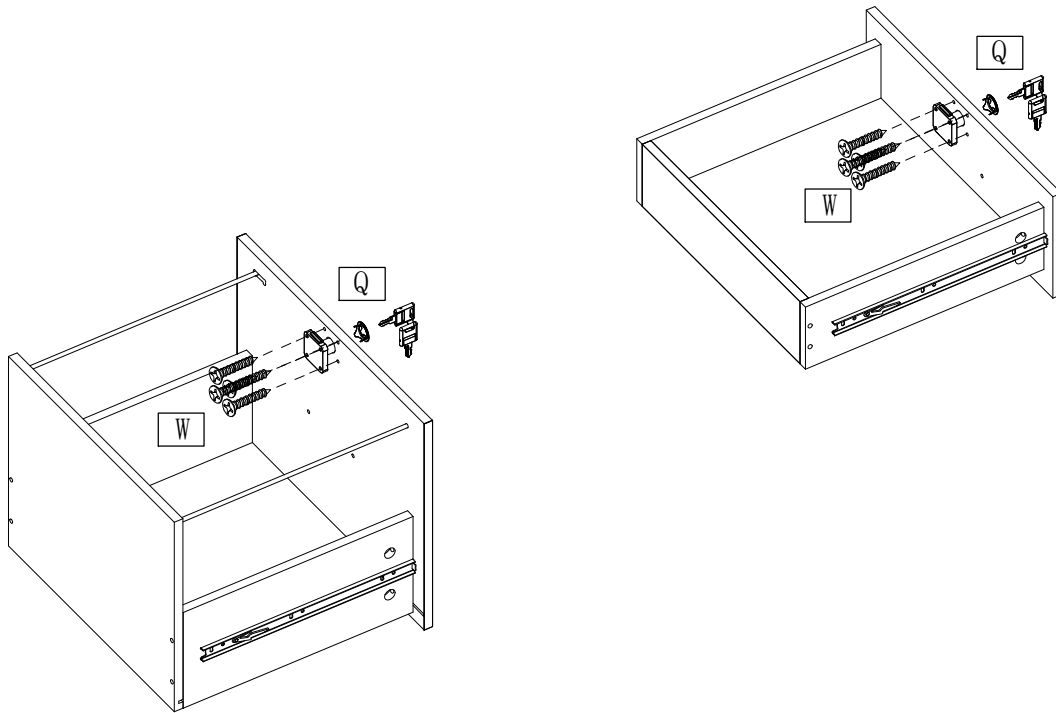

Q		*2
W	M3.5x16mm	
		*8


STEP 14

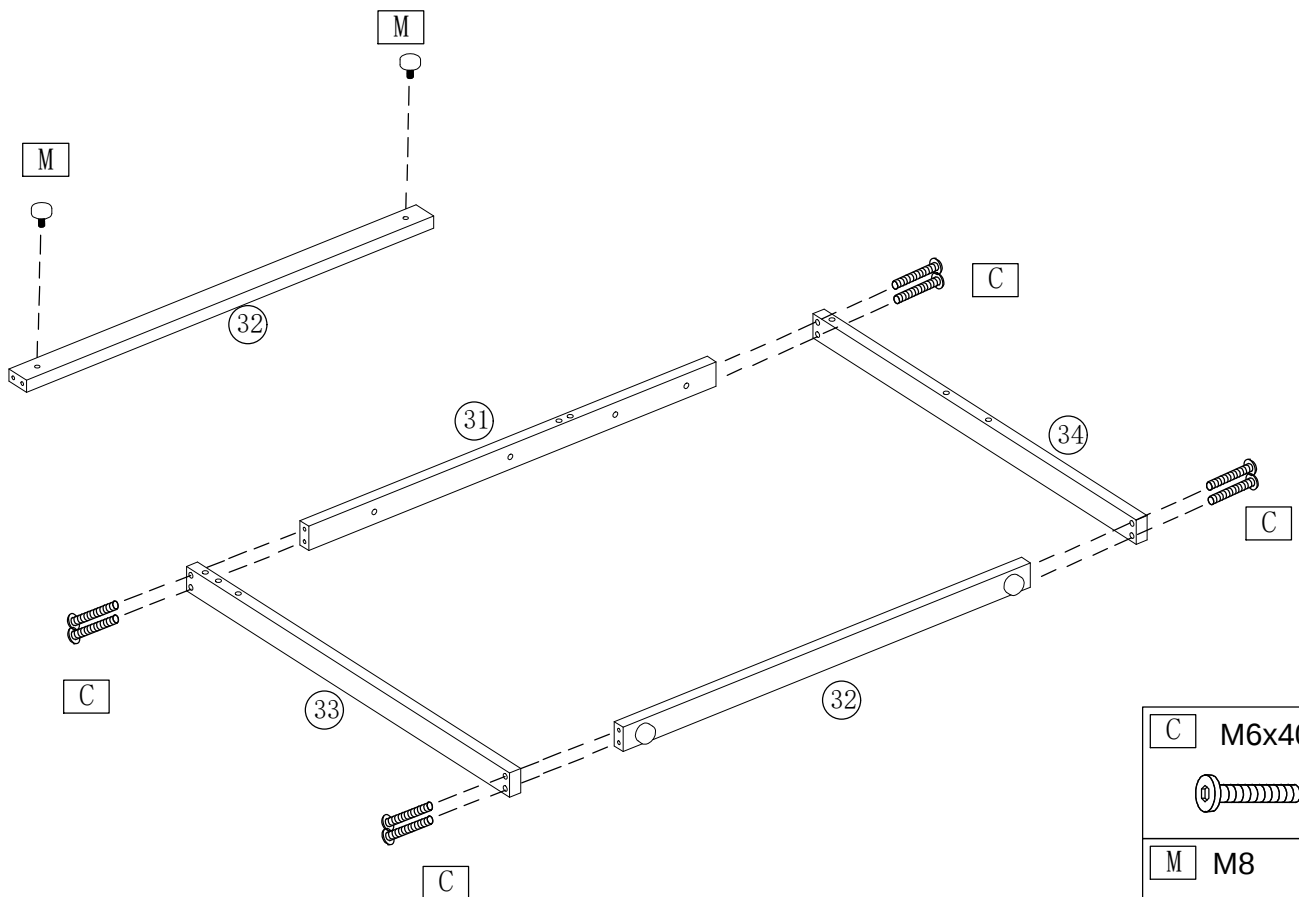


C	M6x40mm		*8
M	M8		*2

ASSEMBLY INSTRUCTION

STEP 15

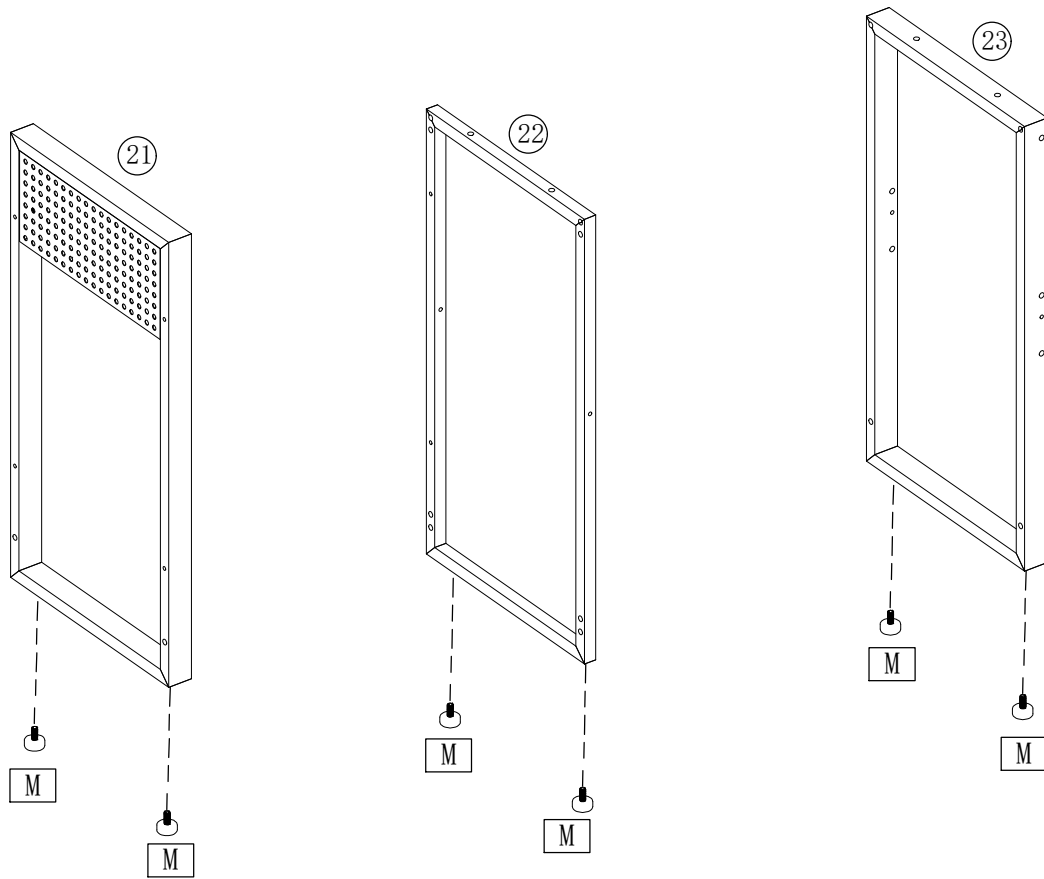


STEP 16

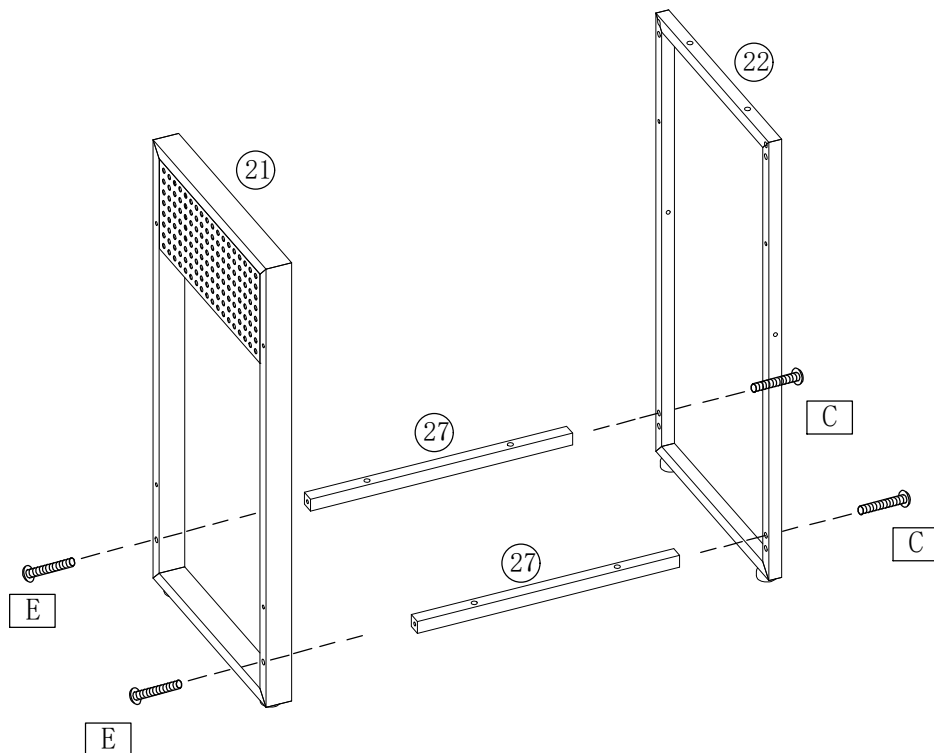


ASSEMBLY INSTRUCTION

STEP 17

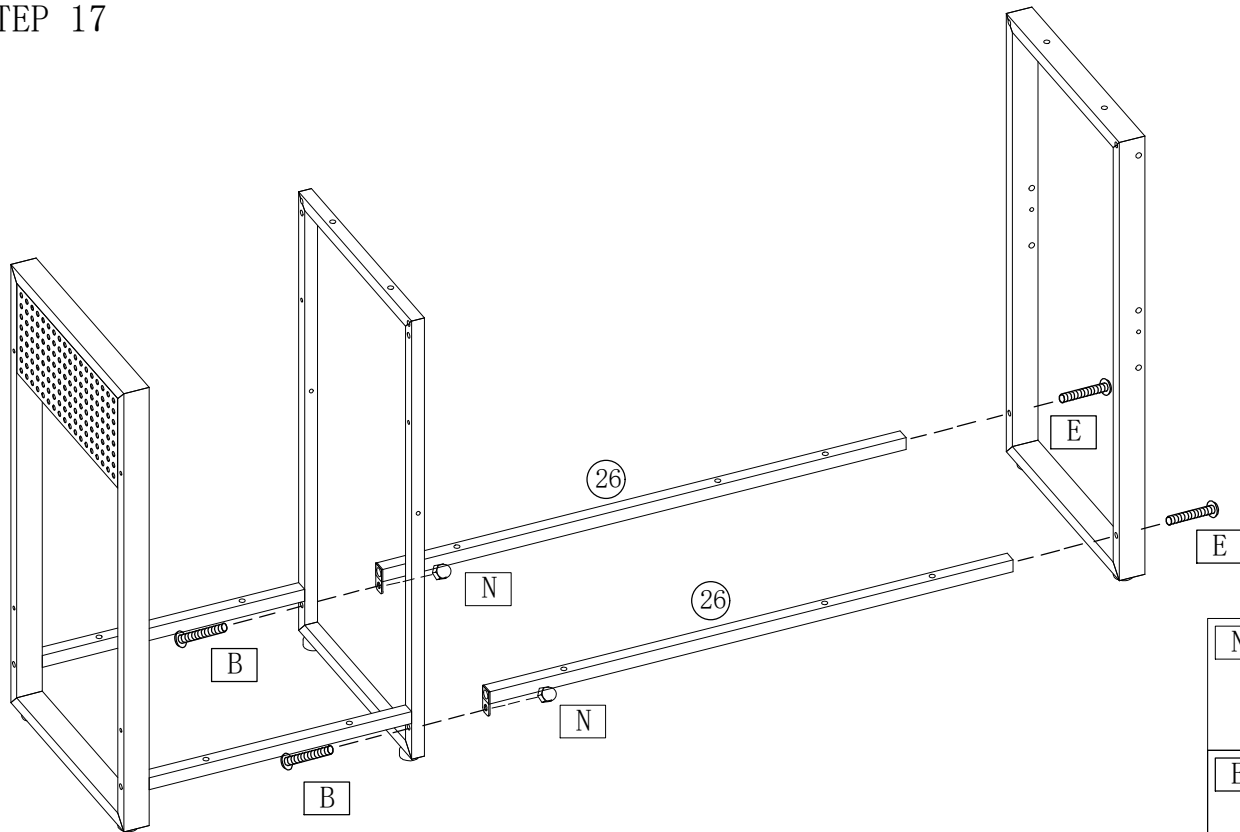

N	M6		*2
E	M6x60mm		*2
B	M6x28mm		*2


STEP 18

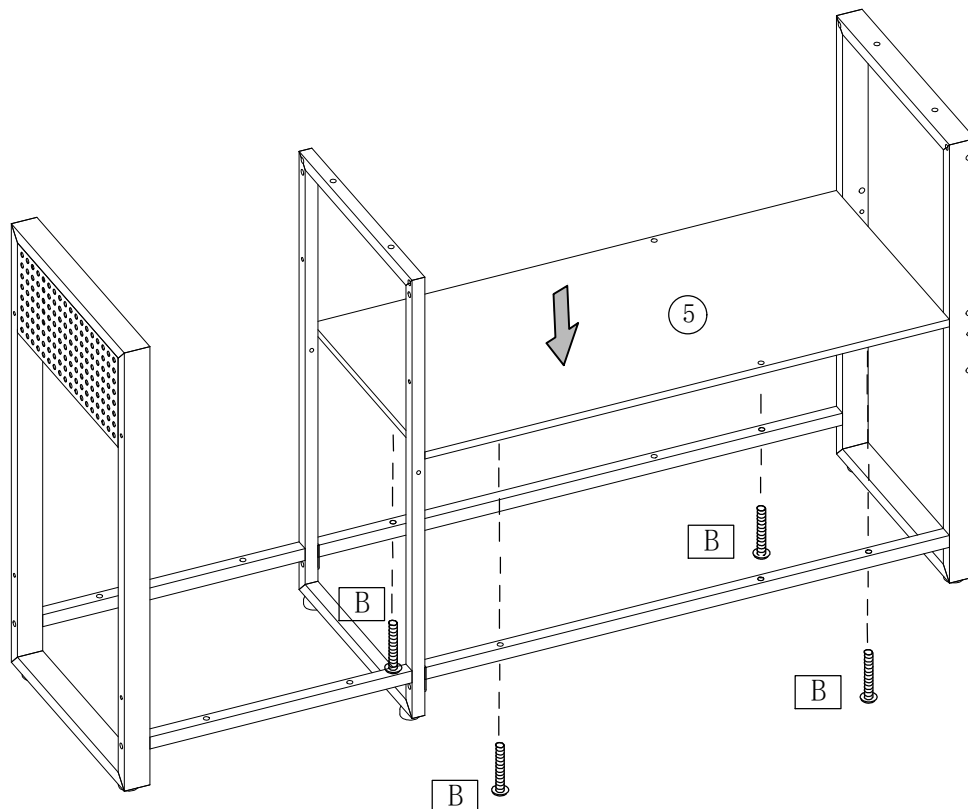


B	M6x28mm		*4
---	---------	---	----


ASSEMBLY INSTRUCTION


STEP 19

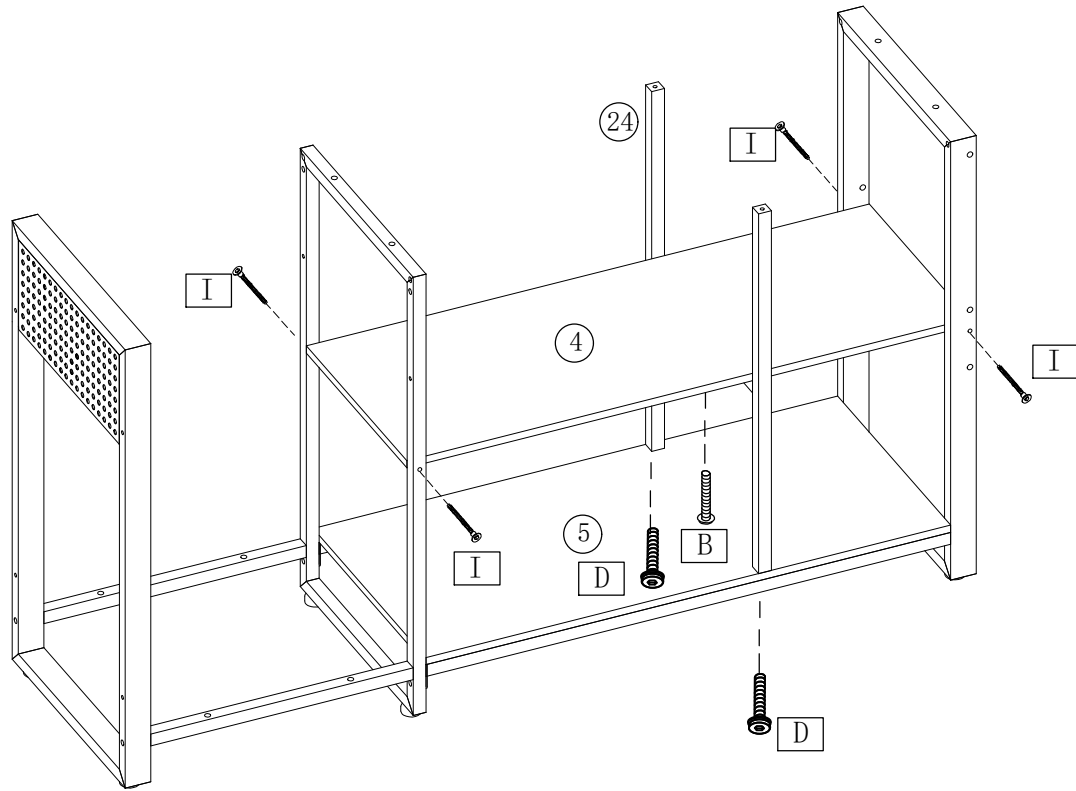

I	M5x40mm
	*4
D	M6x50mm
	*2
B	M6x28mm
	*1

STEP 20

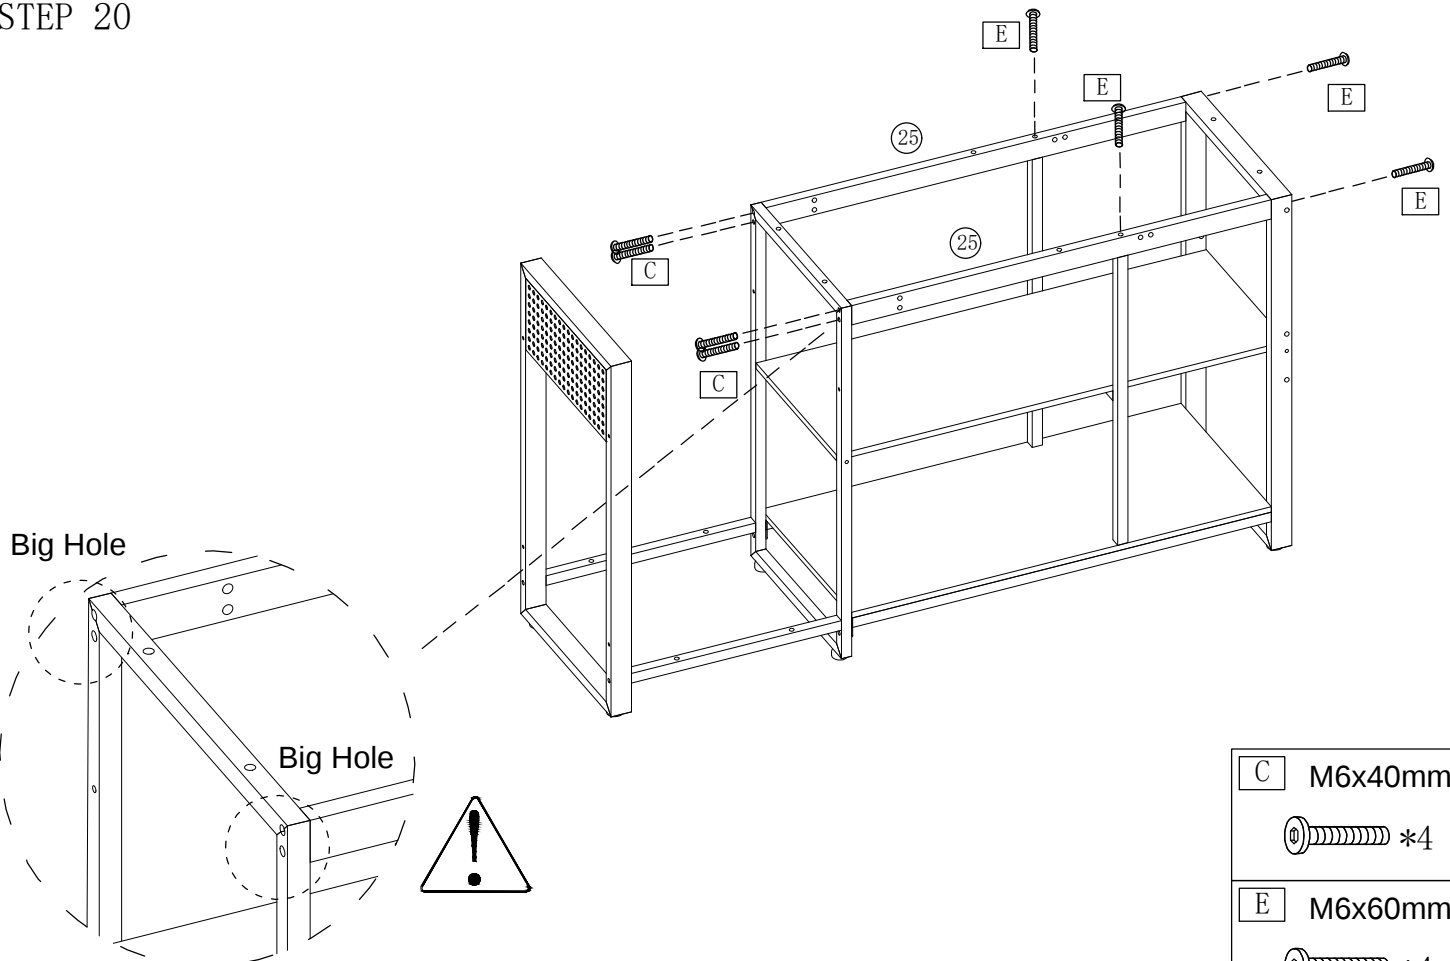


C	M6x40mm
	*4
E	M6x60mm
	*4

ASSEMBLY INSTRUCTION


STEP 21

I

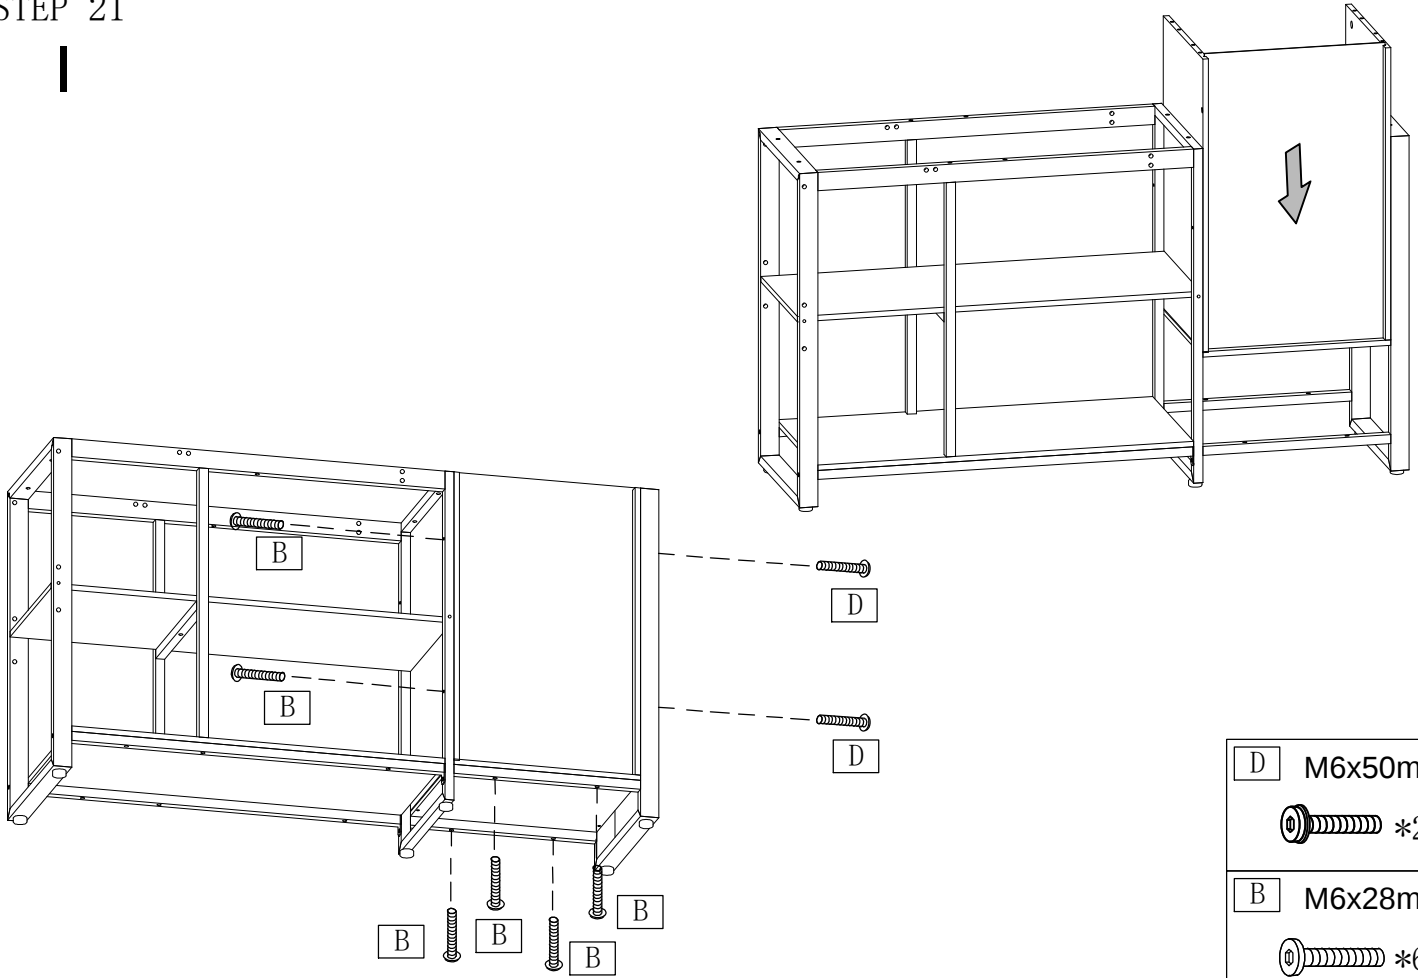

STEP 22


I

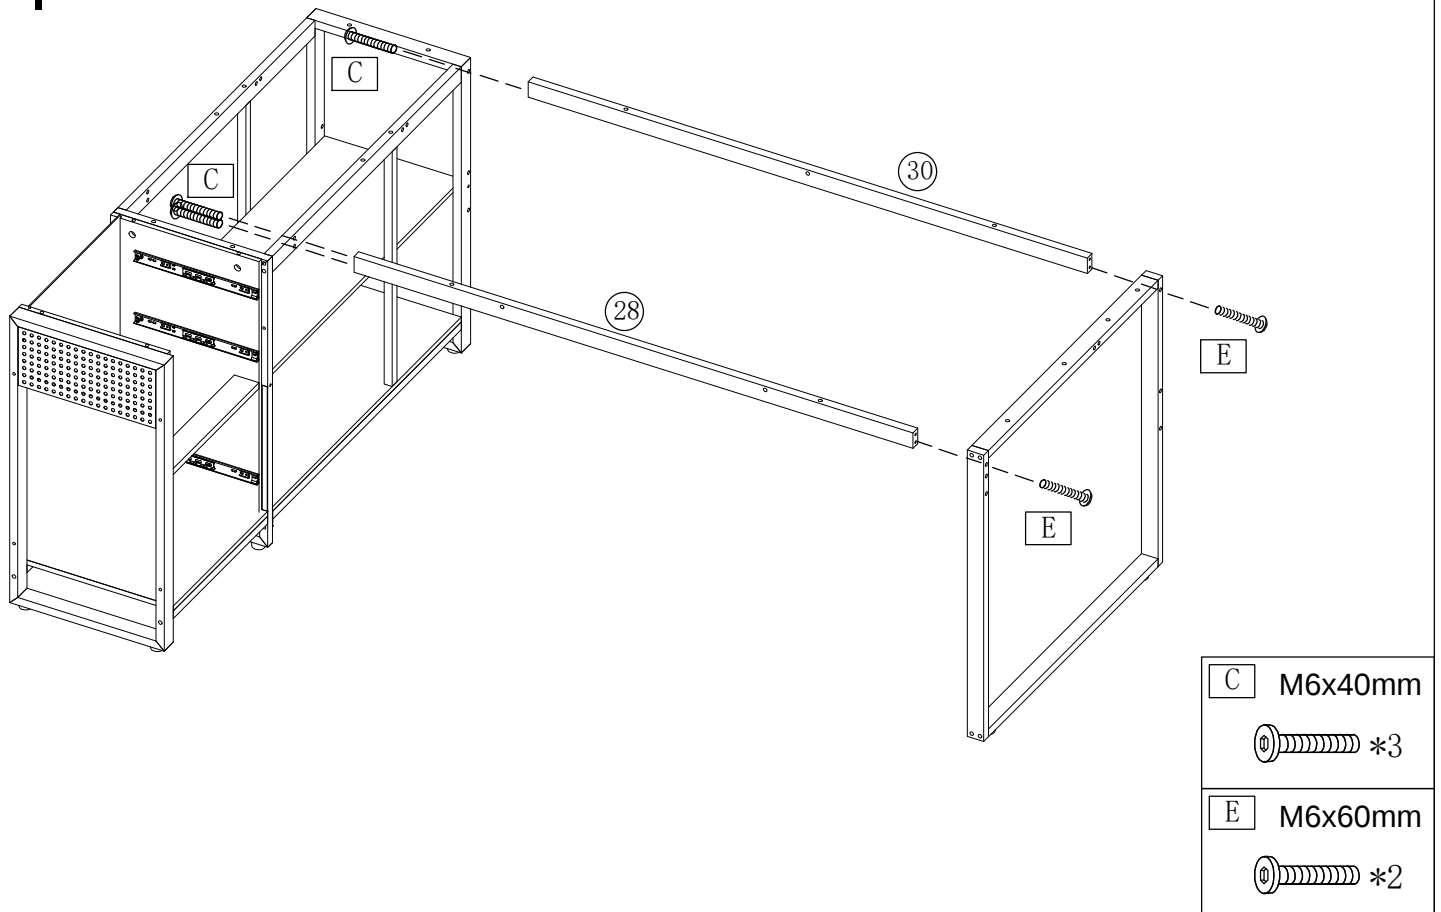

ASSEMBLY INSTRUCTION

STEP 23


I

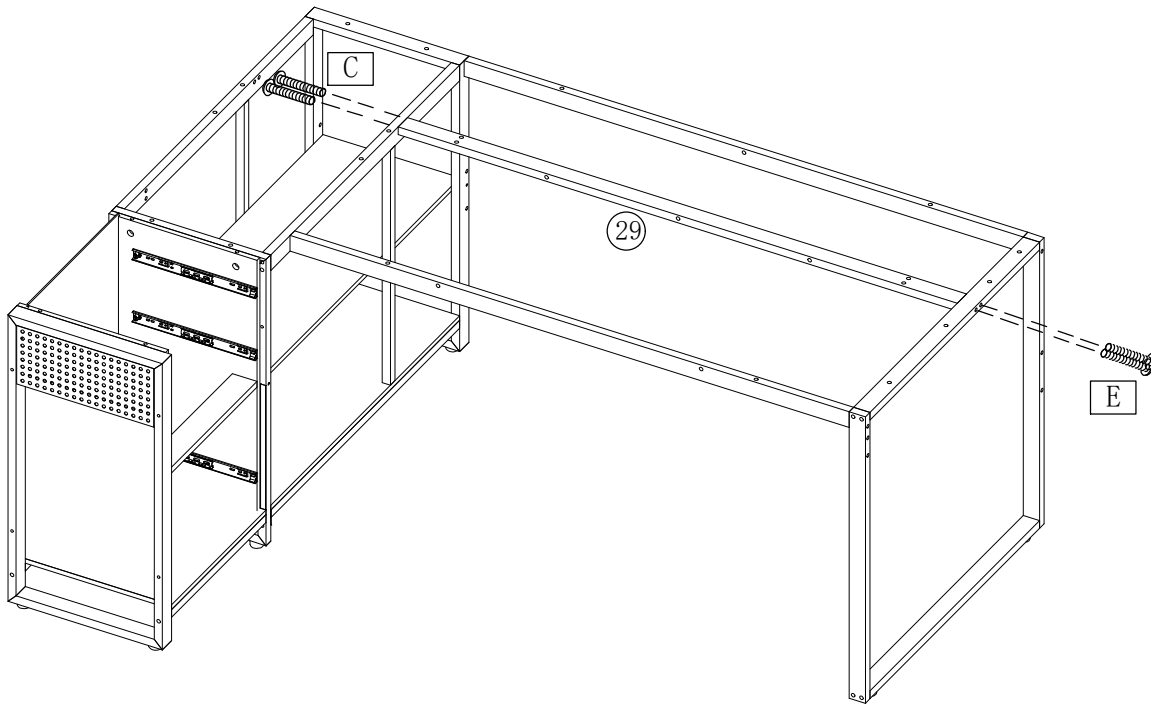

C	M6x40mm
	*2
E	M6x60mm
	*2

STEP 24

I

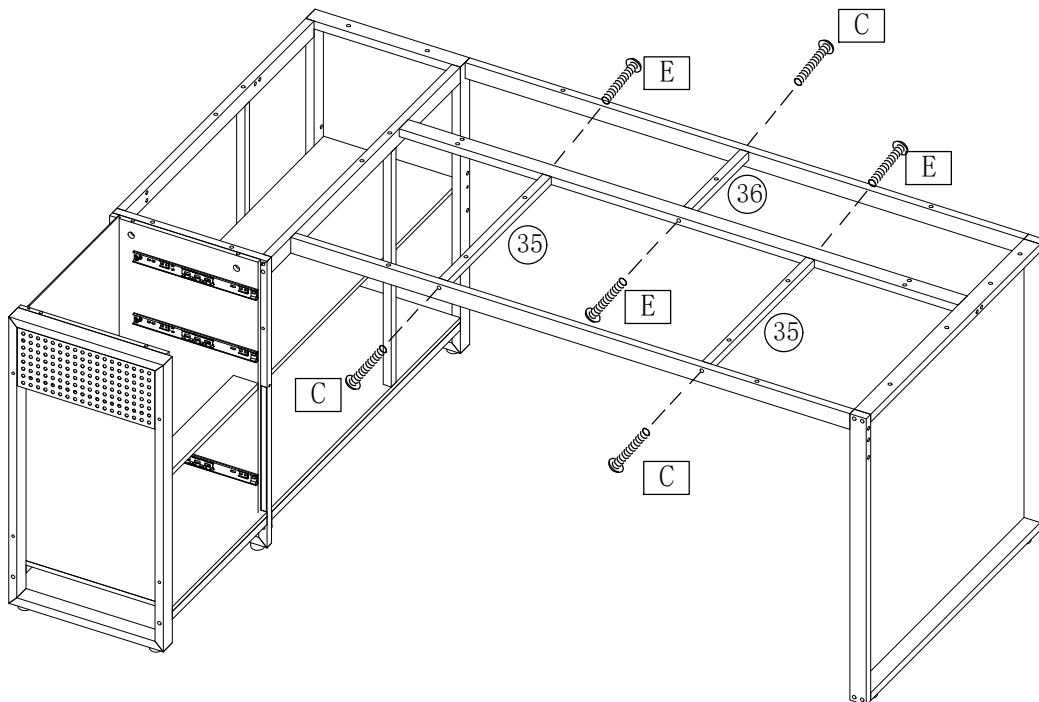


C	M6x40mm
	*3
E	M6x60mm
	*3

ASSEMBLY INSTRUCTION

STEP 25


I

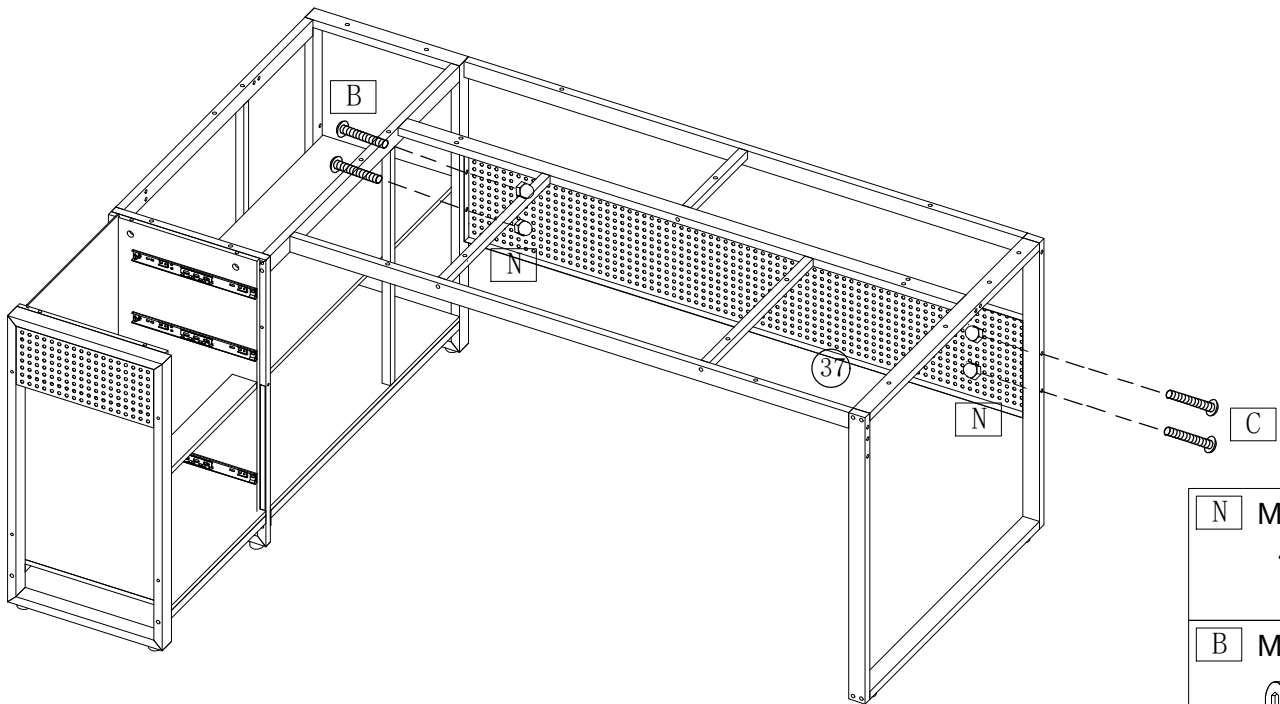

N	M6		*4
B	M6x28mm		*2
D	M6x50mm		*2

STEP 26

I


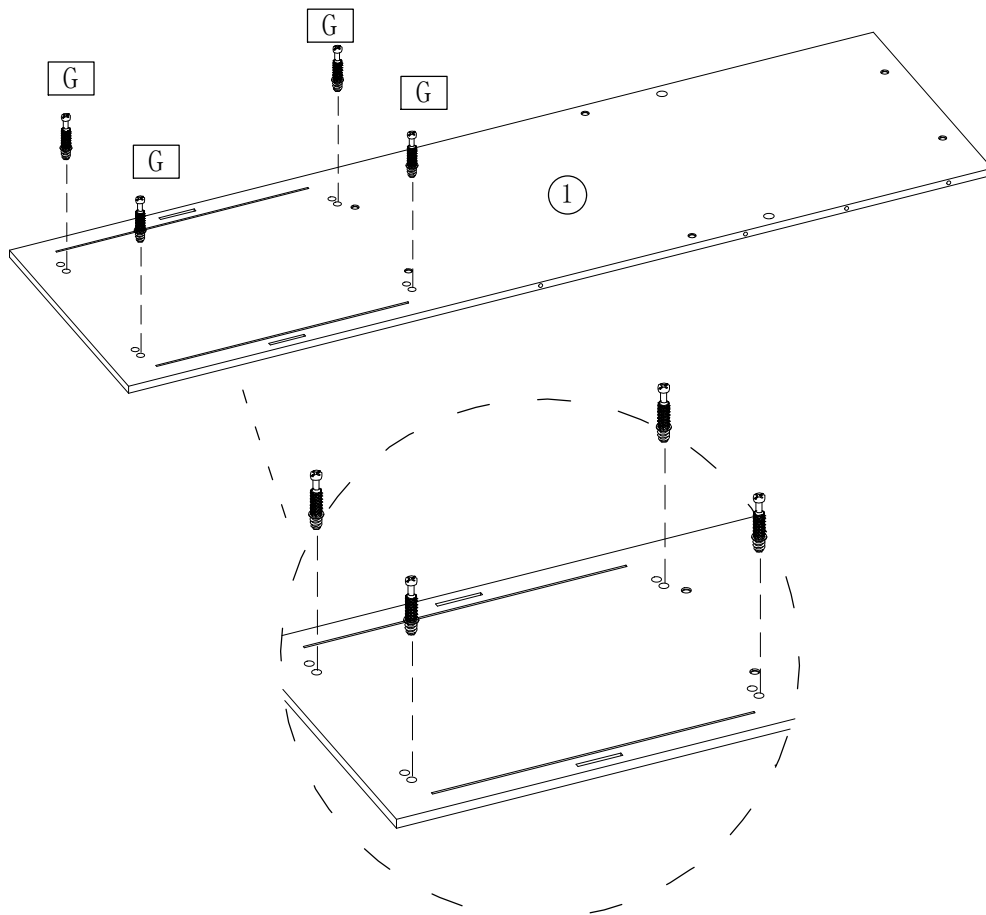


G	Ø6x40mm		*4
---	---------	--	----

ASSEMBLY INSTRUCTION

STEP 27

I

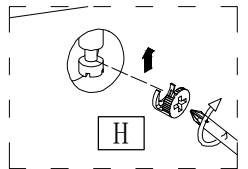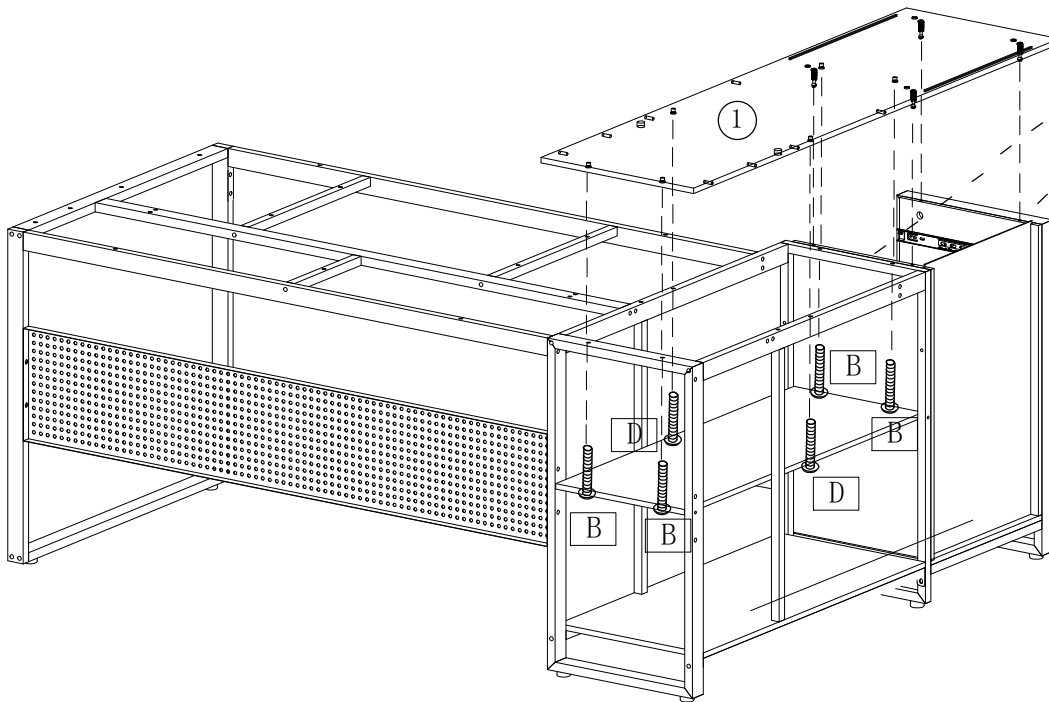

H Ø15x9mm

*4

B M6x28mm


*4

D M6x50mm

*2

STEP 28

I

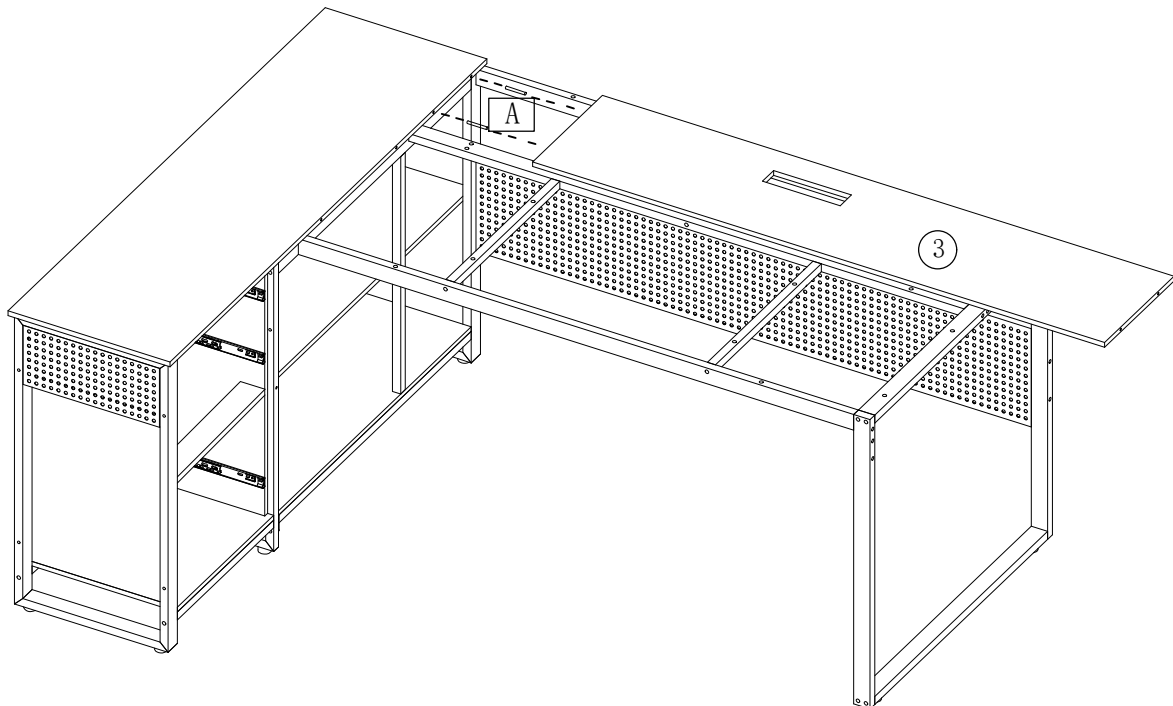


A Ø6x50mm


*2

ASSEMBLY INSTRUCTION

STEP 29


I

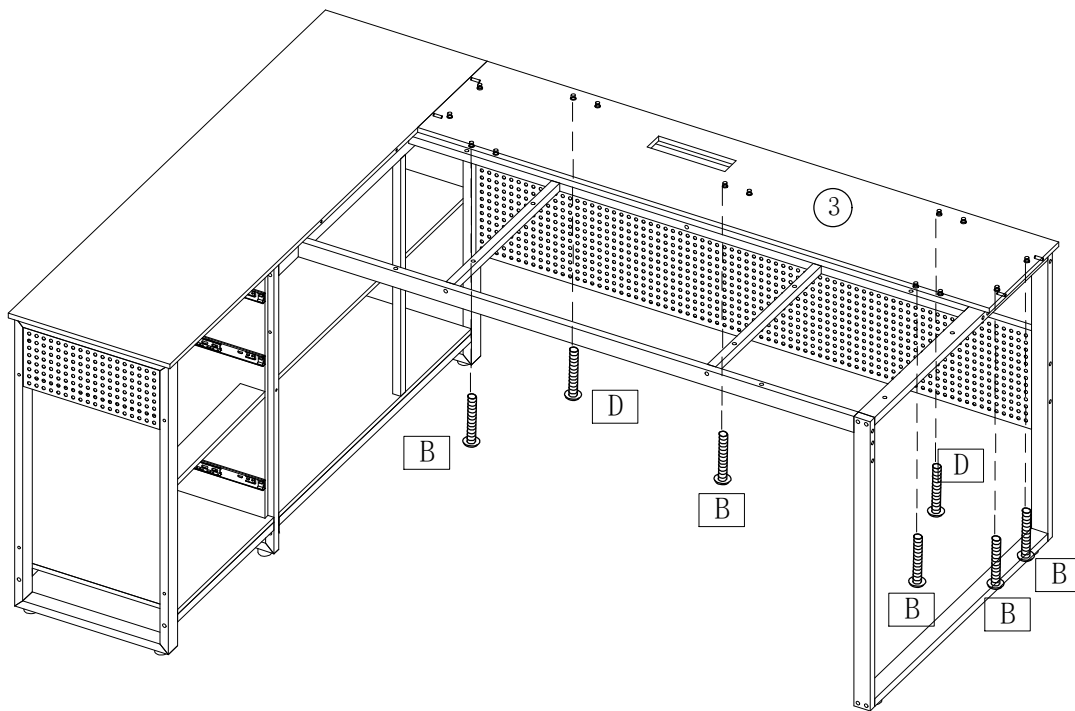

B	M6x28mm
	*5
D	M6x50mm
	*2

STEP 30

I

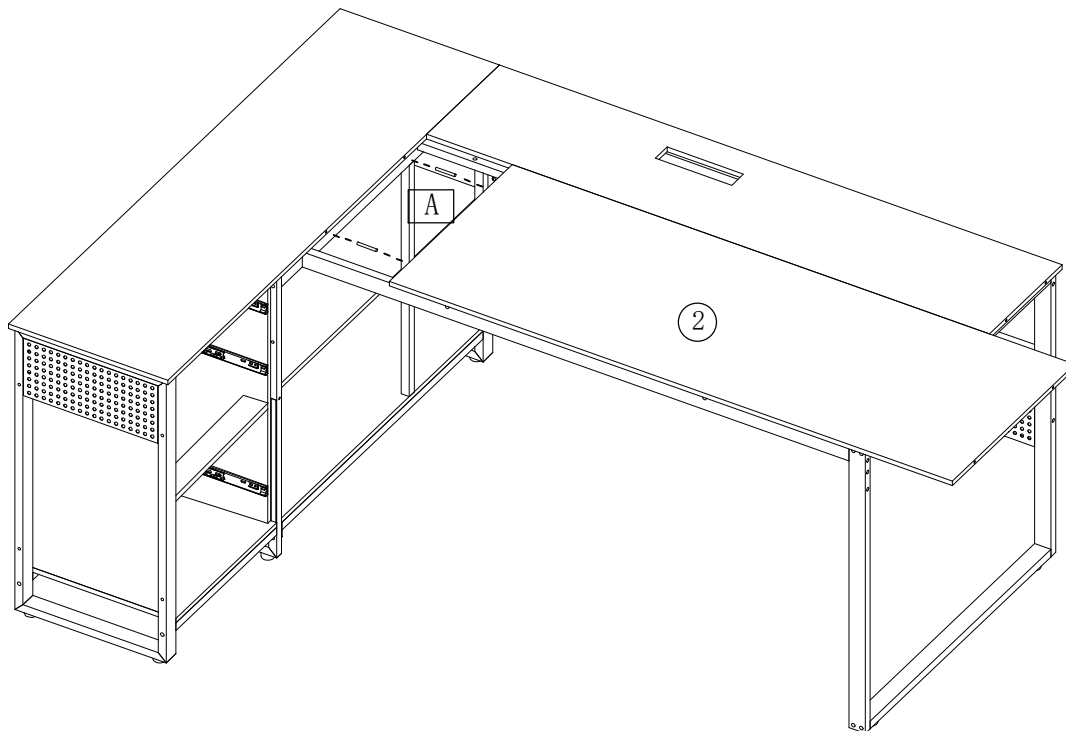



A	Ø6x50mm
	*2

ASSEMBLY INSTRUCTION

STEP 31


I

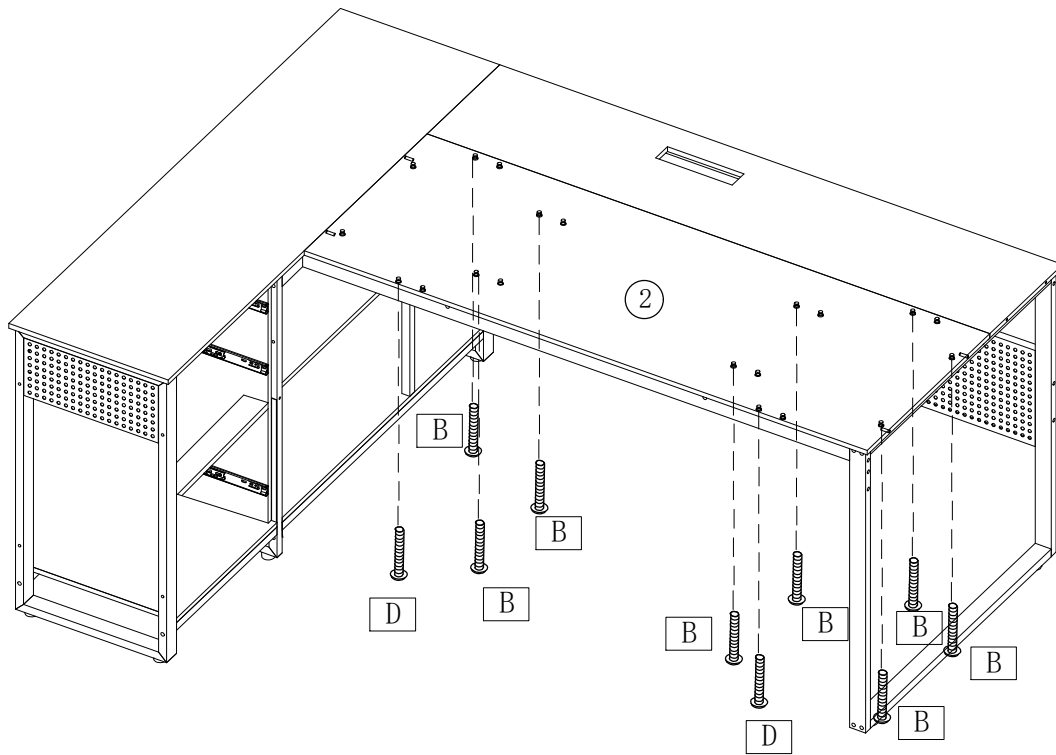


B	M6x28mm
	
	*8
D	M6x50mm
	
	*2

STEP 32

I

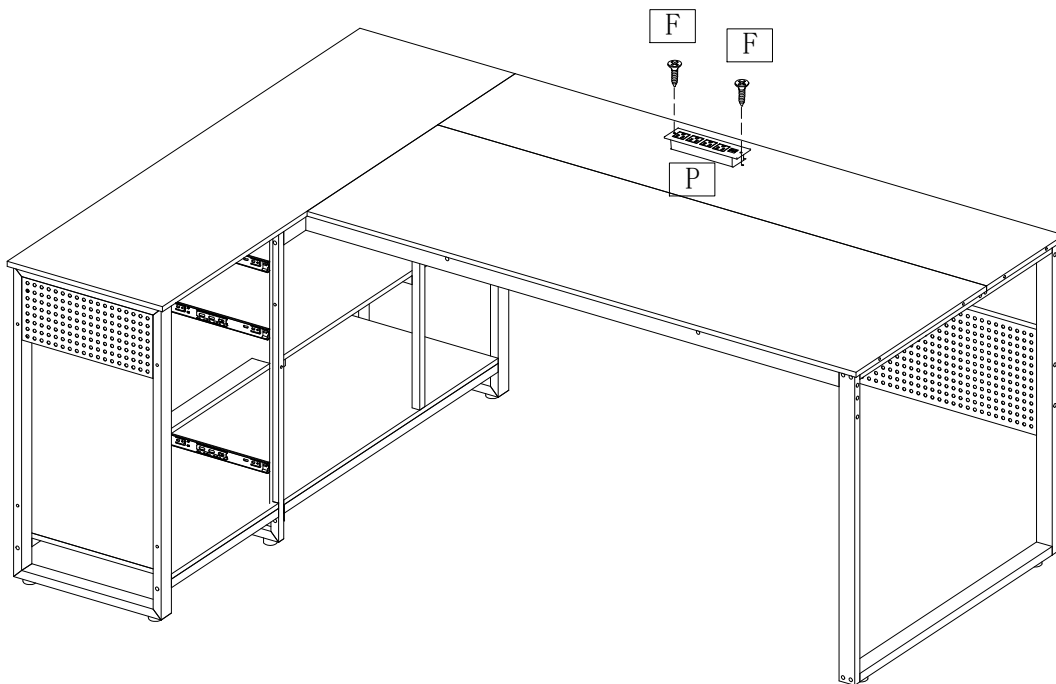



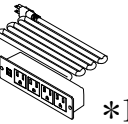
P	
	*1
F	M3.5x12mm
	
	*2

ASSEMBLY INSTRUCTION

STEP 33


I

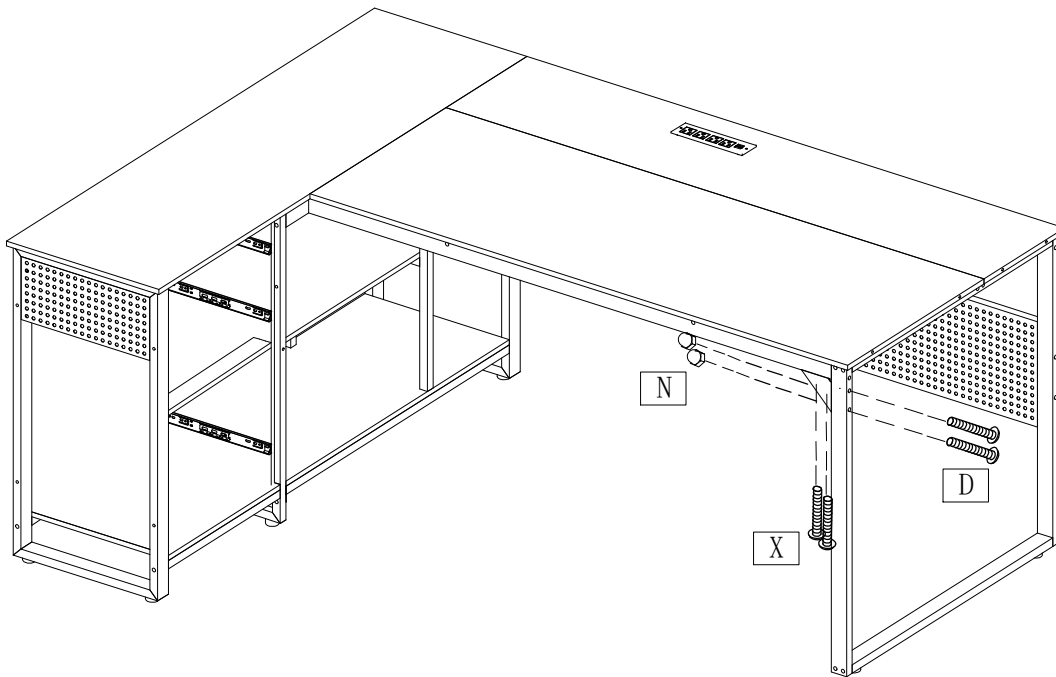

S		*1
N	M6 	*2
X	M6x12mm 	*2
D	M6x50mm 	*2

STEP 34



I

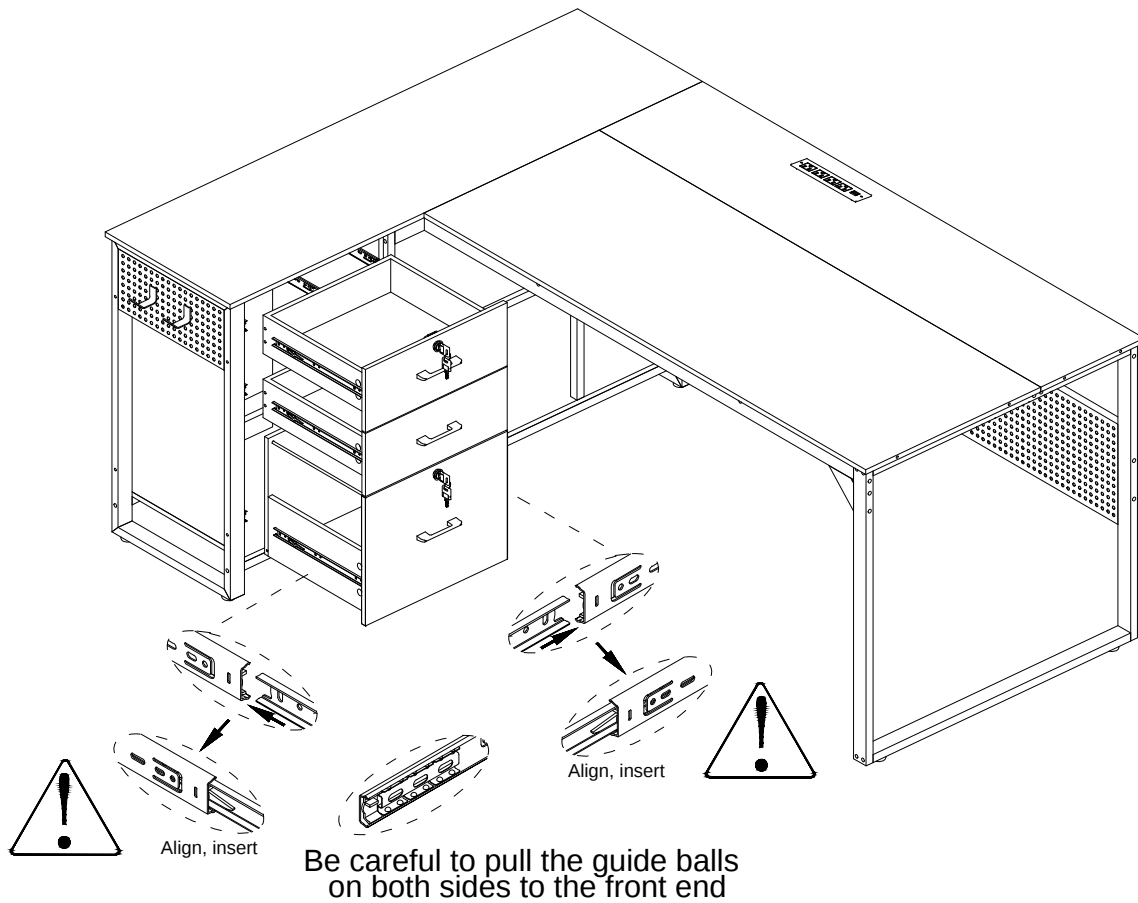

ASSEMBLY INSTRUCTION



STEP 35

I

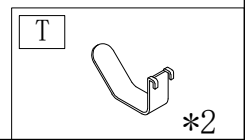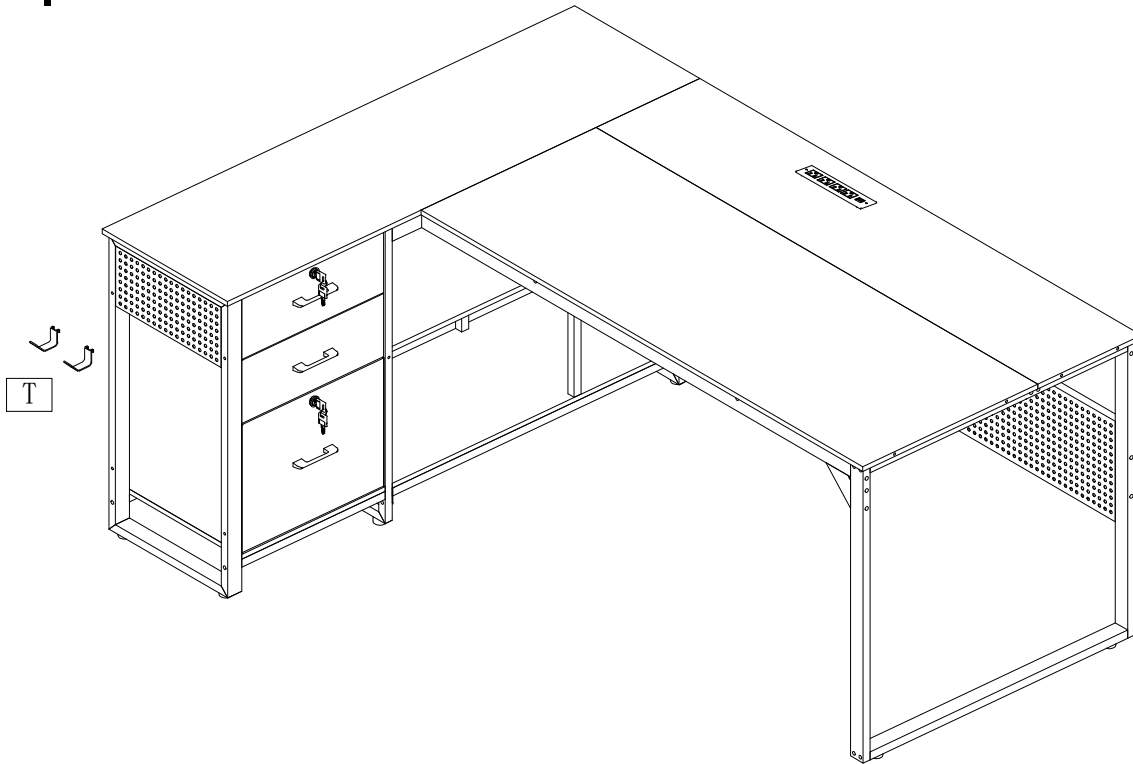

STEP 36


I

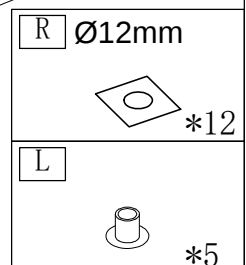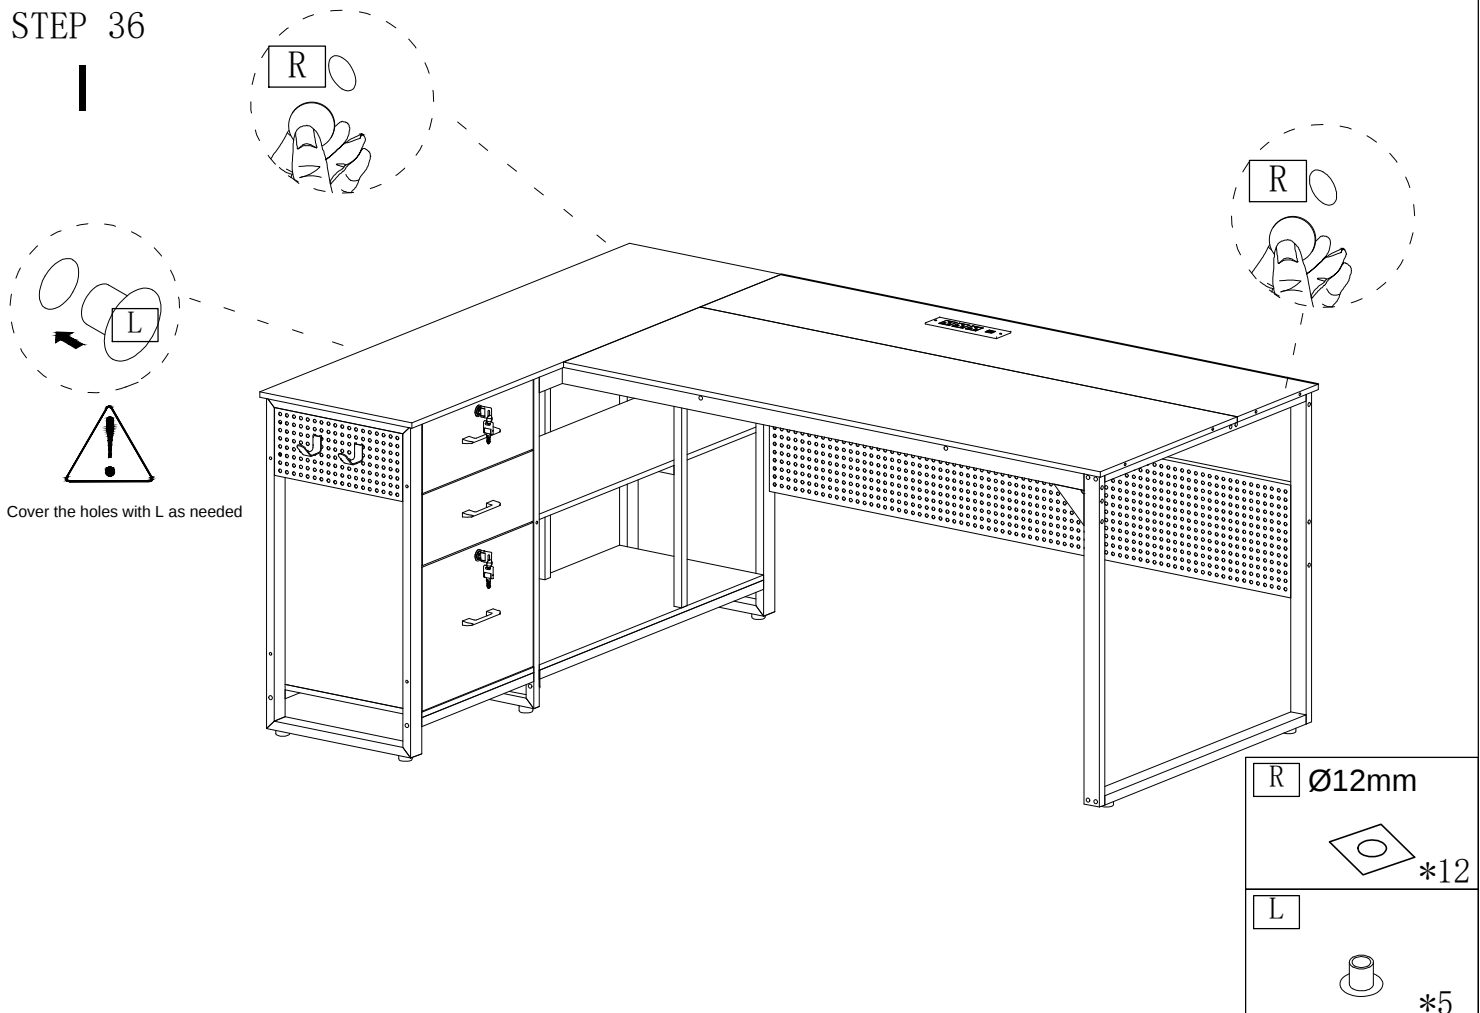

ASSEMBLY INSTRUCTION

STEP 21


||

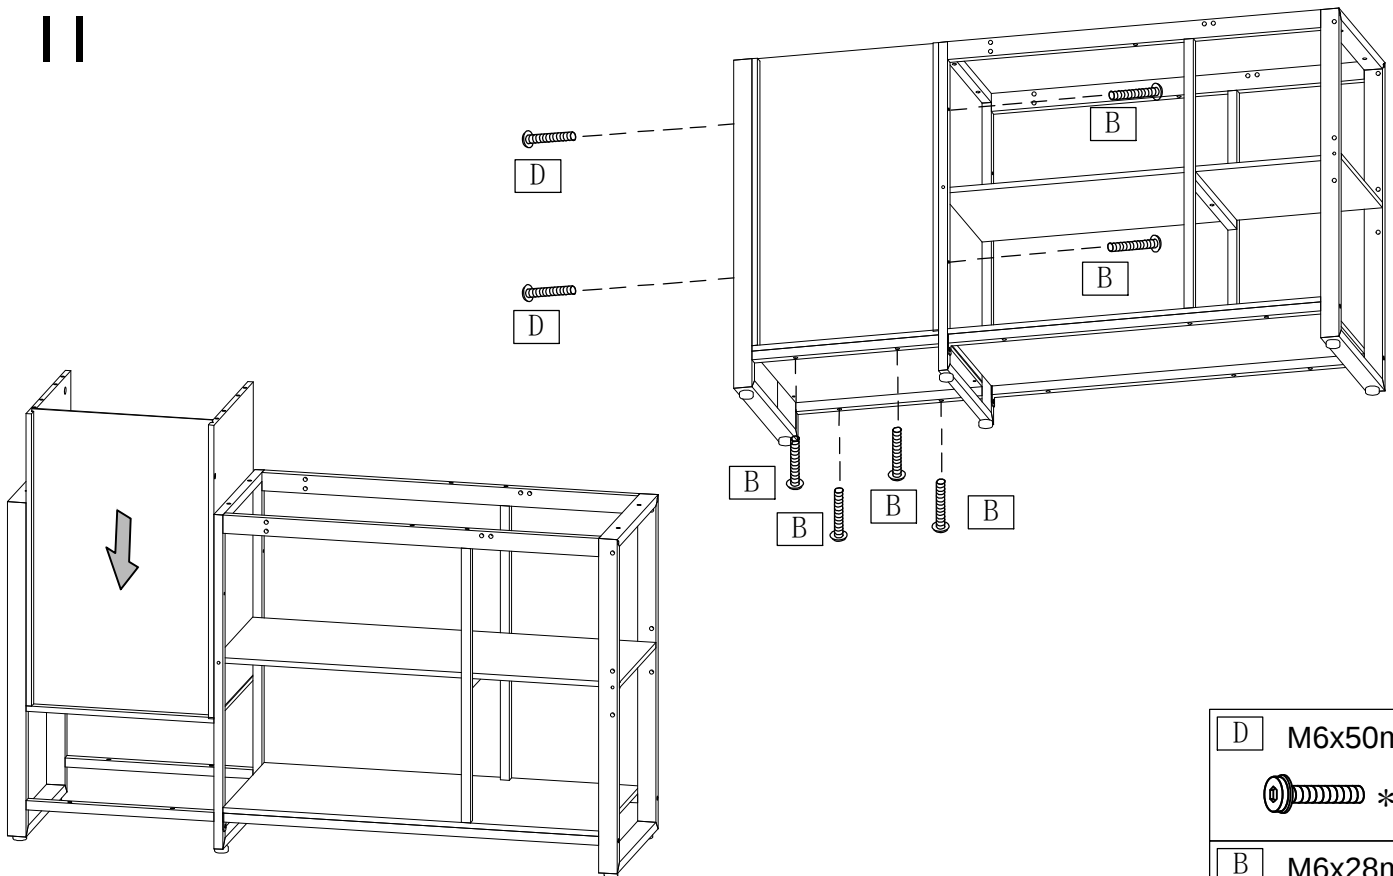

D	M6x50mm
	*2
B	M6x28mm
	*6

STEP 22

||

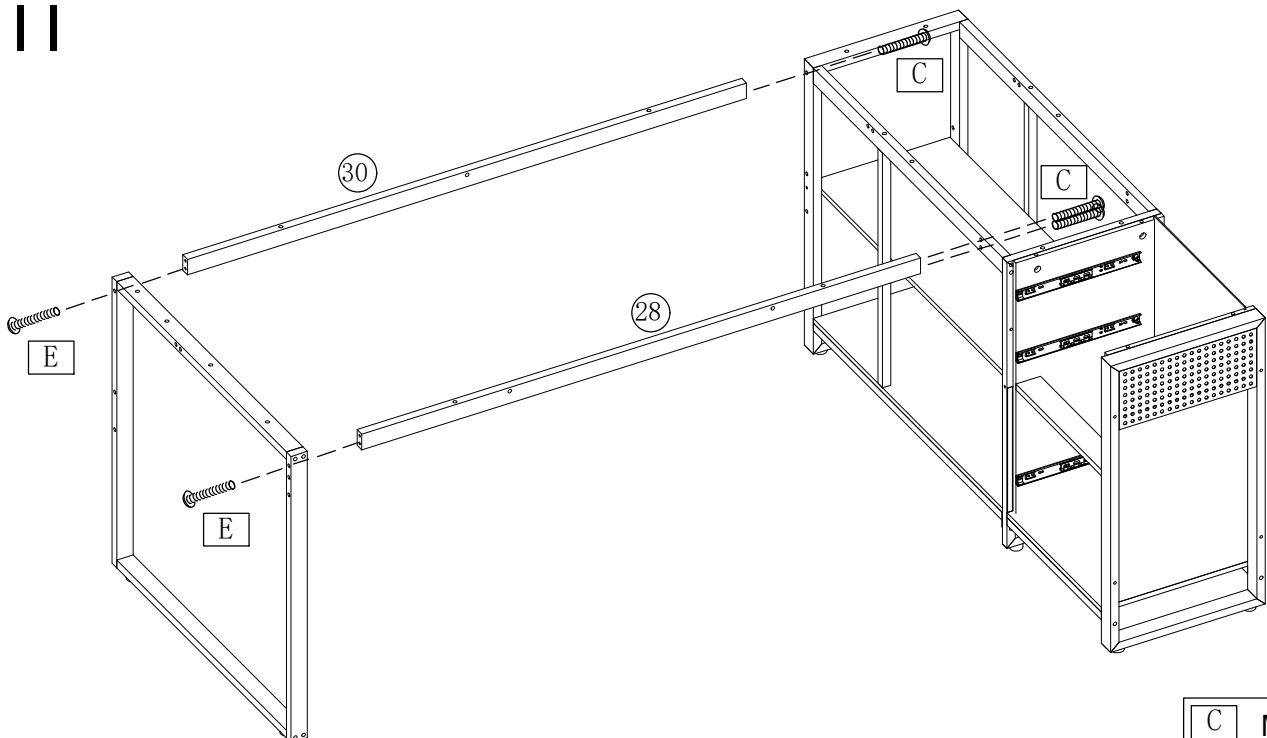


C	M6x40mm
	*3
E	M6x60mm
	*2

ASSEMBLY INSTRUCTION

STEP 23


II

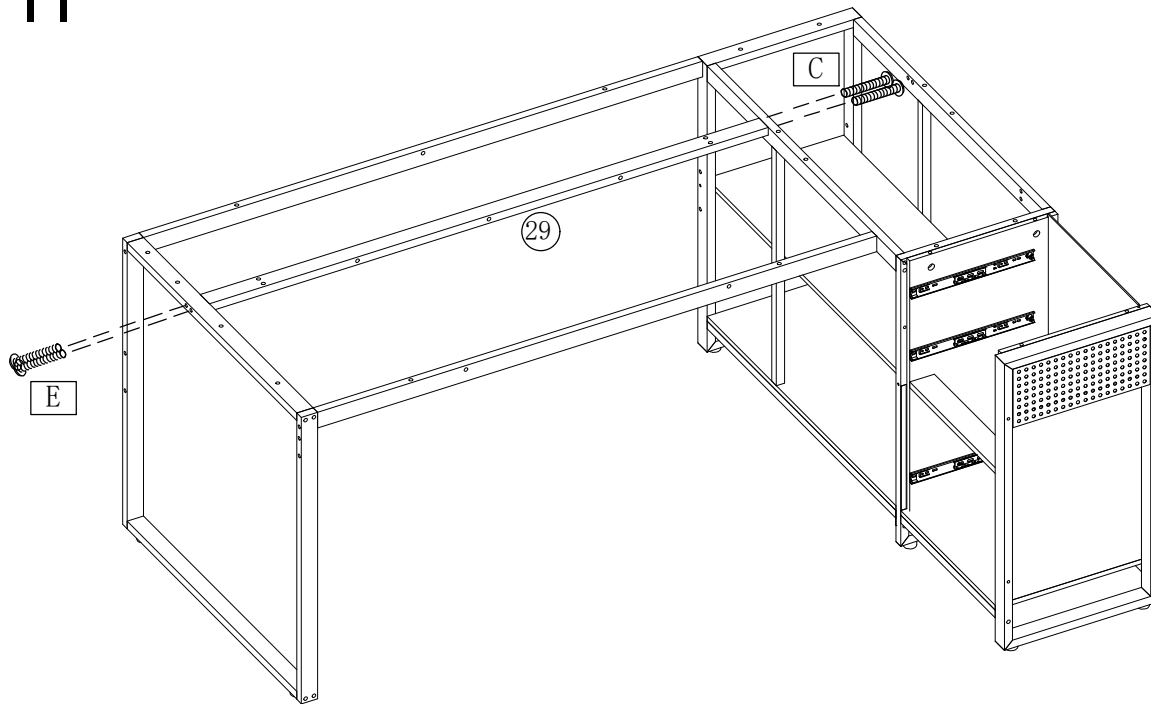

C	M6x40mm
	*2
E	M6x60mm
	*2

STEP 24

II

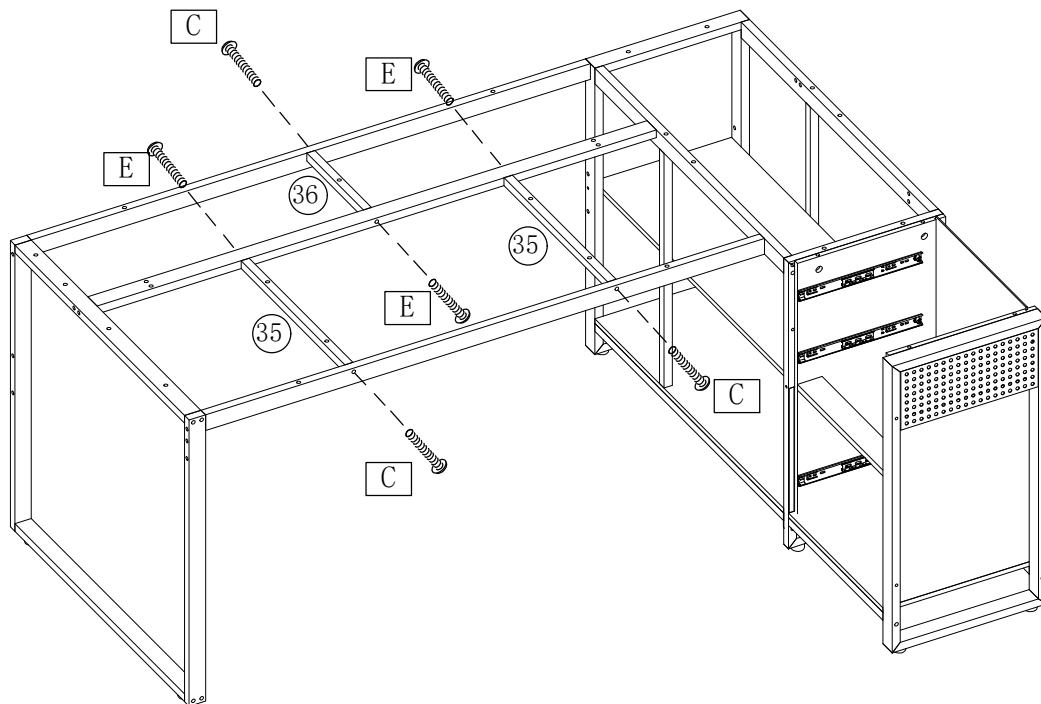



C	M6x40mm
	*3
E	M6x60mm
	*3

ASSEMBLY INSTRUCTION

STEP 25


||

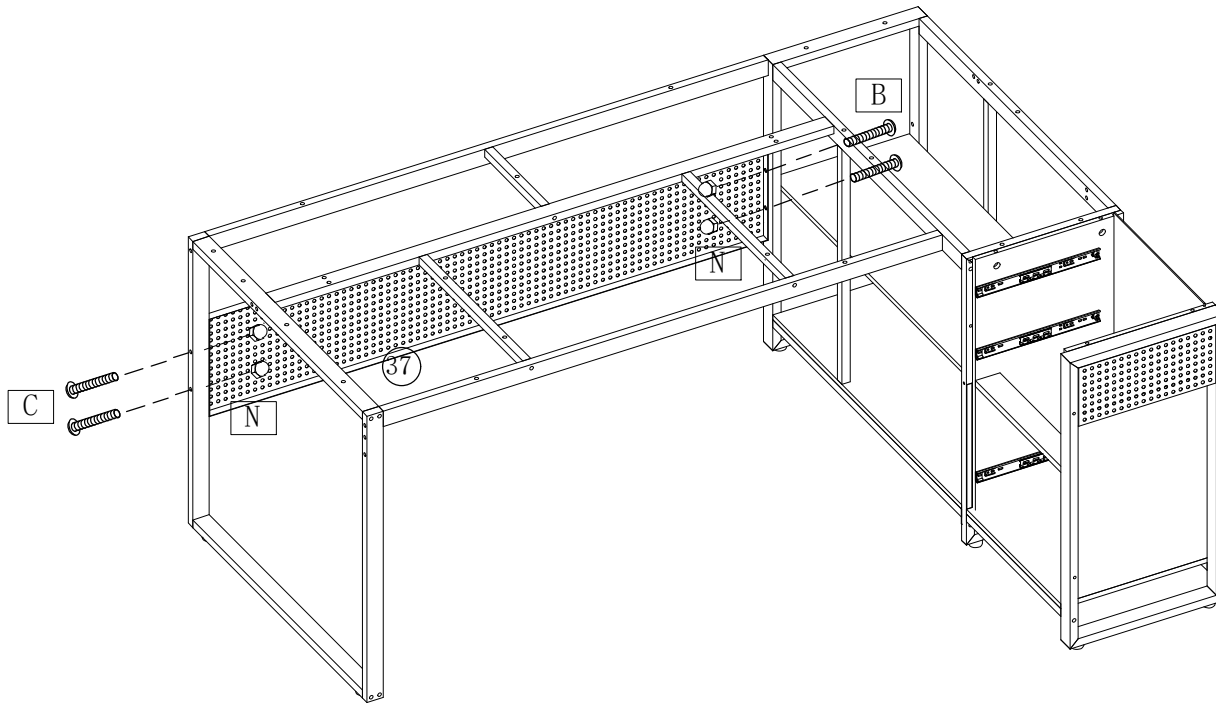

N	M6		*4
B	M6x28mm		*2
D	M6x50mm		*2

STEP 26

||


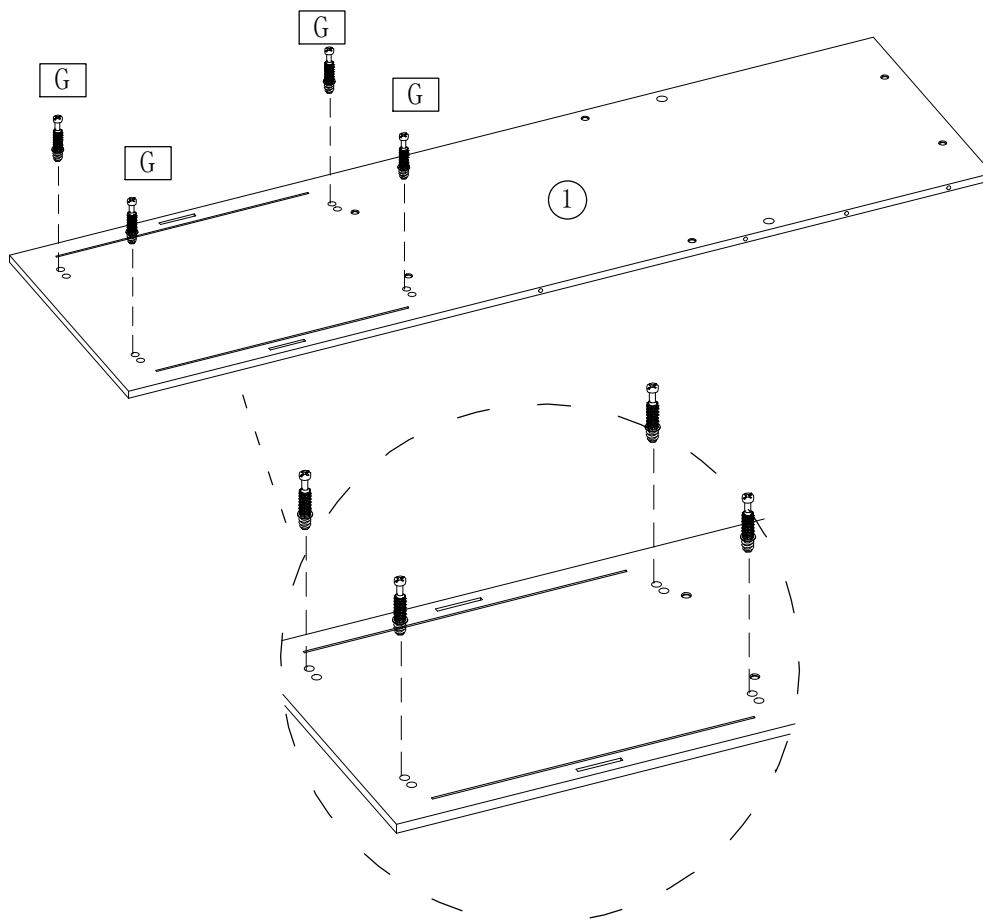




G	Ø6x40mm		*4
---	---------	---	----

ASSEMBLY INSTRUCTION

STEP 27


||

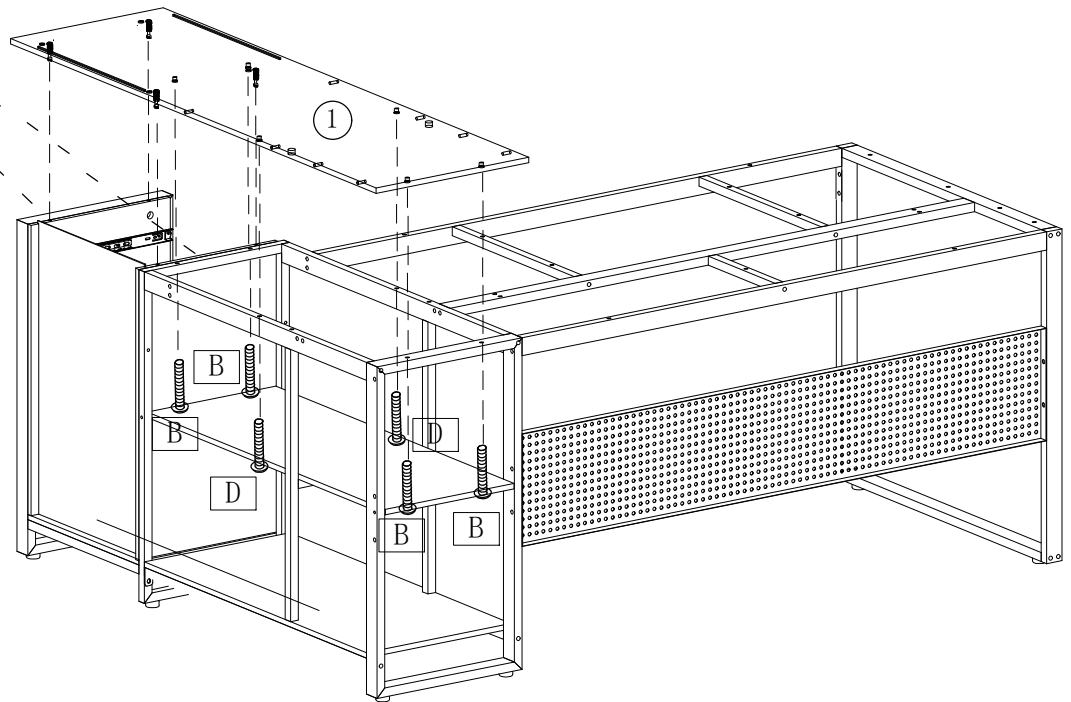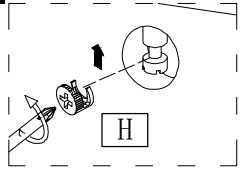

B	M6x28mm	H	Ø15x9mm	D	M6x50mm
					
*4		*4		*2	

STEP 28

||

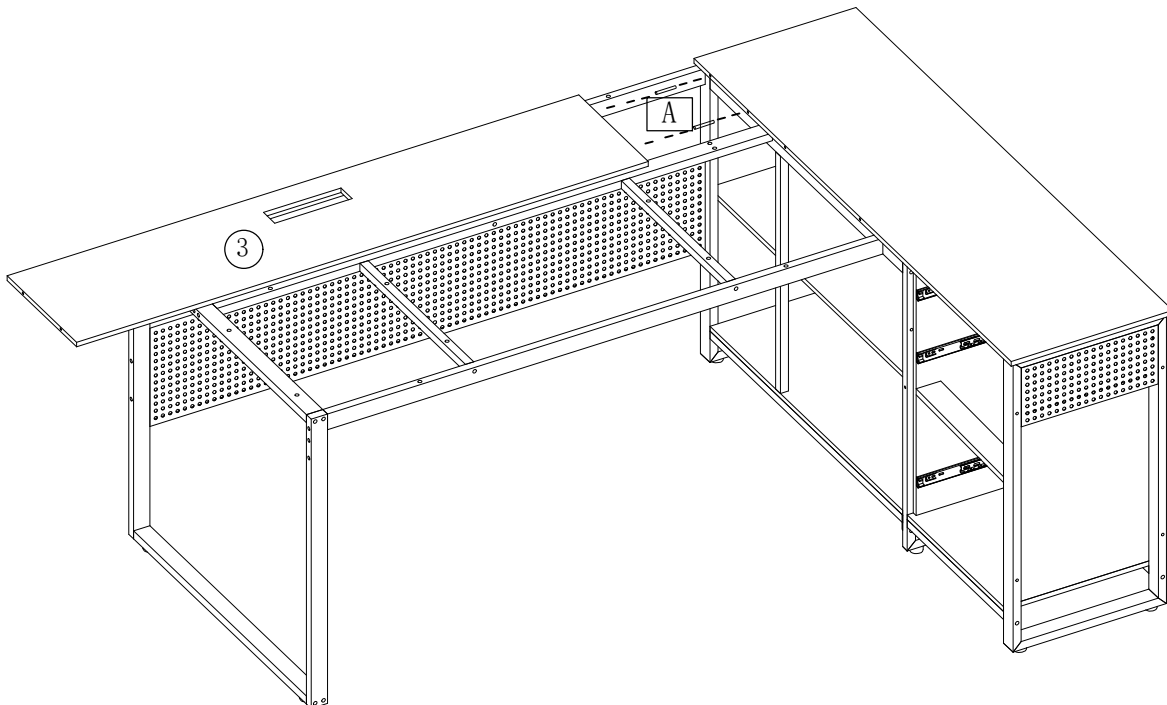



A	Ø6x50mm
	
*2	

ASSEMBLY INSTRUCTION

STEP 29


||

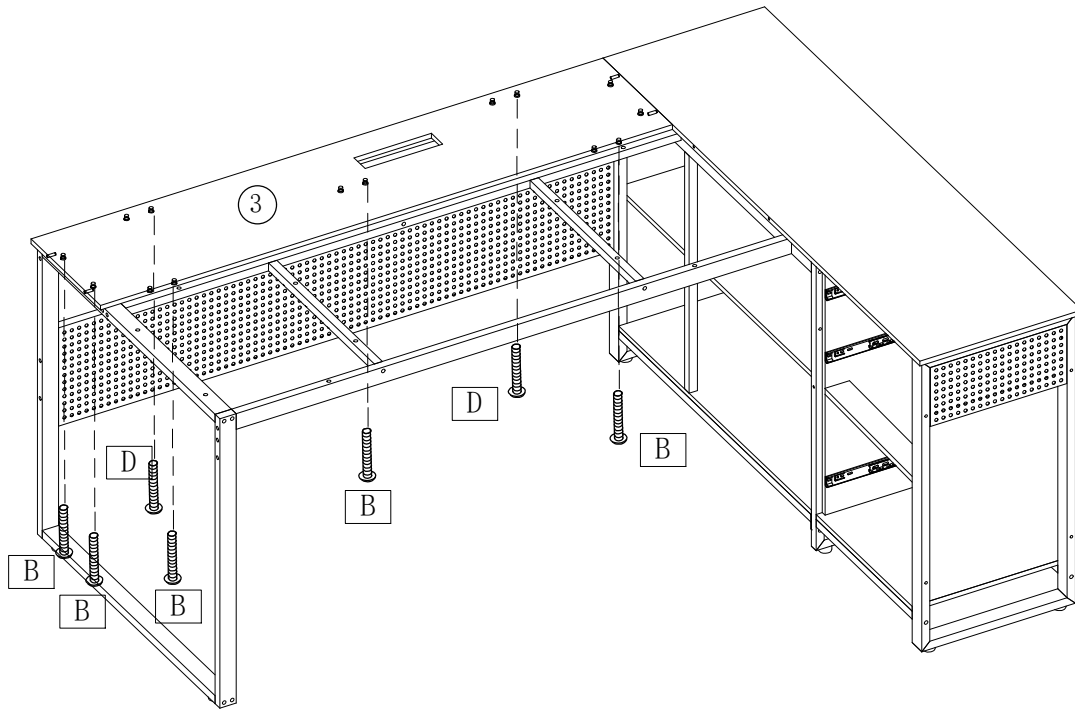

B	M6x28mm
	*5
D	M6x50mm
	*2

STEP 30

||

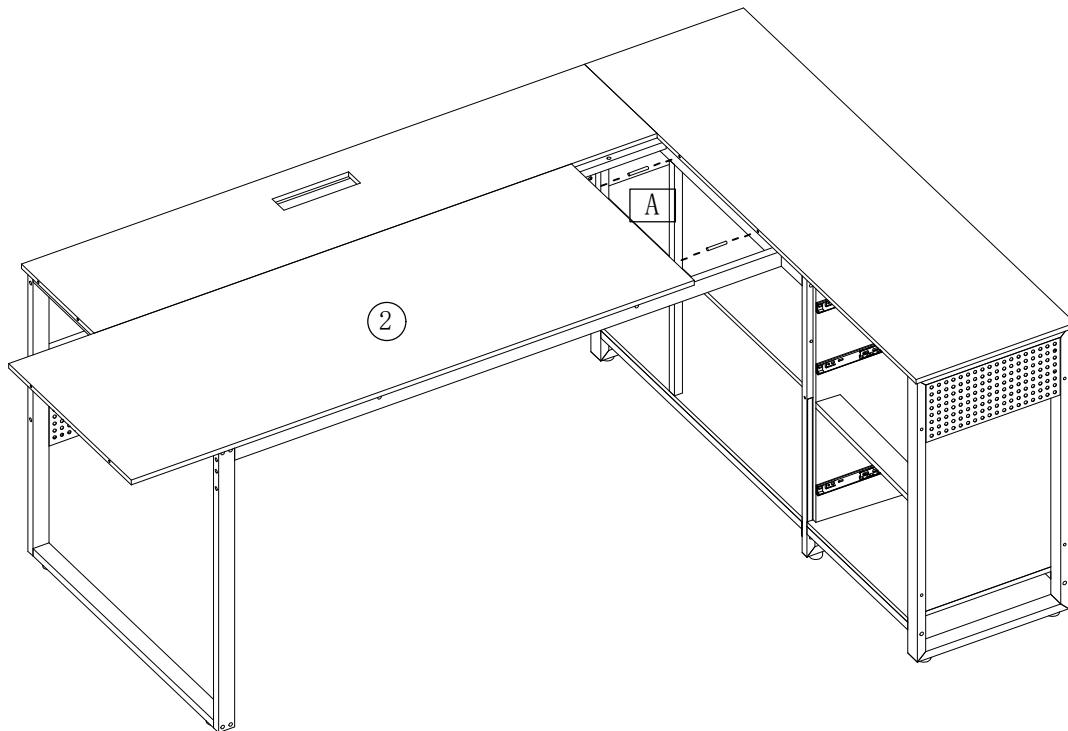



A	Ø6x50mm
	*2

ASSEMBLY INSTRUCTION

STEP 31


||

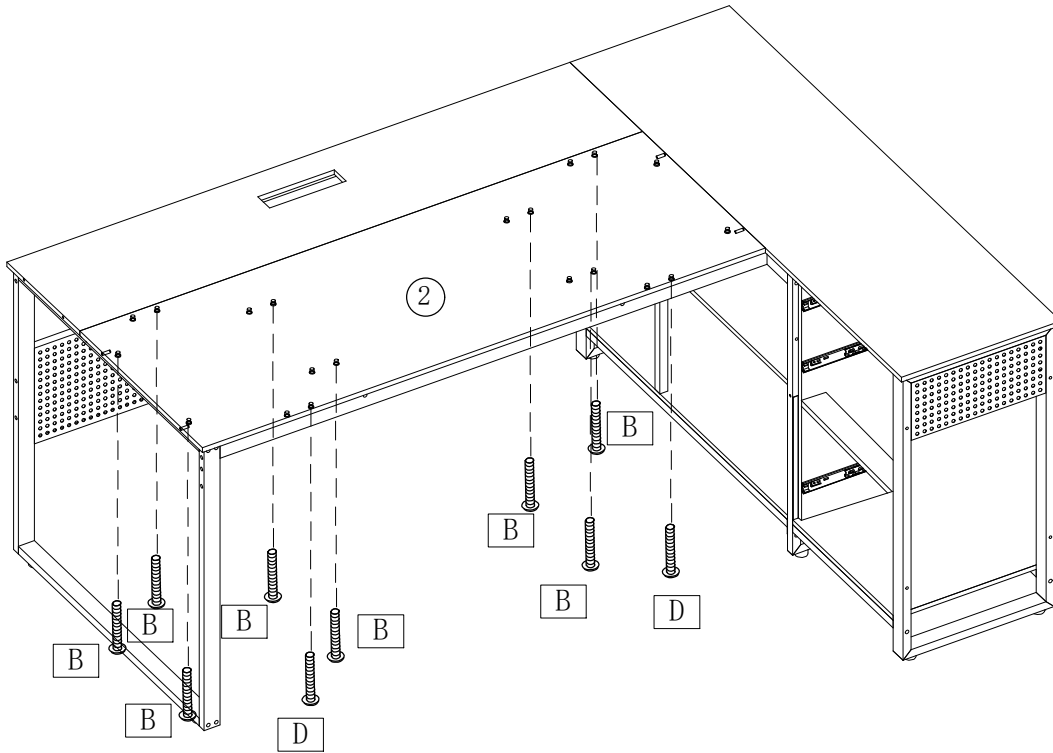


B	M6x28mm
	 *8
D	M6x50mm
	 *2

STEP 32

||

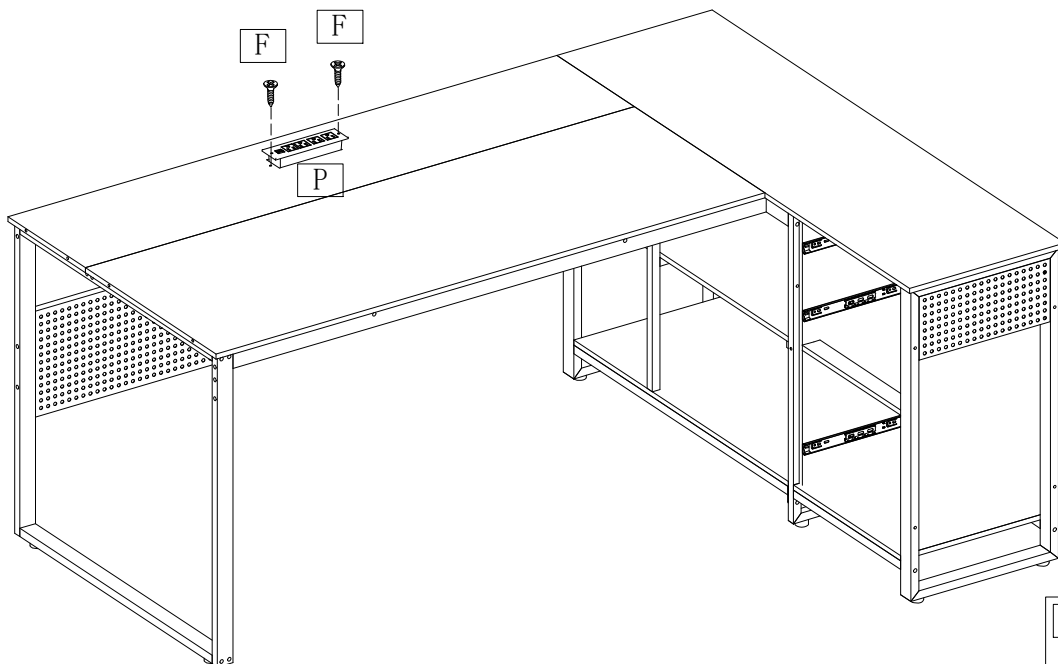



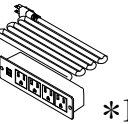
P	 *1
F	M3.5x12mm
	 *2

ASSEMBLY INSTRUCTION

STEP 33


||

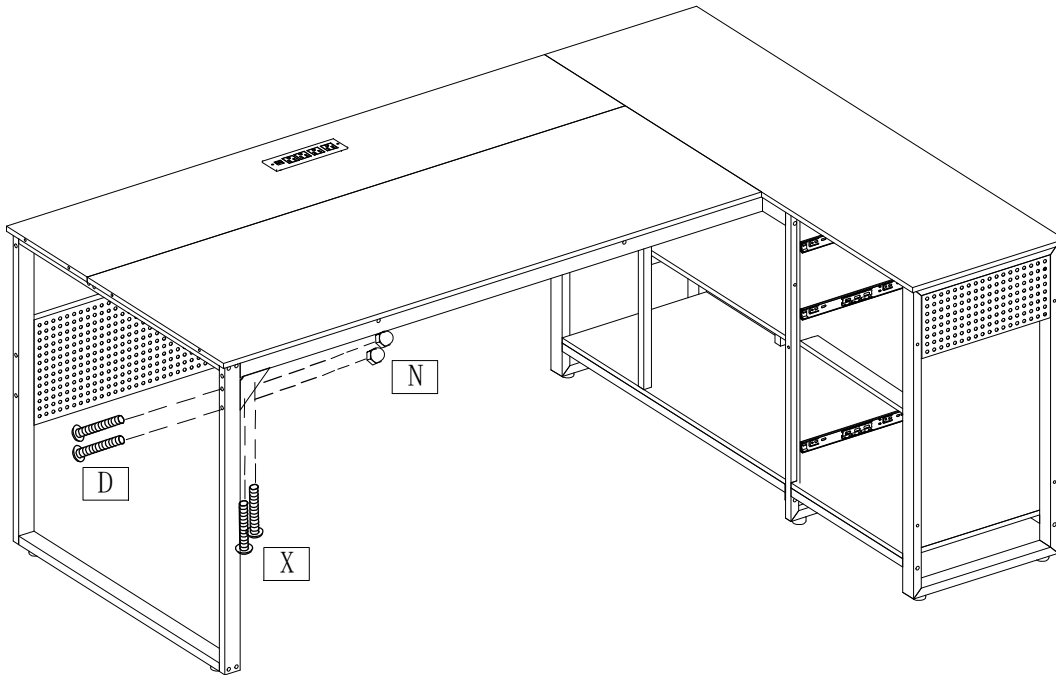


S		*1
N	M6 	*2
X	M6x12mm 	*2
D	M6x50mm 	*2

STEP 34

||

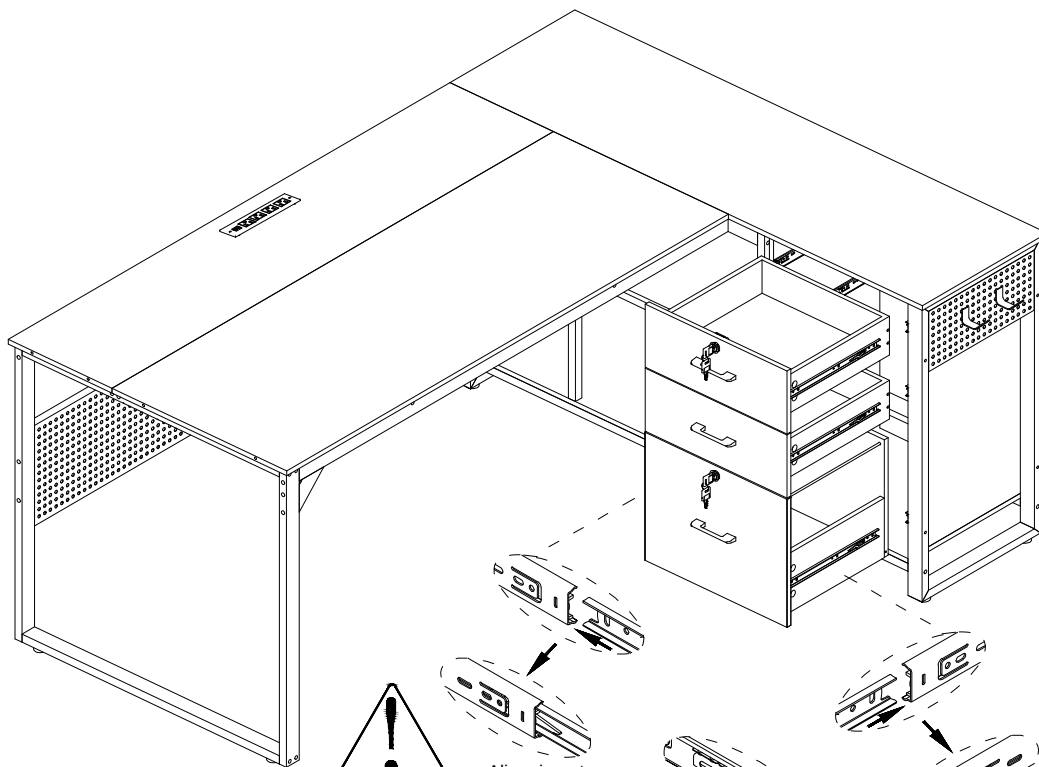

Align, insert



Align, insert





Be careful to pull the guide balls
on both sides to the front end

ASSEMBLY INSTRUCTION

STEP 35

||

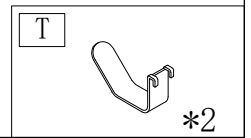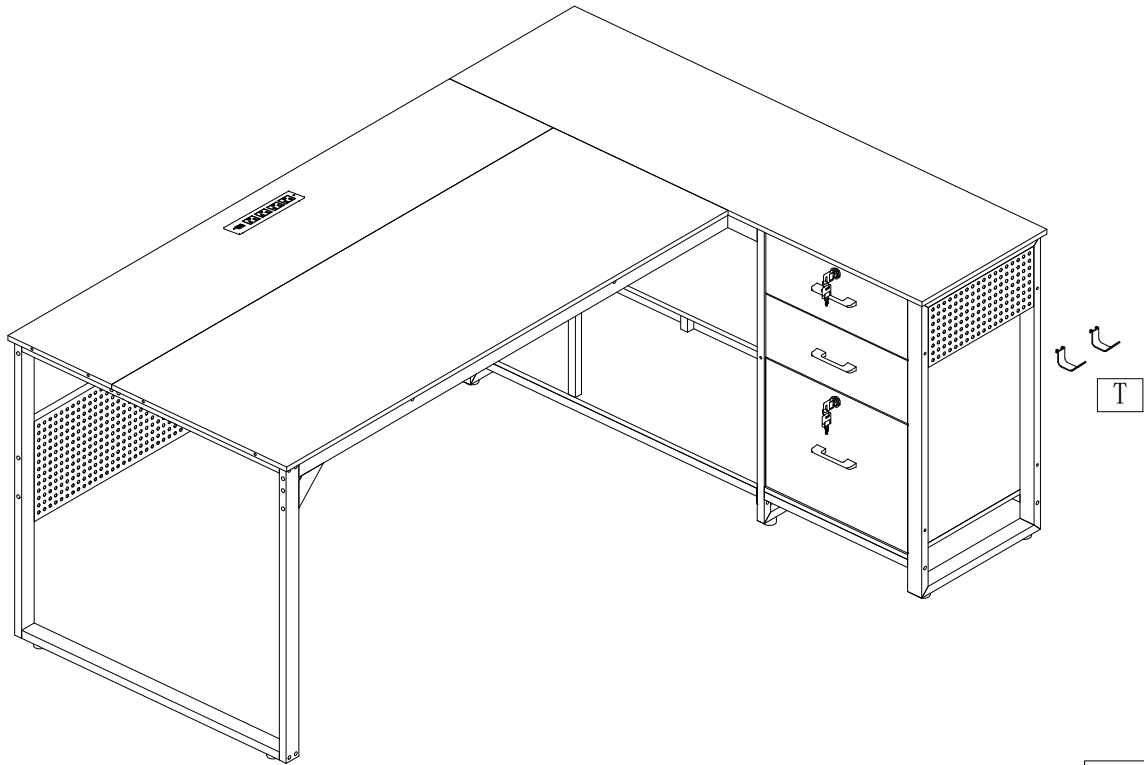

STEP 36

||

