


RDY07B

Different Types of Installation


A

Option A:

For wall to wall installation,
shower sliding door

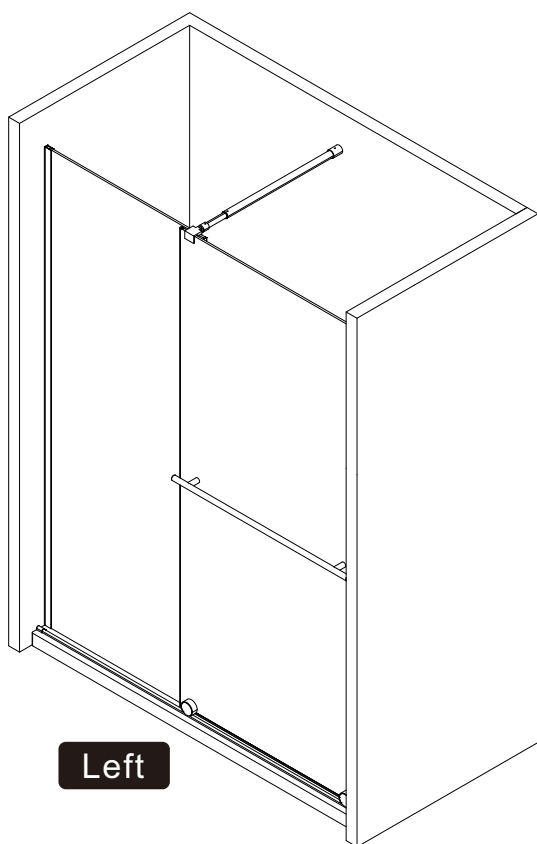


Right

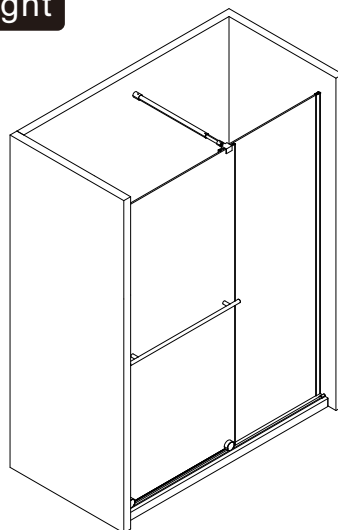


B











Option B:


For 1-side wall shower
walk-in wetroom

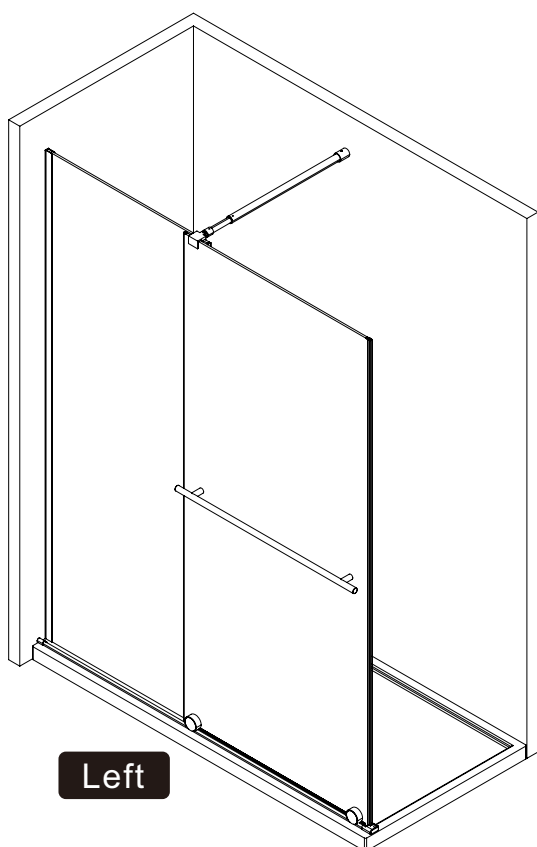


Right

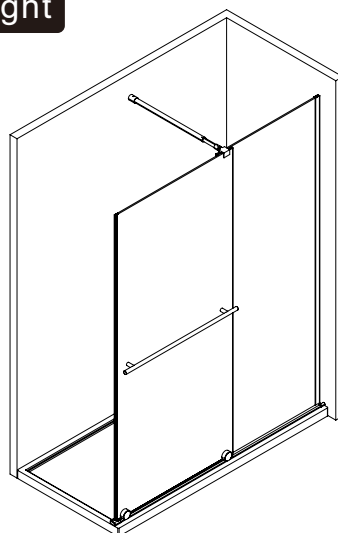

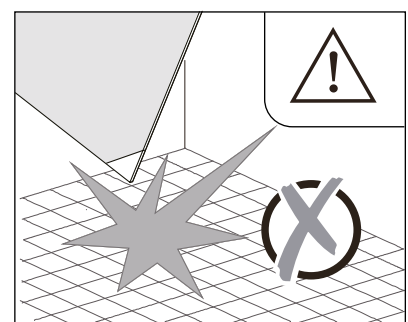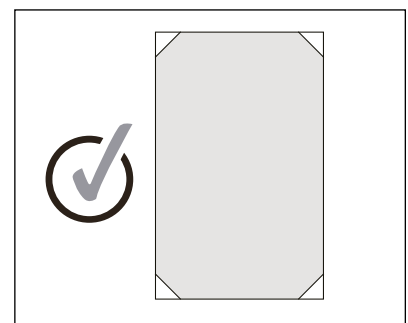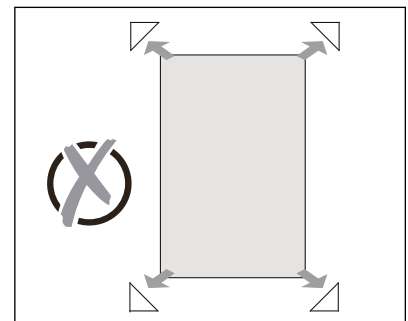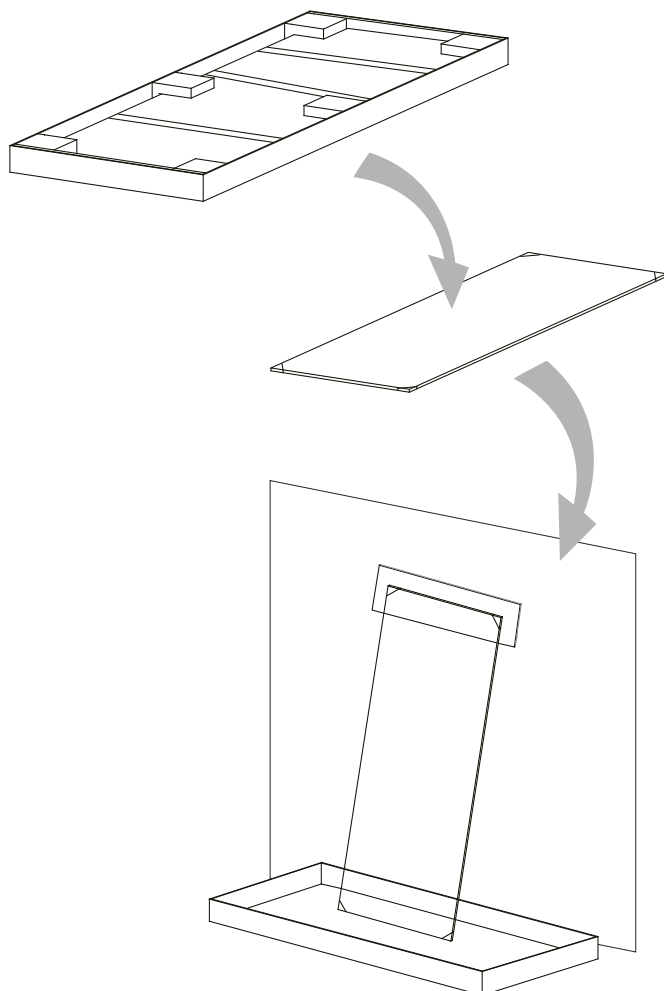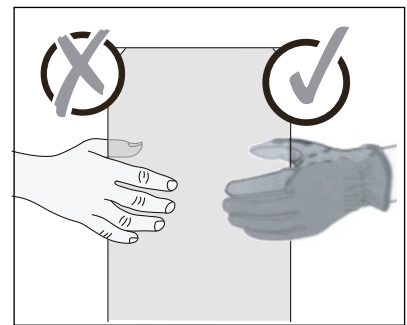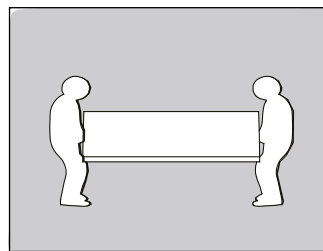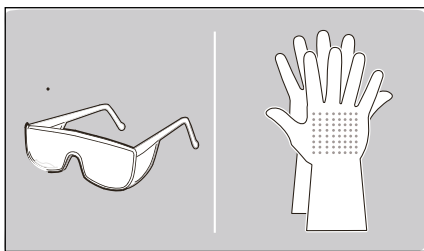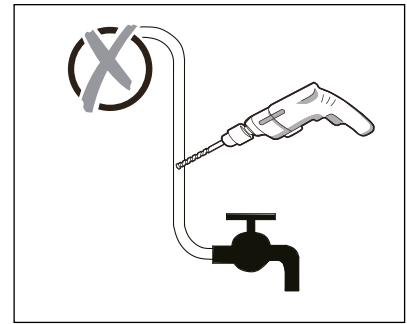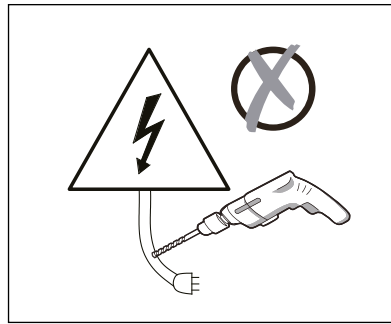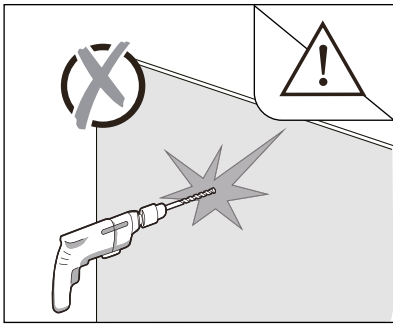


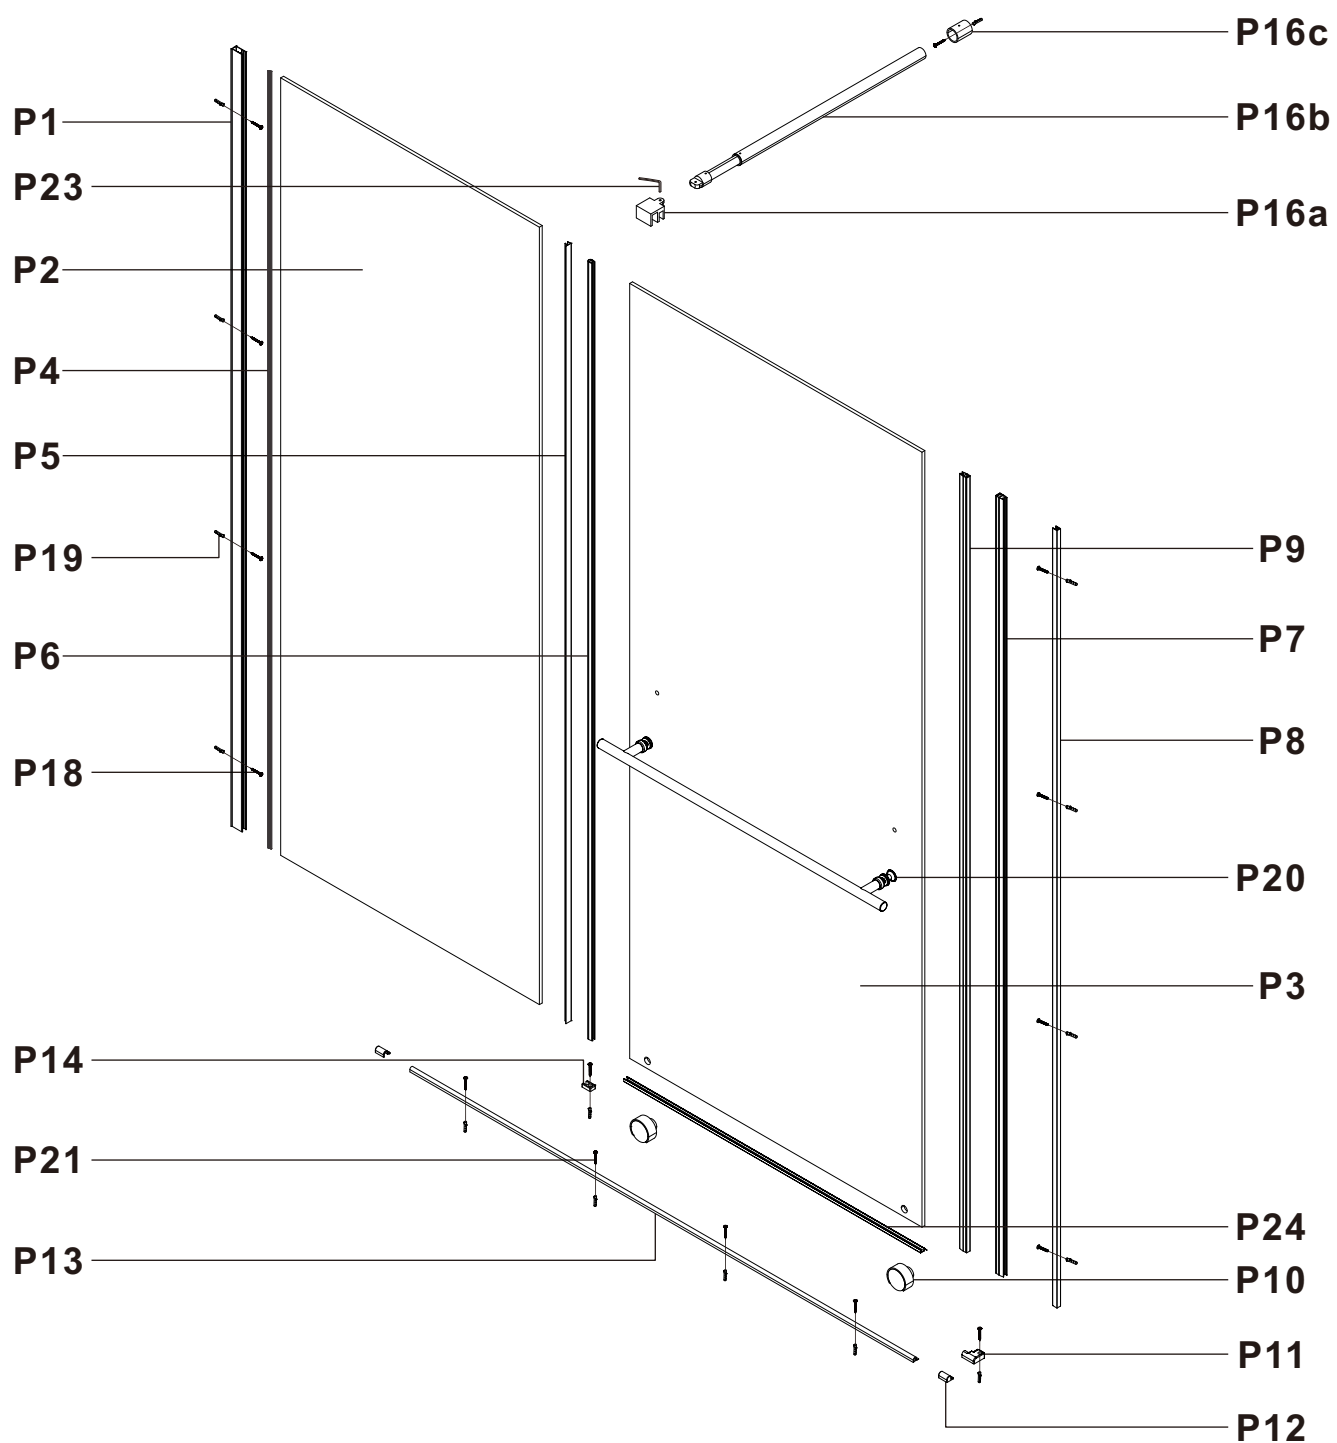


Option A

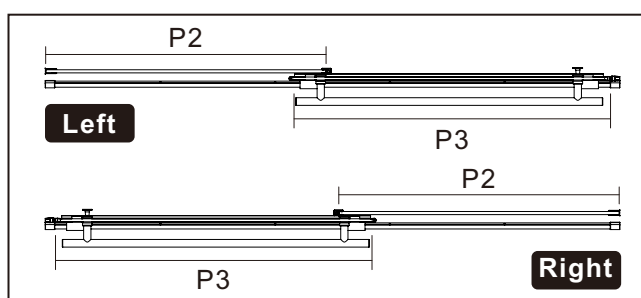


Option B

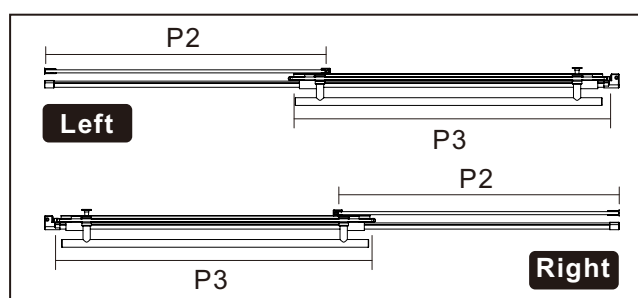


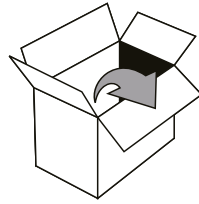

P1 X1	P2 X1	P3 X1	P4 X1
P5 X1	P6 X1	P7 X1	P8 X1
P9 X1	P10 X2	P11 X1	P12 X1
P13 X1	P14 X1	P16 X1	
P18 ST4x30MM X9	P19 X15	P20 X1	P21 ST4x25MM X6
P23 X1	P24 X1		


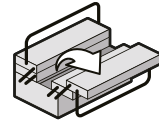


 Ø 6mm	
 ⊕ PH2	
 Ø3mm	


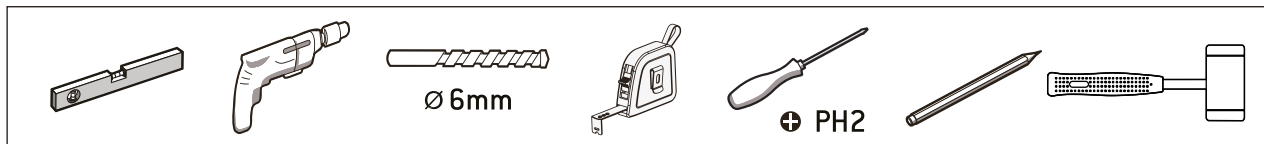



5

1 Wall Profile Installation




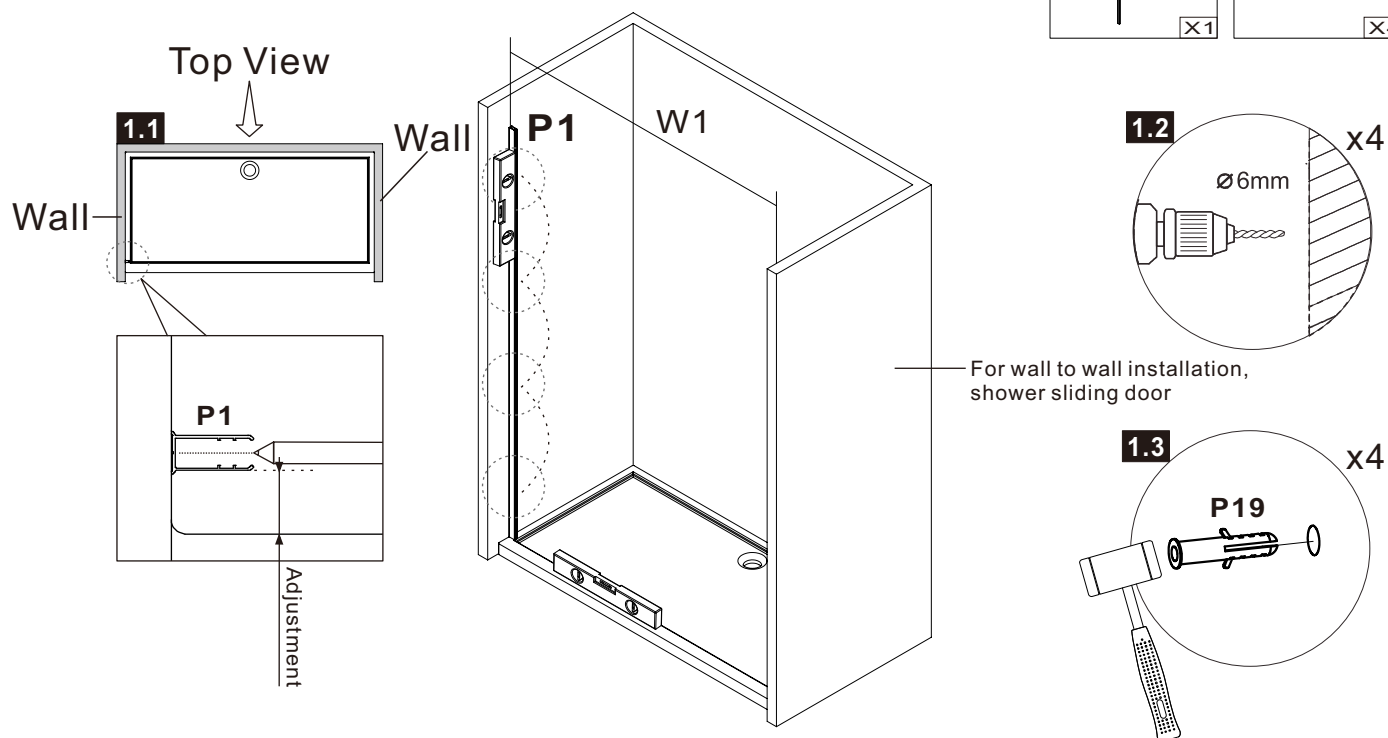
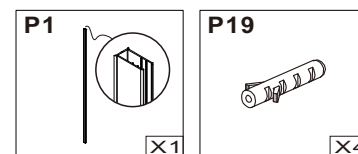


Wall Profile Installation 2

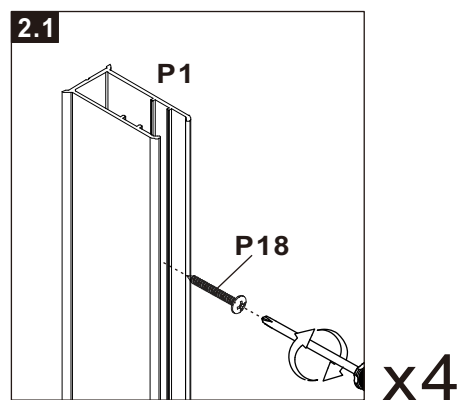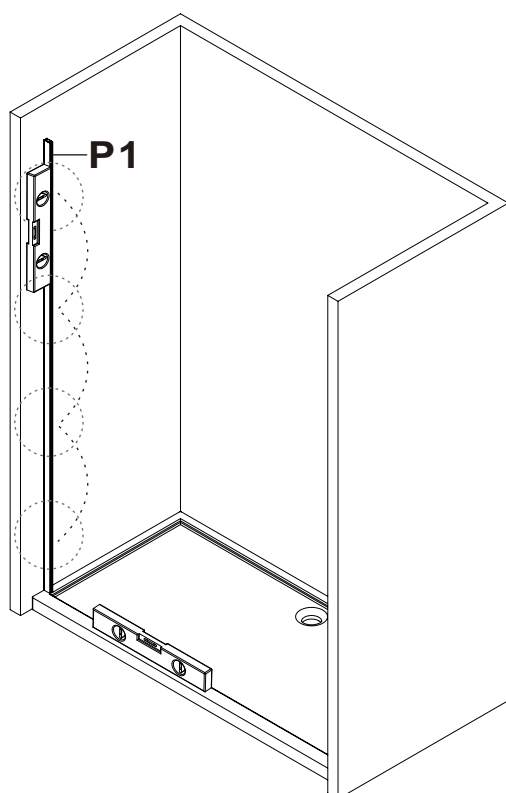





3 Fixed Glass Installation

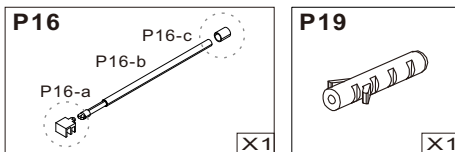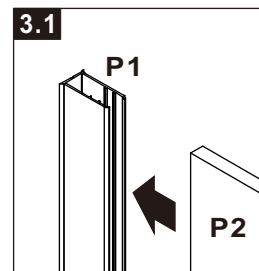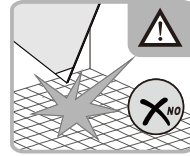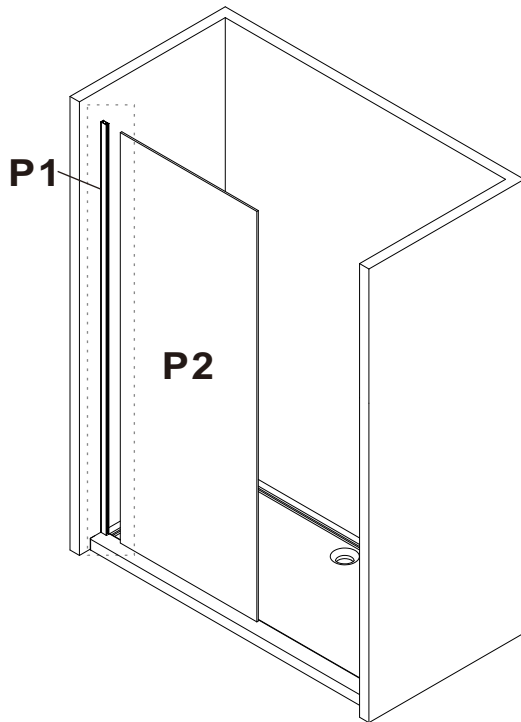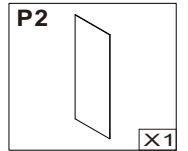

Support Bar Installation 4






Note: the support bar shall be fixed less than 4" from the glass edge.

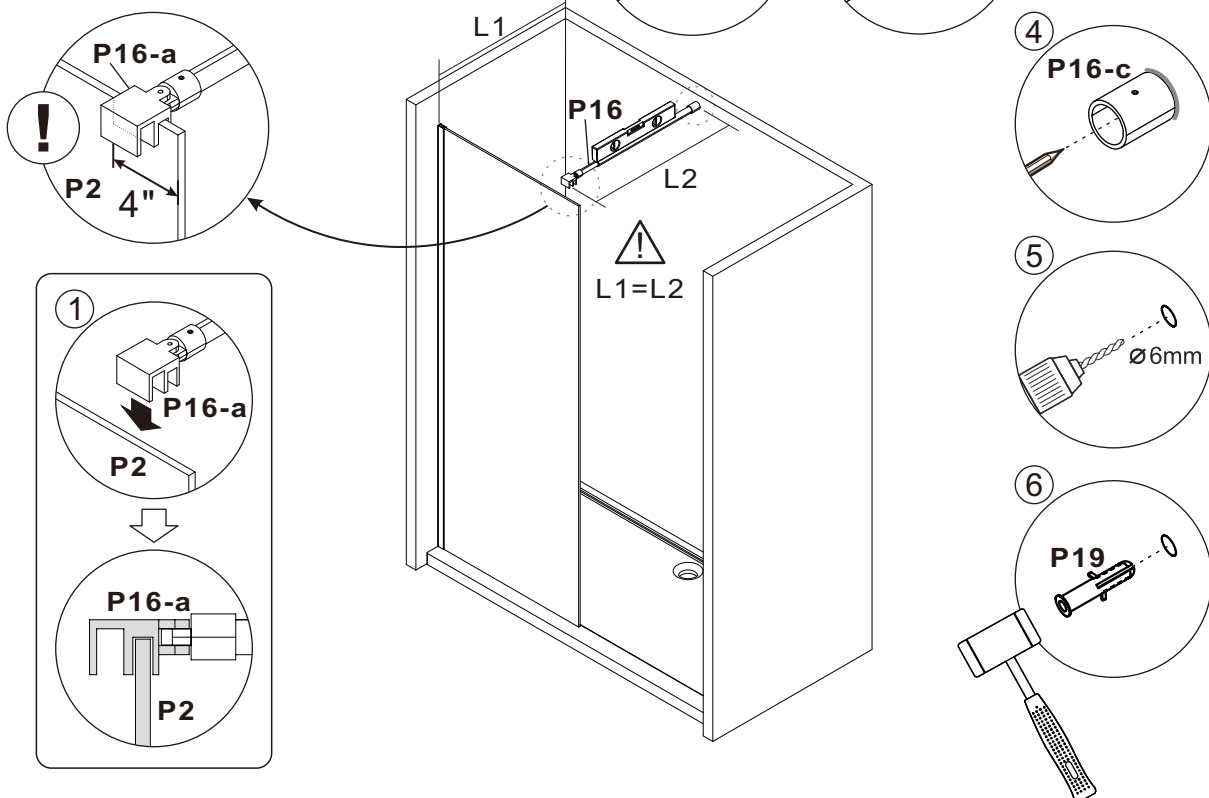





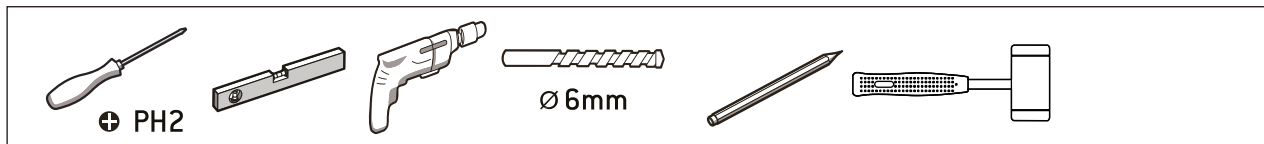



7

5 Support Bar Installation

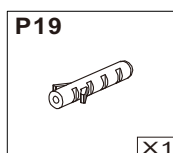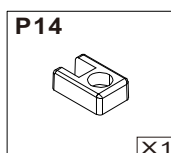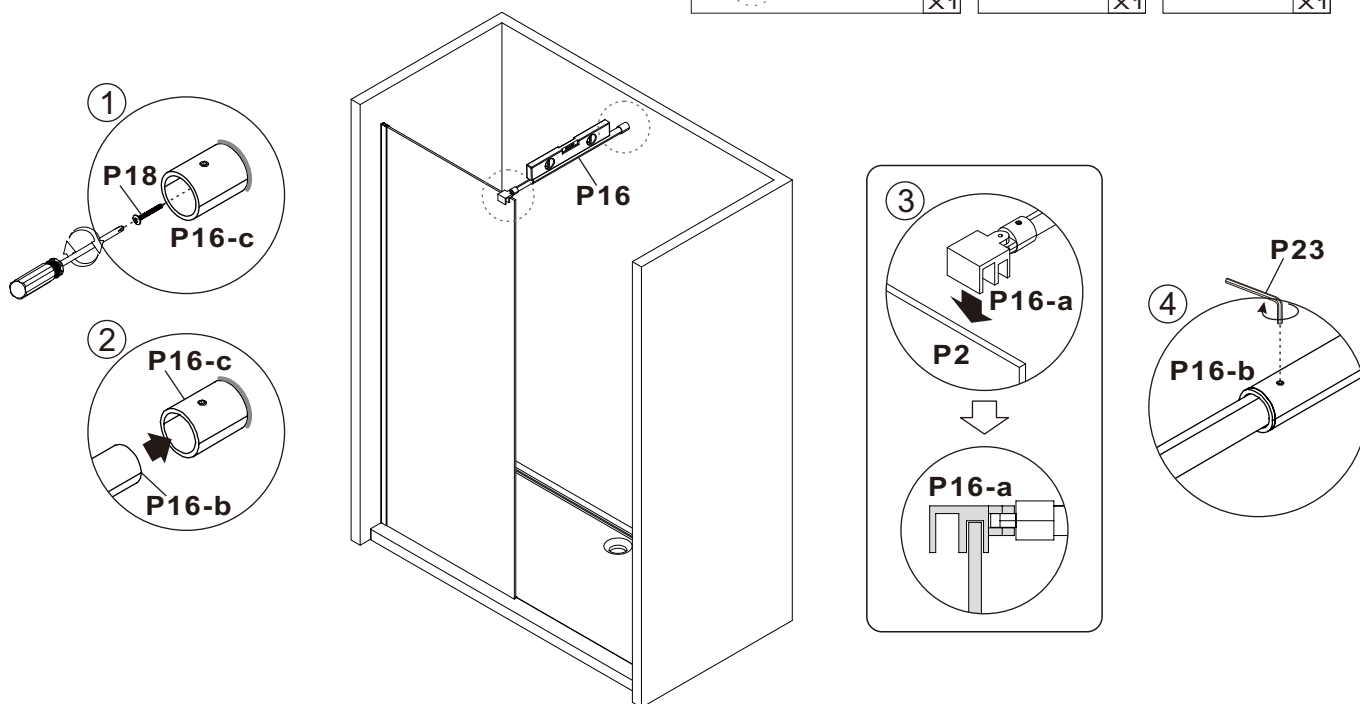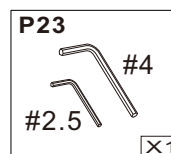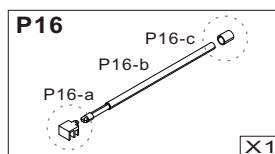








Bottom Fixture Installation 6

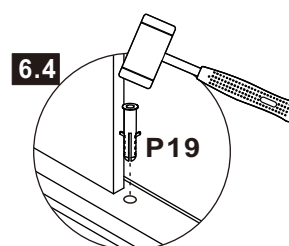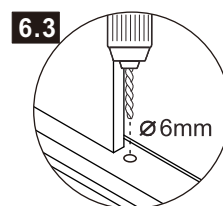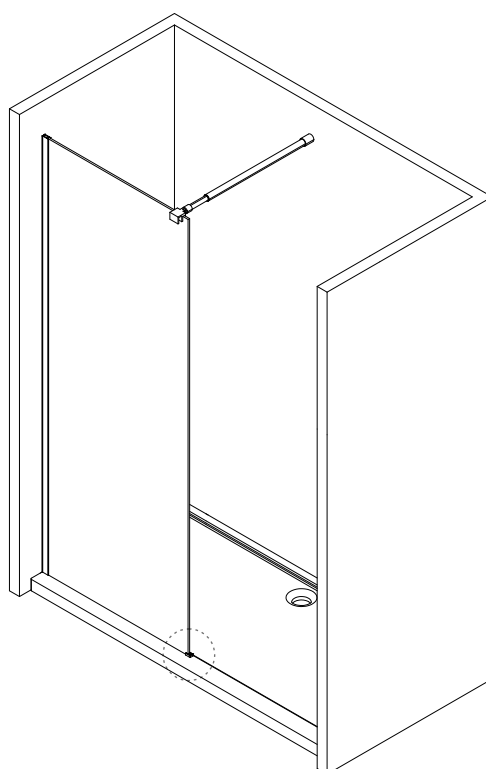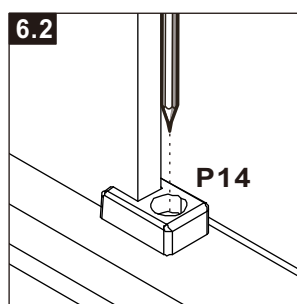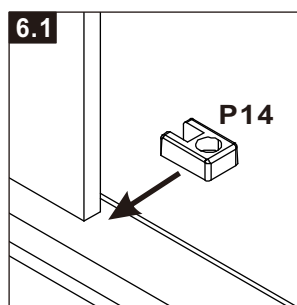



PH2
















7 Strips Installation

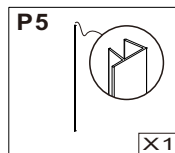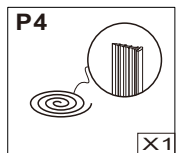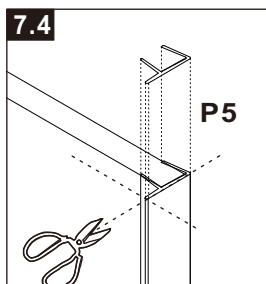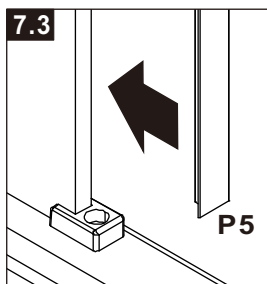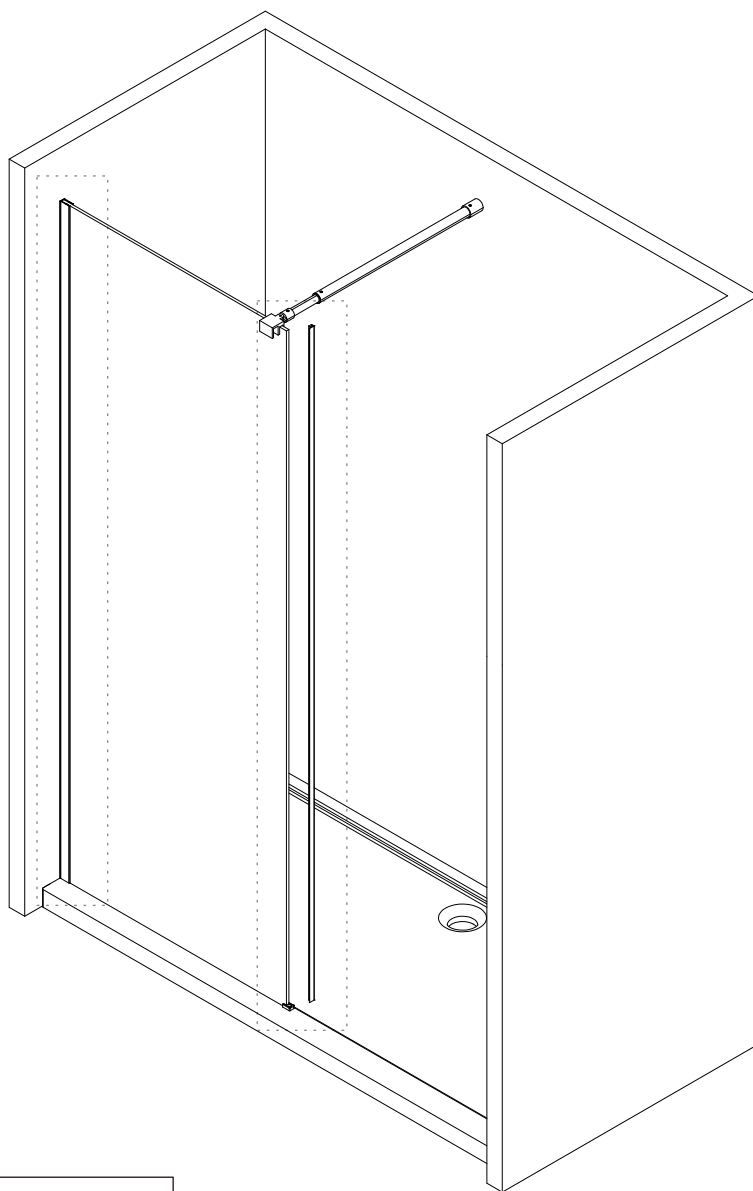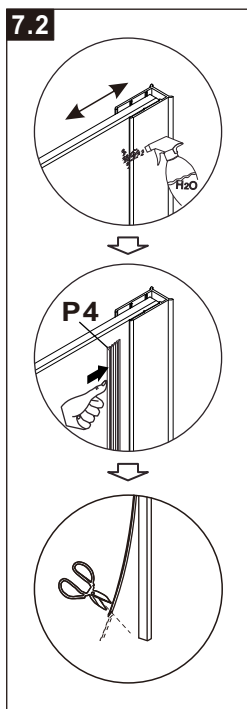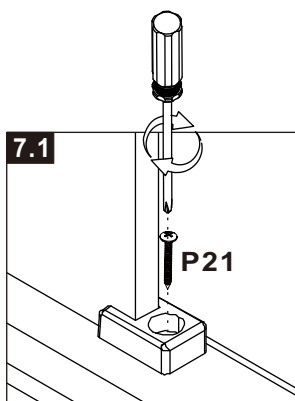P21
ST4x25MM










8 Sliding Door Assembly


! Leftward Open

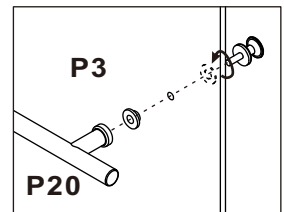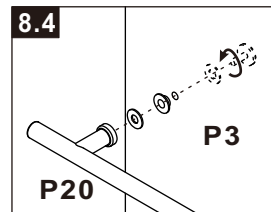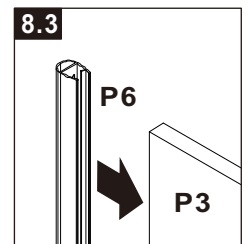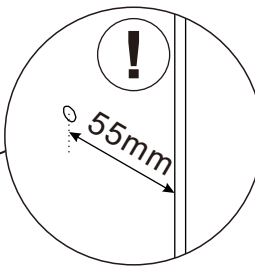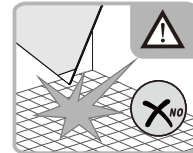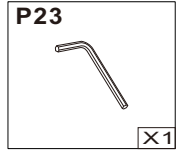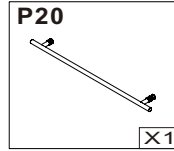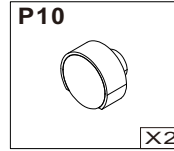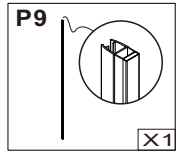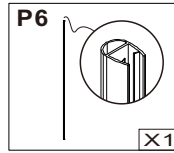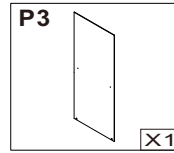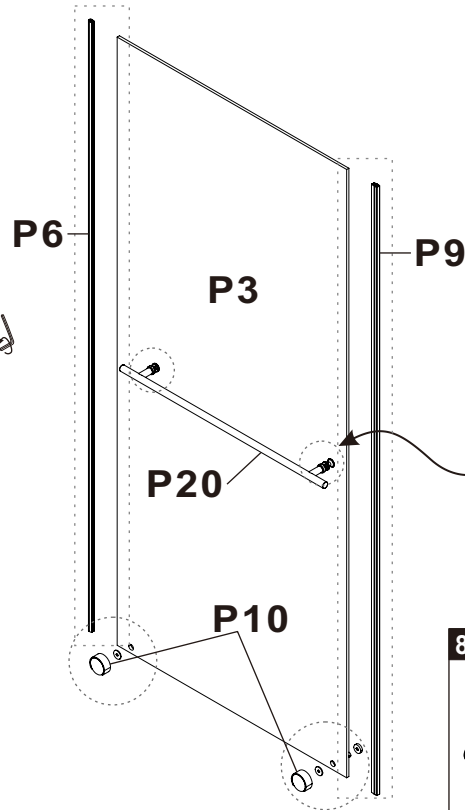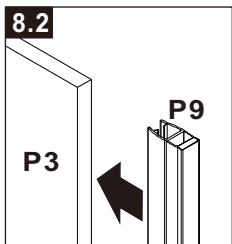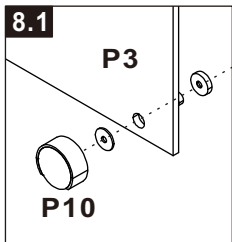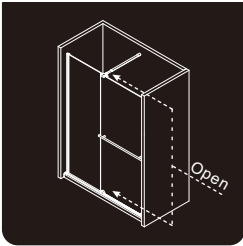






! Rightward Open

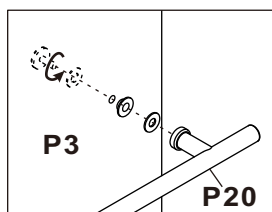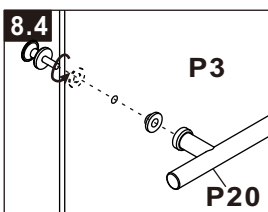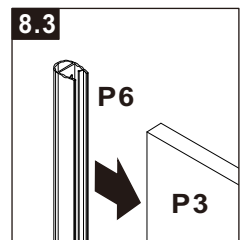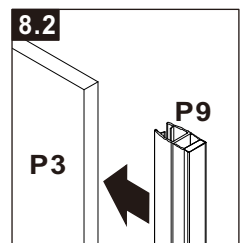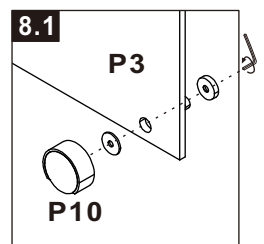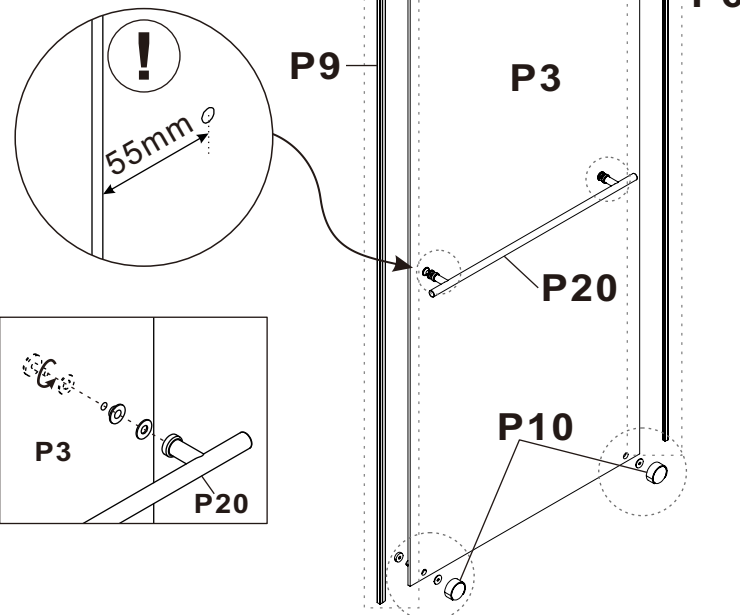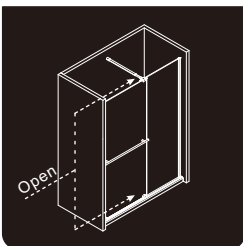





9 Bottom Seal Installation

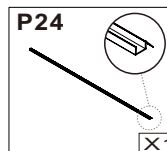

! Leftward Open

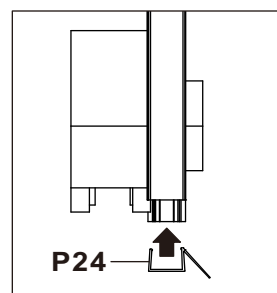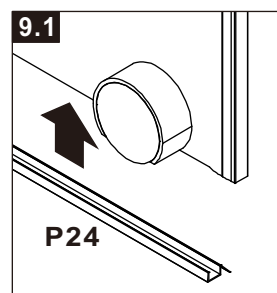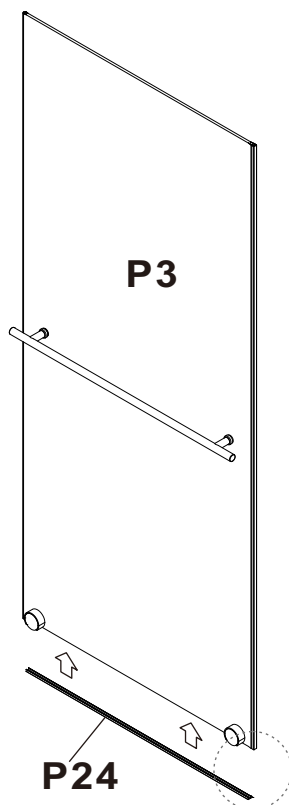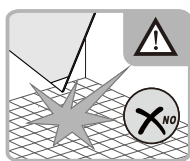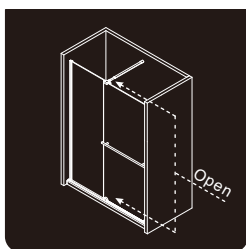



! Rightward Open

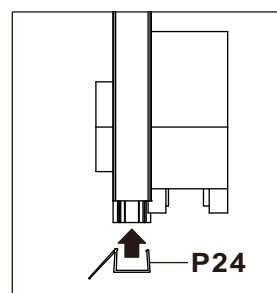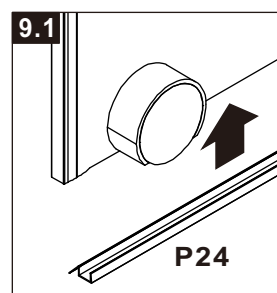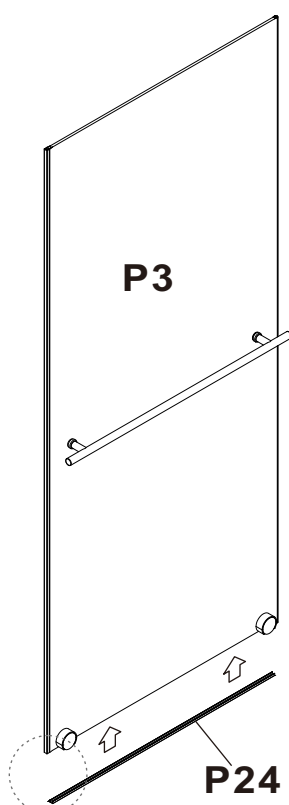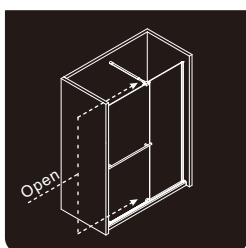

A

Option A:
For wall to wall installation,
shower sliding door










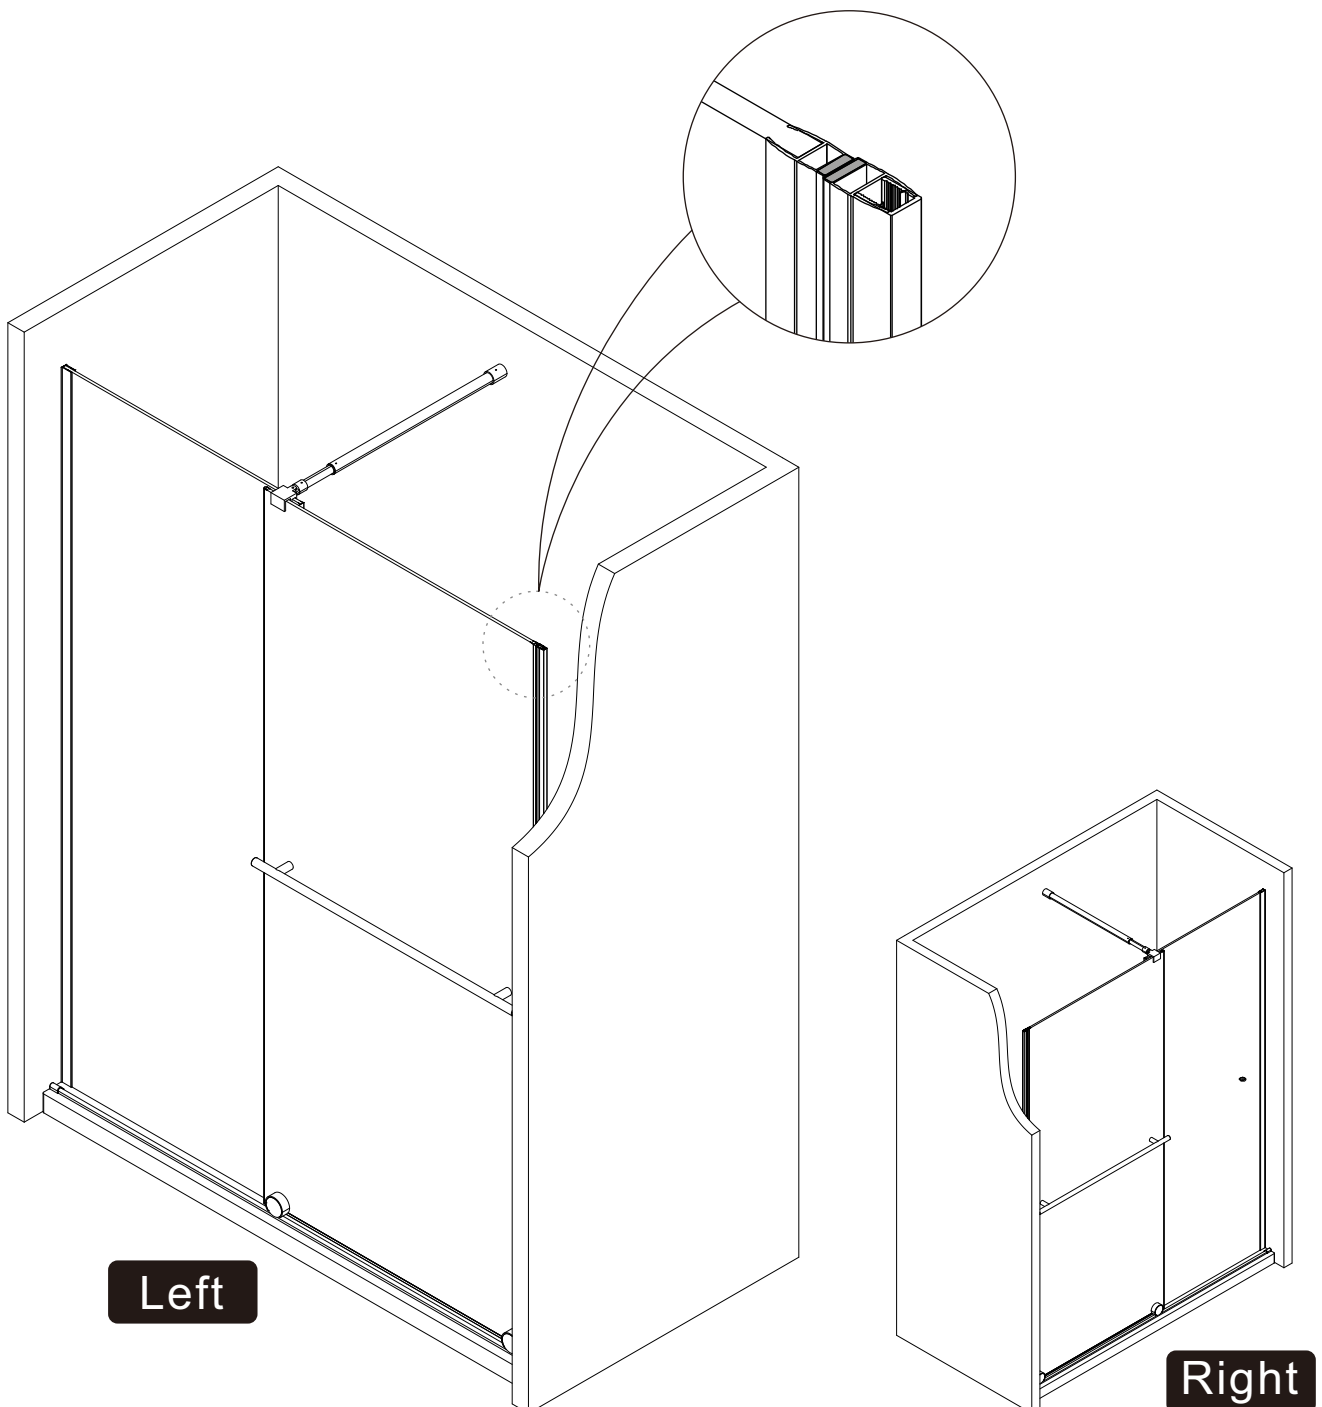


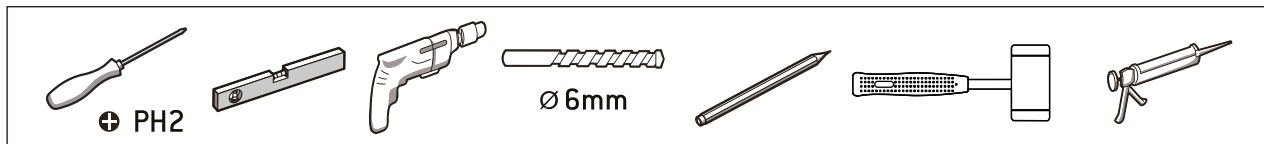

12

10 Door Threshold Installation





A

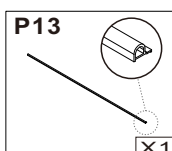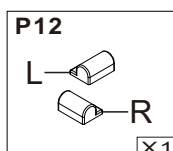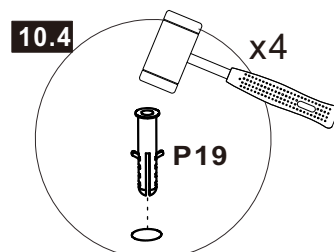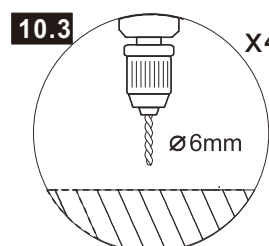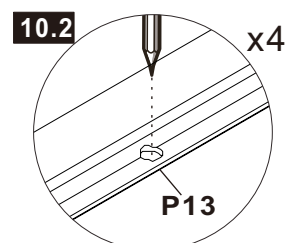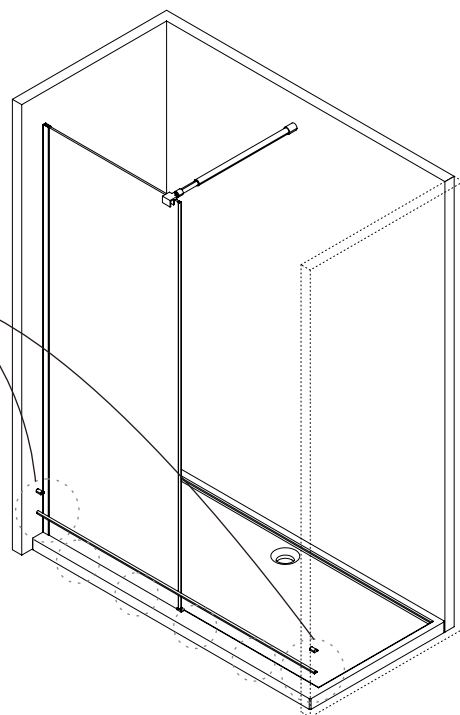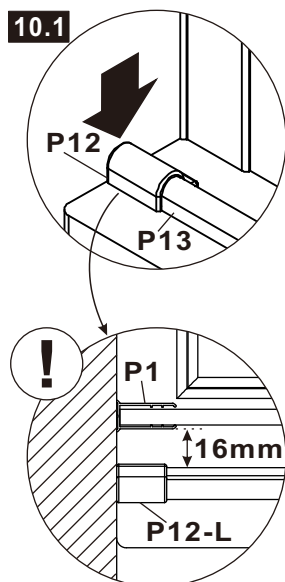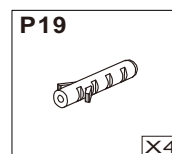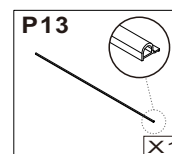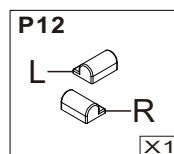


Door Threshold Installation

11


A

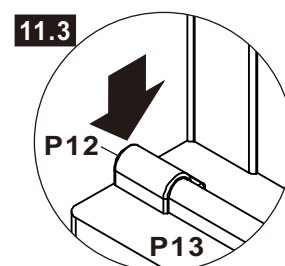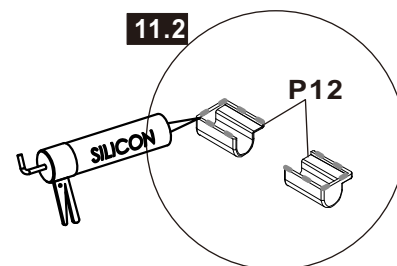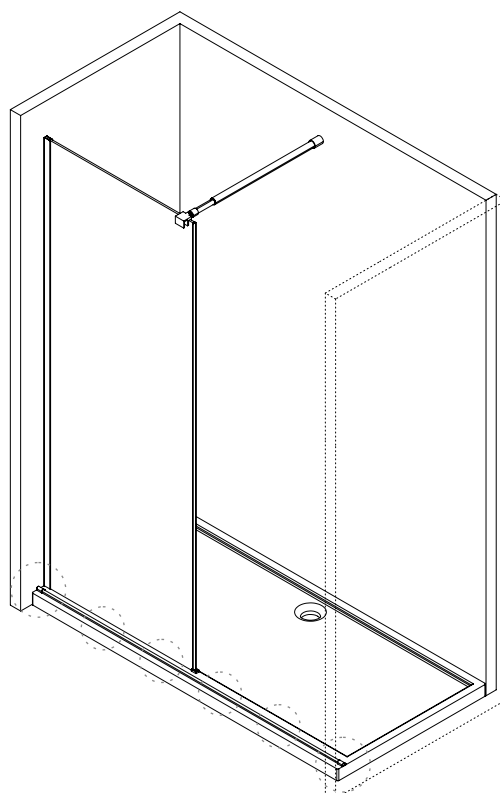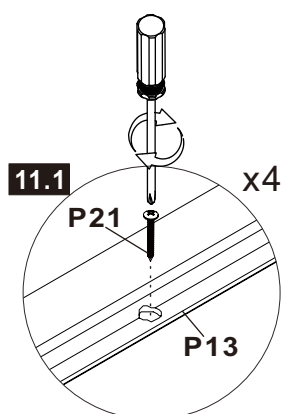

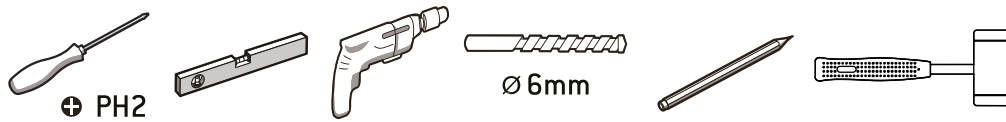


12 Sliding Door Installation

A

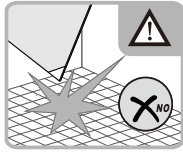



12.2

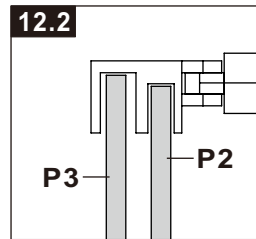

P23




12.1

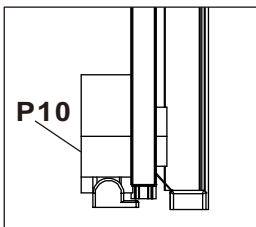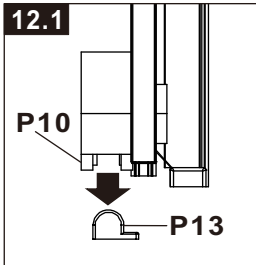




P2

P3

12.3

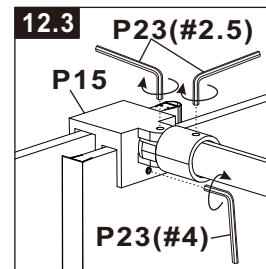


12.4

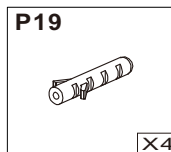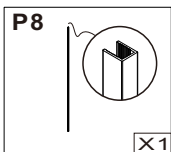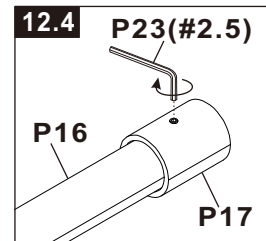


Wall Profile Installation 13


A

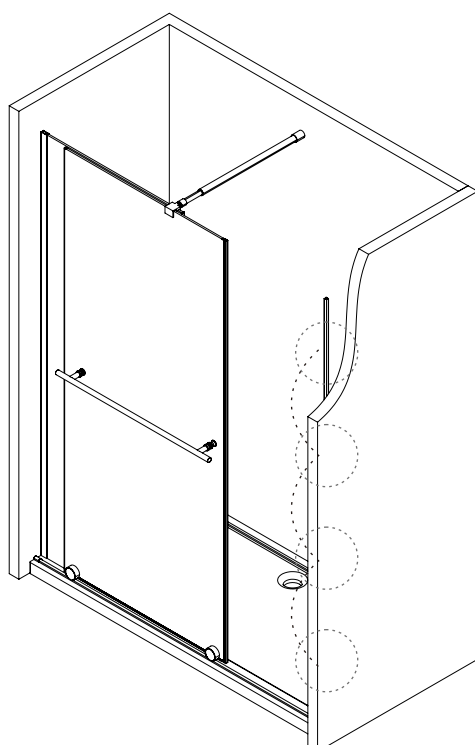


13.1

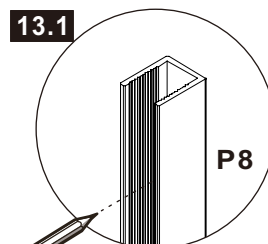


13.2

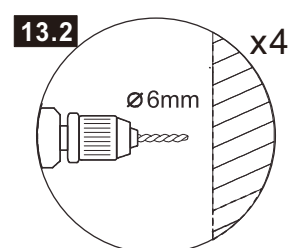

13.3

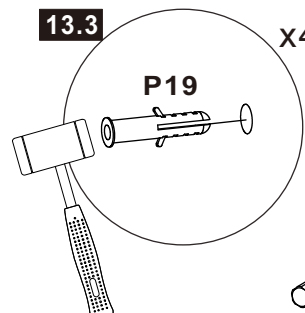


13.4



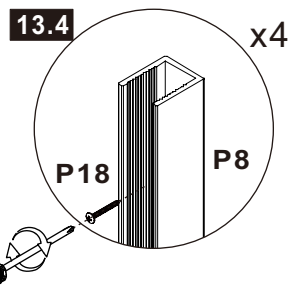




14 Wall Profile Installation

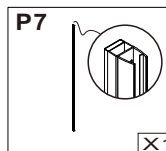



A

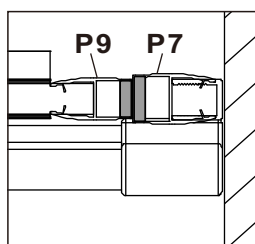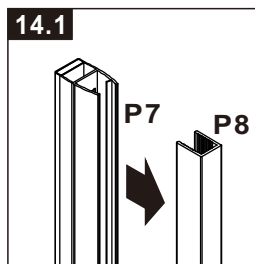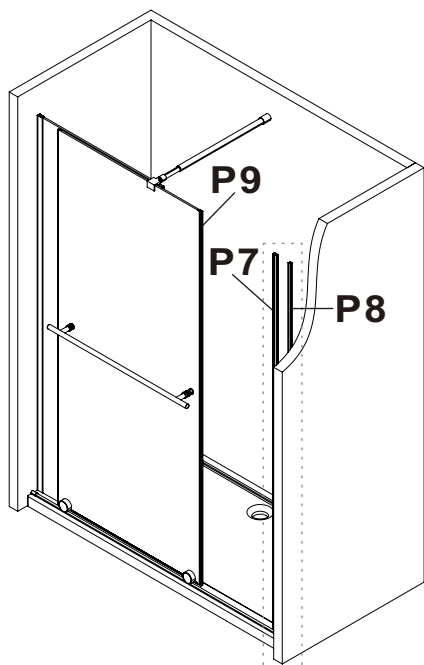

Make sure that the two magnetic strips P7 and P9 can fit tightly.

15

A

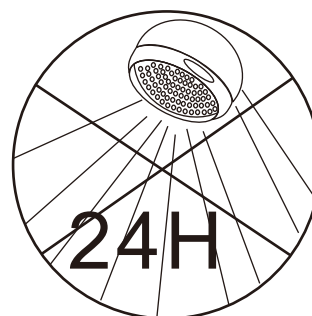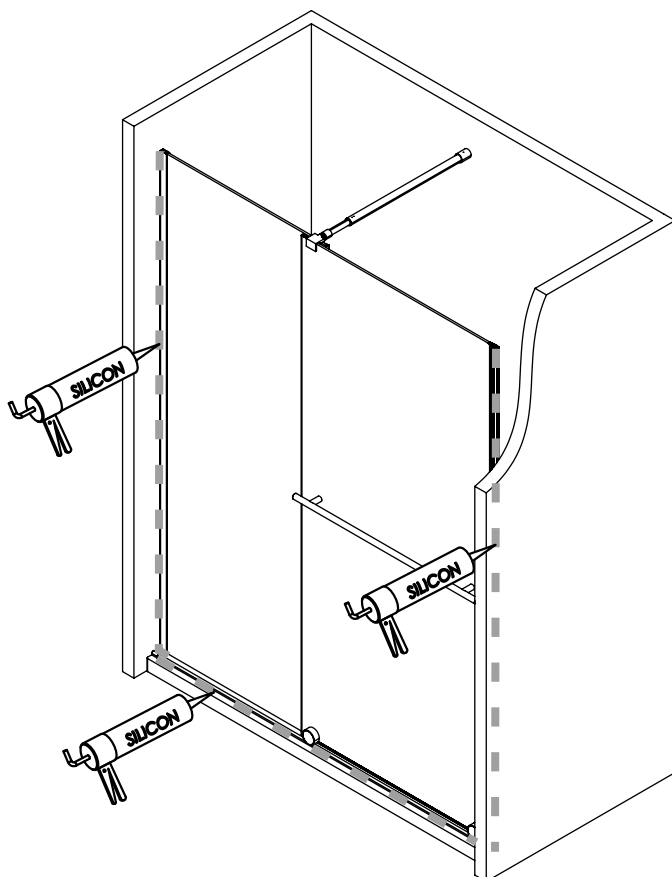


B

Option B:
For 1-side wall shower walk-in
wetroom


Left




Option B:
For single wall
installation-Walk-in
Shower Screen Door

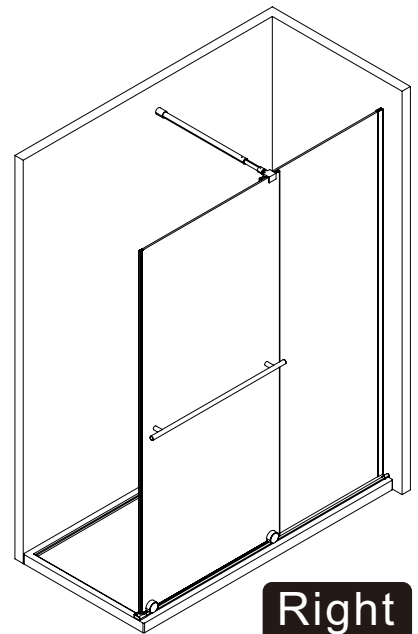




Right

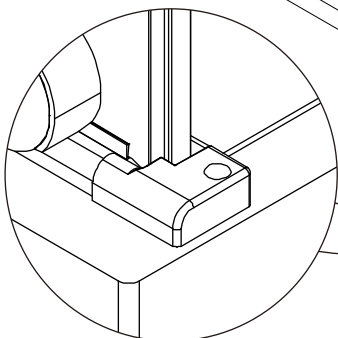

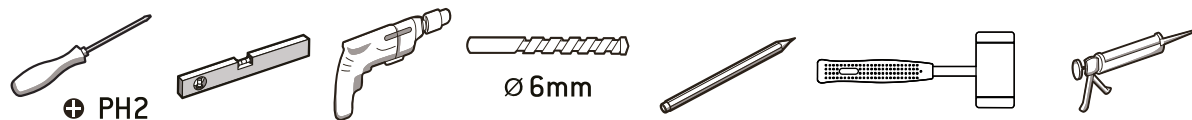


10 Door Threshold Installation

B

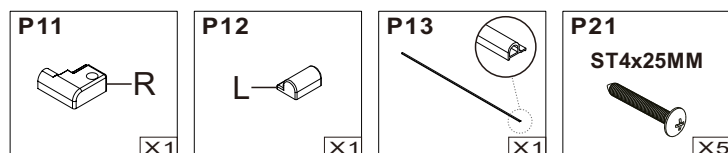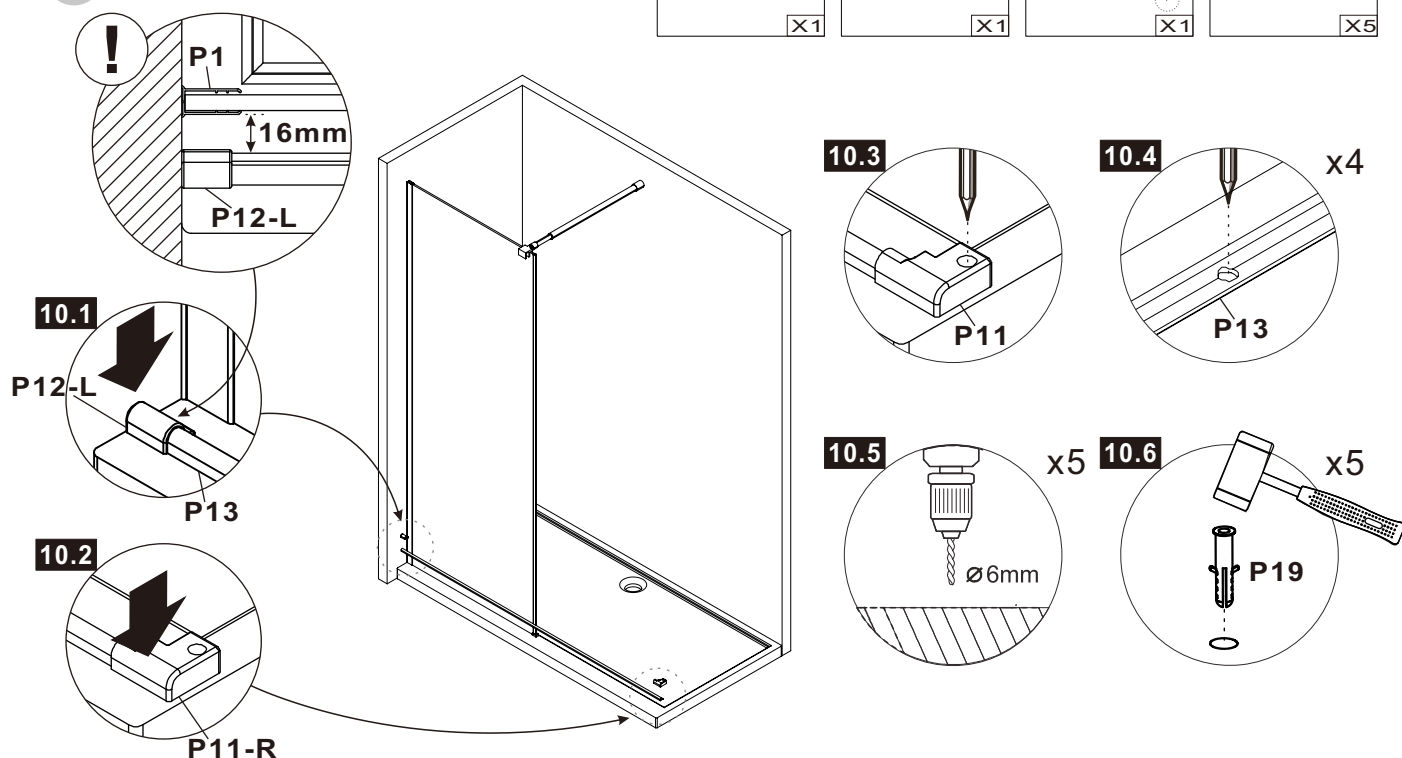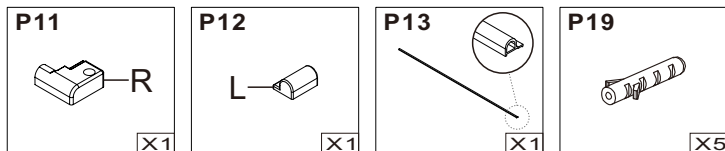









Door Threshold Installation

11 B

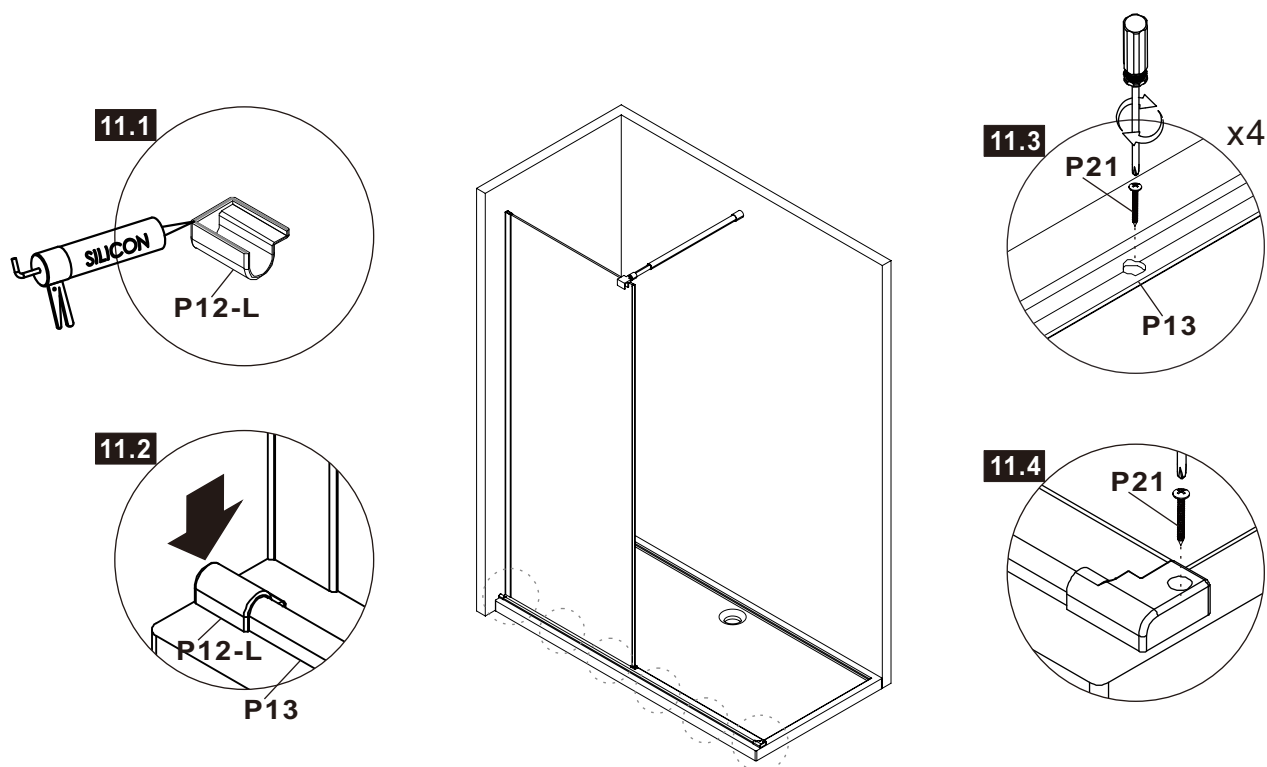



12 Sliding Door Installation

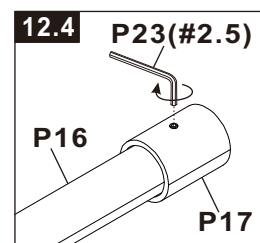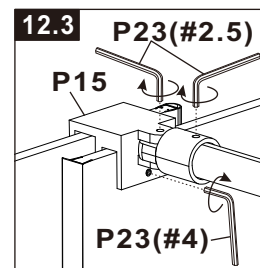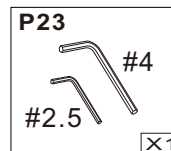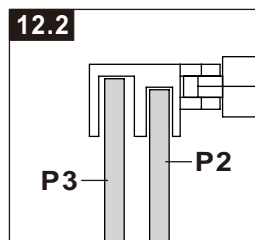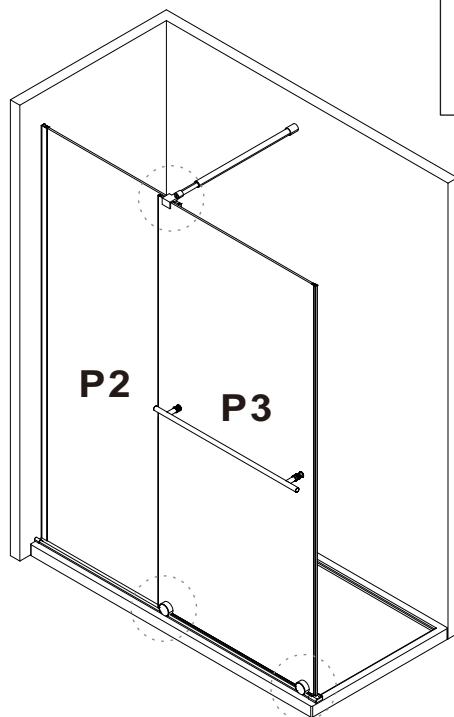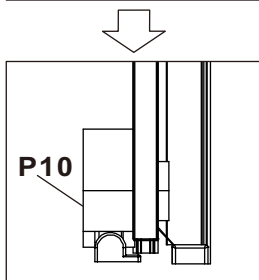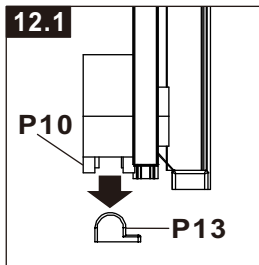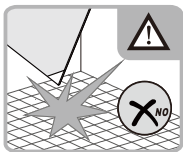B**13****B**