



## ASSEMBLY INSTRUCTION

ROD 1 =  1Pc


ROD 2 =  3Pcs



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 8-Medium Base Bulb  
60 Watts Recommended 100 Watts Max.  
USE LED BULBS FOR EXTENDED USE

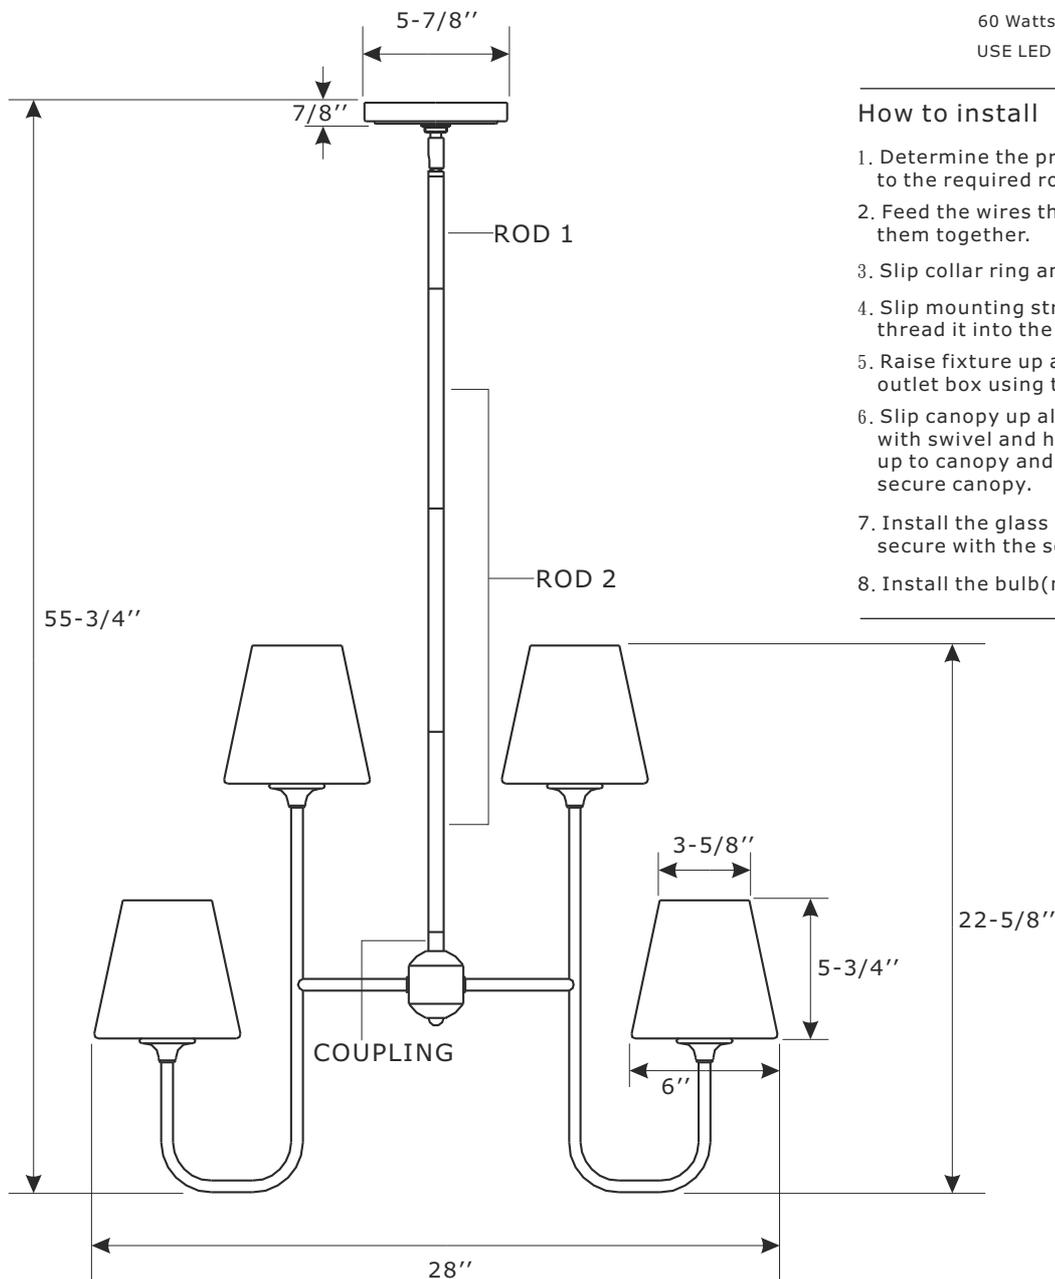

### How to install

1. Determine the preferred hanging height and adjust to the required rods.
2. Feed the wires through the rods and connect them together.
3. Slip collar ring and canopy over the rod assembly.
4. Slip mounting strap with swivel along wire and thread it into the top of the rod assembly.
5. Raise fixture up and attach mounting plate to the outlet box using two outlet box screws.
6. Slip canopy up along rods and over mounting plate with swivel and hold in its position. Slip collar ring up to canopy and thread it onto screw collar, to secure canopy.
7. Install the glass shade over the socket, and secure with the socket ring.
8. Install the bulb(not included) into socket.

## Part Number

### Part Numbers

- A. (1)-Mounting hardware
- B. (1)-Canopy W5-7/8"xH7/8" #XRF3004VGCAN5.875IN
- C. (1)-Collar ring
- D. (1)-Rod D5/8"xL6" #XRF3004VGROD6IN
- E. (3)-Rod D5/8"xL12" XRF3004VGROD12IN
- F. (1)-Coupling
- G. (8)-Socket
- H. (8)-Glass shade #XRF3004SHA6IN
- I. (8)-Socket ring

