


2 DRAWER BEDSIDE

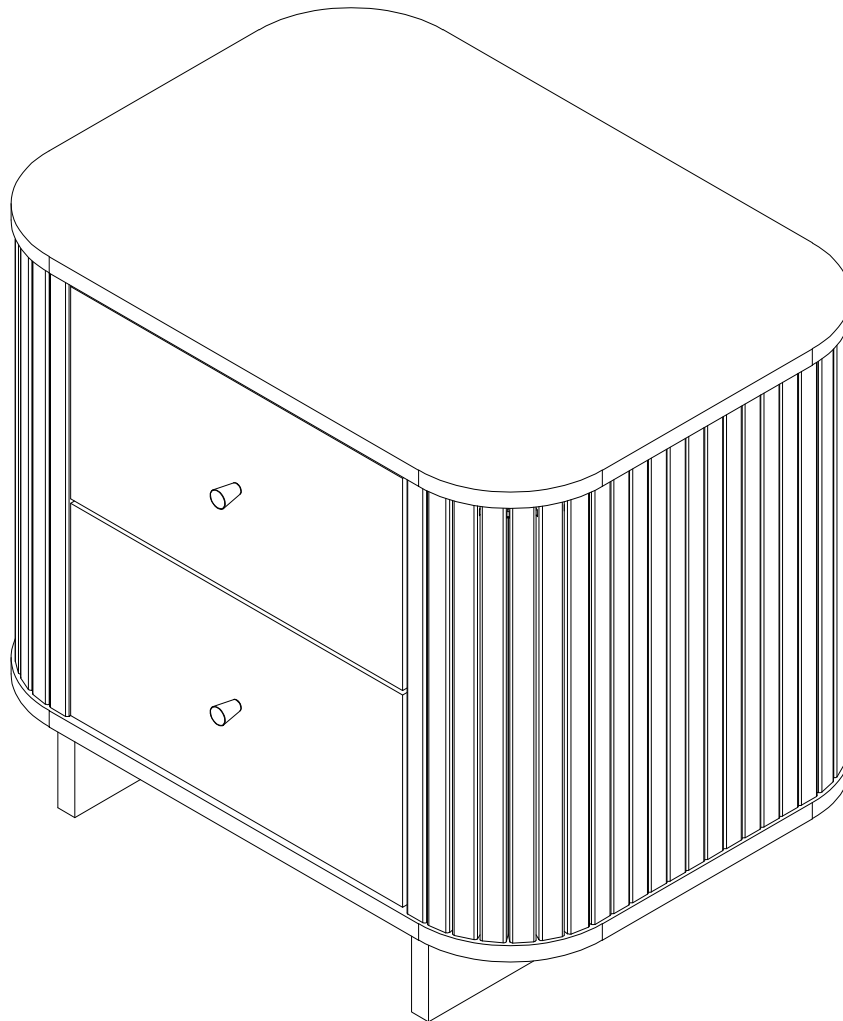

Dimensions	No. people	Assembly Time
Width: 59.00cm Depth: 42.00cm Height: 51.90cm		45 MINS (approx.)

Important - Please read these instructions fully before starting assembly

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on next pages.
- Remove all fittings from the plastic bags and separate them into groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- Warning : Do not over tighten the handle screw that way break the mirror.



Care and Maintenance

- Please clean using cloth with glass cleaner, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

⚠ WARNING




Children have died from furniture tip-over. To reduce the risk of furniture tip-over:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

Exploded View

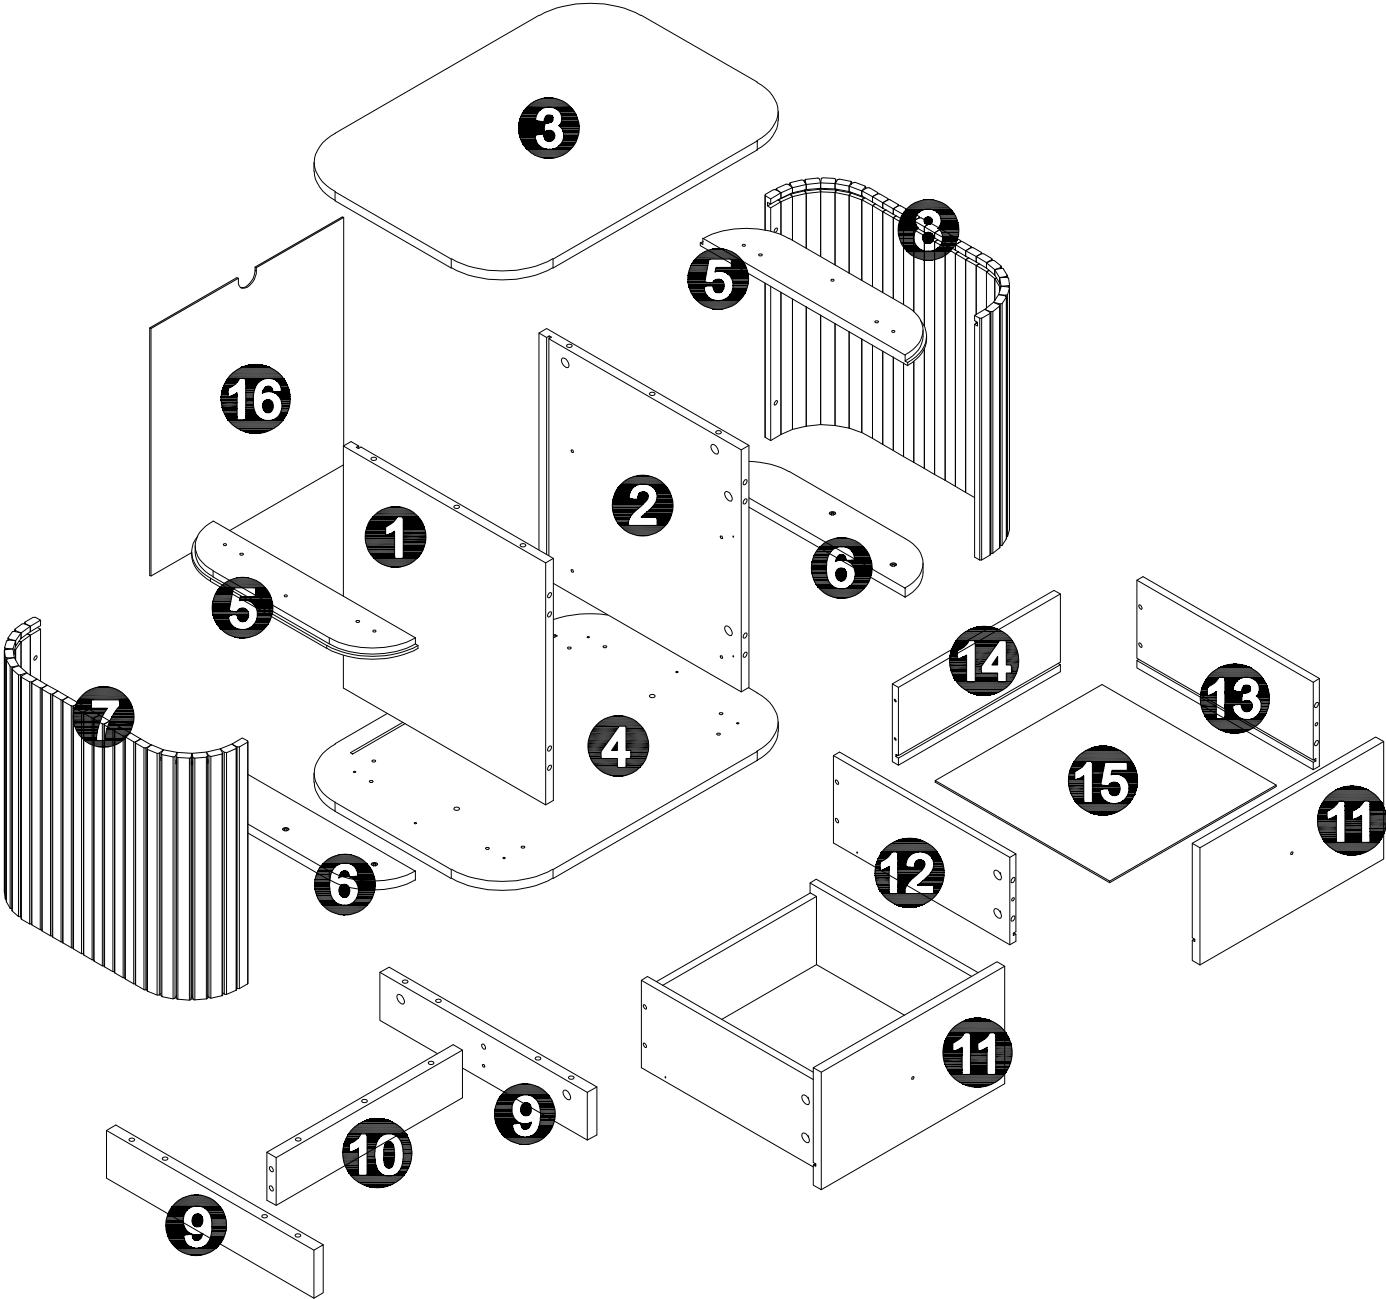

Components - Panels

Please check that you have all the components listed below before constructing your items.







Part No	Description	Qty
1	Divider Panel (Left)	1
2	Divider Panel (Right)	1
3	Top Panel	1
4	Bottom Panel	1
5	Top Rail Panel	2
6	Bottom Rail Panel	2
7	Side Panel (Left)	1
8	Side Panel (Right)	1
9	Bottom Support Side Panel	2
10	Bottom Support Center Panel	1
11	Drawer Front	2
12	Drawer Side (Left)	2
13	Drawer Side (Right)	2
14	Drawer Back	2
15	Drawer Bottom	2
16	Back Panel	1

Components - Fixings


Please check that you have all the components listed below before constructing your items.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


*Hardware packed separately according to the code.

(A)	CSK M3 X 12MM (RB)	(B)	CSK M3.5 X 12MM	(C)	CSK M3.5 X 15MM	(D)	CSK M4.7 X 25MM (ZB)
							
	4 unit		12 unit		5 unit		12 unit
(E)	EURO SCREW M6 X 9MM	(F)	JCBC(W) M6 X 40MM	(G)	WASHER (M5)	(H)	WOOD DOWEL Ø6 X 20MM
							
	8 unit		16 unit		2 unit		12 unit
(J)	WOOD DOWEL Ø8 X 25MM	(K)	BOLT DOWEL 20 X 5MM	(L)	CAM 15/15	(M)	CAM 15/12
							
	16 unit		23 unit		15 unit		8 unit
(N)	MTL KNOB HDL MC4 X 22MM	(P1) & (P2)	DRAWER SLIDE (350MM)	(Q1) & (Q2)	DRAWER SLIDE (350MM)	(R)	PLASTIC LEG STUD
							
	2 sets		2 sets		2 sets		4 unit
(S)	STEEL L BRACKET (BZ) 1.5 X 76.5	(T)	ALLEN KEY	(U)	BACKPLY STOPPER		
							
	1 unit		1 unit		4 unit		

Tools Required

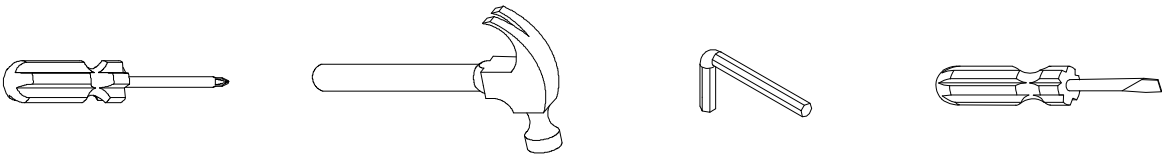


Ruler - Use this to measure your screws (mm)

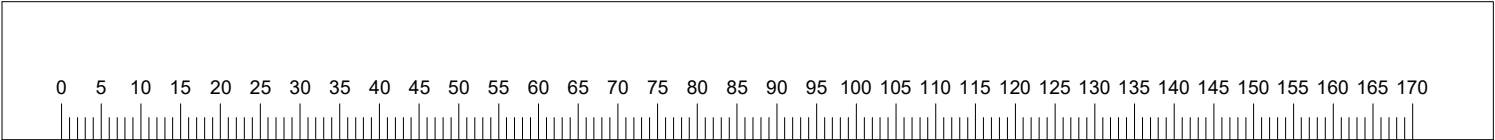

Using Camlocks

SPECIAL TIPS FOR FITTING CAM-LOCKS AND CAM-BOLTS



CAM-LOCK

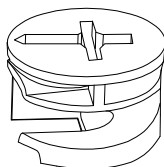

Align with long point of cross

WHEN FITTING CAMS




ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING CAM-BOLTS
TURN CLOCKWISE UNTIL SECURE

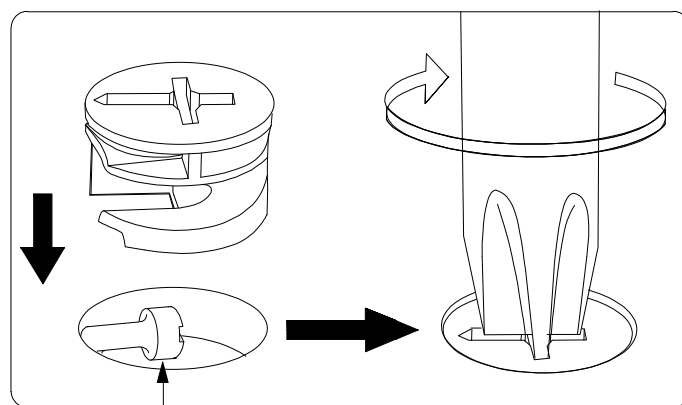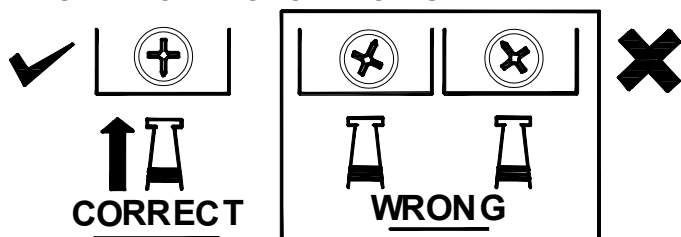

Lock head needs to be in centre


CAM-BOLT











Tighten until shoulder is flush
with panel. Do not overtighten
or undertighten (see example
below)

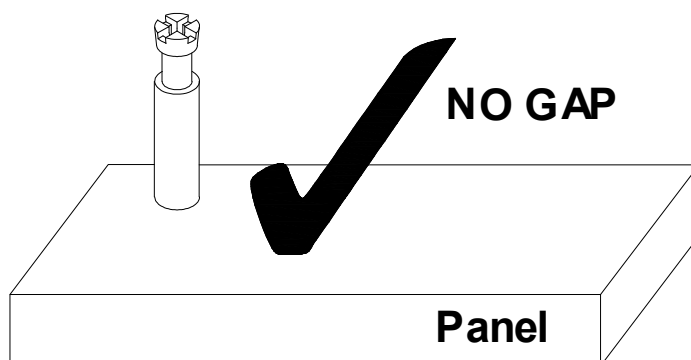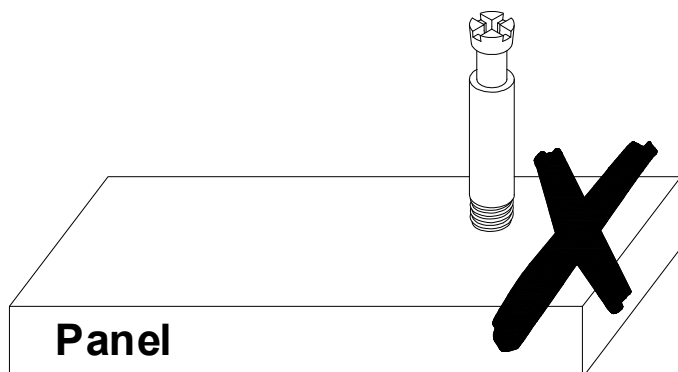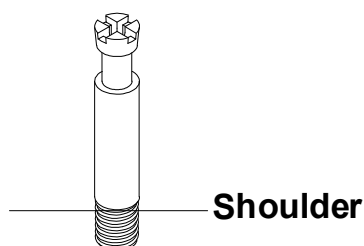

Assembly Instructions

Step 1

		
H X 8	J X 16	K X 6

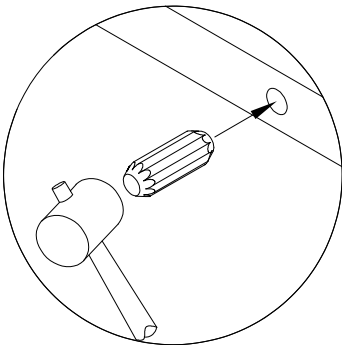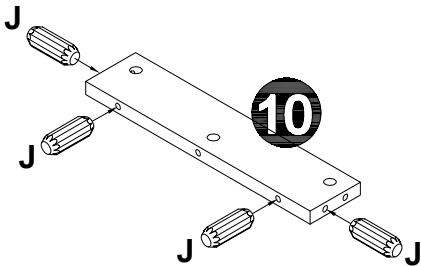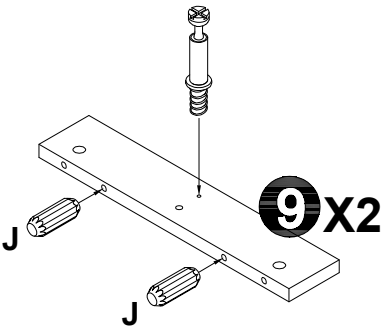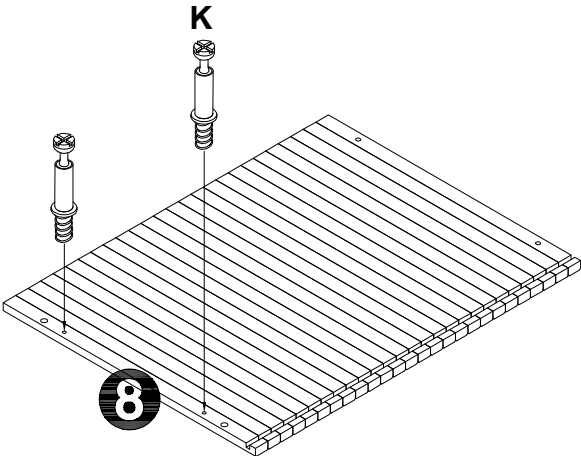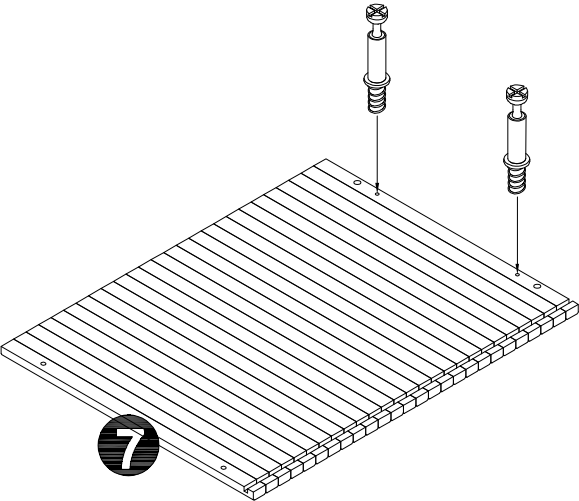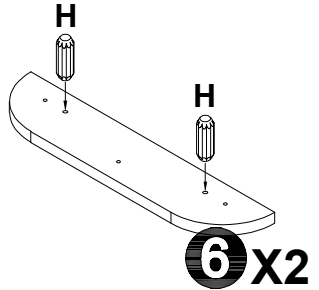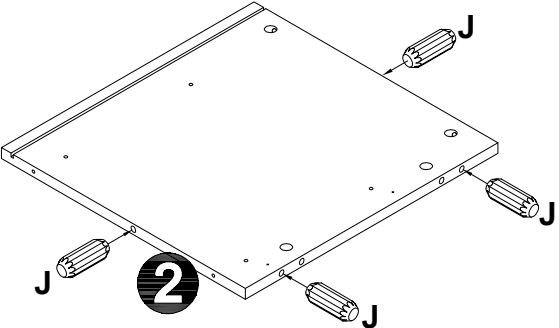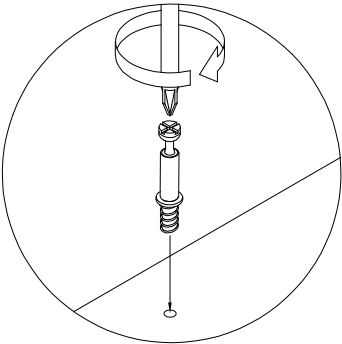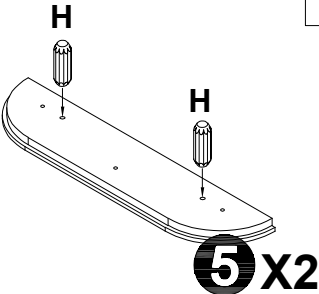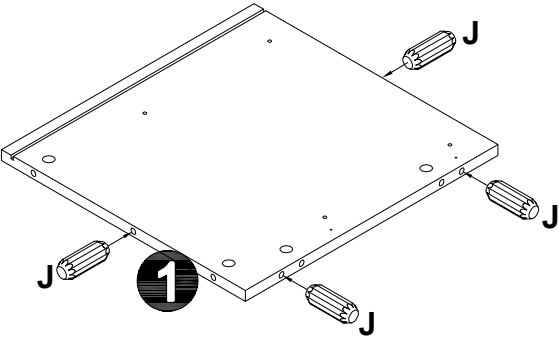

Step 2

1

2

A X 4	E X 8	P1 & P2 X 2SETS

P2

P1

PLEASE ENSURE TO FIX THE SCREWS AS PER POINTED HOLES INSTRUCTION TO AVOID DISTORTION OF OVERALL LOOK OF PRODUCTS.

Step 3

3


4

5


6

D X 12

Step 4

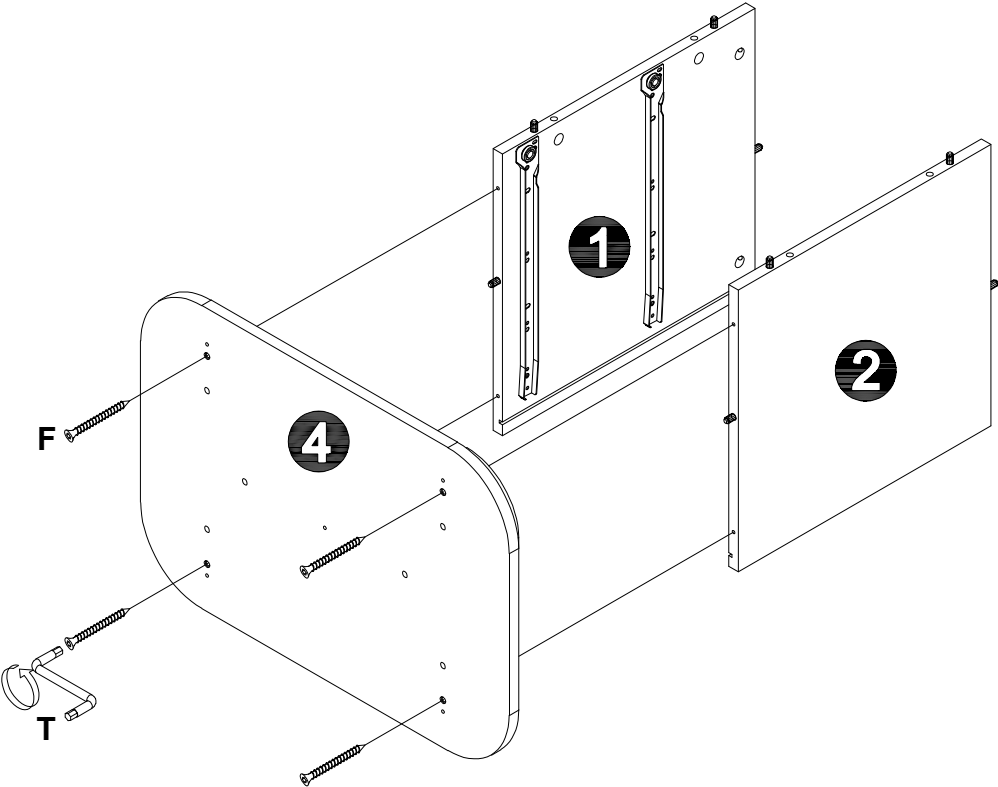


FX 4




T

Step 5

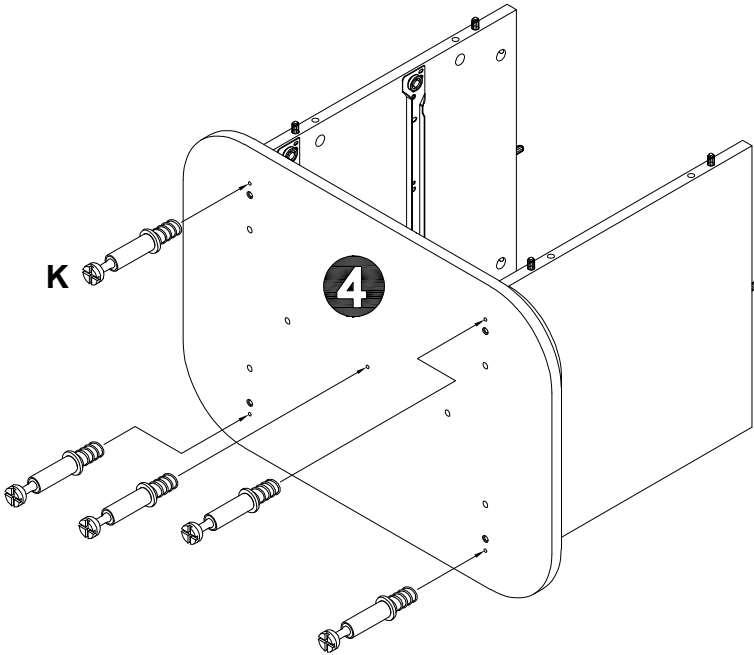



K X 5

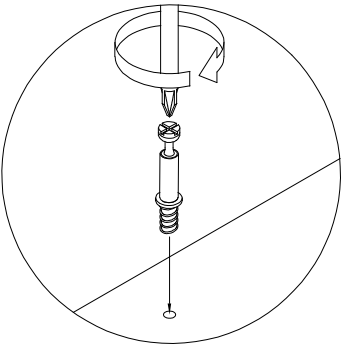

Step 6





L X 2

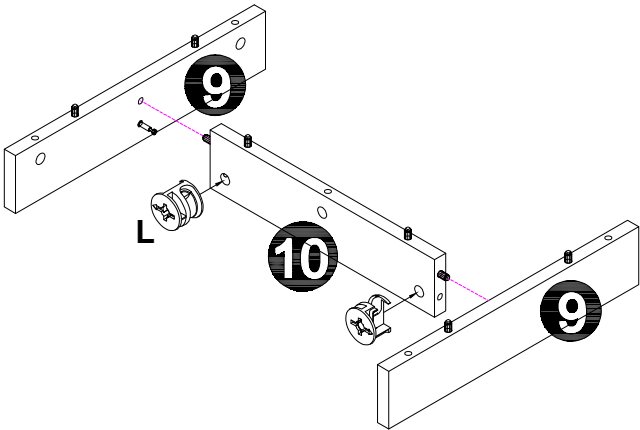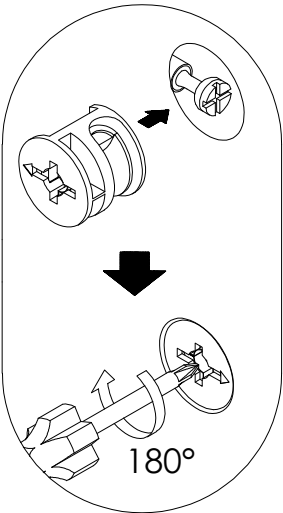


Step 7





L X 5

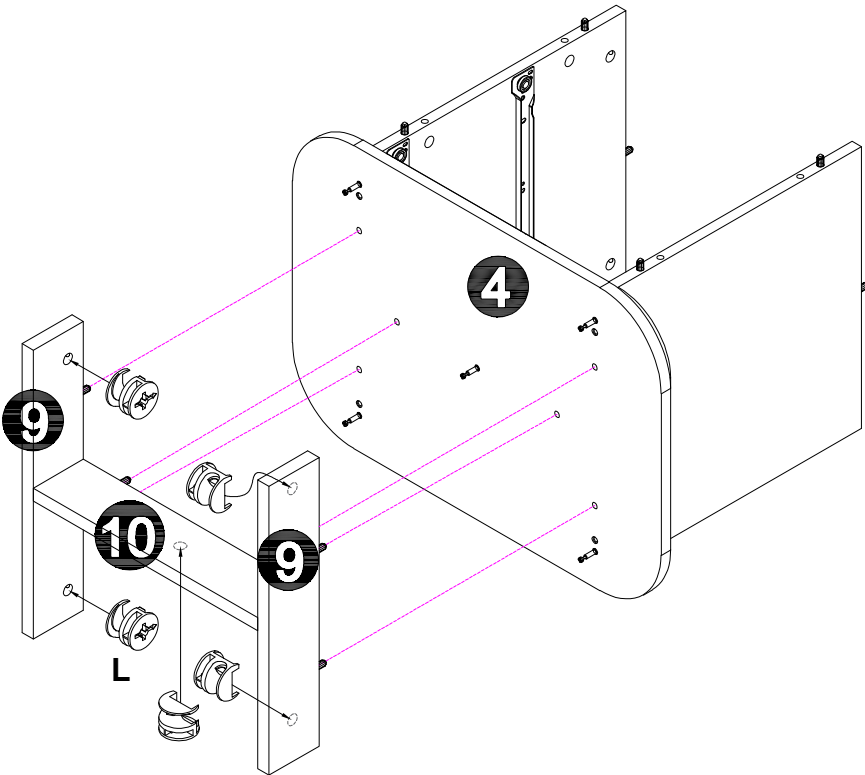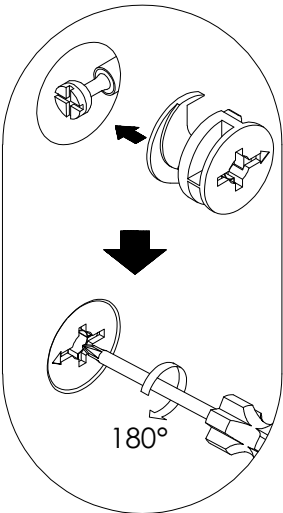


Step 8





R X 4

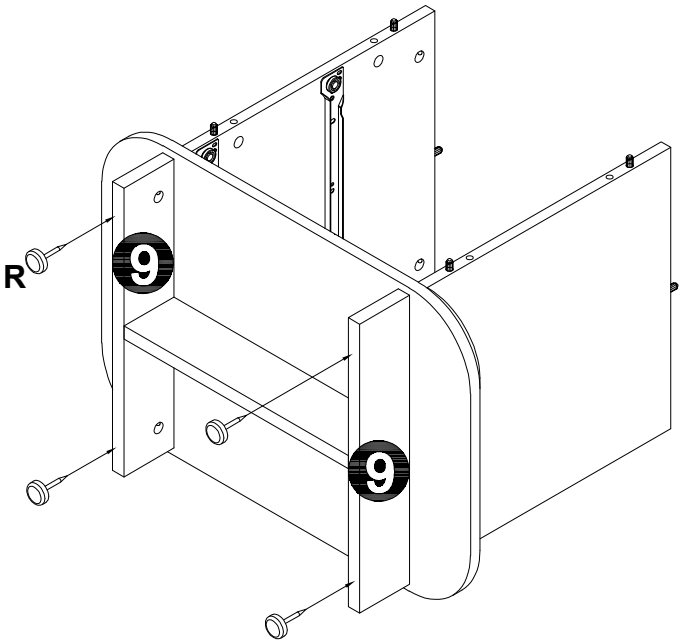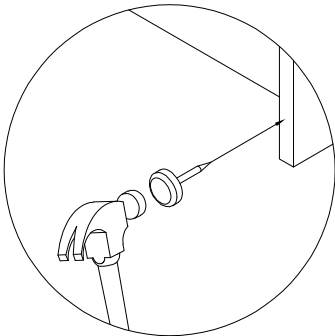

Step 9


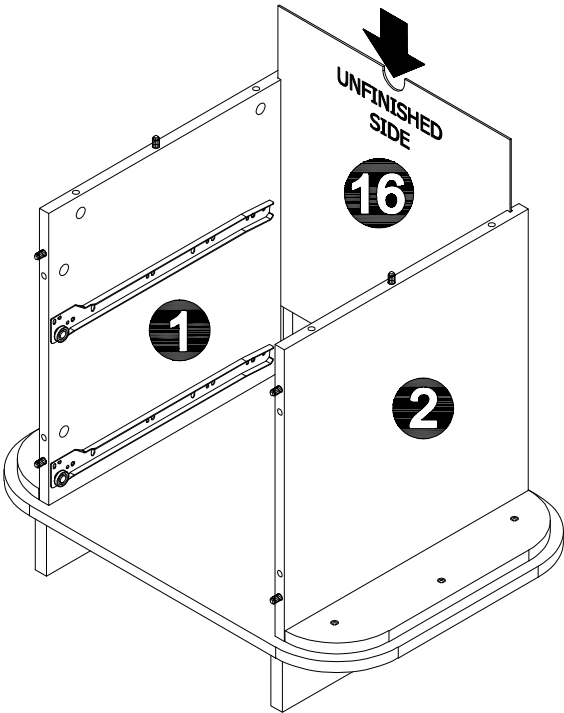


Step 10

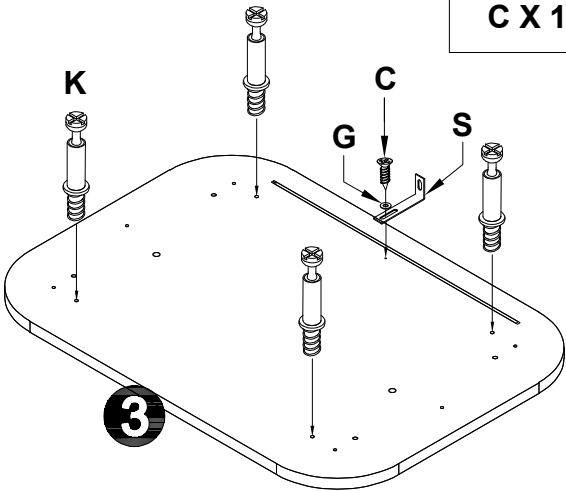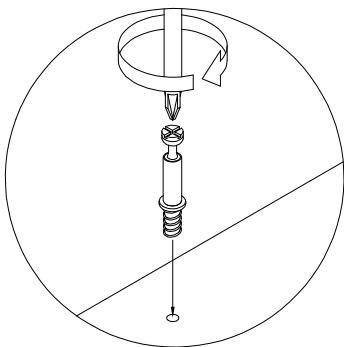

			
C X 1	G X 1	K X 4	S X 1

Step 11

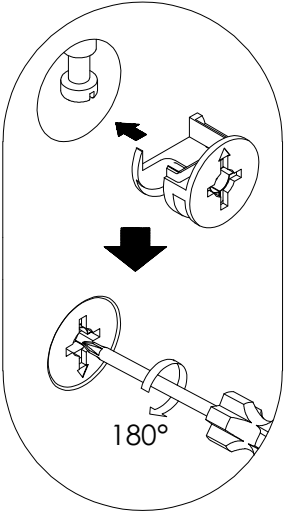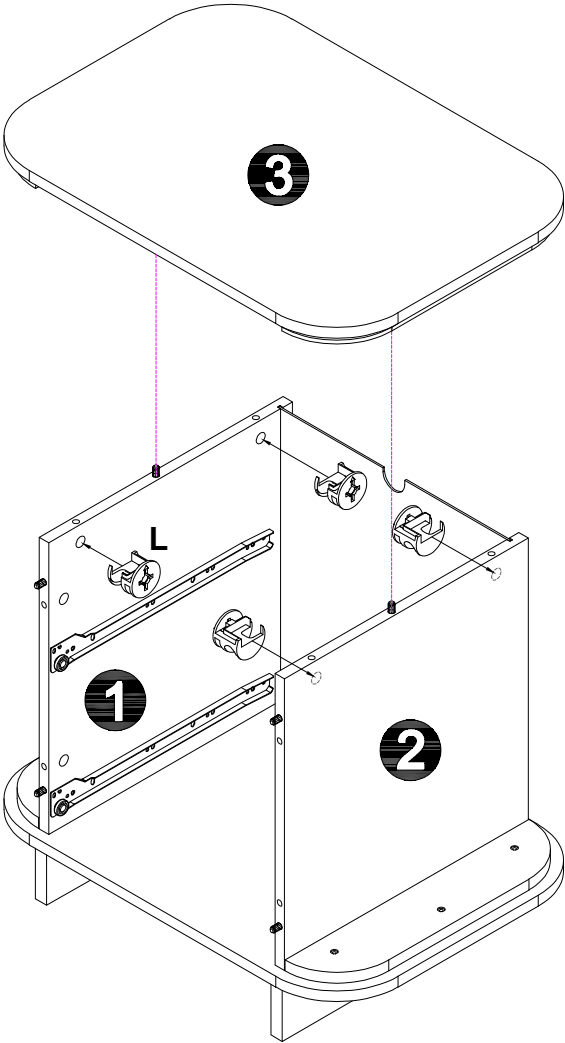



L X 4

Step 12




L X 2

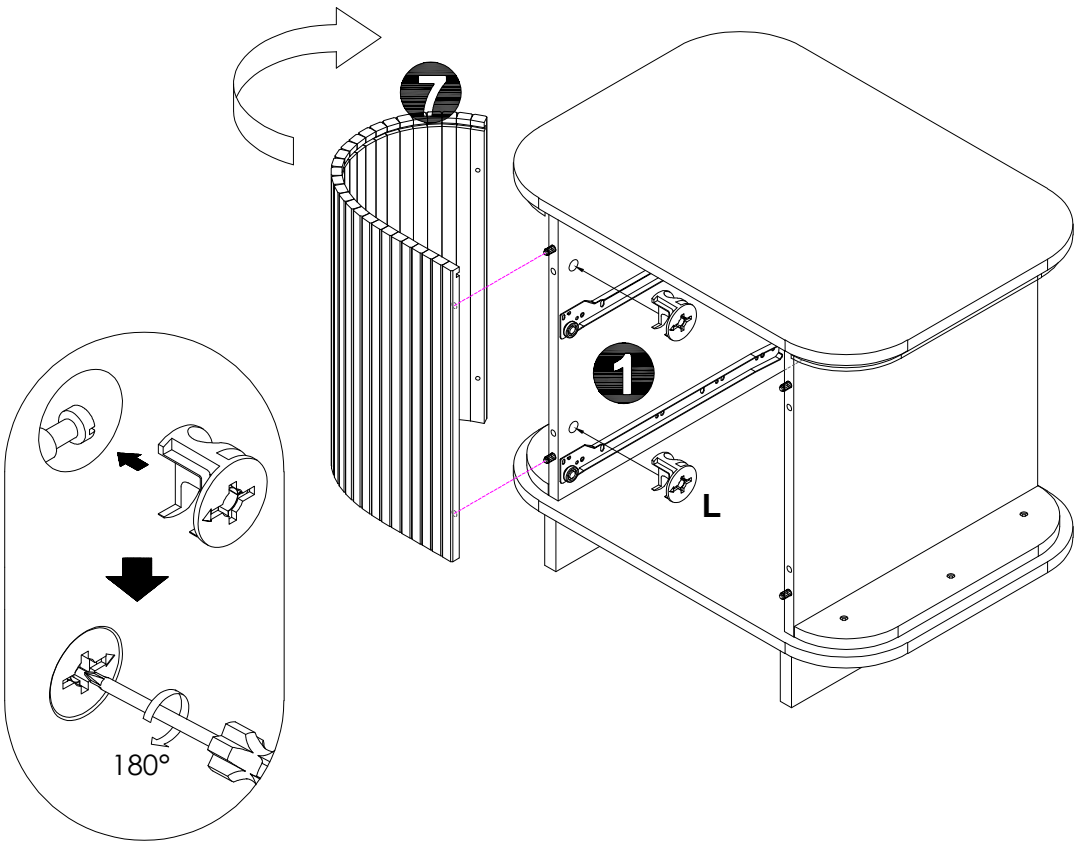


Step 13



F X 2




T

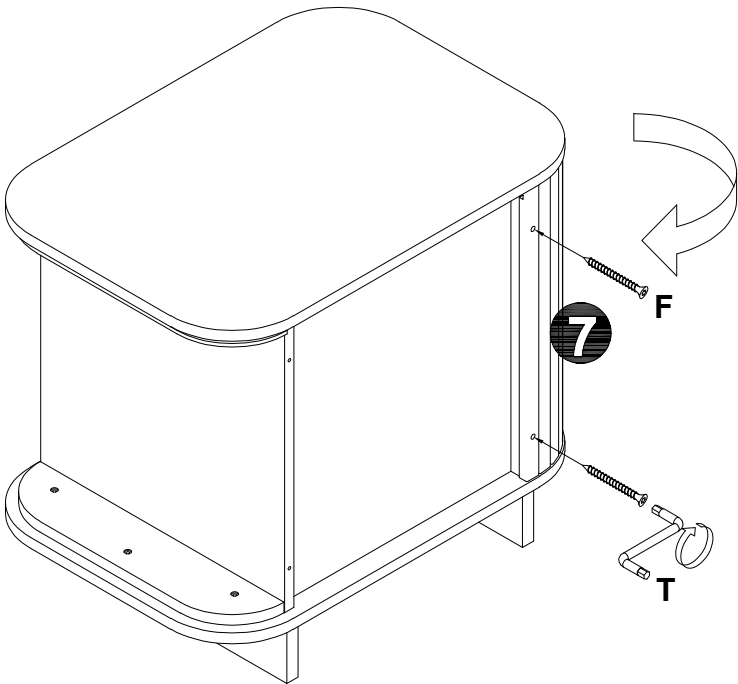

Step 14




L X 2

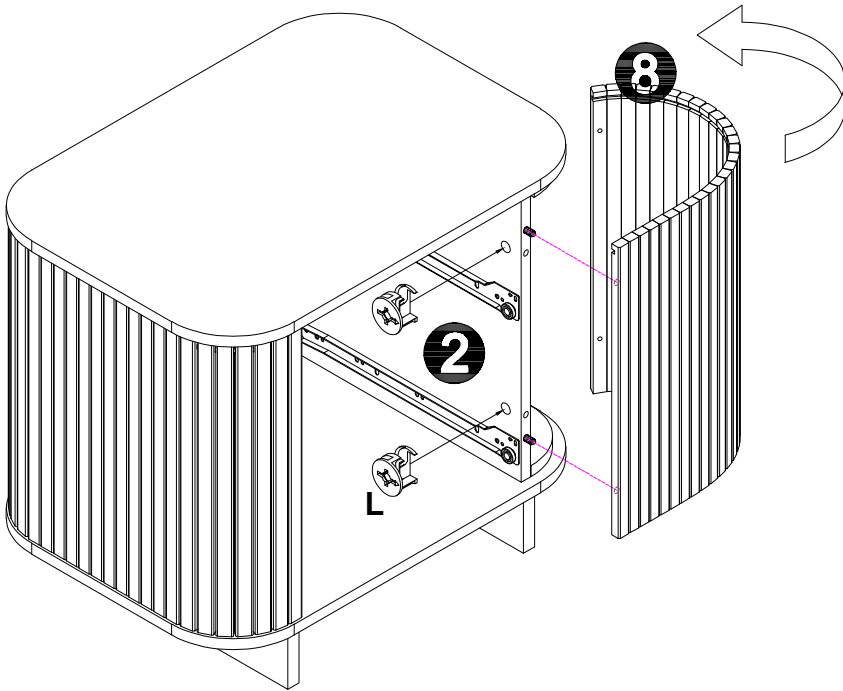


Step 15




F X 2




T

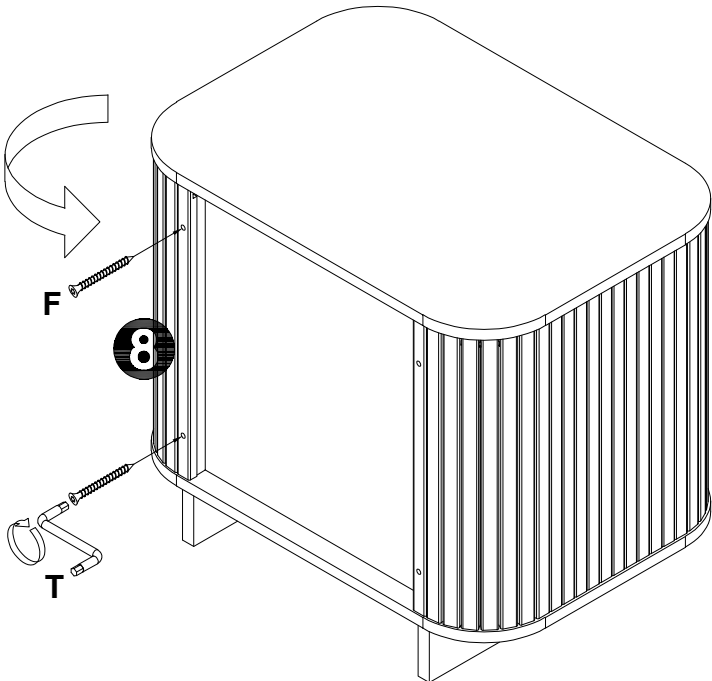


Step 16

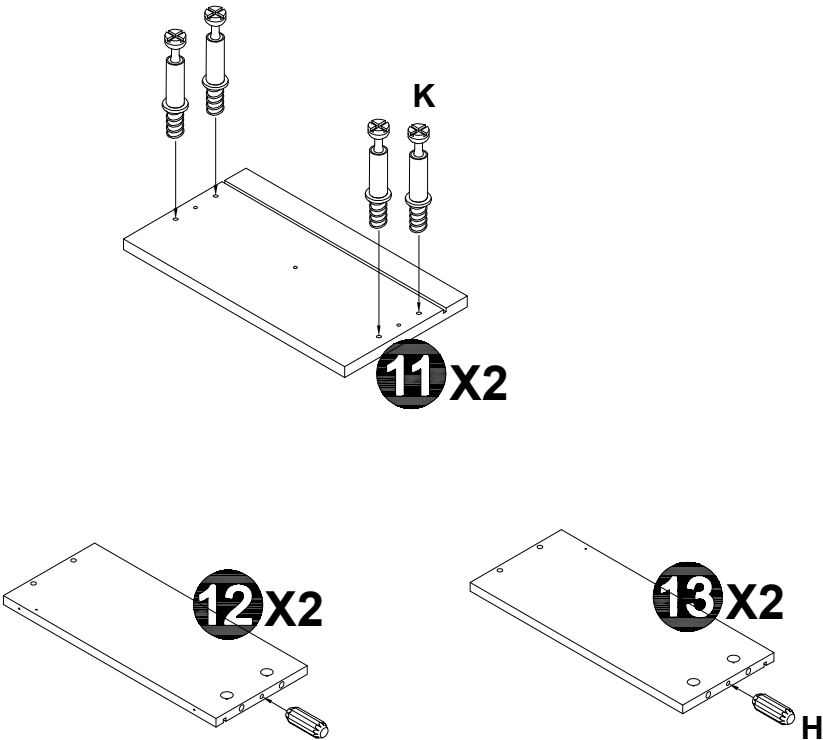


	
H X 4	K X 8

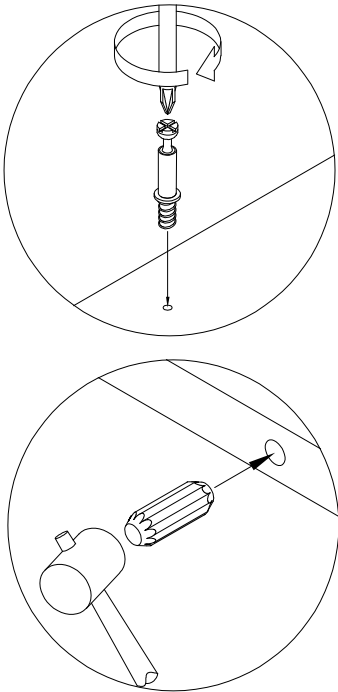

Step 17

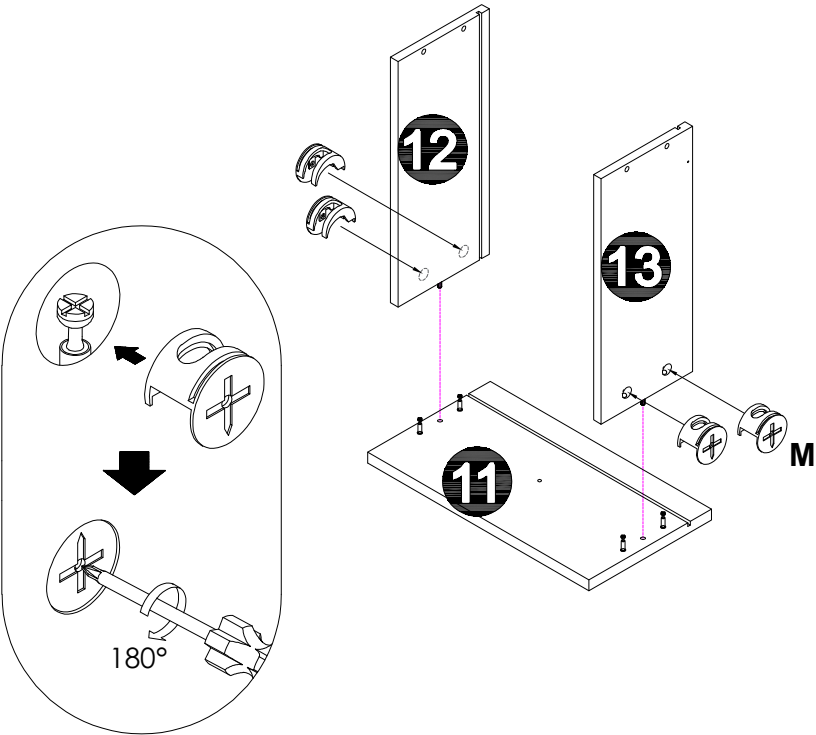



M X 8

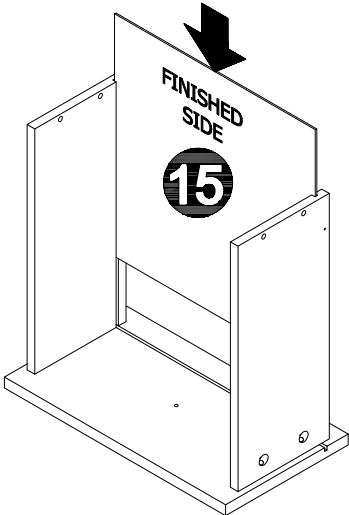

X2

Step 18


	
F X 8	T

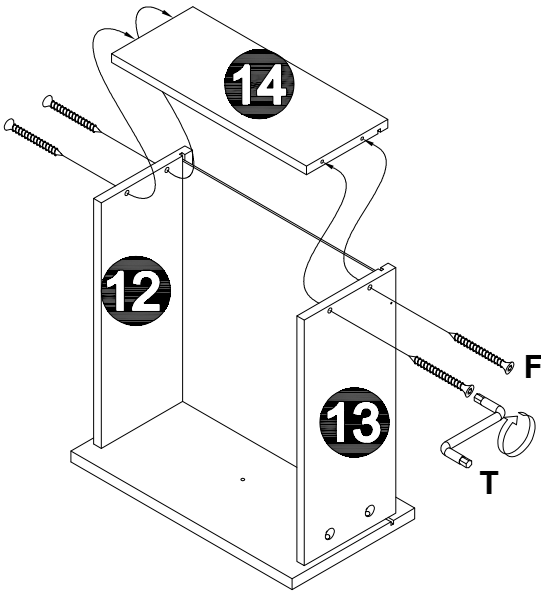

X2


Step 19







N X 2SETS

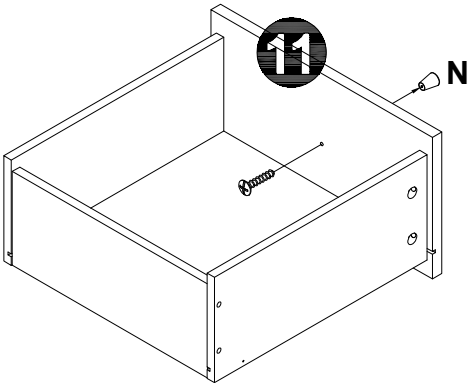

X2


Step 20

	
B X 12	Q1 & Q2 X 2SETS

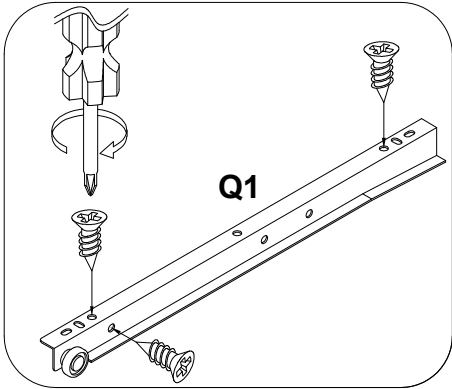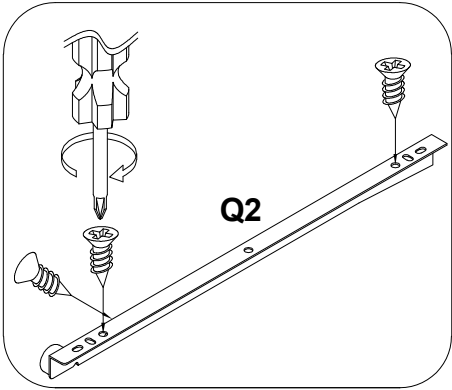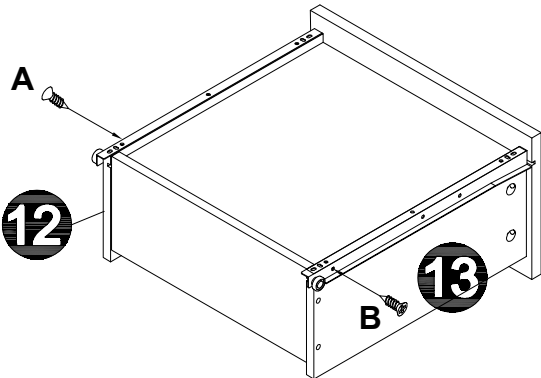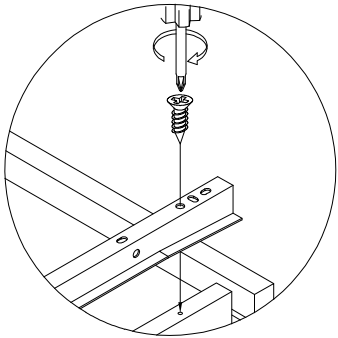
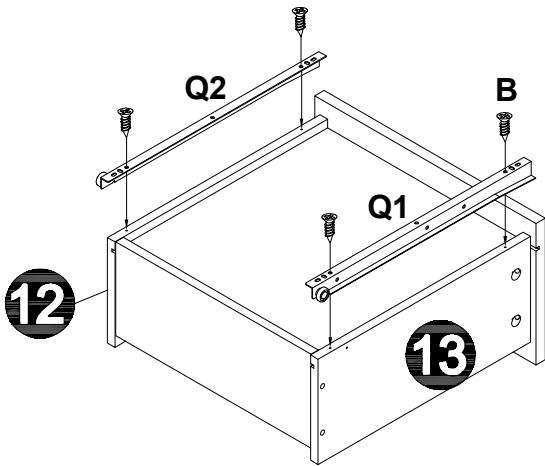


X2

Step 21

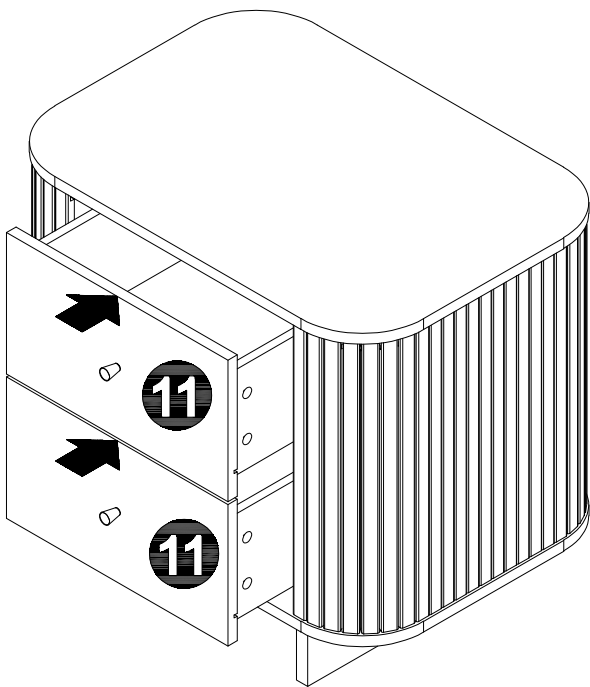

Step 22

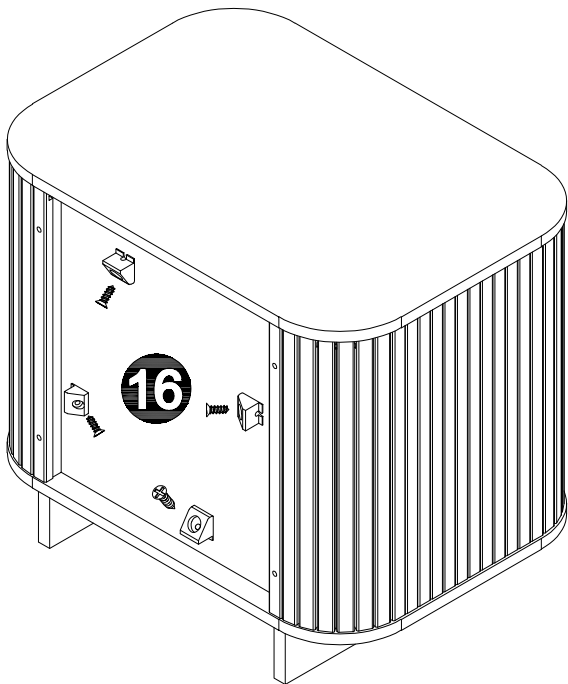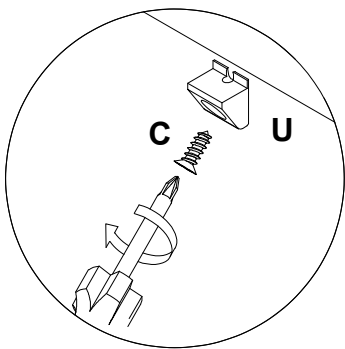

C X 4

U X 4

Step 23

Screw and wall plugs are not provided, please use appropriate fixtures for your wall.



G X 1

WALL

