

# Assembly Instructions




# Before Assembly

## Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

## QUICKFIT

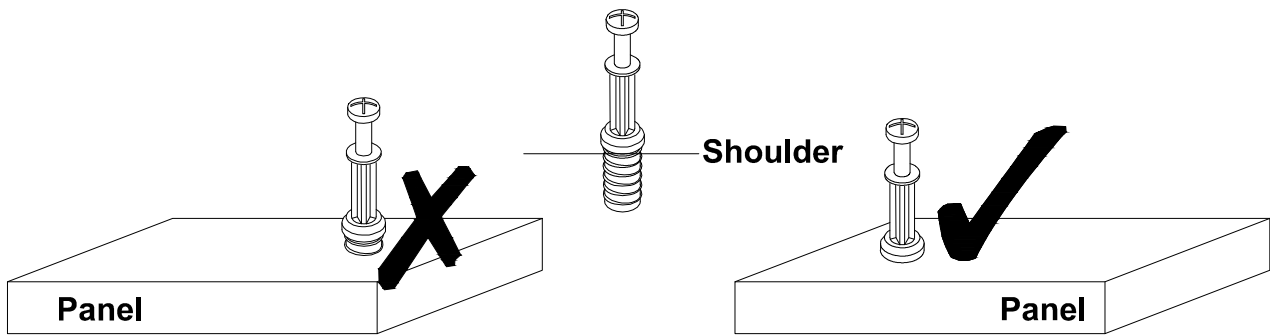

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


## CAM LOCK

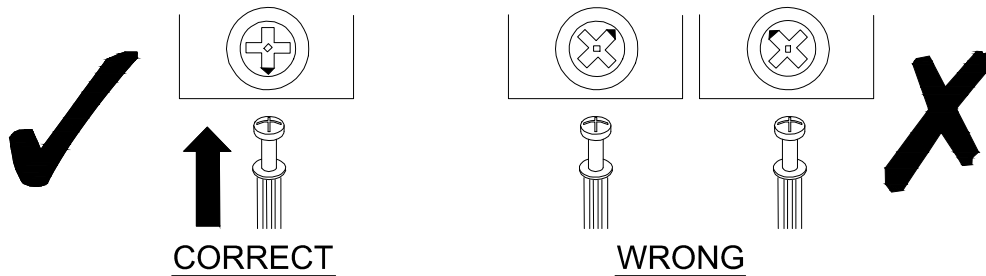

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.


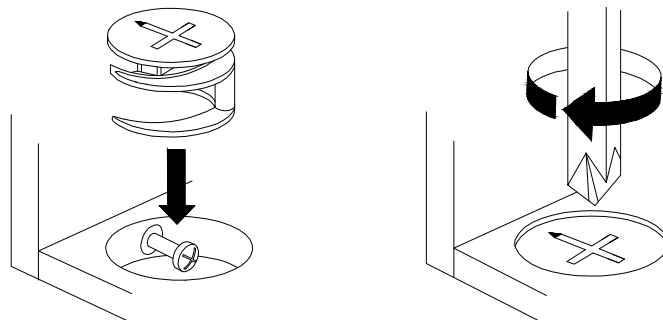


Turn cam lock clockwise to tighten.

# Before Assembly


## Tips Before Your Start

How to separate the drawer slider:

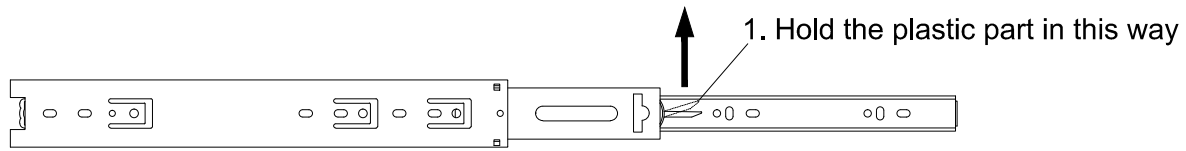


2. Pull out the inner slider for drawer box fixing

## Drawer Front Alignment

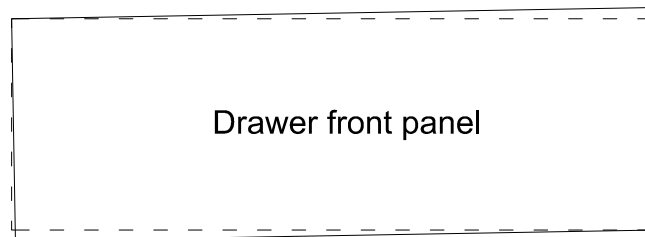


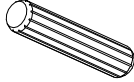
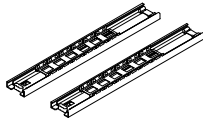
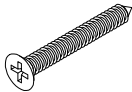

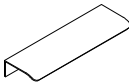

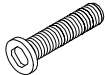

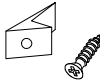
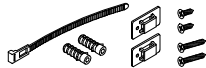




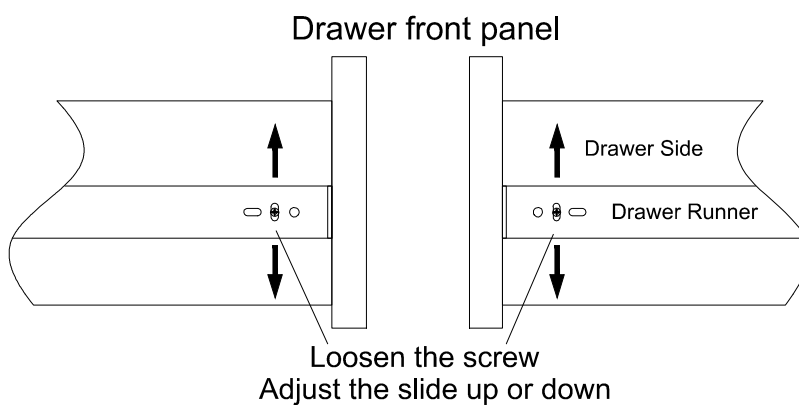If the drawer front panel is NOT level after being assembled, then...




Loosen the screws on the left and right hand side, then adjust the drawer slide up or down, until the drawer fronts are even/level, then tighten the screws.


# Part List

<p><b>No. A</b> Quantity:68 Pcs Cam Lock Dowel 8*28mm</p> 	<p><b>No. B</b> Quantity:68 Pcs Cam φ15</p> 	<p><b>No. C</b> Quantity:68 Pcs Sticker Ø20</p> 	<p><b>No. D</b> Quantity:6 Pcs Dowel 8*30mm</p> 
<p><b>No. E</b> Quantity:6 Sets Drawer Slider 10"</p> 	<p><b>No. F</b> Quantity:24 Pcs Screw M4*30mm</p> 	<p><b>No. G</b> Quantity:60 Pcs Screw M3.5*12mm</p> 	<p><b>No. H</b> Quantity:6 Pcs Handle 120*38*17mm</p> 
<p><b>No. I</b> Quantity:4 Pcs Slip Mat Ø20</p> 	<p><b>No. J</b> Quantity:6 Pcs Screw M8*35mm</p> 	<p><b>No. K</b> Quantity:1 Pcs Allen Key 5#</p> 	<p><b>No. L</b> Quantity:8 Sets Plastic Wedge</p> 
<p><b>No. M</b> Quantity:2 Sets Anti-falling Parts</p> 	<p><b>No. N</b> Quantity:1 Pcs Full Thread Screw M8*40mm</p> 	<p><b>No. O</b> Quantity:1 Pcs Adjust The Foot</p> 	

# Product structure

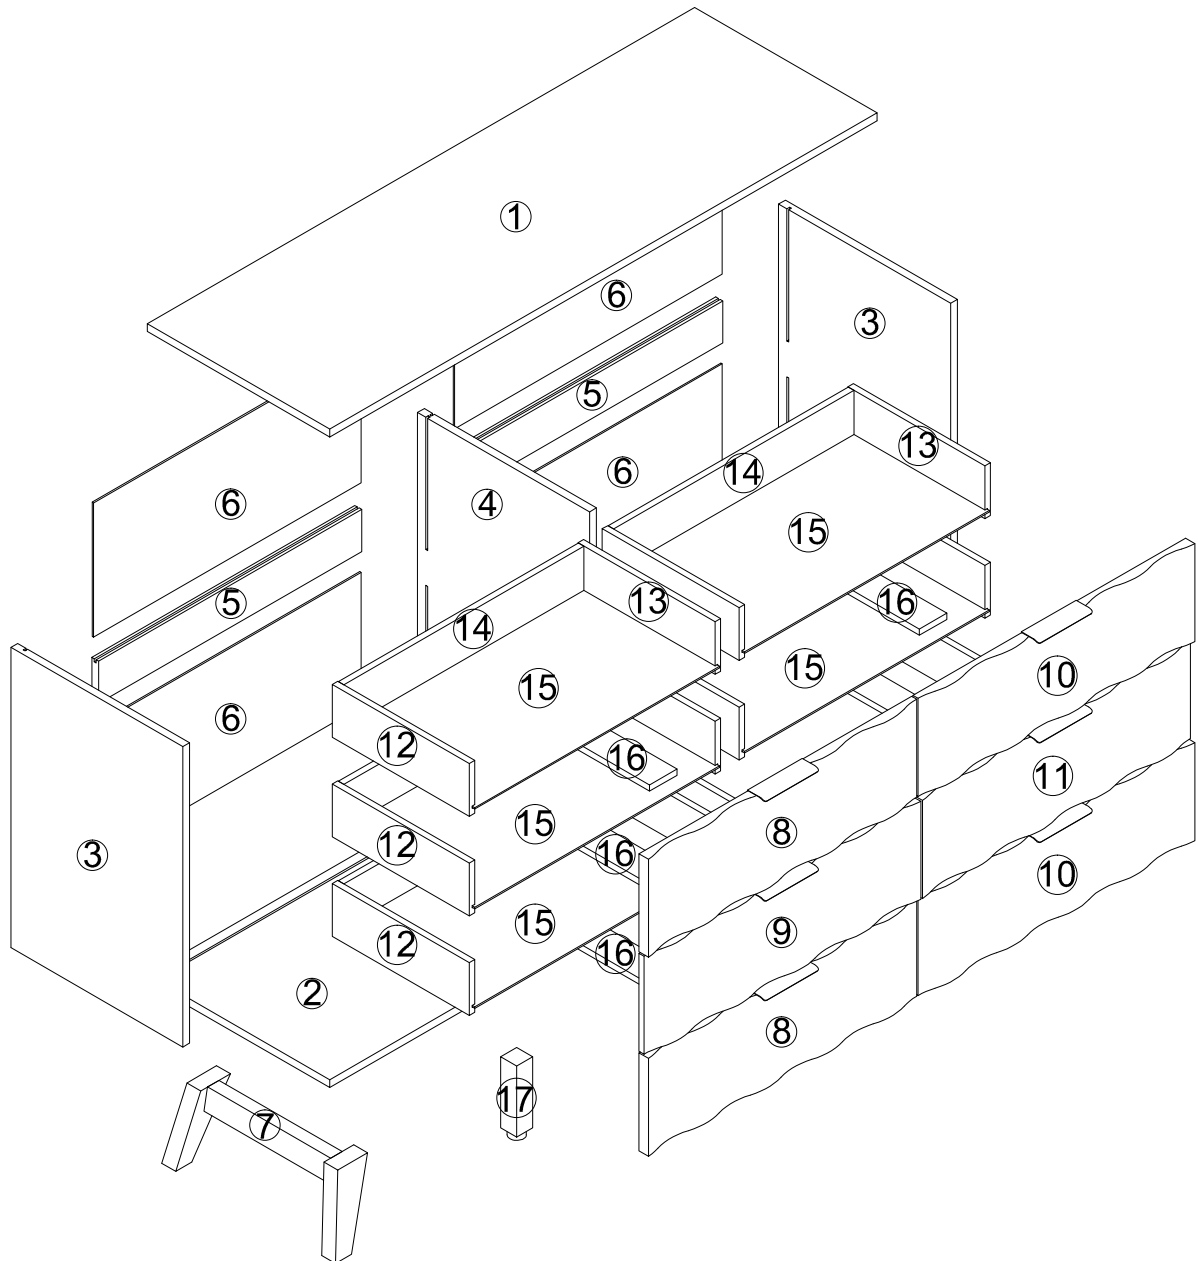

# STEP 1

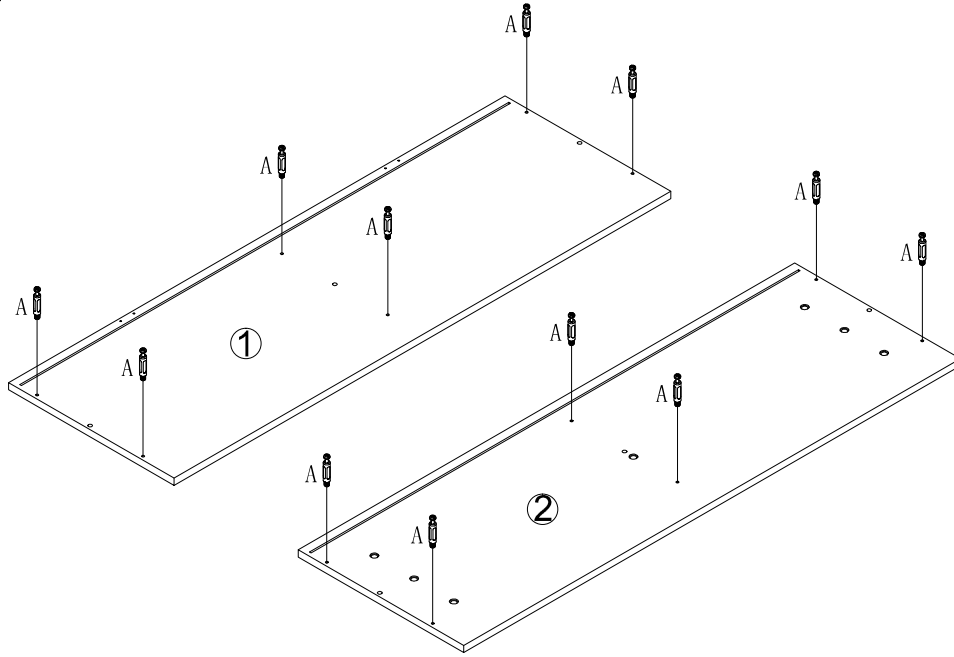



No. A  
Quantity: 12 Pcs  
8\*28 mm



# STEP 2




The first screw hole should corresponded with the board location hole

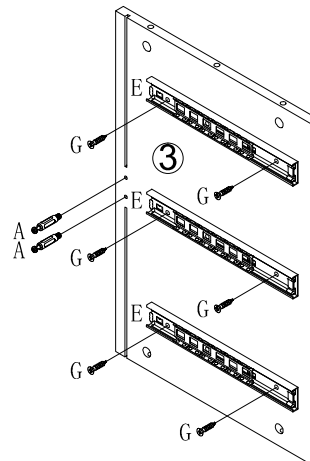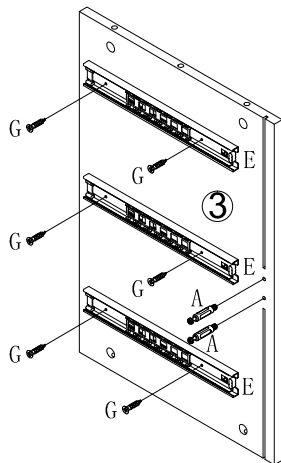

No. A  
Quantity: 4 Pcs  
8\*28 mm




No. E  
Quantity: 3 Sets  
10"




No. G  
Quantity: 12 Pcs  
M3.5\*12mm



# STEP 3




The first screw hole should correspond with the board location hole

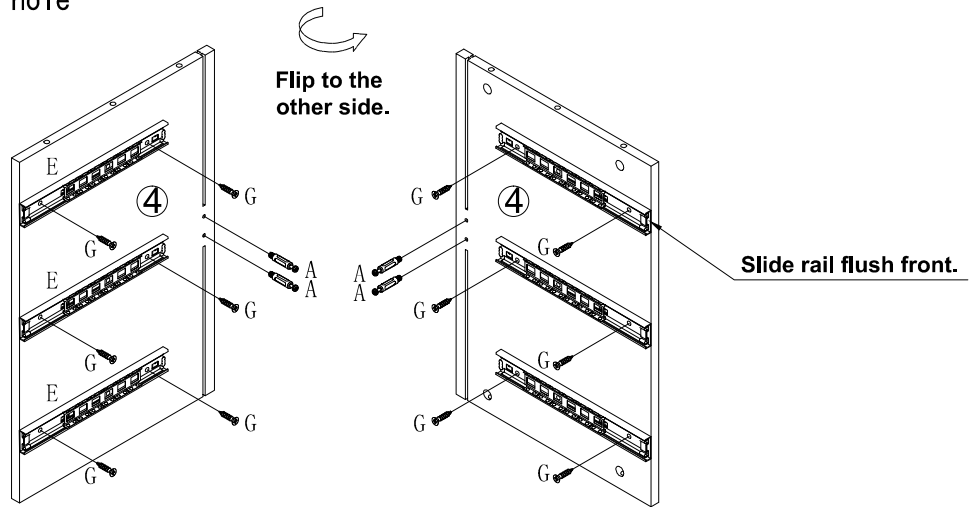

No. A  
Quantity: 4 Pcs  
8\*28 mm




No. E  
Quantity: 3 Sets  
10"



No. G  
Quantity: 12 Pcs  
M3.5\*14mm




# STEP 4

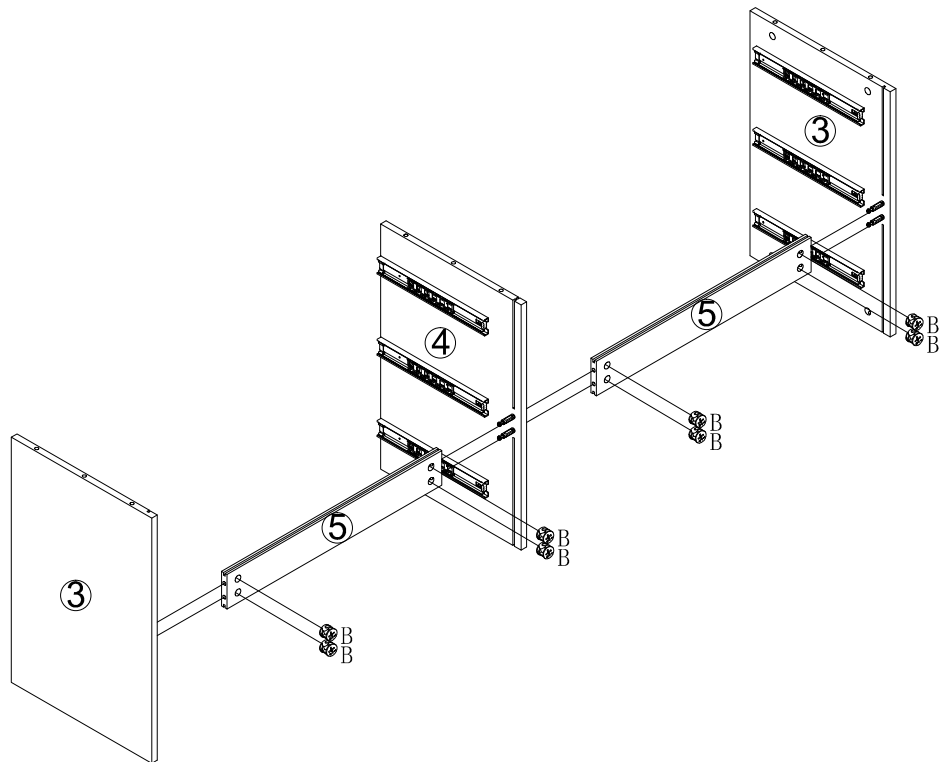


No. B  
Quantity: 8 Pcs  
Ø15



## STEP 5

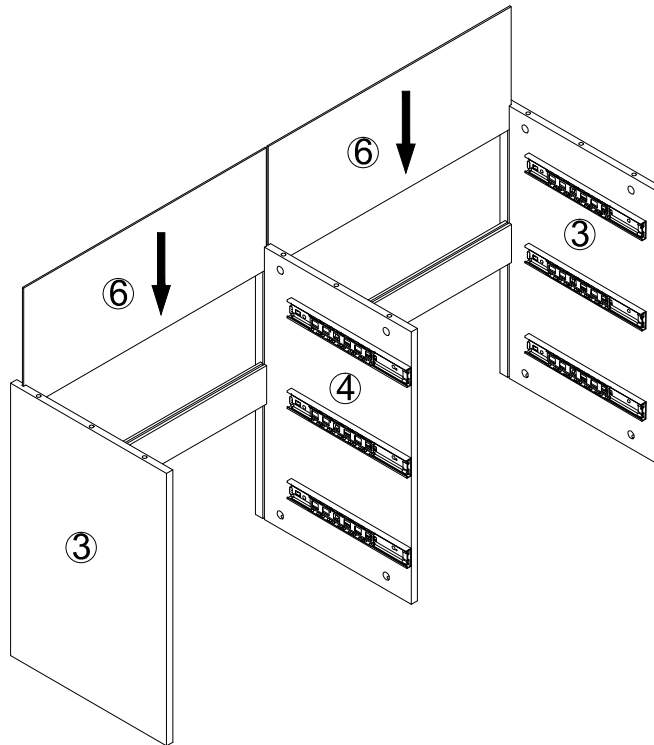


## STEP 6

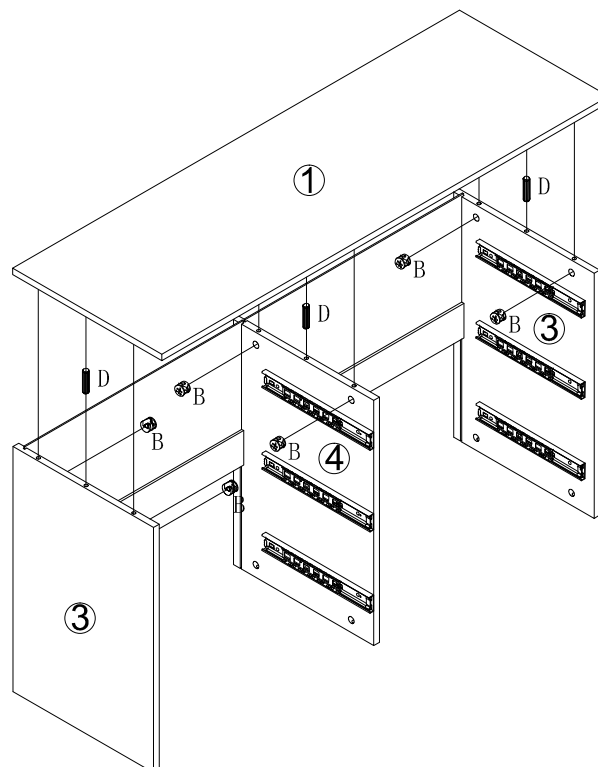


No. B  
Quantity: 6 Pcs  
Ø15




No. D  
Quantity: 3 Pcs  
8\*30mm



# STEP 7

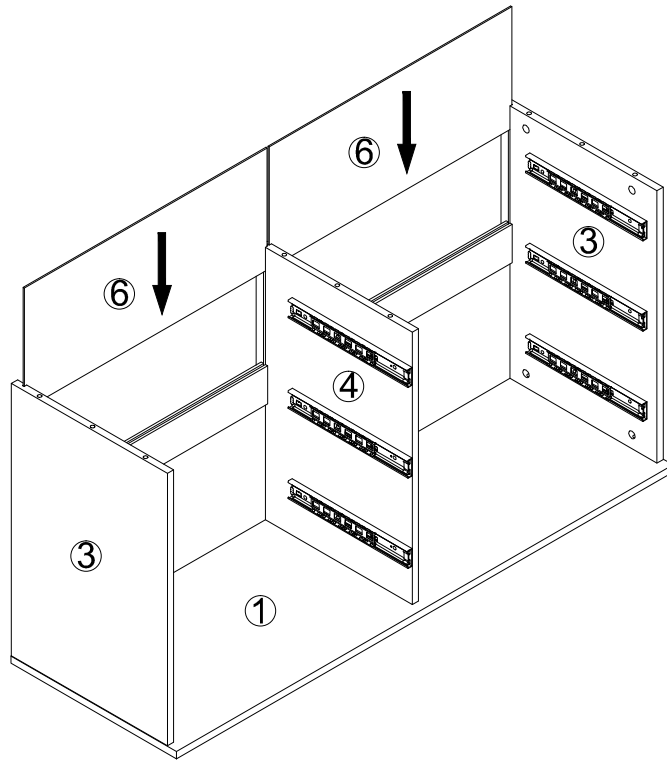


# STEP 8

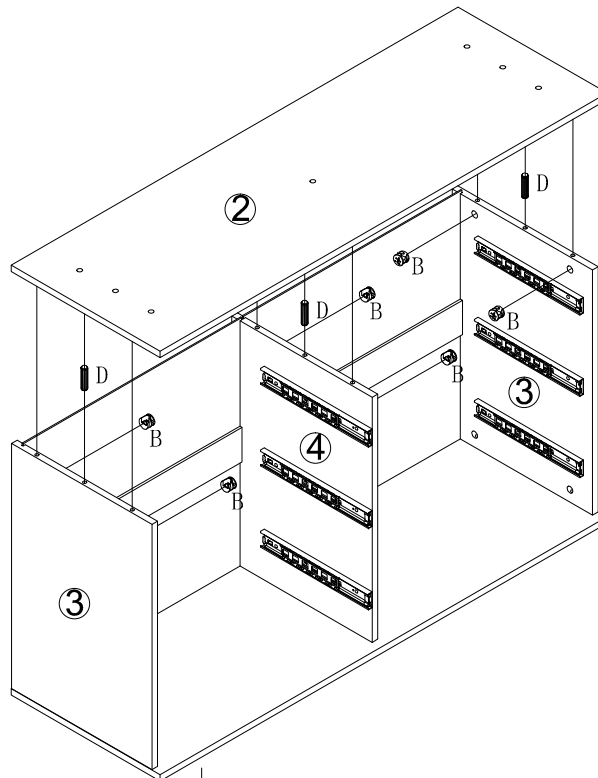


No. B  
Quantity: 6 Pcs  
Ø15



No. D  
Quantity: 3 Pcs  
8\*30mm



# STEP 9

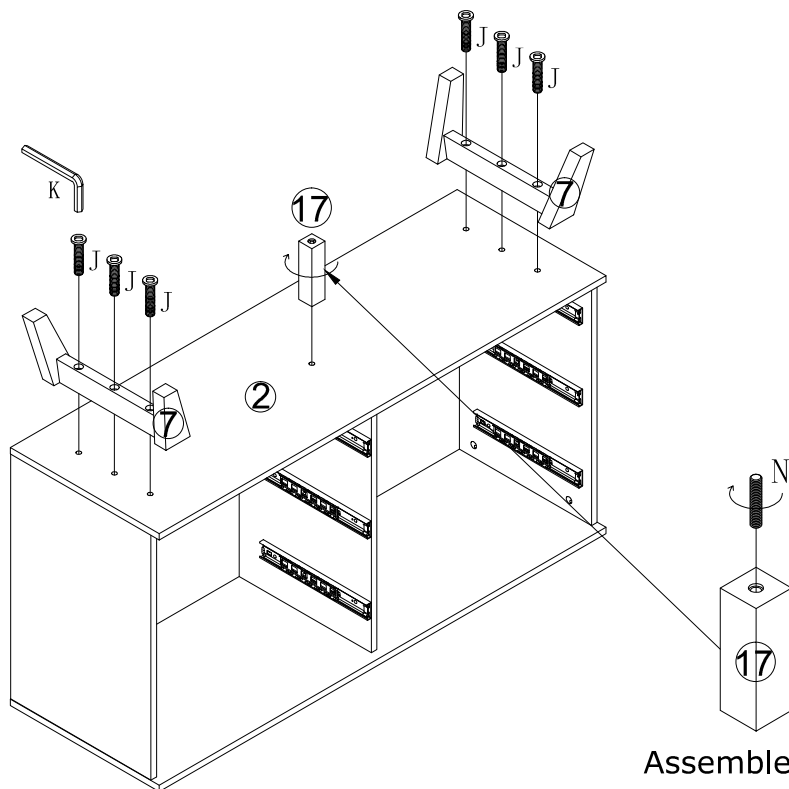

Assemble it first

No. J  
Quantity: 6 Pcs  
M8\*35mm




No. K  
Quantity: 1 Pcs  
5#



No. N  
Quantity: 1 Pcs  
M8\*40mm



# STEP 10

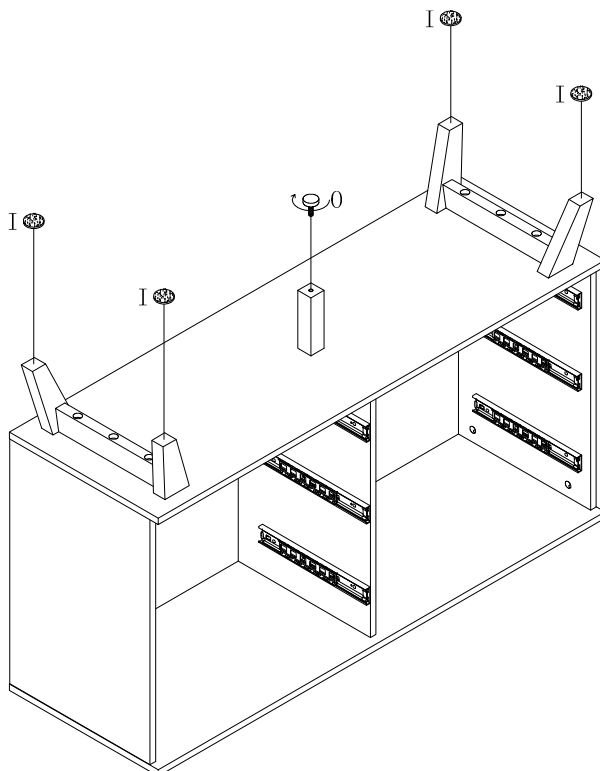


No. I  
Quantity: 4 Pcs  
Ø20



No. O  
Quantity: 1 Pcs



# STEP 11

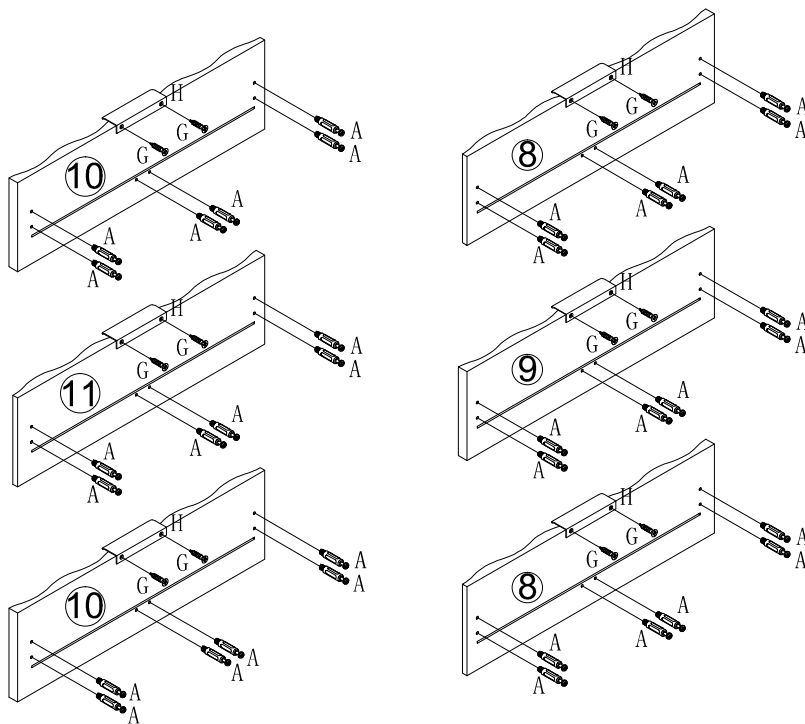


No. A  
Quantity: 36 Pcs  
8\*28 mm




No. G  
Quantity: 12 Pcs  
M3.5\*12mm



No. H  
Quantity: 6 Pcs  
120\*38\*17mm




# STEP 12

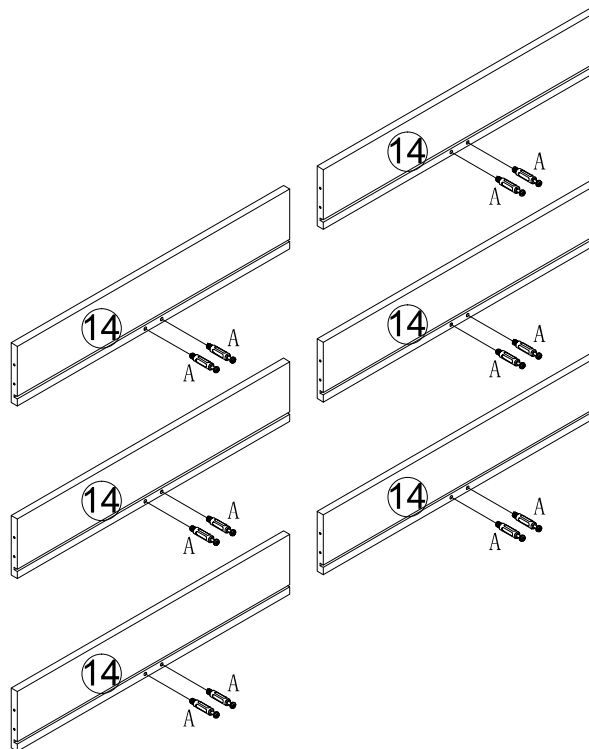

No. A  
Quantity: 12 Pcs  
8\*28 mm




# STEP 13

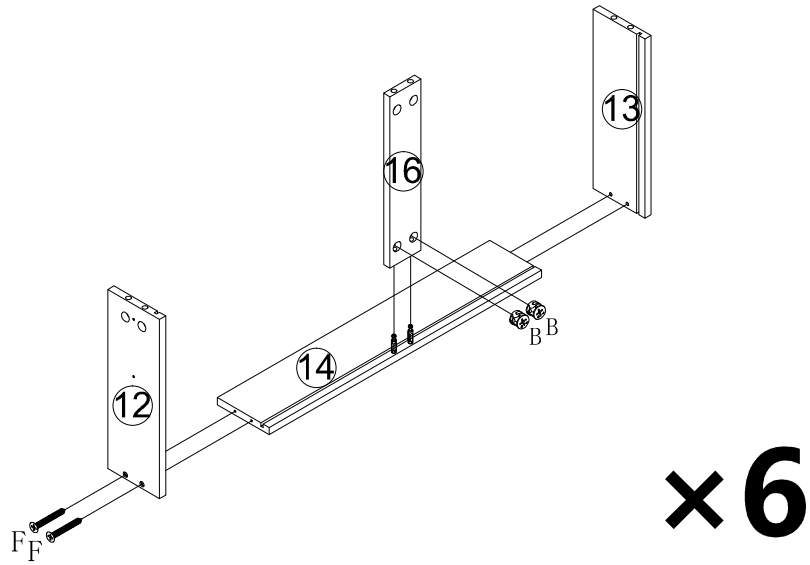


No. B  
Quantity: 12 Pcs  
Ø15




No. F  
Quantity: 24 Pcs  
M4\*30mm



# STEP 14

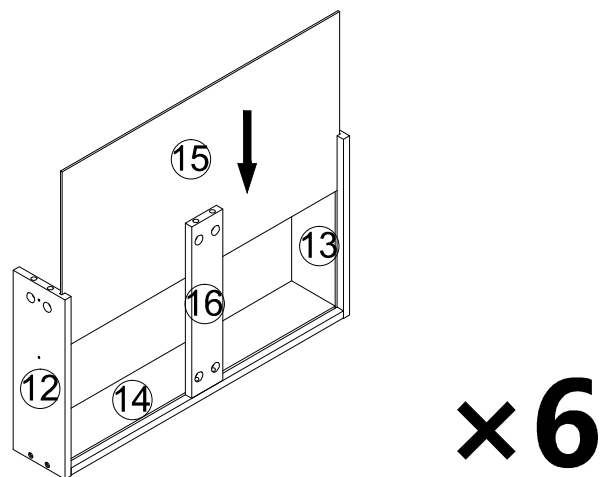

# STEP 15

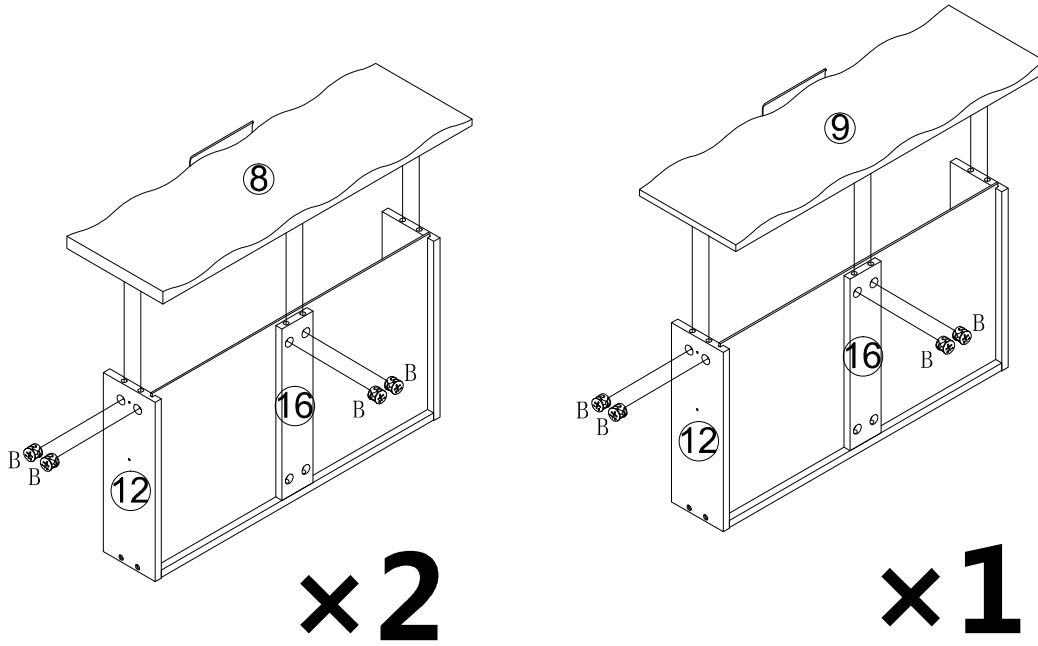


No. B  
Quantity: 18 Pcs  
Ø15




# STEP 16



The first screw hole should corresponded with the board location hole

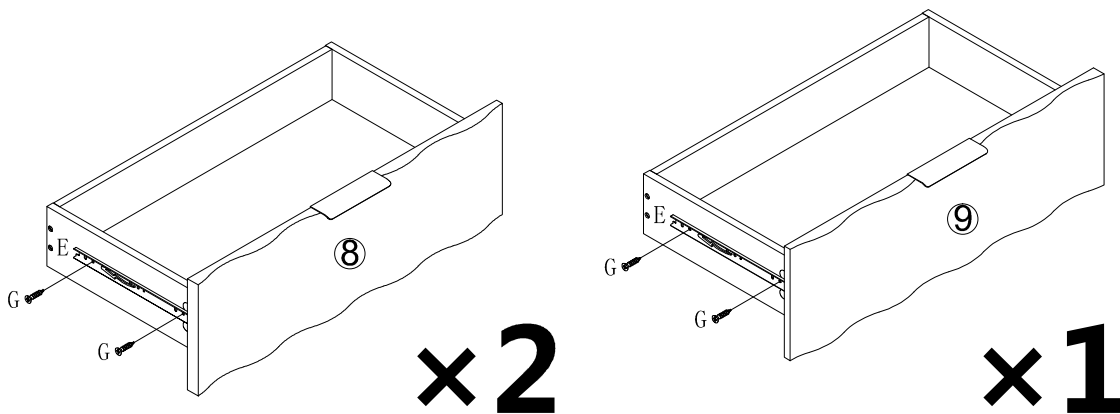


No. E  
Quantity: 3 Sets  
10"



No. G  
Quantity: 12 Pcs  
M3.5\*12mm



# STEP 17

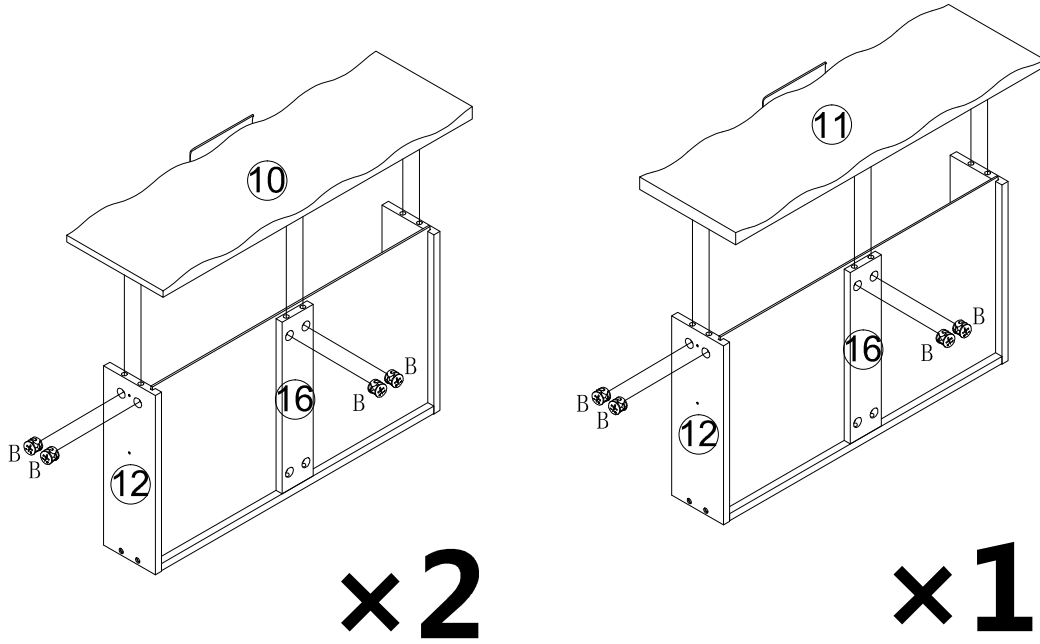


No. B  
Quantity: 18 Pcs  
Ø15




# STEP 18



The first screw hole should corresponded with the board location hole

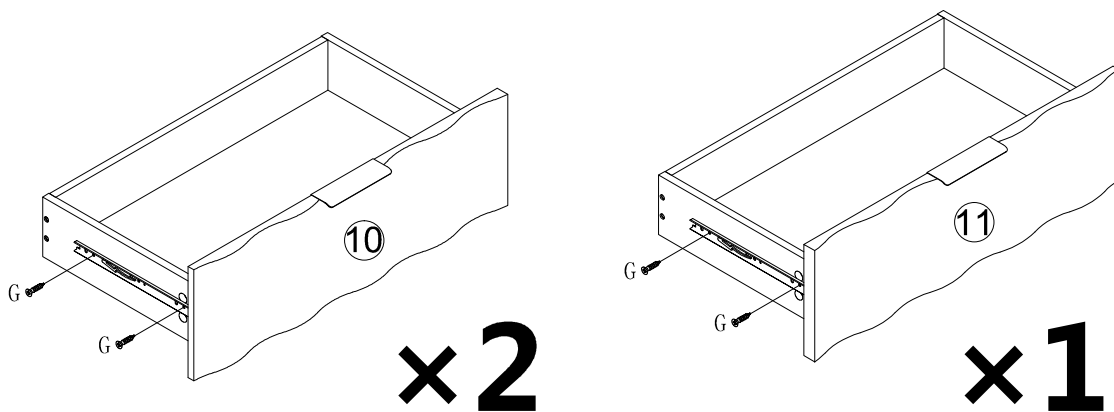


No. E  
Quantity: 3 Sets  
10"




No. G  
Quantity: 12 Pcs  
M3.5\*12mm




## STEP 19

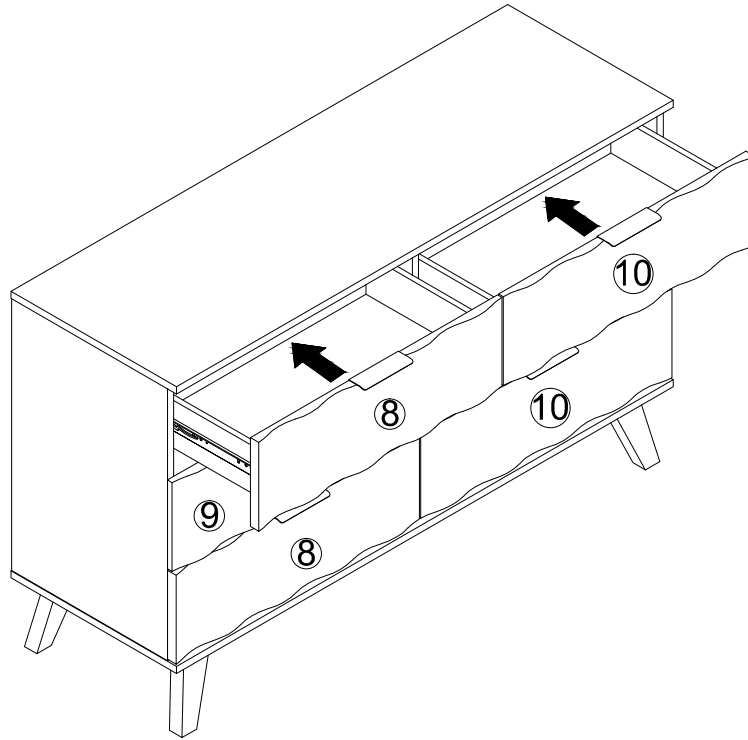








## STEP 20

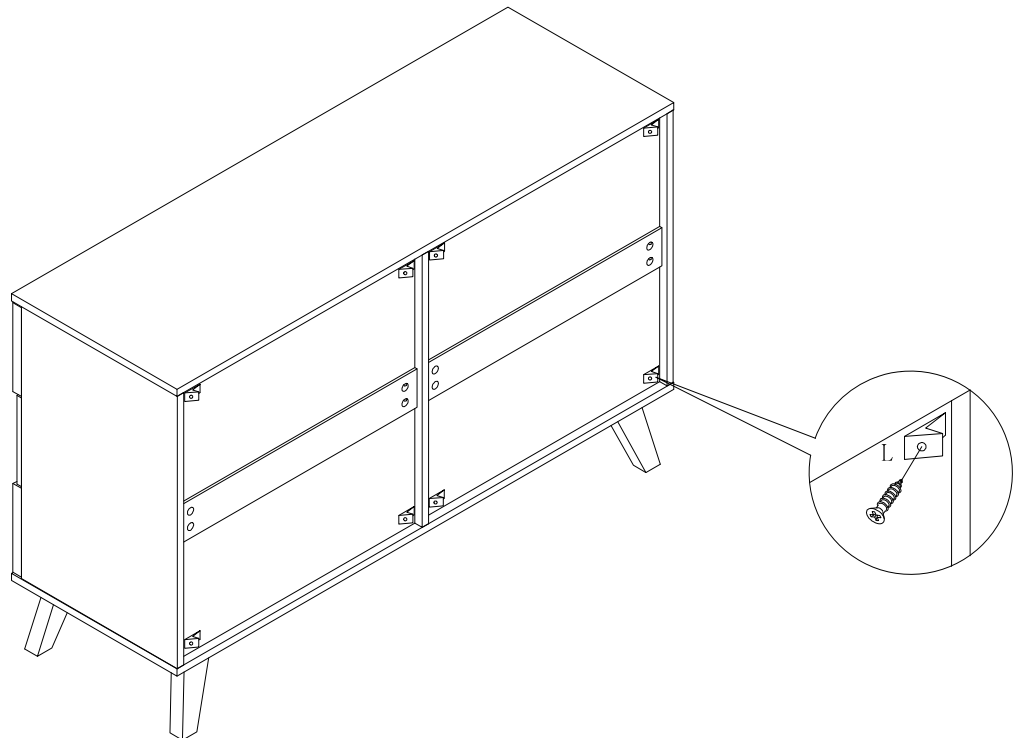


No. L  
Quantity: 8 Sets



# STEP 21

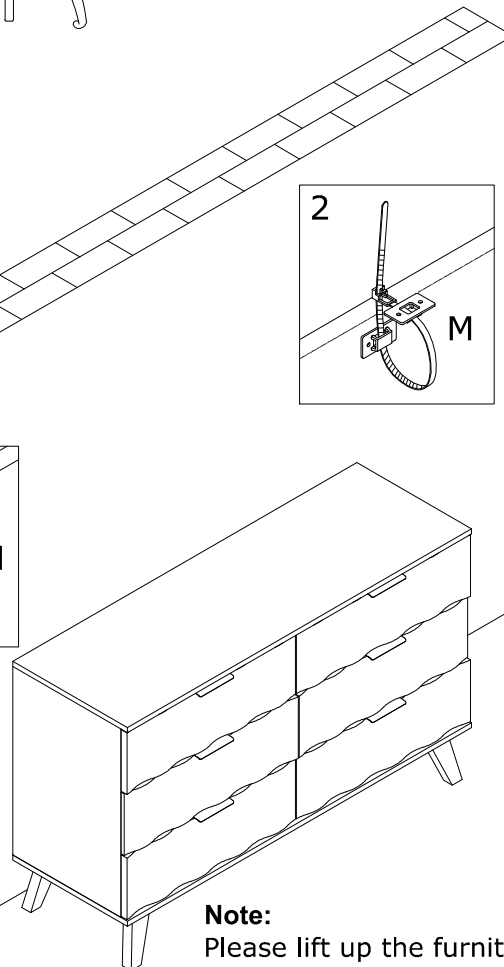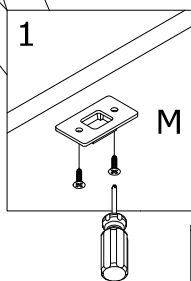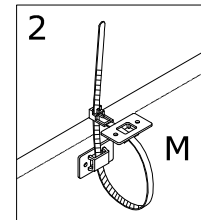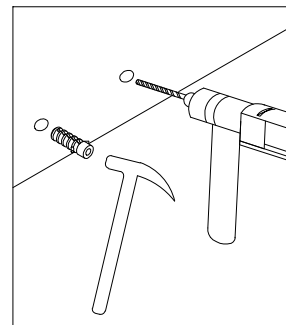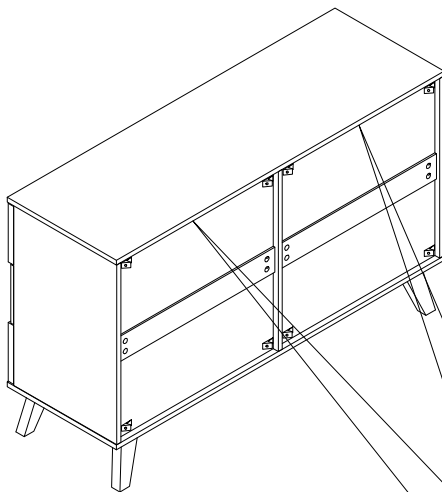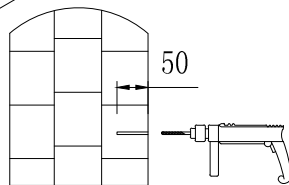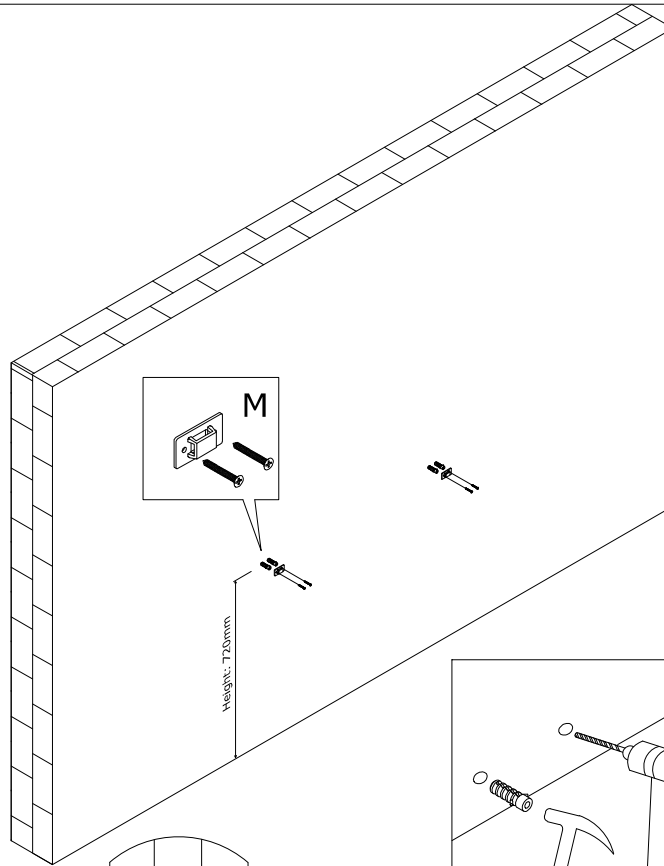

No. M  
Quantity: 2 Set



**Note:**  
Please lift up the furniture by two people when moving is needed.  
Dragging may cause the legs failure.