



# ASSEMBLY INSTRUCTION






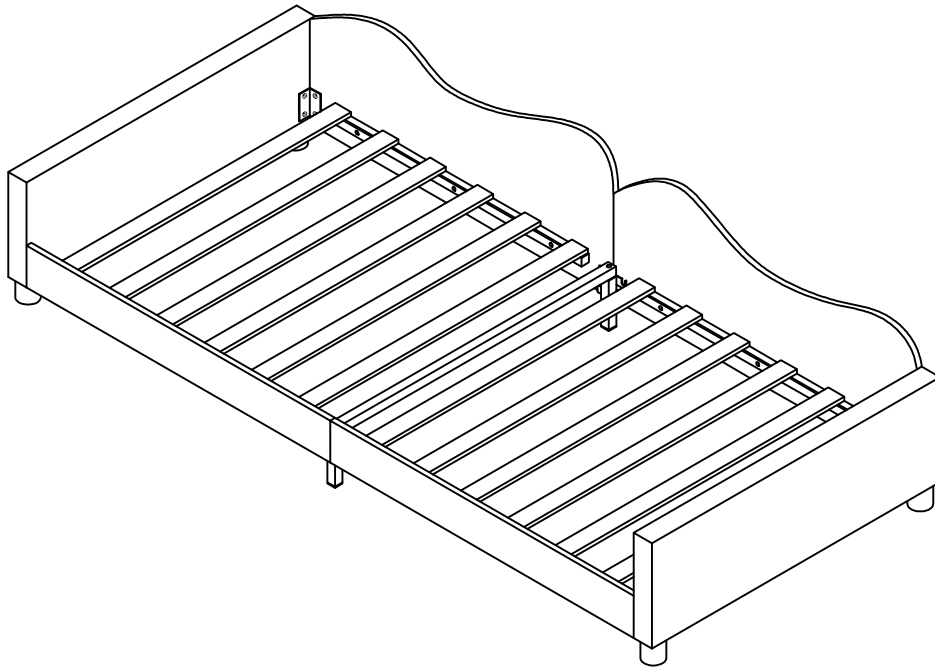




SKU:WF532068

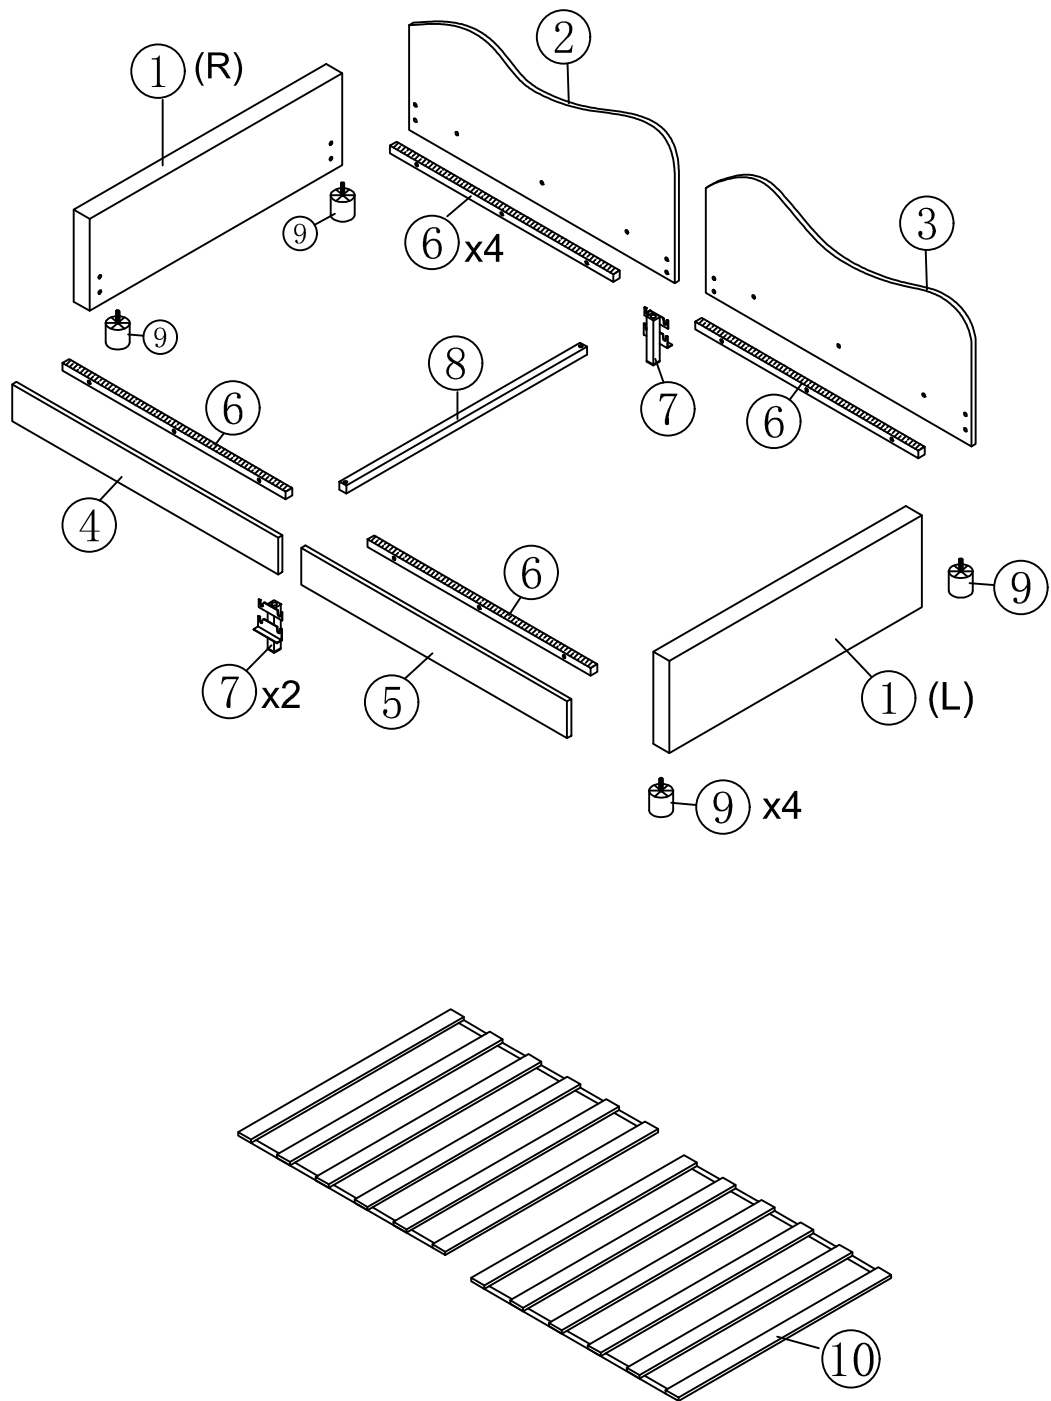

## Detail View

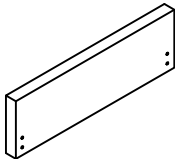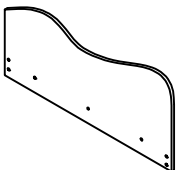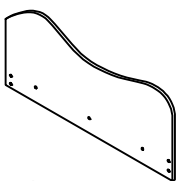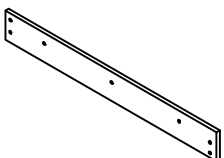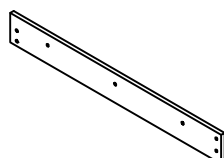






## PART LIST : WF532068

<b>1</b>  Armrest-2pcs	<b>2</b>  Back rest-1pc	<b>3</b>  Back rest-1pc
<b>4</b>  Side rail-1pc	<b>5</b>  Side rail-1pc	<b>6</b>  Side rails support bar-4pcs
<b>7</b>  Side rails support legs-2pcs	<b>8</b>  Cross bar-1pc	<b>9</b>  Bed legs-4pcs
<b>10</b>  Slats-12pcs		

# PART LIST : WF532068


## Hardware List

<b>A</b>  20*70mm	<b>B</b>  Ø8*40mm	<b>C</b> 
Allen Key(1pc)	Bolts(14pcs)	Two hole iron (3pcs)
<b>D</b>  Ø8*18mm	<b>E</b>  75*33*33mm	
Bolts(30pcs)	"7" Connector(4pcs)	

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.


Step 1 x2

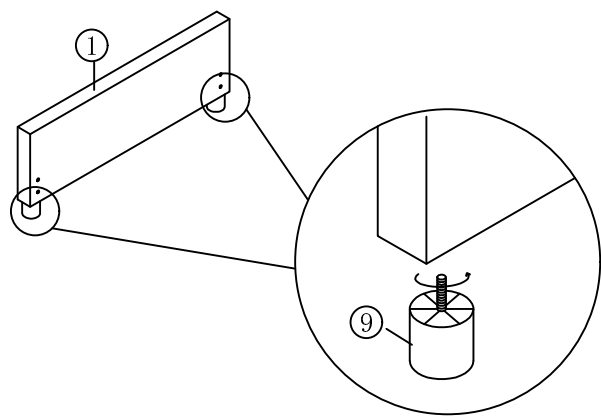

Fix the legs ⑨ to the Armrest ① .



Step 2

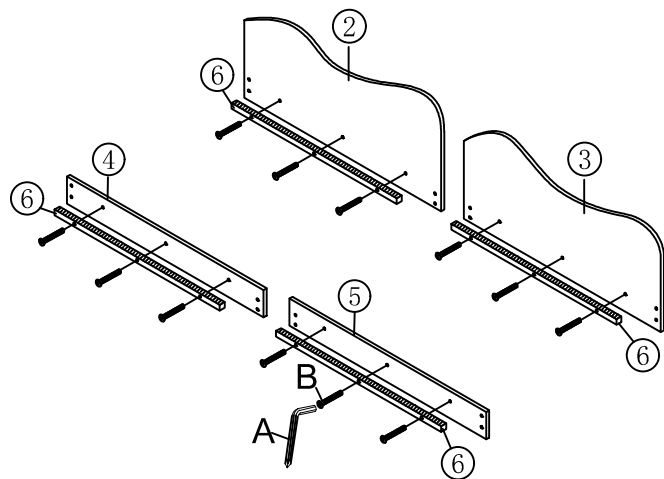
Connect Siderail support bar ⑥ to the Back rest ② , ③ and Siderails ④ , ⑤ with Bolts B by using Allen key A.





A Allen Key	B Bolts x 12
	 M8X40mm

Step 3

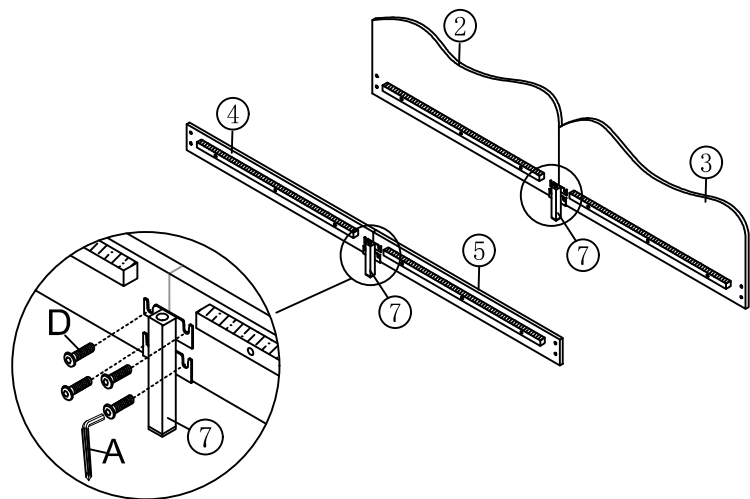
Fix the side rails support leg ⑦ to the Back rest ② , ③ and Siderails ④ , ⑤ with Bolts D by using Allen key A.



Allen Key	D Bolts x 8
	 M8X18mm

## Step 4

Fix the assembled side rail and Backrest ① with Bolts D and "7" Connector E by using Allen key A.

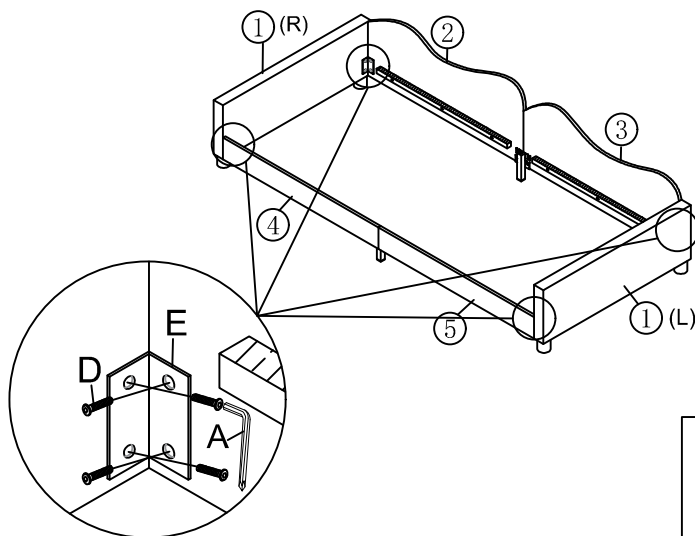


Allen Key	D Bolts x 16 M8X18mm	E "7" Connector x 4

## Step 5

Fix the Backrest ② and ③ together with Bolts D and Two hole iron C by using Allen key A.


Fix the Backrest ② and ③ to the Armrest ① with Bolts D and Two hole C iron by using Allen key A.

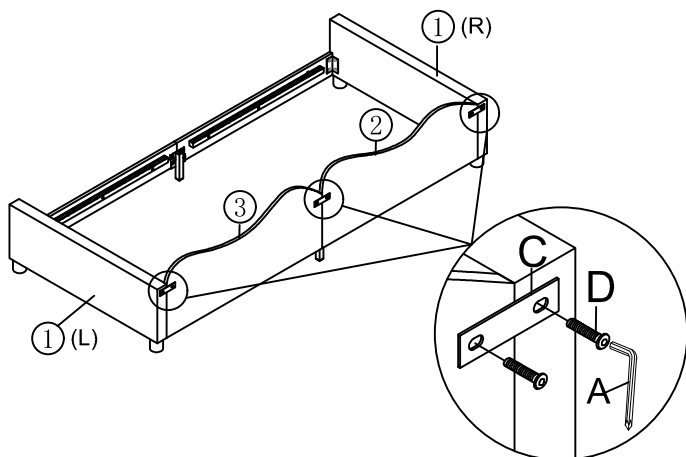

Allen Key	C Two hole iron x 3	D Bolts x 6 M8X18mm

## Step 6

Fix the cross bar ⑧ to the side rails support legs ⑦ with Bolts B by using Allen key A.

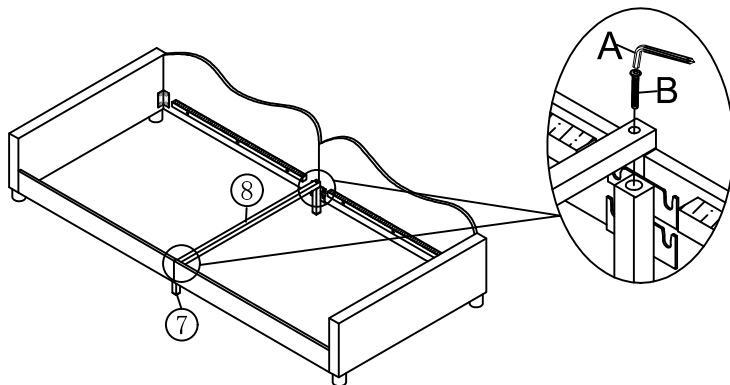

Allen Key	B Bolts x 2 M8X40mm

## Step 7

Fix the slats ⑩ to the side support bar ⑥, then assembly is finished. Please enjoy your bed.

