



Assembly Instruction

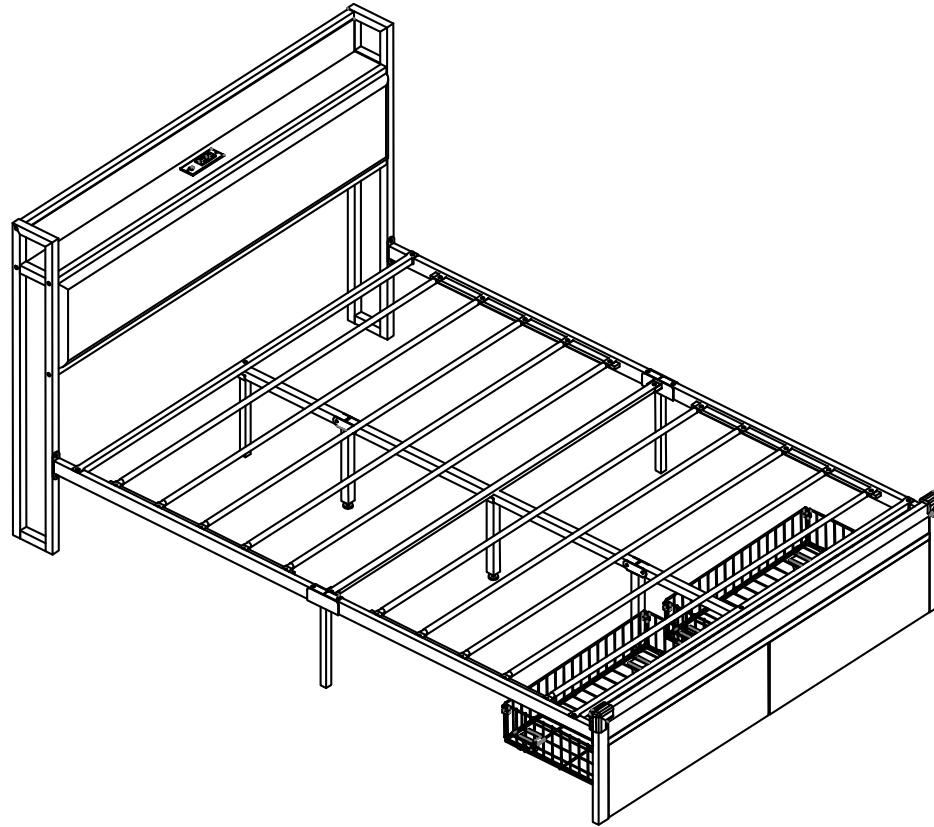

Attention: Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other. If the screws are tightened initially, subsequent hole positions may be misaligned.

If you have product questions, you may contact manufacturer at: lizevinchelp@outlook.com

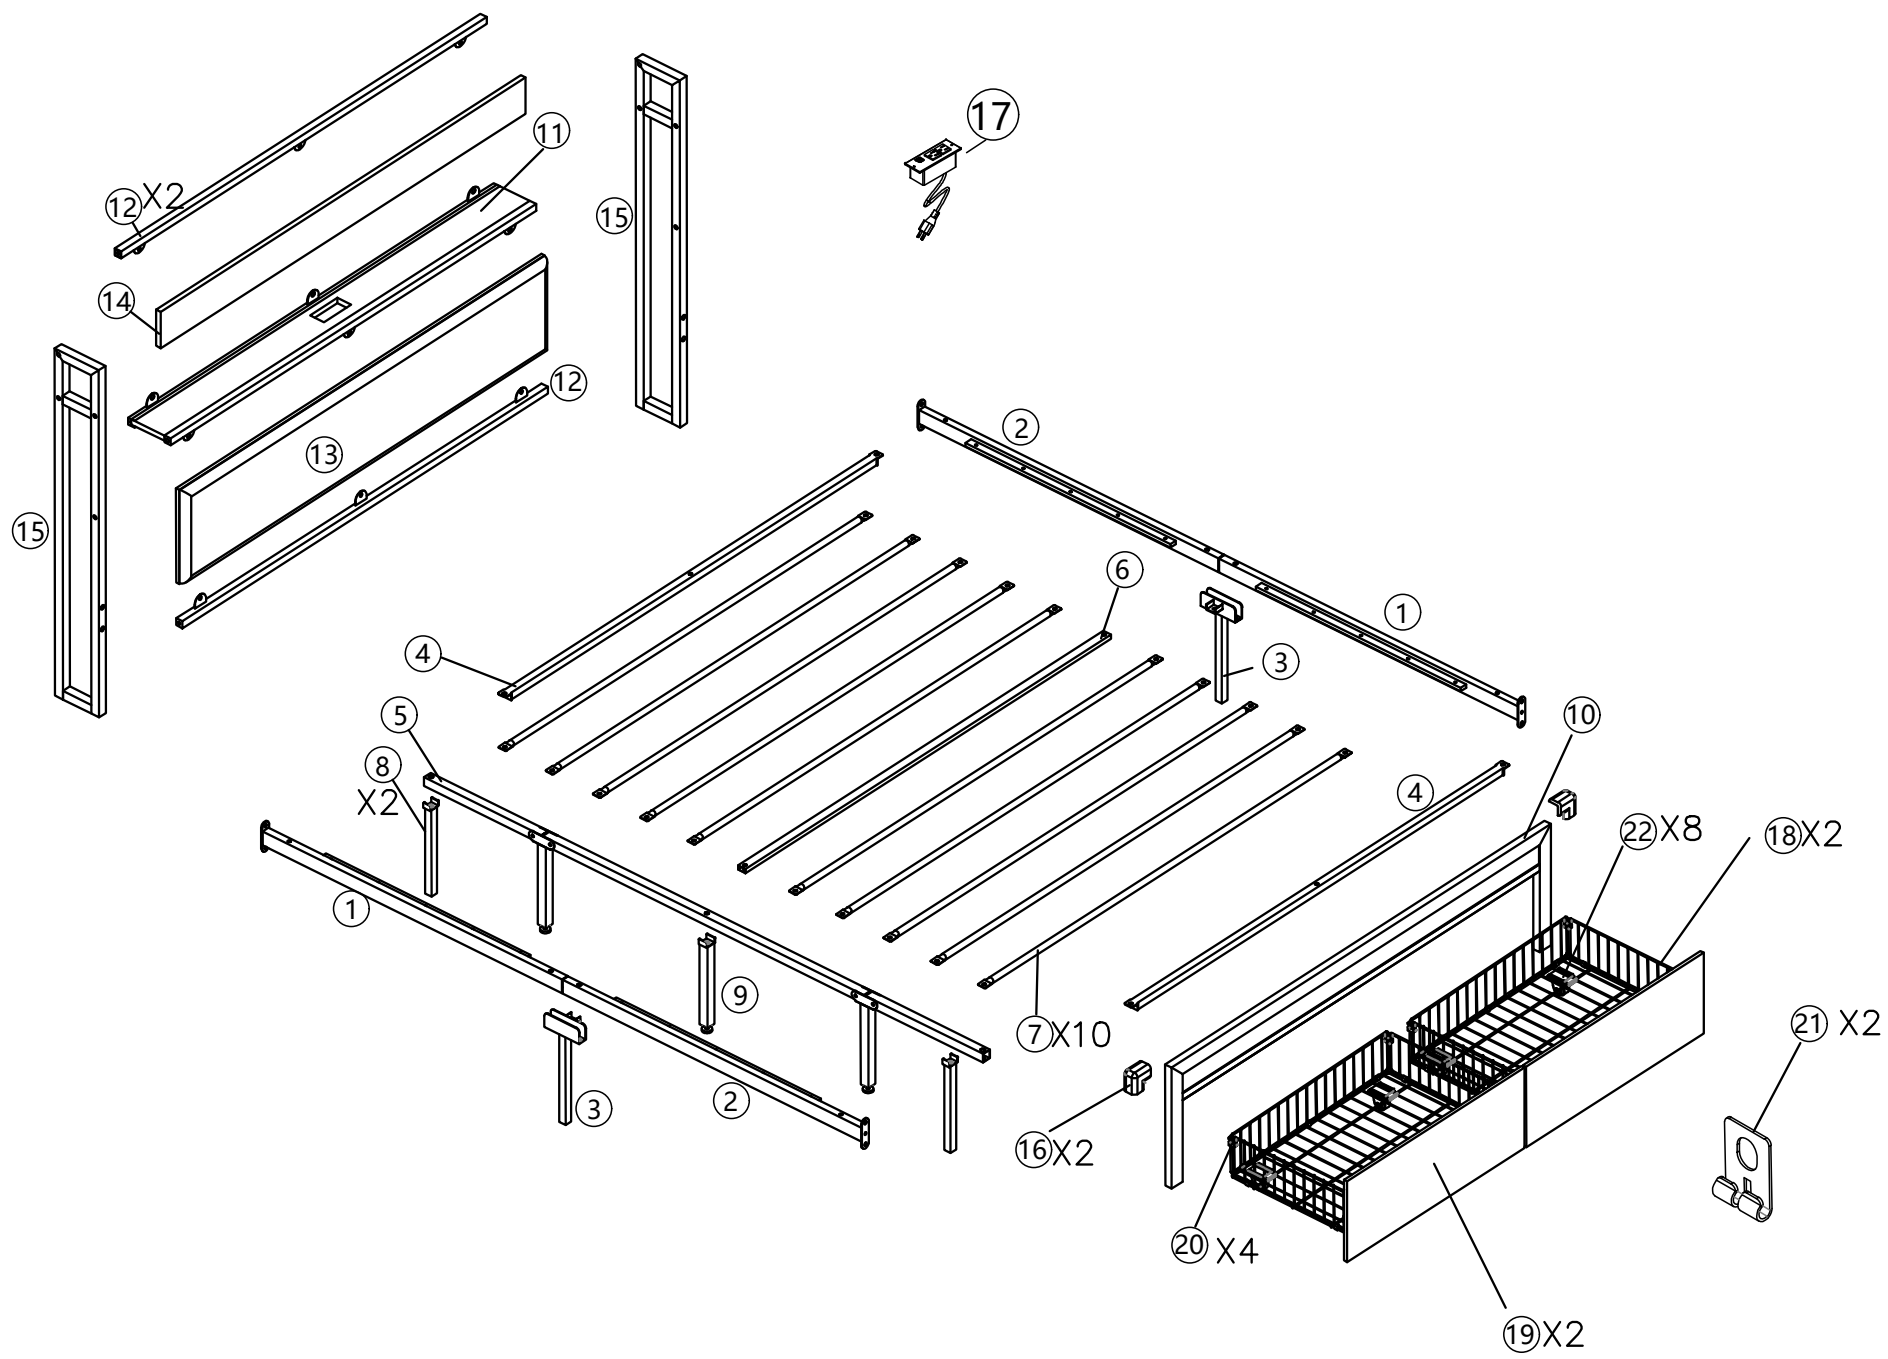

Hardware arts




M6*12

Ⓐ 22PCS



M6*15

Ⓑ 20PCS




M6*45

Ⓒ 8PCS



M8*20

Ⓓ 14PCS



M8*55

Ⓔ 7PCS




M4*16

Ⓕ 2PCS



4#


Ⓖ 1PC




5#

Ⓗ 1PC

Part list

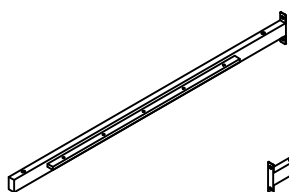


① 2PCS

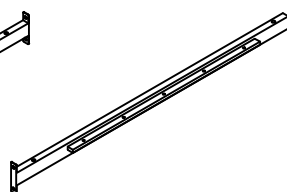


② 2PCS




③ 2PCS

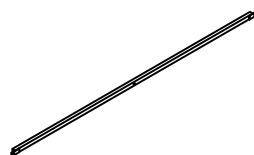


④ 2PCS

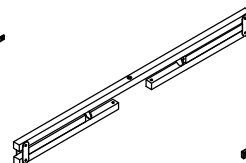

⑤ 1PC

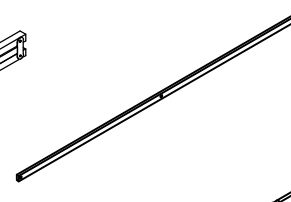

⑥ 1PC

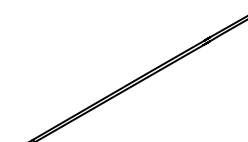


⑦ 10PCS




⑧ 2PCS




⑨ 1PC

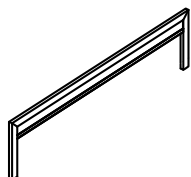


⑩ 1PC

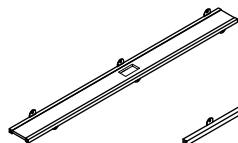


⑪ 1PC

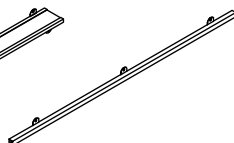

⑫ 2PCS

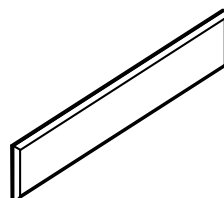

⑬ 1PC

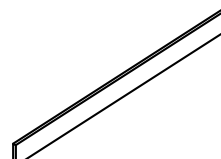

⑭ 1PC



⑮ 2PCS




Crash pads


⑯ 2PCS



⑰ 1PC

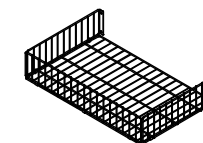

⑱ 2PCS

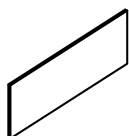


⑲ 2PCS



⑳ 4PCS




㉑ 2PCS




㉒ 8PCS

Step: 1


 M6*45 **C** X 8PCS


 4# **G** X 1PC

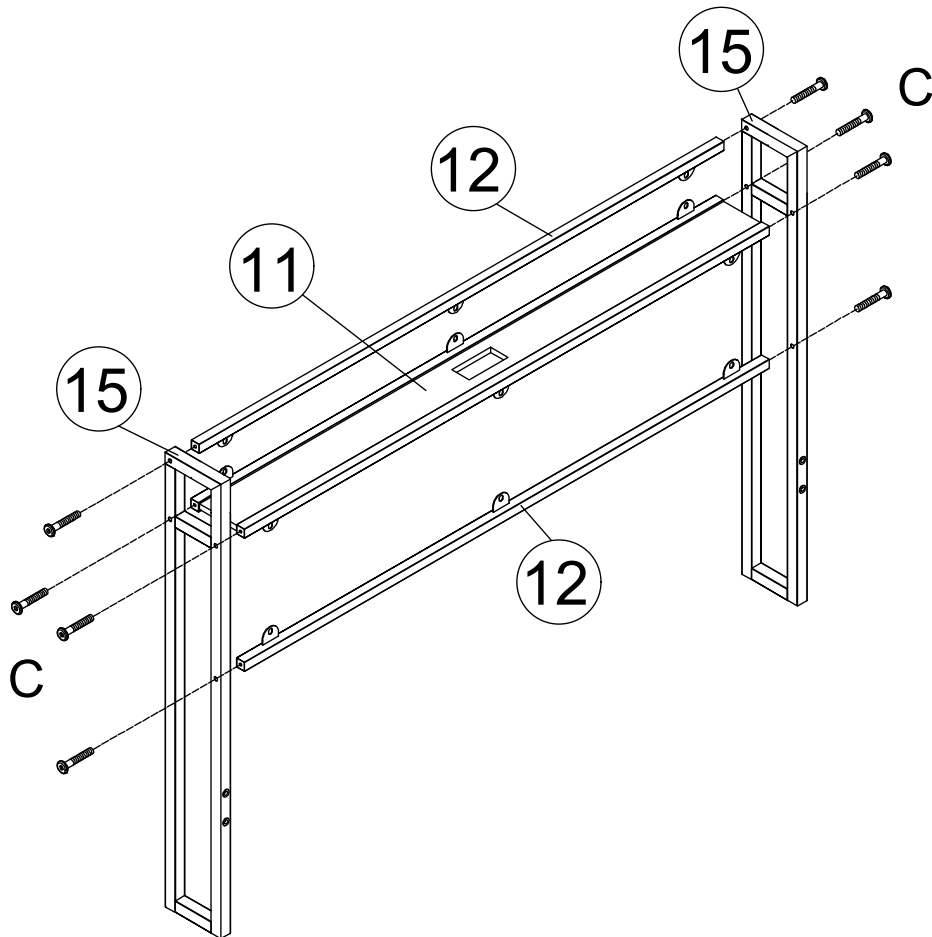

Step: 2


 M6*12 **A** X 12PCS

 4# **G** X 1PC

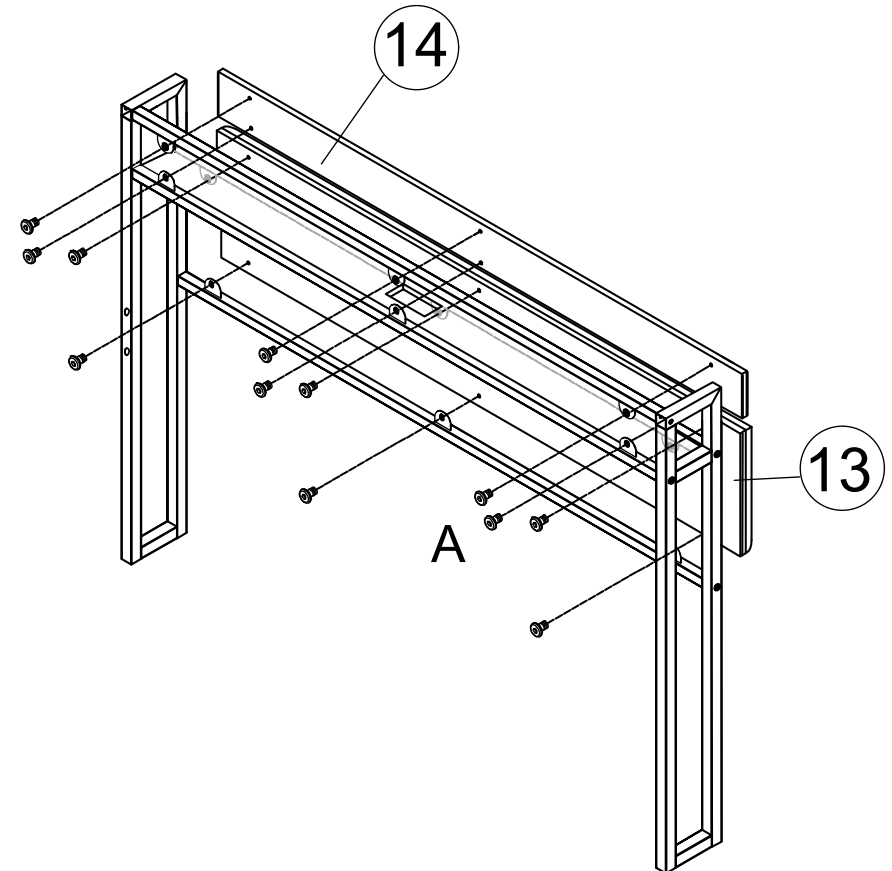

Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.


Step: 3

 E X 4PCS
M8*55

 H X 1PC
5#




Please pay attention to the direction arrow in the illustration to avoid reverse installation

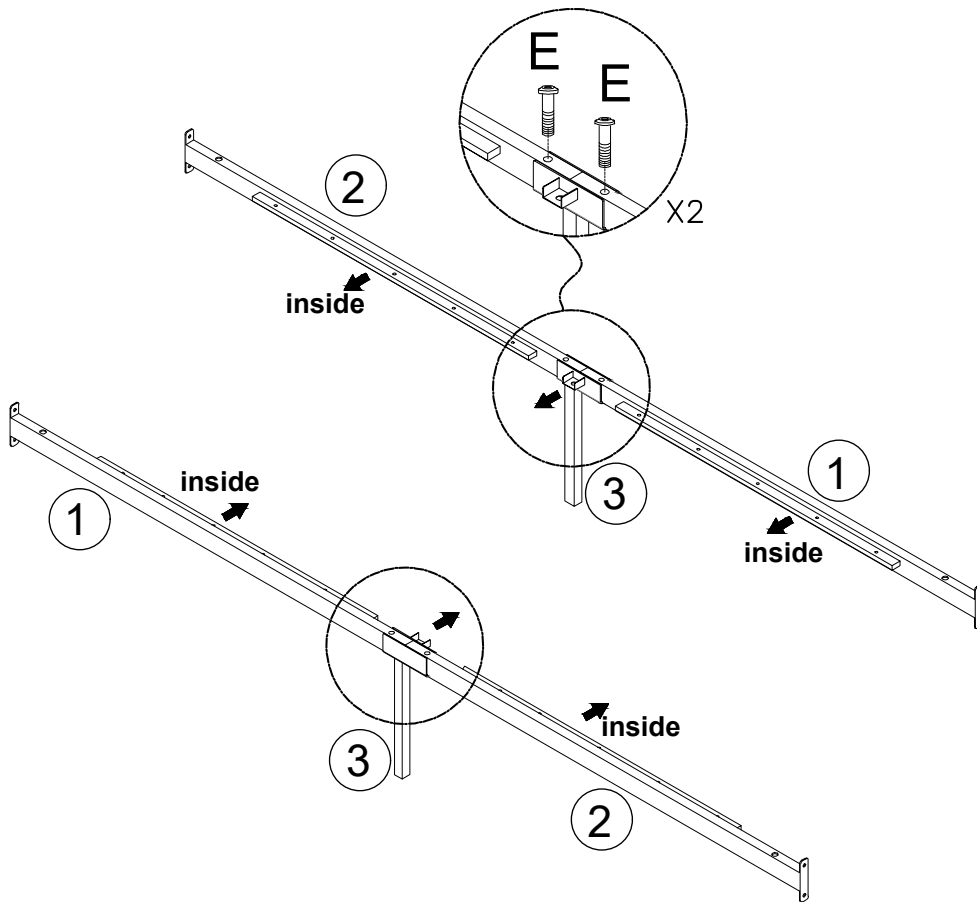


Step: 4

 F X 2PCS
M4*16

 D X 8PCS
M8*20

 H X 1PC
5#

No pre-drilled holes in board!!
Please directly screw F
(self-drilling screws) into the board

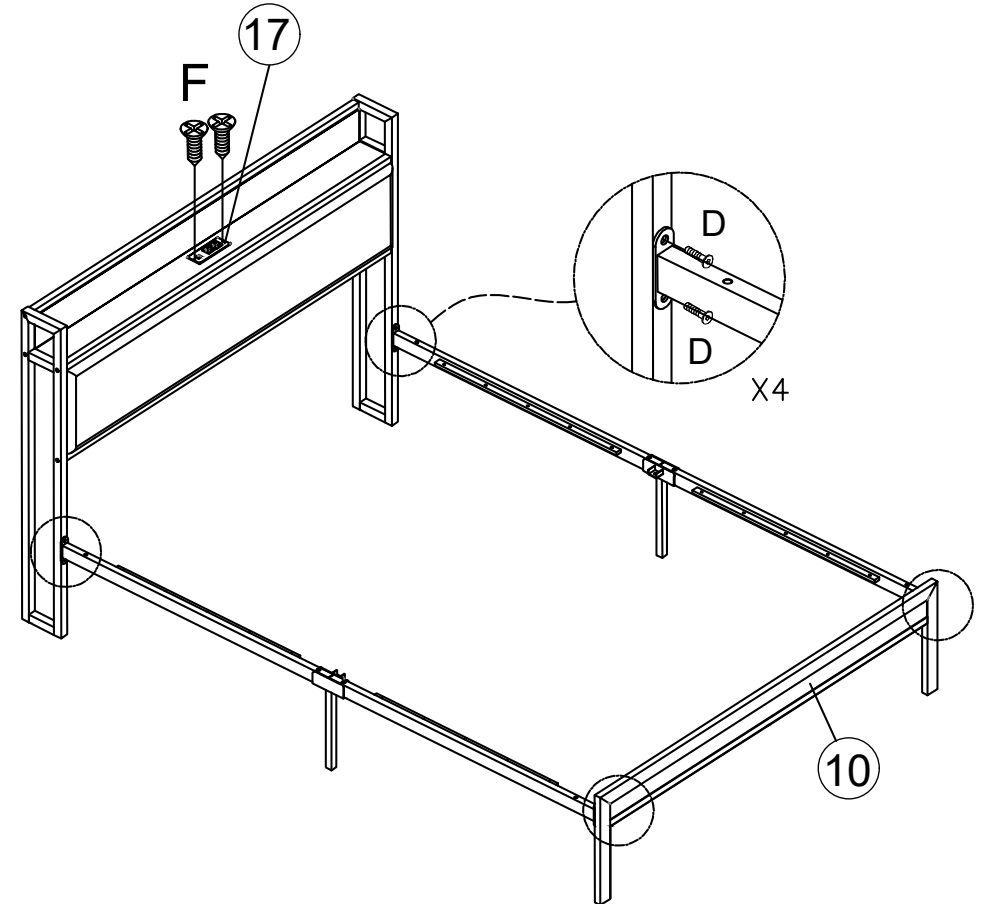


Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

Step: 5

M8*20 D X6PCS


5# H X 1PC

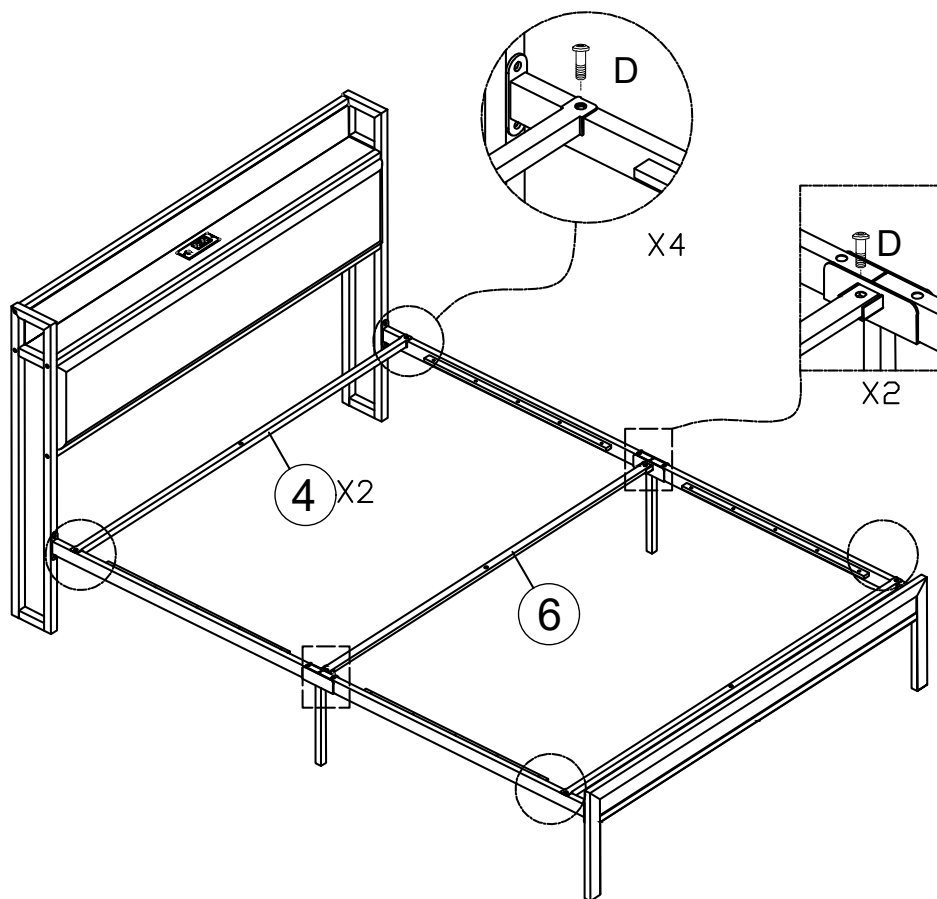

Step: 6



M8*55 E X 3PCS

5# H X 1PC

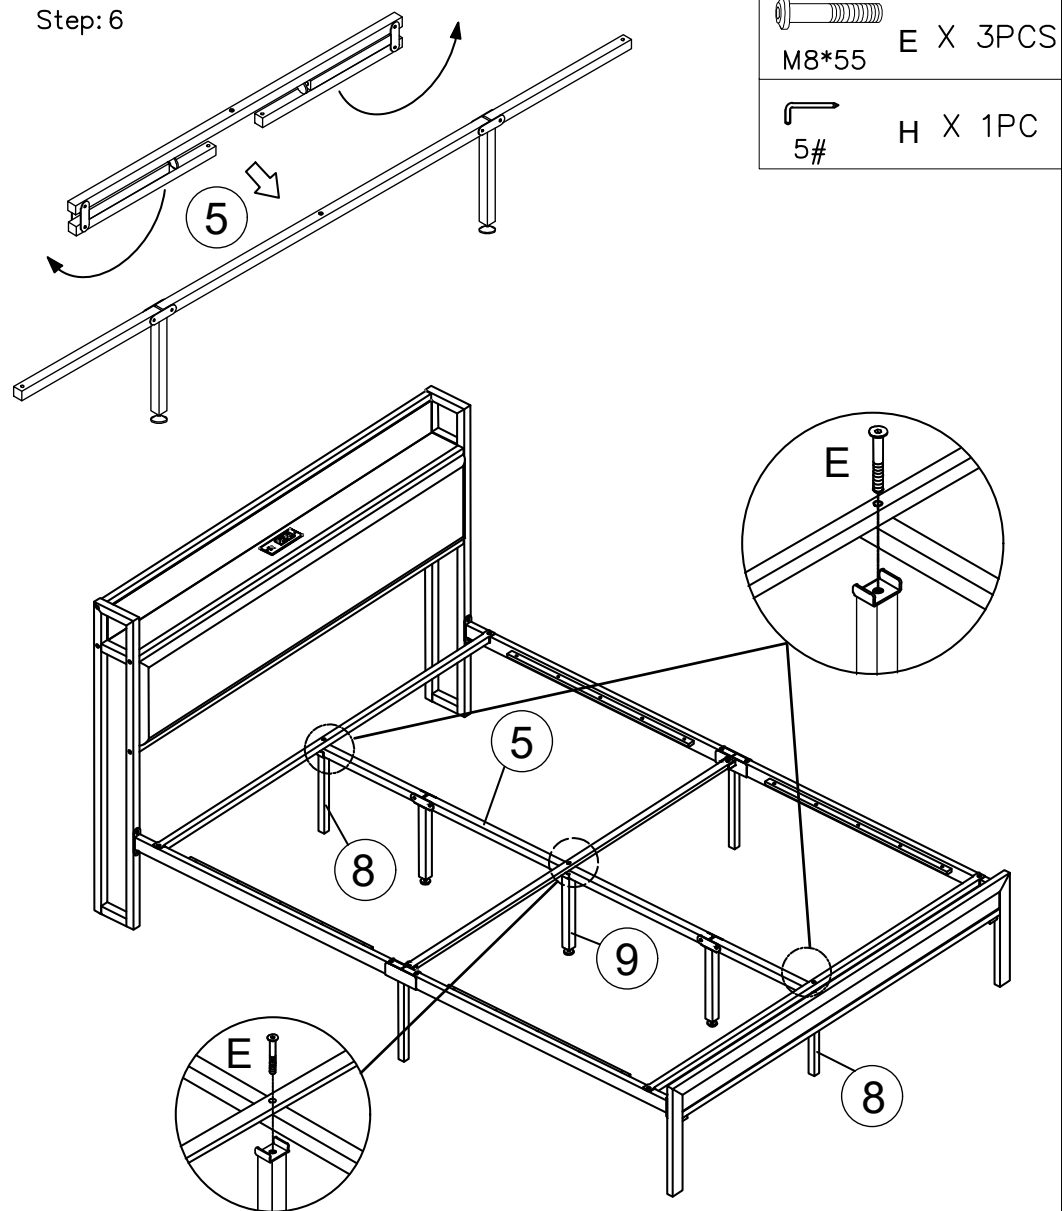


Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

Step: 7

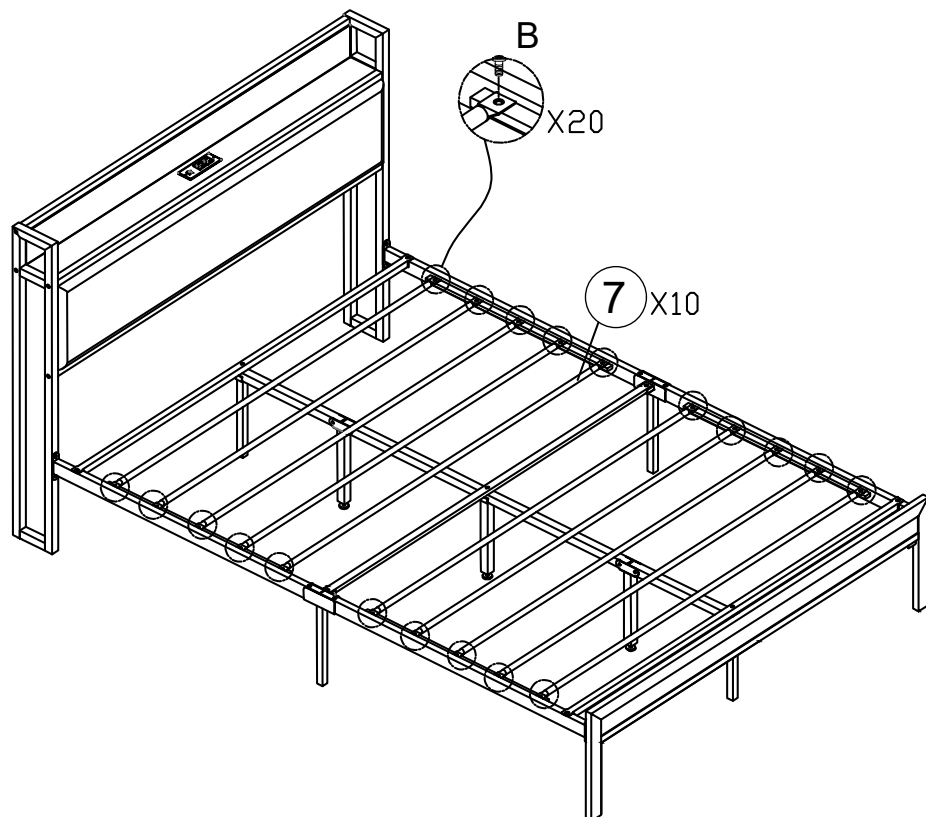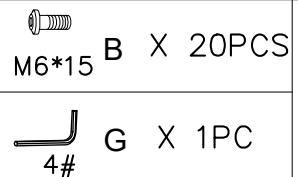


Step: 8


**There is a small sealing pocket in the package.
There are two crash pads in the sealing pocket.
As shown in the figure below.**

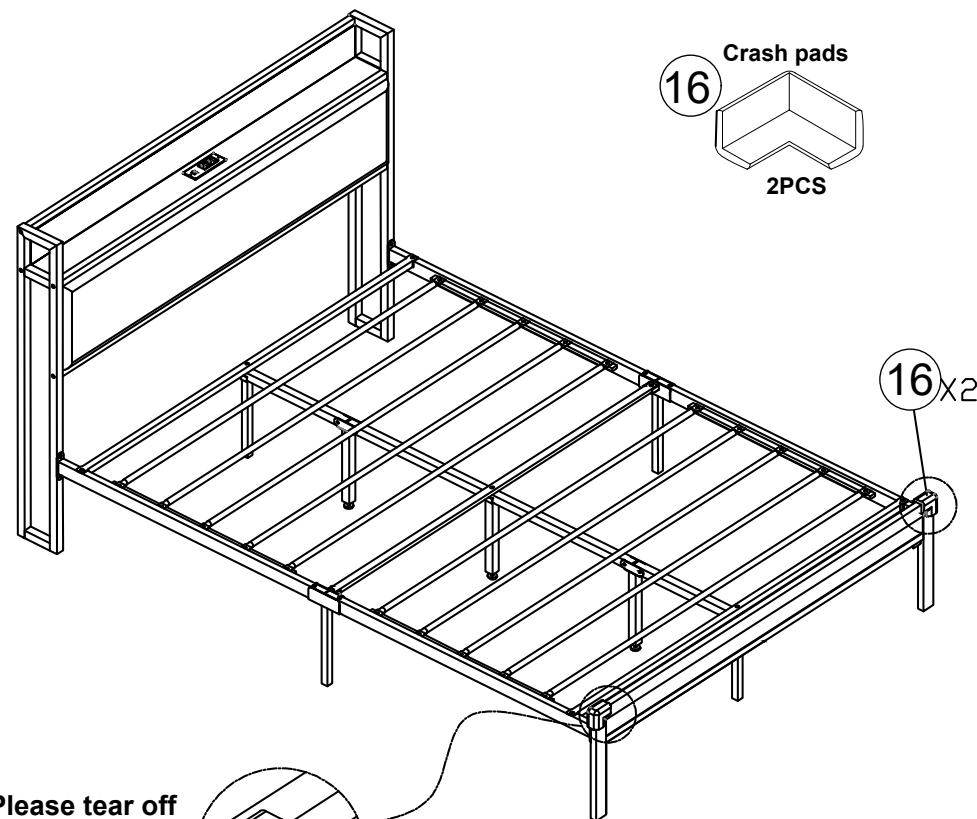


**Please tear off
the surface
anti sticking
sheet and stick
the
anti-collision
cushion on it**

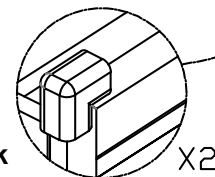


Step: 9

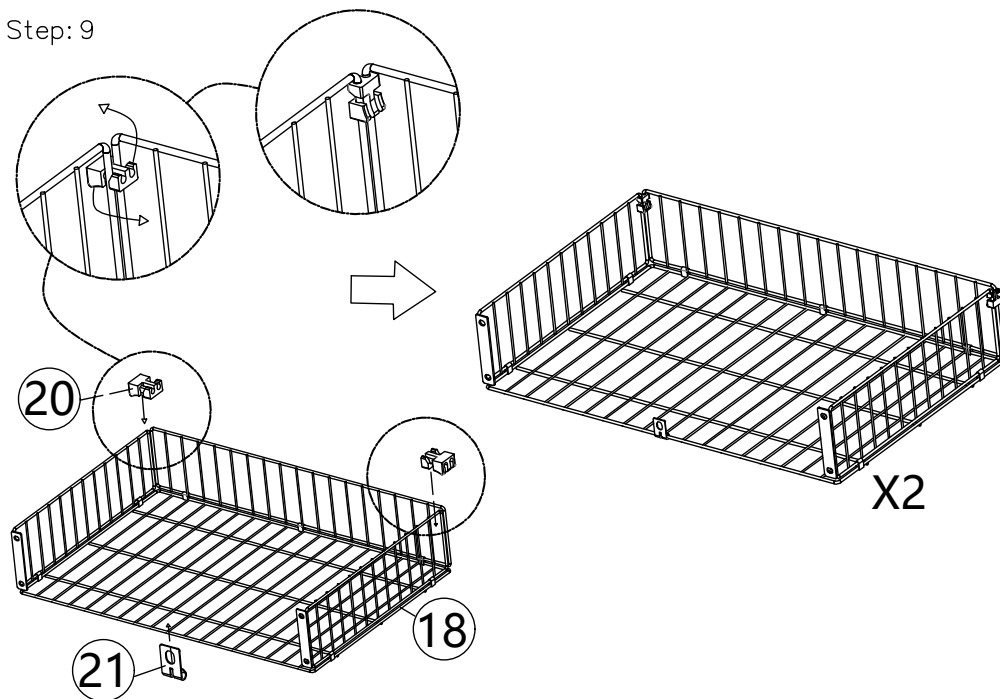

Step: 10

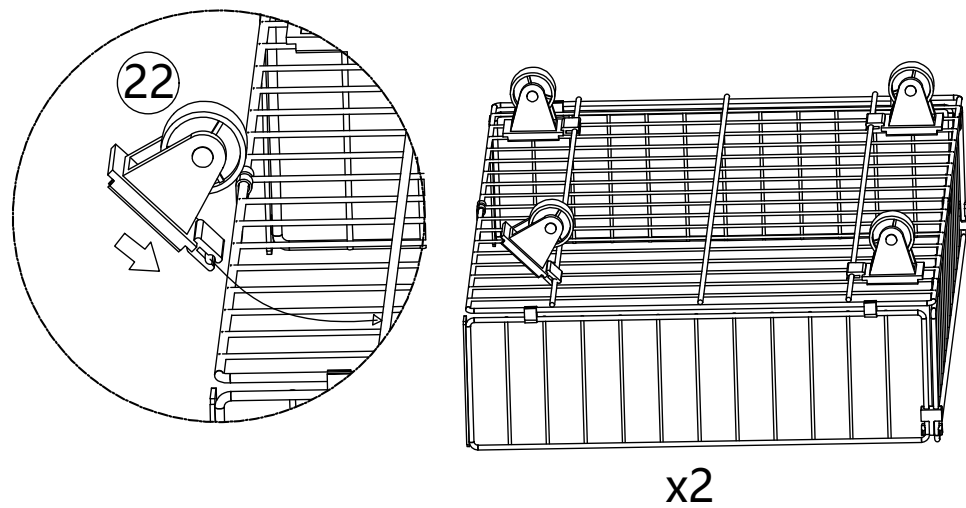

Step: 11

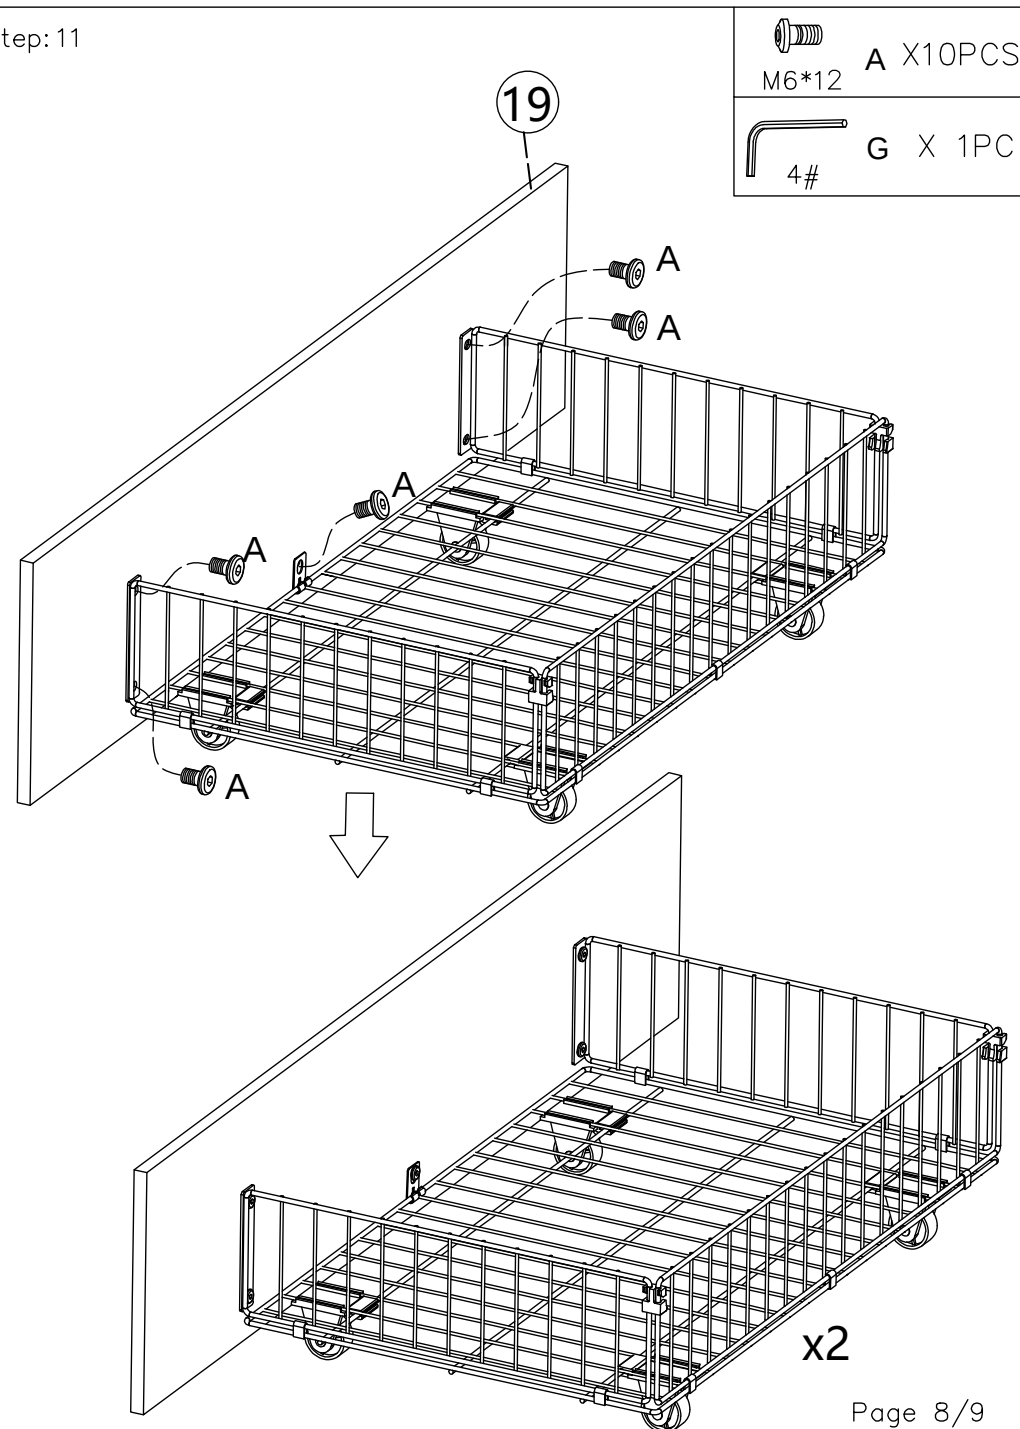

Step: 12

