

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening
- * If you are having difficulty, our friendly Customer Care team is always here to help.







PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (Included): Spanner

CARE AND MAINTENANCE

Dust with a soft, dry cloth. Do not use abrasive cleaner. To clean mirror, spray a small amount of glass cleaner onto a lint-free cloth and wipe mirror clean.

Part List and Hardware List

Piece	Description	Picture	Quantity
A	Top		1 x
B	Metal pipe		1 x
C	Base		1 x
HW1	Hex Bolt (15mmX30mm)		1 x
HW2	Spanner (16,17)		1 x
HW3	Washer		1 x

Installation & Assembly

Product Dimensions: 12.5" X 12.5" X 25"



WARNING

Weight Capacity 15LBS

Warning: Do not stand on Table

Warning: Do not over torque bolts


Preparation

*Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.


*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 10 minutes.

*Tools Required for Assembly (Included) : Spanner

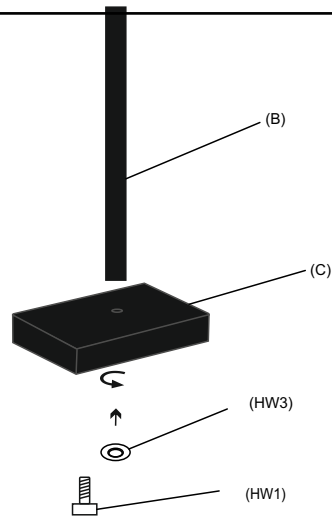

1. Attach the metal pipe (B) to the base (C). Insert the hex bolt (HW1) through the washer (HW3) and tighten it securely using the spanner (HW2).

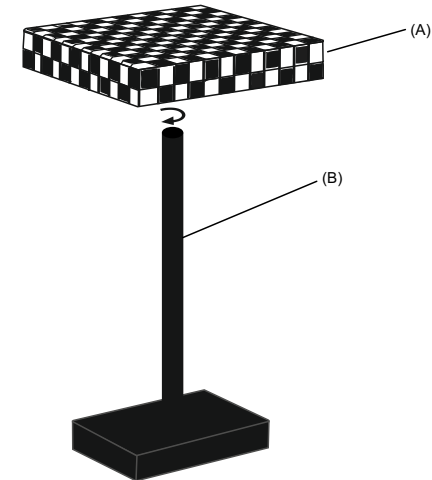

2. Position the top (A) on the pipe (B) and rotate it anticlockwise until it is firmly attached.



3. Ensure all bolts are tight and the product is stable . Your item is now ready to use.