


Assembly Instruction

Assembly Instructions -Please keep for future reference

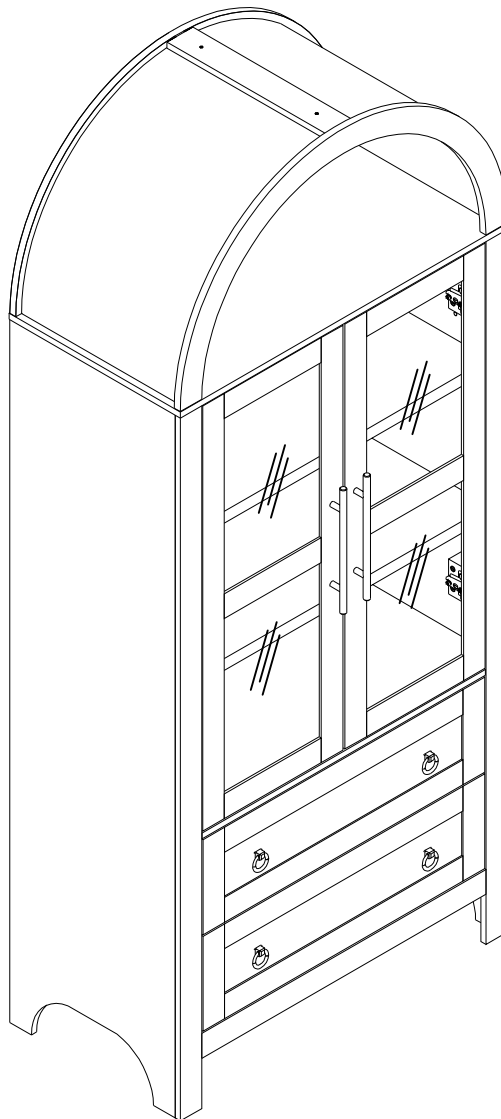

Dimensions


Width-30inch

Depth-15.7inch

Height-71.1inch

 WARNING	
	This product is NOT a Clothing Storage Unit (CSU).
	DO NOT use it for clothing storage.
	Improper use may cause furniture tipover.

Assembly Instruction

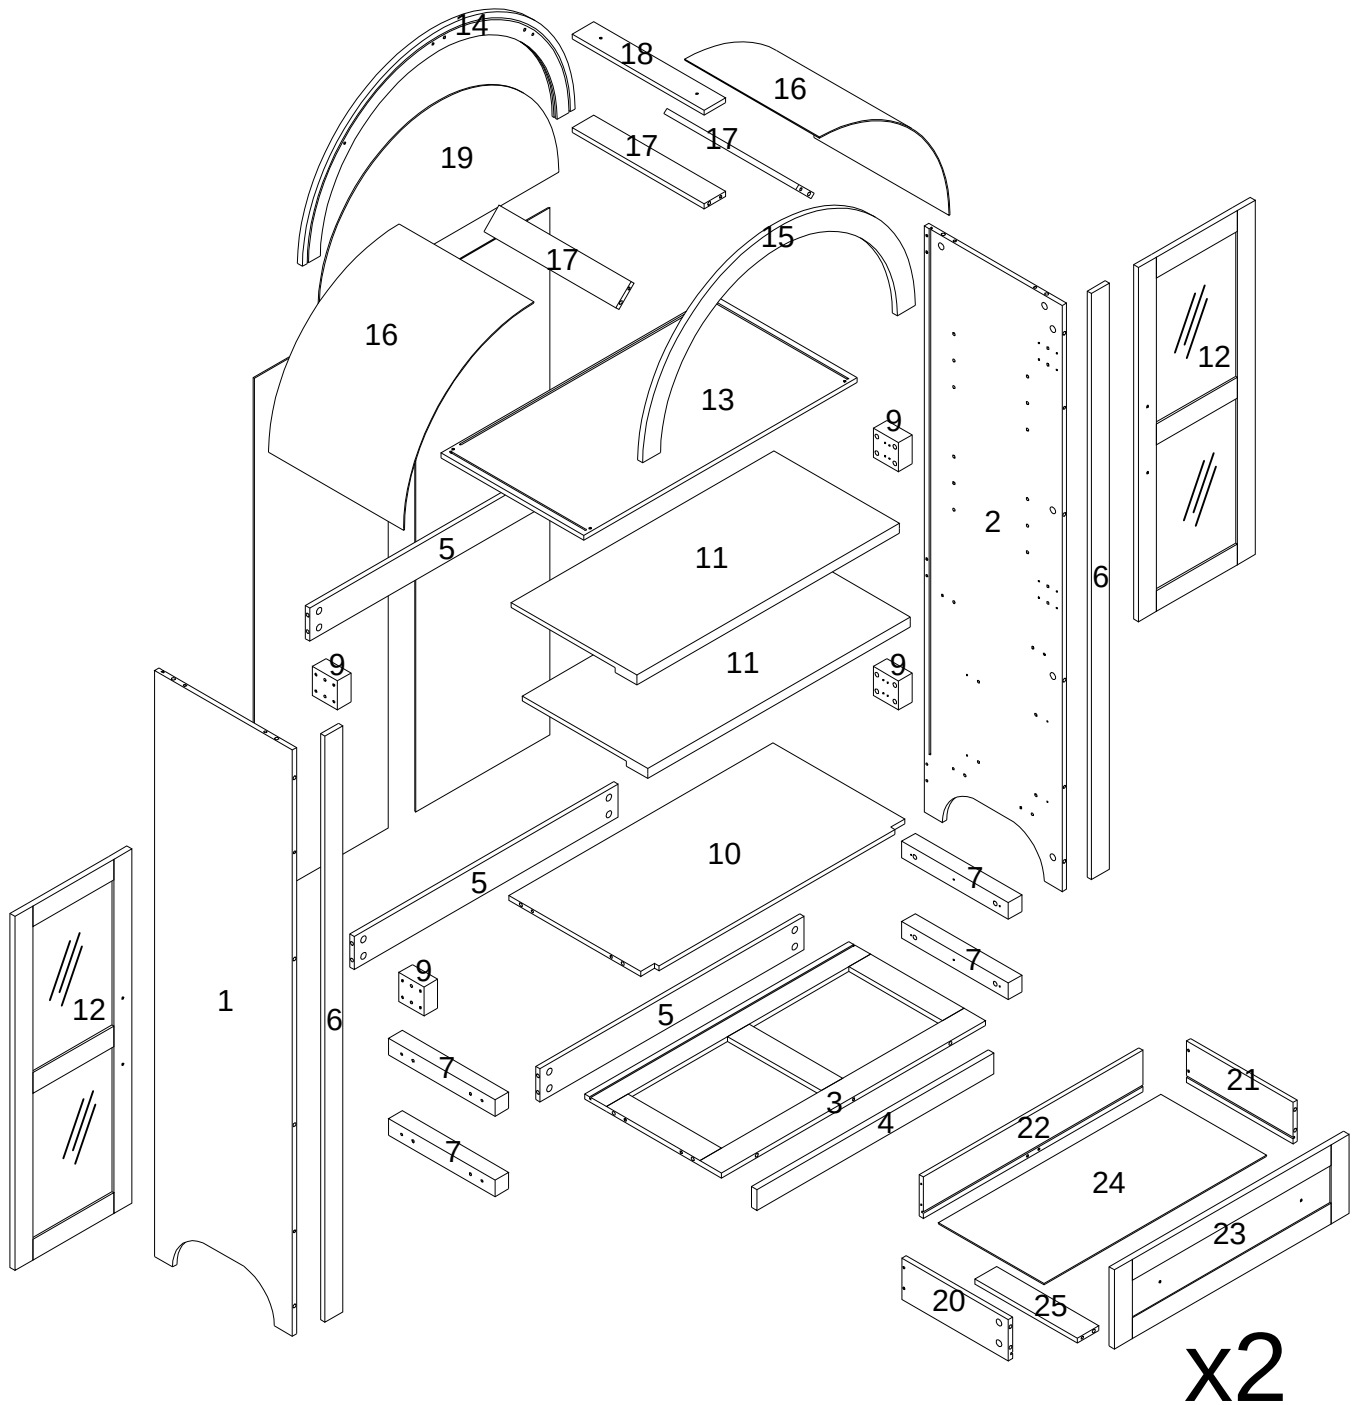



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- . Check you have all the components and tools listed on the following pages.
- . Remove all fittings from the plastic bags and separate them into their groups.
- . Keep children and animals away from the work area, small parts could choke if swallowed.
- . Make sure you have enough space to layout the parts before starting.

- . During assembly do not stand or put weight on the product, this could cause damage.
- . Assemble the item as close to its final position (in the same room) as possible.
- . Assemble on a soft level surface to avoid damaging the unit or your floor.
- . Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- . To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- . Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- . From time to time check that there are no loose screws on this unit.

- . This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- . Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.

- . Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning - please follow these Instructions

To help prevent product toppling over please follow the below steps:-

- Use the anti tip strap or wall fixing method provided (if applicable)
- Do not allow children to climb or hang on the furniture
- Do not open more than one drawer at a time
- Do not place heavy items in the top drawers
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

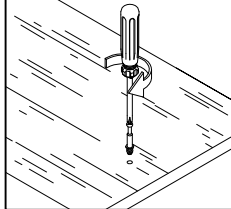

Step 2

Push the male camlock into the entry hole.

2

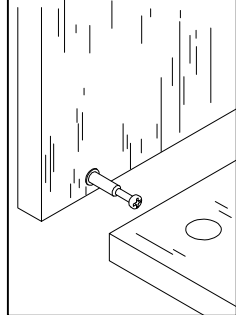


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

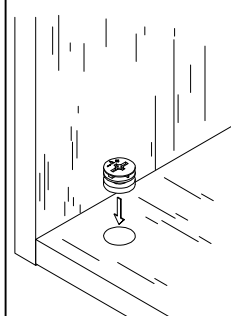


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.








4

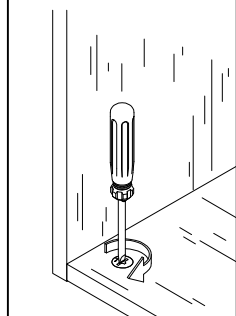























Components -Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. in some cases, more fittings may be supplied than required.

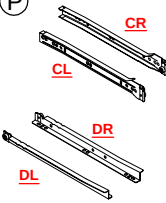(A)  Ø6x33mm x50+4pcs	(B)  x50+4pcs	(C)  Ø4x40mm x28+2pcs	(D)  Ø3x12mm x20+2pcs	(E)  x4pcs	(F)  Ø4x15mm x4pcs
(G)  250mm x2pcs	(H)  Ø4x22mm x4pcs	(I)  x8pcs	(J)  Ø3x16mm x8pcs	(K)  Ø6x30mm x41+3pcs	(L)  Ø4x30mm x12+1pcs
(M)  x4pcs	(N)  Ø4x14mm x24+2pcs	(O)  x8pcs	(P)  300mm x2set	(Q)  x1set	(R)  Ø4x28mm x2pcs
 x1pc					



Assembly Instruction

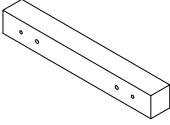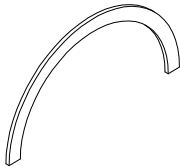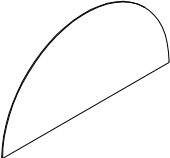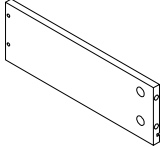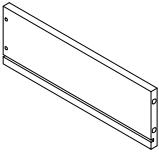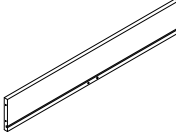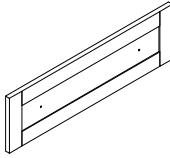					
1: 1pc	2: 1pc	3: 1pc	4: 1pc	5: 3pcs	6: 2pcs
					
7: 4pcs	8: 2pcs	9: 4pcs	10: 1pc	11: 2pcs	12: 2pcs
					
13: 1pc	14: 1pc	15: 1pc	16: 2pcs	17: 3pcs	18: 1pc
					
19: 1pc	20: 2pcs	21: 2pcs	22: 2pcs	23: 2pcs	24: 2pcs
					
25: 2pcs					



STEP1

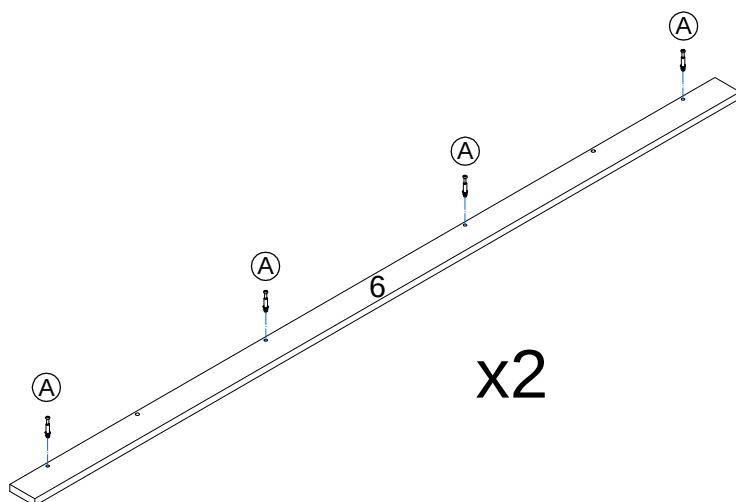



STEP2

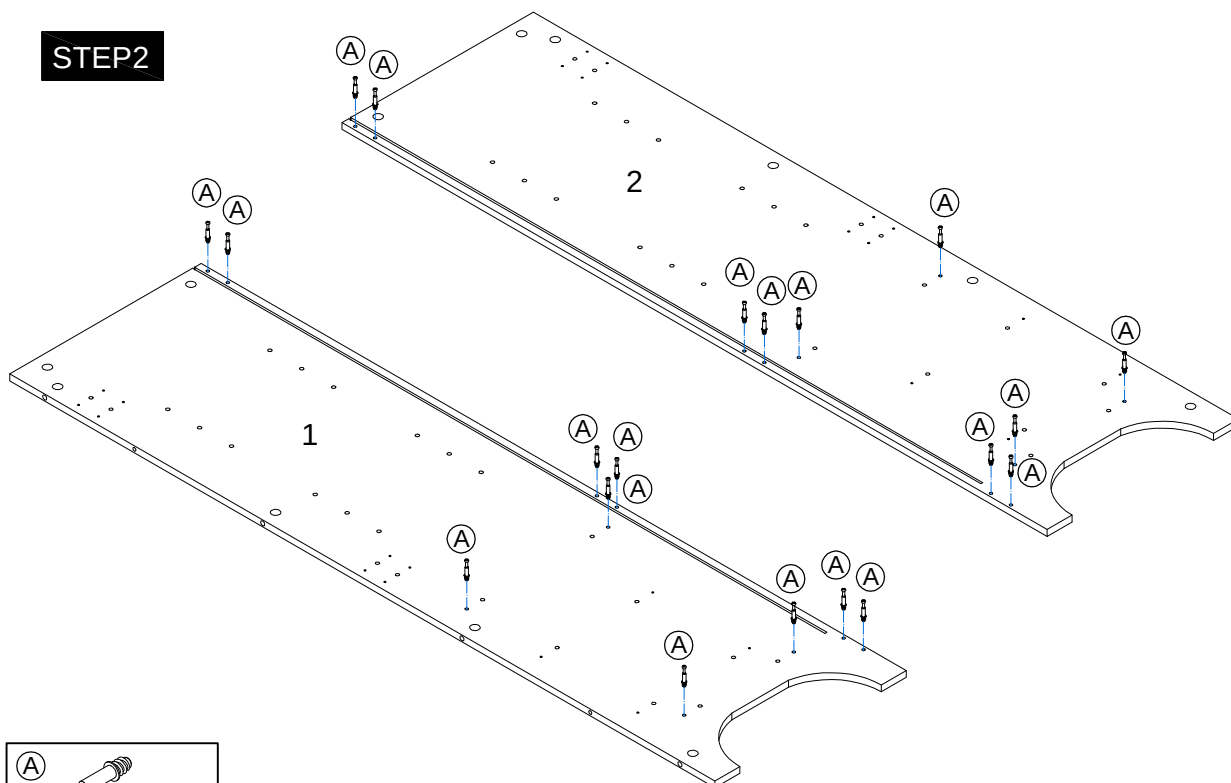


STEP3

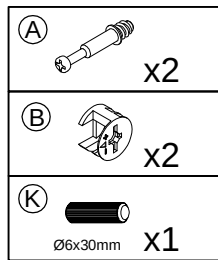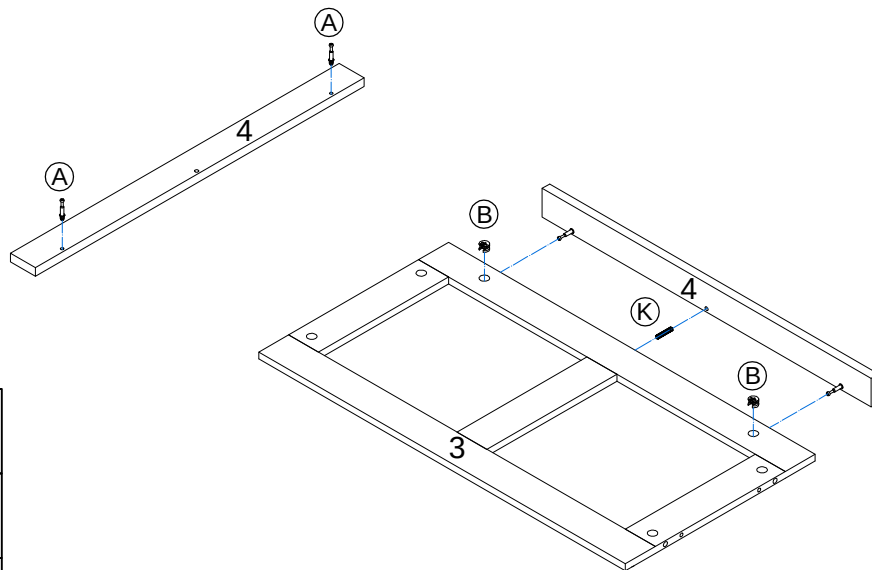


STEP4

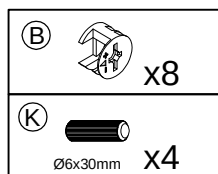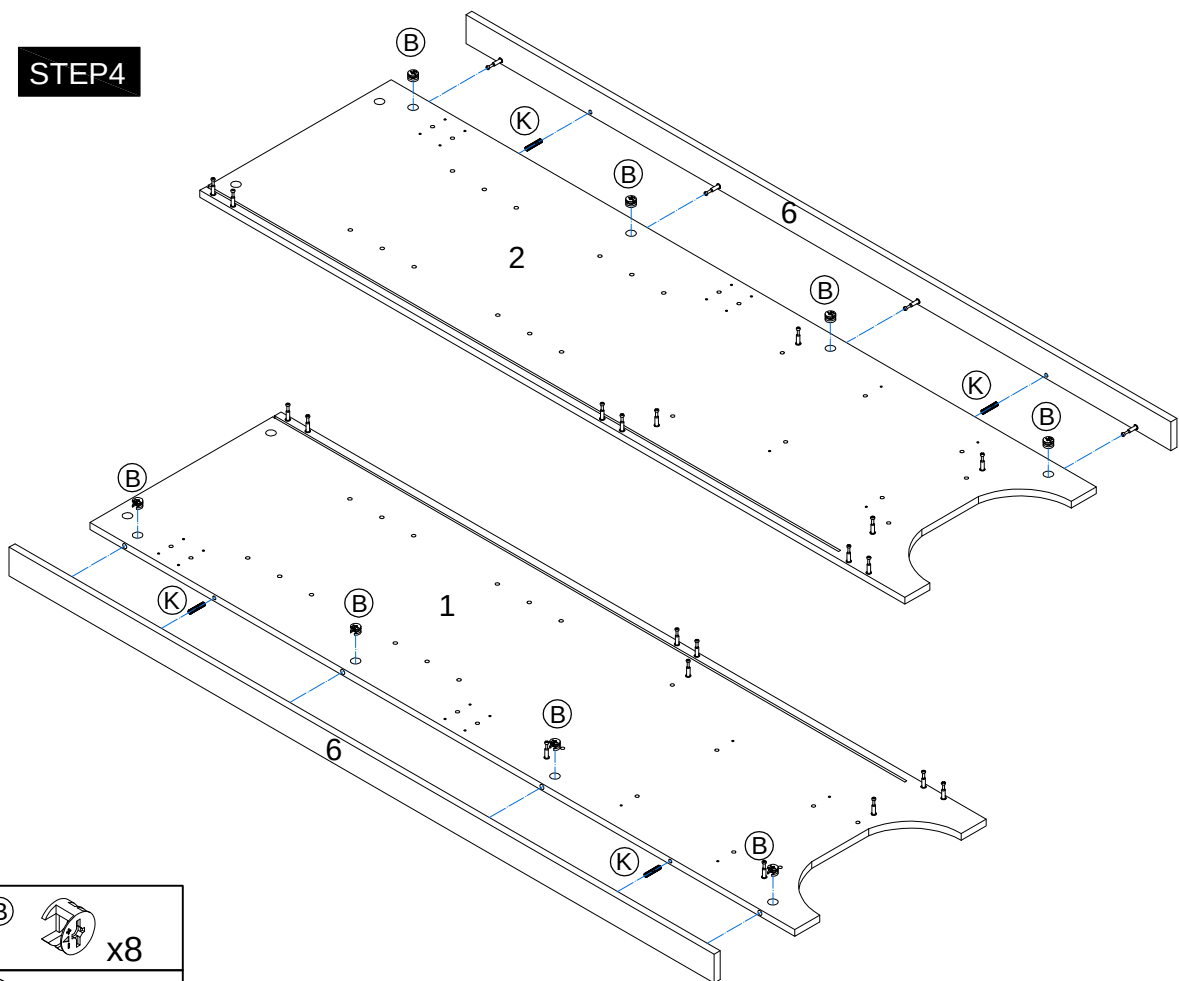

STEP5

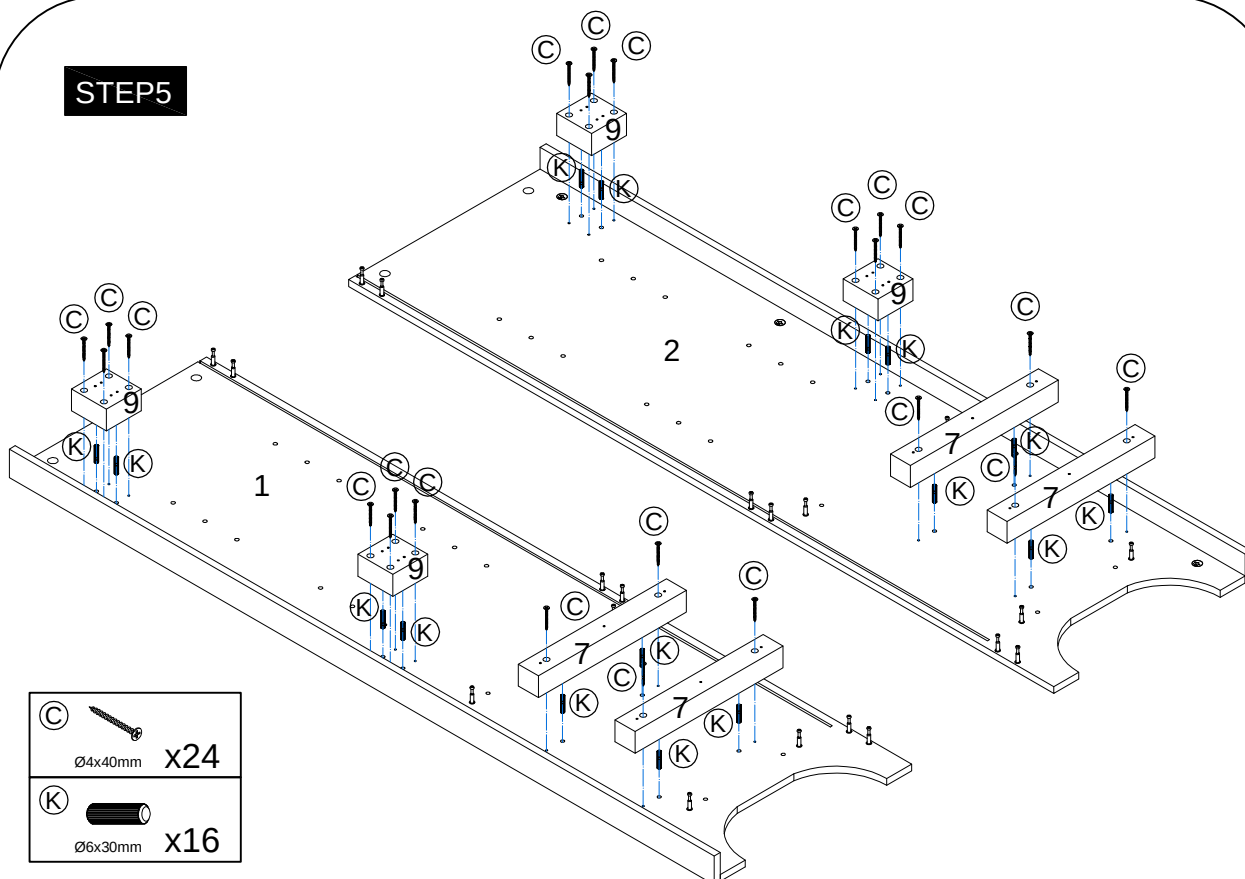


STEP6

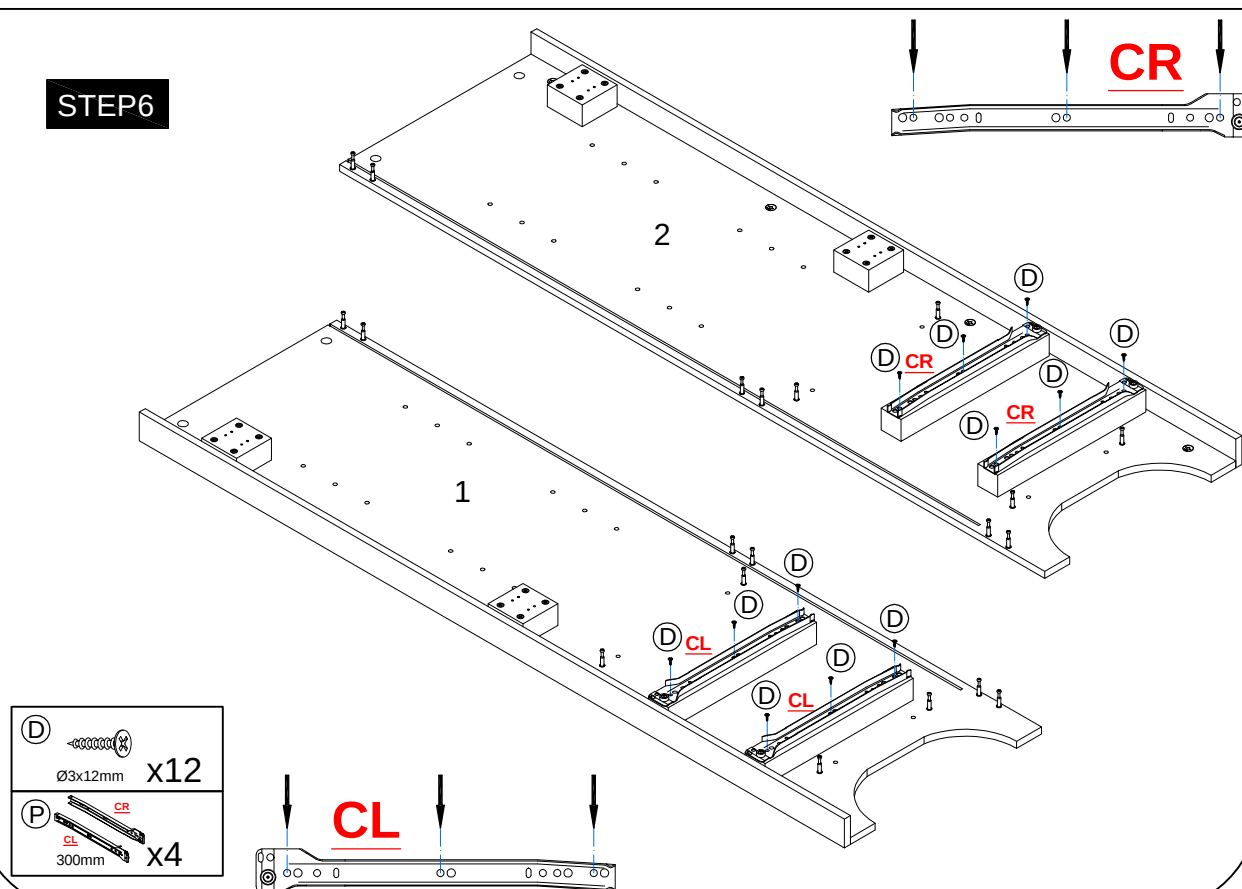


STEP7

(A)		x10
(D)		x8
(E)		x4
(F)		x4
(P)		x4

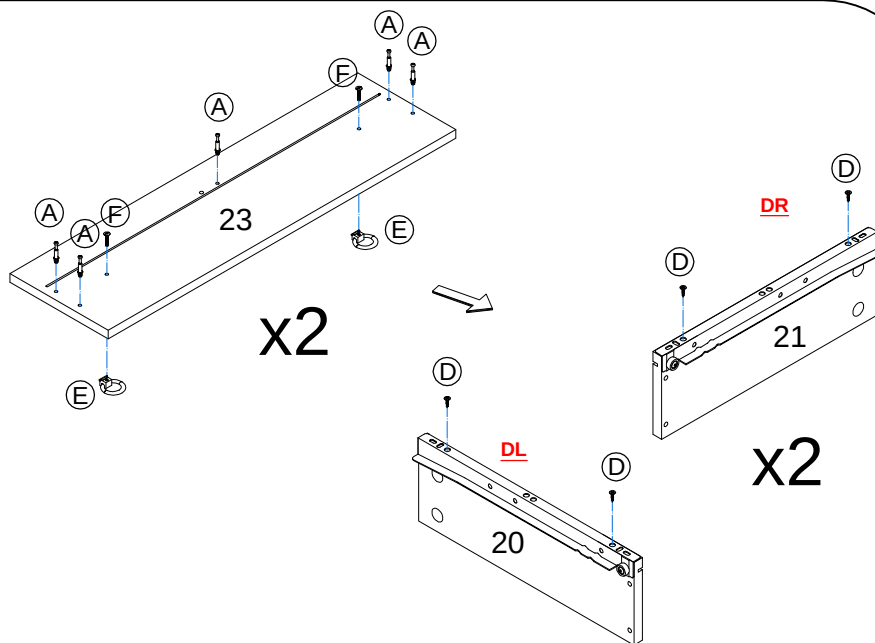


STEP8


(B)		x10
(K)		x2
(L)		x12

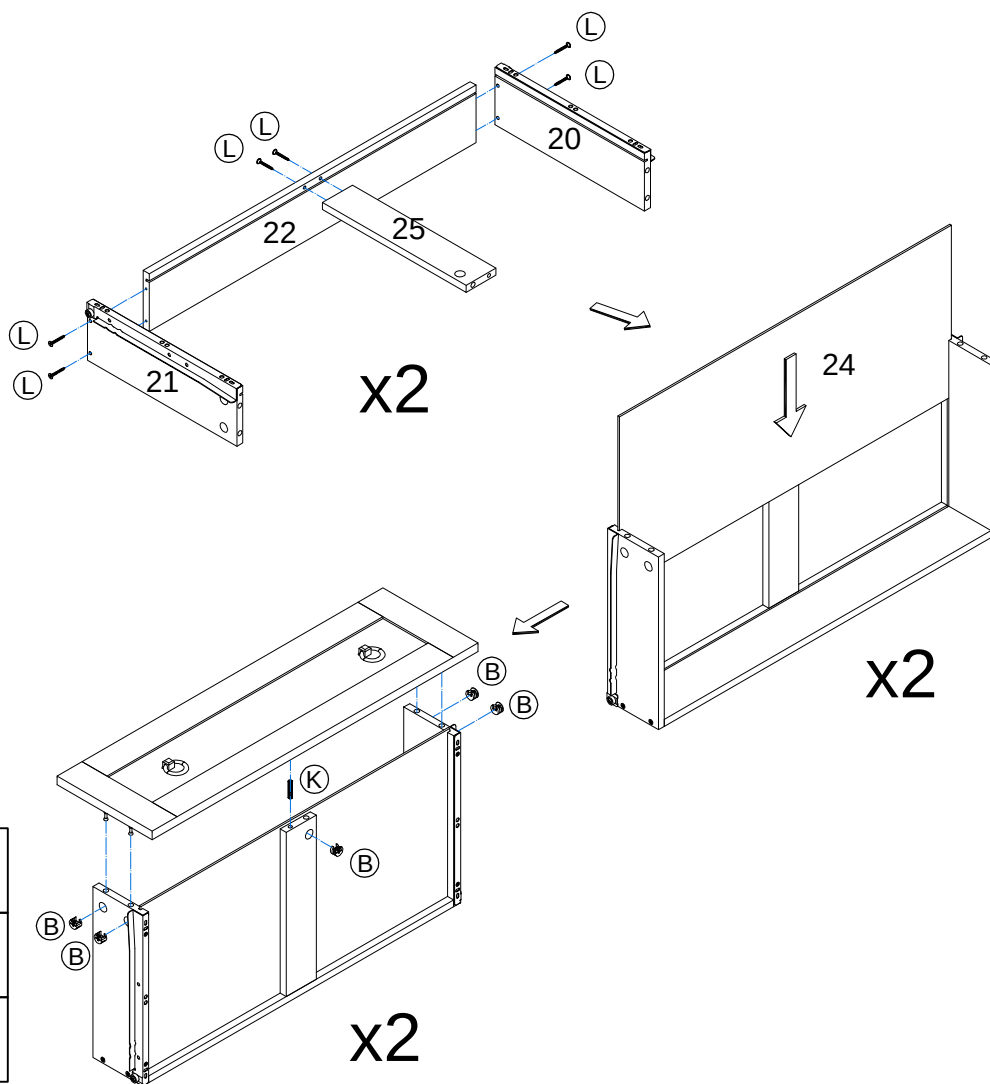



STEP9

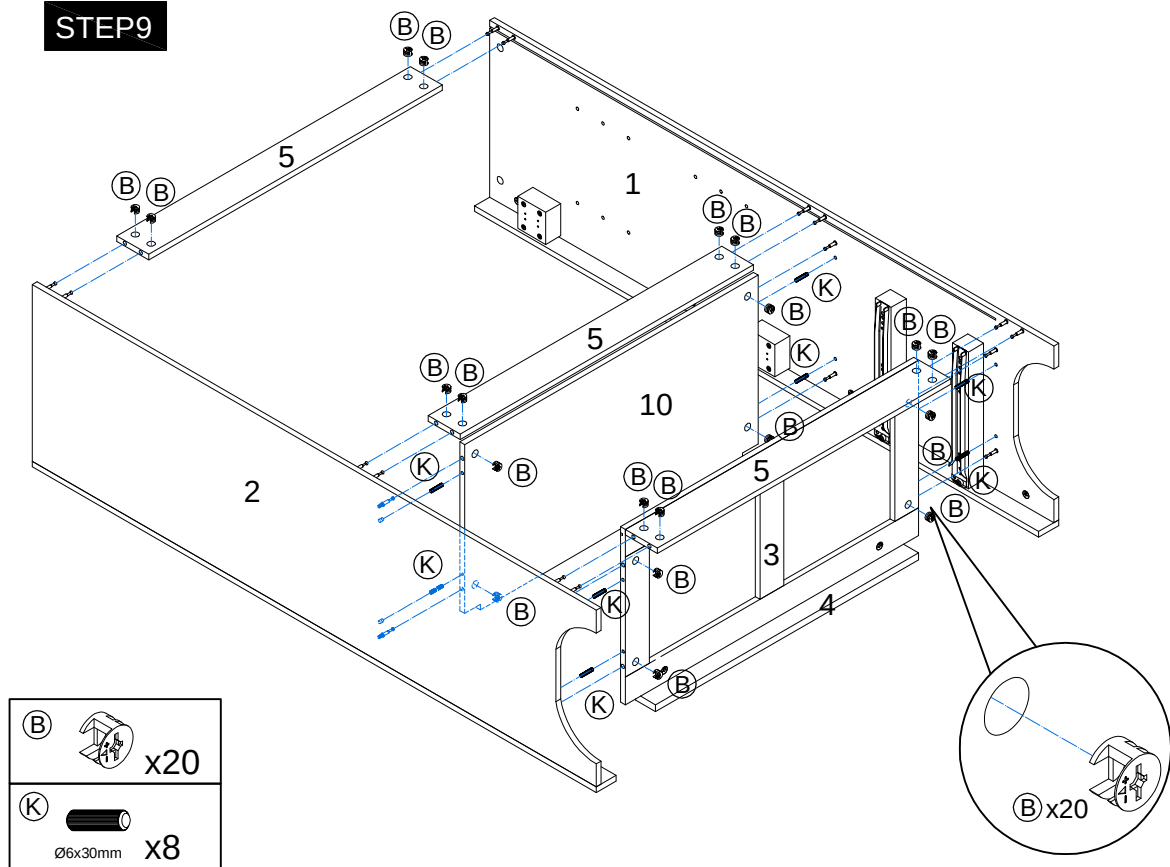



STEP10

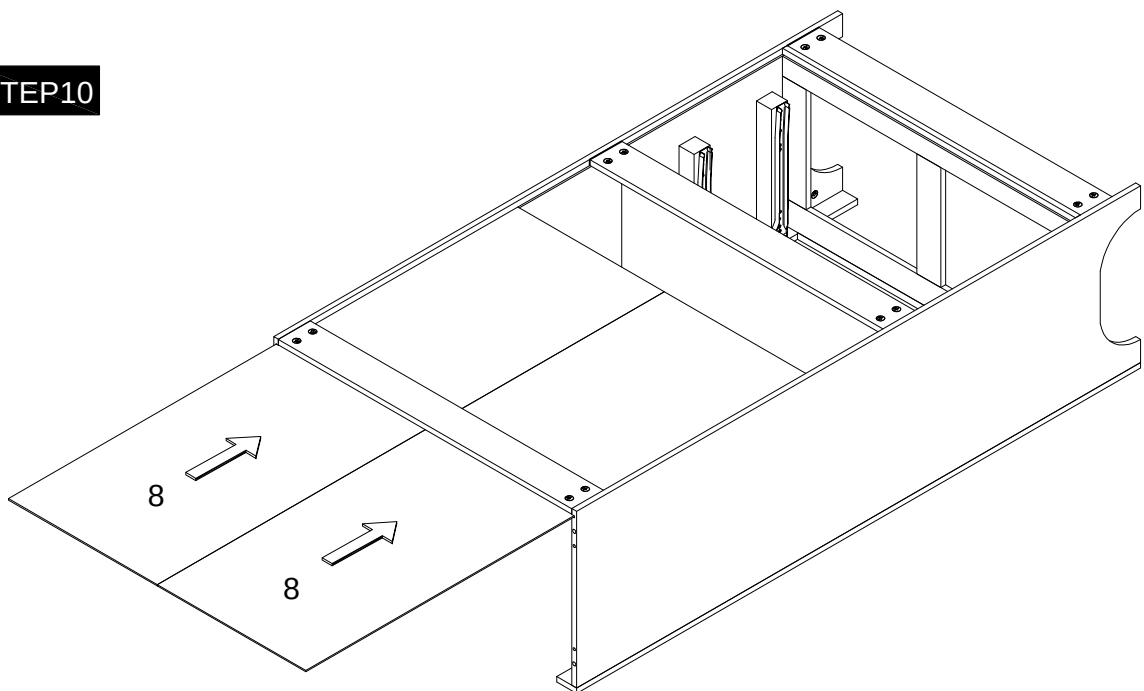


STEP11

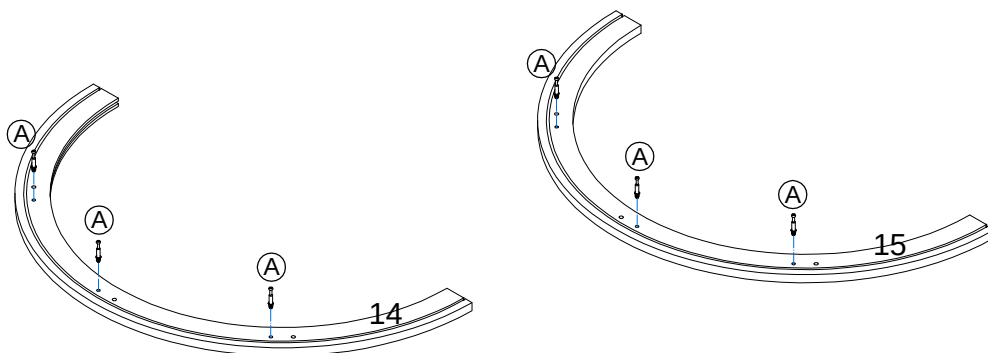


STEP12

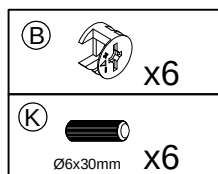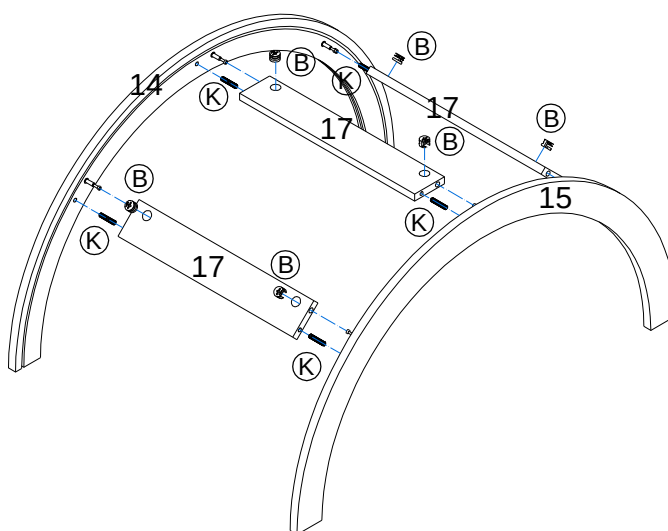



STEP13

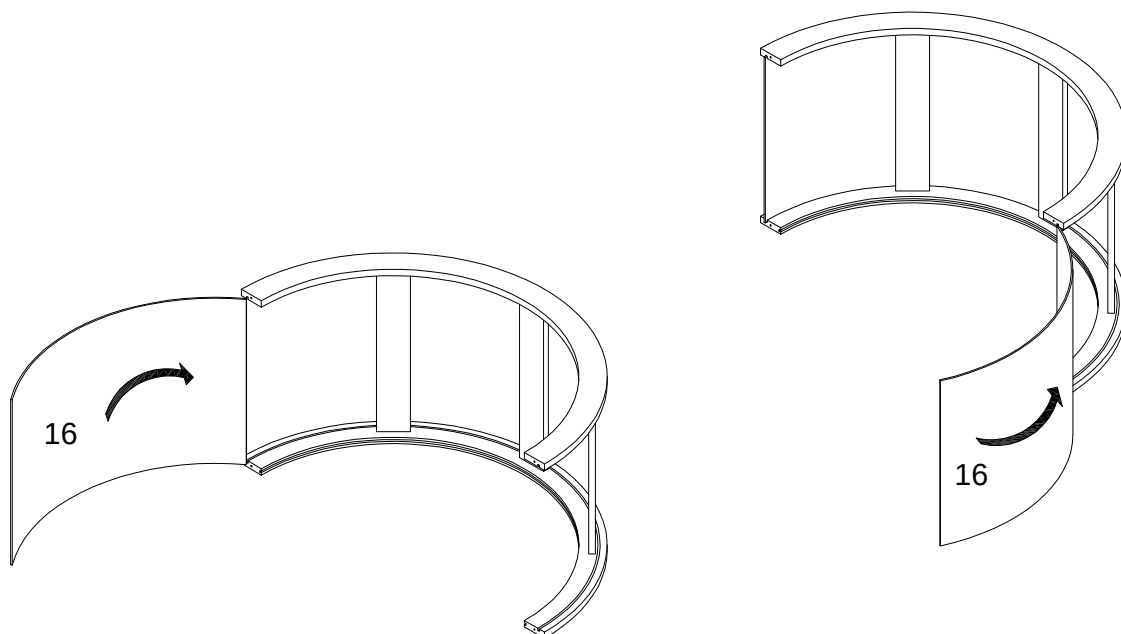



STEP14

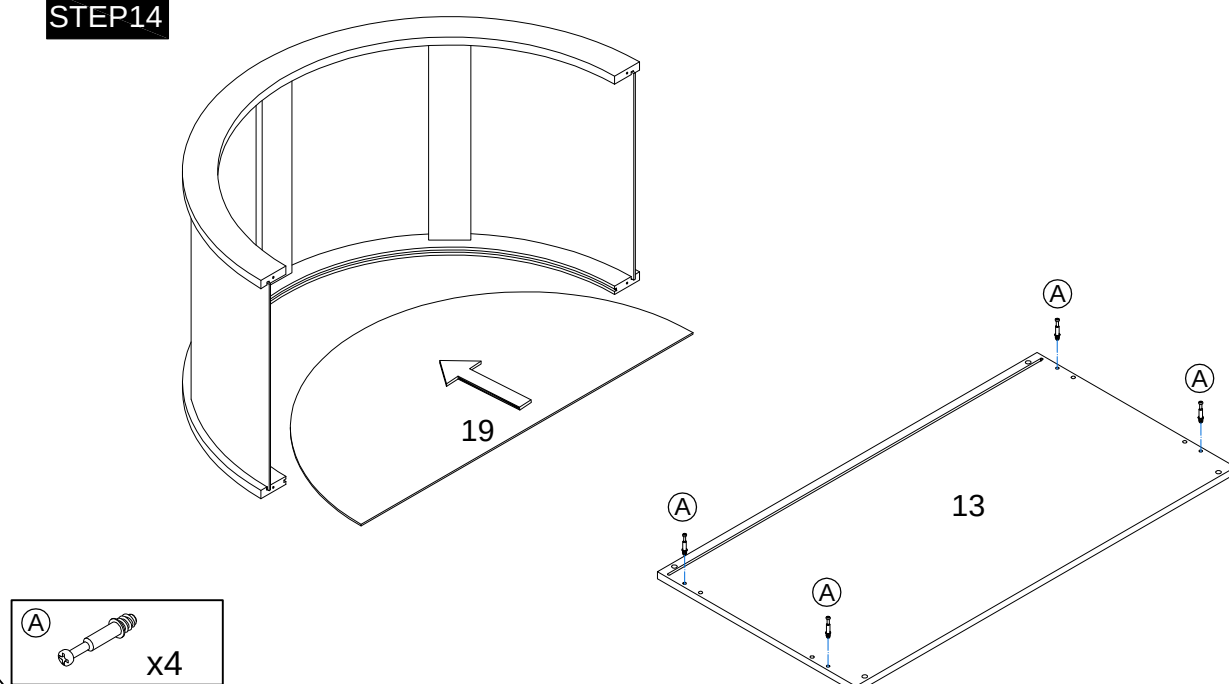



STEP15

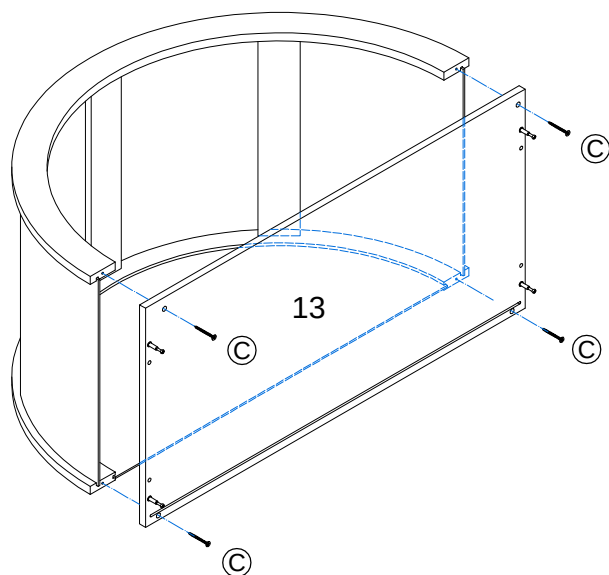



STEP16

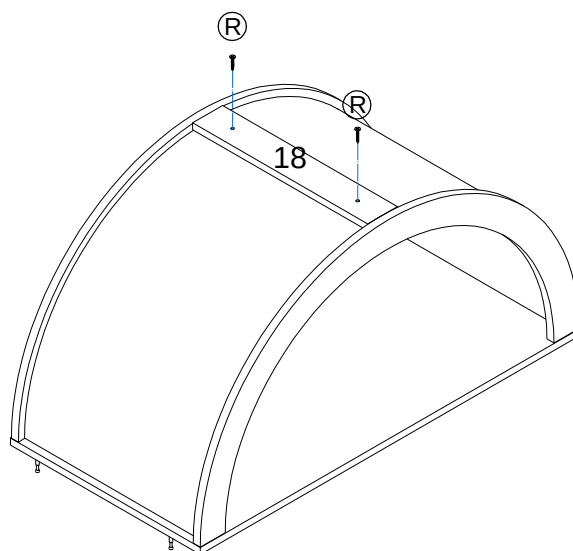



STEP17

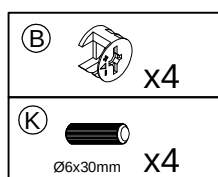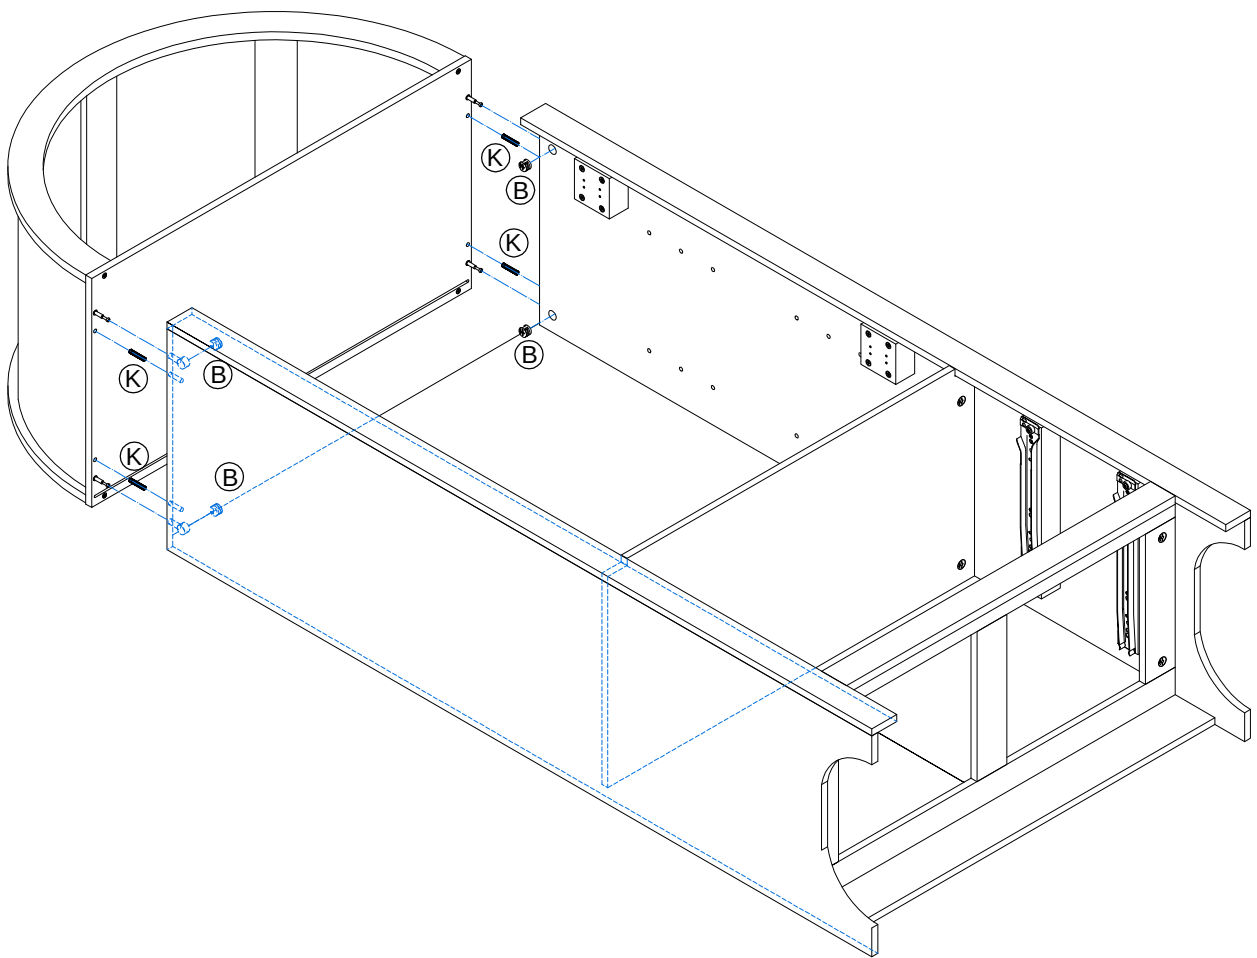



STEP18

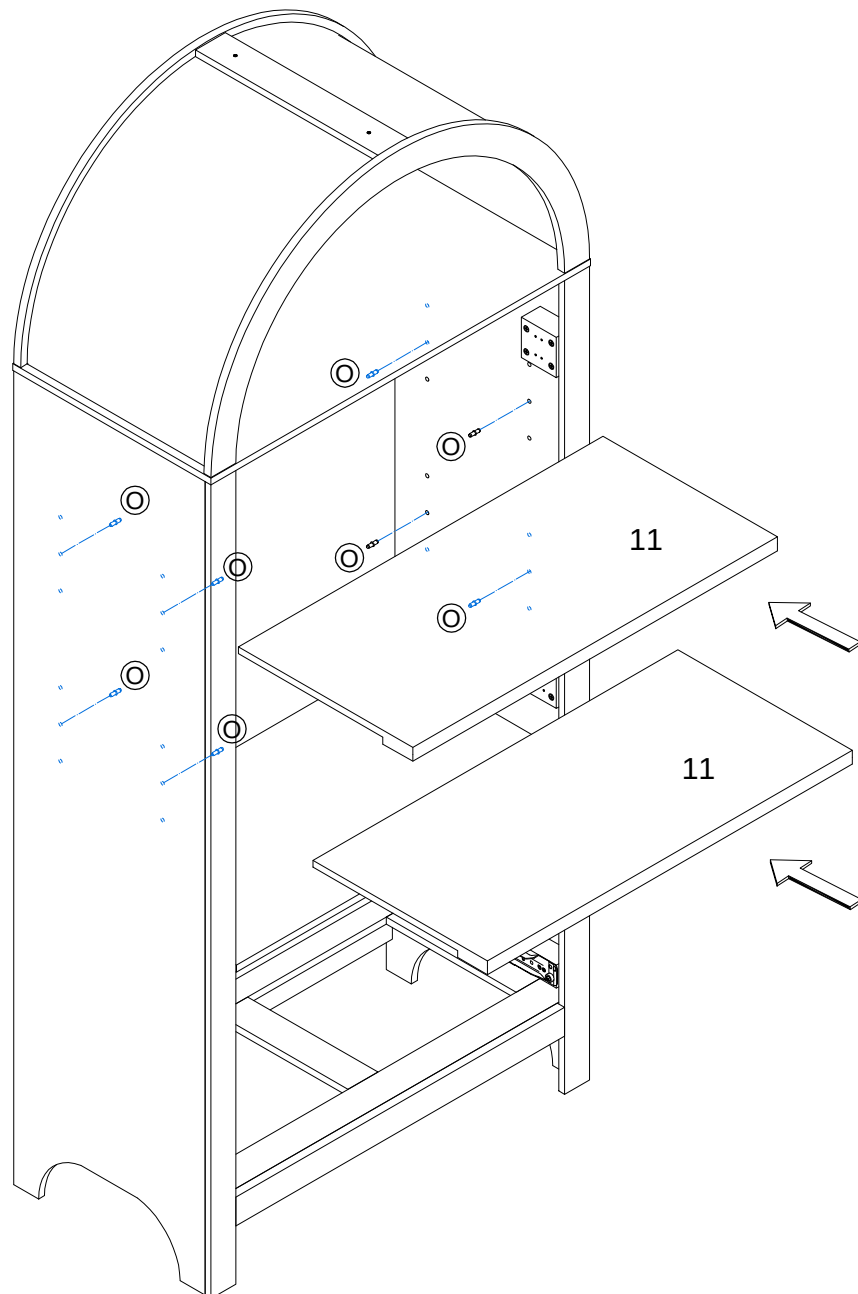

STEP19

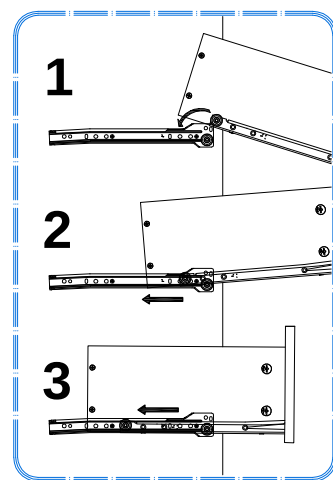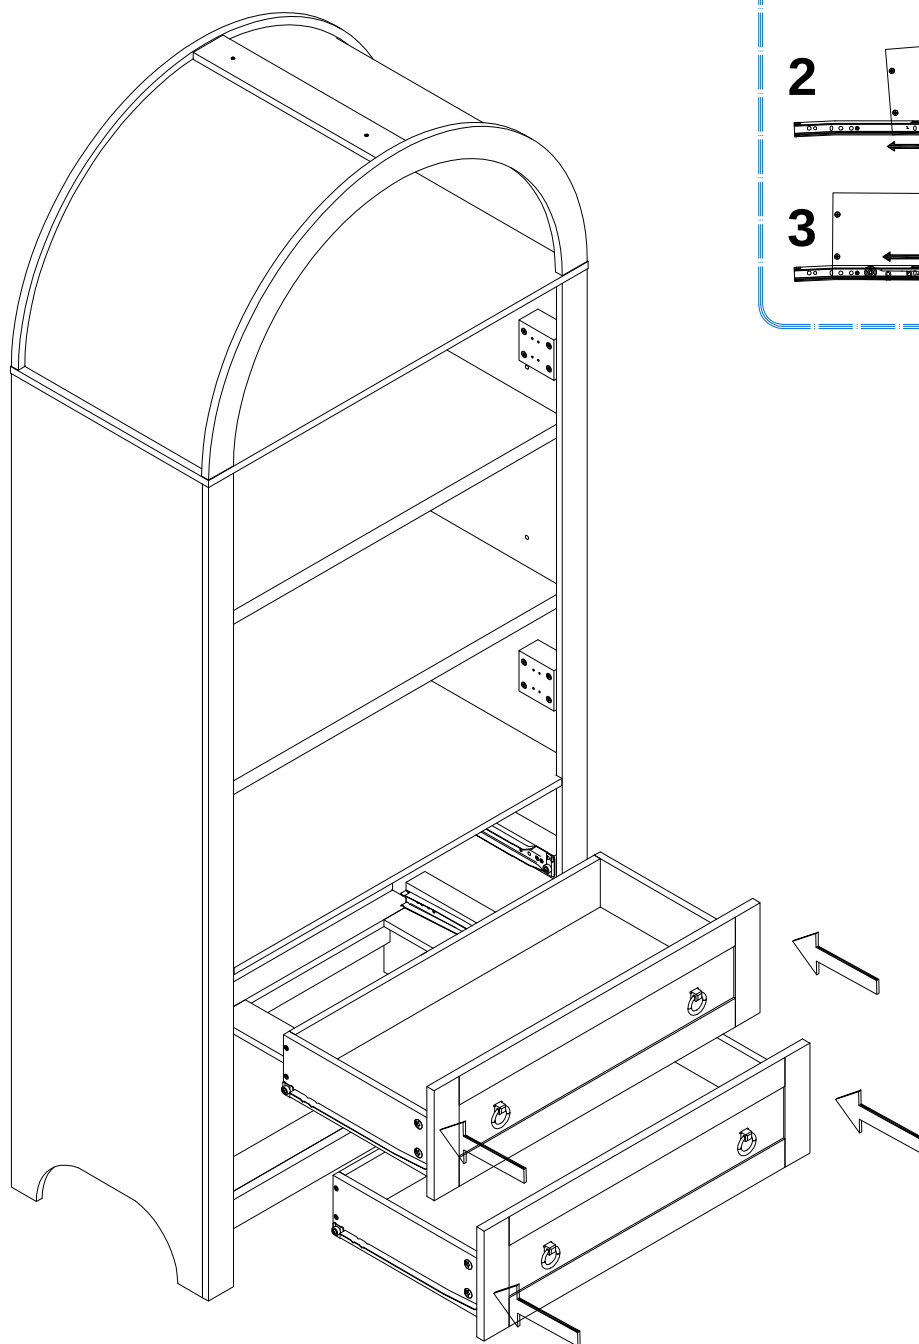


STEP20

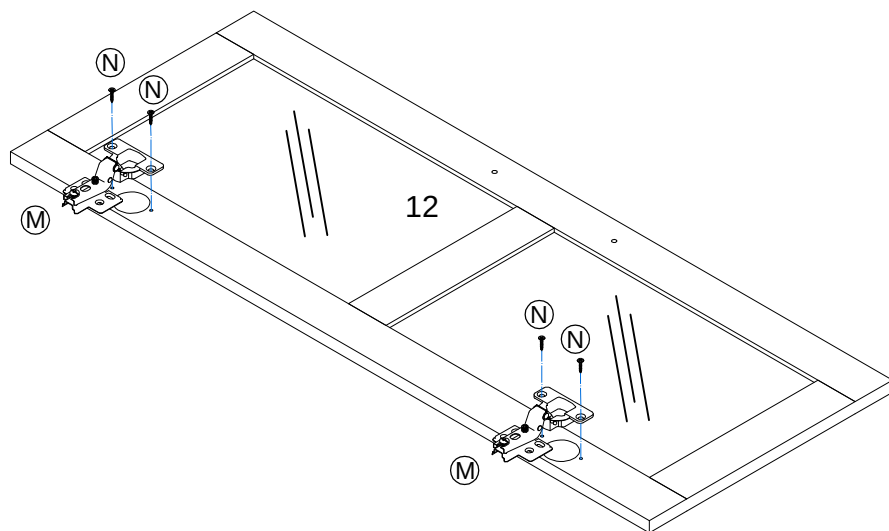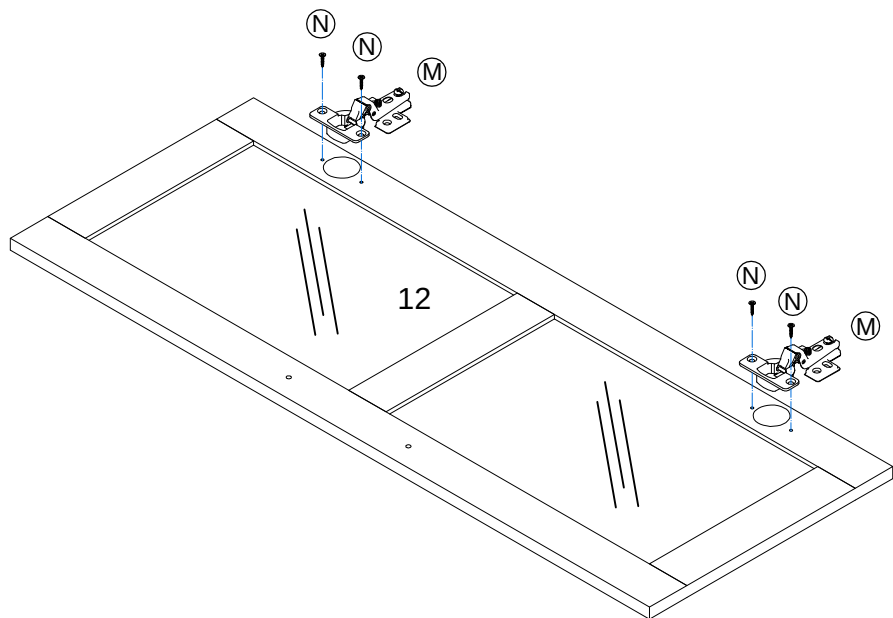


(N)		x8
(M)		x4

STEP21

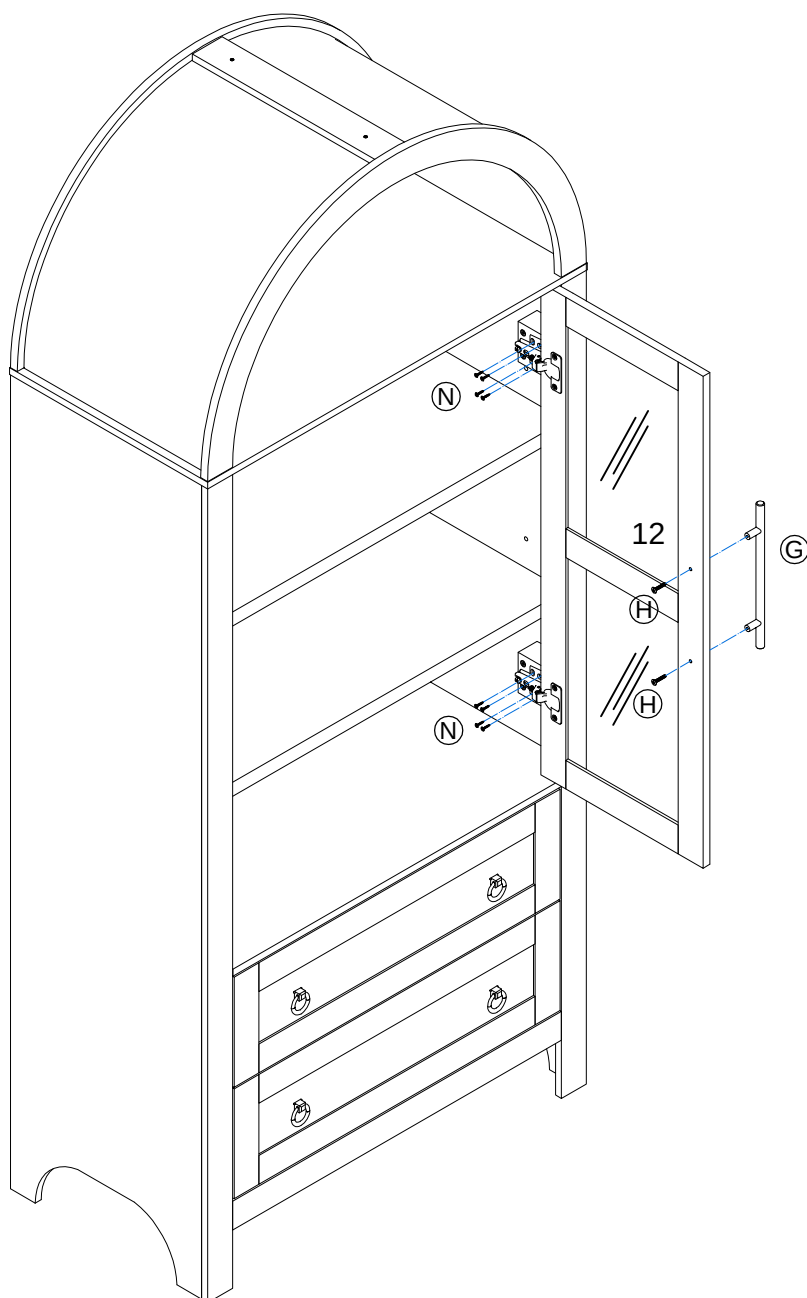



Ⓒ		x1
Ⓓ		x2
Ⓔ		x8

STEP22

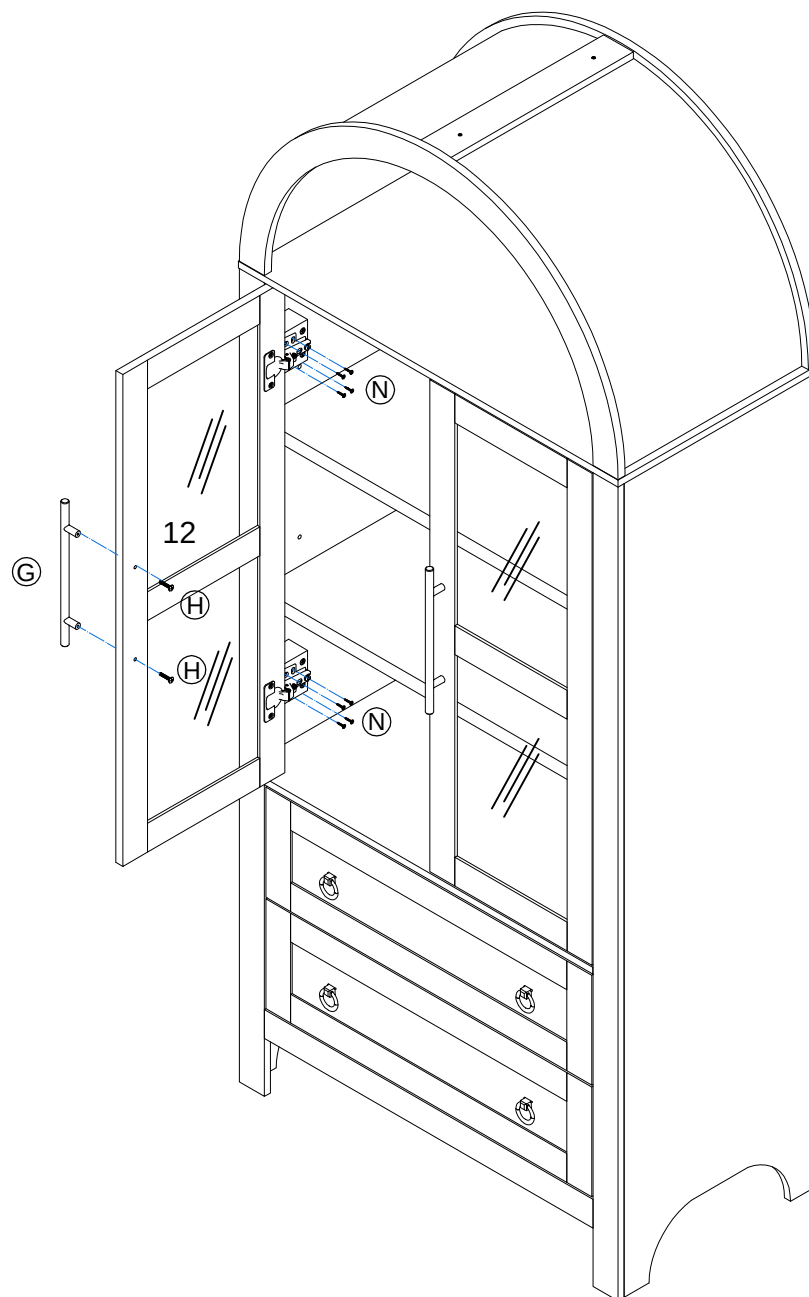


(G)		250mm	x1
(H)		Ø4x22mm	x2
(N)		Ø4x14mm	x8

STEP23

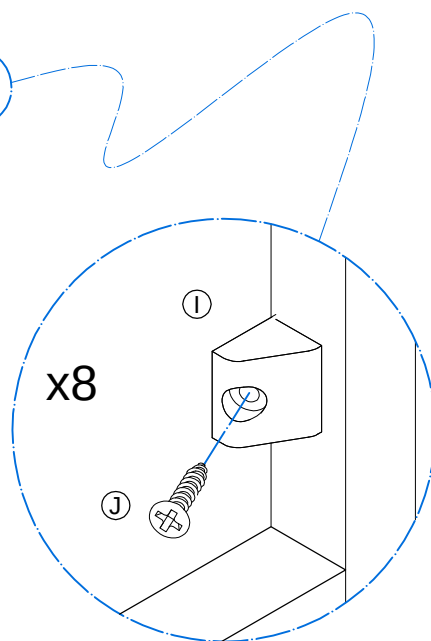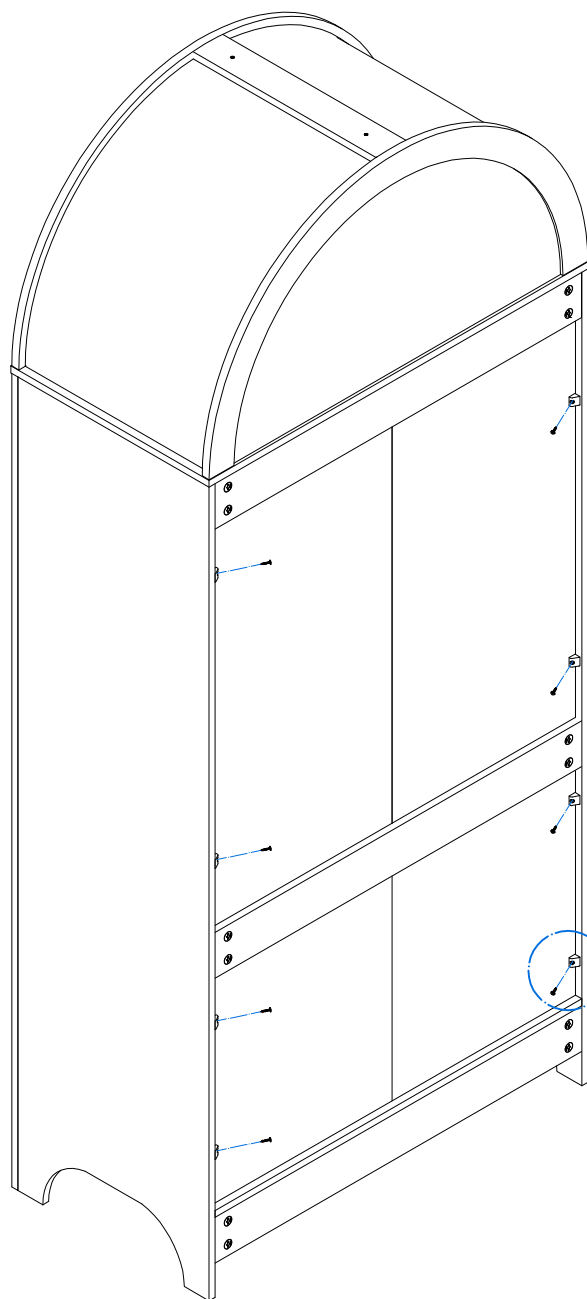

①		x8
②		Ø3x16mm x8

STEP24

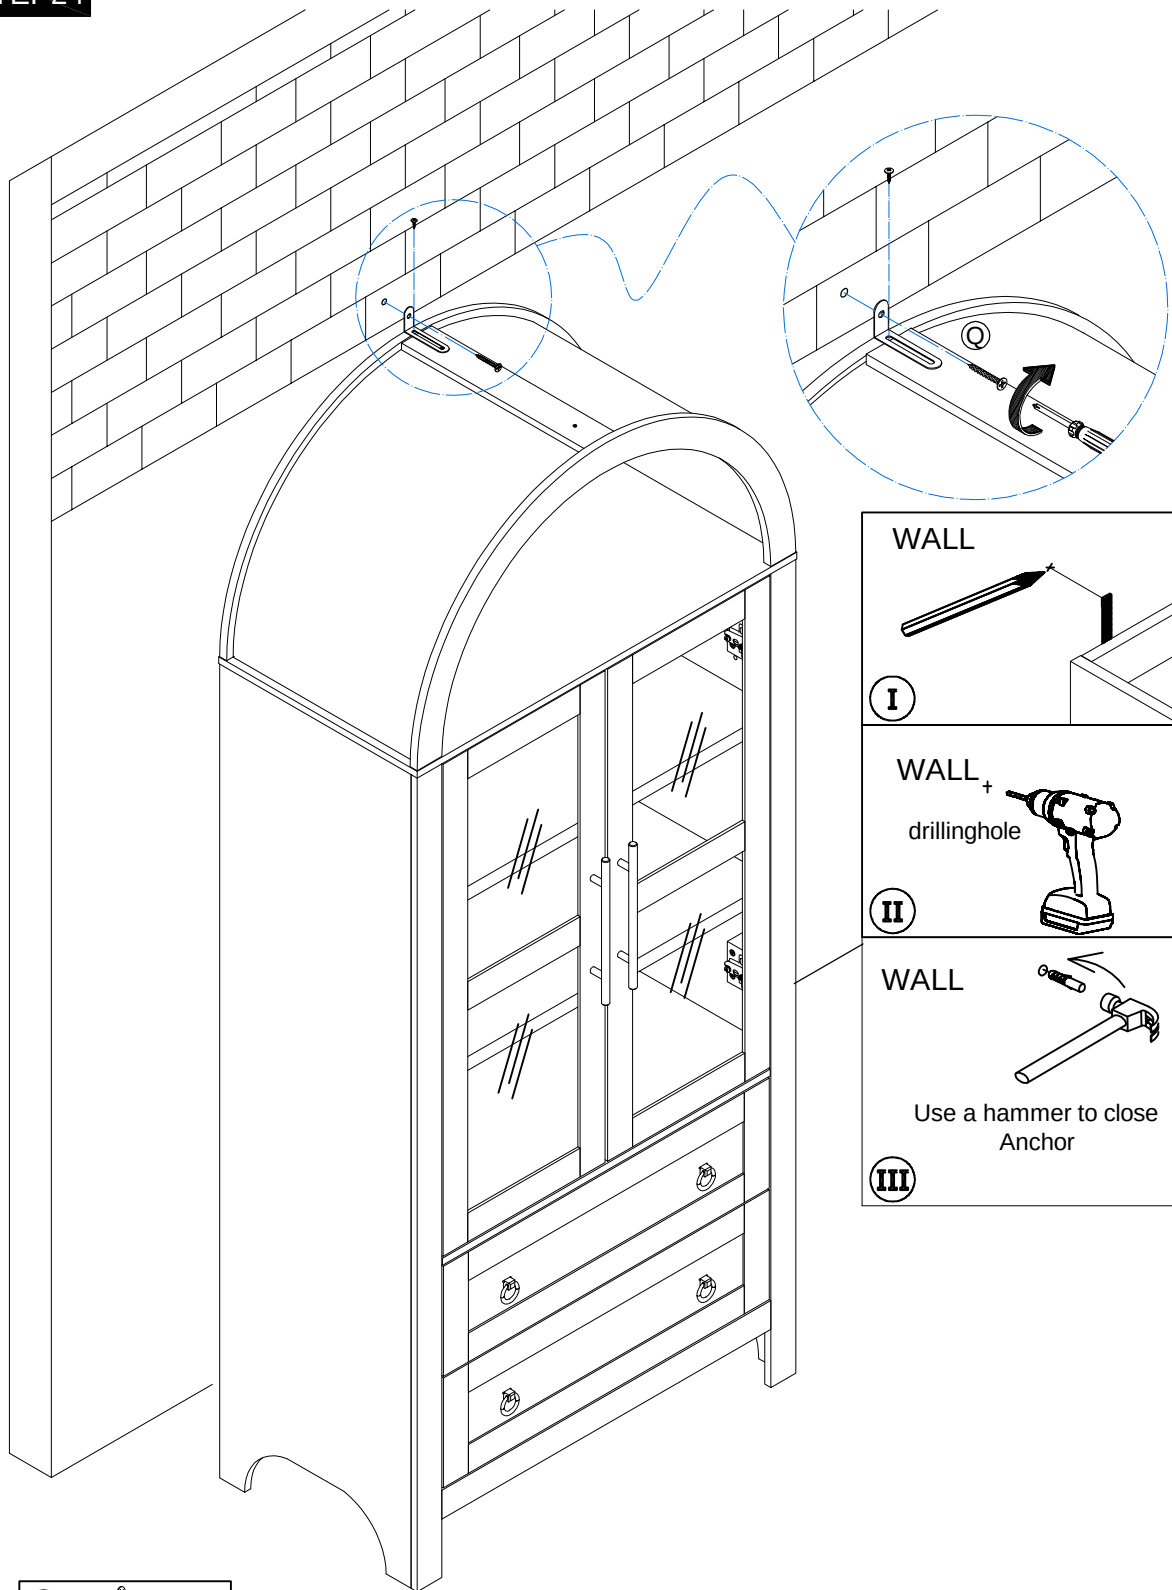


WALL



I


WALL +

drillinghole

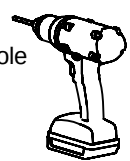

II

WALL

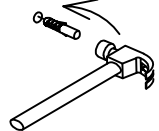

Use a hammer to close
Anchor

III

