


ITEM# 515-01-BLK




ADIRhome

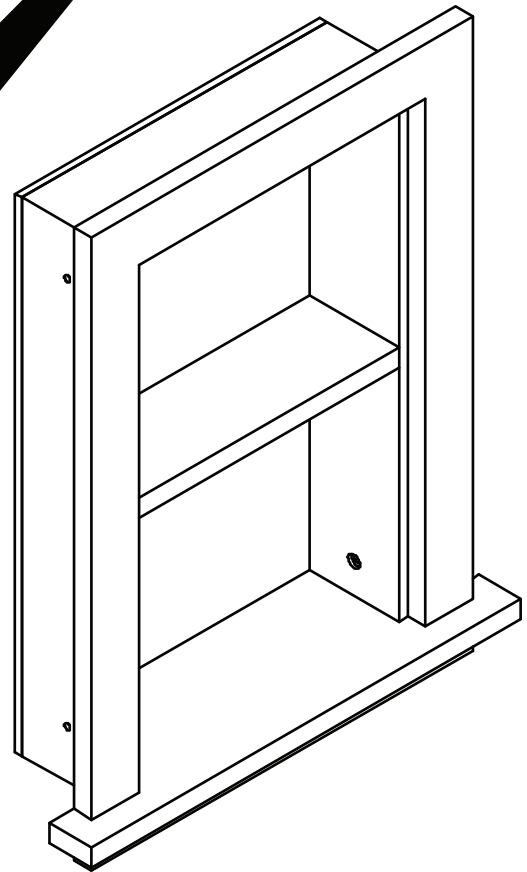

IN WALL CABINET


INSTALLATION GUIDE

PART LIST

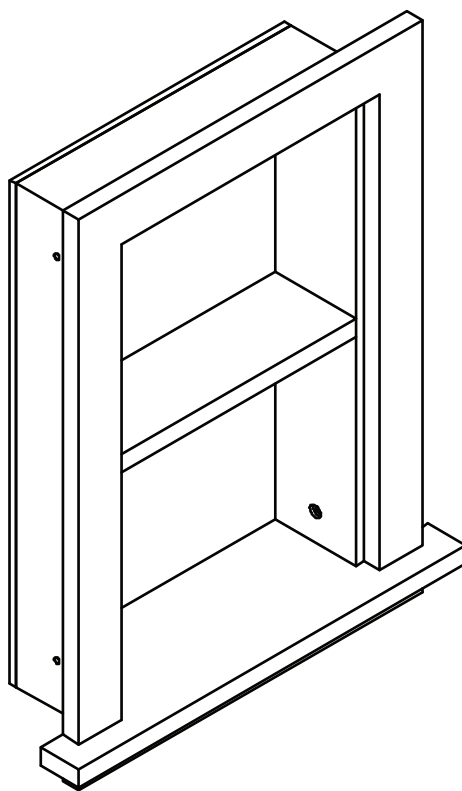


WALL CABINET


TOOLS NEEDED




4X SCREWS

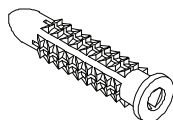

4X WALL ANCHOR

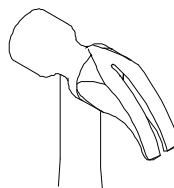


HAMMER




SCREW DRIVER


STEP 1

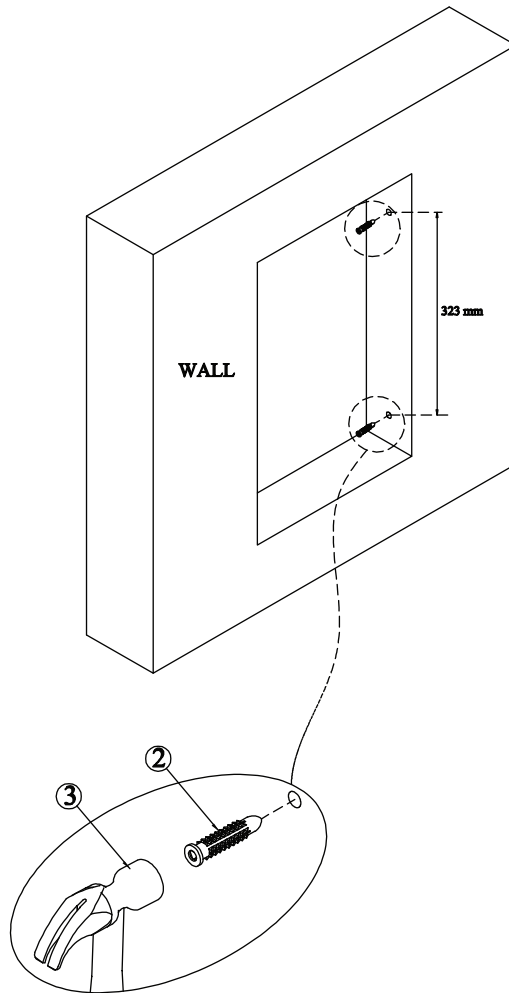


STEP 2

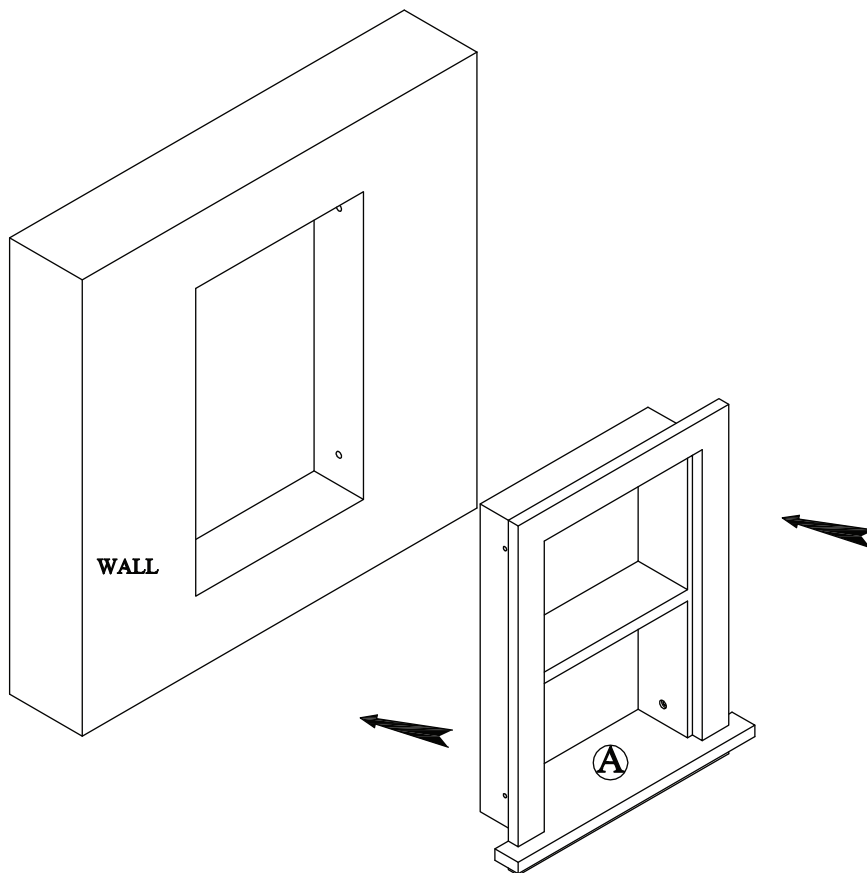

STEP 3

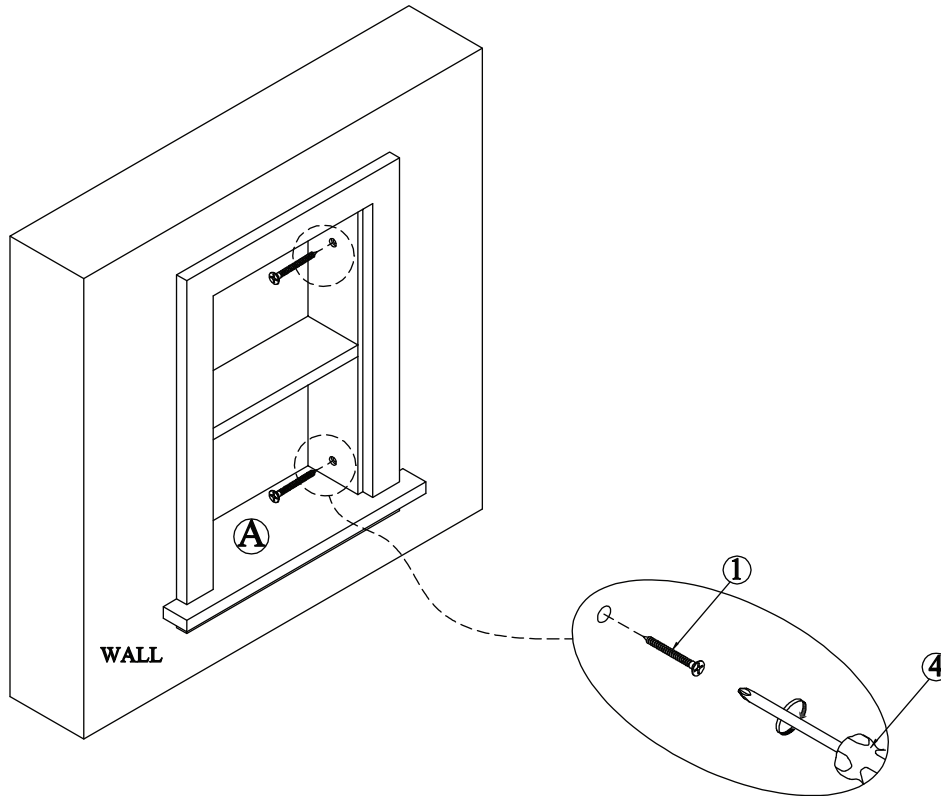

FINISH

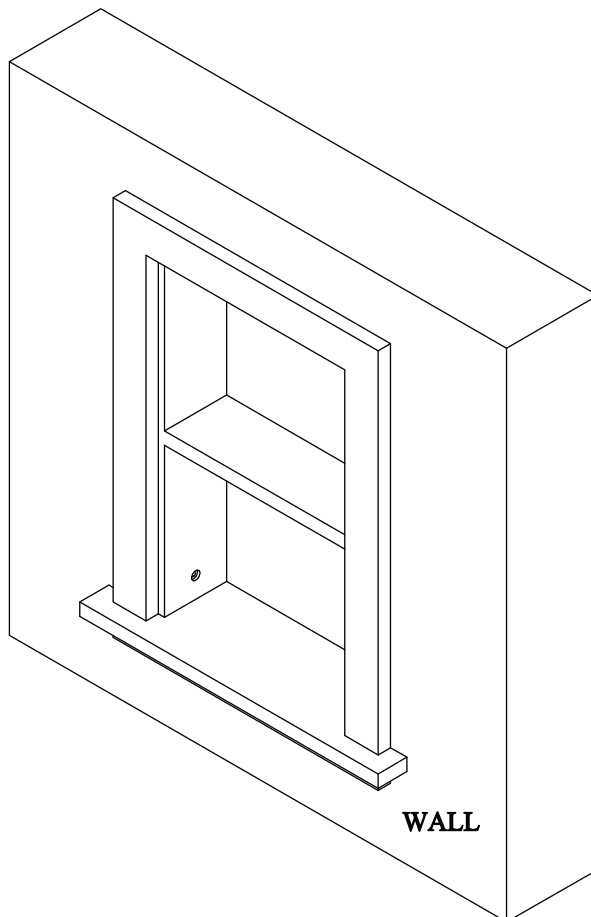



follow us on

