


5-Post Carport CP2603


Scan for Installation Video













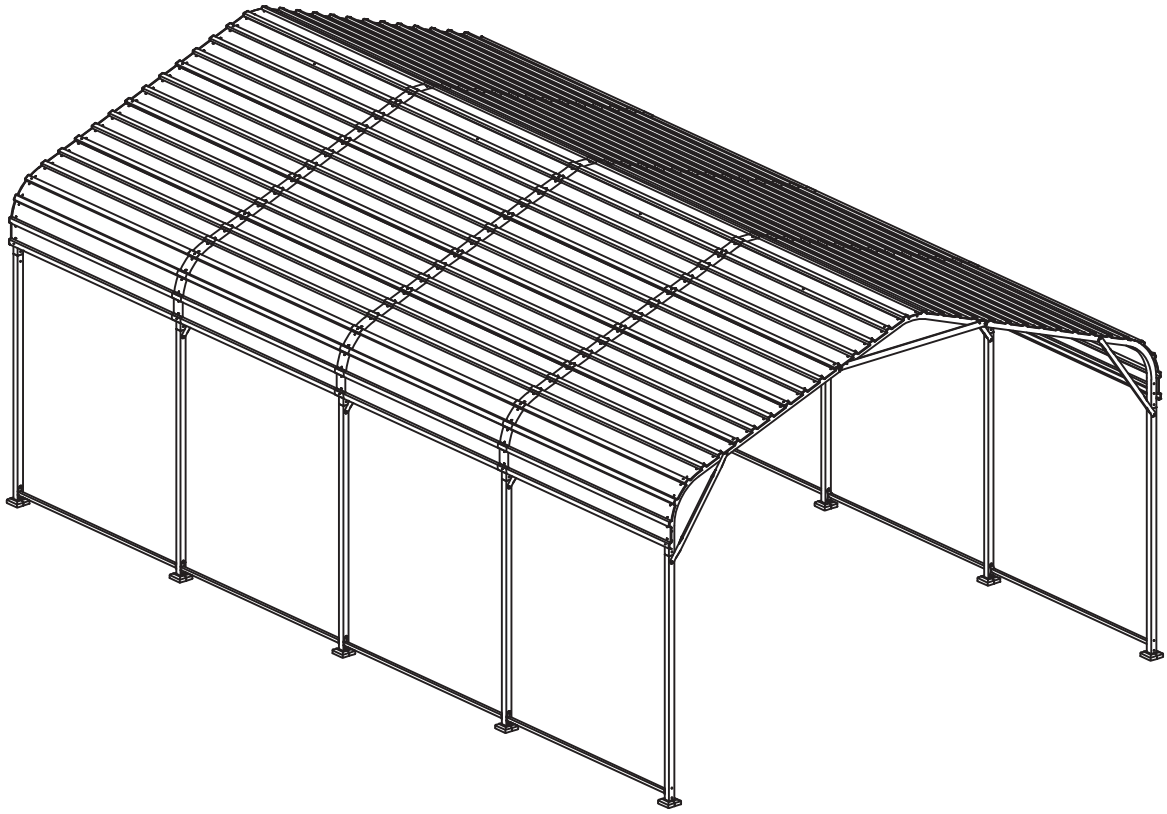


PART LIST

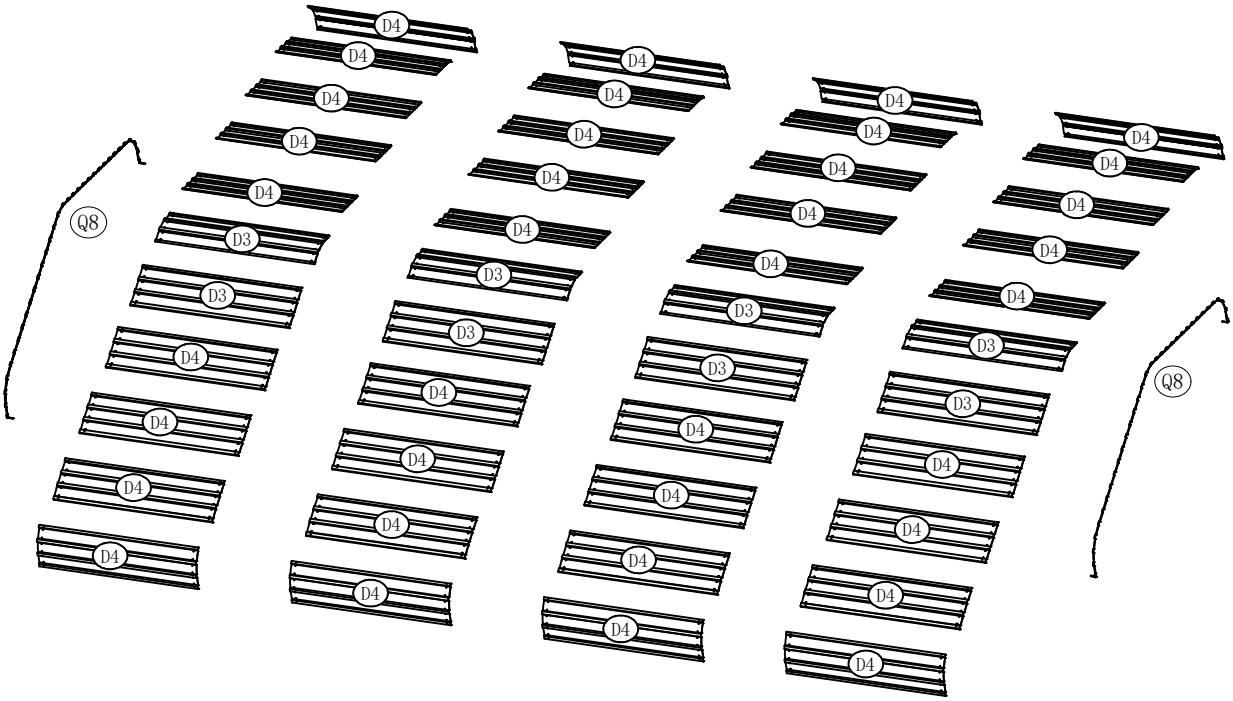


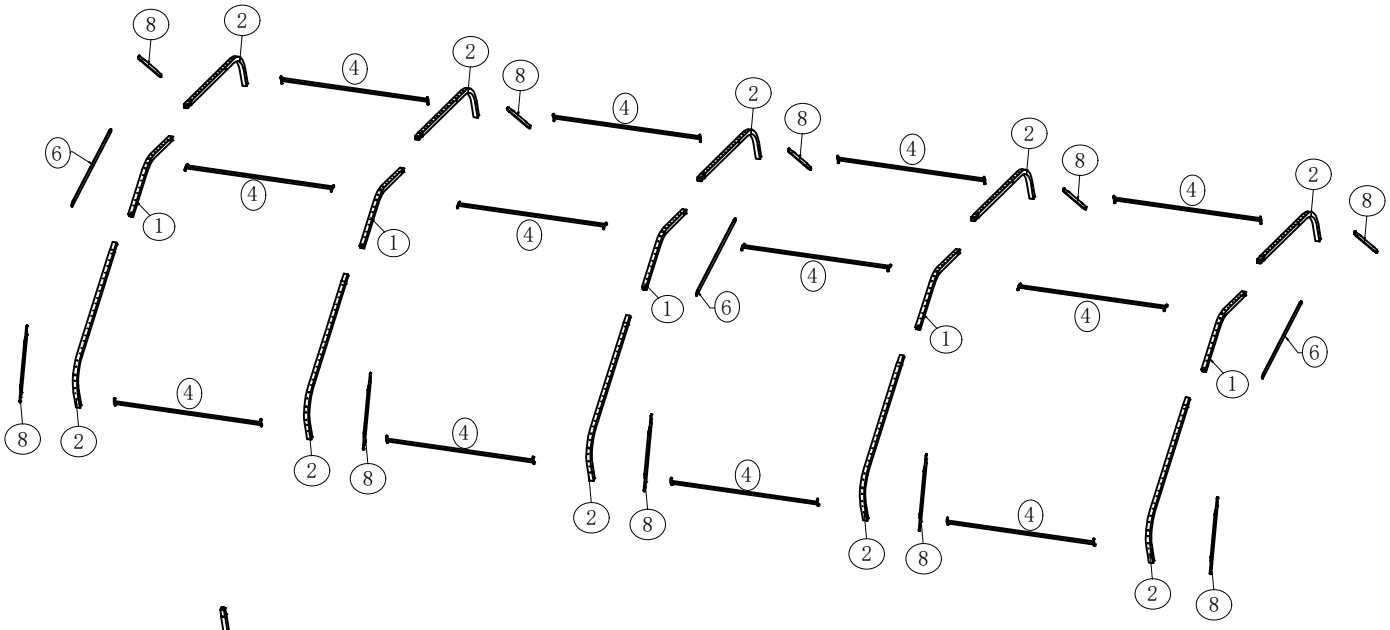


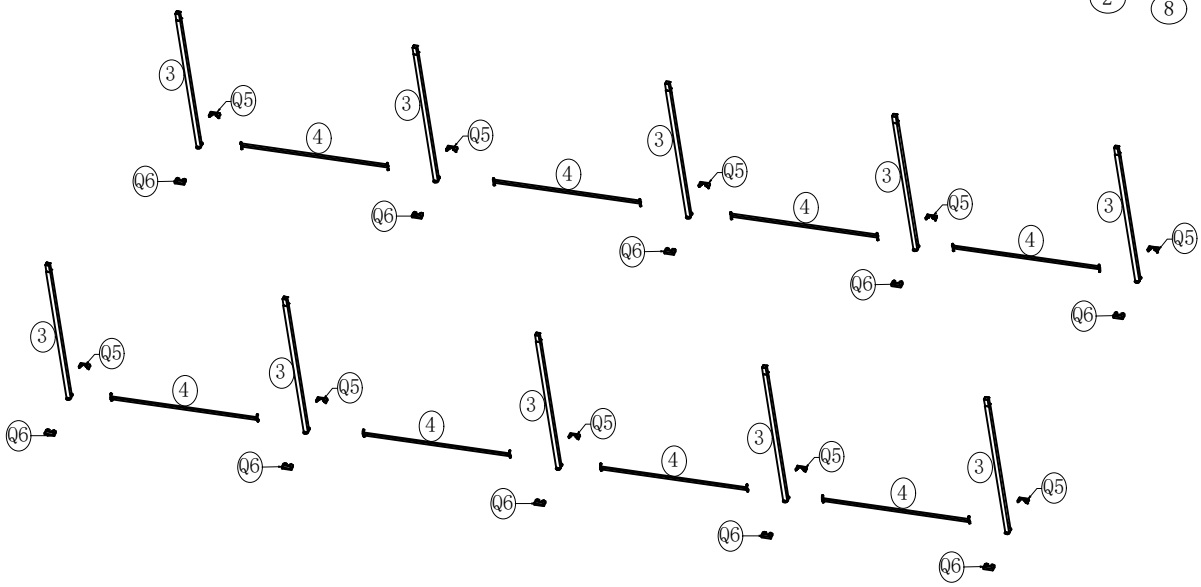


NO.	PART.	Qty.	NO.	PART.	Qty.
1		5	Q17		100
2		10	Q18		60
3		10	Q19		330
4		20	Q20		100
6		3	Q21		20
8		10	Q32		60
D3		8	Q22		4
D4		36	Q23		1
Q5		10	Q24		1
Q6		10	Q25		1
Q8		2	Q26		1
Q9		100	Q27		1
Q13		330	F40		4
Q15		100			

NO.	PART.	Qty.
1		2
2		4
Q15		8
Q17		8
Q20		8

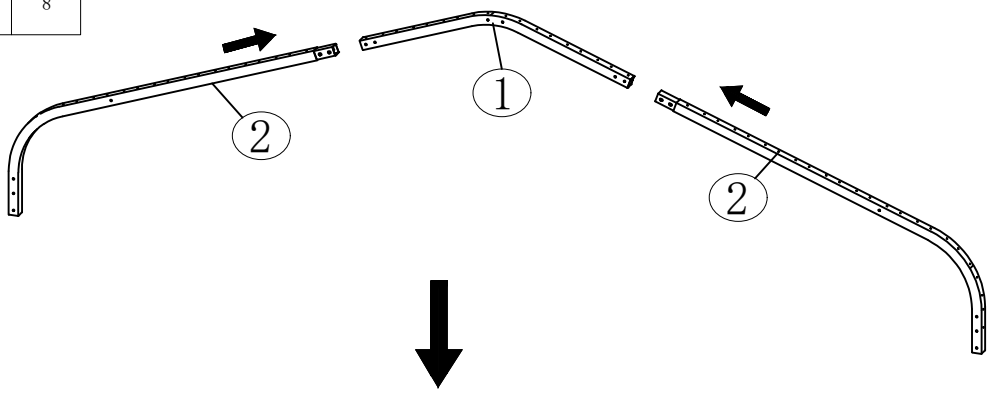

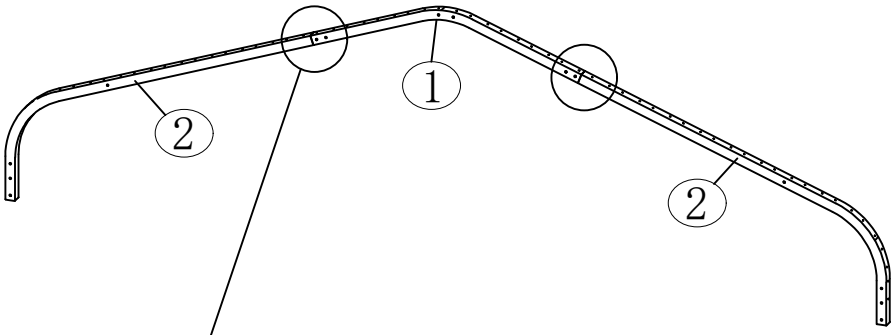


X2

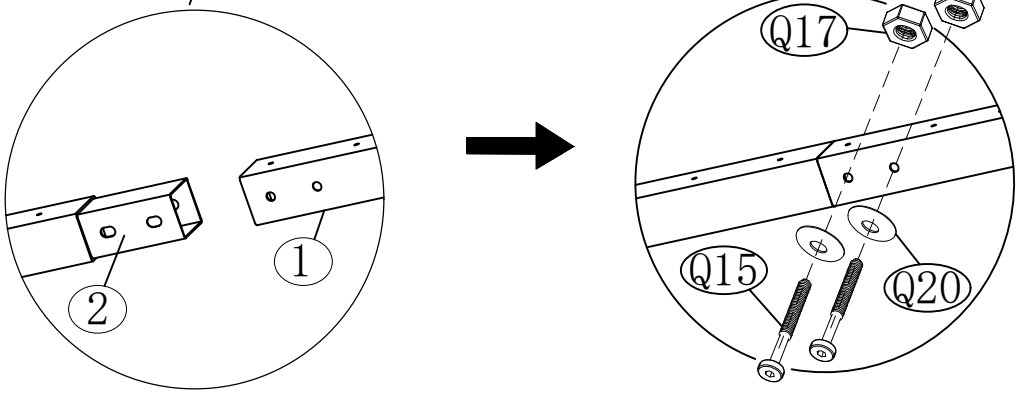



NO.	PART.	Qty.
1		3
2		6
6		3
Q15		12
Q17		12
Q20		12


NO.	PART.	Qty.
4		12
Q15		30
Q17		30
Q20		30

NO.	PART.	Qty.
D3		4
Q13		30
Q19		30
F40		

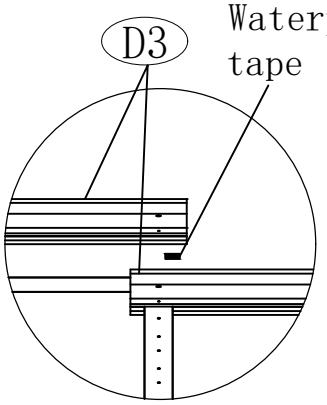


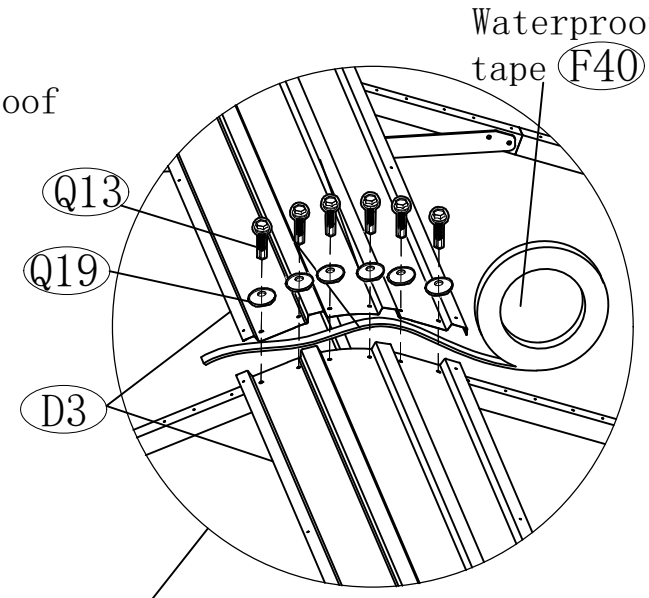

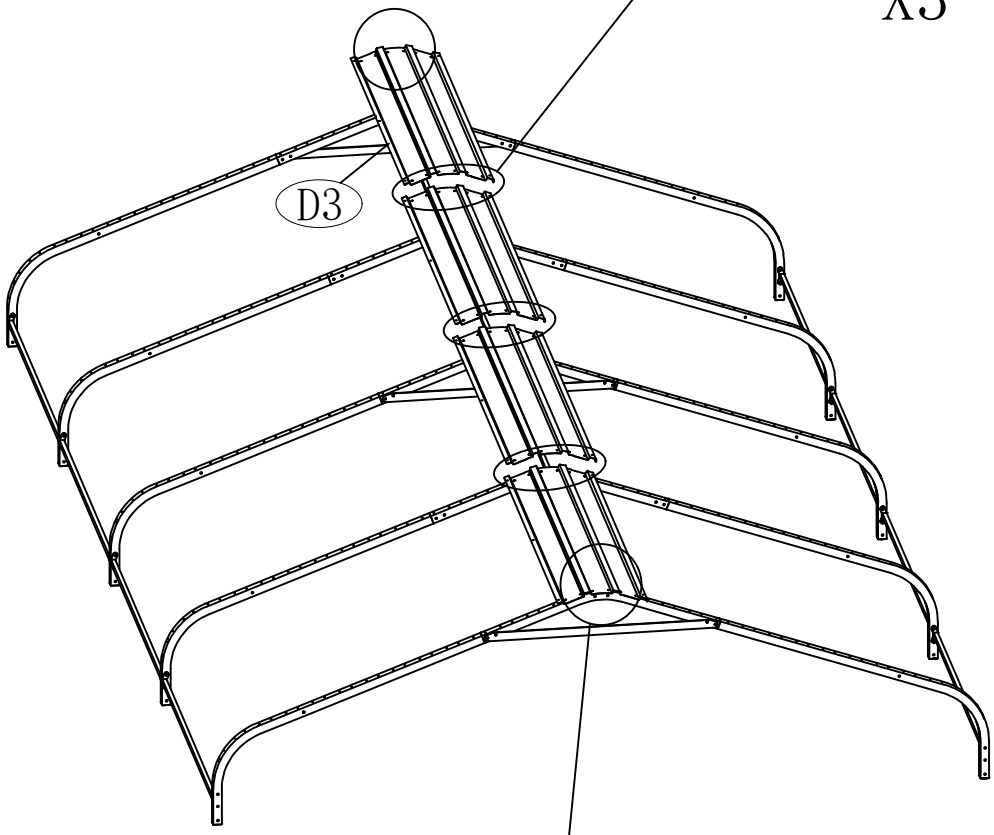

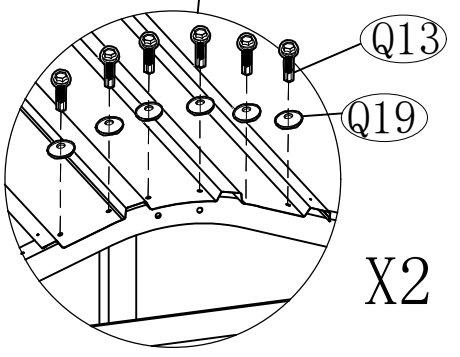


NO.	PART.	Qty.
D3		4
Q13		30
Q32		9
Q18		9
Q19		30
F40		

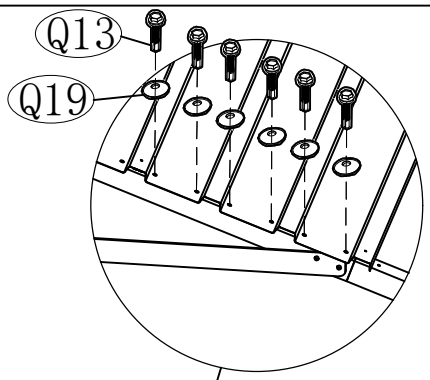


X2


Step 2

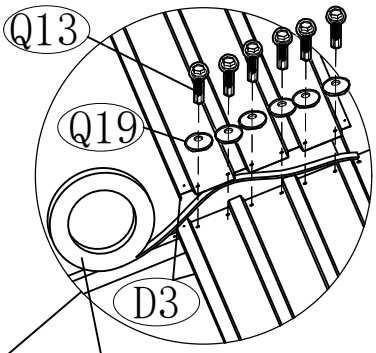

Waterproof
F40 tape


X3

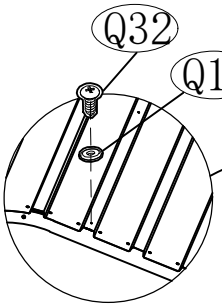

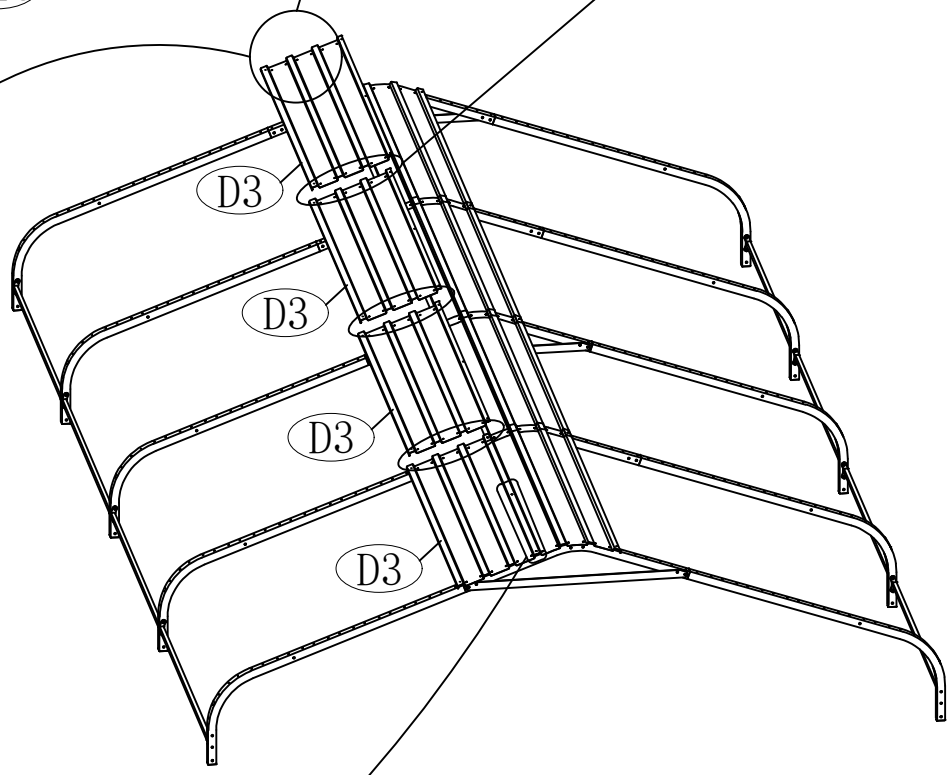


Step 1

X4

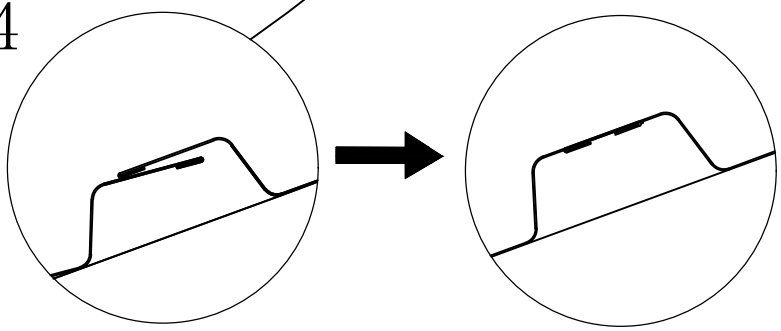


When two panels overlap,
make sure the upper panel
covers the lower panel.

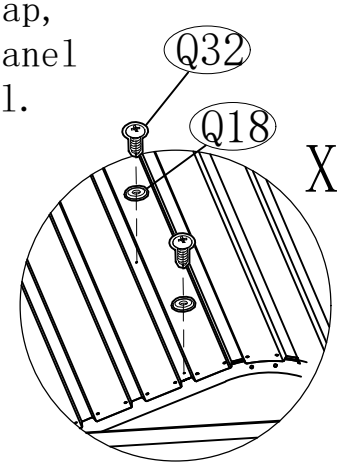


X4

NO.	PART.	Qty.
D4		4
Q13		30
Q32		5
Q18		5
Q19		30
F40		


Step 2

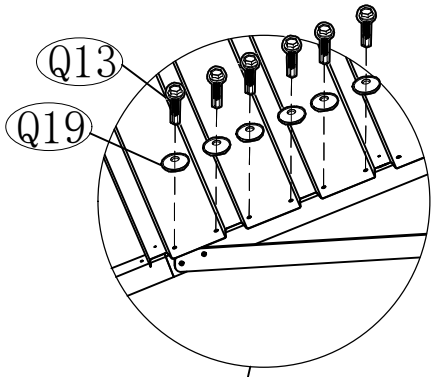


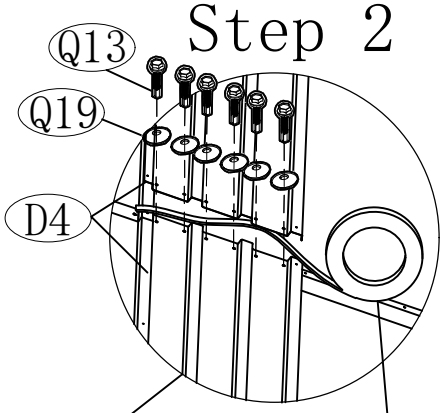

Waterproof tape F40

X3

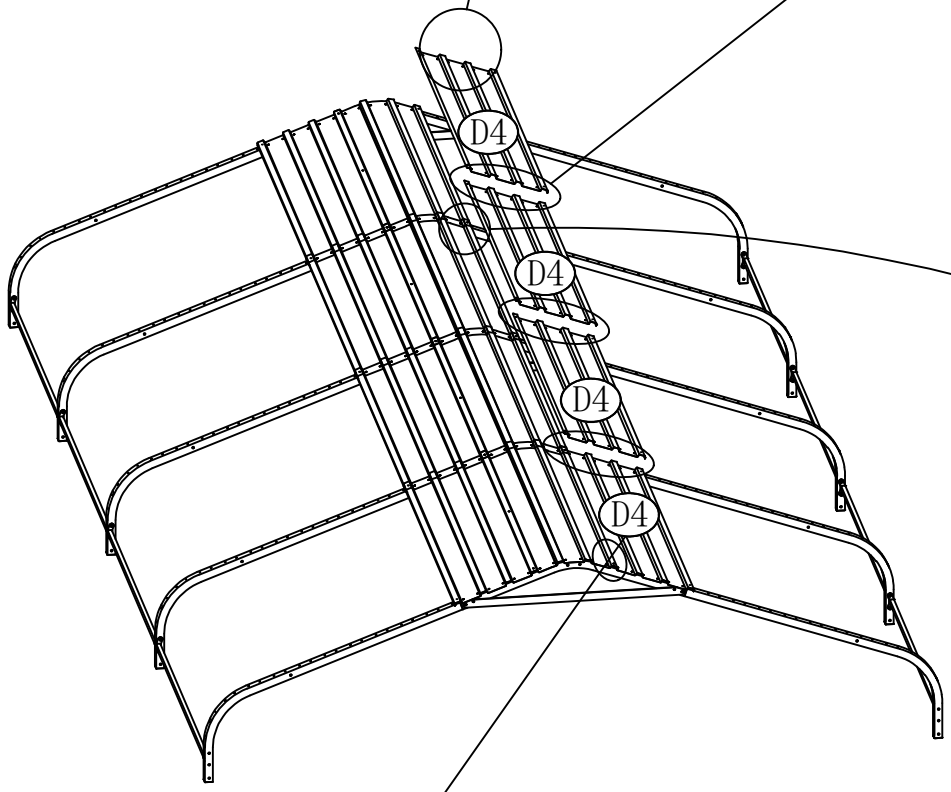

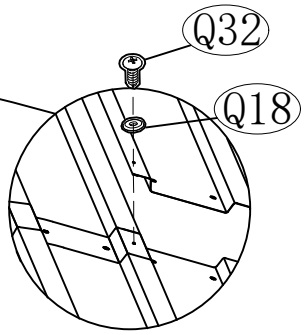


X3


When two panels overlap, make sure the upper panel covers the lower panel.

Step 1


X4

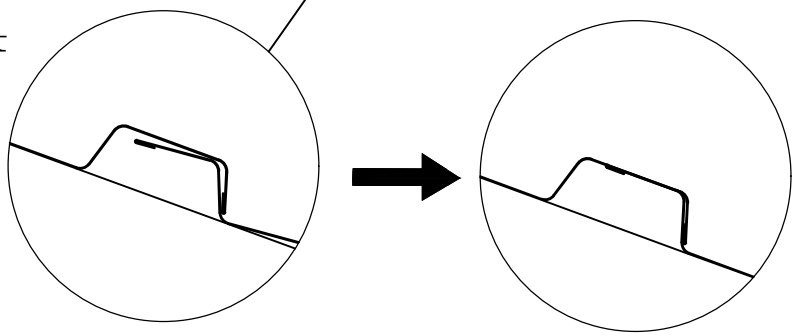

X2

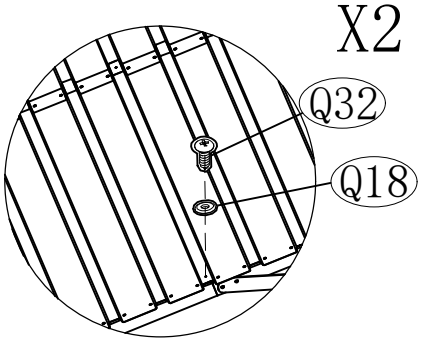


NO.	PART.	Qty.
D4		8
Q13		60
Q32		10
Q18		10
Q19		60
F40		

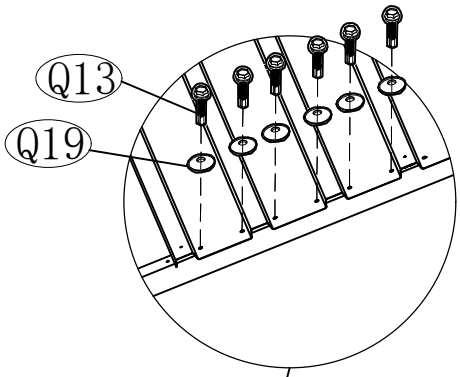


X4


Step 2

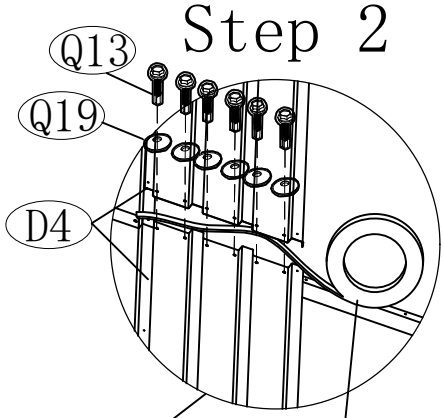

Waterproof tape F40

X6

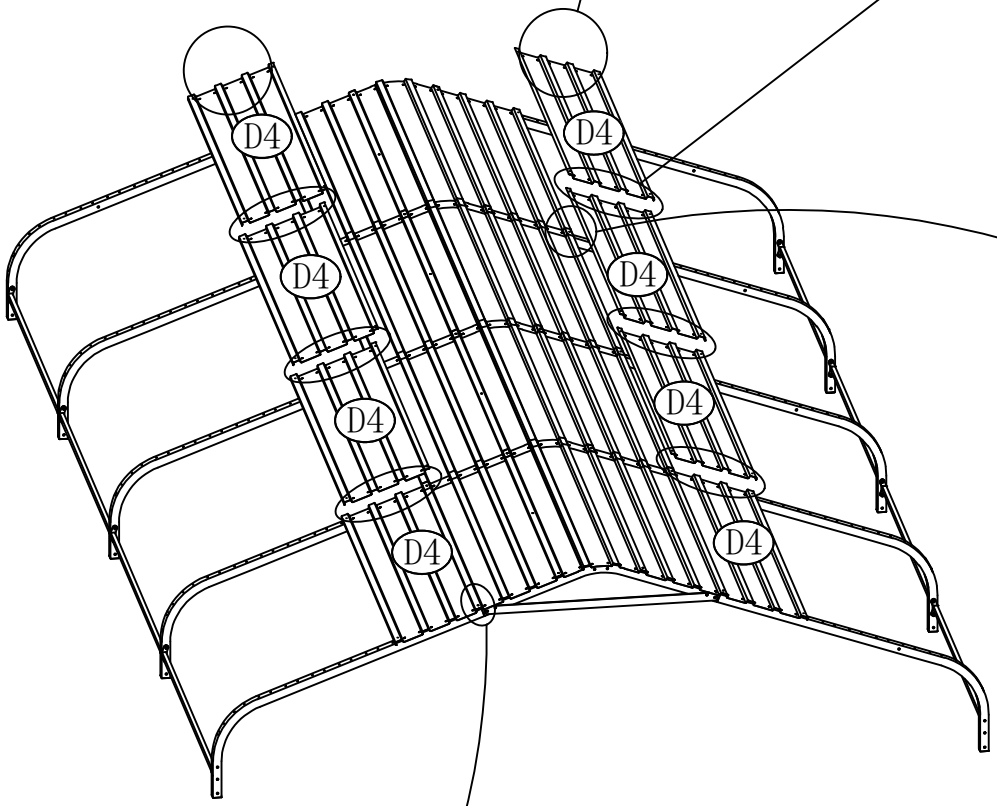

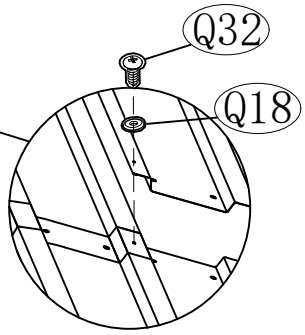



X6

When two panels overlap, make sure the upper panel covers the lower panel.

Step 1


X8

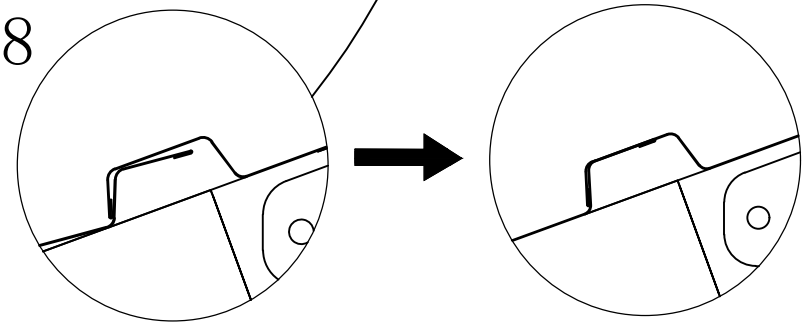

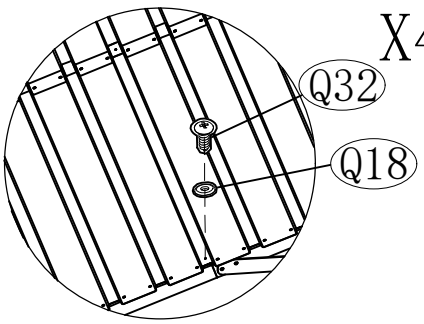


X4

NO.	PART.	Qty.
D4		8
Q13		60
Q32		10
Q18		10
Q19		60
F40		

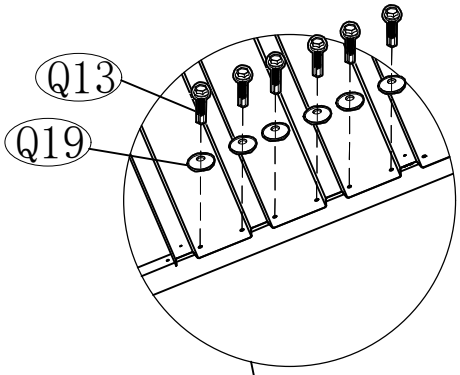


X4


Step 2

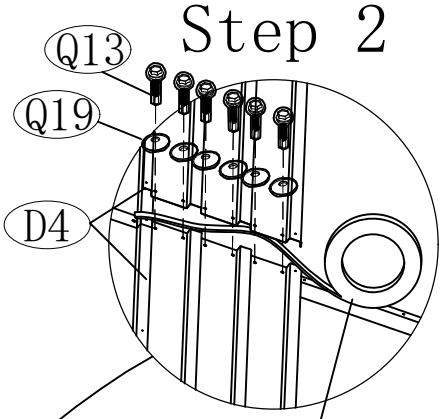

Waterproof tape F40

X6

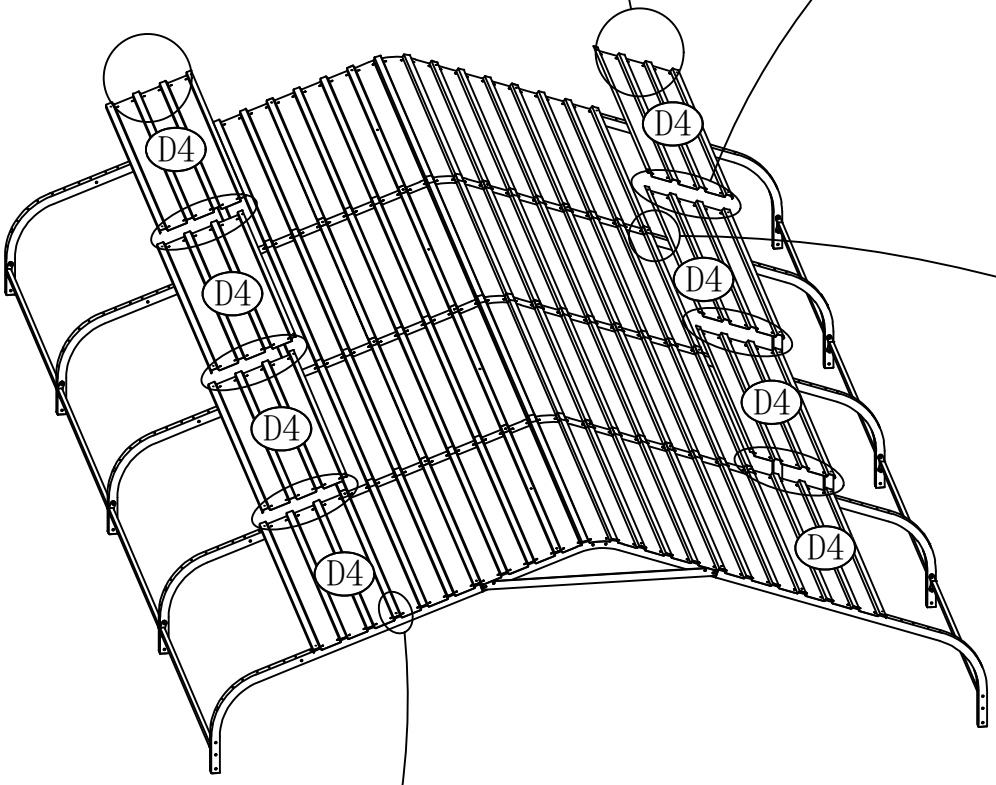

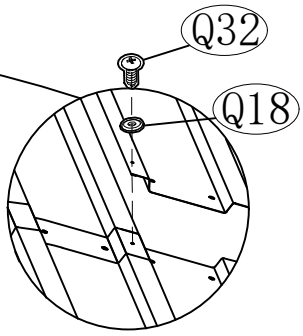


X6


When two panels overlap, make sure the upper panel covers the lower panel.

Step 1

X8

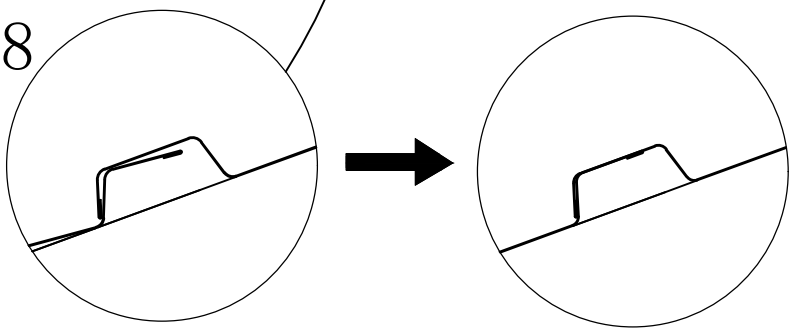


X4

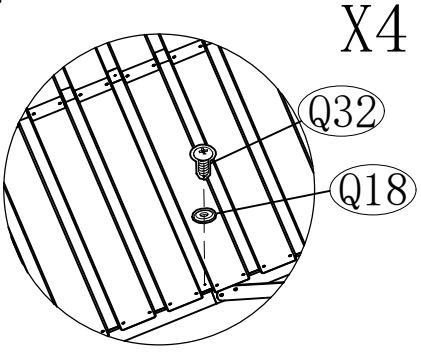


NO.	PART.	Qty.
D4		8
Q13		60
Q32		10
Q18		10
Q19		60
F40		

Step 2

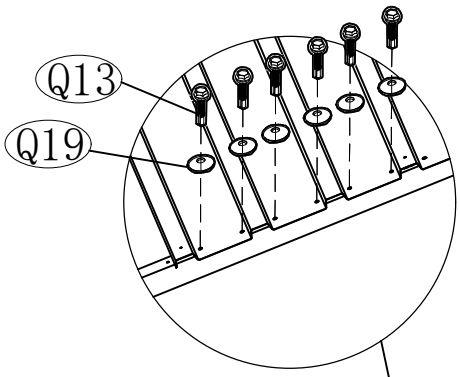



X4

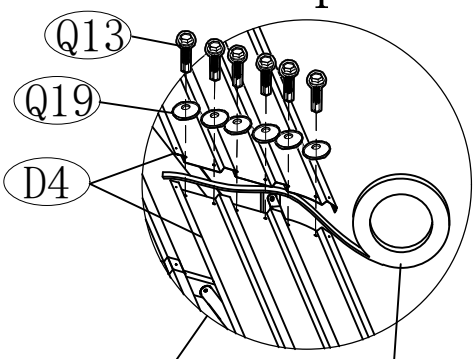

Waterproof tape F40

X6

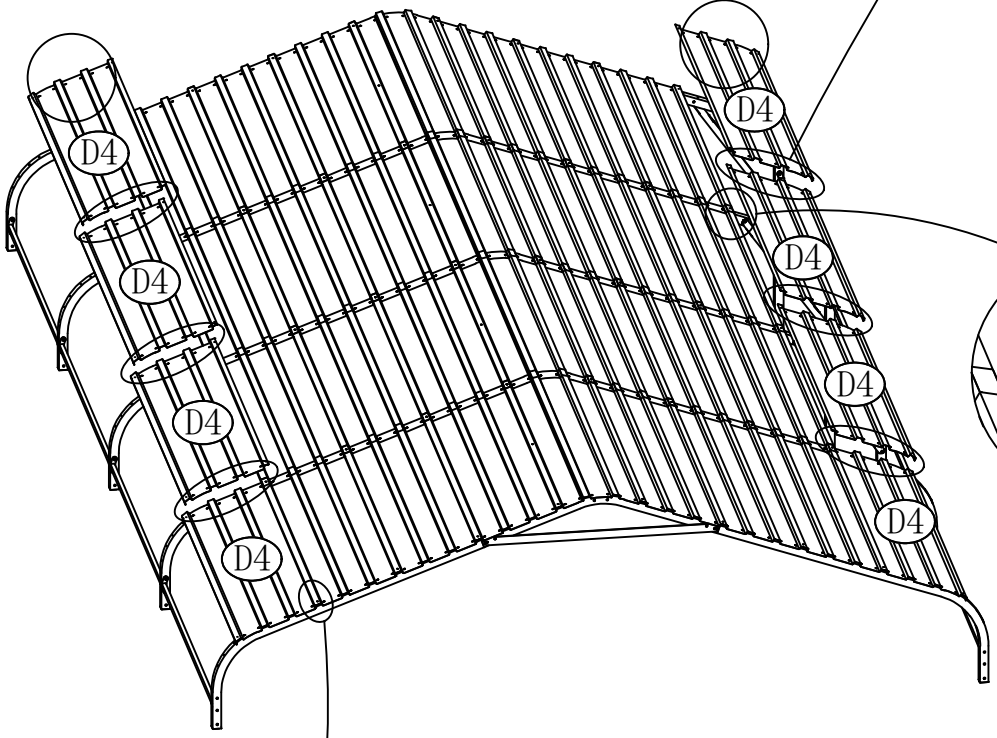

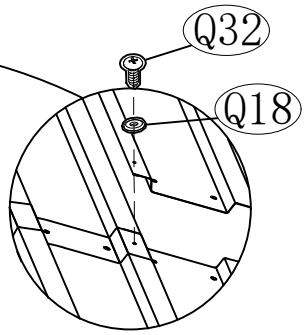


X6


When two panels overlap, make sure the upper panel covers the lower panel.

Step 1


X8

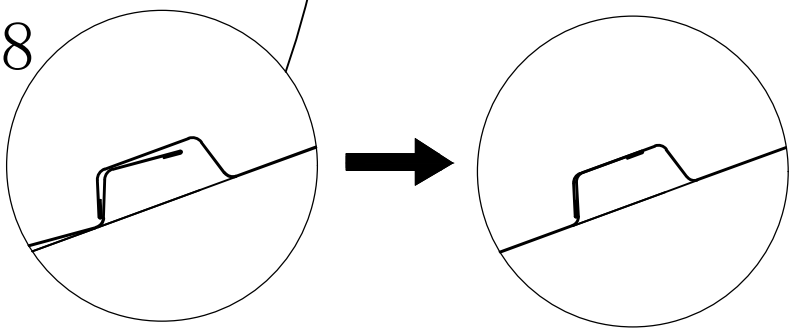


X4

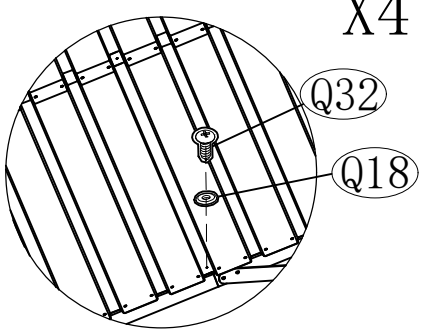


NO.	PART.	Qty.
3		10

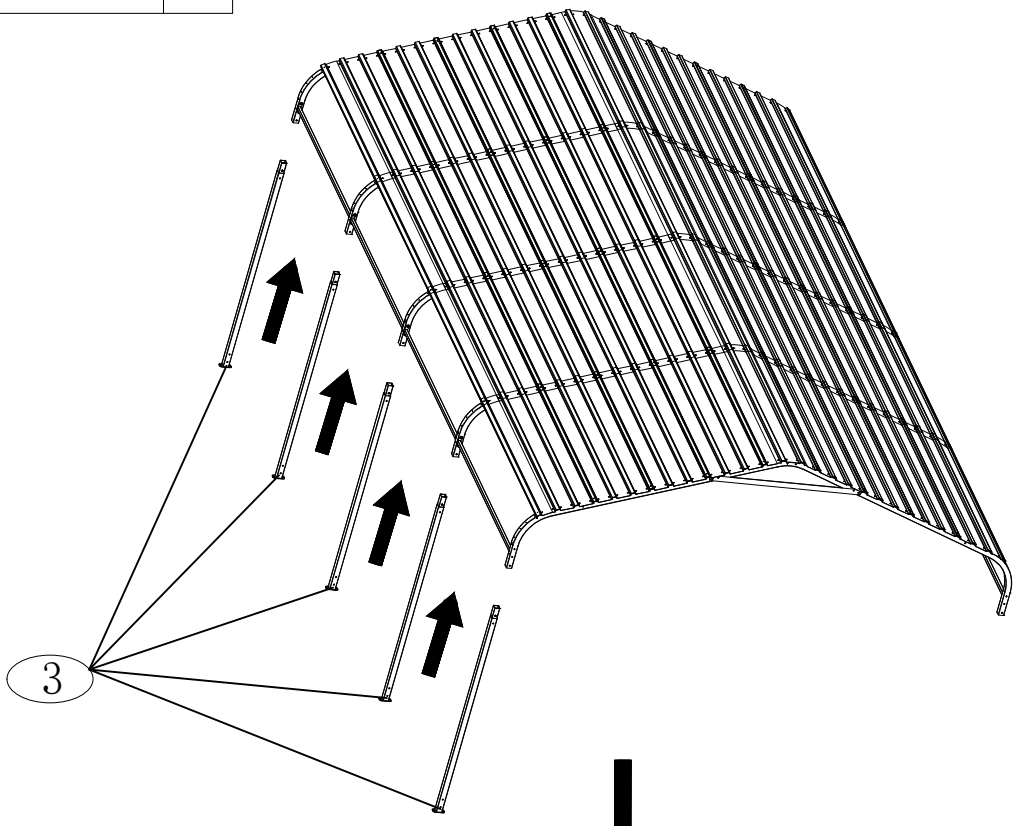

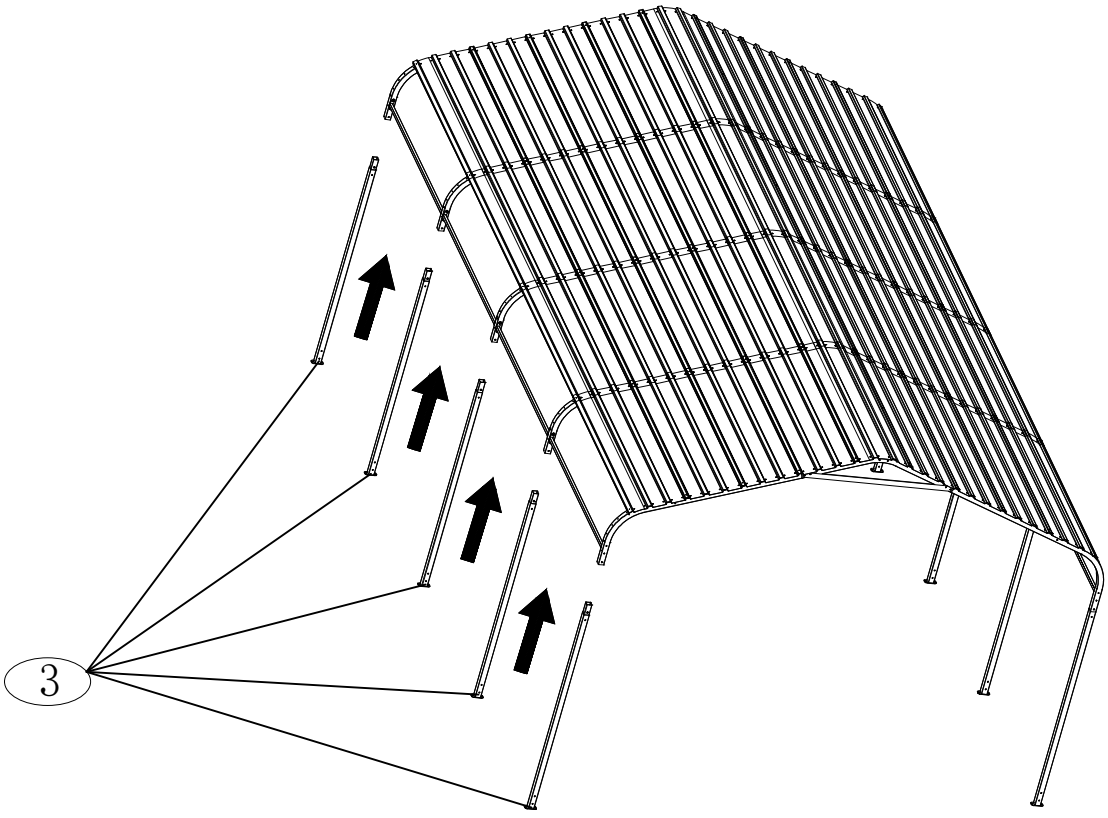


NO.	PART.	Qty.
Q15		10
Q17		10
Q20		10

NO.	PART.	Qty.
D4		8
Q13		60
Q32		16
Q18		16
Q19		60
F40		

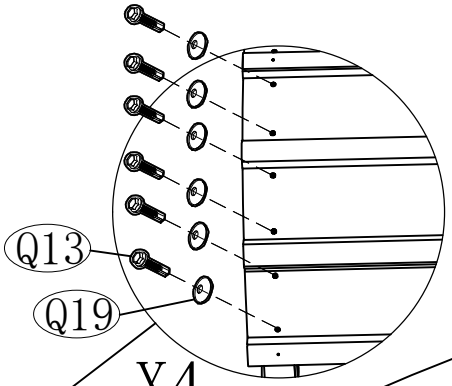


X4


Step 2

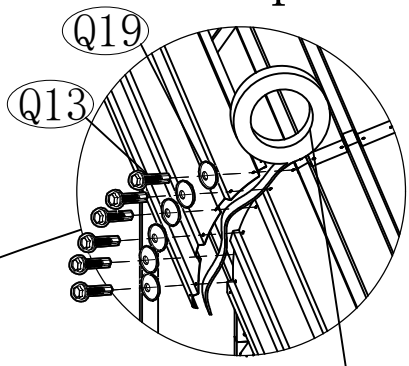

Waterproof tape F40

X6

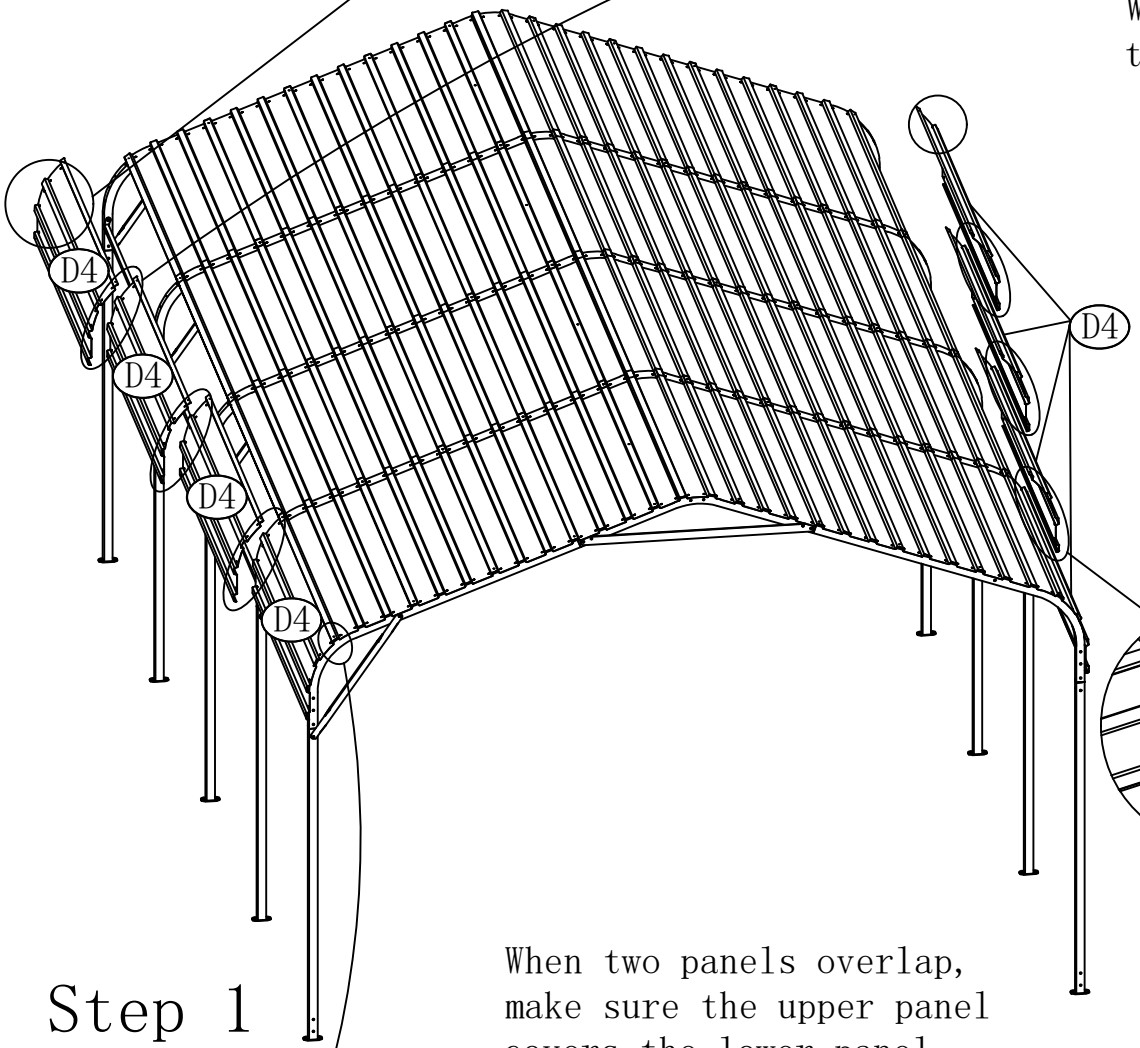

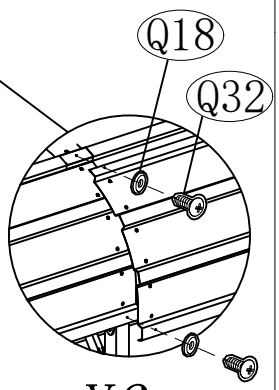


X6


When two panels overlap, make sure the upper panel covers the lower panel.

Step 1


X8

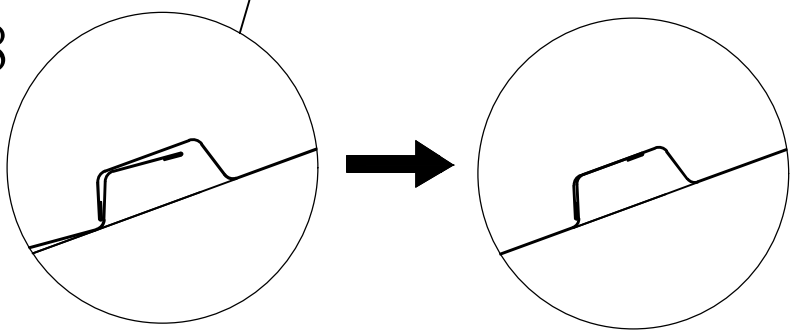


X4

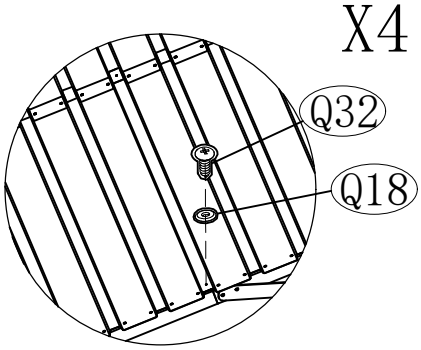


NO.	PART.	Qty.
4		8
Q15		20
Q17		20
Q20		20

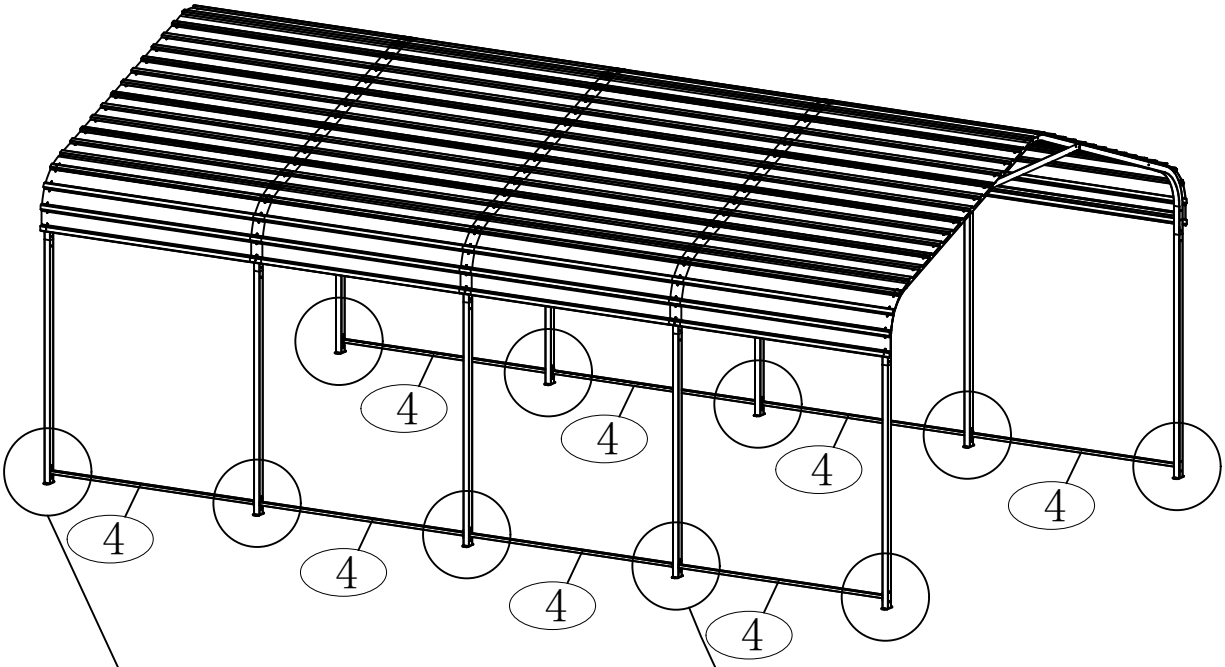

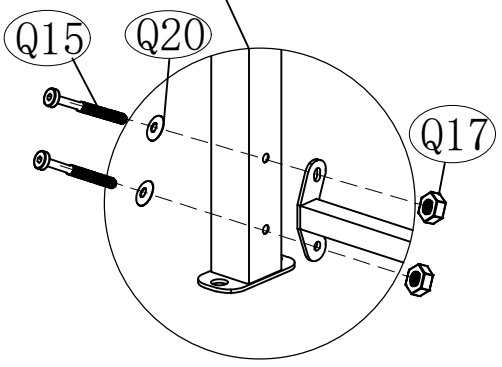


X4

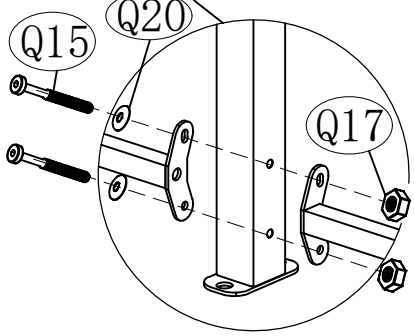



X6

NO.	PART.	Qty.
8		10
Q15		20
Q17		20
Q20		20

NO.	PART.	Qty.
Q8		2

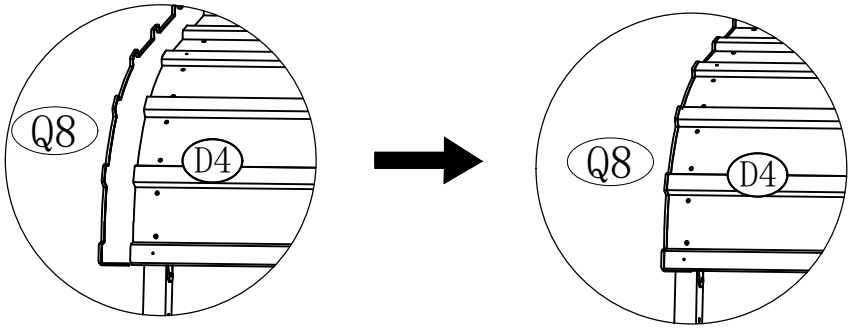

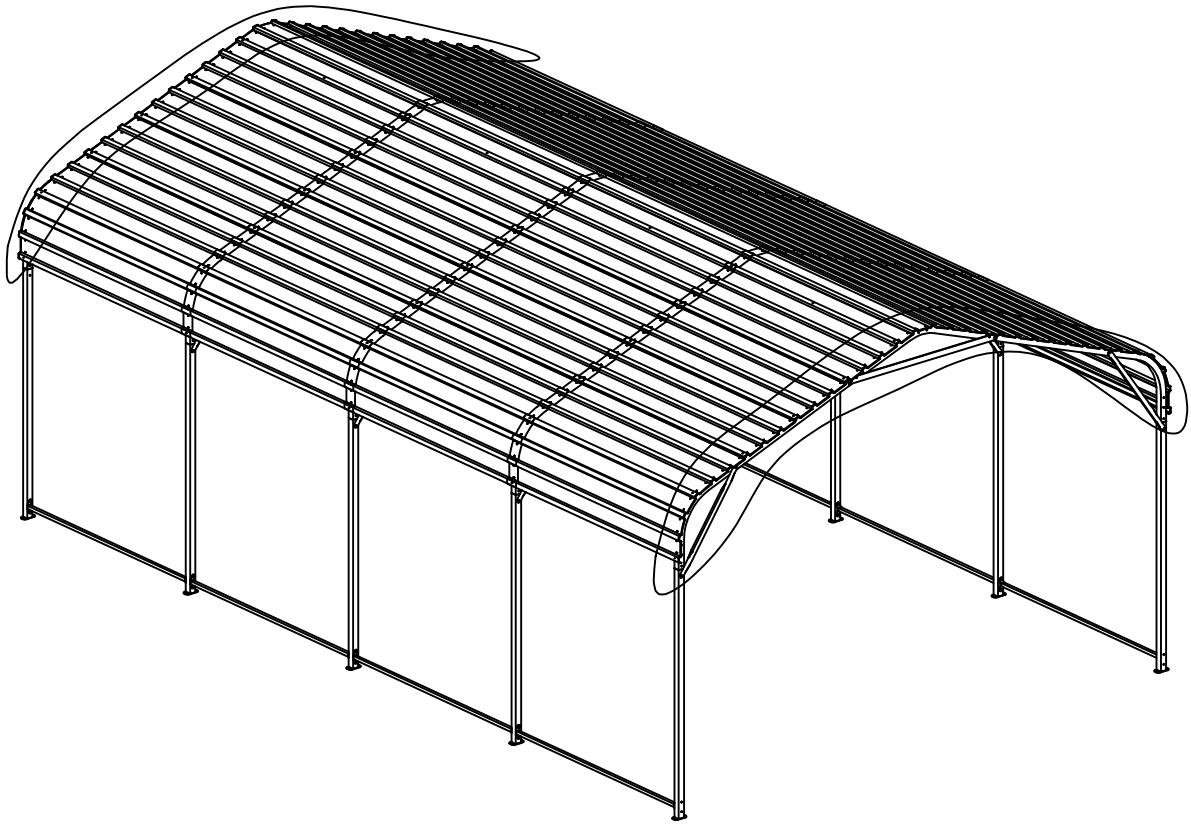

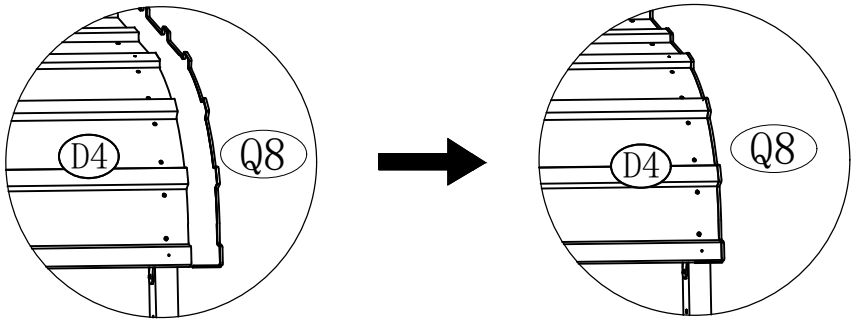

NO.	PART.	Qty.
Q5		10
Q6		10
Q21		20
Q9		100

