



Dog Wash for Shower Instructions

View a short instructional video at www.wondurdog.com or here:

Questions? Contact us at support@wondurdog.com




1. Remove existing showerhead with pliers (righty-tighty; lefty-loosey)



Important:
Be sure to remove any old plumbers tape from shower pipe and in between shower pipe threads

2. Cut a 2-3 inch piece of plumbers tape and wrap around shower pipe threads (too much tape may cause leaks)

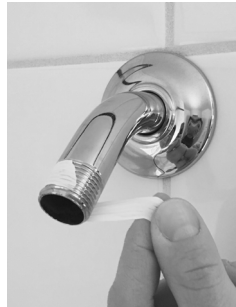

3. Screw shower diverter nut on shower pipe over plumbers tape; tighten with pliers. (Spin diverter clockwise to tighten if loose)



4. Cut two more 2-3 inch pieces of plumbers tape and wrap each piece around remaining two diverter threads




5. Screw original showerhead on front of diverter; tighten with pliers




6. Disassemble suction cup holder into three parts:

Hold suction cup holder with "puzzle piece" side facing down and pull suction cup downward to detach

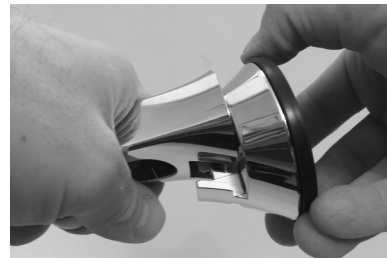

Slide black suction cup out of casing

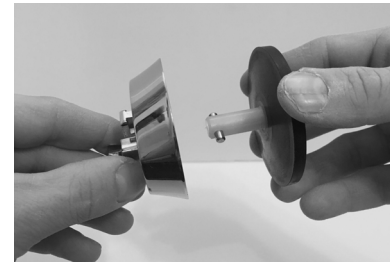

You should now have three pieces




7. Choose where you want to place suction cup holder on shower or bath wall; ensure the area is clean

8. Run a splash of water over surface of black suction cup to dampen




9. Place suction cup on wall (with metal pin running horizontally); firmly press suction cup to wall

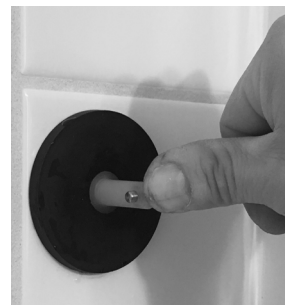

10. Place casing piece back on suction cup (with "puzzle piece" on bottom)



11. Slide hook piece downward on top of casing; apply pressure until it clicks in place

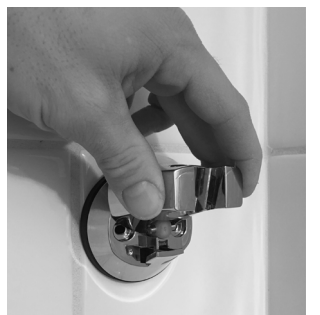

12. Screw smaller (nut) end of hose into shower diverter (ensure circular rubber washer is in place in hose); tighten with pliers



13. Screw shower brush head onto other end of hose (ensure circular rubber washer is in place in hose and remove plastic sheathing); tighten with pliers



14. Place shower head on suction cup holder or diverter holder (your choice)



OR

