# ASSEMBLE INSTRUCTIONS

## Priority to Safety

•In case of a fire, do not use water to extinguish burning polypropylene.

•When using power tools, wear safety goggles and always follow the manufacturer's instructions.

•During installation, refer to the accessory guide to ensure the correct installation direction of the accessories.

## Porper Use

•Weight Requirement: Ensure the item's weight is within the specified range.
Maximum weight recommendation: 600 lbs

•Storage Capacity: 260 gallons

•Safety Warnings:
Do not use any part of the product as a ladder.
Keep the product away from fire sources.
This is not a toy. Please keep children from playing inside the box.

Email:MK-CustomerService@outlook.com
Email:support@makechangeslife.com
Web:www.makechangeslife.com

# Parts List:

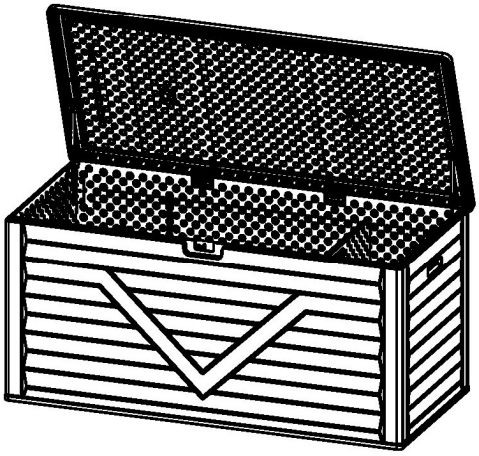

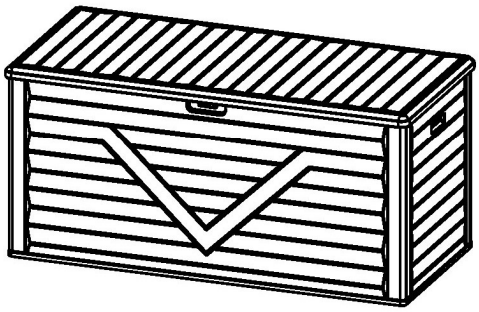

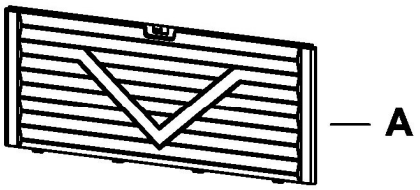


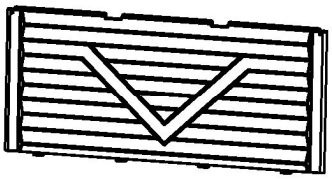


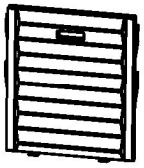



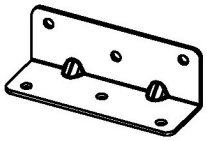


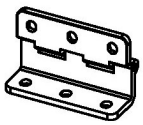









| Part | Description | QTY |
|---|---|---|
| A | Front Panel | 1 |
| B | Rear Panel | 1 |
| C | Side Panel | 2 |
| D | Bottom Plate | 1 |
| E | Top Plate | 1 |
| F | Partition | 1 |
| G | Connecting Iron Sheet | 8 |
| H | Hinge | 2 |

| Part | Description | QTY |
|---|---|---|
| I | Left Gas Spring | 1 |
| J | Right Gas Spring | 1 |
| K | Screw *18mm | 58 |
| L | Screw *16mm | 12 |
| M | Screw *15mm | 7 |
| N | Nut | 1 |
| O | L-Shaped Iron Sheet | 1 |
| P | Spanner | 1 |

Step 1: ①Insert the side panels (C) into the bottom plate (D).
②Insert the rear panel (B) into the bottom plate (D).
③Insert the side panels (C) into the bottom plate (D).
④Insert the front panel (A) into the bottom plate (D).

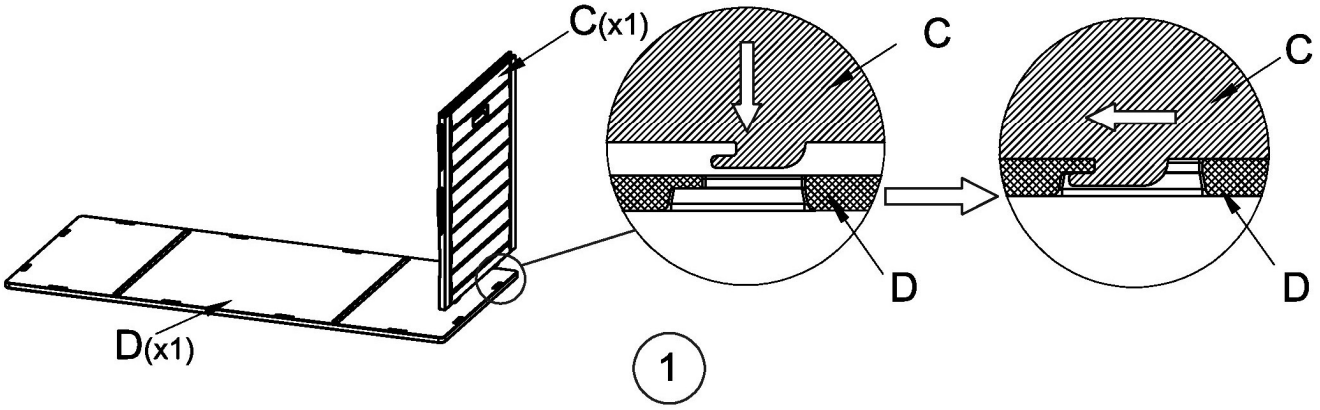


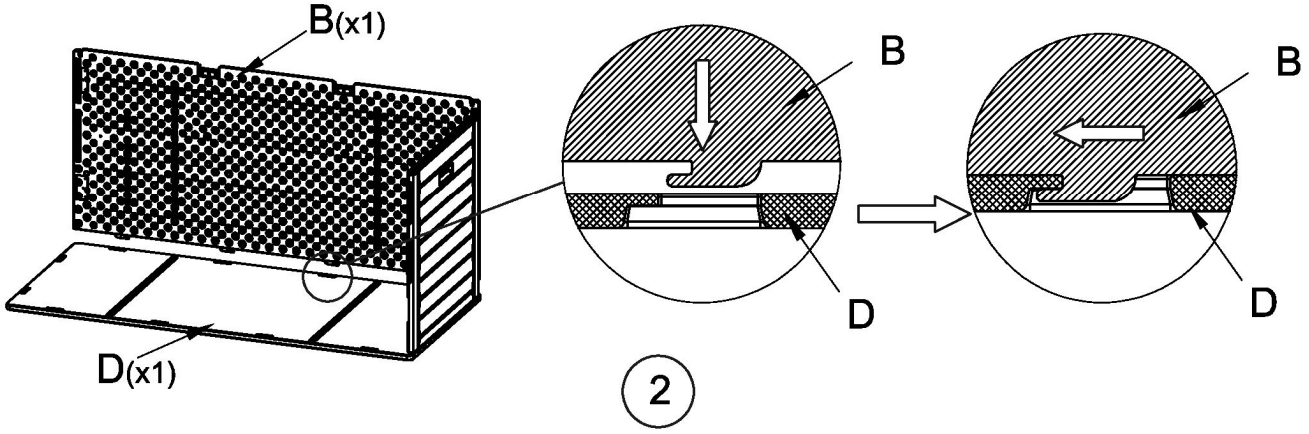


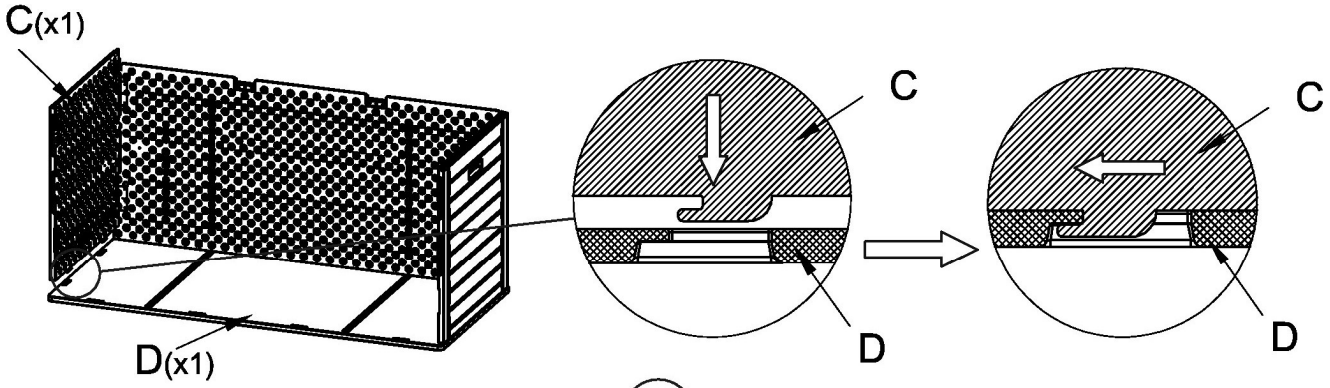


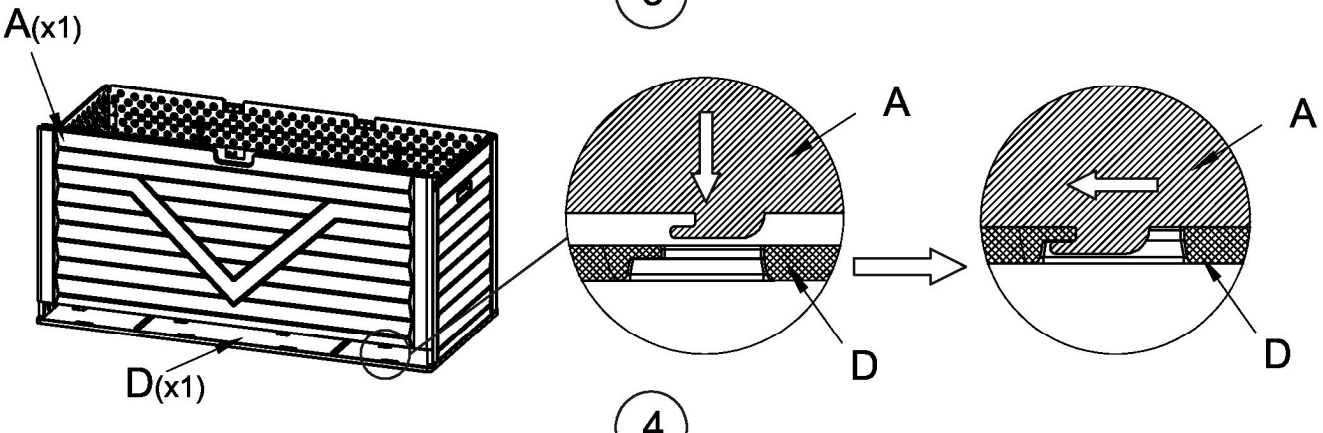

**Step 2:Connect each panel with the connecting iron sheets (G) and secure them with screw*18mm (K).**

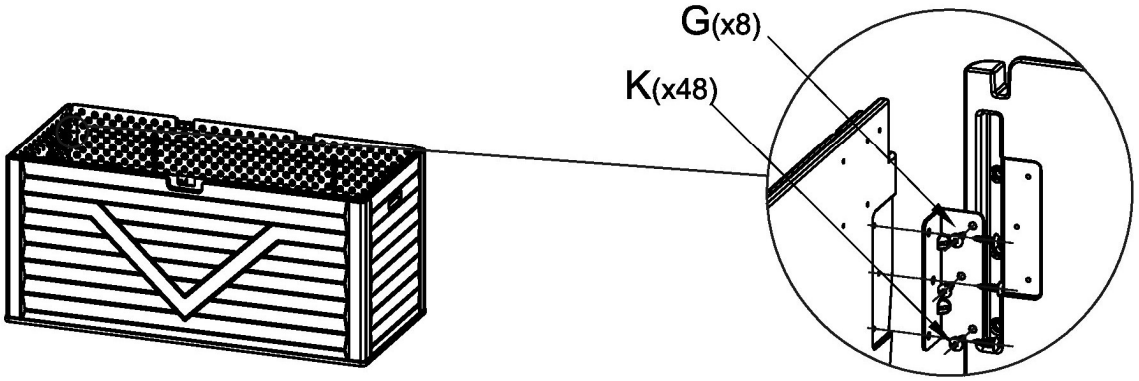


**Step 3:Assemble the left gas spring (I) and right gas spring (J) onto the top plate (E) with the screw*15mm(M).**

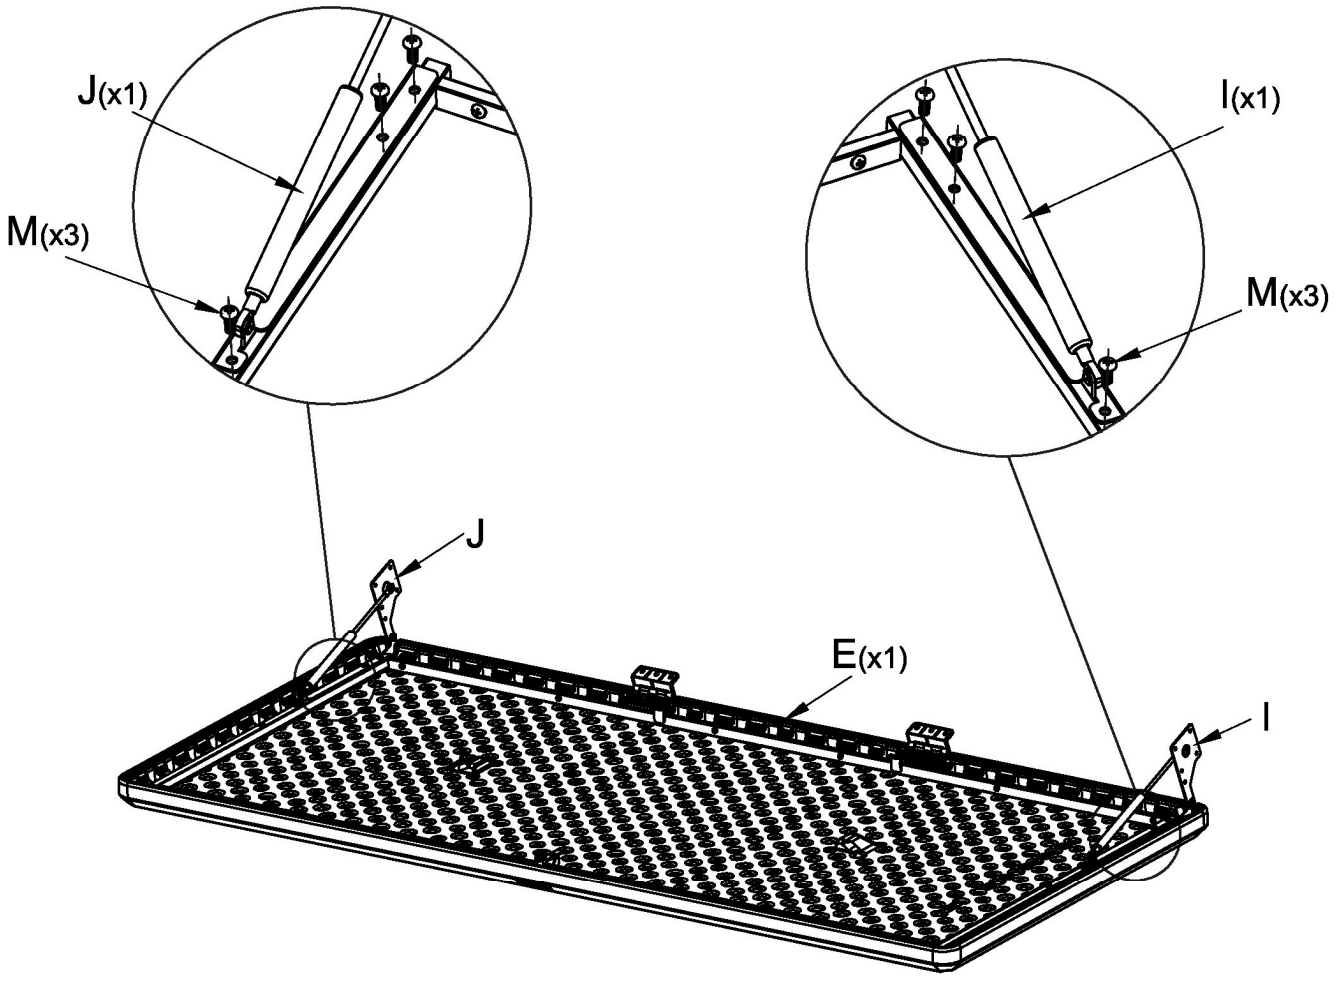

Step 4 :Assemble the hinges (H) onto the top plate (E) with the screw *16mm(L).

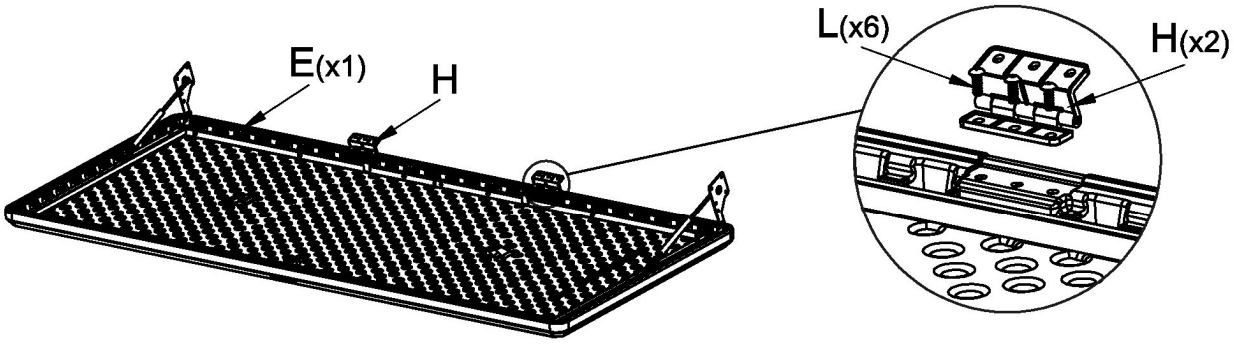


Step 5 :Assemble the left gas spring (I) and right gas spring (J) onto the box with the screw*18mm (K).

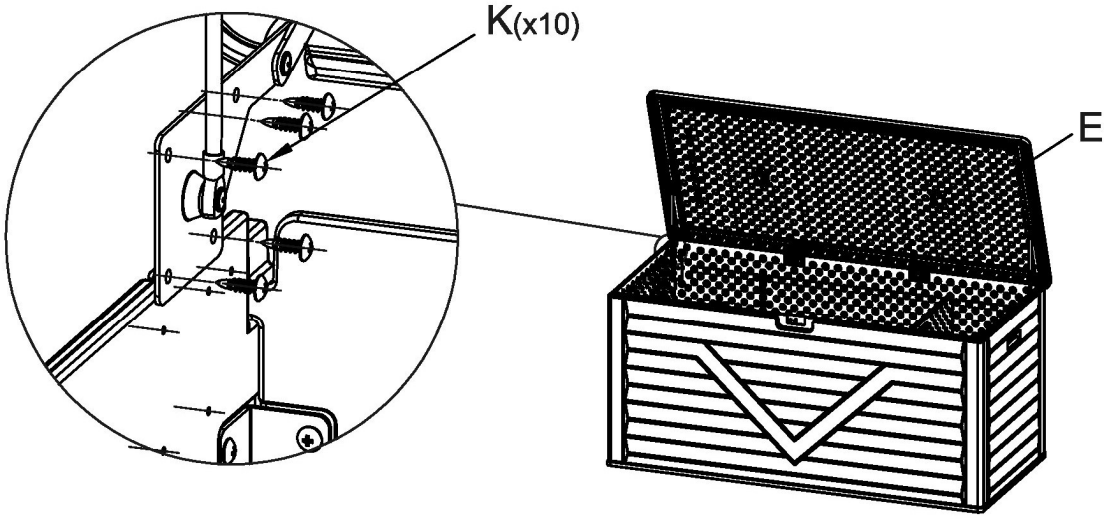


Step 6:Assemble the hinges (H) onto the box with the screw*16mm (L).

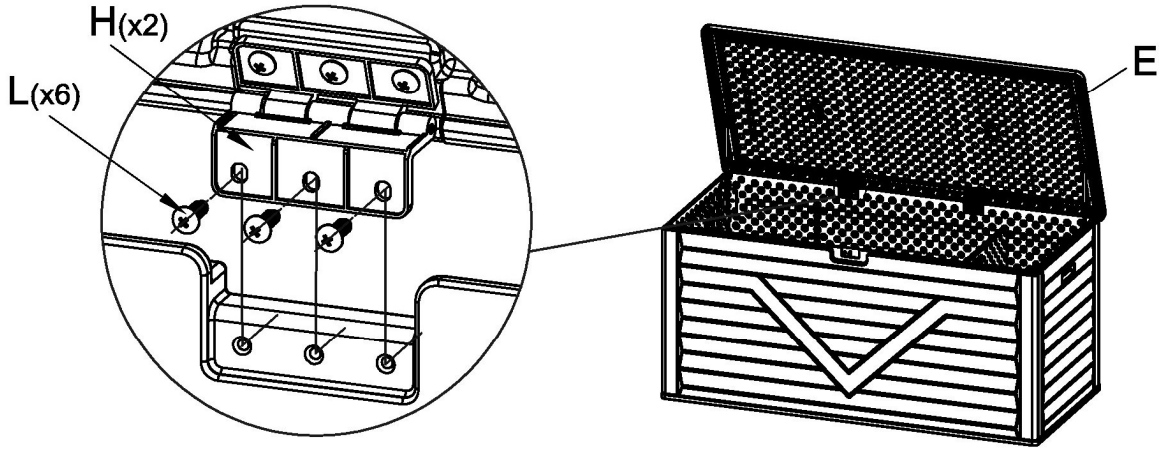

Step7:Assemble the L-shaped iron sheet (O)onto the front panel( A), and fasten it with the screw*15mm (M) and nut (N).

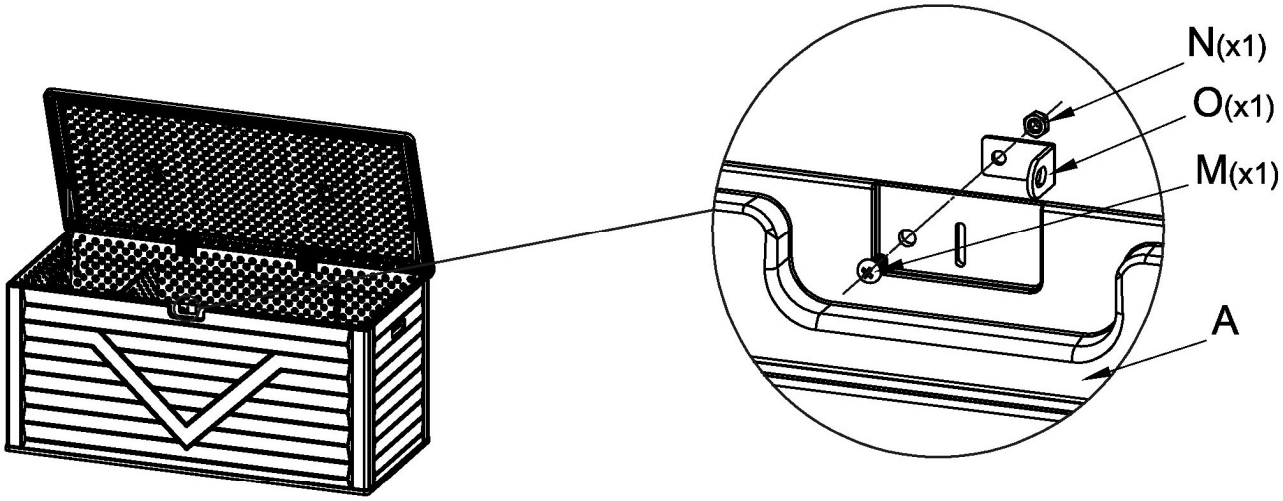

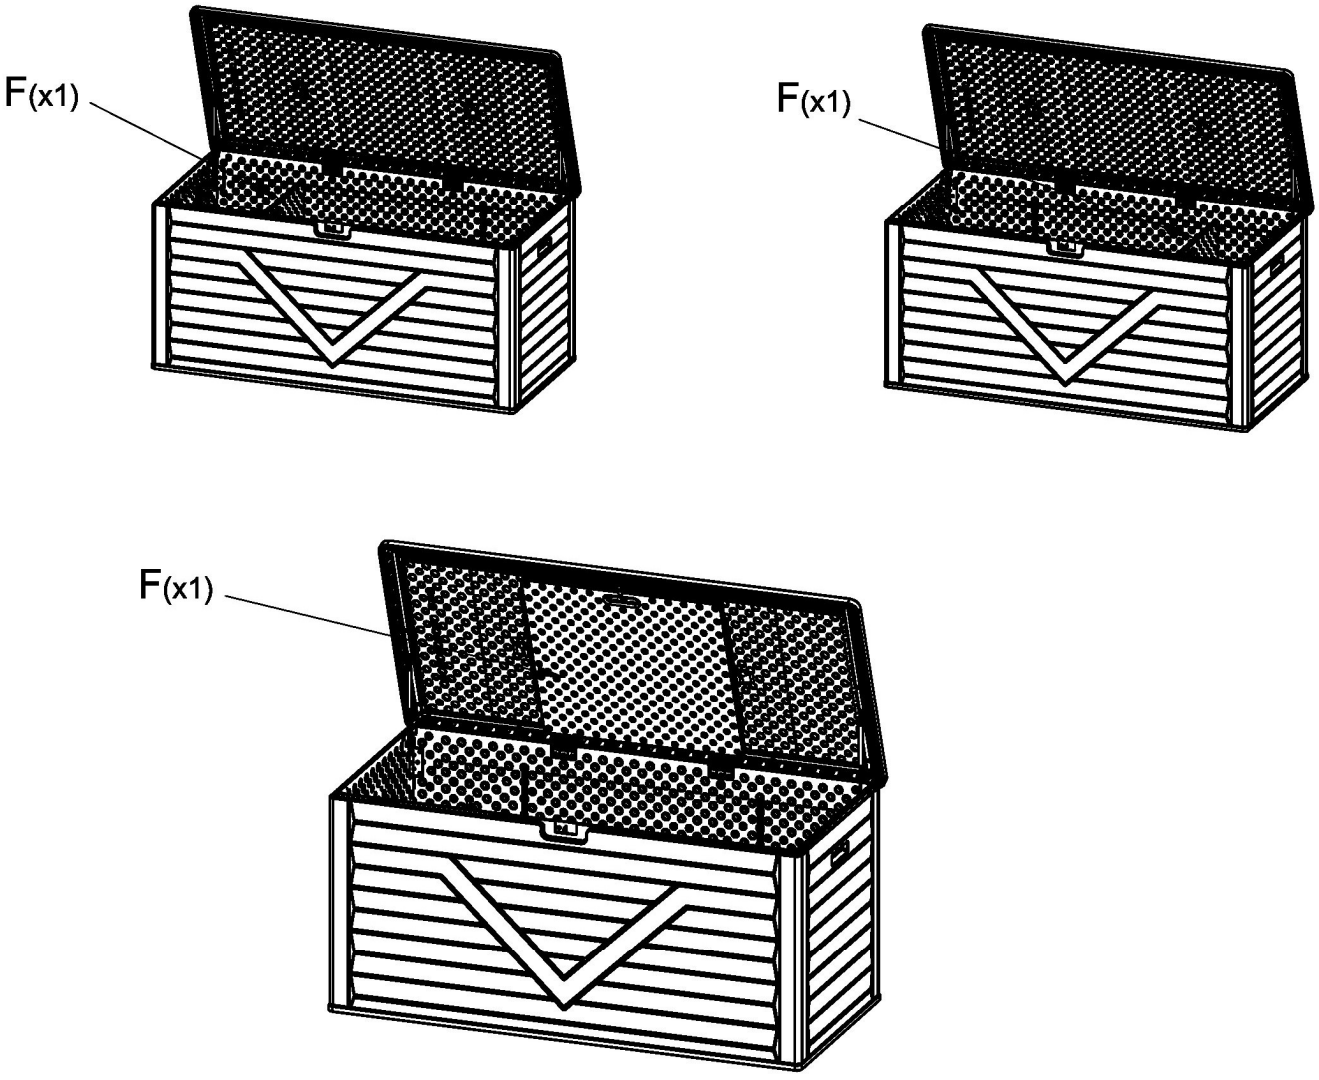
Step 8:Assemble the partition (F) onto the required position of the box.