

## **Confer - Signature Spa Steps** ASSEMBLY AND INSTRUCTION MANUAL

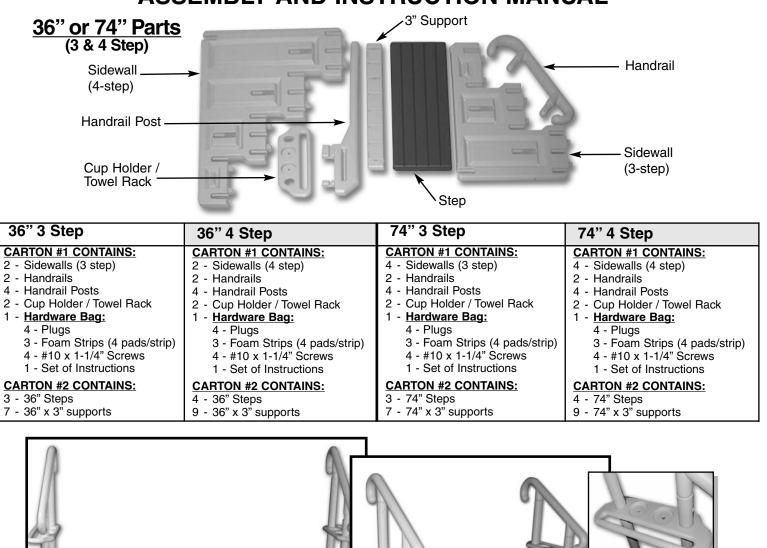

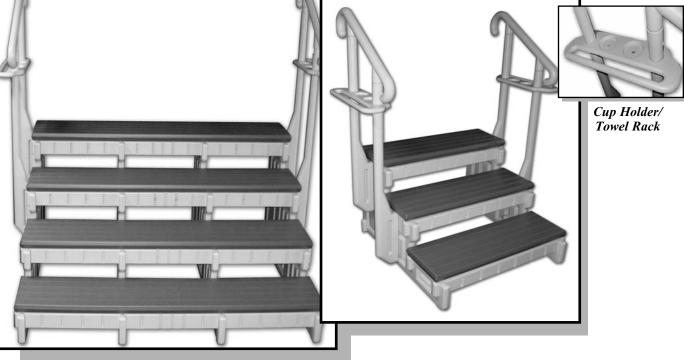




## **Confer - Signature Spa Steps** ASSEMBLY AND INSTRUCTION MANUAL

## NOTE: STEP PARTS ARE DESIGNED FOR A TIGHT FIT, USING LIQUID SOAP DETERGENT WILL MAKE ASSEMBLY EASIER.



**Step 1:** Install the foam pads [4 for 36" step, 12 for 74" step ] on the flat spots located on the bottom edge of sidewall.

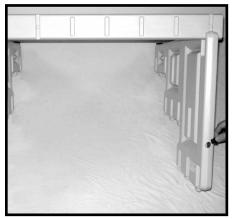

**Step 2:** Using a rubber mallet install one of the 3" supports into the slot located on the bottom of sidewall. [36" step will have 2 sidewall, 74" will have 4 sidewall]. Install one plug into each sidewall.



**Step 3:** Turn the step assembly over and finish installing the 3" supports, [6 for 3-step, 8 for 4-step] into the front and back slots of each step location .



**Step 4:** Using a rubber mallet, install the four handrail posts into the middle slots of the top two step locations on the left sidewall, and the top two step locations of the right sidewall. Handrail posts must be seated into the slots



**Step 7:** Secure handrails using 1- # 10 x 1¼" screw into each post at pre-marked locations.



**Step 5:** Install towel rack/cup holder over the handrail posts with the towel rack to the outside of step, tap in place using the rubber mallet. Towel rack/cup holder may be positioned anywhere on the post.



**Step 6:** Tap the handrails into the handrail posts.



**Step 8:** Install the steps [finished edge out] by placing over the male lugs on the step sidewall and hitting downward with a rubber mallet.

MADE IN THE U.S.A. BY:



97 Witmer Road North Tonawanda, NY 14120-2421 Toll Free U.S. 866-396-2968 Tel: 716-283-1826 / FAX: 716-283-3249 www.conferplastics.com