


Assembly Instructions

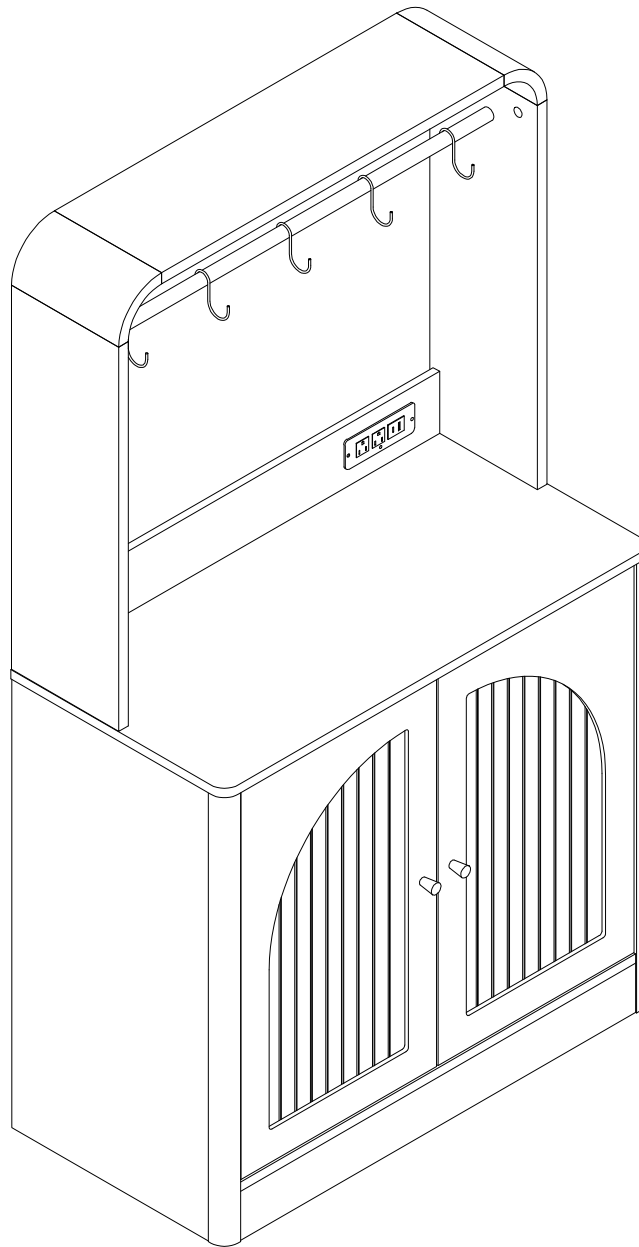

“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”


Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

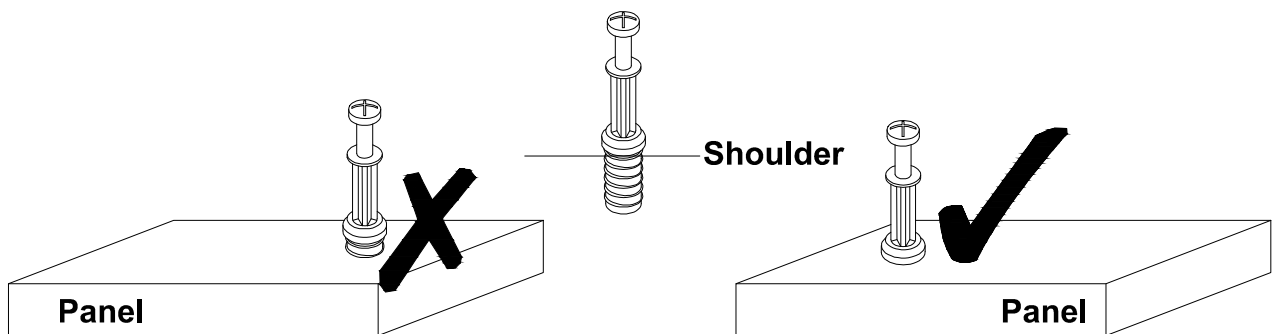


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

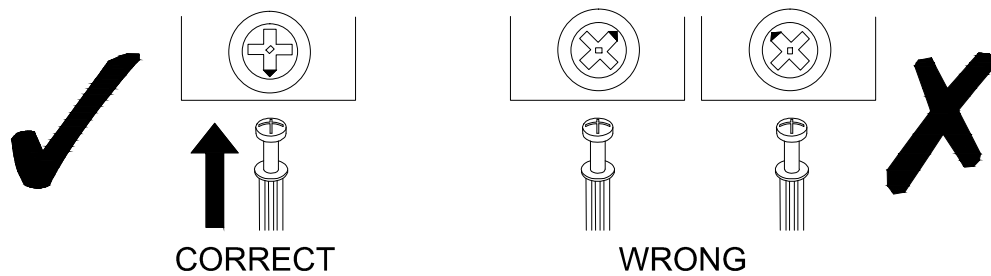


When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

"Ensure the arrow on the Cam Lock (B) is pointing towards the hole for the Cam Lock Dowel (A) before inserting."

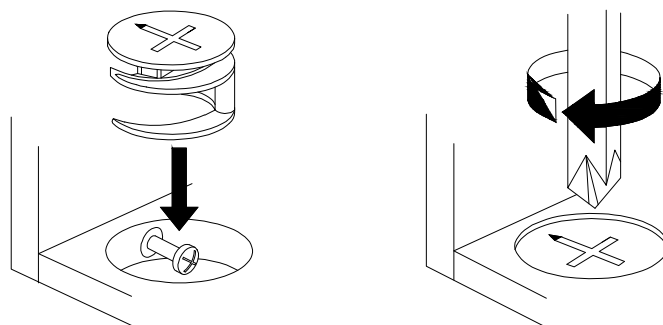

Turn cam lock clockwise to tighten.

Product structure

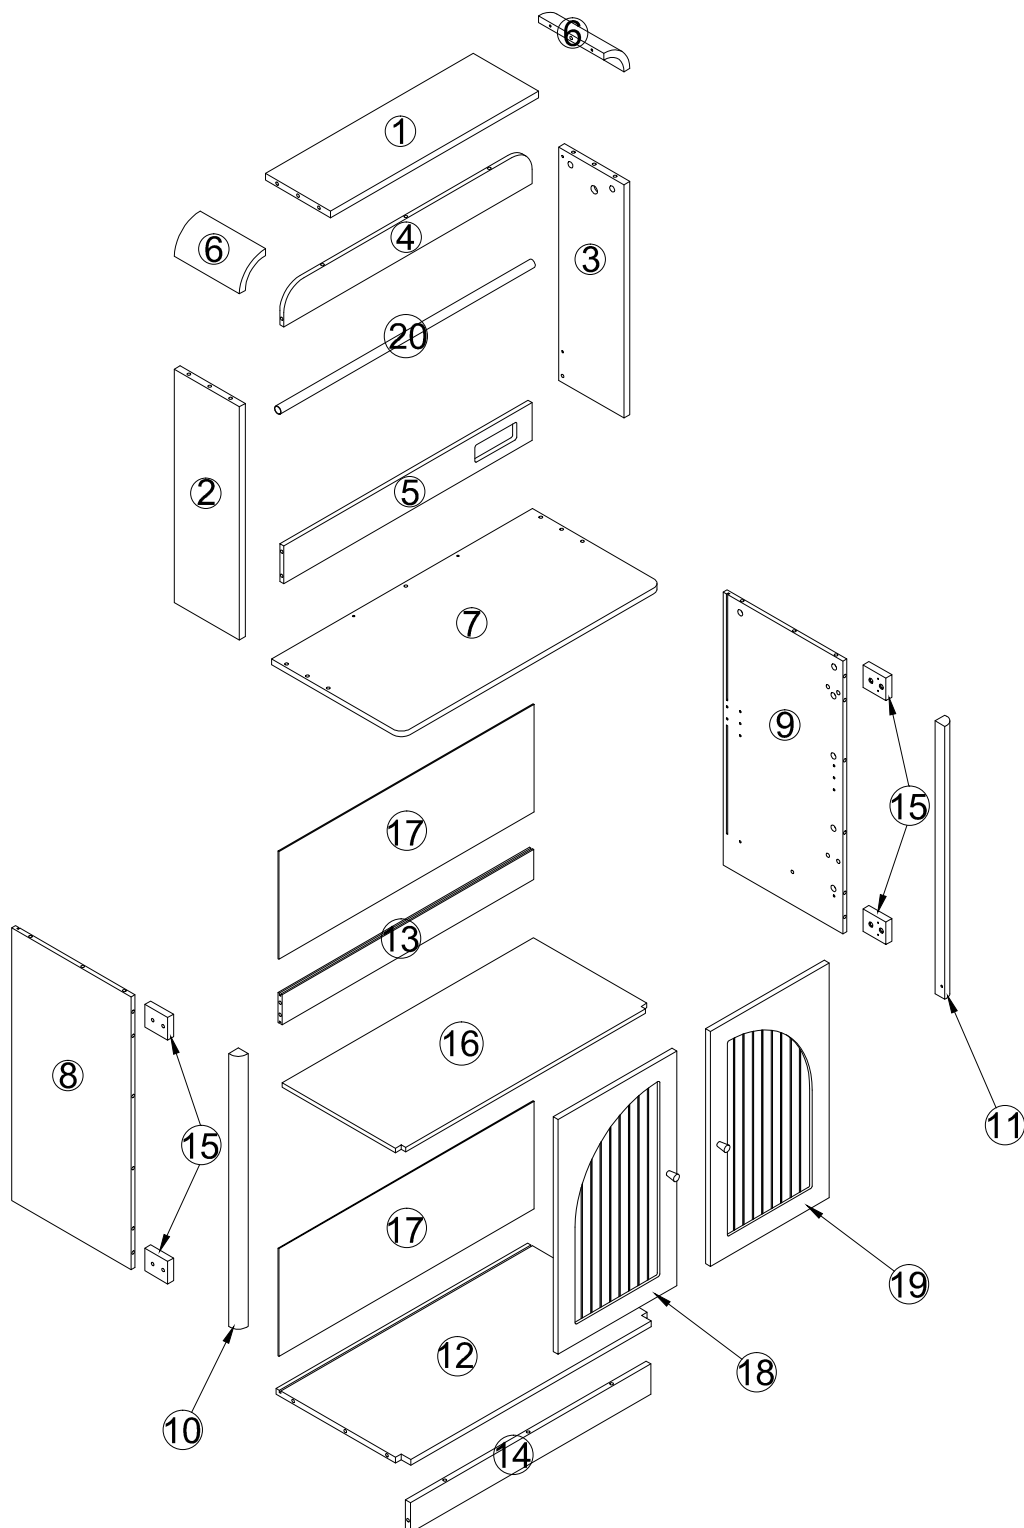

“Assemble on a soft surface, such as a carpet or the original packaging box, to avoid scratches to the panels.”


Part List



“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”


No. A

Quantity:40 Pcs
Cam Lock Dowel
8*28mm



No. B

Quantity:40 Pcs
Cam
φ15




No. C

Quantity:40 Pcs
Sticker
Ø20




No. D

Quantity:19 Pcs
Dowel
8*30mm




No. E

Quantity:4 Pcs
Large curved door hinge



No. F

Quantity:34 Pcs
Screw
M3.5*14mm



No. G

Quantity:4 Pcs
Screw
M6*40mm



No. H

Quantity:8 Pcs
Screw
M6*25mm




No. I

Quantity:6 Pcs
Foot Pad
Ø12




No. J

Quantity:4 Pcs
Shelf Support
M5*15mm




No. K

Quantity:1 Pc
Allen Key
4#



No. L

Quantity:1 Pc
Power strip



No. M

Quantity:2 Pcs
Handle



No. N

Quantity:2 Pcs
Screw
M4*20mm




No. O

Quantity:5 Pcs
Pothook




No. P

Quantity:8 Sets
Plastic Wedge




No. Q

Quantity:1 Sets
Anti-falling Parts





No. R


Quantity:2 Sets
Magnetic Door Catcher






STEP 1

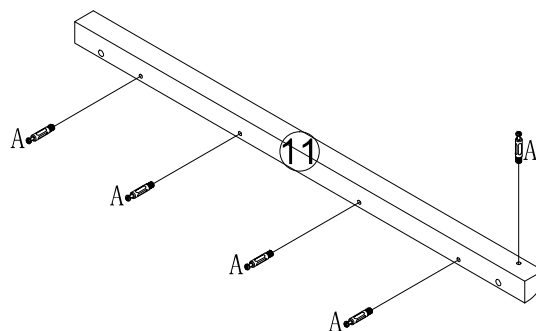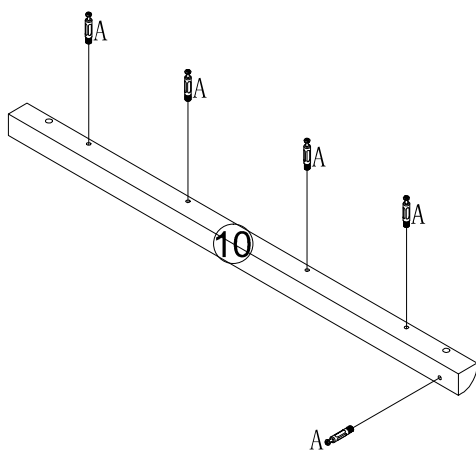

No. A
Quantity: 10 Pcs
8*28 mm



STEP 2

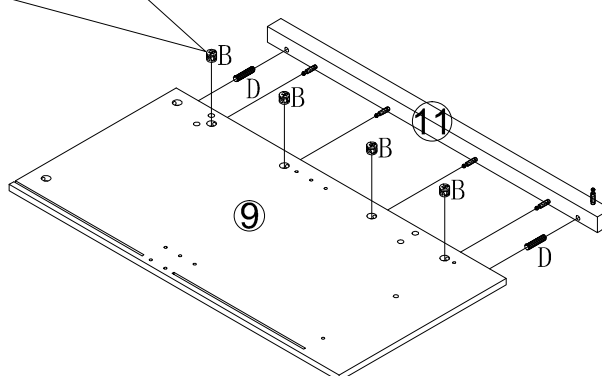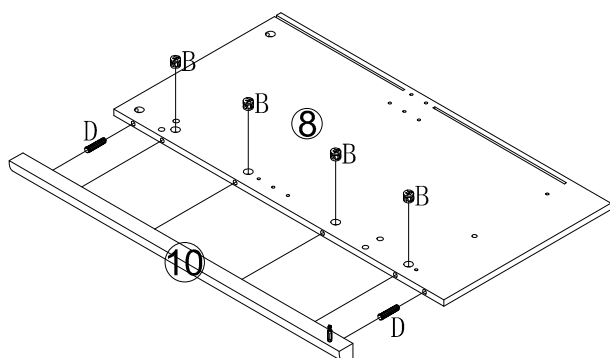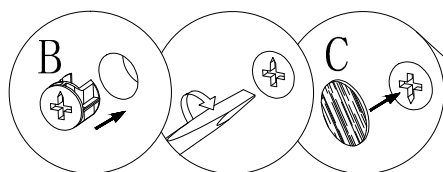


No. B
Quantity: 8 Pcs
Ø15





No. C
Quantity: 8 Pcs
Ø20



No. D
Quantity: 4 Pcs
8*30mm




STEP 3

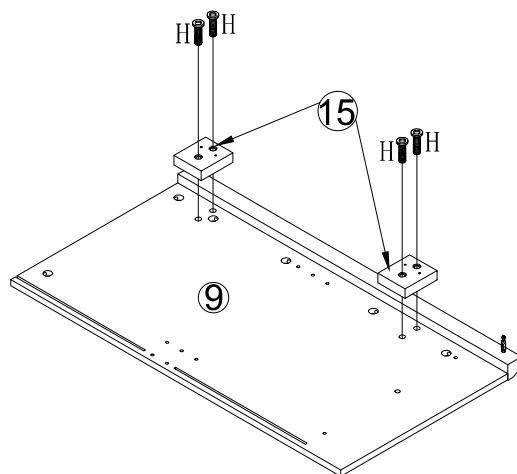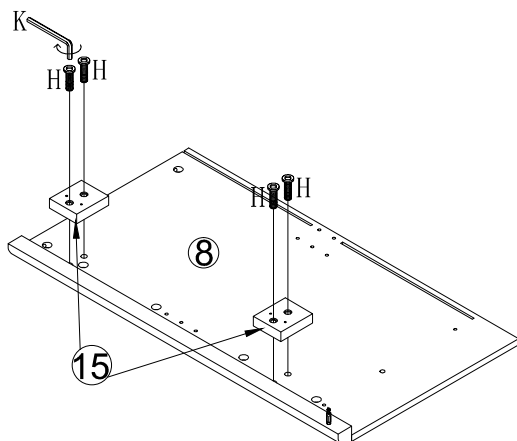




No. H
Quantity: 8 Pcs
M6*25mm




No. K
Quantity: 1 Pc
4#



STEP 4

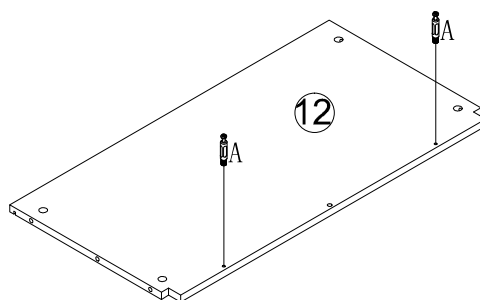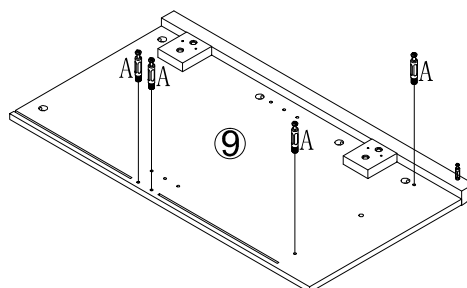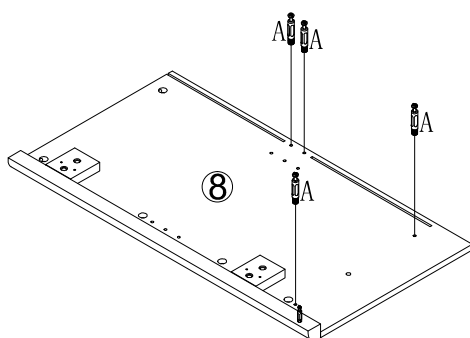

No. A
Quantity: 10 Pcs
8*28 mm



STEP 5



No. B
Quantity: 2 Pcs
Ø15



No. C
Quantity: 2 Pcs
Ø20



No. D
Quantity: 1 Pc
8*30mm

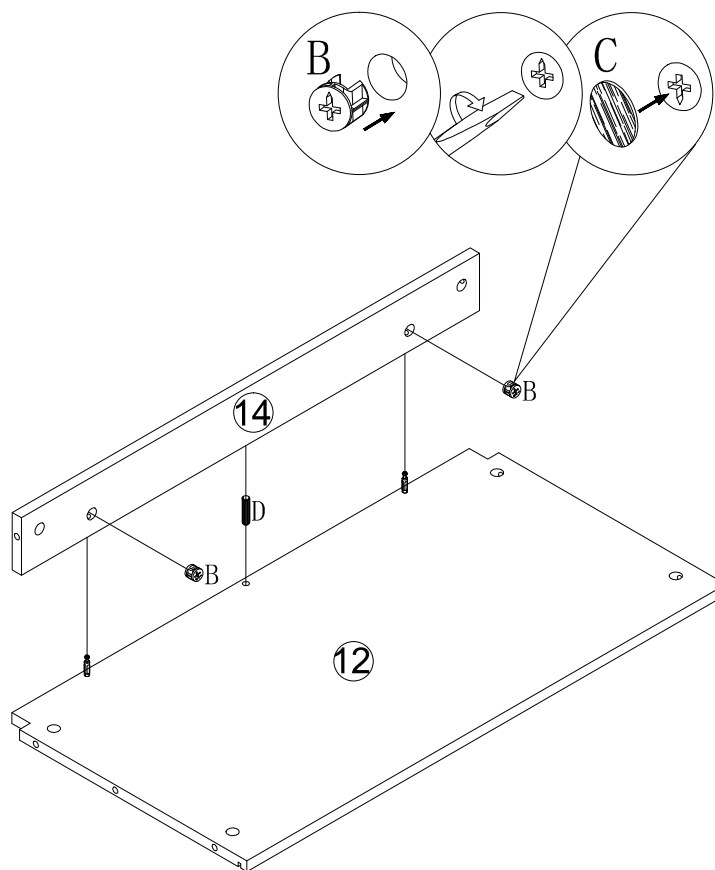

STEP 6



No. B
Quantity: 5 Pcs
Ø15




No. C
Quantity: 5 Pcs
Ø20



No. D
Quantity: 1 Pc
8*30mm

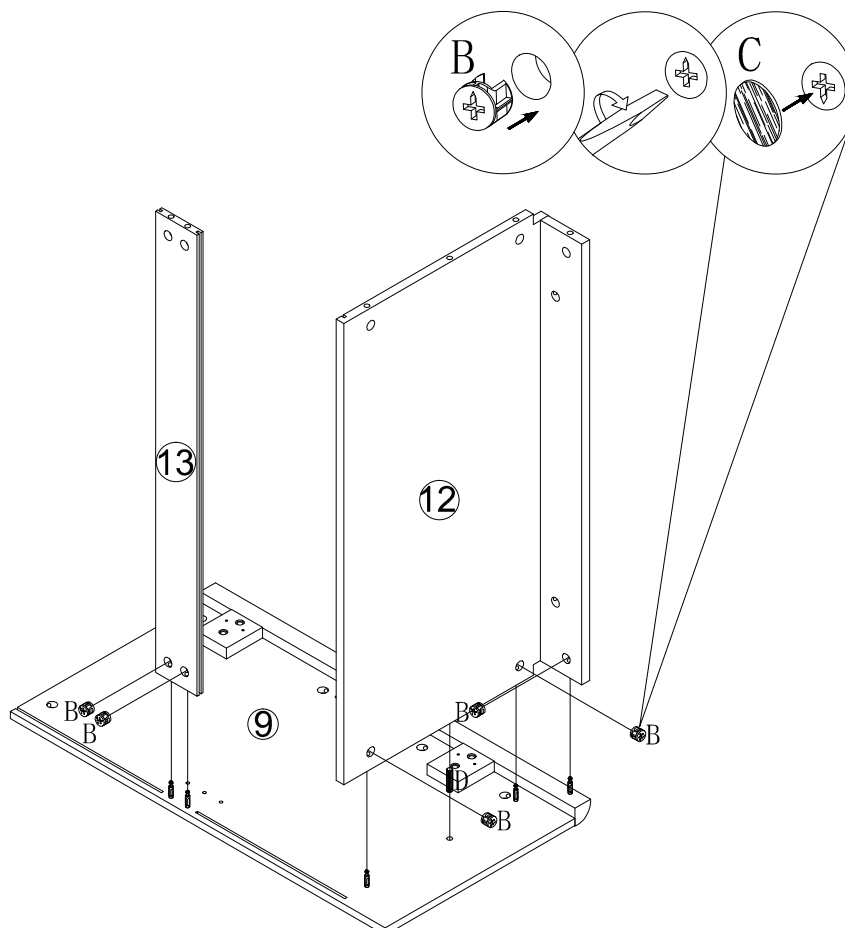

STEP 7

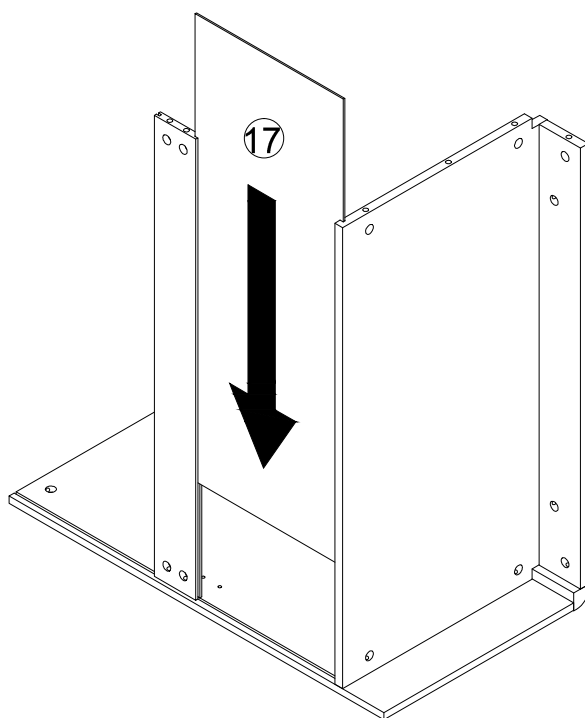

STEP 8



No. B
Quantity: 5 Pcs
Ø15




No. C
Quantity: 5 Pcs
Ø20



No. D
Quantity: 1 Pc
8*30mm

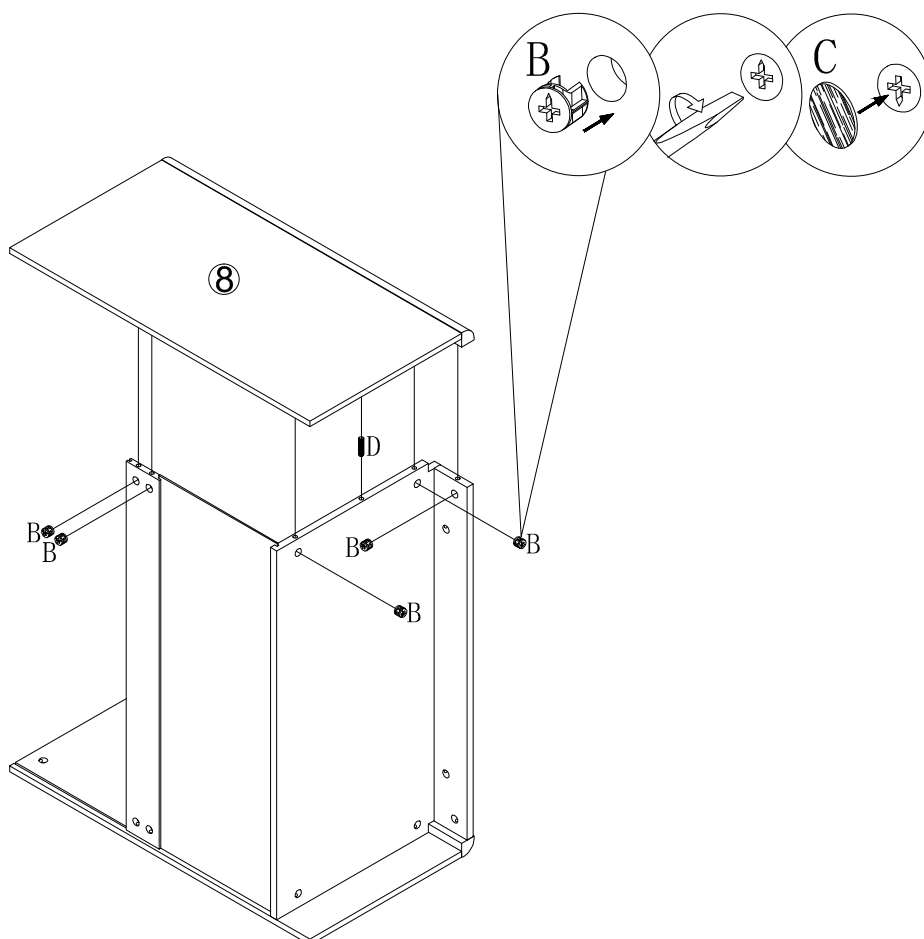


STEP 9

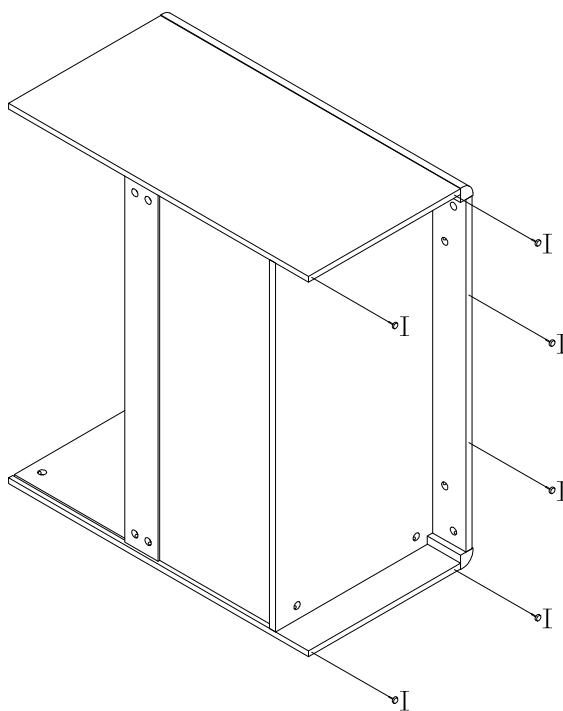


No. I
Quantity: 6 Pcs
Ø12




STEP 10

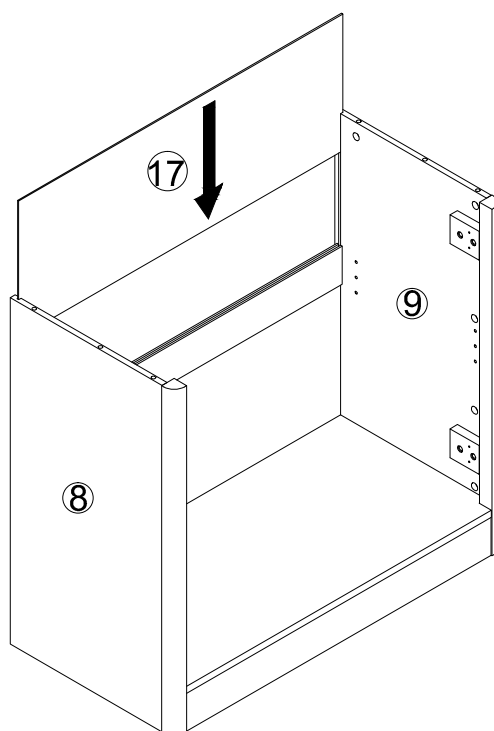

STEP 11

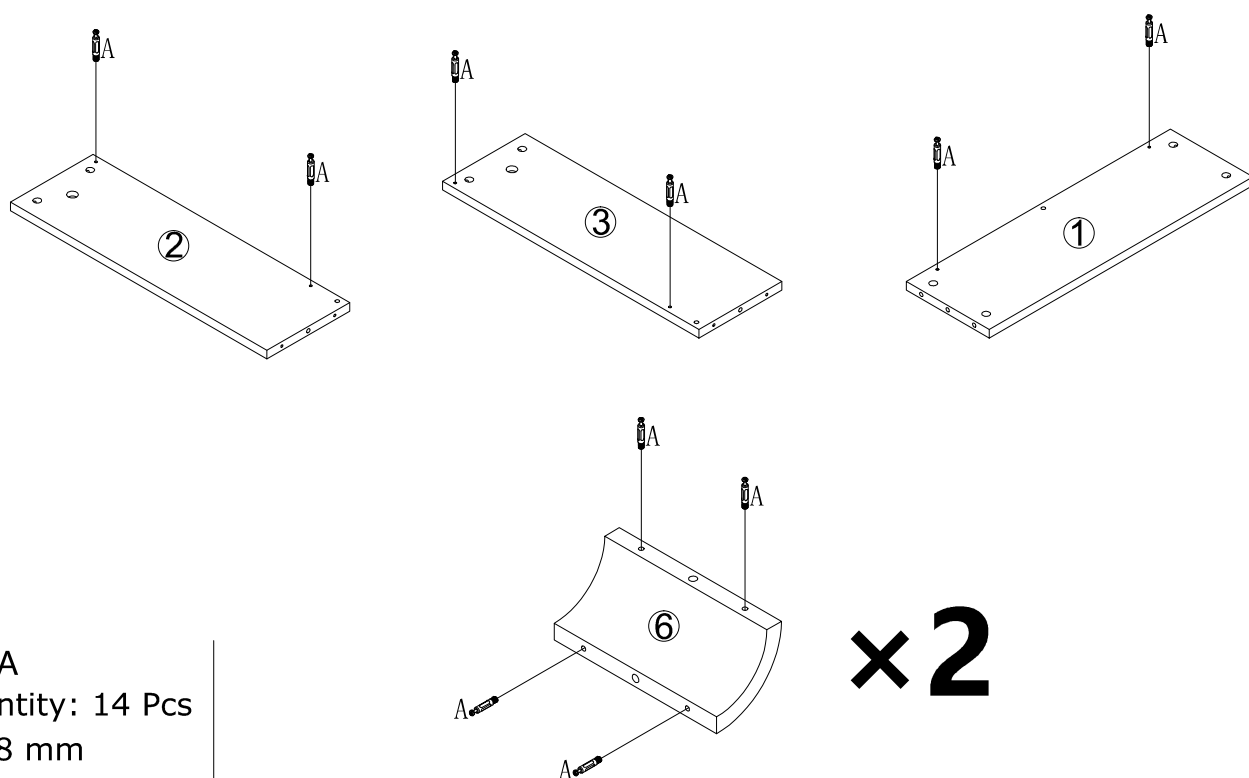

No. A
Quantity: 14 Pcs
8*28 mm



STEP 12



No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20



No. D
Quantity: 2 Pcs
8*30mm

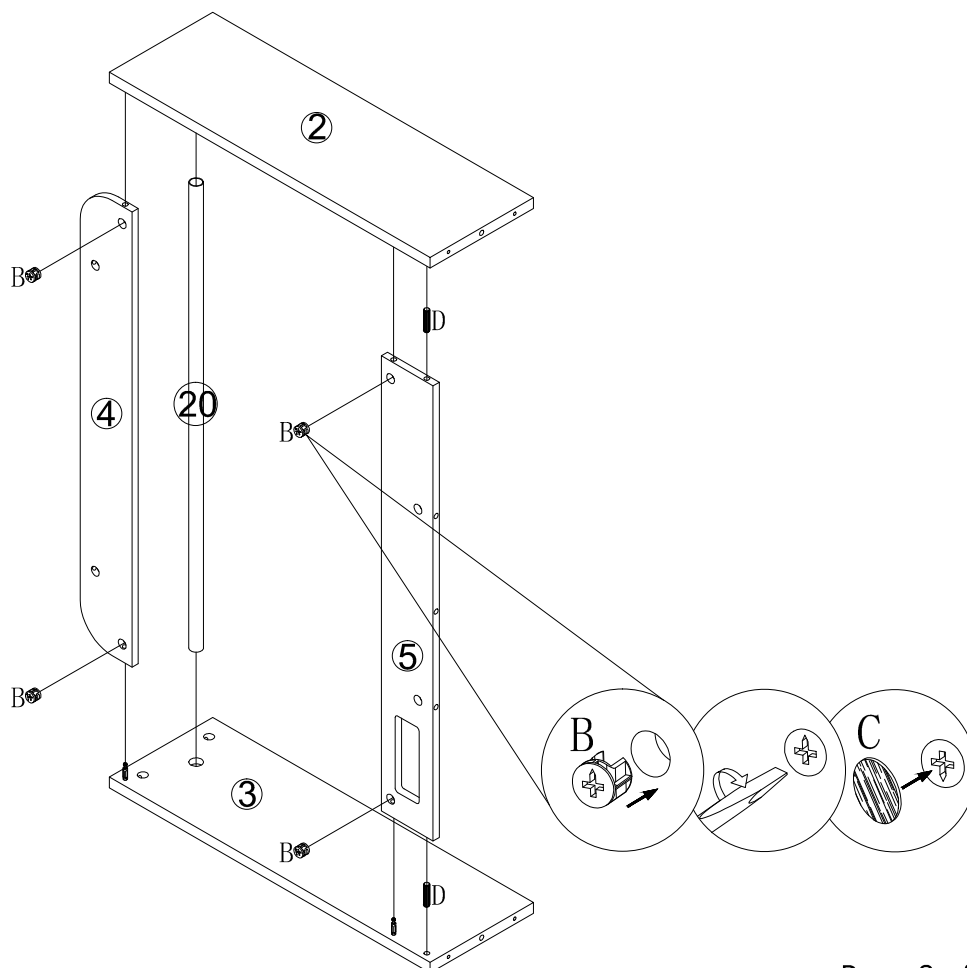

STEP 13



No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20



No. D
Quantity: 2 Pcs
8*30mm

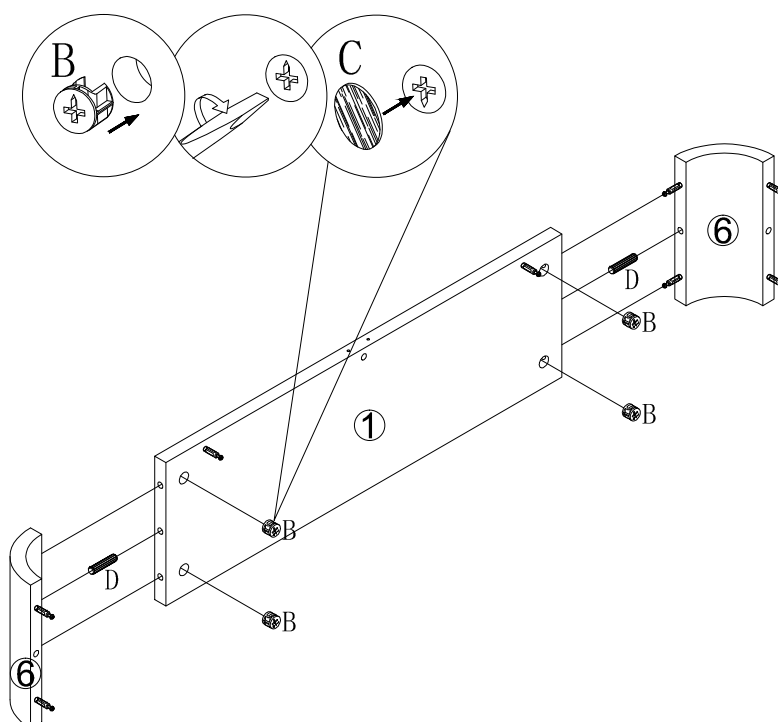

STEP 14



No. B
Quantity: 6 Pcs
Ø15




No. C
Quantity: 6 Pcs
Ø20




No. D
Quantity: 3 Pcs
8*30mm

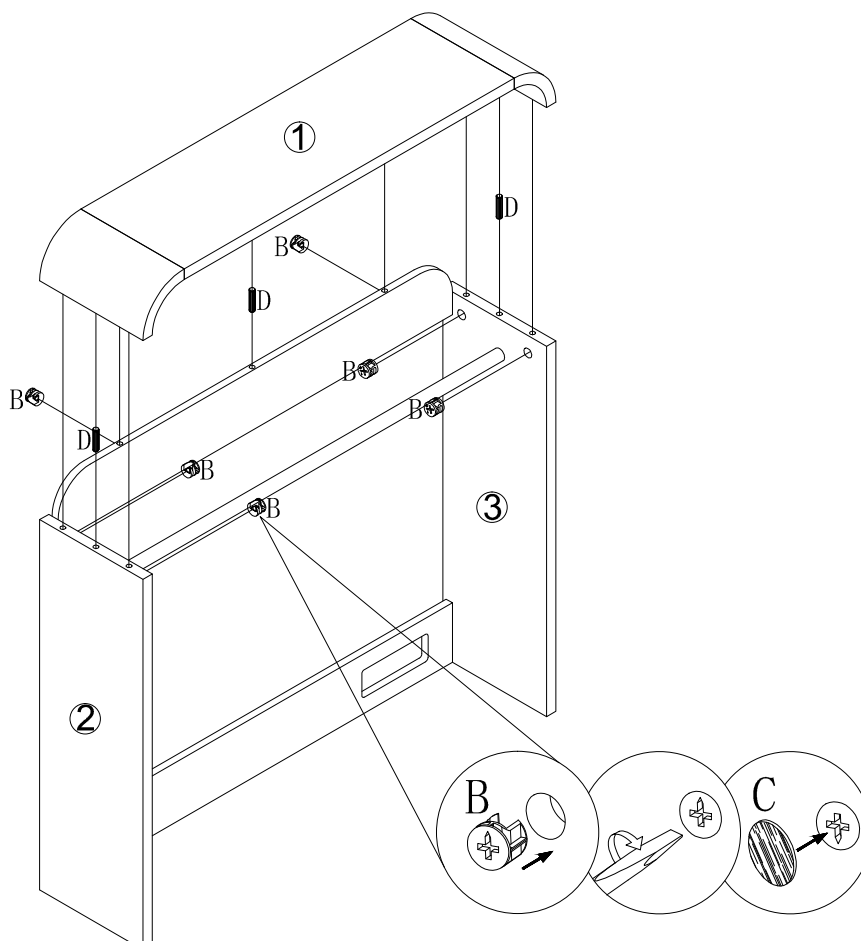

STEP 15

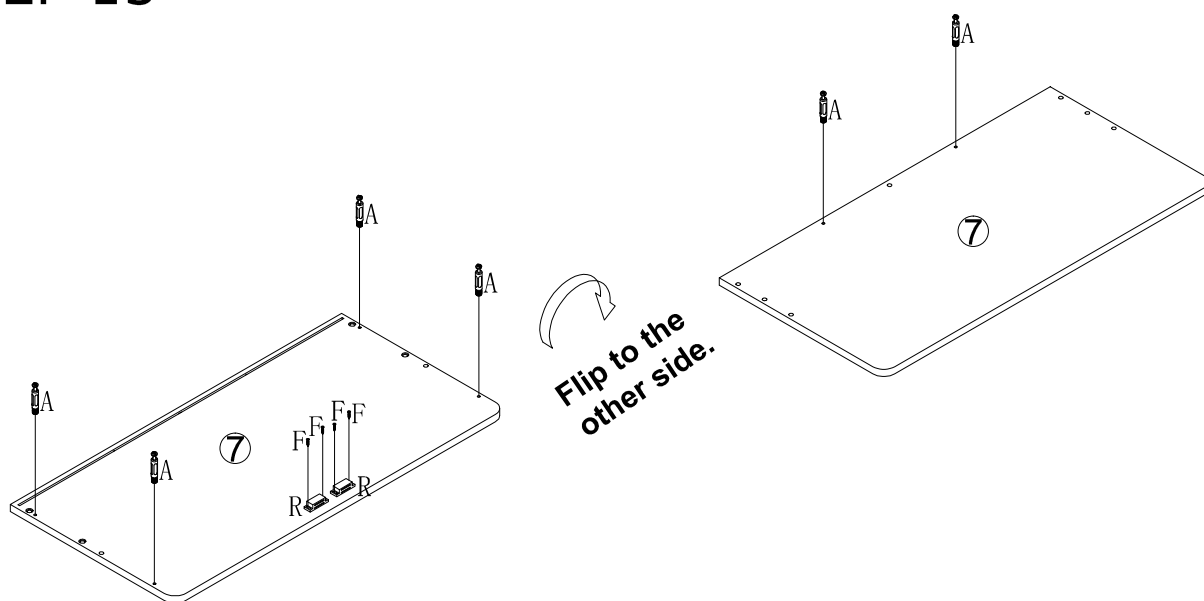


No. A
Quantity: 6 Pcs
8*28 mm



No. F
Quantity: 4 Pcs
M3.5*14mm



No. R
Quantity: 2 Pcs



STEP 16


No. B
Quantity: 2 Pcs
Ø15



No. C
Quantity: 2 Pcs
Ø20





No. D
Quantity: 3 Pcs
8*30mm



No. G
Quantity: 4 Pcs
M6*40mm



No. K
Quantity: 1 Pc
4#

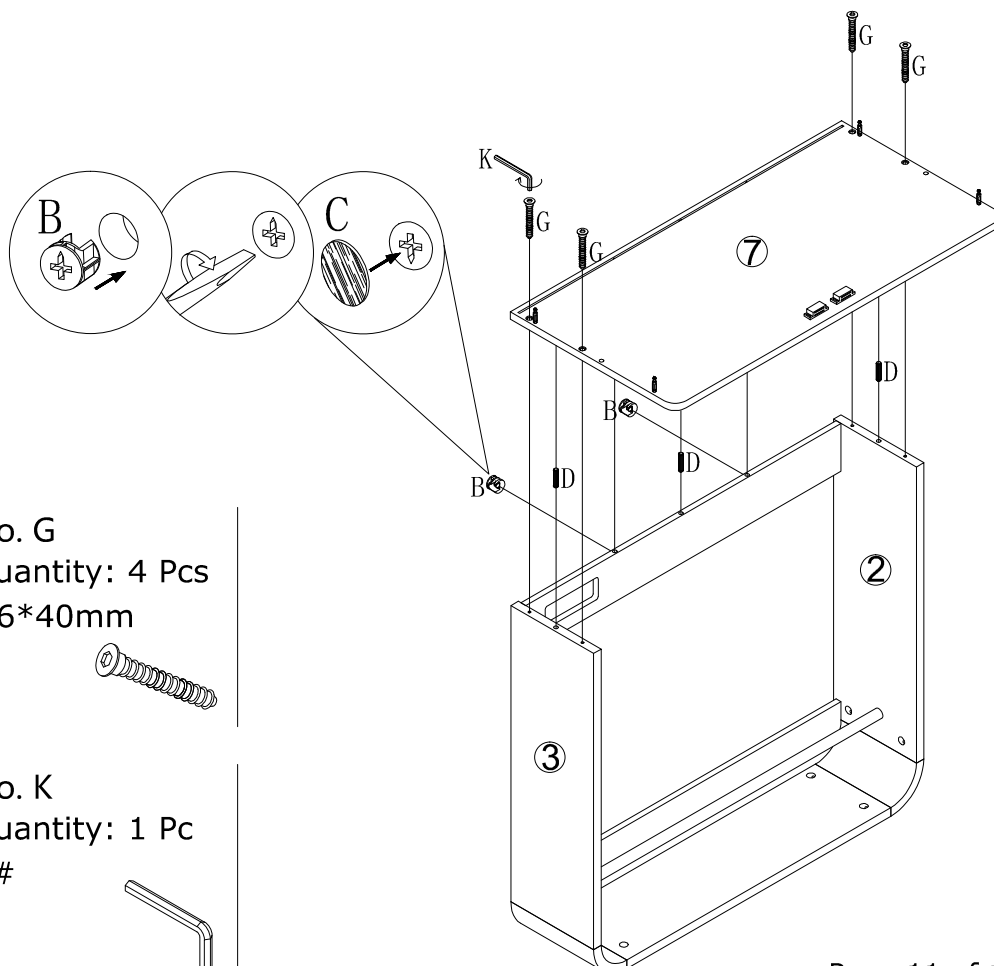

STEP 17



No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20





No. D
Quantity: 2 Pcs
8*30mm

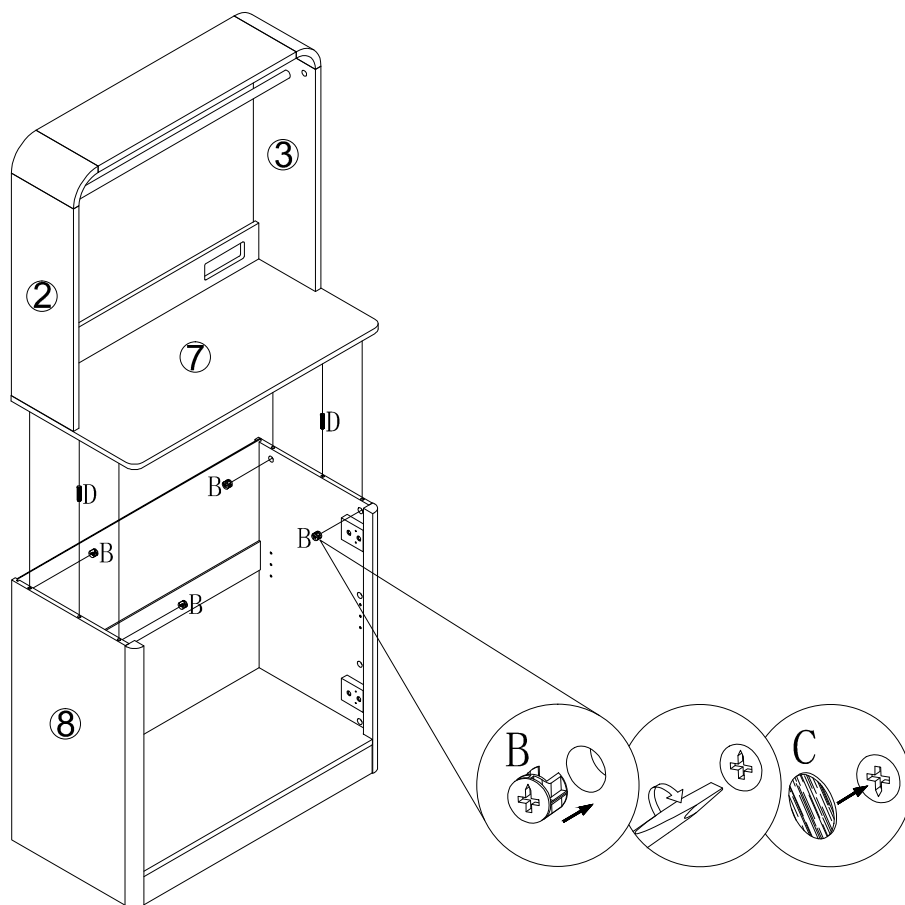


STEP 18

No. J
Quantity: 4 Pcs
M5*15mm

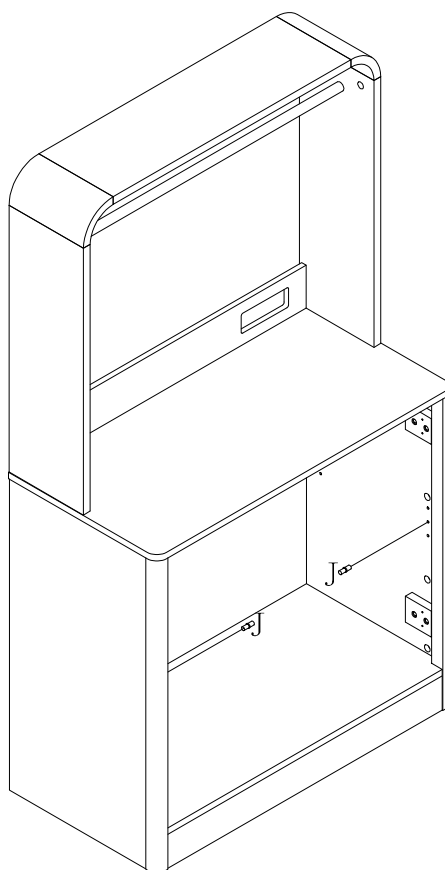


STEP 19

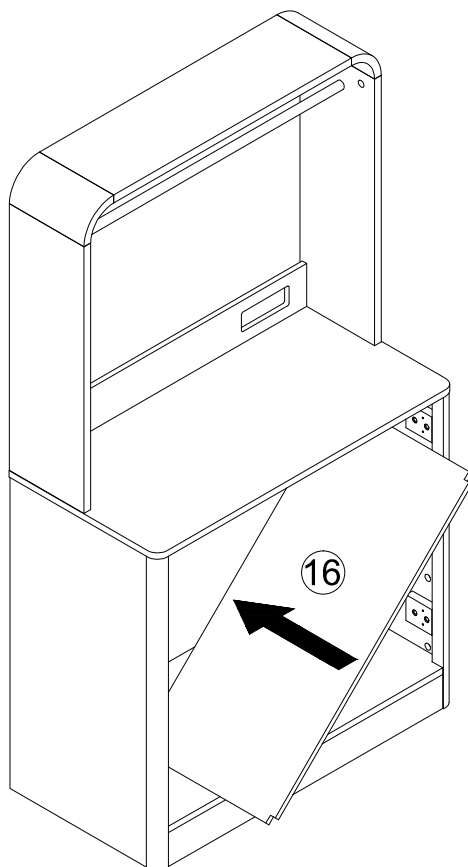

STEP 20

No. E
Quantity: 4 Pcs



No. F
Quantity: 12 Pcs
M3.5*14mm





No. M
Quantity: 2 Pcs




No. N
Quantity: 2 Pcs
M4*20mm




No. R
Quantity: 2 Pcs

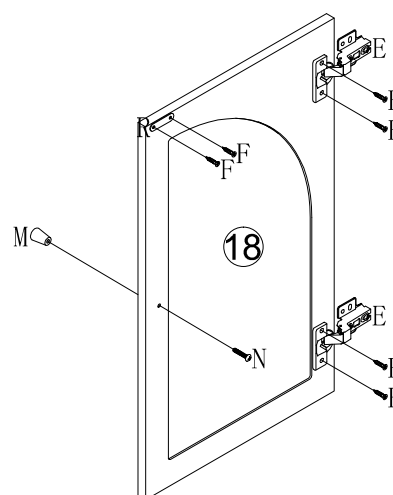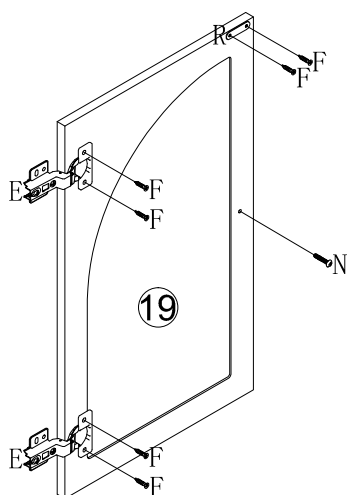

The way to adjust the door by hinge.


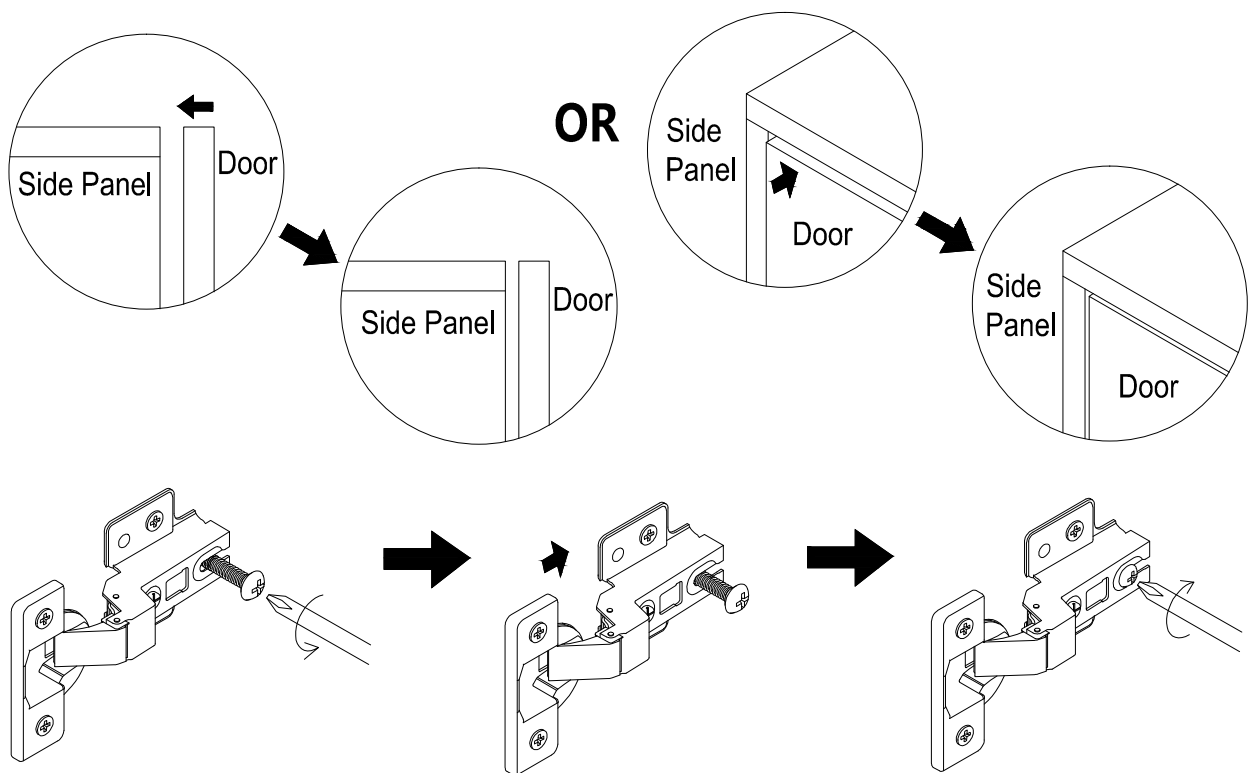


If the gap is too big between side panel and door or the door is over the edge of side panel, loose the back screw as shown, then move in the door with hinge and tighten the back screw as shown when the gap is just well.


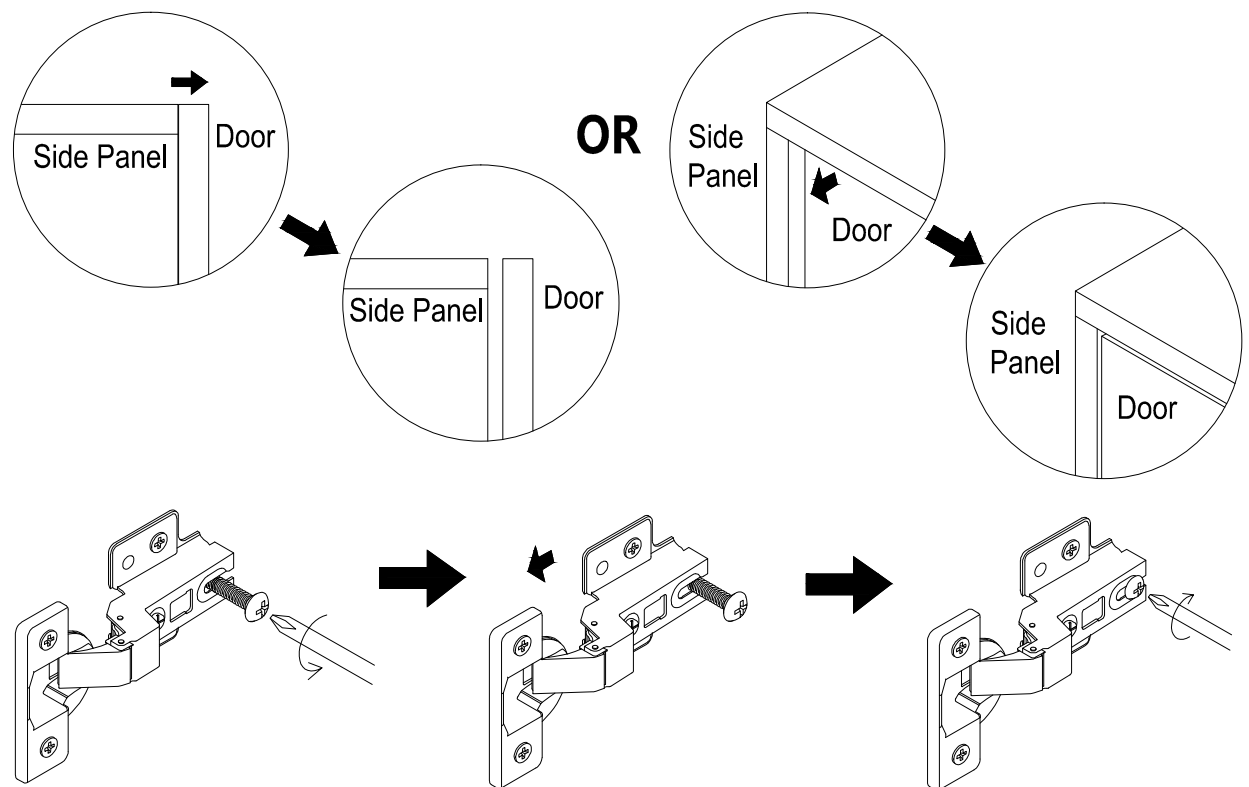


If the gap is too small between side panel and door or the door sank in side panel, loose the back screw as shown, then move out the door with hinge and tighten the back screw as shown when the gap is just well.



! IMPORTANT: When making height or depth adjustments, please ensure you adjust **BOTH** the top and bottom hinges of the door simultaneously. Adjusting only one hinge will be ineffective and may cause stress on the hardware.

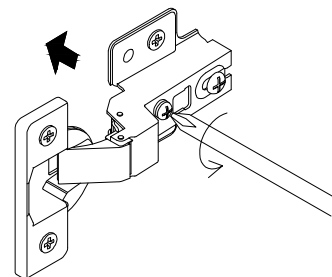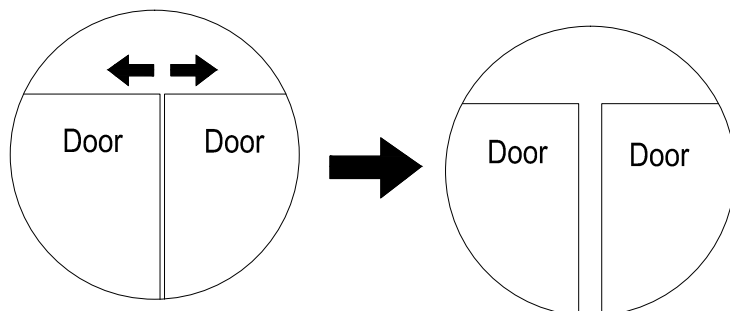




If the gap is too small between two doors, loose the front screw as shown.

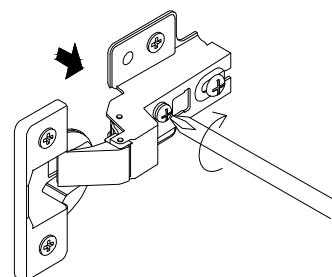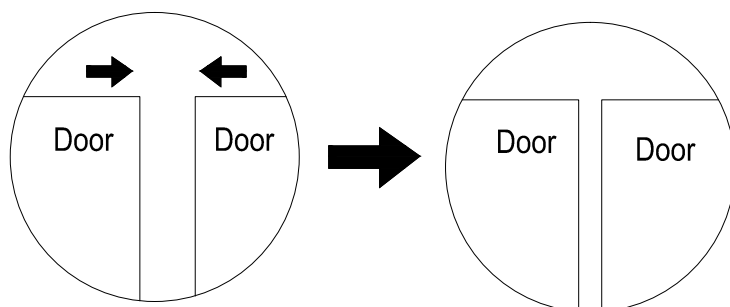

If the gap is too small between two doors, loose the front screw as shown.

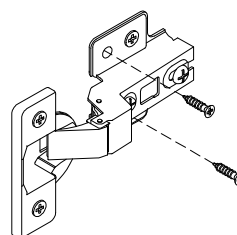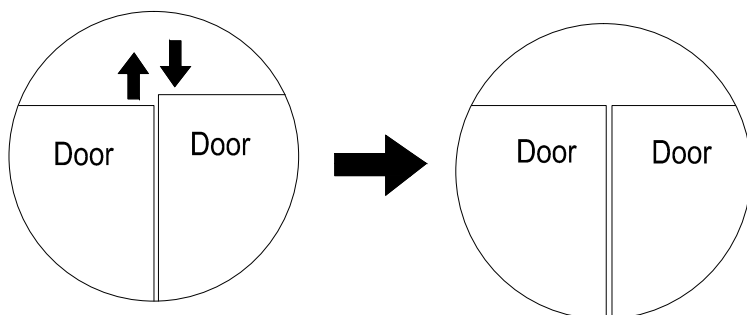


Attention:
After adjusted Hinges,
then lock screws.

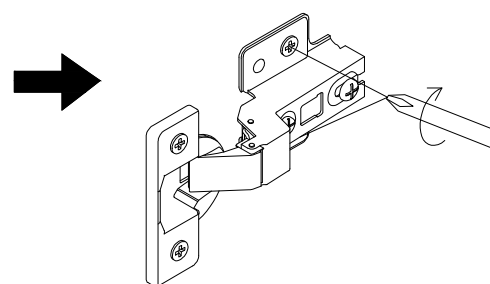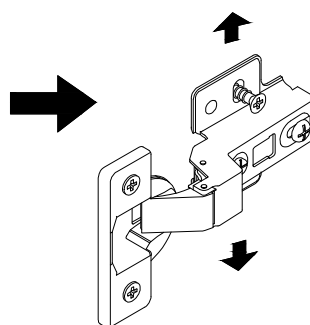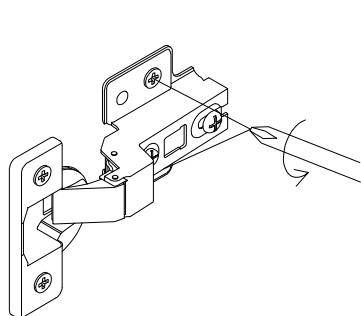


If the doors are not in same level, losse the back screws on wing, then adjust the door up and down, tighten the screws when both doors are in same level.Screw front two screws on wing when all are in place.

STEP 21

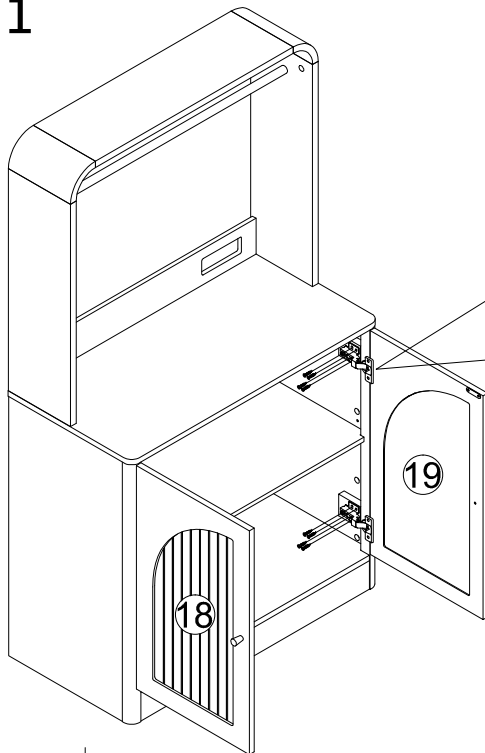

First, use screws to secure the two rear guide holes of the door hinge into the two guide holes of the side panel.

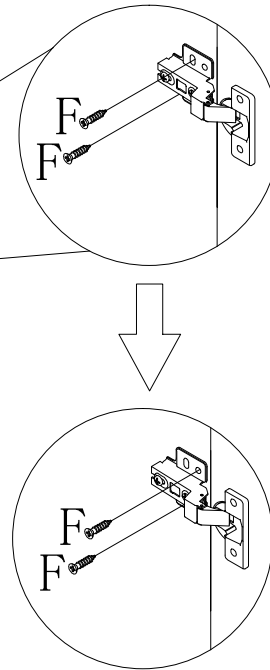

No. F
Quantity: 16 Pcs
M3.5*14mm





If you encounter difficulties during adjustment, please refer to the guidance on pages 14 and 15 to adjust the gaps of the cabinet doors. After making the gaps even, please tighten the two screws on the front side.

STEP 22



“DO NOT skip Step 22. The Plastic Wedges (P) are crucial for the stability of the cabinet.”

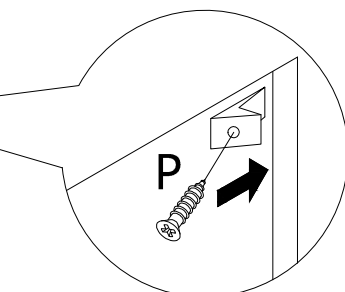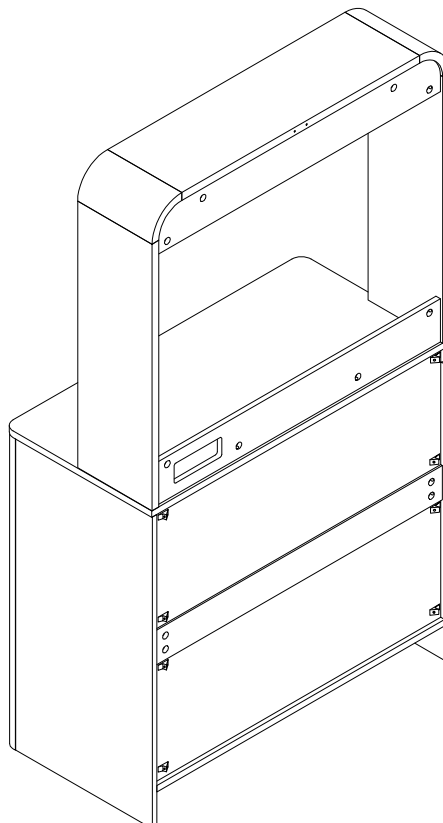


Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.

No. P
Quantity: 8 Sets



STEP 23

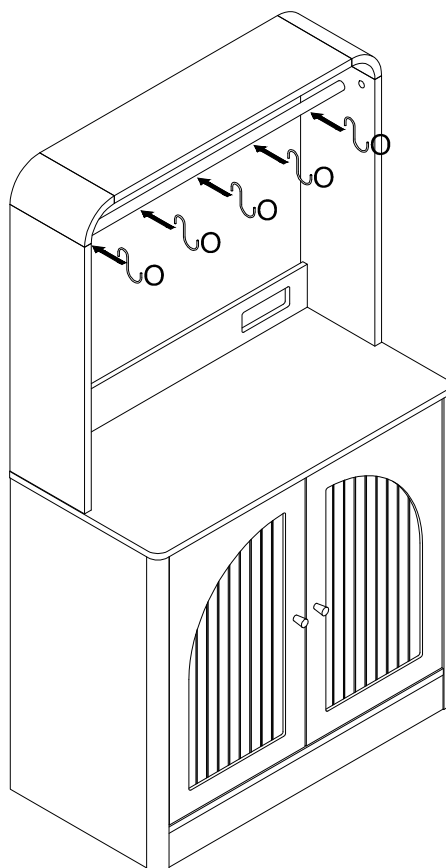


No. O
Quantity: 5 Pcs



STEP 24




After placing the power strip into the groove, you can directly tighten the screws.

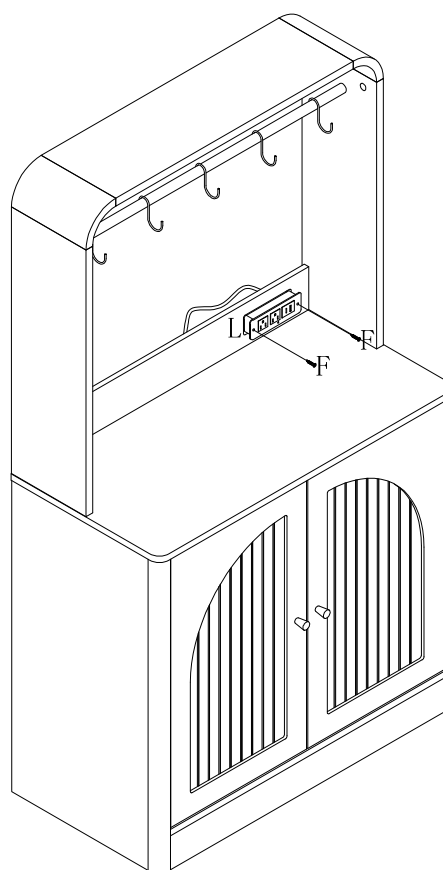

No. F
Quantity: 2 Pcs
M3.5*14mm








No. L
Quantity: 1 Pc




STEP 25



WARNING: ALWAYS LIFT the cabinet when moving it. **NEVER DRAG** it across the floor. Dragging will cause the legs to fail and may lead to serious injury or property damage.

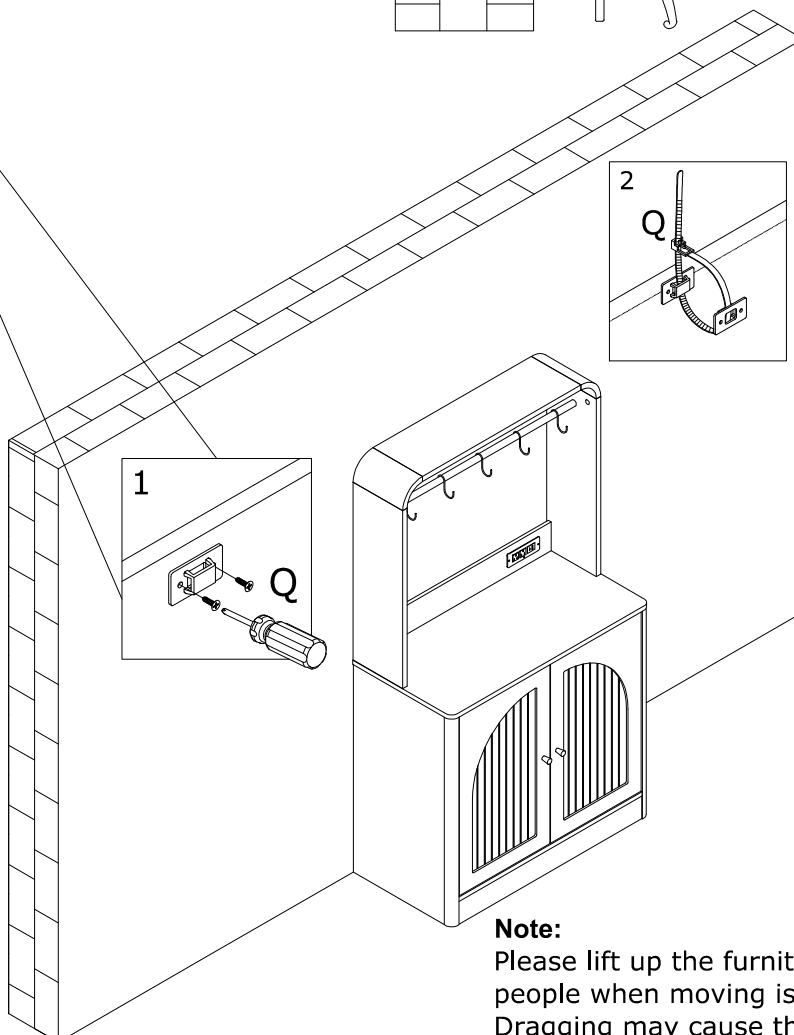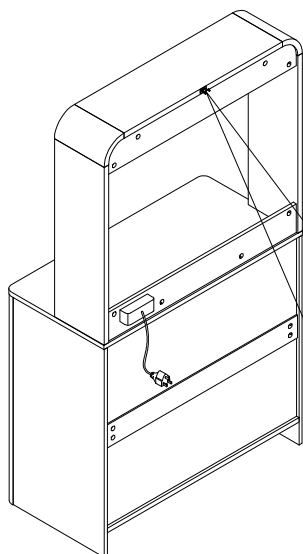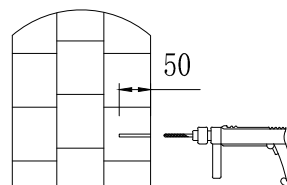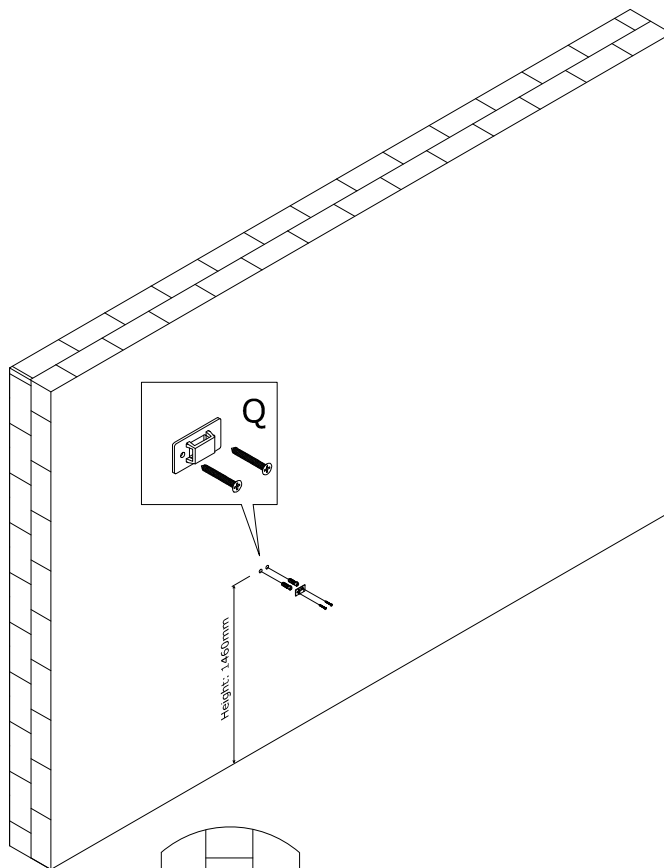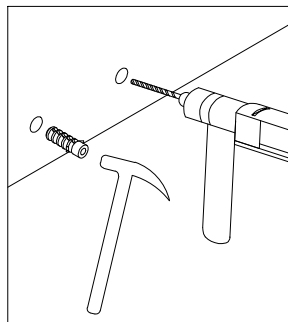

No. Q
Quantity: 1 Sets



Note:
Please lift up the furniture by two people when moving is needed.
Dragging may cause the legs failure.