

Desk Assembly Instructions

Step 1: Install the motor.

1. Insert the motor into the desk leg.



2. Tighten the screws with a tool.



Step 2: Install the crossbeam.

1. Place the crossbeam in the motor position and tighten it with screws, as shown in Figures 1 and 2.
2. Insert the telescopic crossbeam into the main crossbeam and adjust it to the desired length, as shown in Figure 3 and 4.
3. Insert the telescopic beam into the other side of the crossbeam, as shown in Figure 5.
4. Adjust to the optimal length as shown in Figure 6.



1



2



3



6



5



4

Step 3: Install the angle bracket

1. Place the angle bracket on top of the desk leg and tighten it with screws.




Step 4: Install the desktop metal frame.

1. Place the desktop metal frame above the crossbeam, as shown in Figure 1.
2. Align the second crossbar of the desktop metal frame with the angle bracket, as shown in Figure 2.

1



2

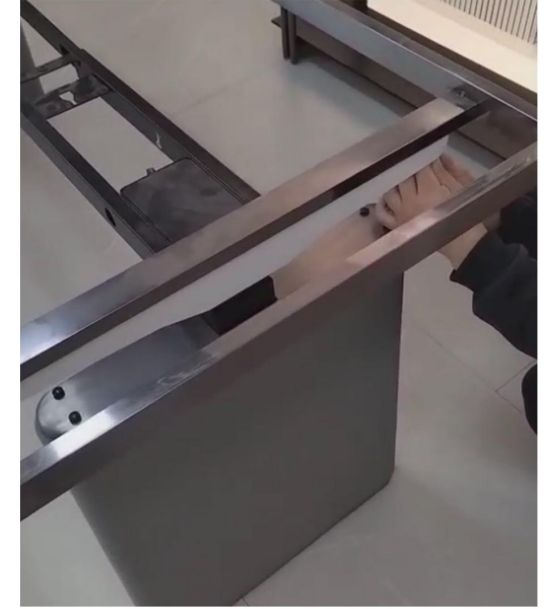


Step 5: Secure the desktop metal frame to the crossbeam.



1. Place screws in the corresponding holes and tighten them with a tool.

Step 6: Install the desktop.

1. Apply adhesive to the four corners of the desktop metal frame (more can be applied).
2. Align and place the desktop on top of the metal frame.

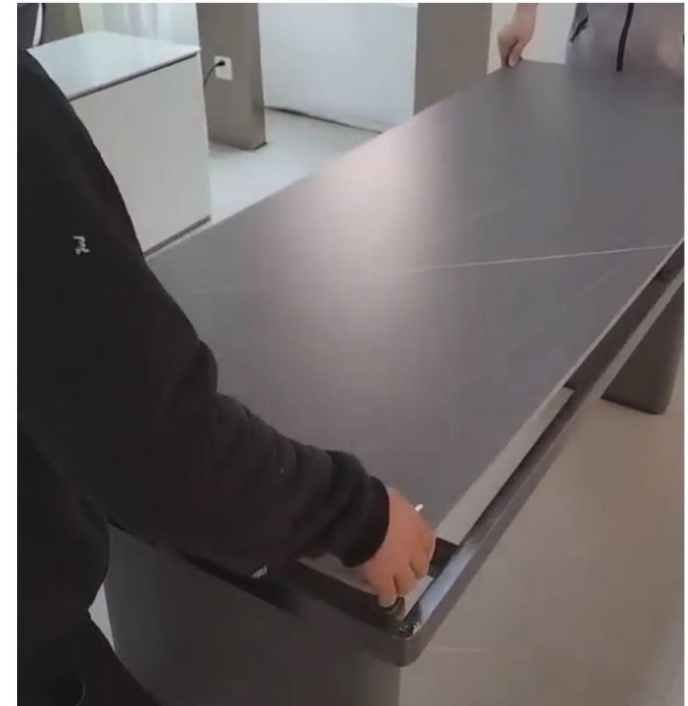

Installation completed.