


WARNING

·Please don't fasten all screws until you assemble full bed.


A		M6X16	x31
B		M6X30	x2
C		M6X35	x22
D		M6X45	x35
E		M6X70	x16
F		M8X55	x2
G		M8X90	x4
H		M6x18	x61
I			x6
J			x51
K			x46
L			x4
M		M4	x2
N		M5	x1

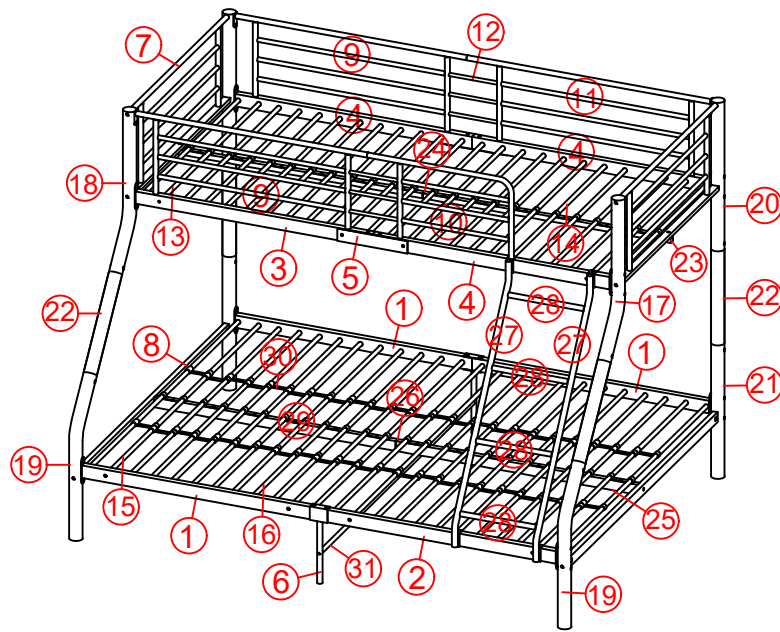


A		M6X16	x1
B		M6X30	x1
C		M6X35	x1
D		M6X45	x1
E		M6X70	x1
F		M8X55	x1
G		M8X90	x1
H		M6x18	x1
I			x1
J			x1
K			x1

1 25x50x1000 3x	A	2 25x50x1000 1x	A	3 25x50x1000 3x	A	4 25x50x1000 1x	A
5 2x	B	6 2x	B	7 2x	A	8 25x50x1369 2x	B
9 2x	A	10 1x	A	11 1x	A	12 12x228 6x	B
13 16x948 4x	A	14 16x946 20x	A	15 16x1448 4x	B		
16 16x1446 20x	B	17 1x	B	18 1x	B		
19 2x	B	20 2x	A	21 2x	A	22 50x430 4x	B
23 20x20x1039 2x	B	24 18x18x250 1x	B	25 20x40x1011 2x	B	26 18x38x250 1x	B
27 2x	B	28 19x302 4x	B	29 24x	A		
30 46x	A	31 16x1410 1x	B				


1

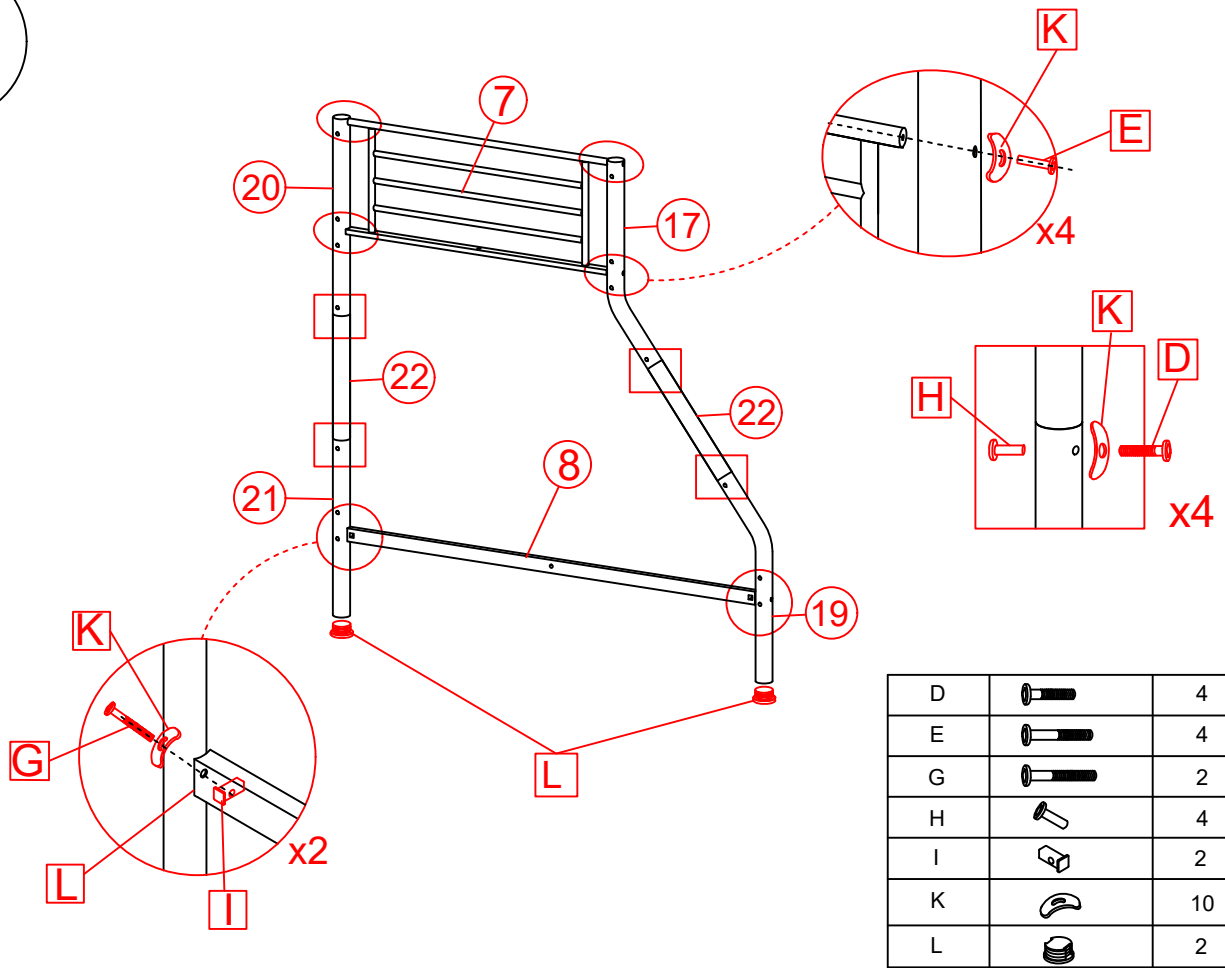

2

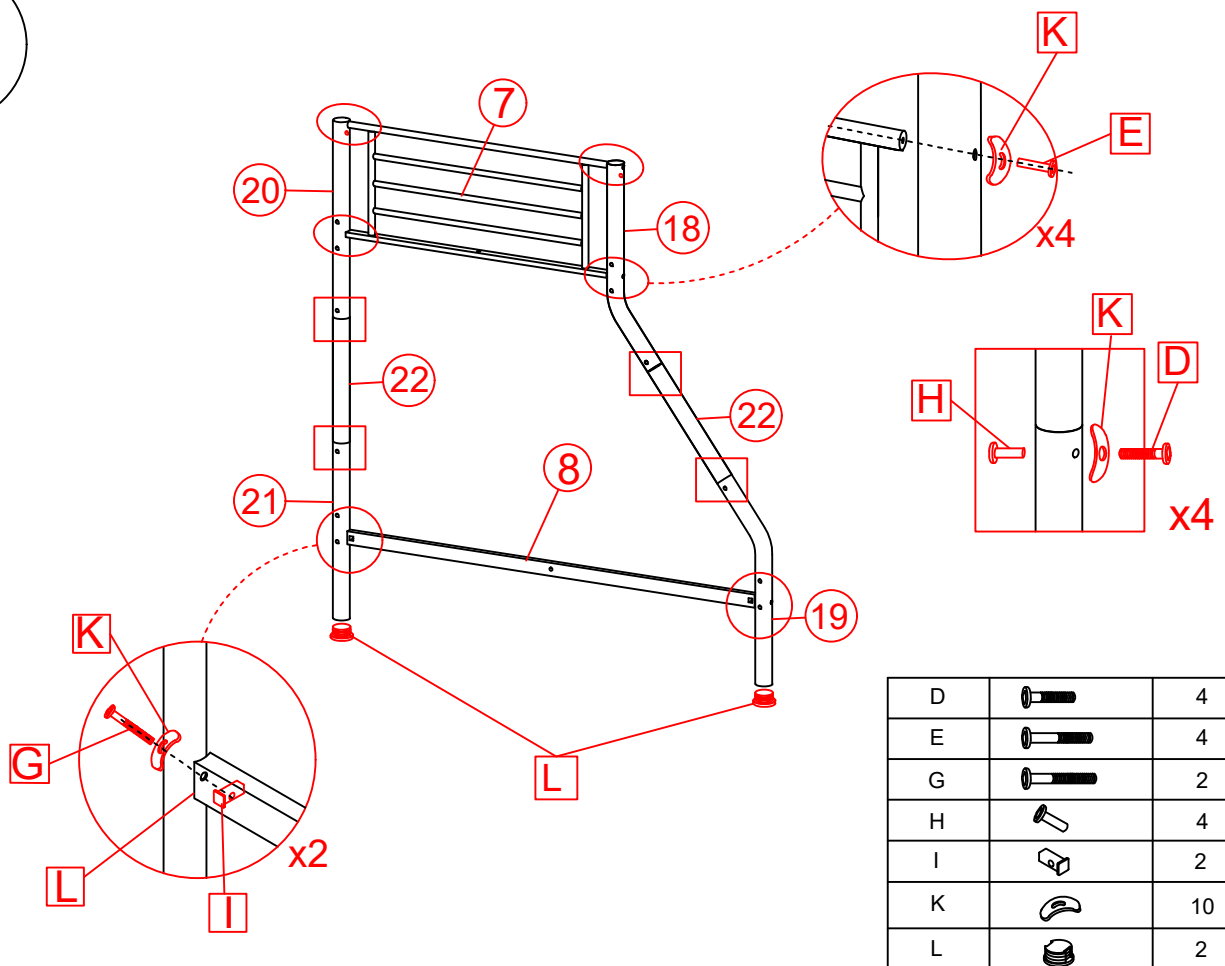


3

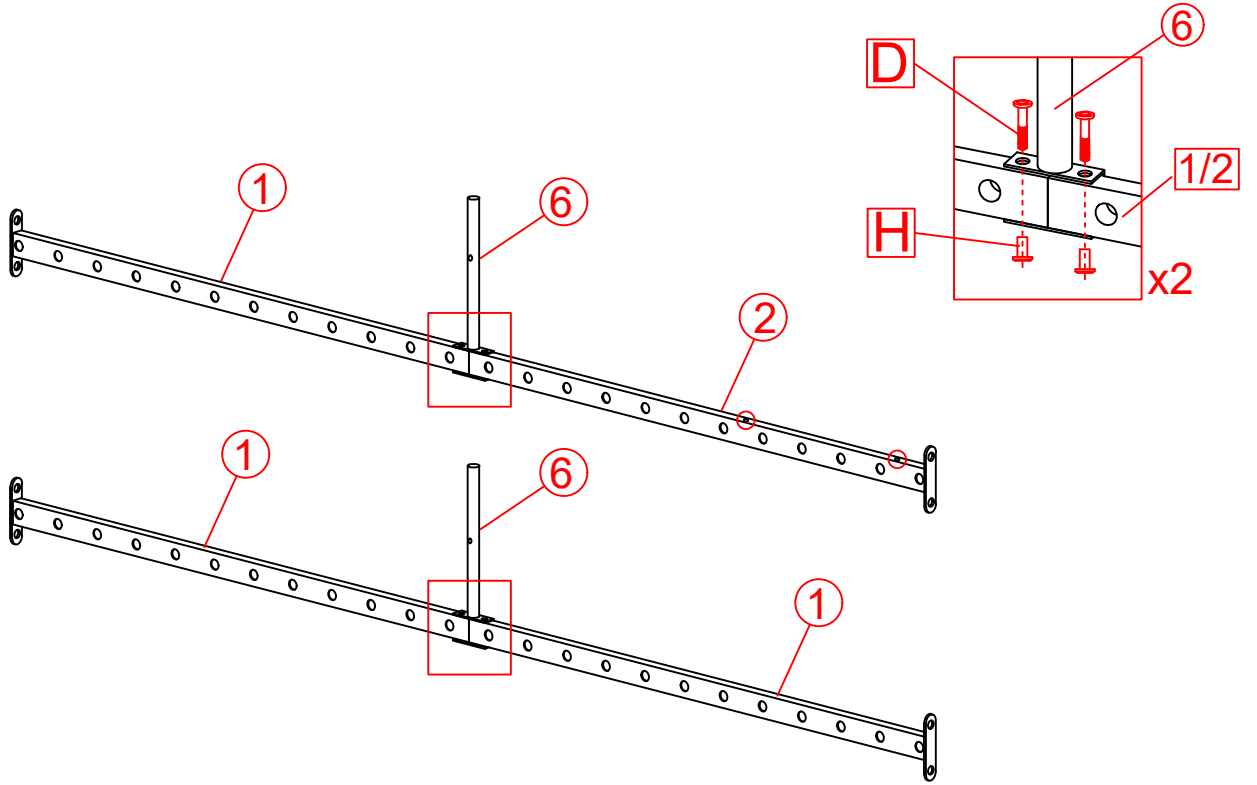


D		4
H		4

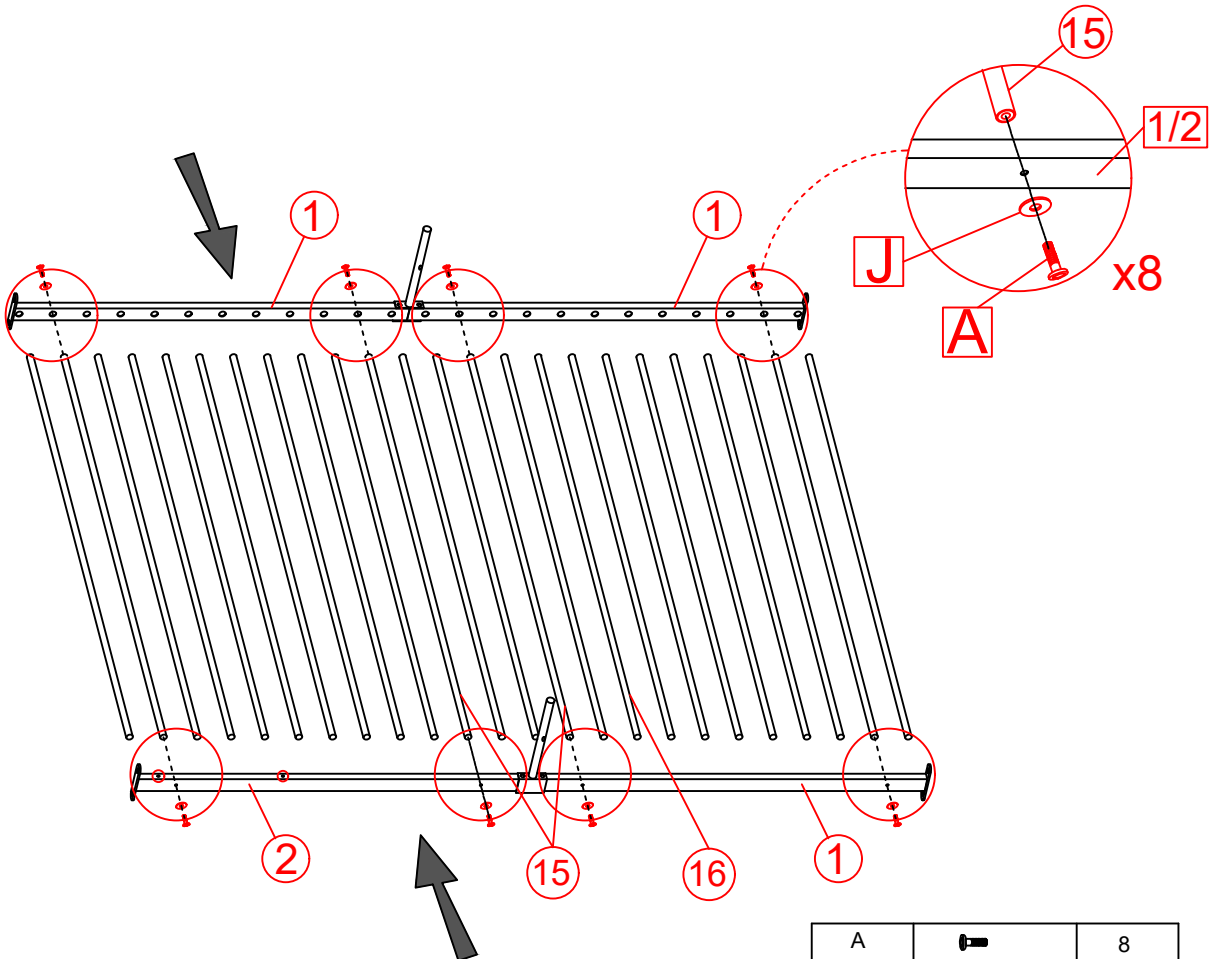

4




A		8
J		8

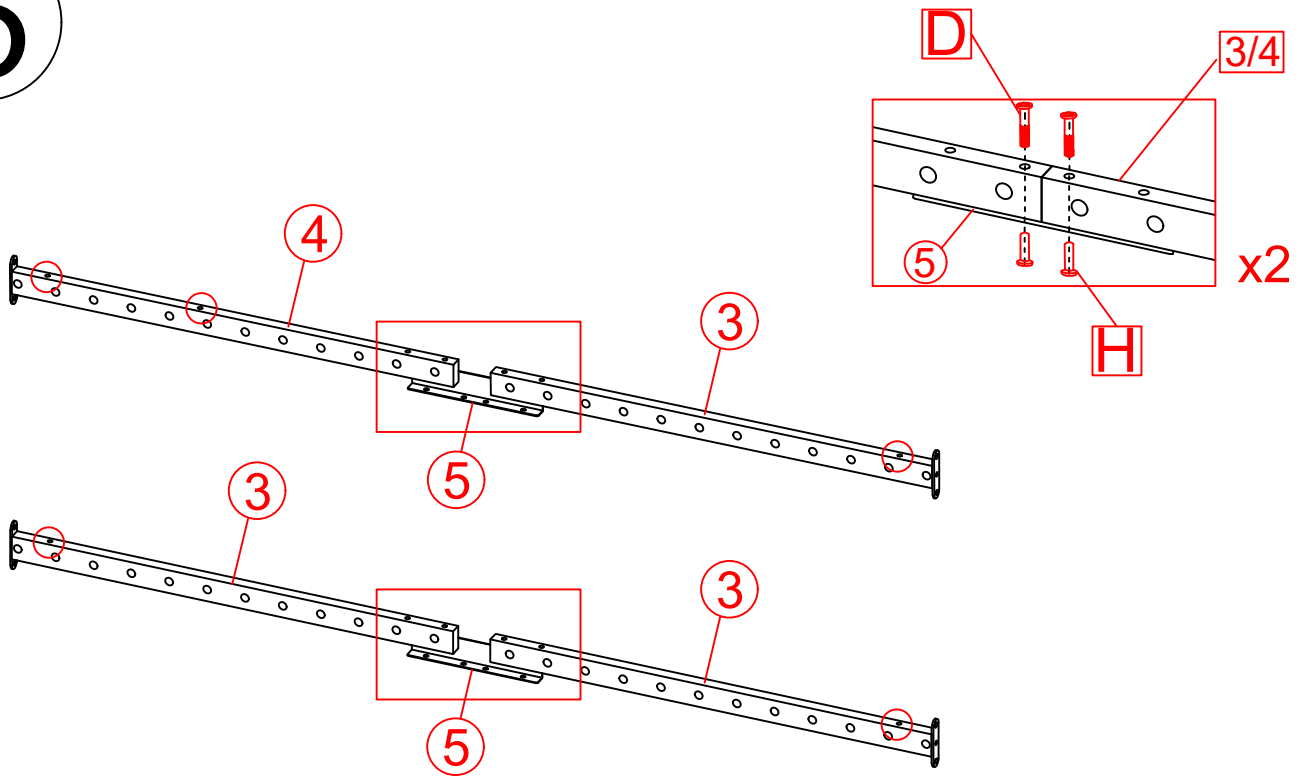

5






D		4
H		4

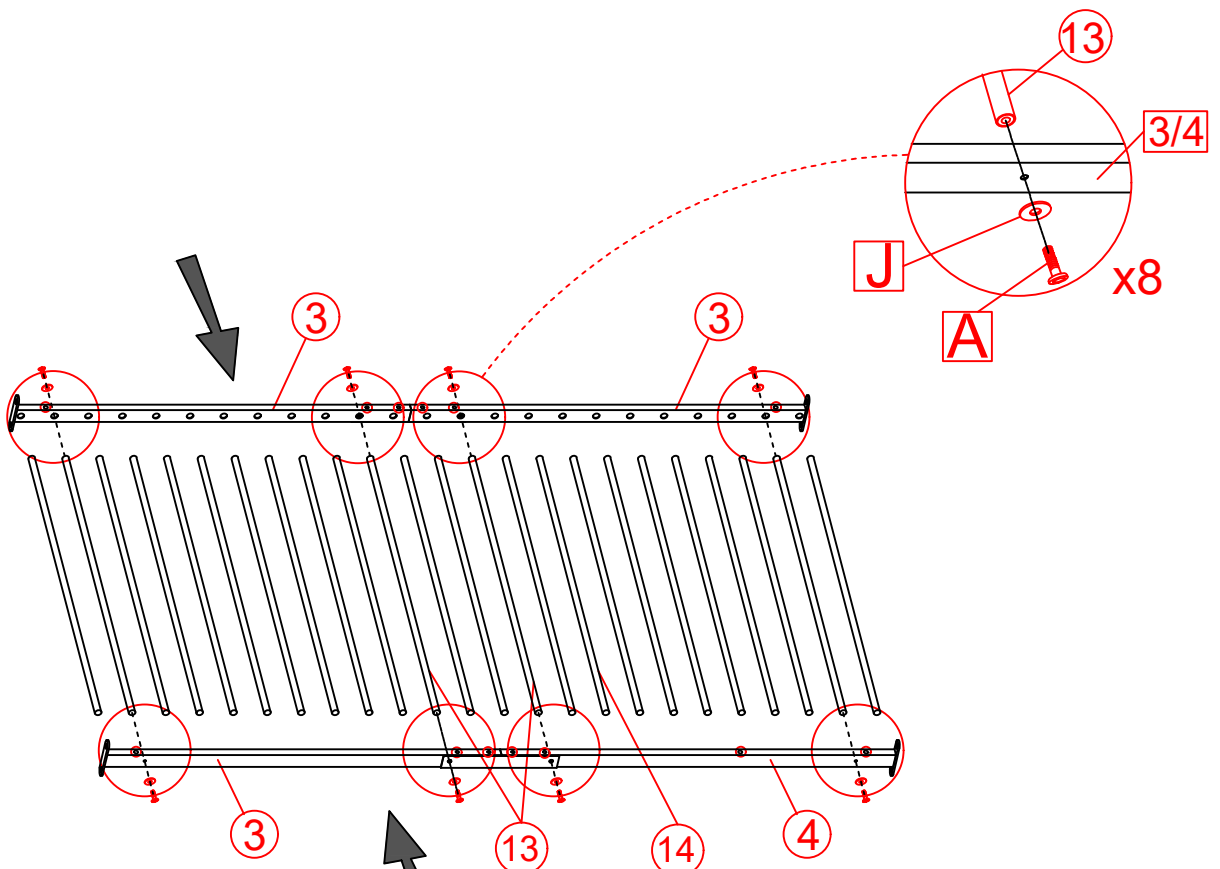6






A		8
J		8

7

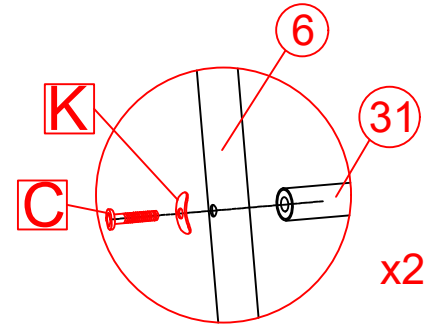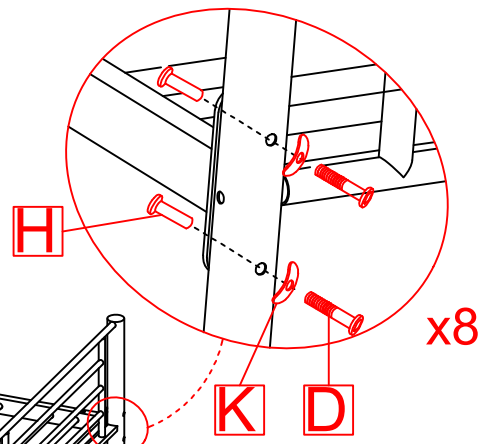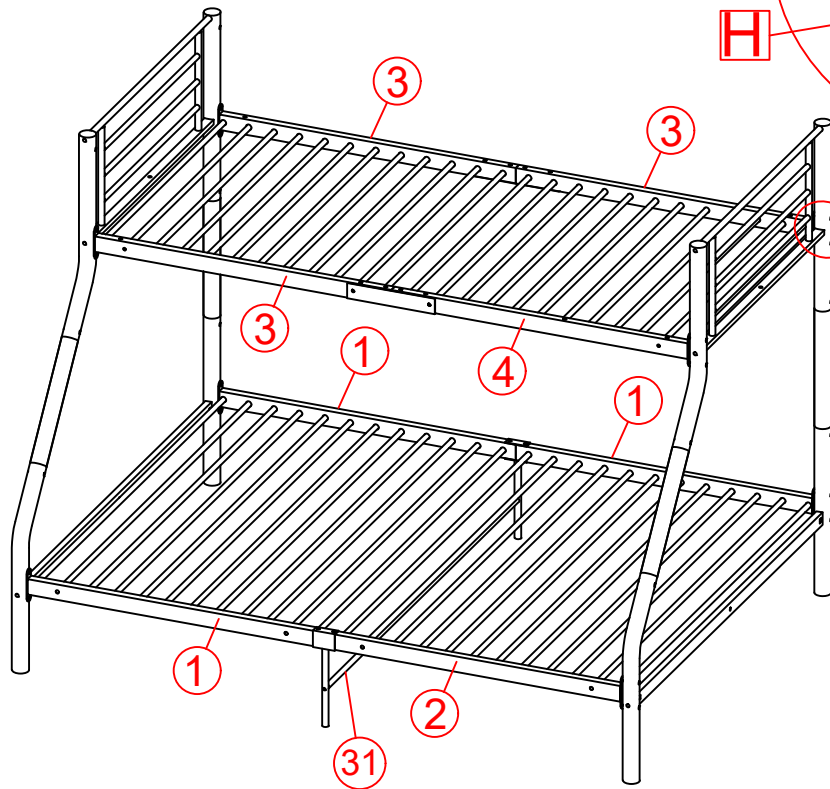




C		2
D		16
H		16
K		18

8

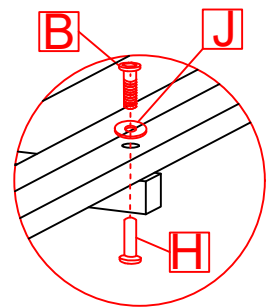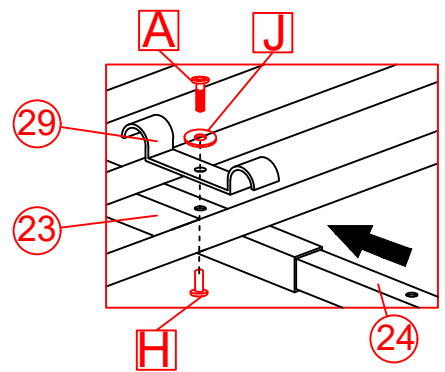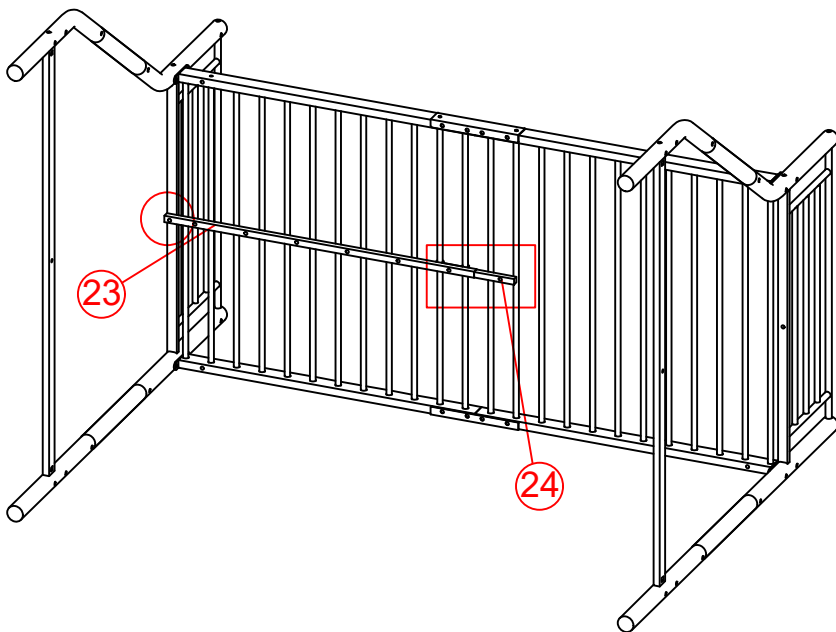




A		1
B		1
H		2
J		2

9

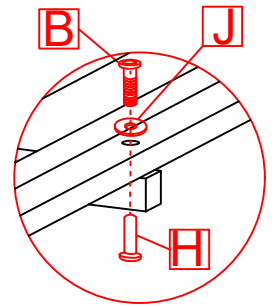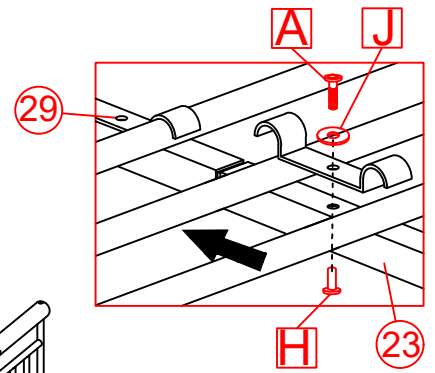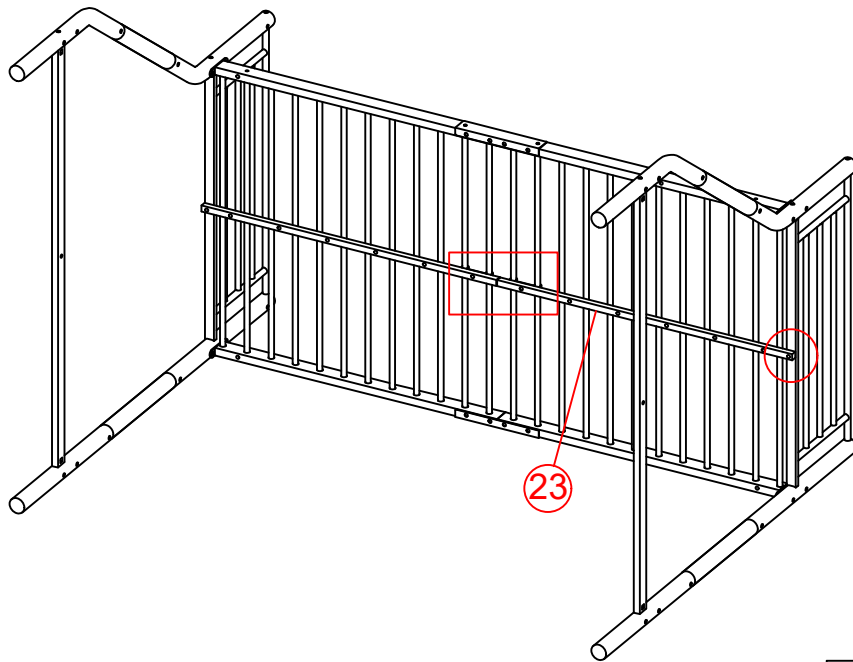




A		1
B		1
H		2
J		2

10

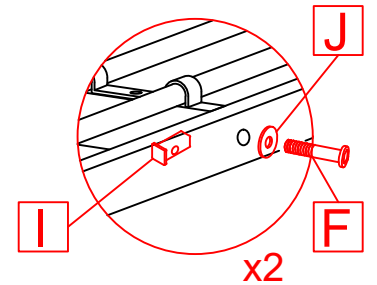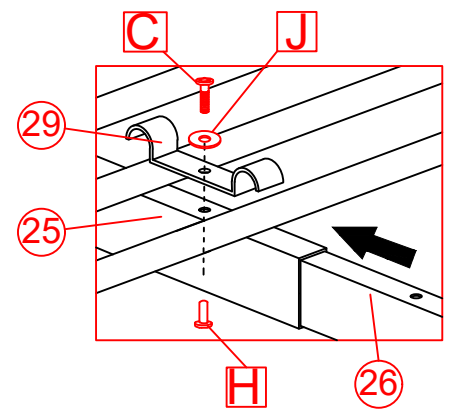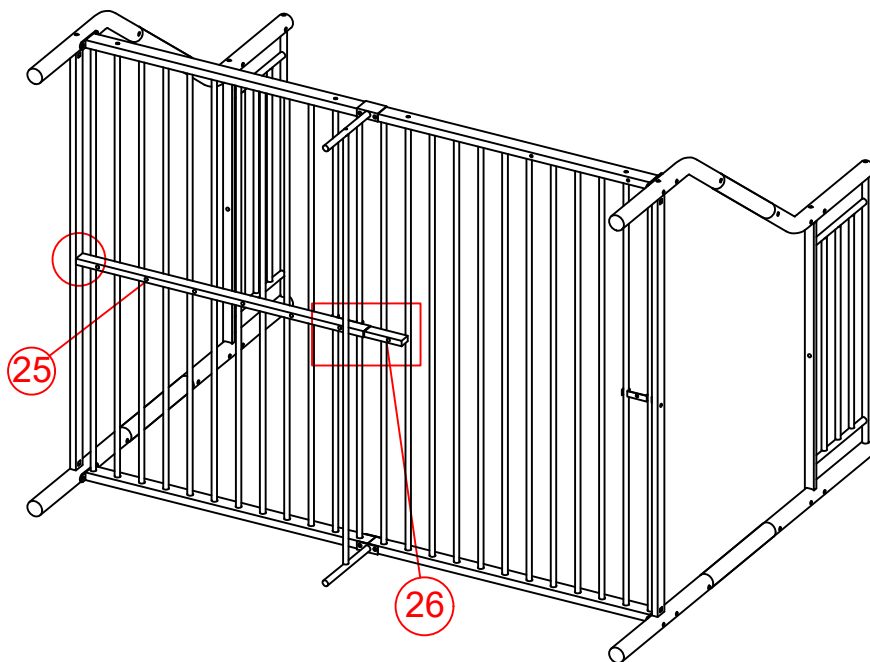




C		1
F		1
H		1
I		1
J		2

11

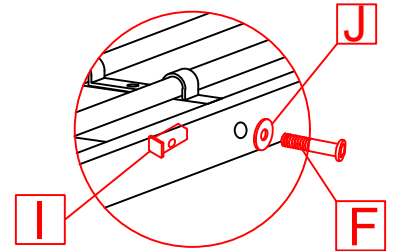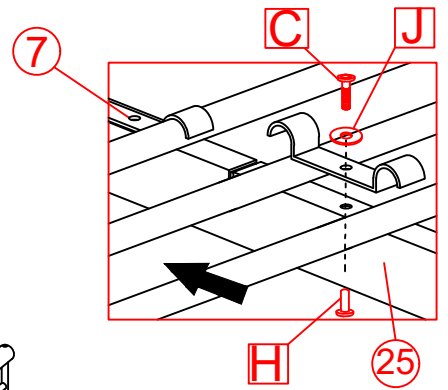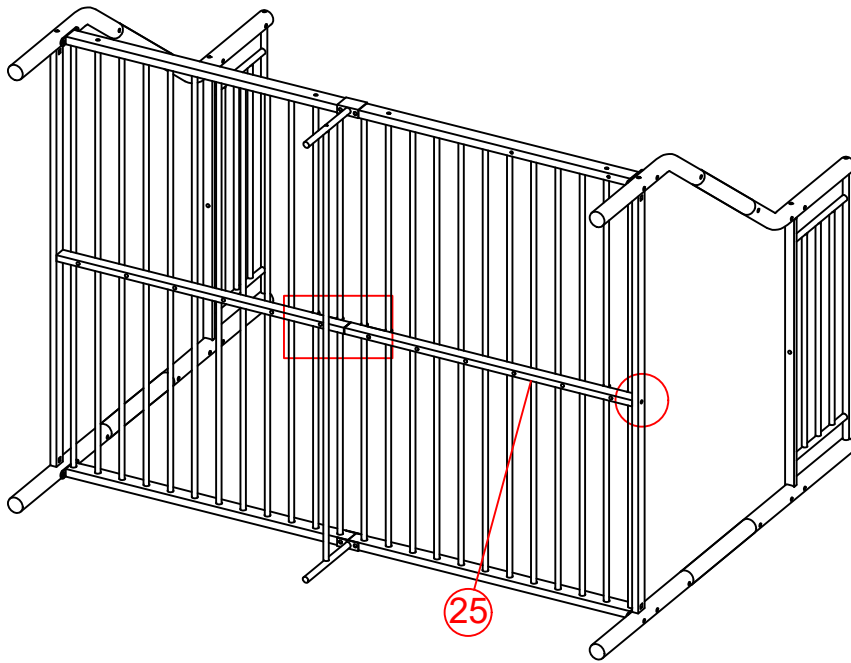


C		1
F		1
H		1
I		1
J		2

12

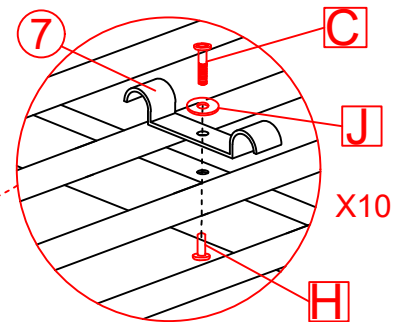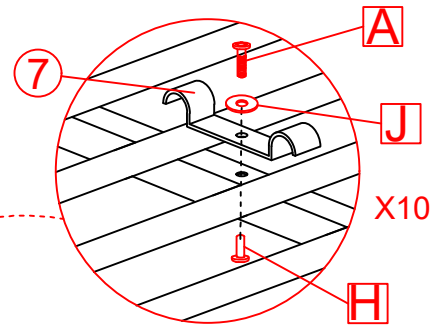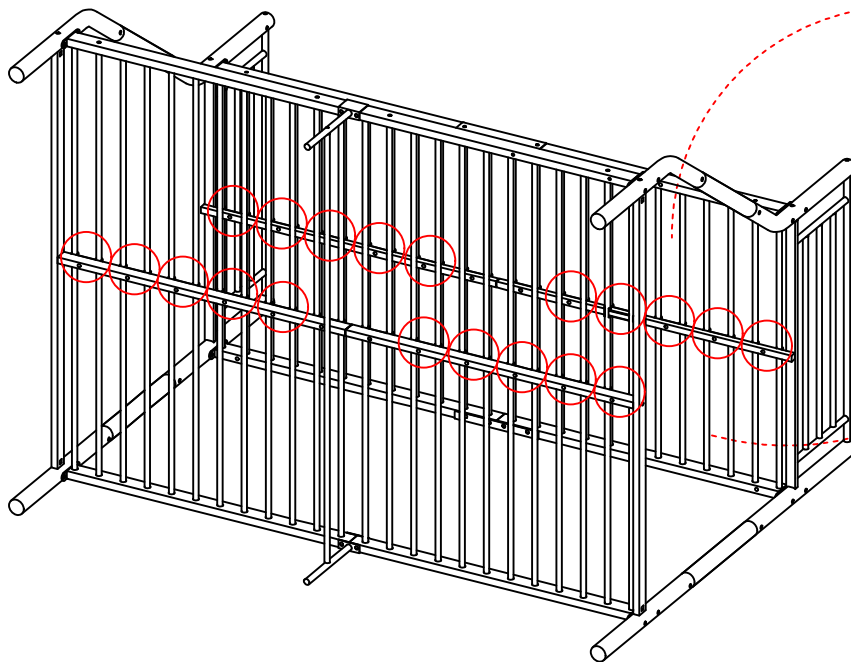





A		10
C		10
H		20
J		20

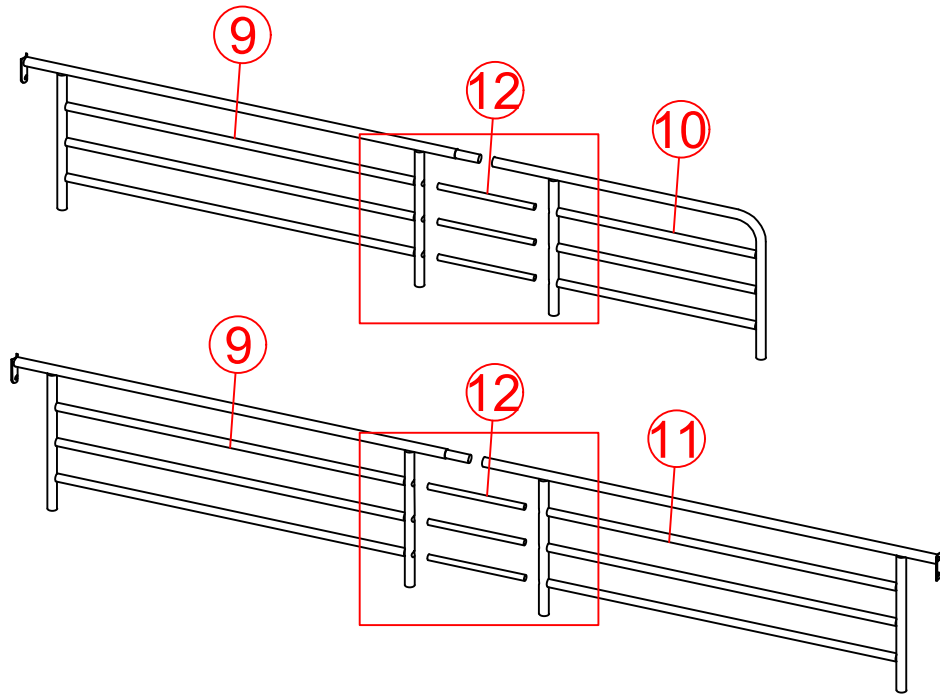13


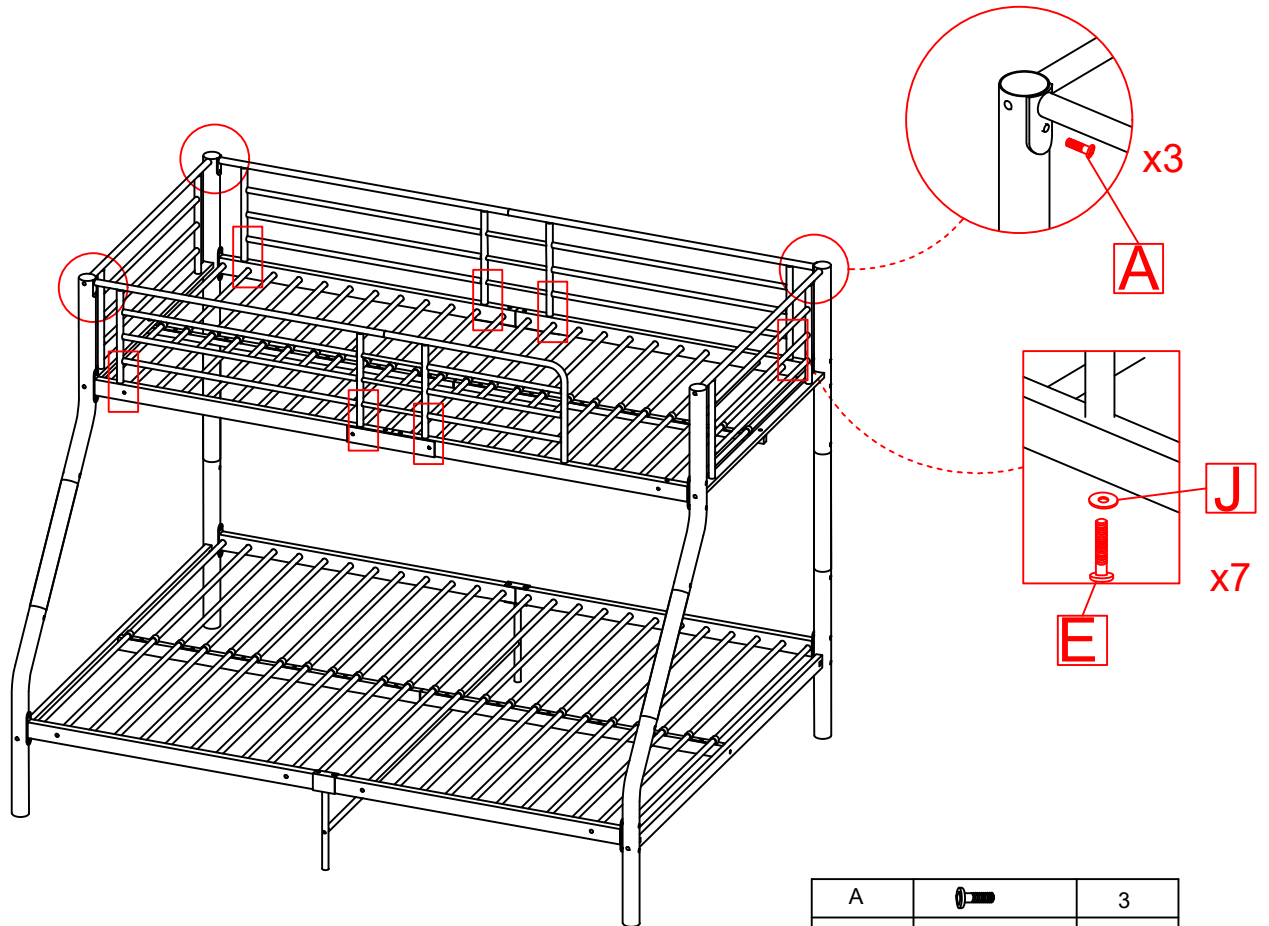


14




A		3
E		7
J		7

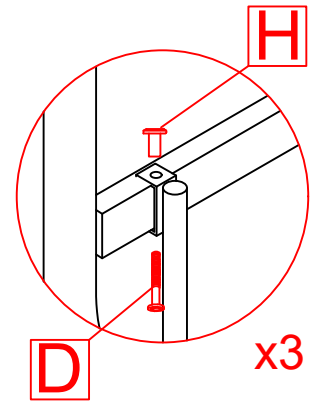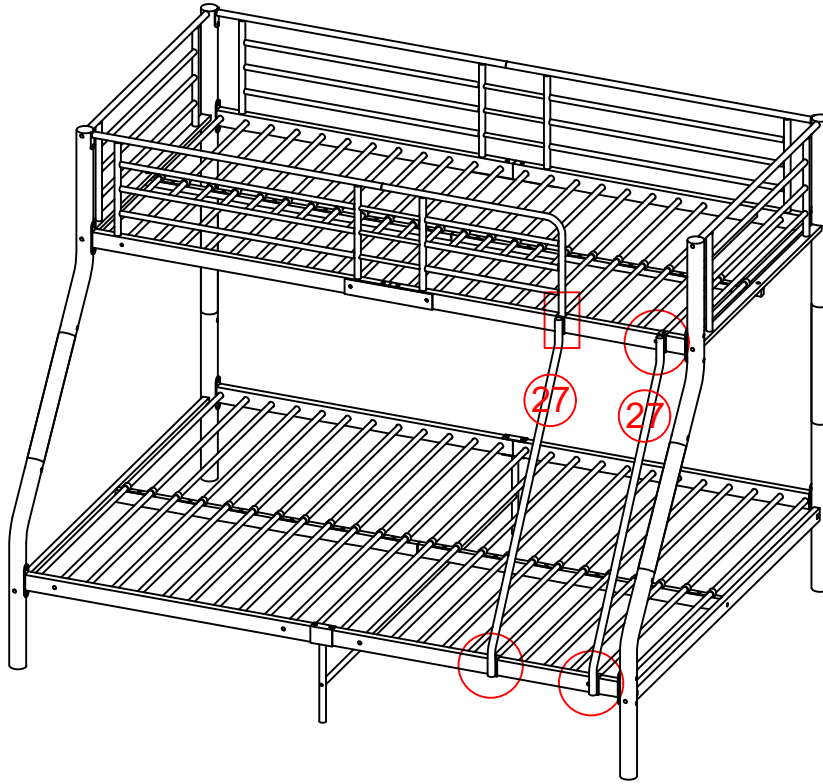


15

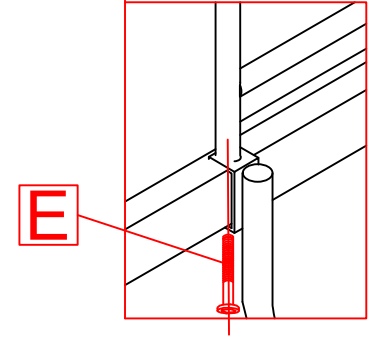



D **H** x3




E

D		3
H		3
E		1

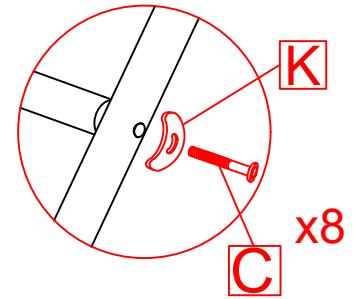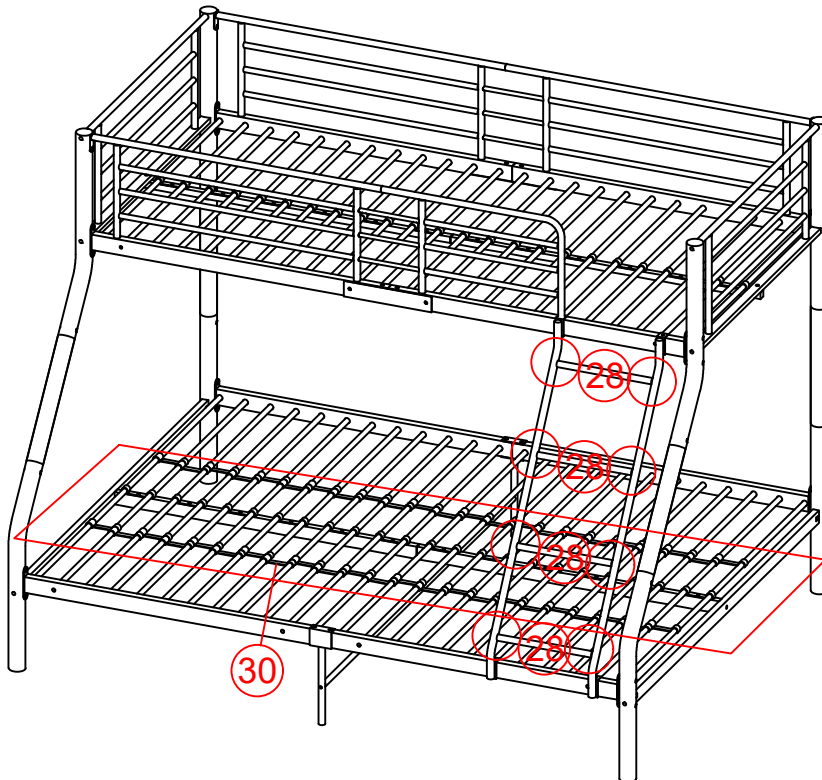

16

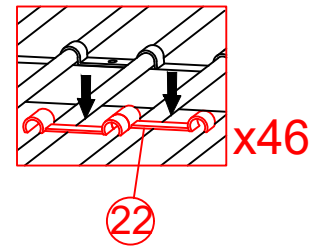

C **K** x8



22 x46

C		8
K		8

