

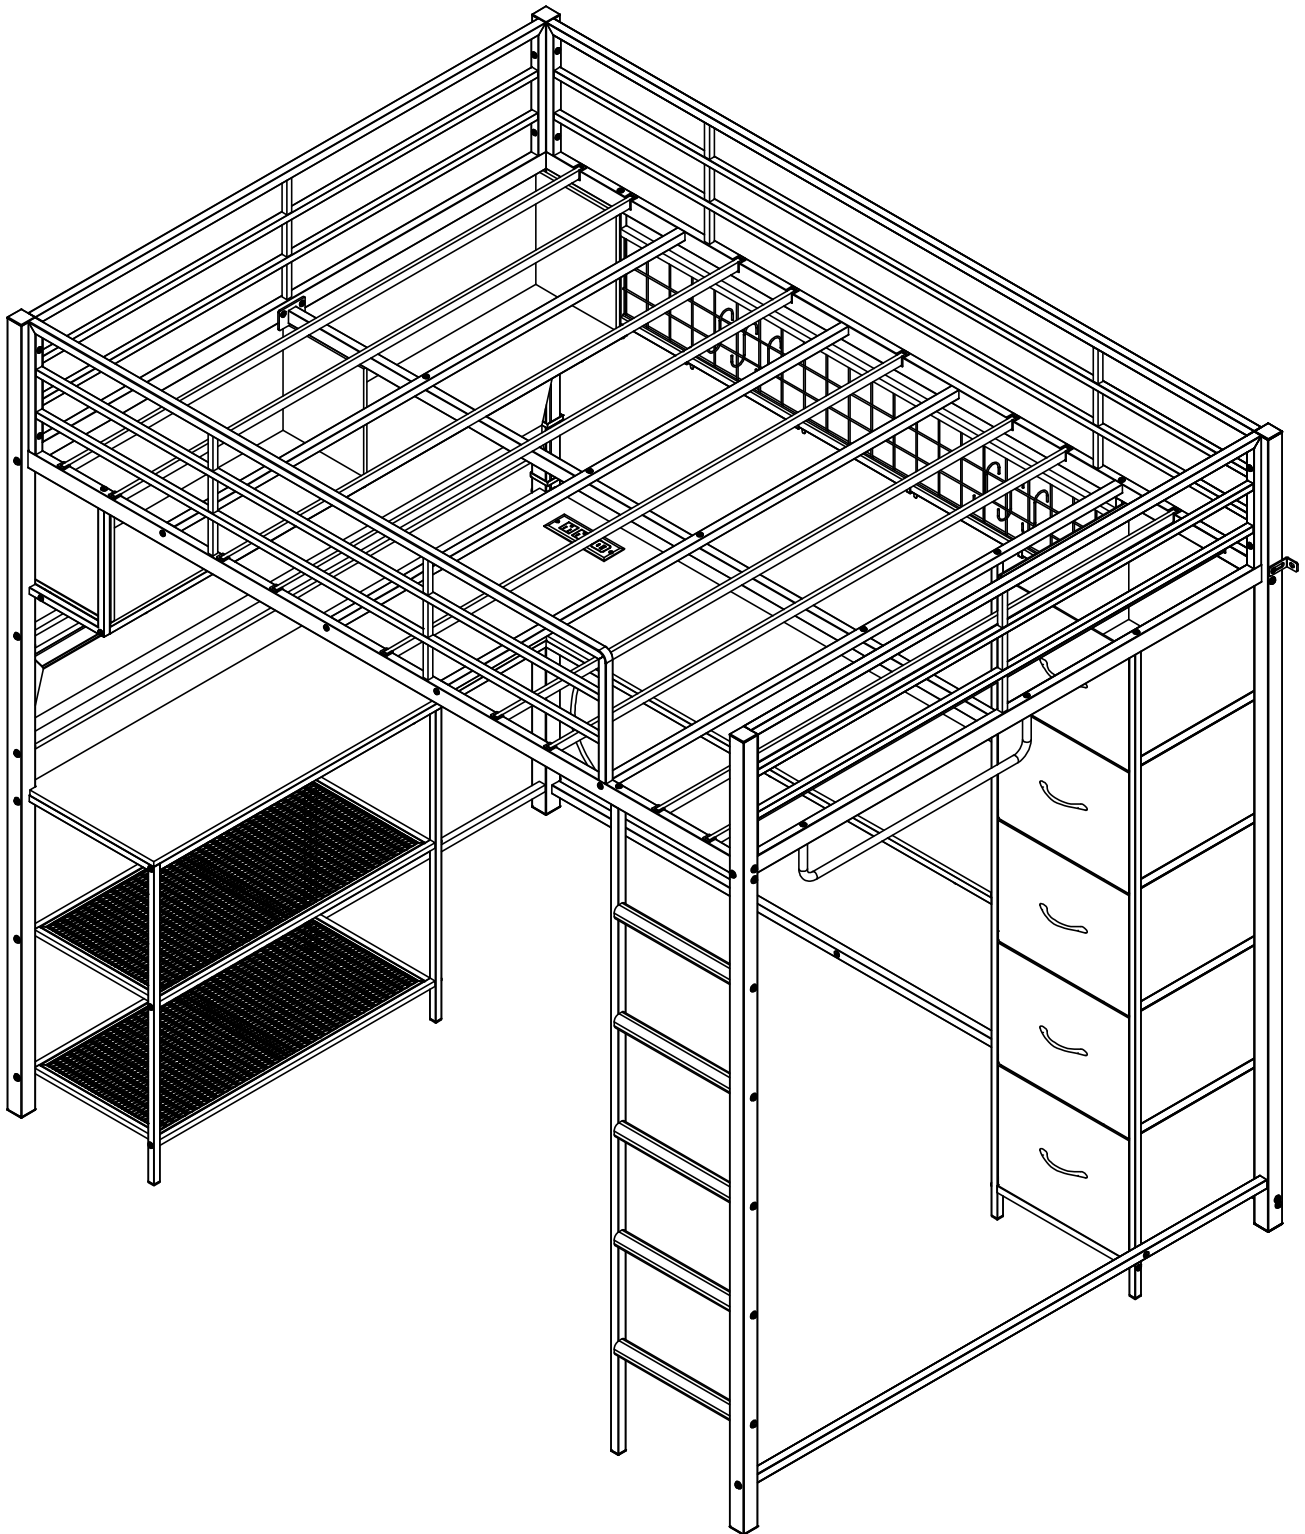



Loft Bed

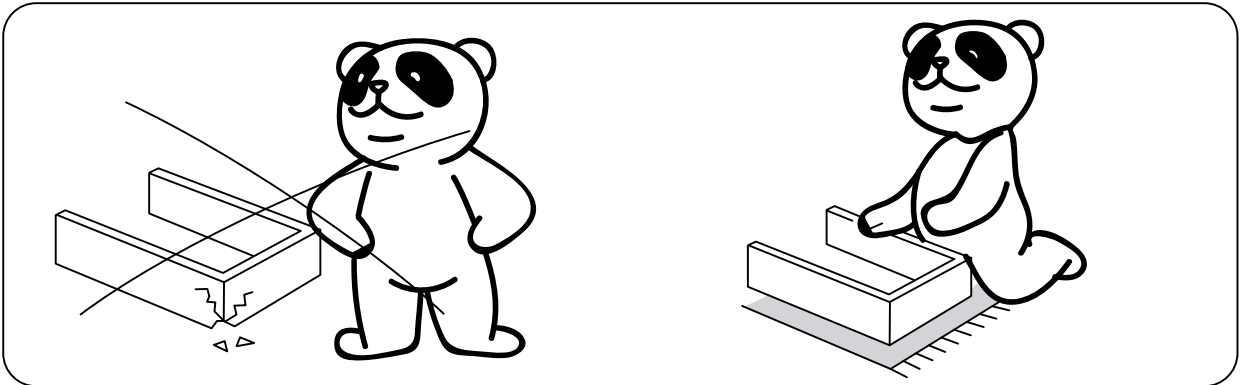


Version 1.0

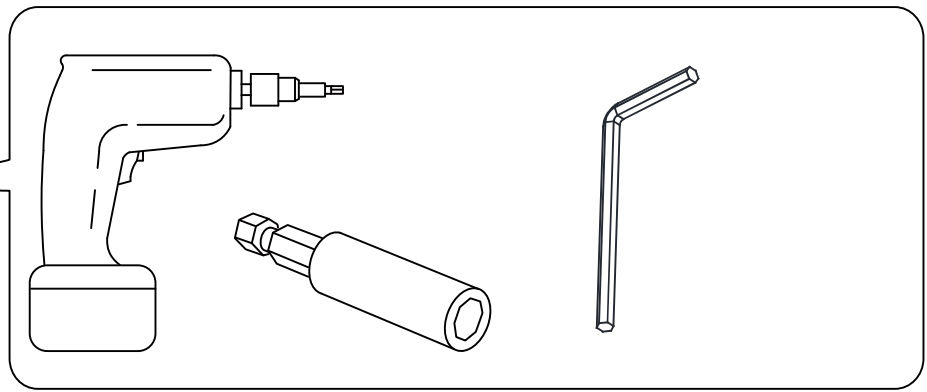

Violent installation is prohibited

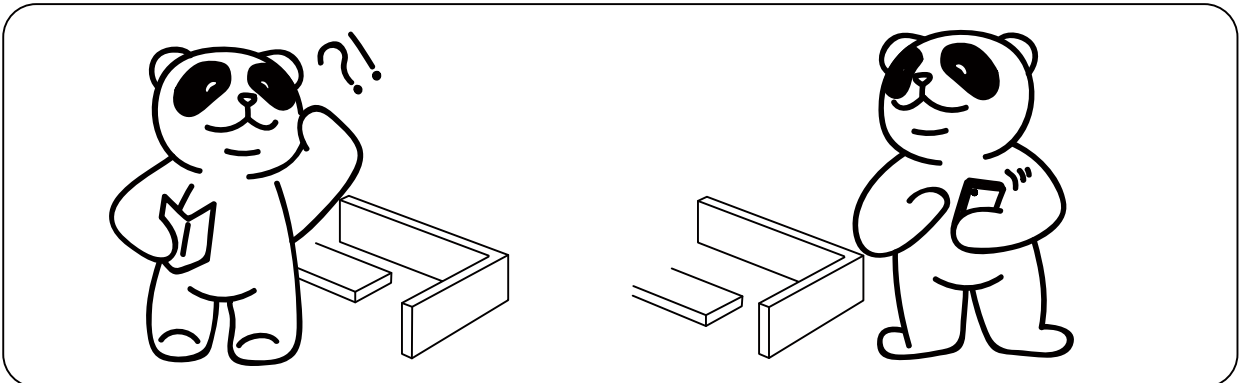

Please call if you need help

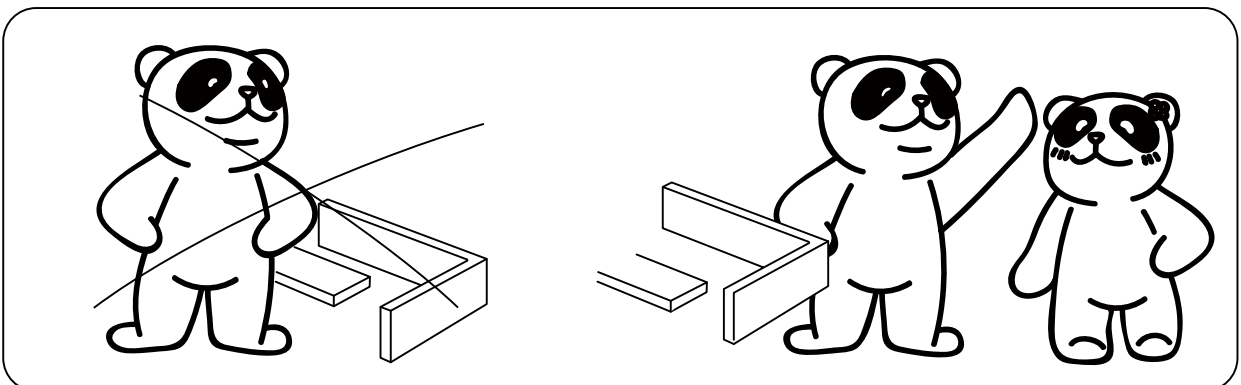

Multi-person cooperation is recommended

Install parts

PARTS LIST

BOX : A

PACKING DETALS:TOTAL 2 BOXES



1
x1




2
x1




3
x1




4
x1




5
x1



6
x1



7
x1



8
x1



9
x1



11
x2



12
x2



13
x1



14
x1



15
x9




16
x3



17
x1



18
x1



19
x1




20
x1

Install parts

PARTS LIST

BOX : A

PACKING DETALS:TOTAL 2 BOXES

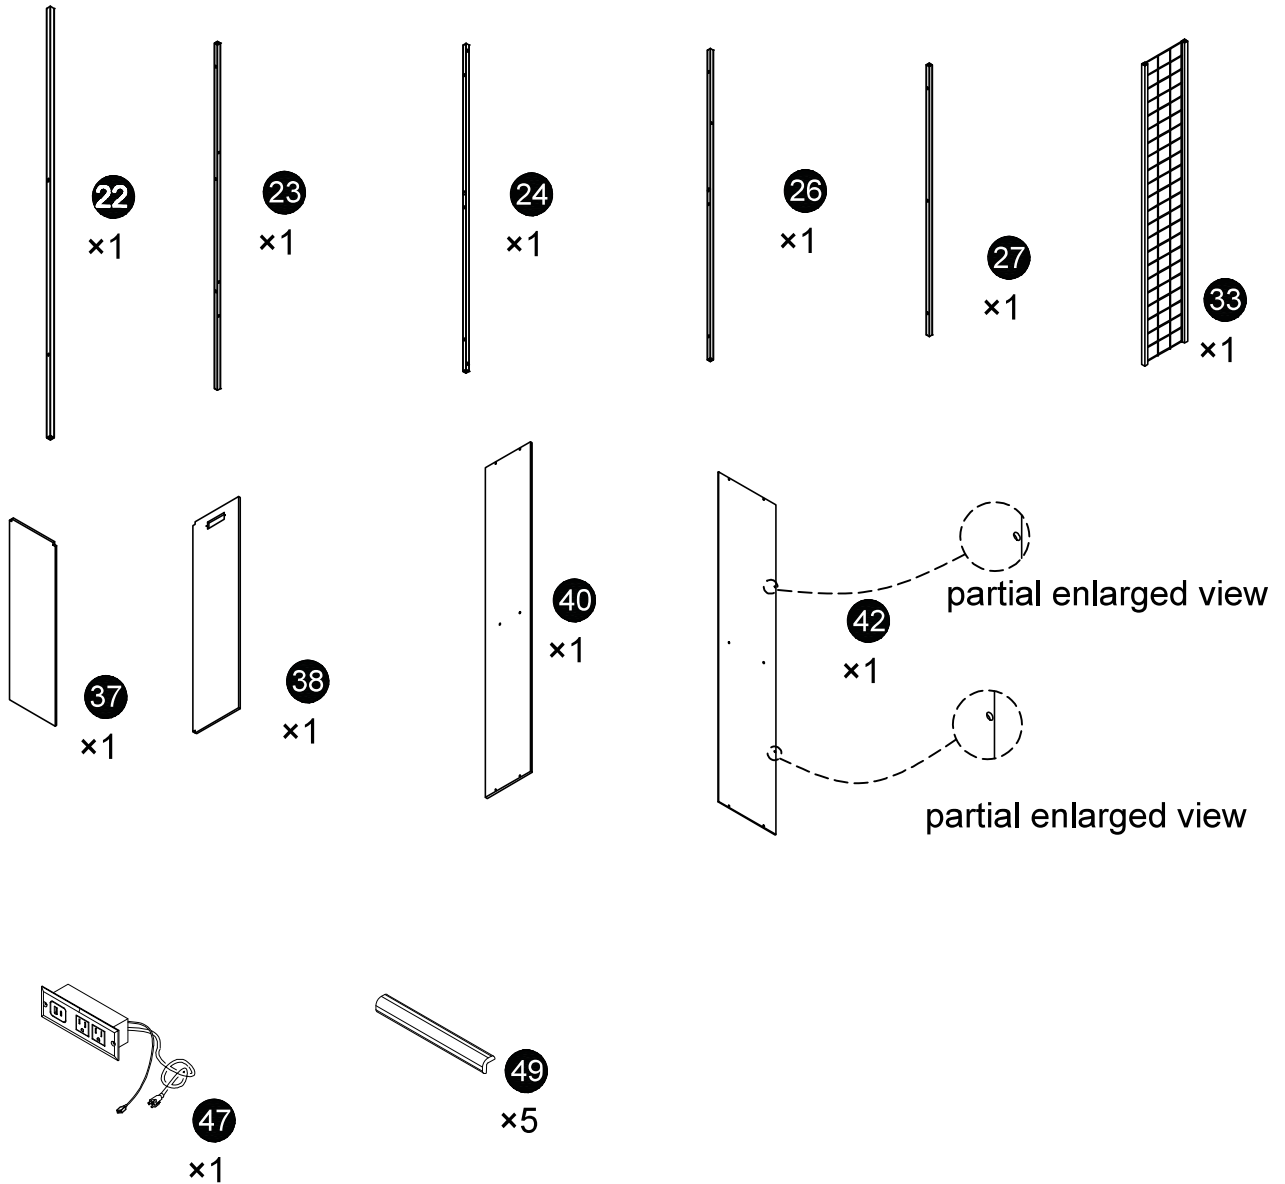


Install parts

PARTS LIST

BOX : B

PACKING DETALS:TOTAL 2 BOXES

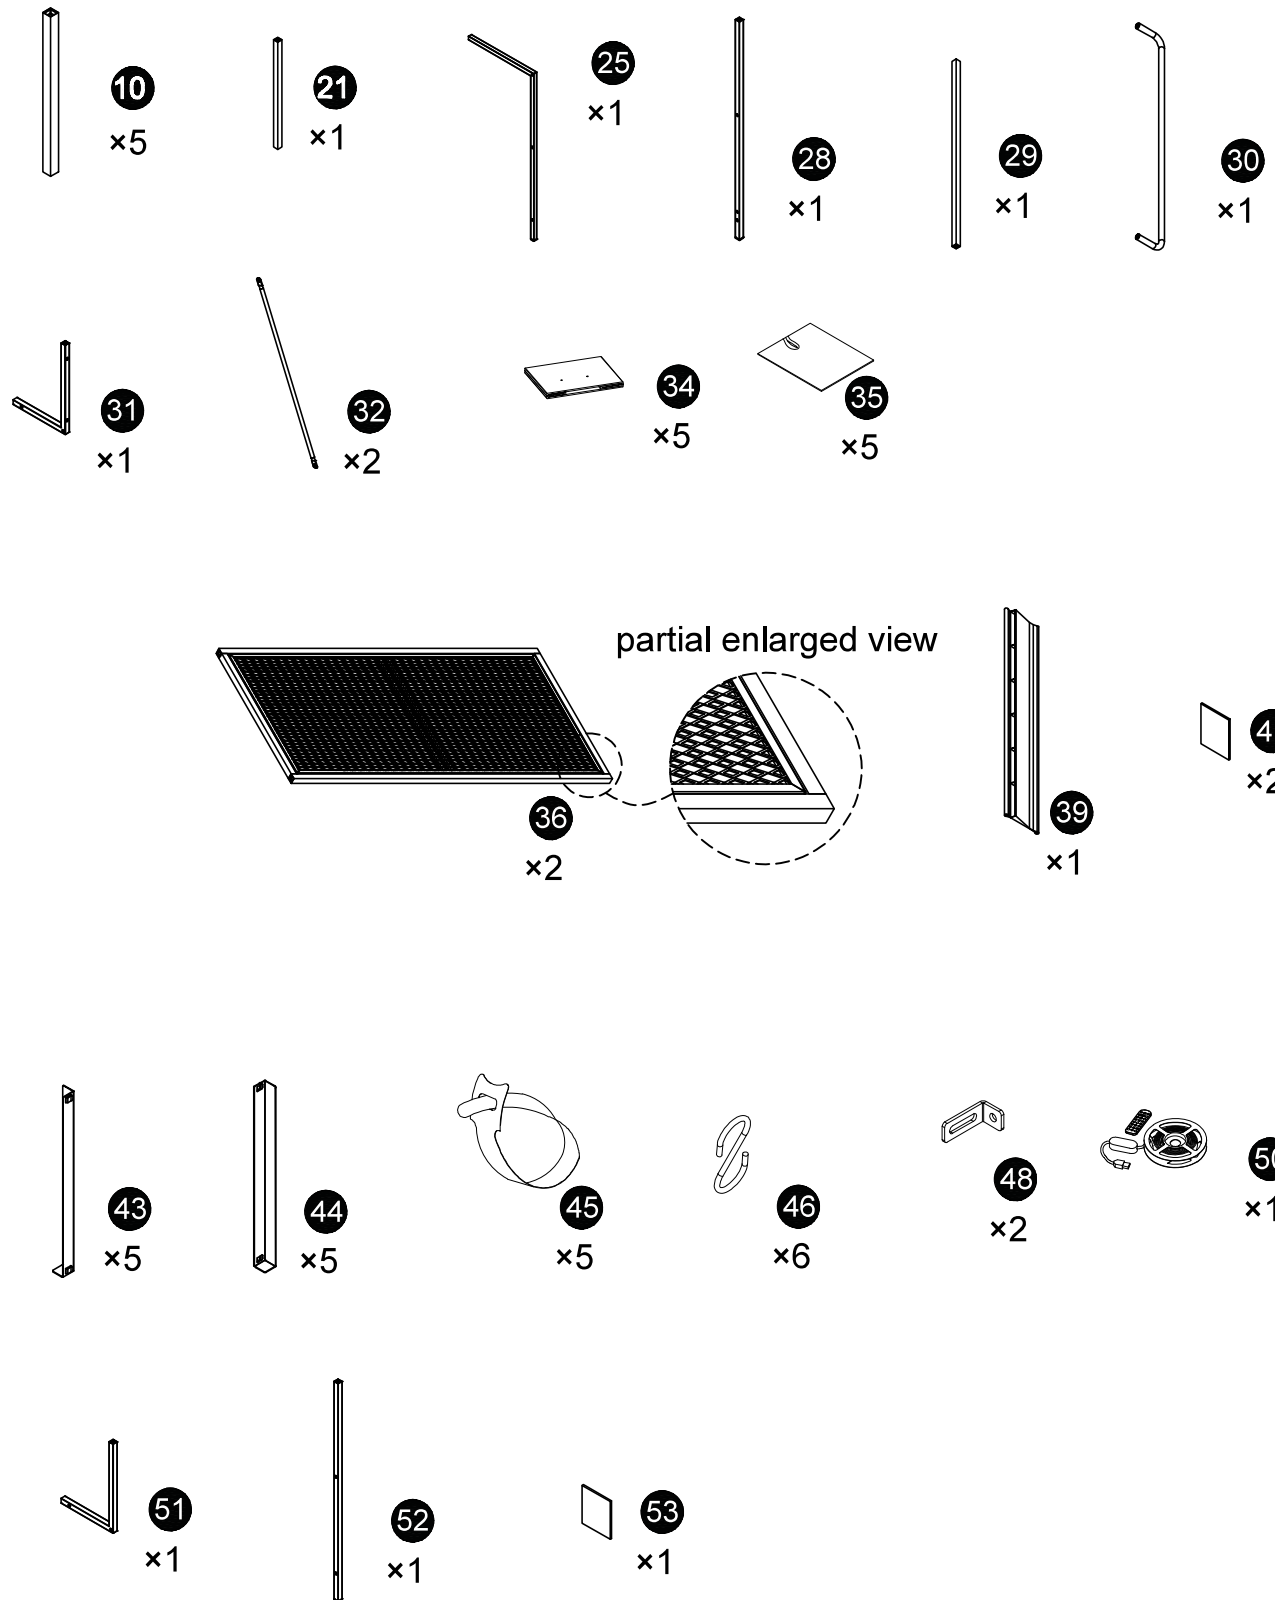

HARDWARE LIST

BOX : B

PACKING DETALS:TOTAL 2 BOXES



A

M4*12
x2+1



B

M5*35
x6+1



C

M5*25
x8+1



D

M6*20
x11+1



E

M6*24
x12+1




F

M6*35
x42+4



G

M6*40
x17+1



H

M6*60
x34+3



I

M6
x25+2



J

M6
x2




K

4#
x1



L

4#
x1



M

x1



N

Ø14
x1



O

M4*12
x10+1



P

x5



Q

3#
x1



R

M6*22
x6+1




S

M6*15
x3+1

Note:

1, Should be assembled on flat ground to keep balance.

2. Before completing the installation, do not tighten the screws.

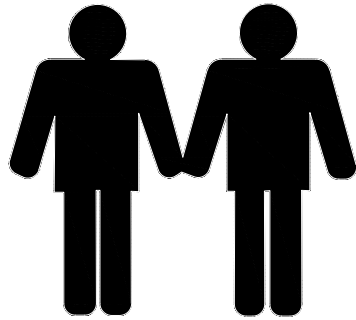

It needs at least two people to install




Before starting the assembly, you must read the whole manual and follow the instructions.


This set comes in 2 boxes. If you do not receive a full set of 2 boxes, please contact our customer service.

box A : 1-9, 11-20, 22-24, 26, 27, 33, 37, 38, 40, 42, 47, 49, instructions;


box B : 10, 21, 25, 28-32, 34, 35, 36, 39, 41, 43-46, 48, 50-53 screw pack, instructions.

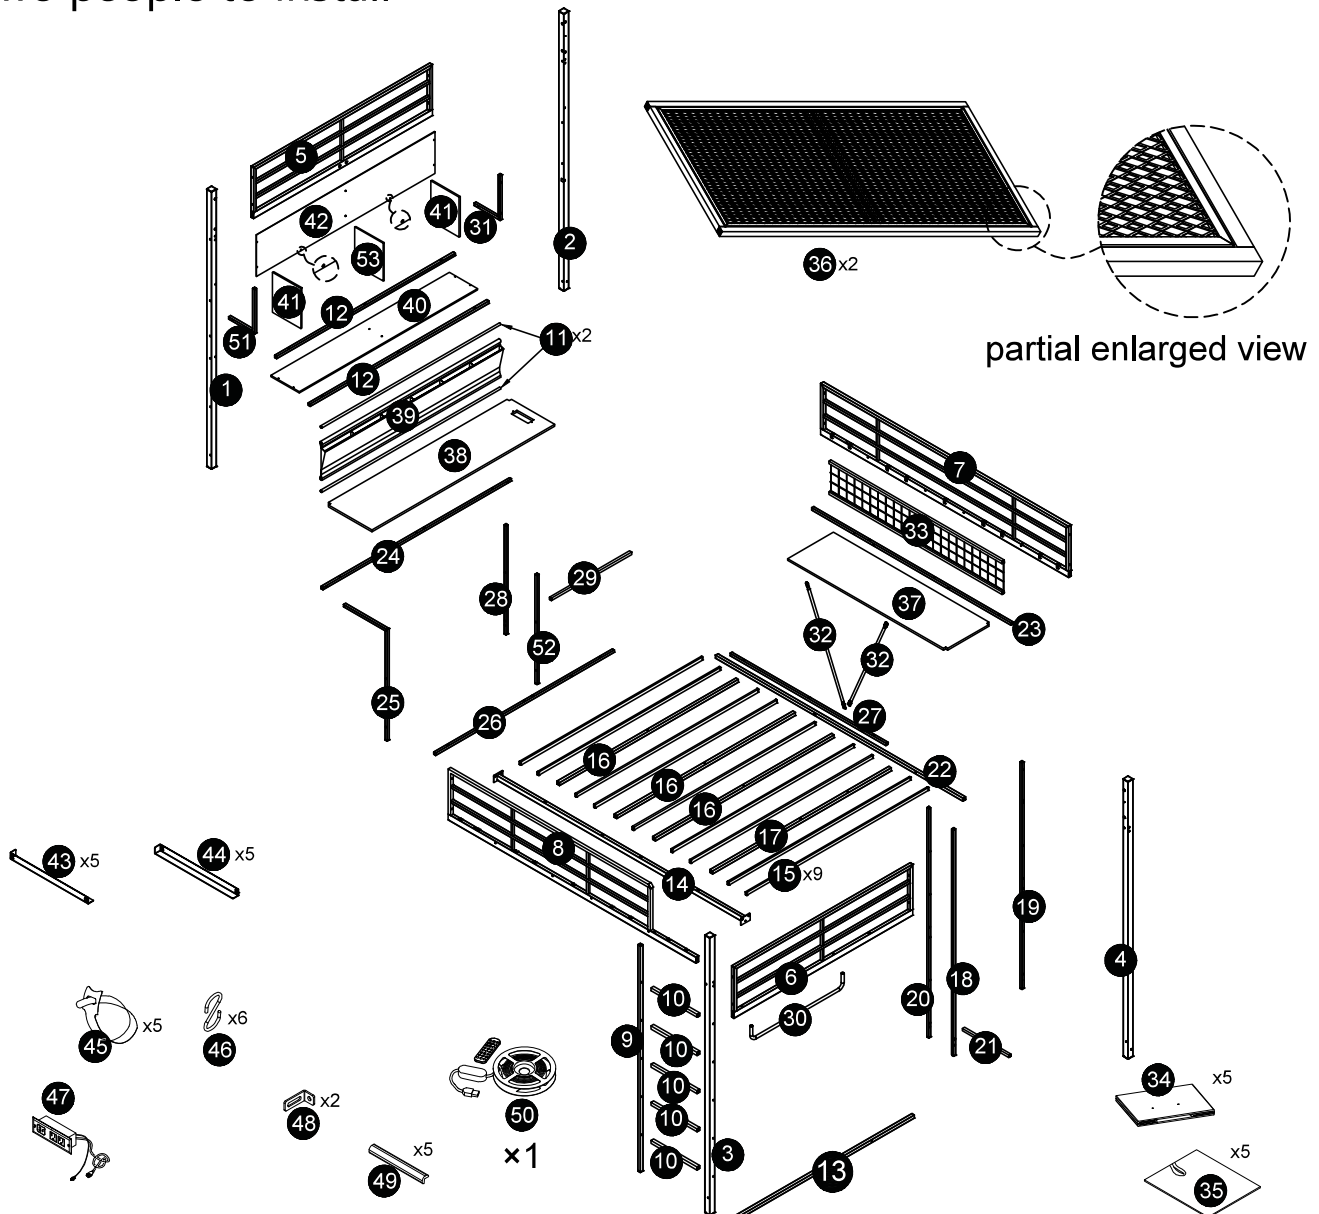


1

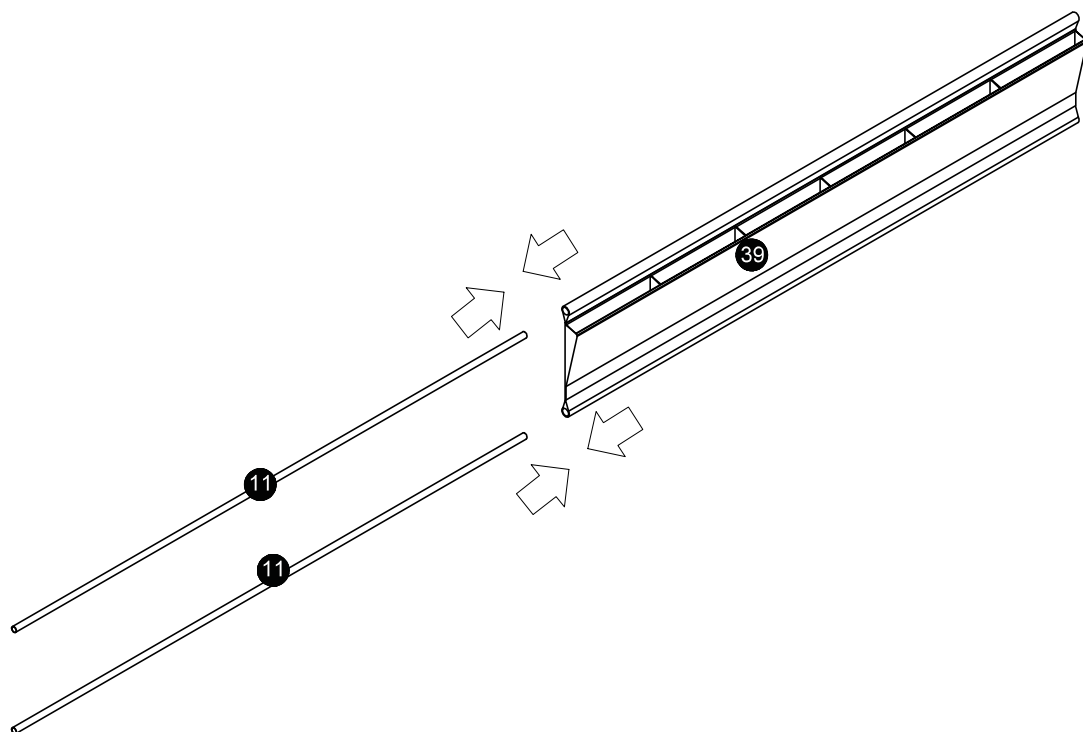

2

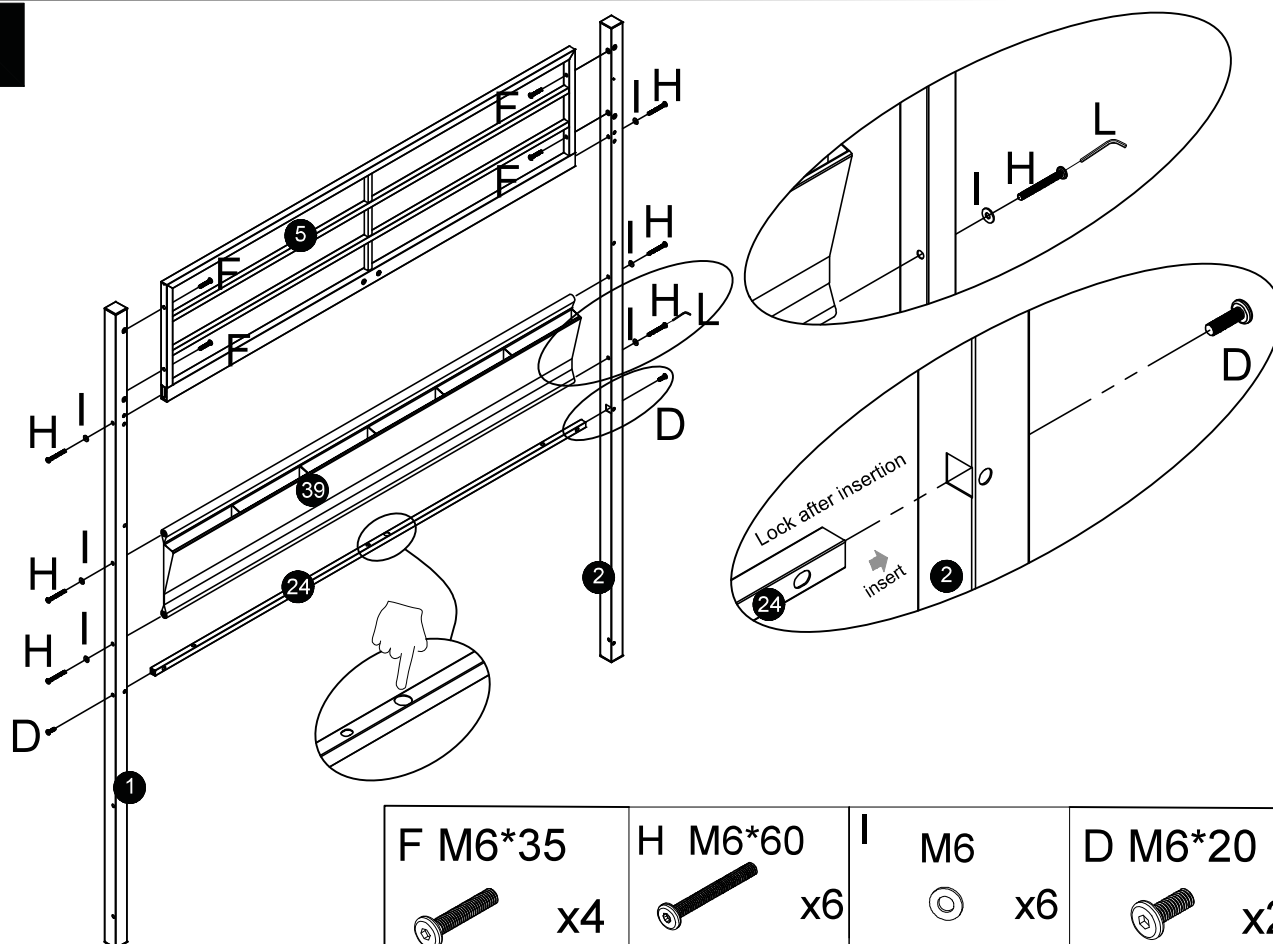


3

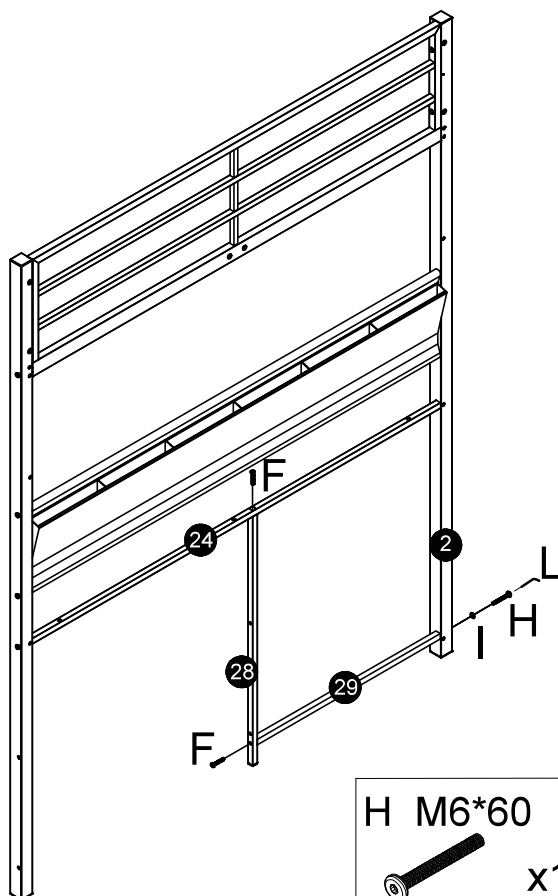


H M6*60  x1	I M6  x1	F M6*35  x2
--	---	--

4

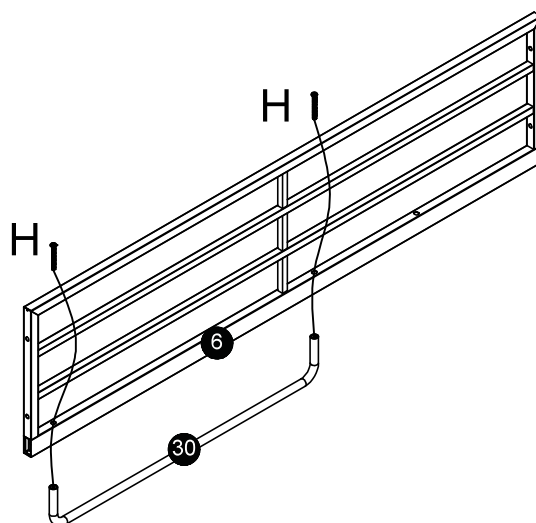



H M6*60  x2

5

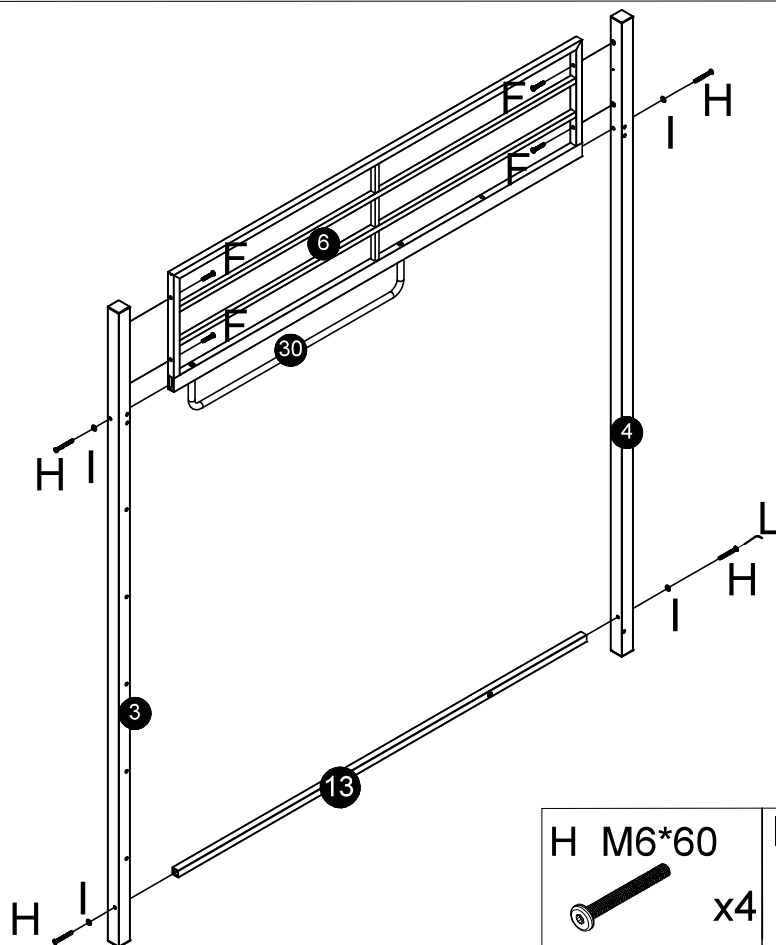


H M6*60  x4	I M6  x4	F M6*35  x4
--	---	--

6

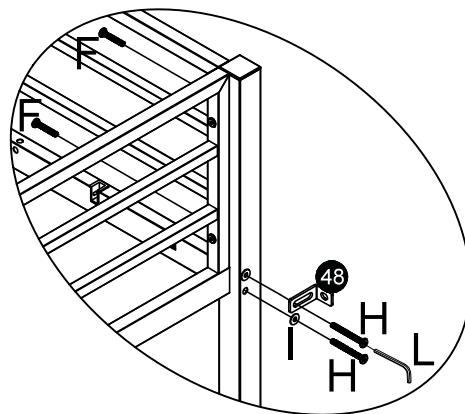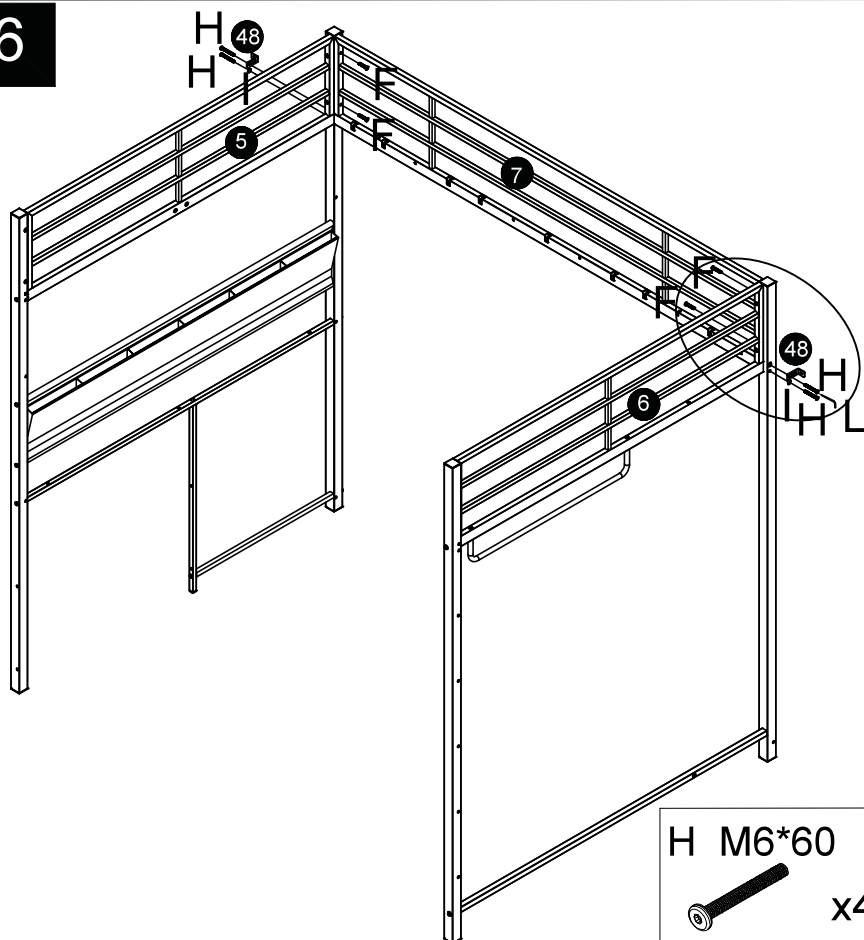

H M6*60  x4	I M6  x2	F M6*35  x4
---	--	---

7

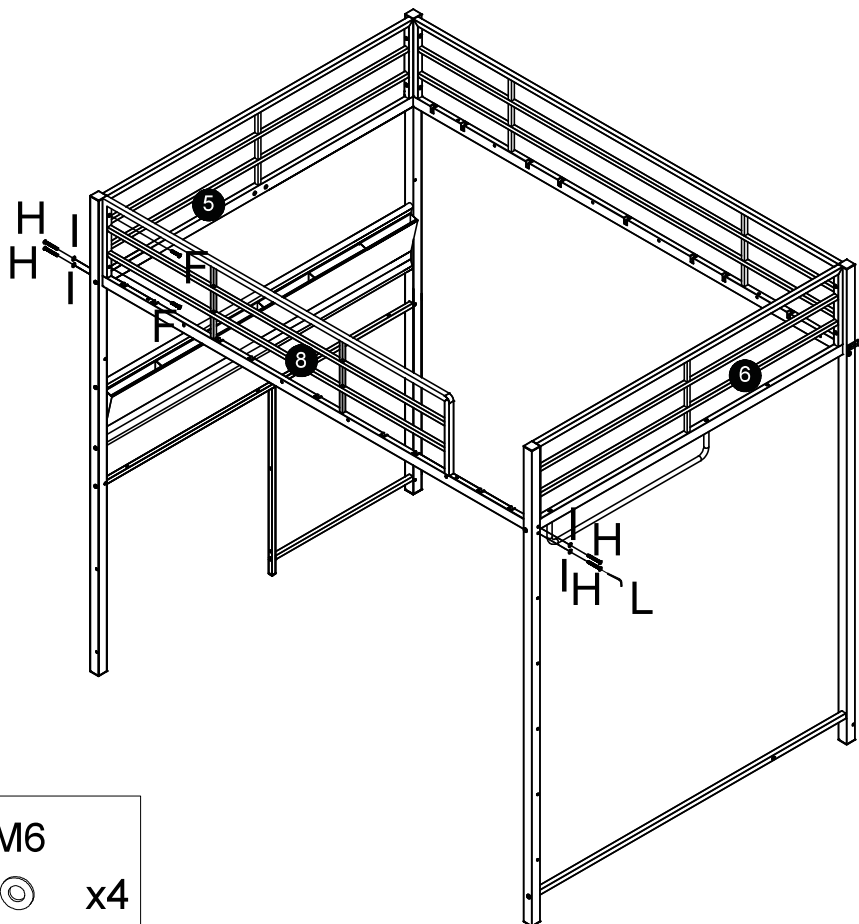

F M6*35



x2

H M6*60



x4


I

M6



x4

8

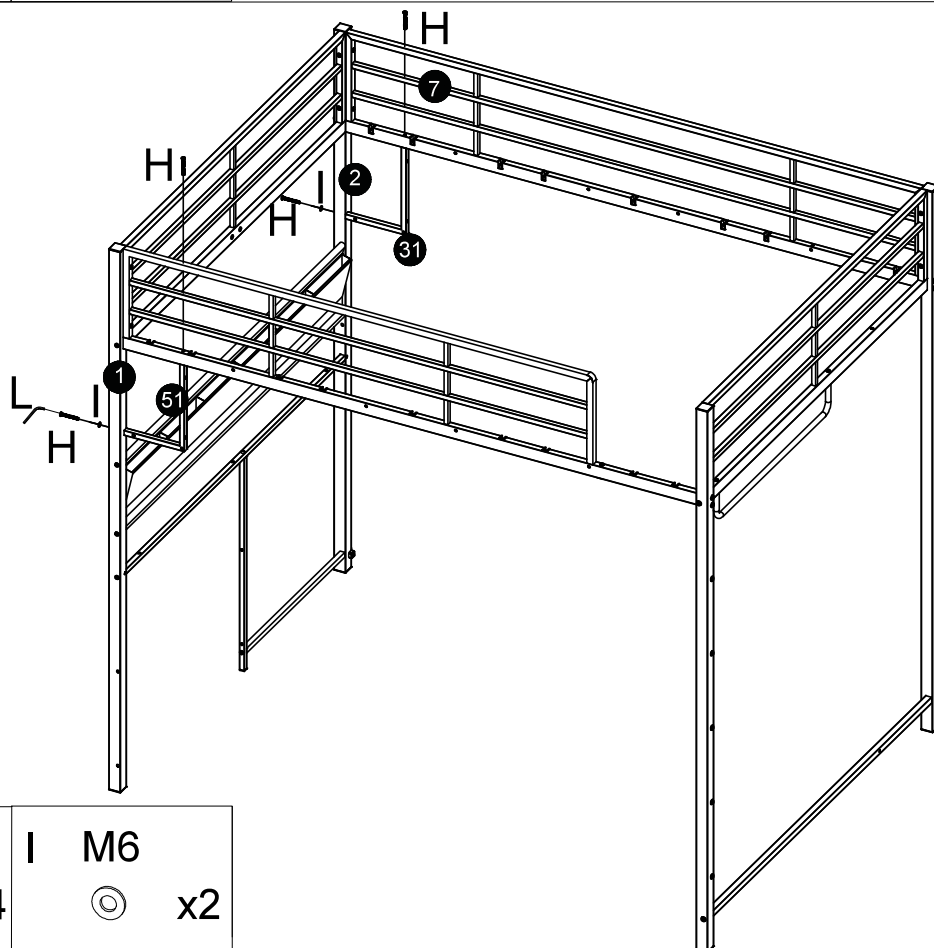

H M6*60



x4


I

M6



x2

9

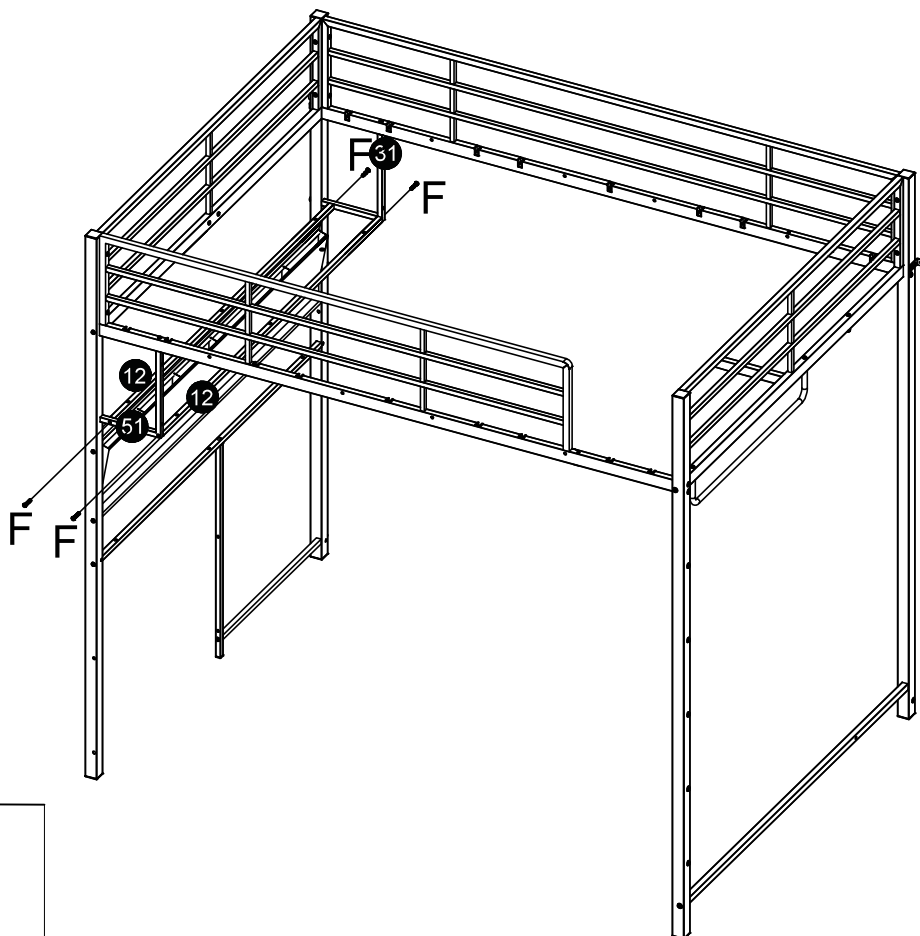


F M6*35



x4

10

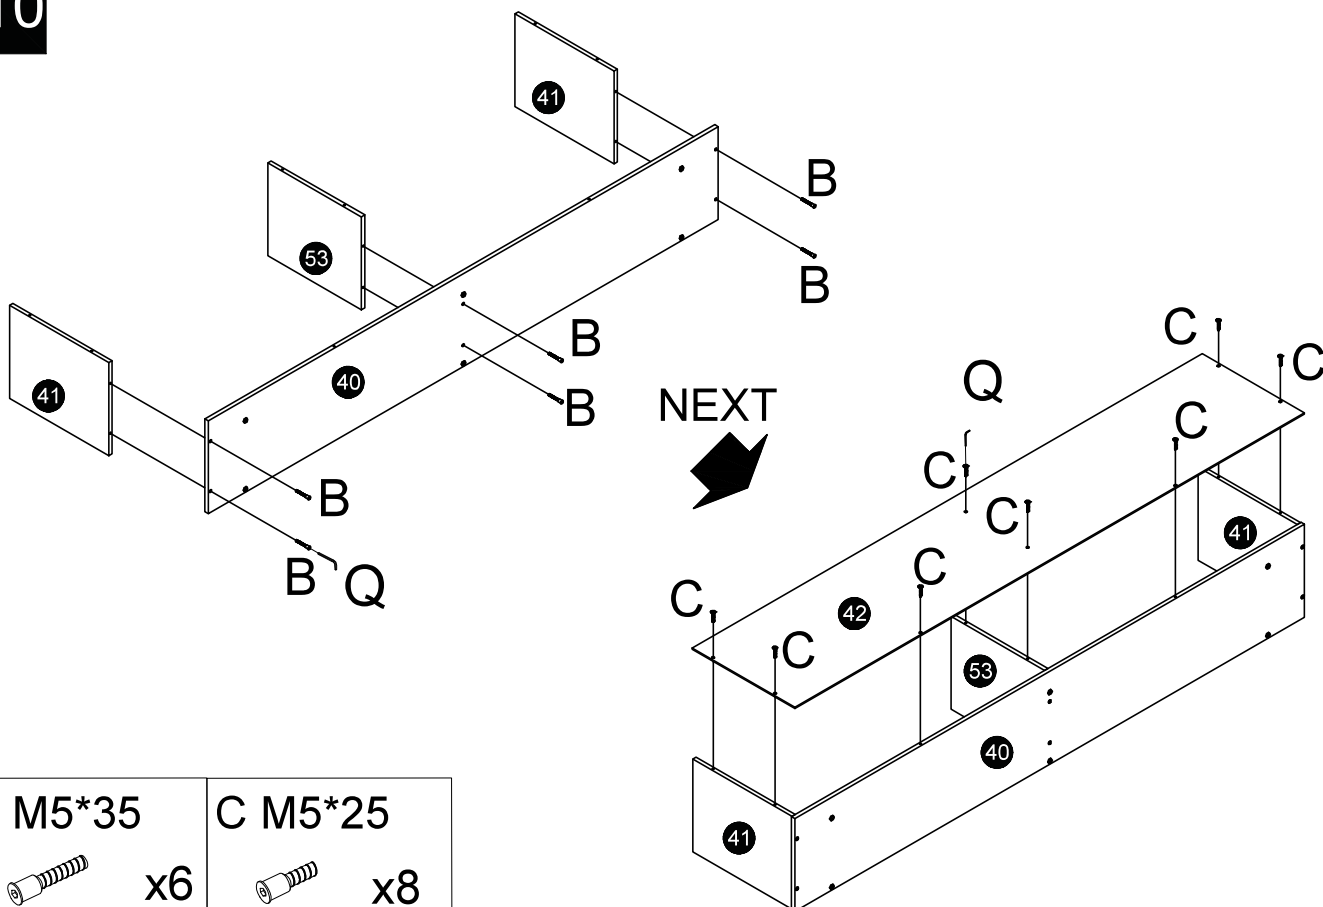

B M5*35




x6

C M5*25




x8

11

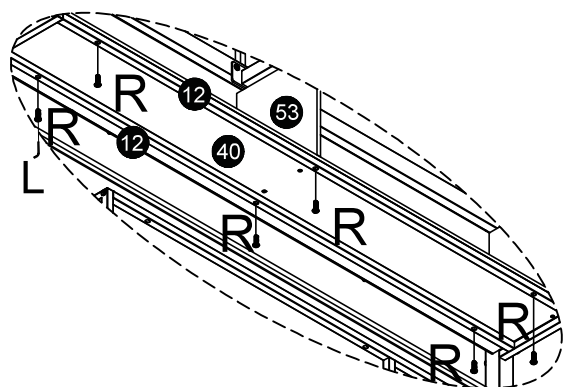

upward view

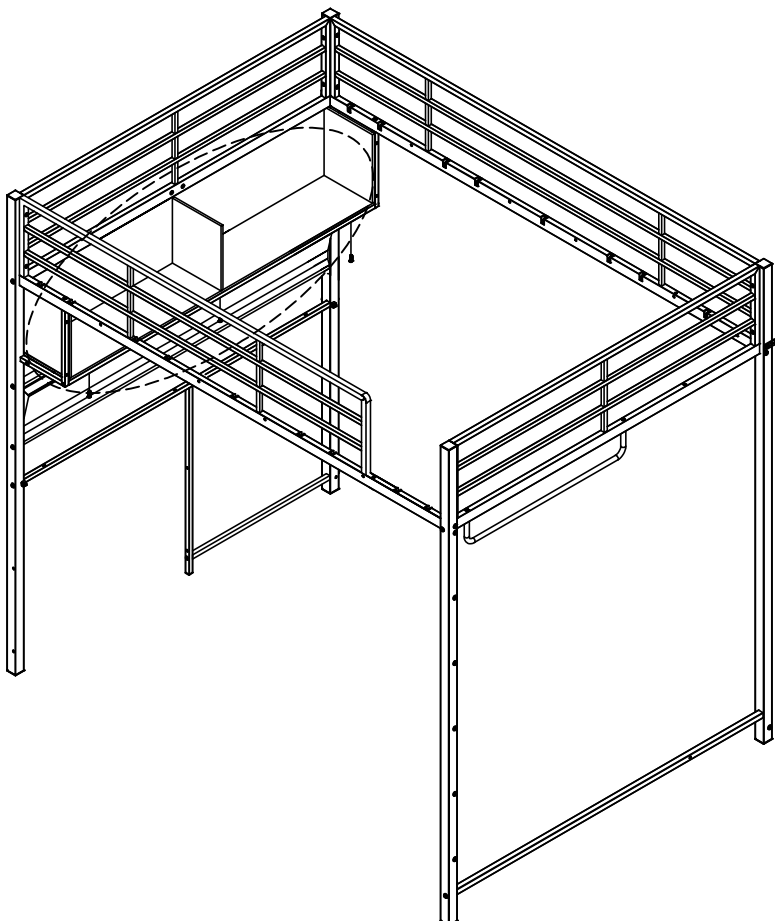


R M6*22



x6

12

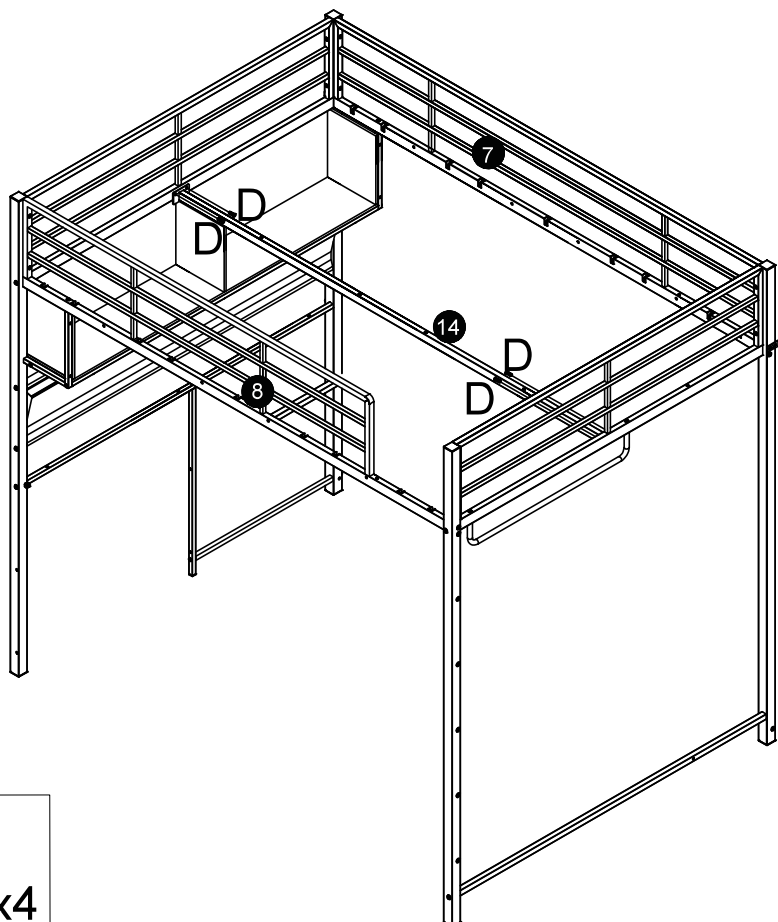


D M6*20




x4


13

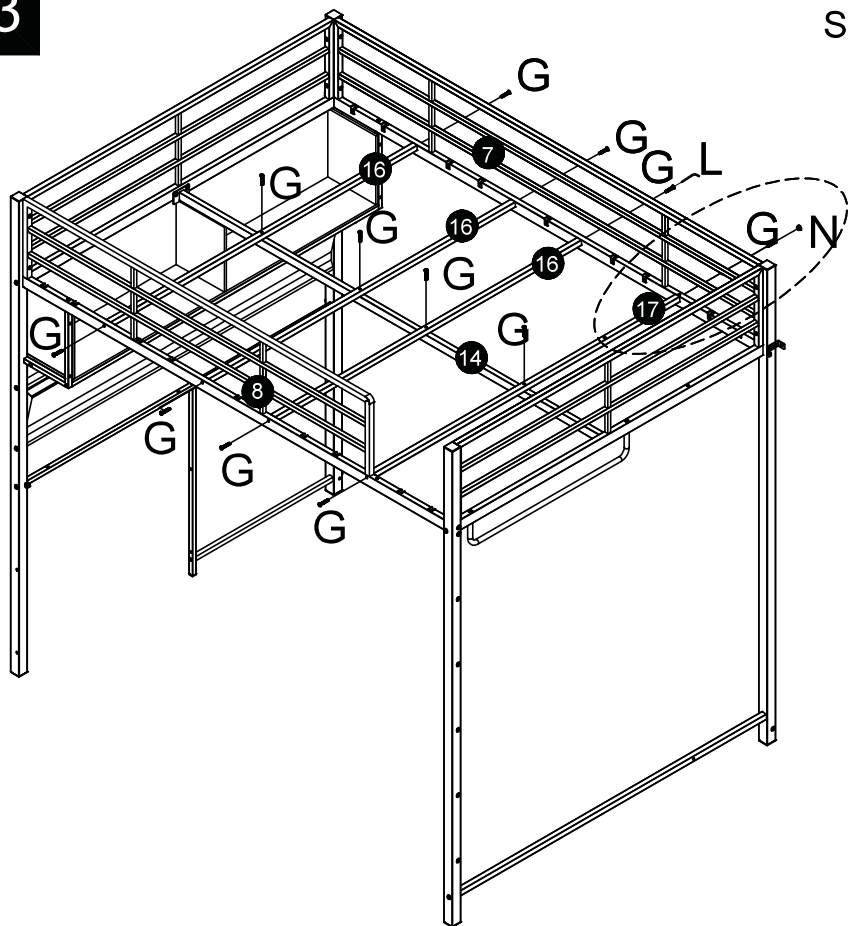

Step:a

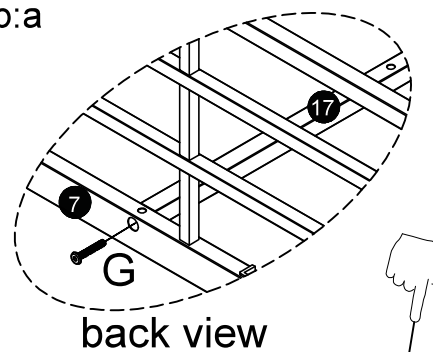

Step:b

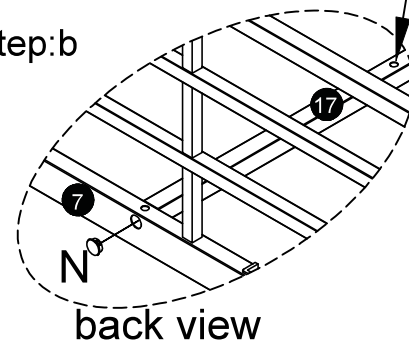

N Ø14




x1

G M6*40



x12

14

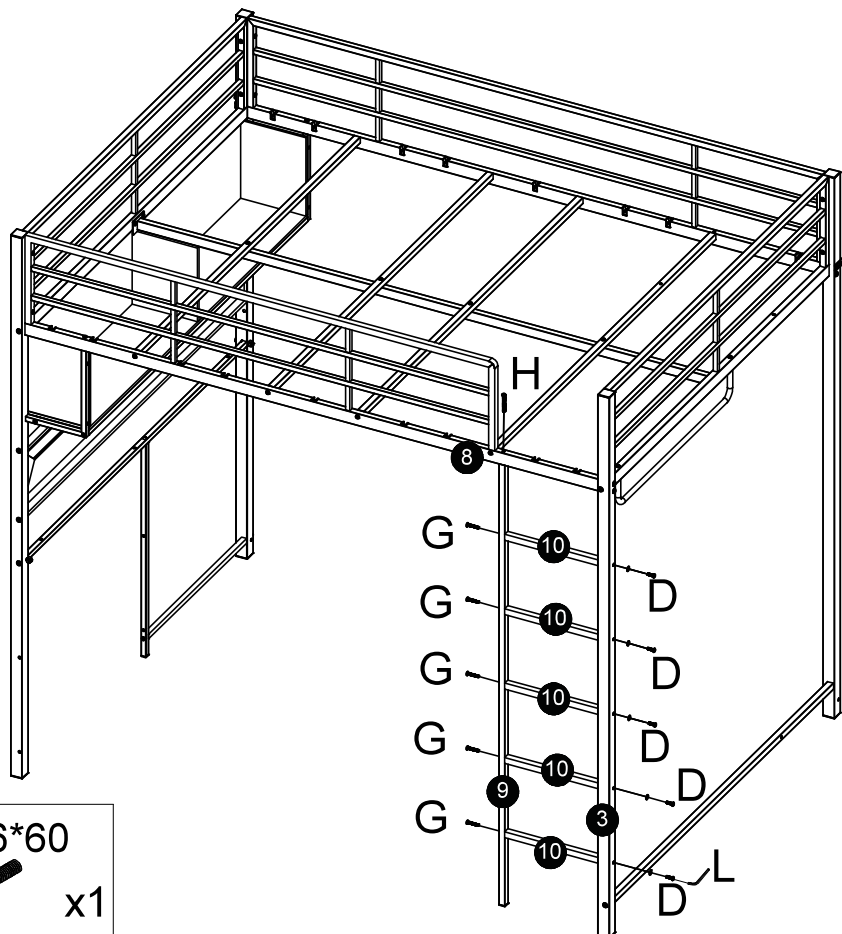

D M6*20



x5

G M6*40




x5

H M6*60



x1

15

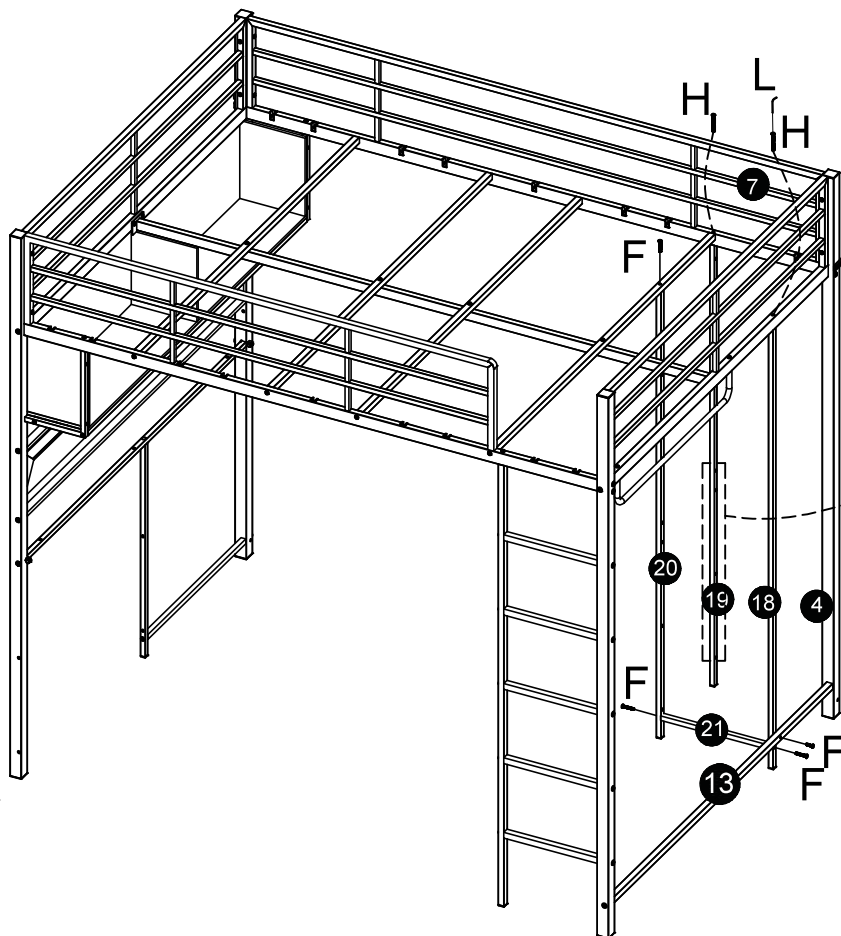

H M6*60



x2


F M6*35



x4

back view

16

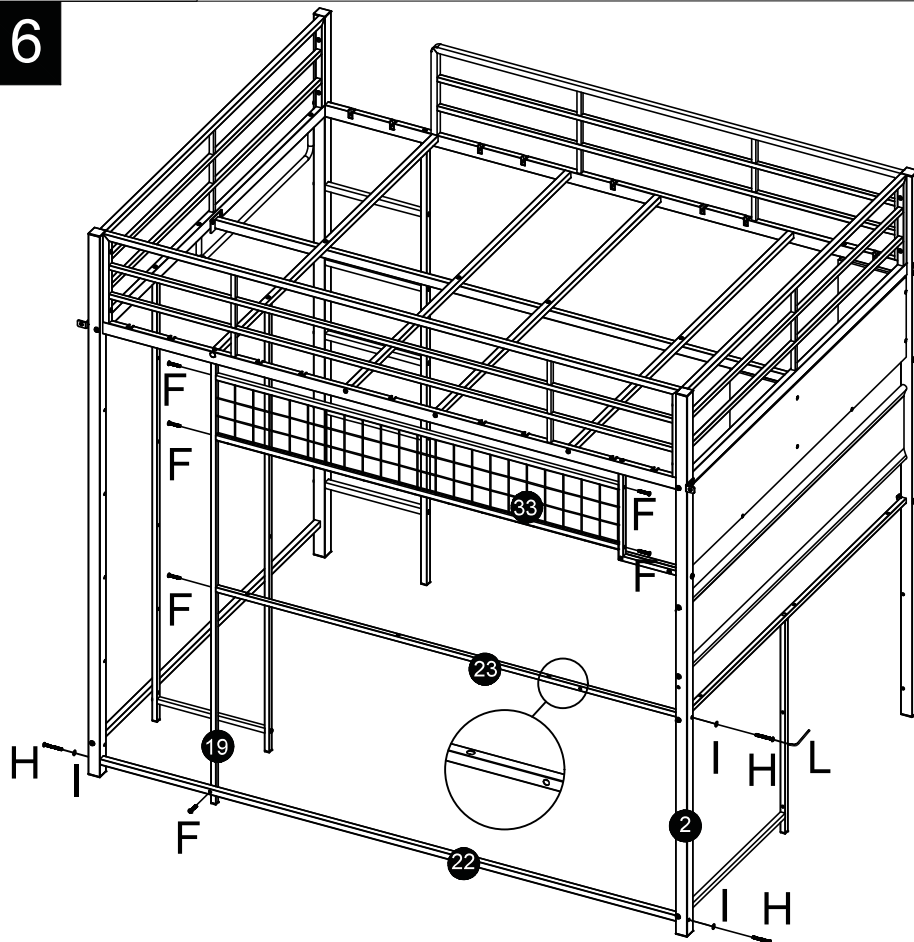

F M6*35



x6

H M6*60



x3

I M6




x3

17


S M6*15




x3

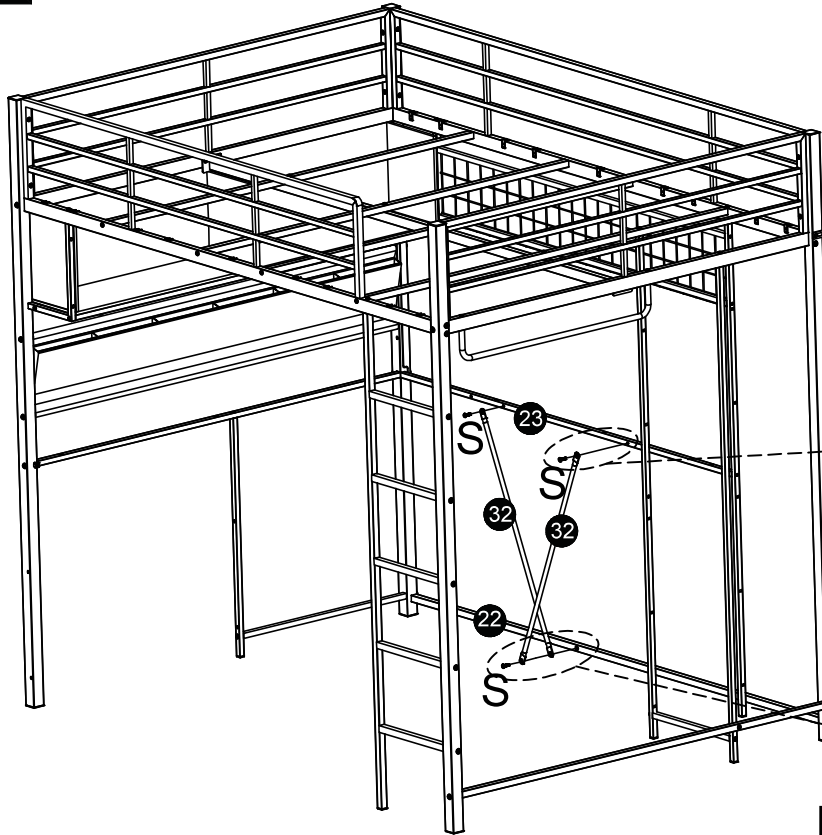

Be careful not to overtighten the screws.

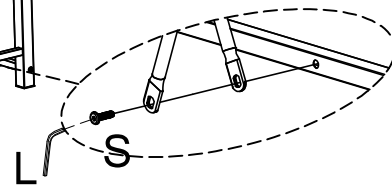

18

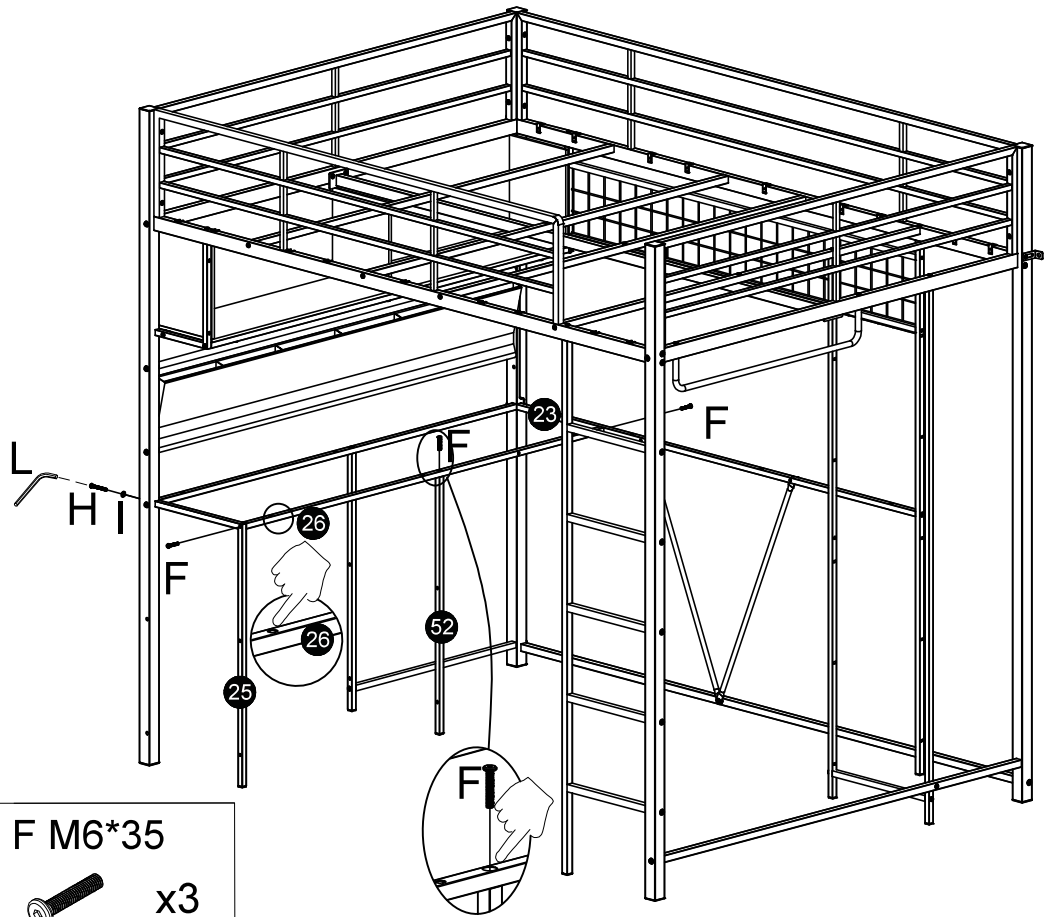

H M6*60



x1

I M6





x1

F M6*35



x3

19

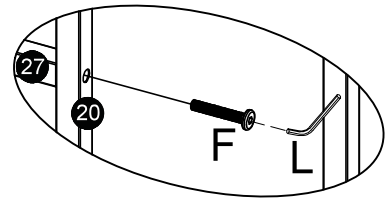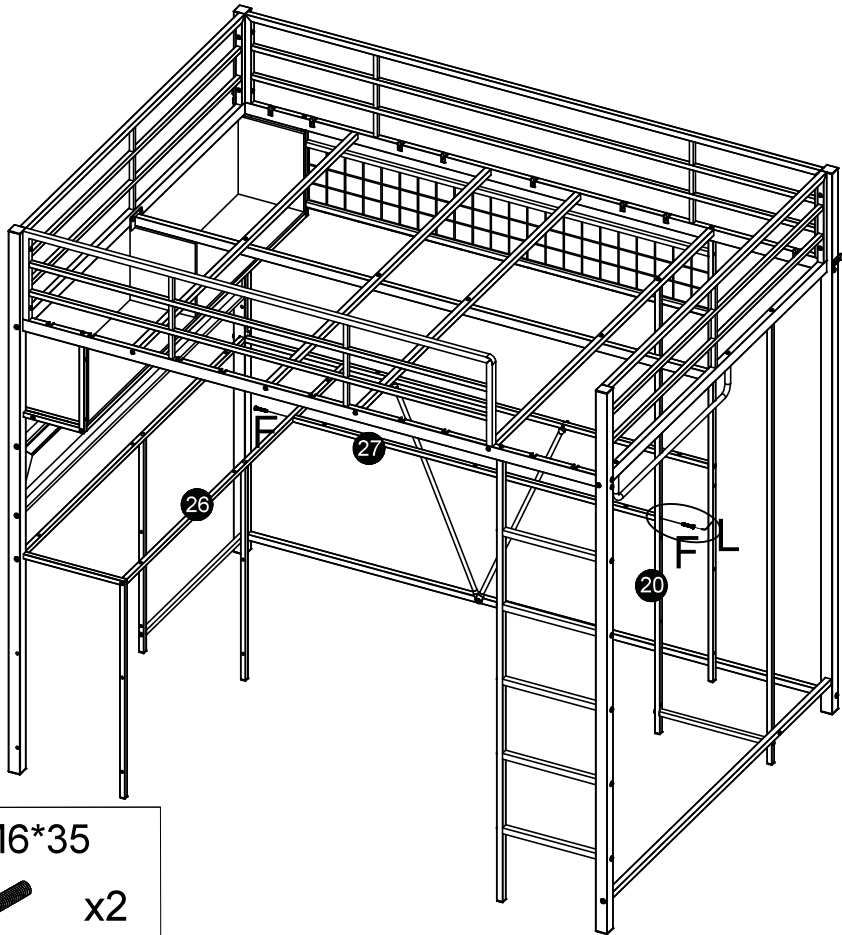


F M6*35




x2

20

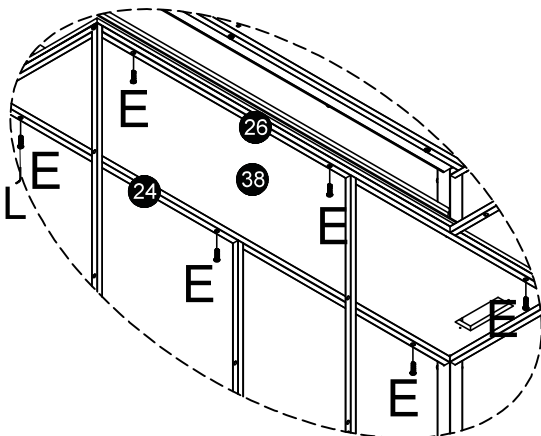

upward view

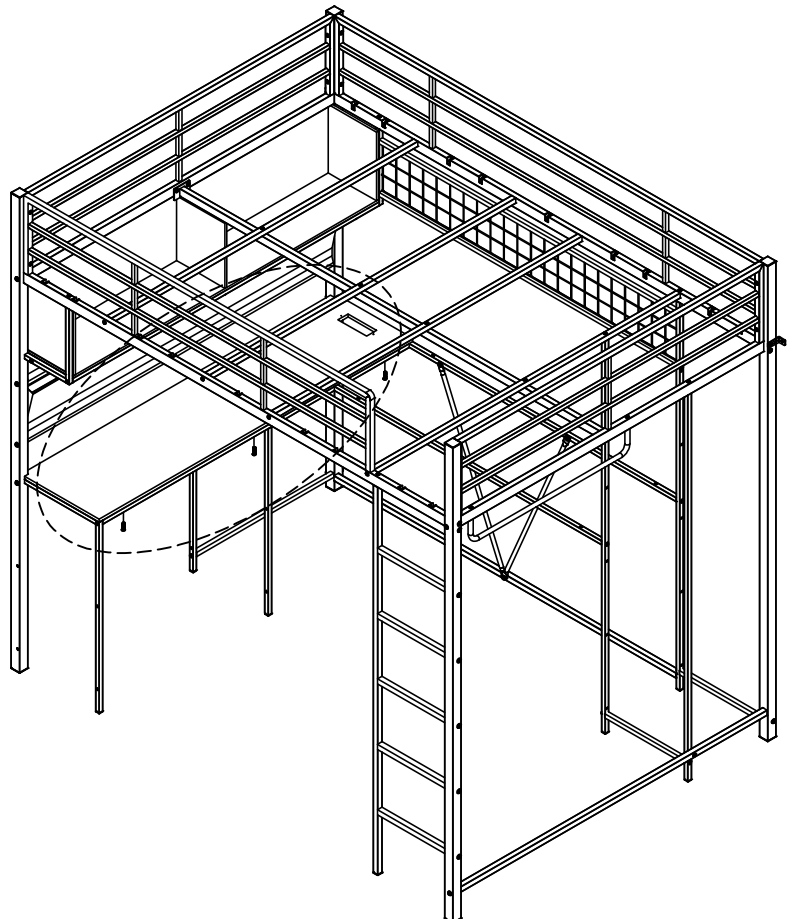


E M6*24




x6

21

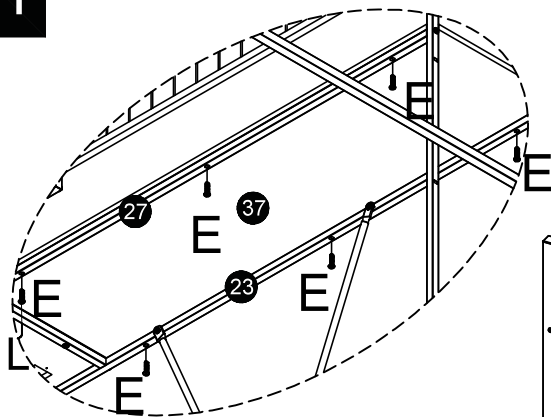

upward view

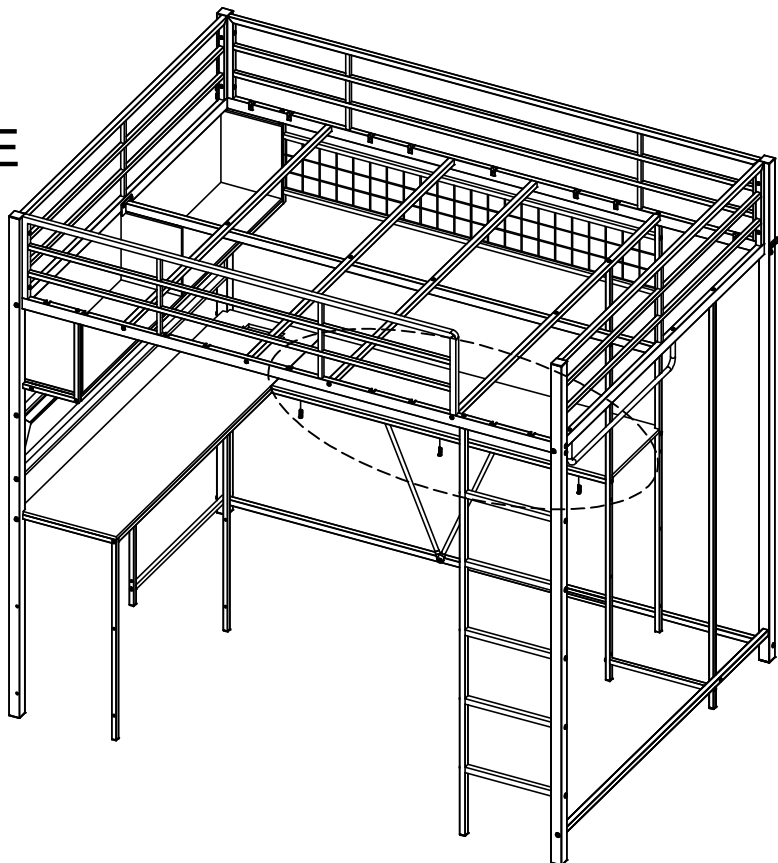


E M6*24



x6

22

Pay attention: the net should be facing upwards.

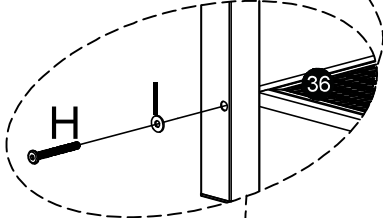

H M6*60



x2

I M6




x2


F M6*35




x6

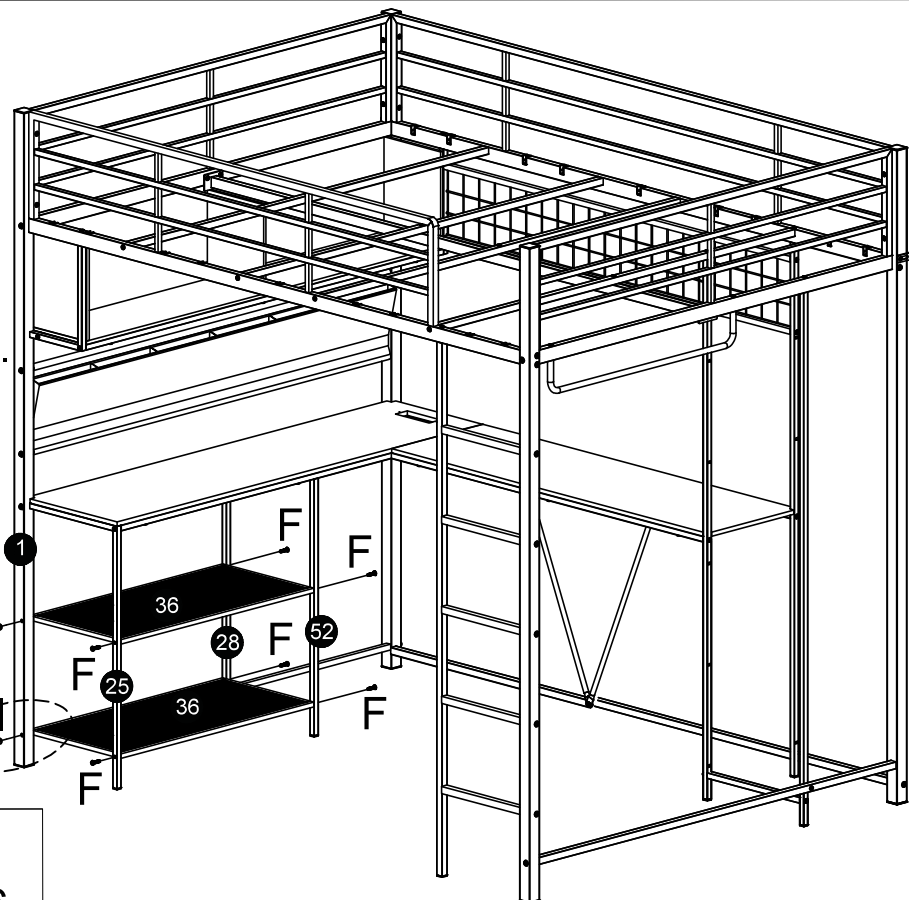

23

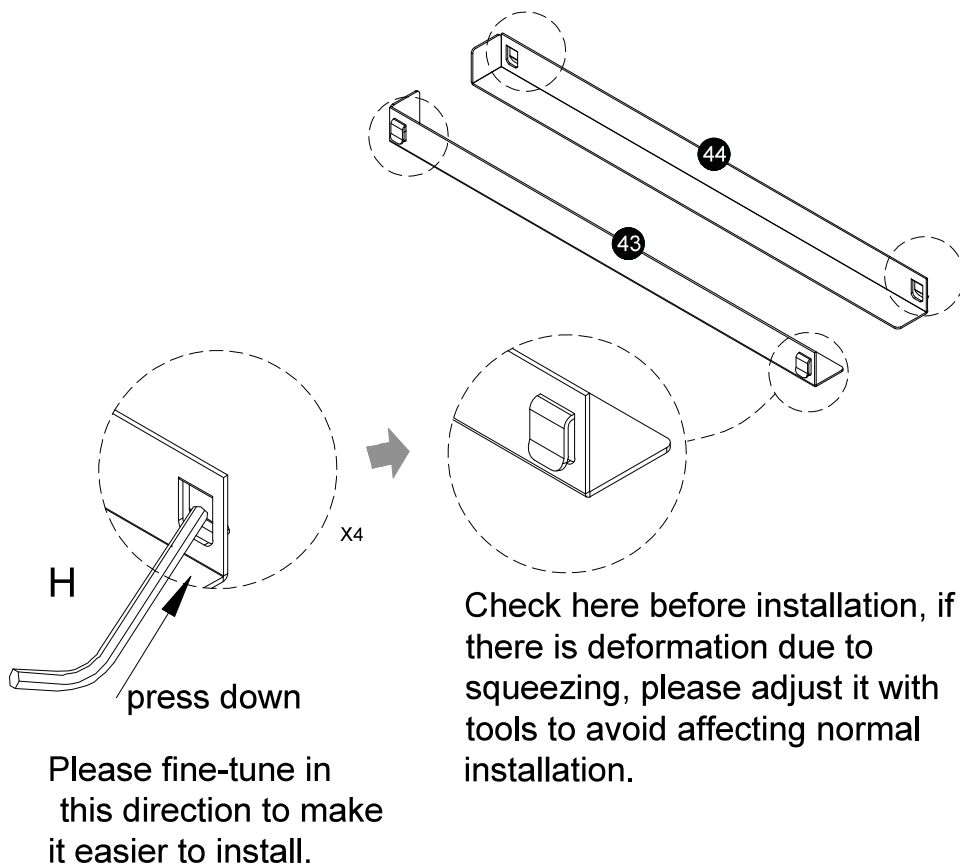


24



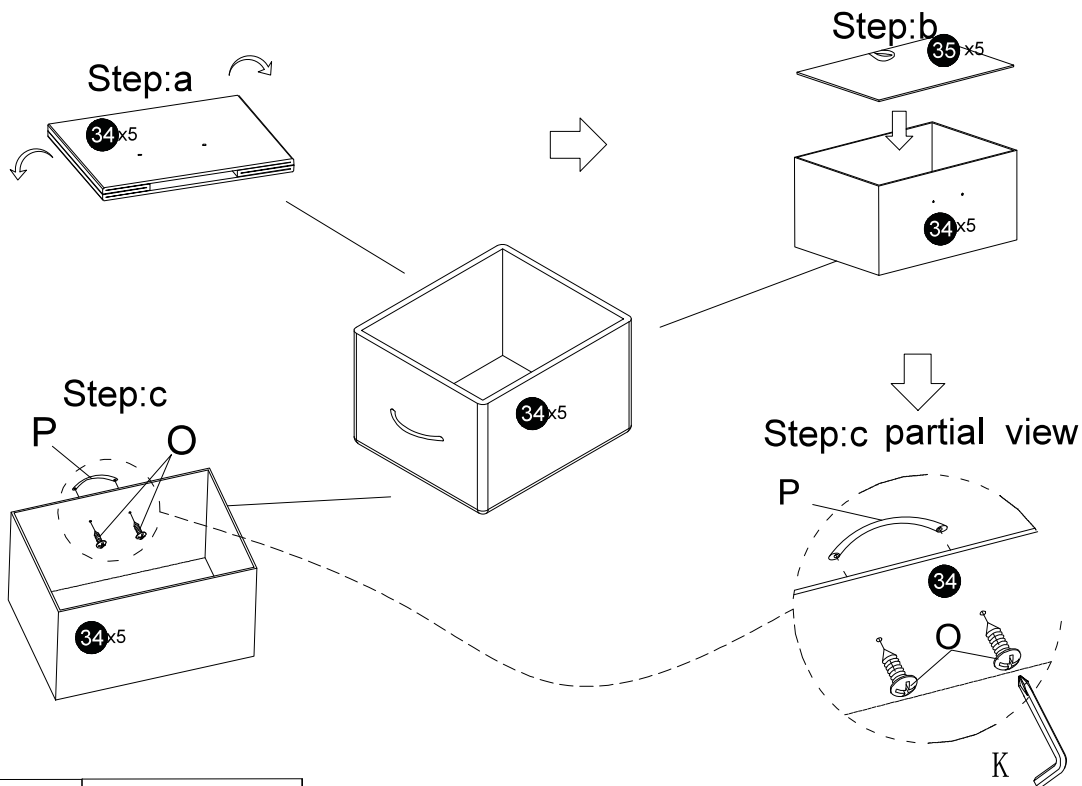


O M4*12
x10


P
x5

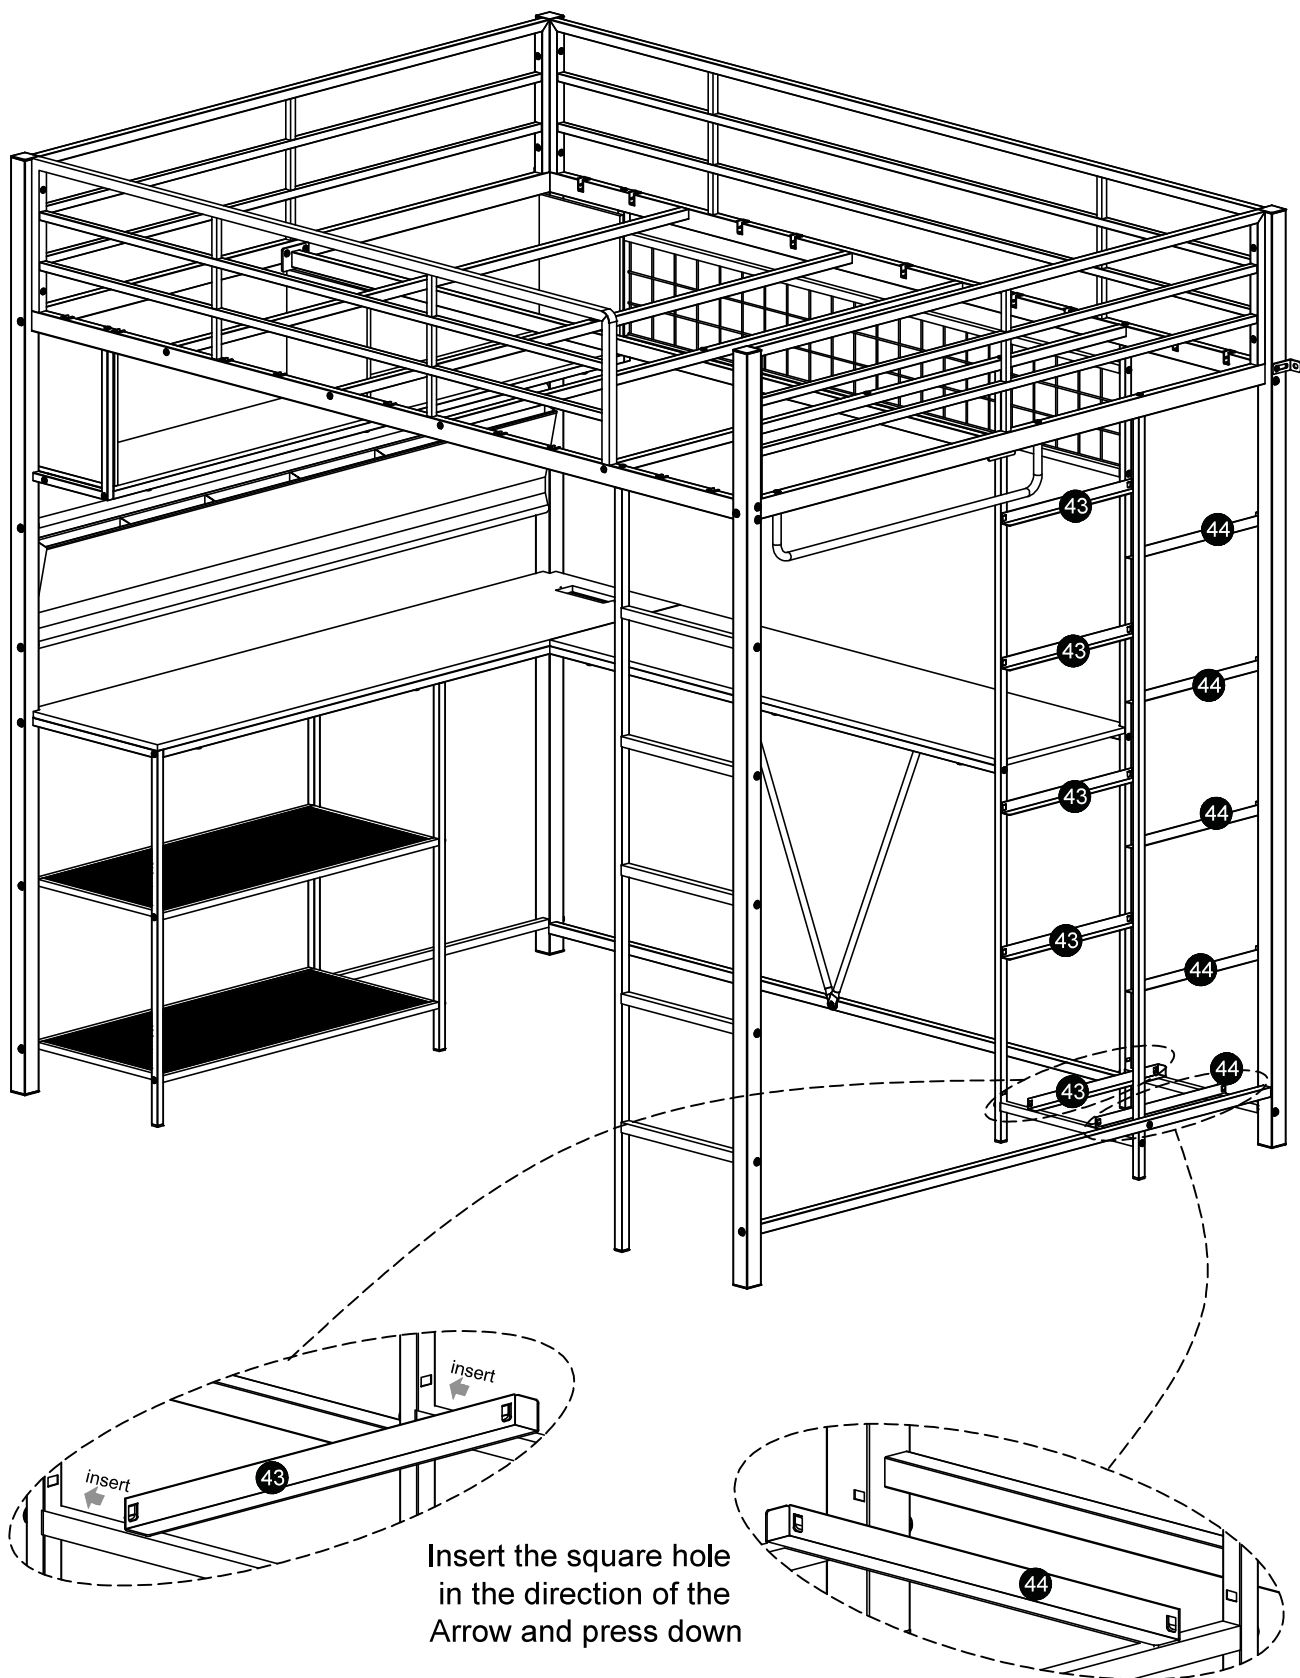



26

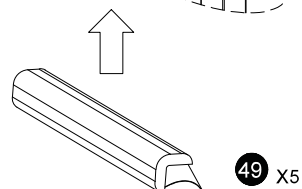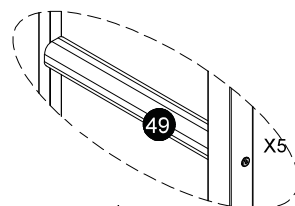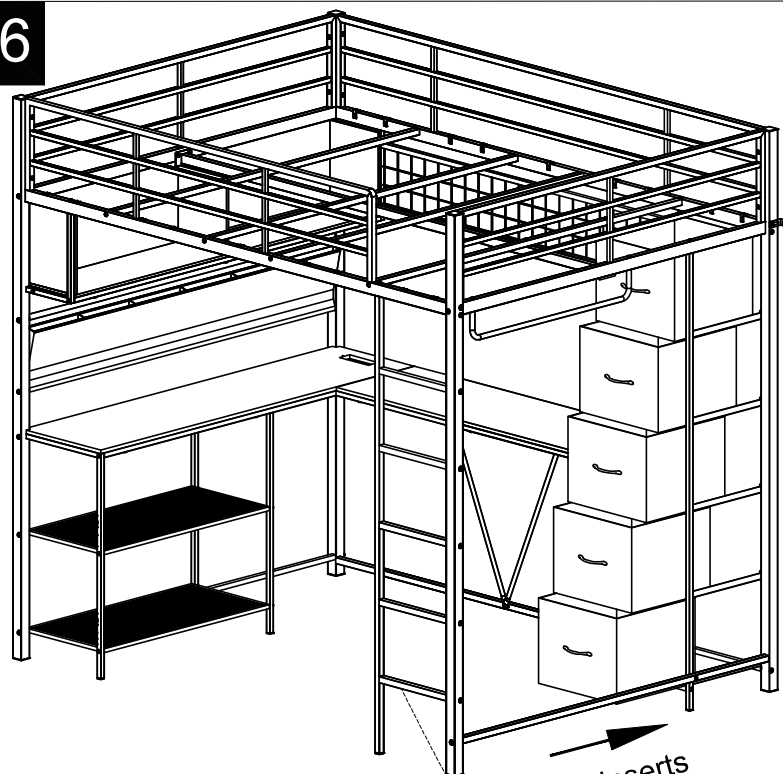


After tearing the tape off the sponge, attach the sponge to the stair tube

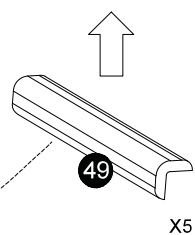

27

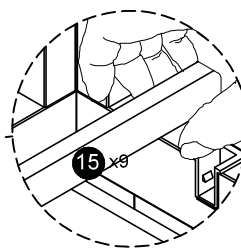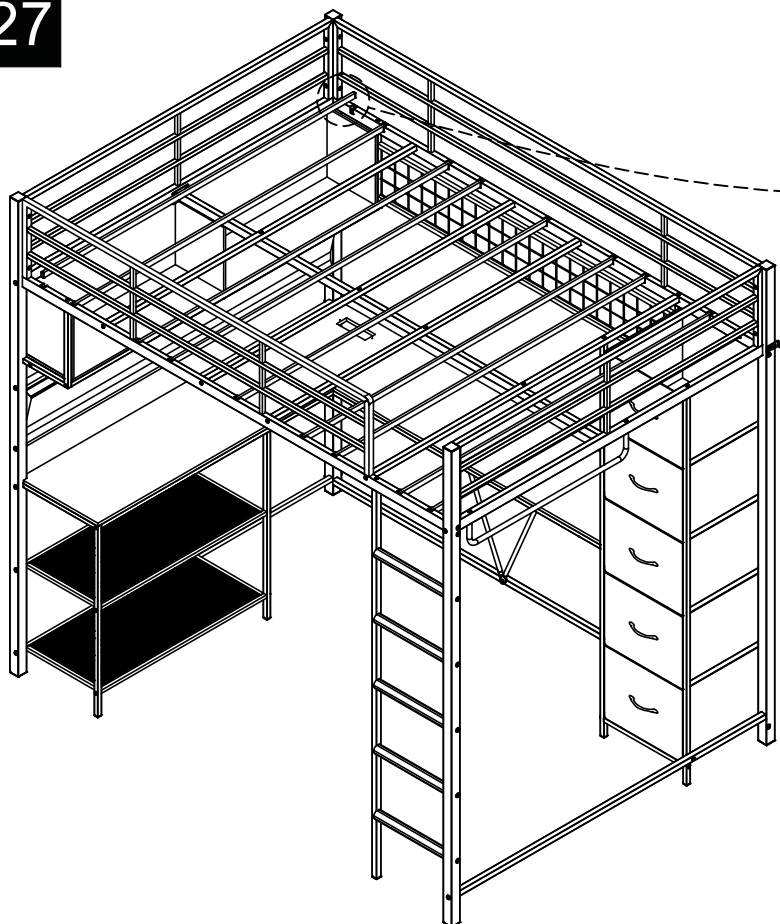

28


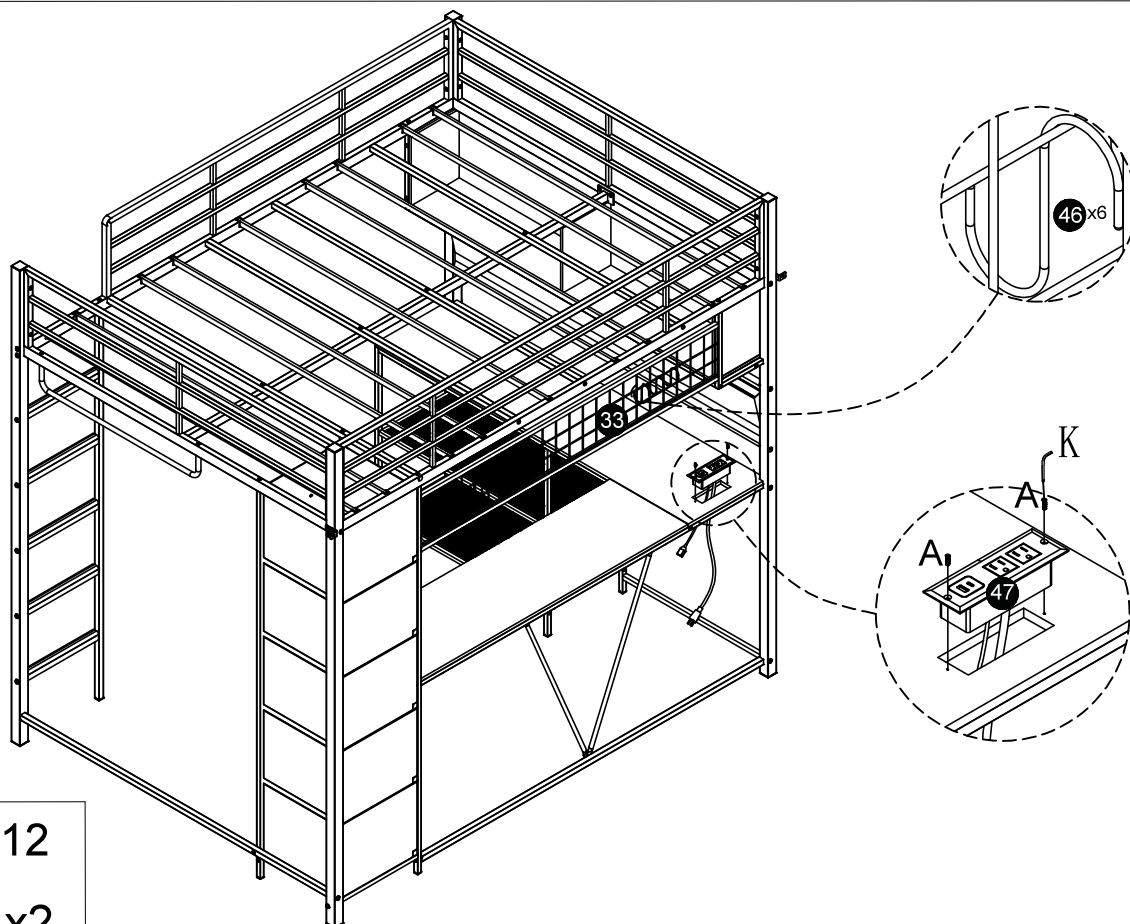


A M4*12




x2


29

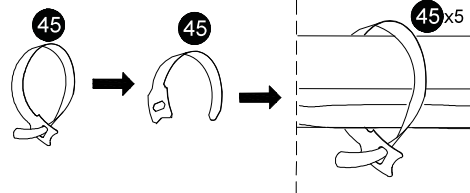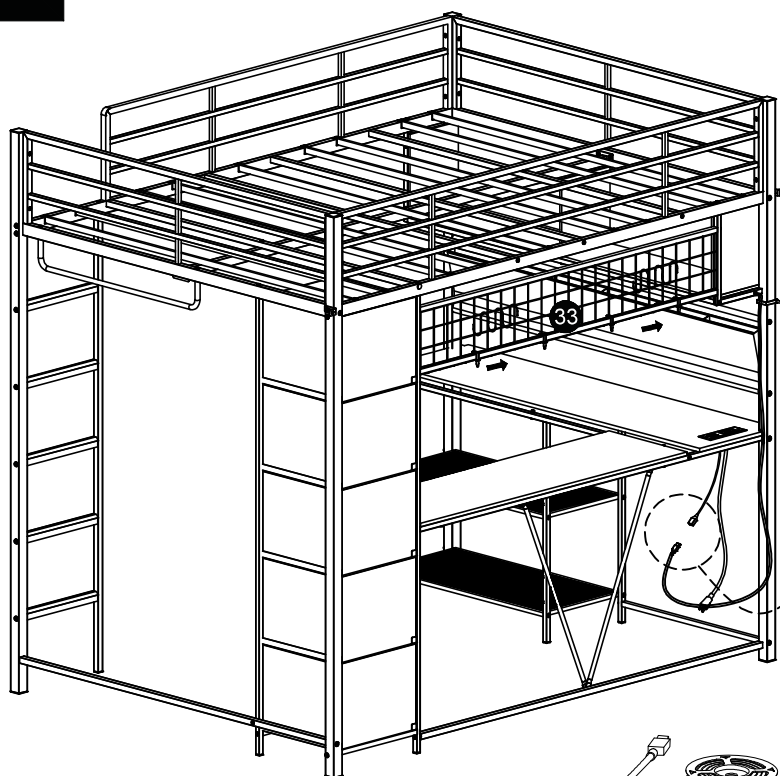

Please loosen the tie and tie it onto the iron pipe. As shown in the figure.

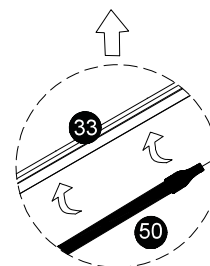


Attach the light strip 50 below the square tube 33.

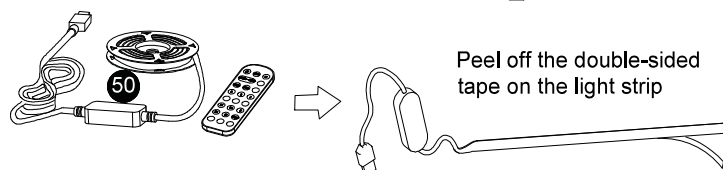


Peel off the double-sided tape on the light strip


30 Positioning

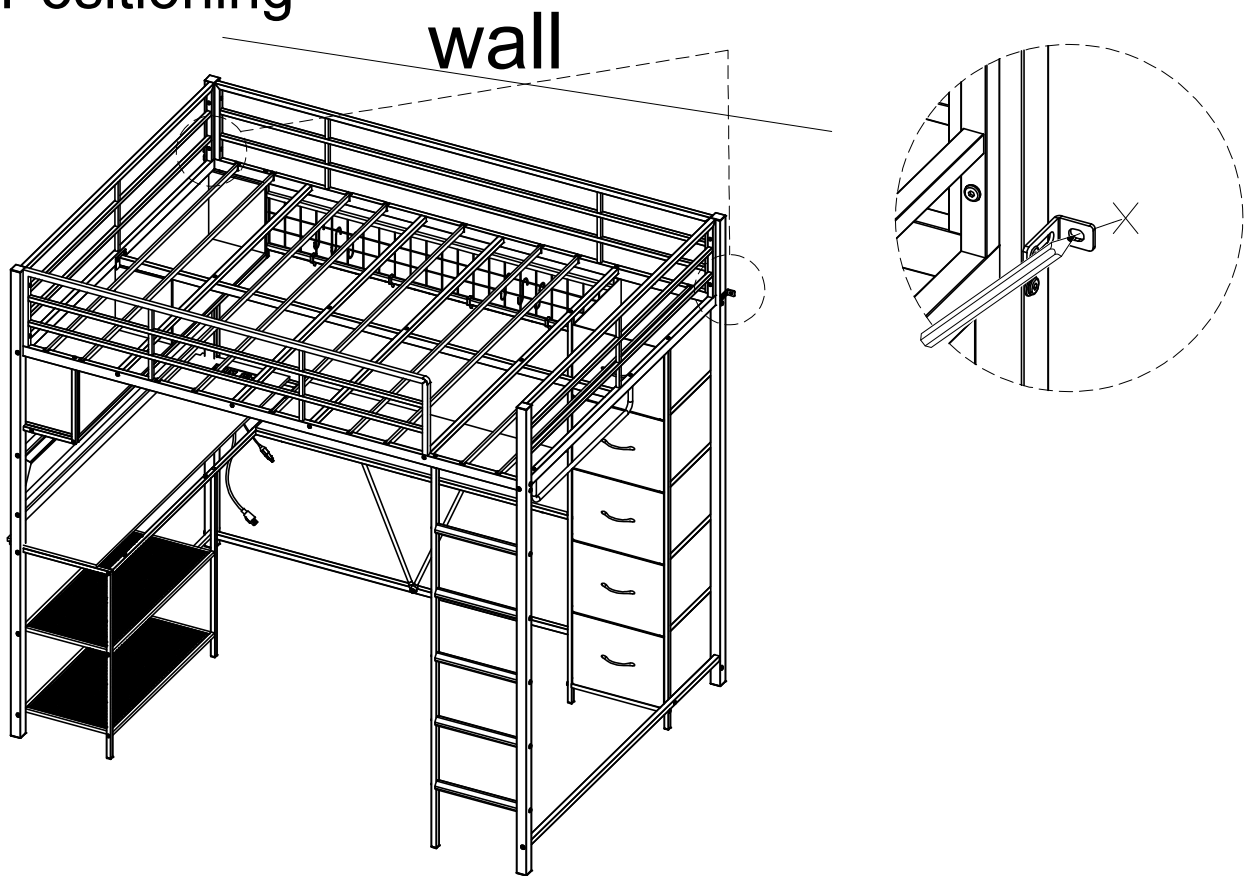

31 Drilling

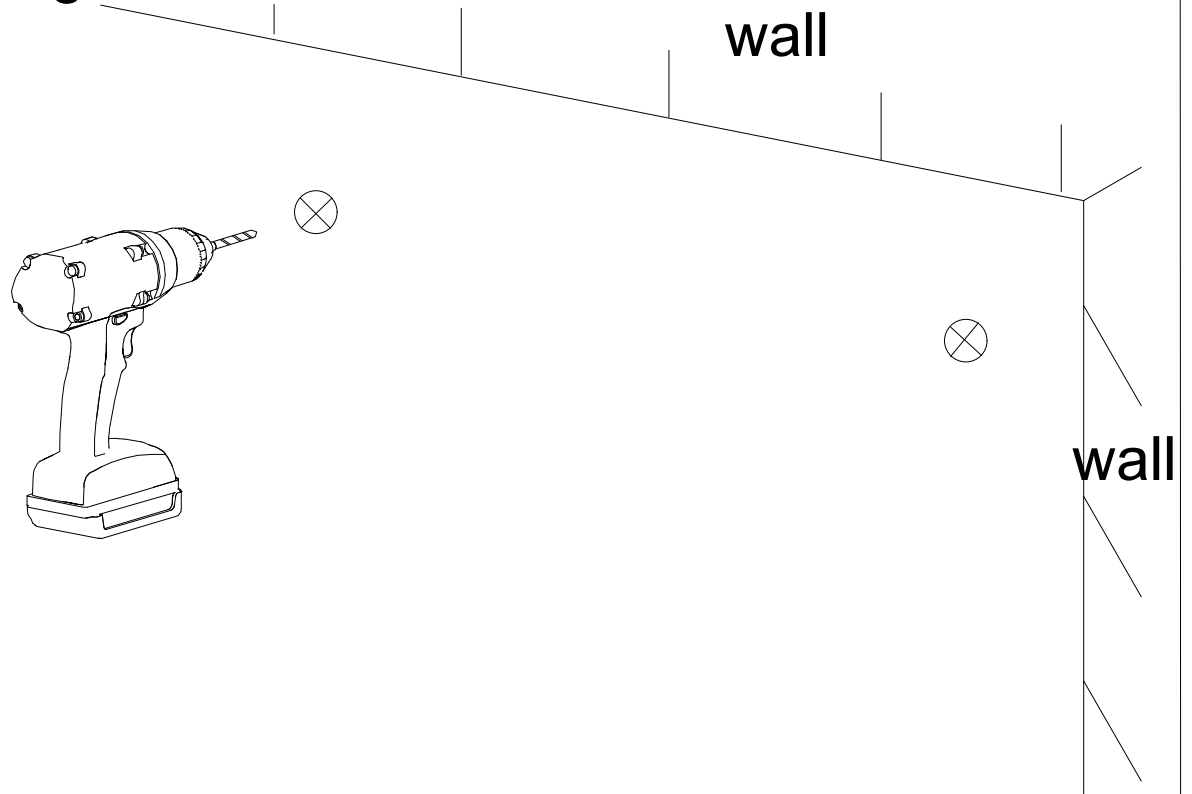


32

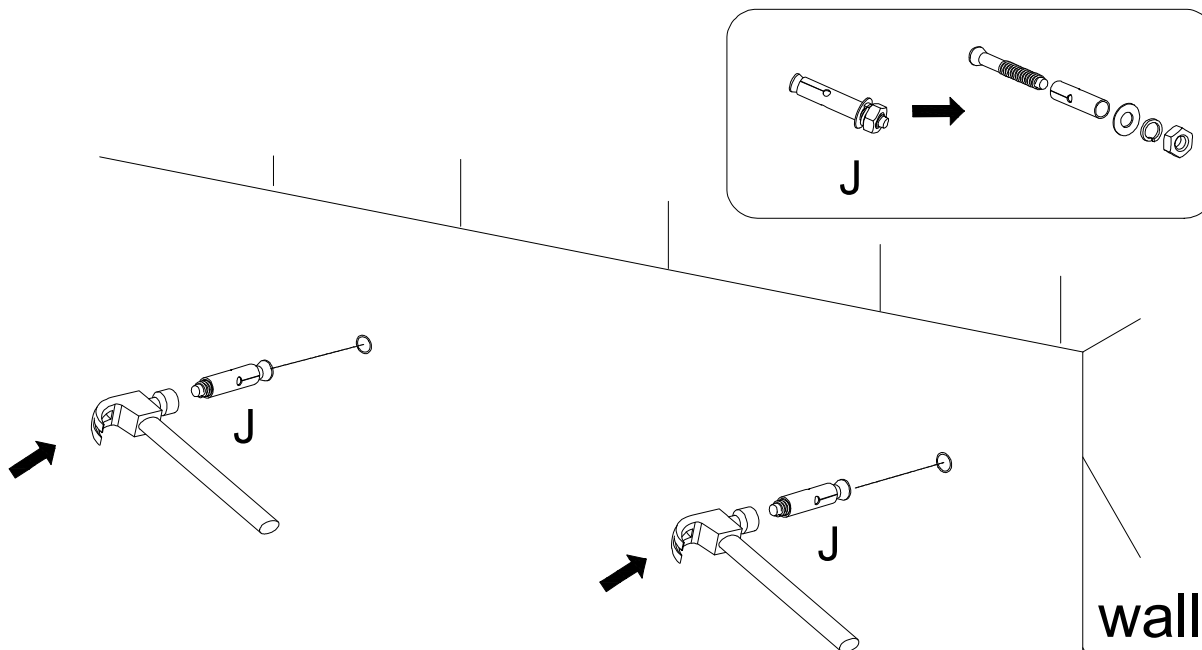

Please lock the expansion screw onto the wall

J M6



x2

33

