





ASSEMBLING INSTRUCTION

1-2.x1 	3-4.x1 	1-3.x1 	2-4.x1 	6.x2 		
A.x1 	B.x1 	C.x4  M6*45mm	D.x4  M6*30mm	E.x8  M6*30mm	F.x4 	G.x1 


Step1

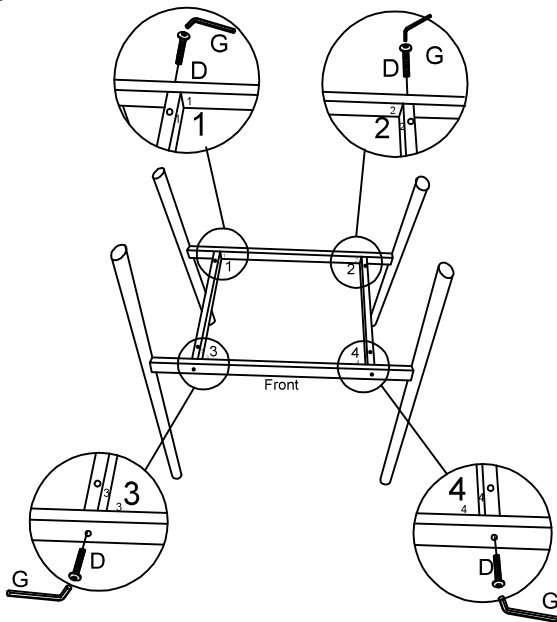


Step2

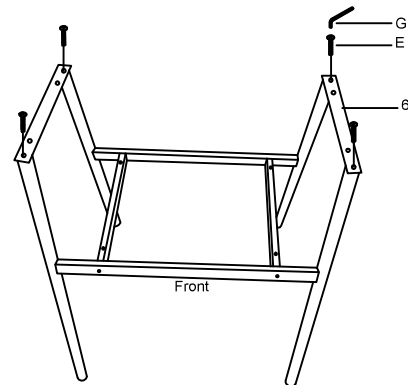


Step3

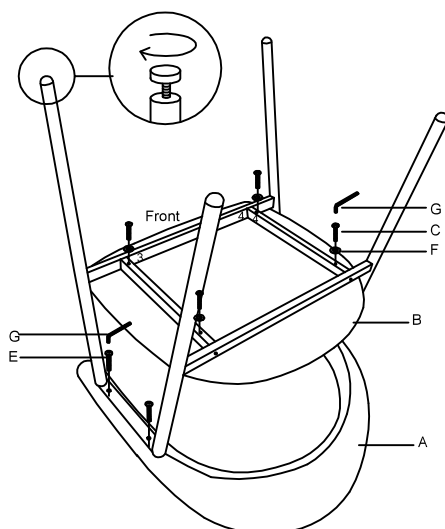

Step4

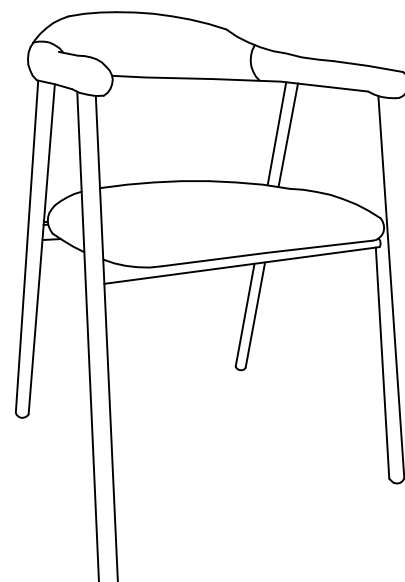


ASSEMBLY INSTRUCTION

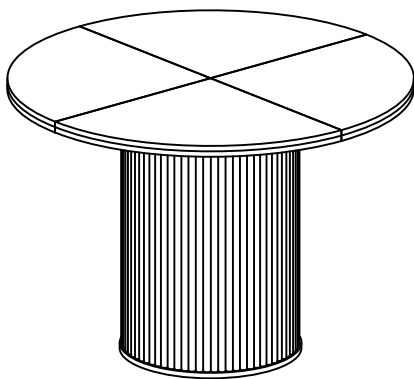


6*13 24pcs



8*30 4pcs



Ø25 6pcs



8*18 24pcs



M5 1pcs



4pcs




8*20 4pcs




6*20 16pcs

①

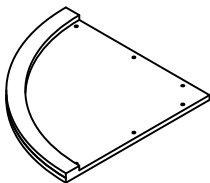


2pcs

②

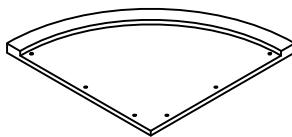


2pcs

③

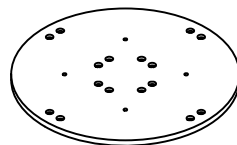


1pcs

④




1pcs

⑤




1pcs

⑥




1pcs

⑦

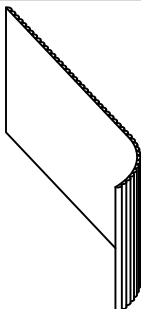

1pcs


⑧




4pcs

ASSEMBLY INSTRUCTION


STEP1

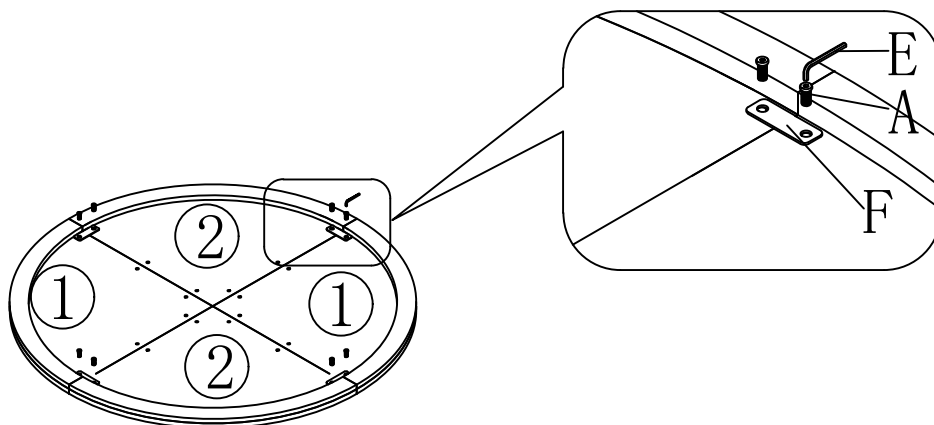

STEP2

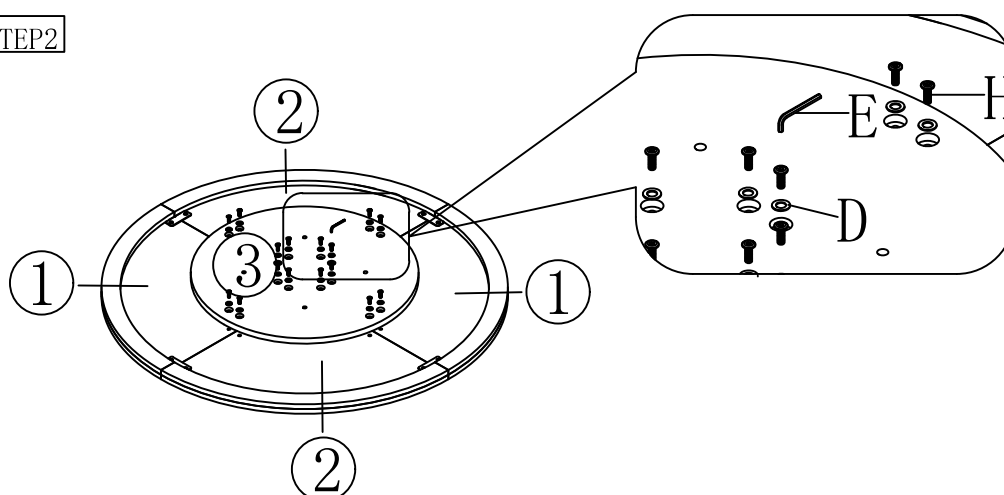


STEP3

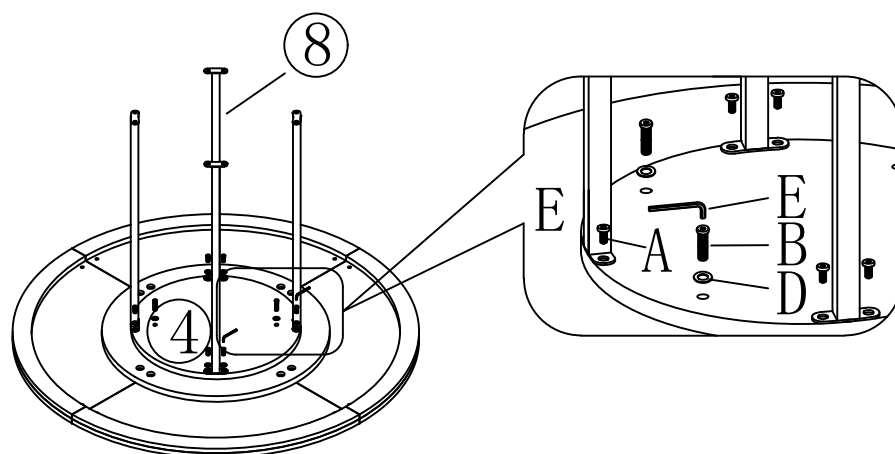


ASSEMBLY INSTRUCTION

STEP4

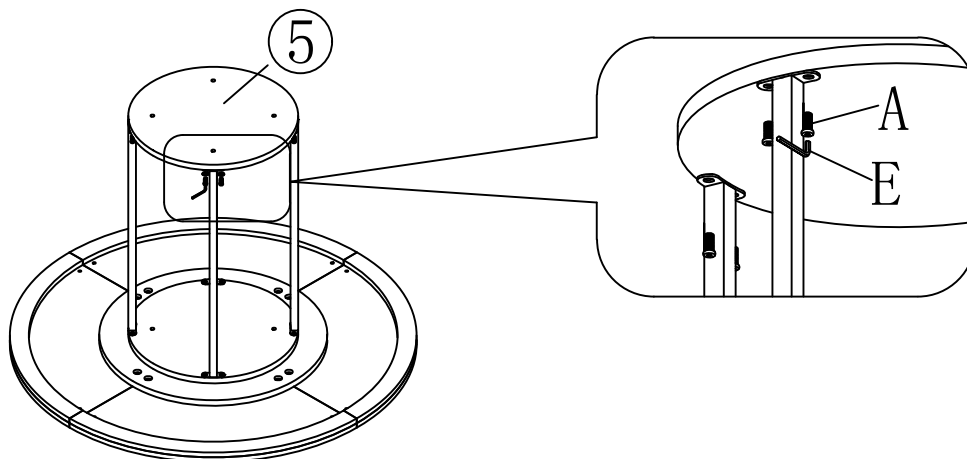


STEP5

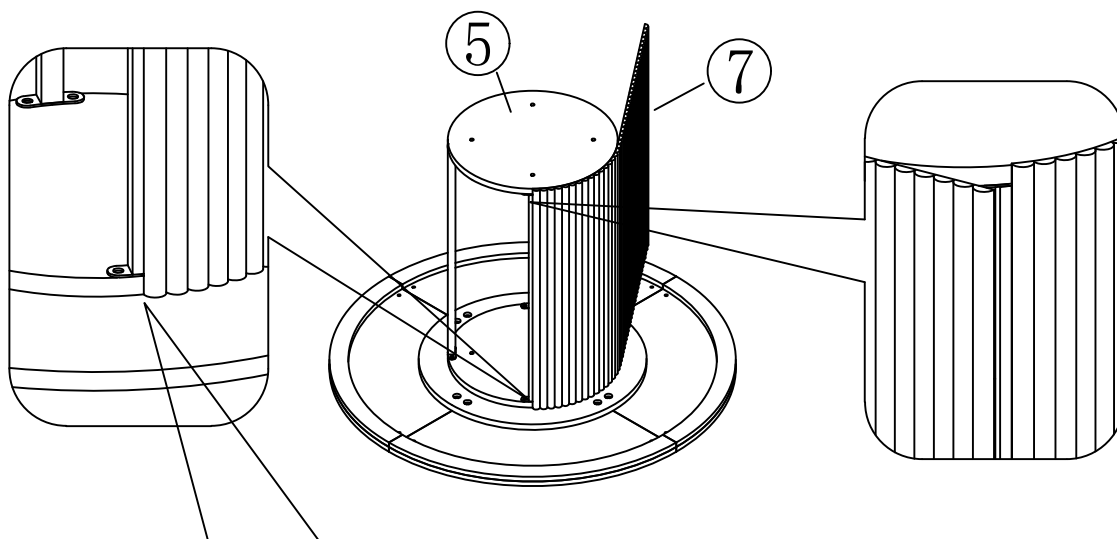

Align the middle part of the link bar when the coaming board is surrounded. If there is a gap after the whole encirclement, please open it and straighten it and re-wrap it.

STEP6

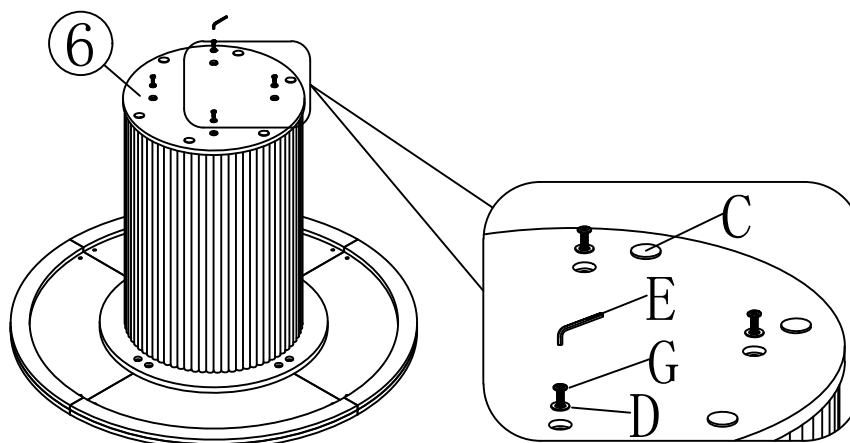

Location of hardware package



14