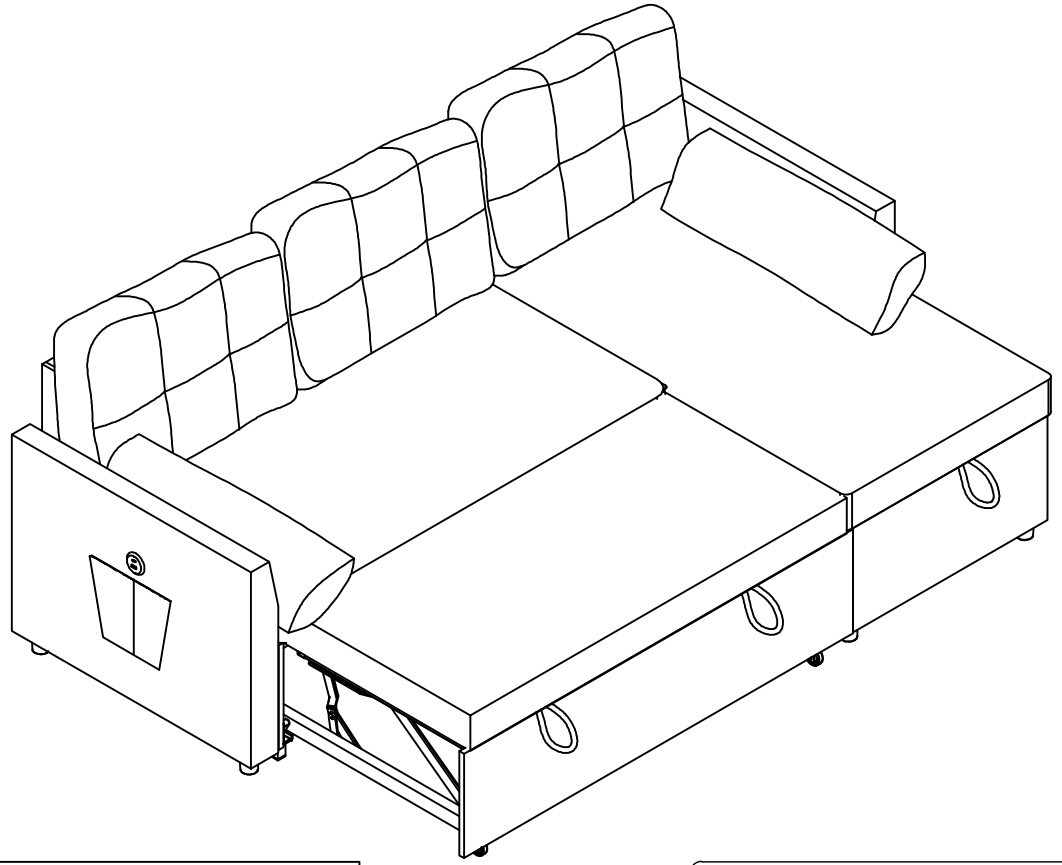
SOFA

Assembly Instruction



NOTE:

The production with TWO PACKAGES,

come with TWO TRACKINGS ,

may not be delivered at the same time.

Any question please feelfree to contact us:

support@merluxyhome.com

TEL:901-347-2181

We will provide further assistance within 24 hours.

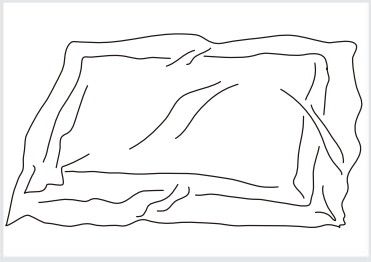
Safety and Care Advice

Important – Please read these instructions fully before starting assembly


Thanks for your purchase. Before assembling, please follow the instructions to check if all the spare parts and screws are intact.

- Considering the size and weight of the sofa, we recommend two adults to assemble the sofa, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 30 minutes.
- Keep all components and packaging out of reach of children or animals to avoid the risk of choking or suffocation.
- Please do not throw away any of the packaging or the instruction until you have checked all the components and hardware and the furniture is fully assembled. Please ensure that the packaging is disposed in a safe and environmentally friendly way.
- Please do not take off the cover, and do not wash.


Your cushions come vacuum packed and sealed for shipping. To restore the cushion's original shape, follow the steps below.




Open the vacuum bag carefully.

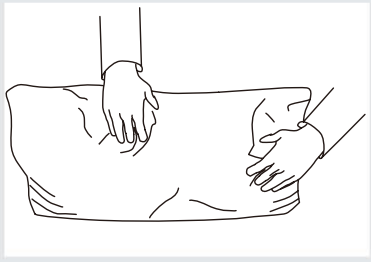

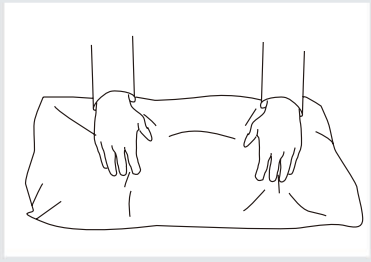Press and tap with both hands from the side to fully inhale air.



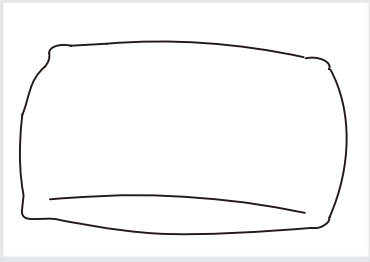Press and tap with both hands from the front to fully inflate.



Carefully smooth out each section until the surface is even.

After packing up, place them somewhere dry and ventilated. After about 72-96 hours, it can be restored to the best-use condition.

Seller's Notice:

Our product is packed in separate boxes, as shown below, and they might be shipped in different batches. Please wait until you receive all the boxes and then start the assembly.

Noted: Assembly instruction is only provided in Box1.

The following is the list of components contained in each box.

BOX1

Main Structure Accessories

C		Two-Seat Back Frame X 1
D2		Chaise Left Side Board X 1
D3		Chaise Right Side Board X 1
E		Pull-out Front Bezel X 1
F		Back Cushion X 1
F1		Two-Seat Sitting Pad X 1
F2		Pull-out Bed Sitting Pad X 1
F3		Chaise Sitting Pad X 1
G		Two-Seat Front Brace X 1
H		Pull-out Metal Frame X 1
H1		Chaise Metal Frame X 1
K		Pull-out Left ConnectorX 1
K1		Pull-out Right Connector X 1
Q		Chaise Storage Board X 1
Z		Two-Seat Back Support Wood X 1
Z1		Two-Seat Front Support Wood X 1

Structural Accessories

F4		Short Rope X 1
F4-1		Long Rope X 2
M		Sofa Legs X 10
Z2		Chaise Support Wood X 2

Hardware Parts

T		M8X50mm	Bolt	X 1
N		M8X30mm	Bolt	X 10+2
N1		M8X45mm	Bolt	X 2
P		M8	Allen Key	X 1
U		M5X14mm	Bolt	X 8+1
V		M6X17mm	Bolt	X 20+1
Y		M8X18mm	Bolt	X 6

BOX2

Main Structure Accessories

A		Slats X 18
A1		Slats with Nylon Fastener X 4
B		Slats X 9
B1		Slats with Nylon Fastener X 2
C1		Chaise Back Frame X 1
D		Two-Seat Left Side Board X 1
D1		Two-Seat Right Side Board X 1
E1		Chaise Front Side Board X 1
F		Back Cushion X 2
F5		Armrest Pillow X 2
R1		Left Armrest X 1
R2		Right Armrest X 1


Structural Accessories


J		Pull-out Bed Left Track X 1
J1		Pull-out Bed Right Track X 1
S		Right Pulling Wheel Bracket X 1
S1		Left Pulling Wheel Bracket X 1
W		Bracket X 2
X		Bracket X 2
W1		Bracket X 1
X1		Bracket X 1

Structural Accessories













L		Chaise Right Connector X 1
L1		Chaise Left Connector X 1
O		Slats Cap X 66

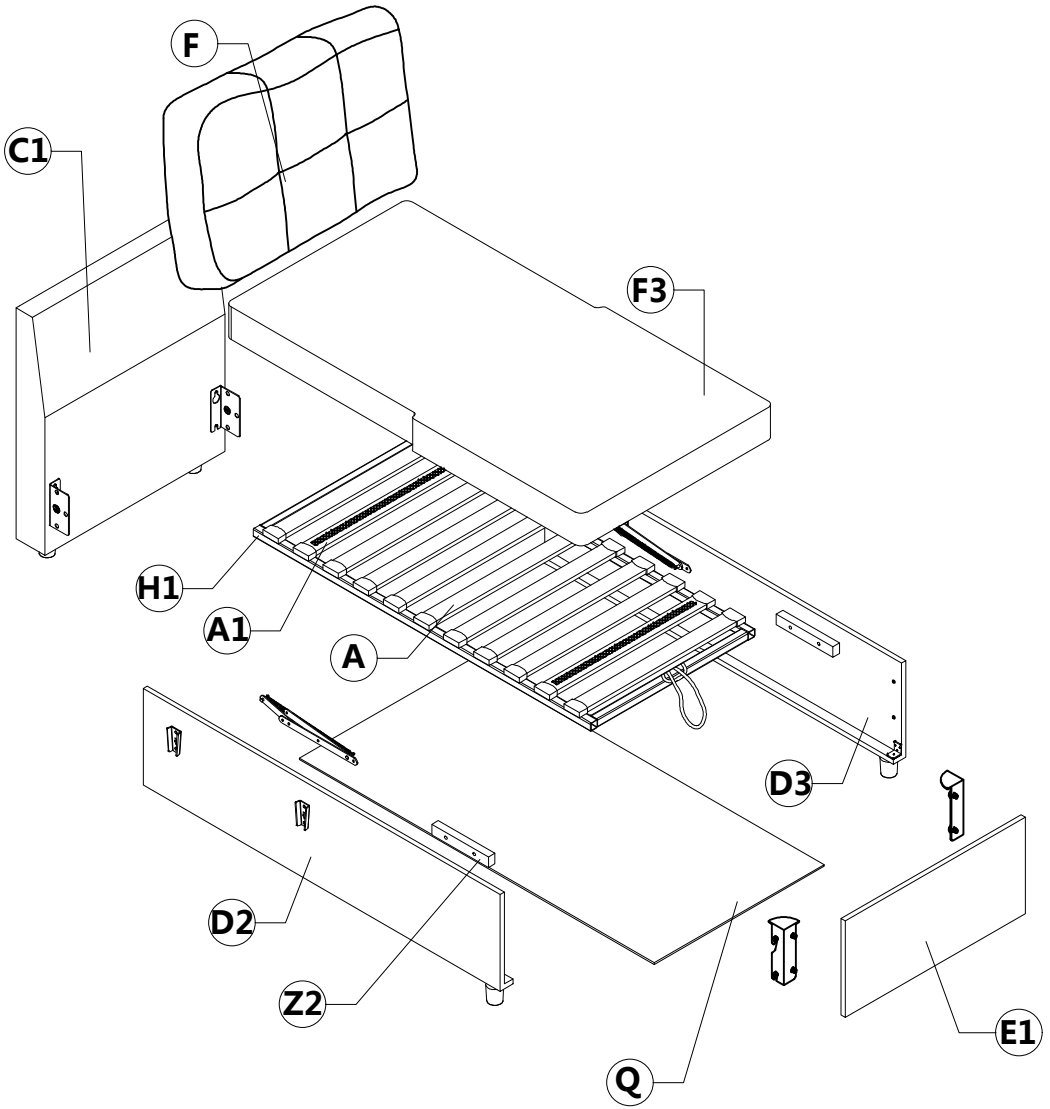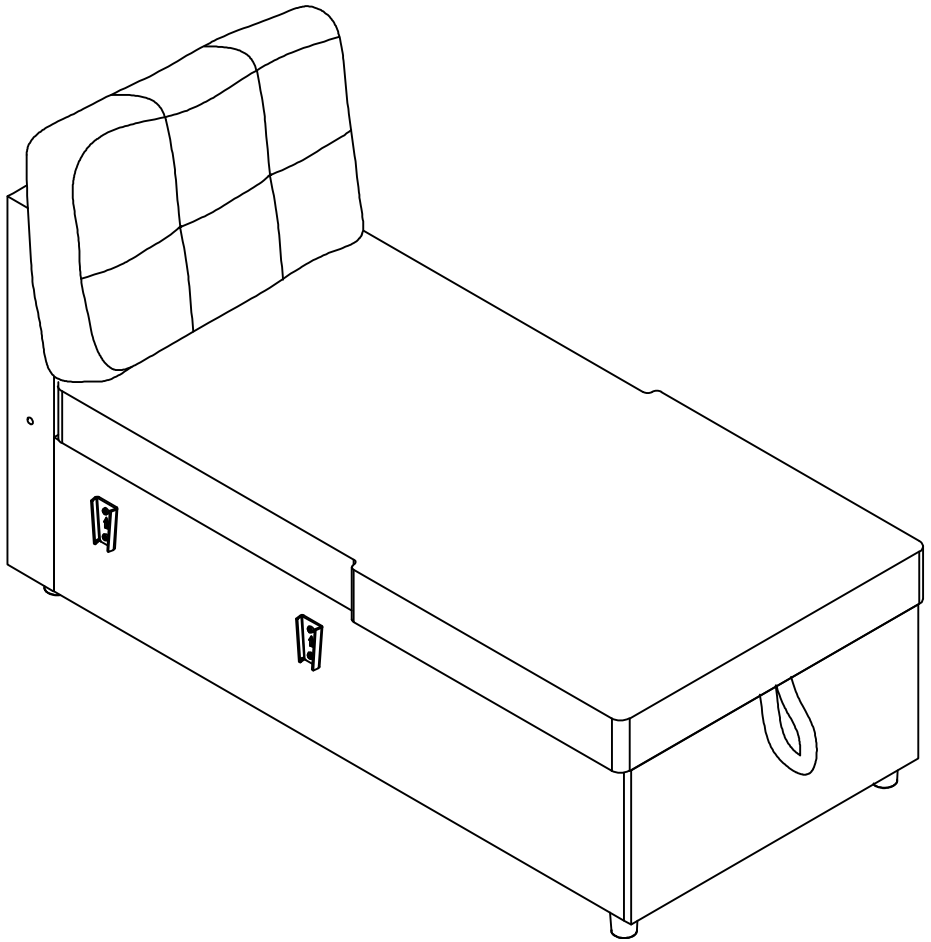CHAISE
















Main Structure Accessories

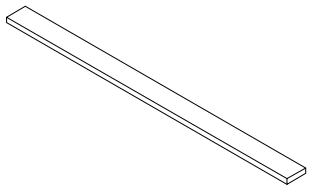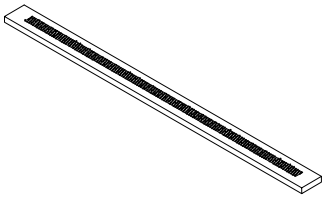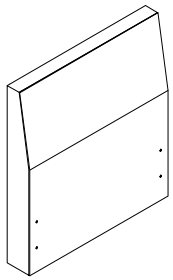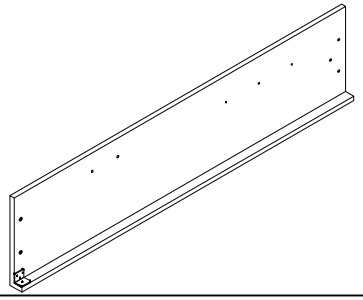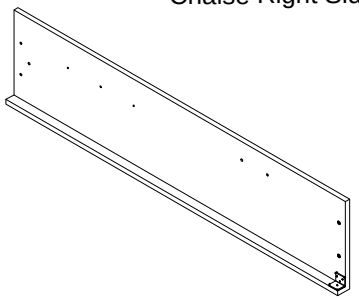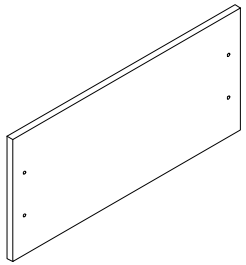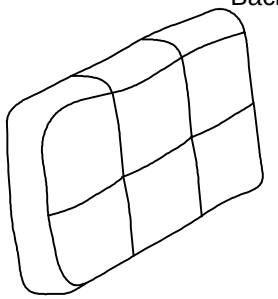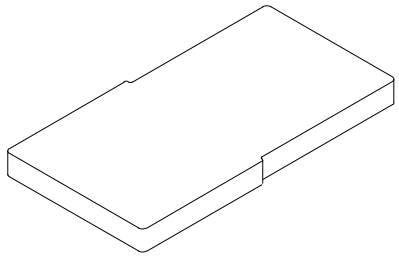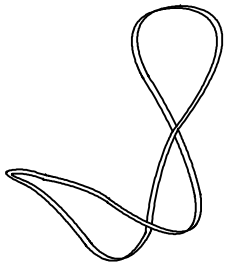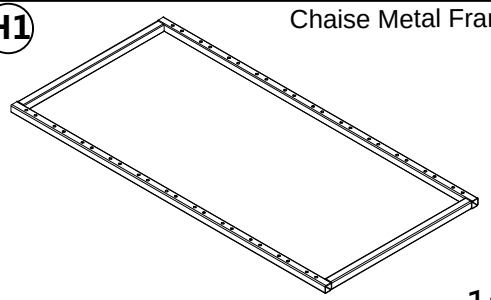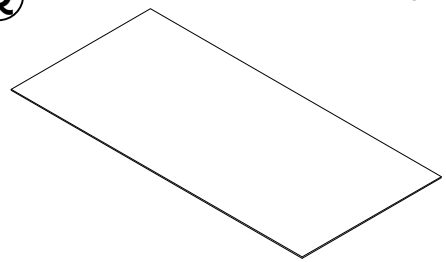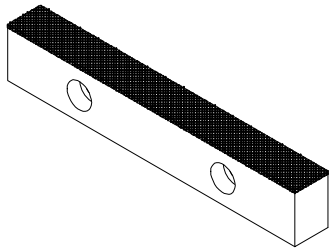A Slats  9pcs	A1 Slats with velcro  2pcs	C1 Chaise Back Frame  1pc	D2 Chaise Left Side Board  1pc
D3 Chaise Right Side Board  1pc	E1 Chaise Front Side Board  1pc	F Back Cushion  1pc	F3 Chaise Sitting Pad  1pc
F4 Short Rope  1pc	H1 Chaise Metal Frame  1pc	Q Chaise Storage Board  1pc	Z2 Chaise Support Wood  2pcs

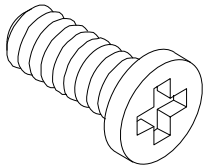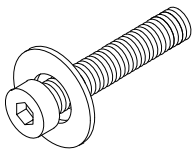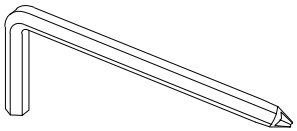Hardware Parts


V M6X17mm Bolt  10pcs	N M8X30mm Bolt  4pcs	P M8 Allen Key  1pc

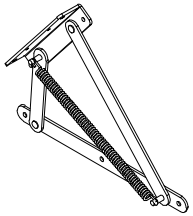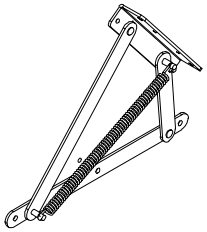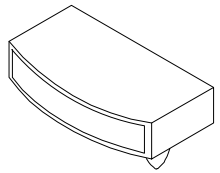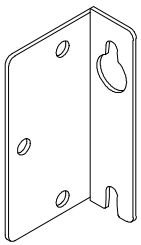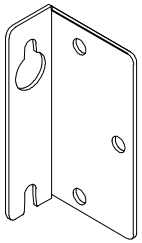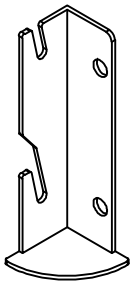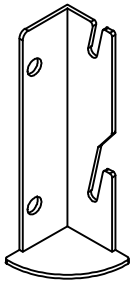Structural Accessories

L Chaise Right Connector  1pc	L1 Chaise Left Connector  1pc	M Sofa Feet  4pcs	O Slats cap  22pcs
W Bracket  1pc	X Bracket  1pc	W1 Bracket  1pc	X1 Bracket  1pc

STEP 1

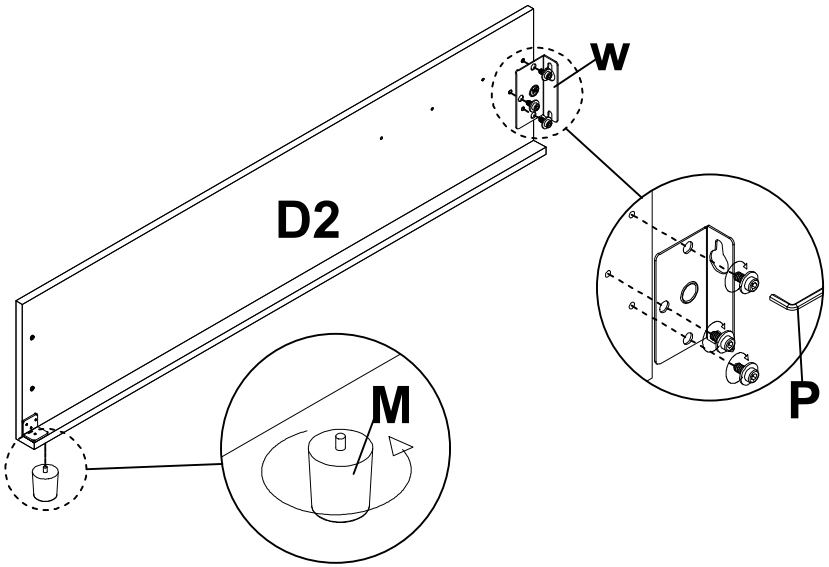
Loosen the screws first, and then lock the hanging piece
Pay attention to the opening up on the side near the foot post



	W x 1pc
	P x 1pc

STEP 2

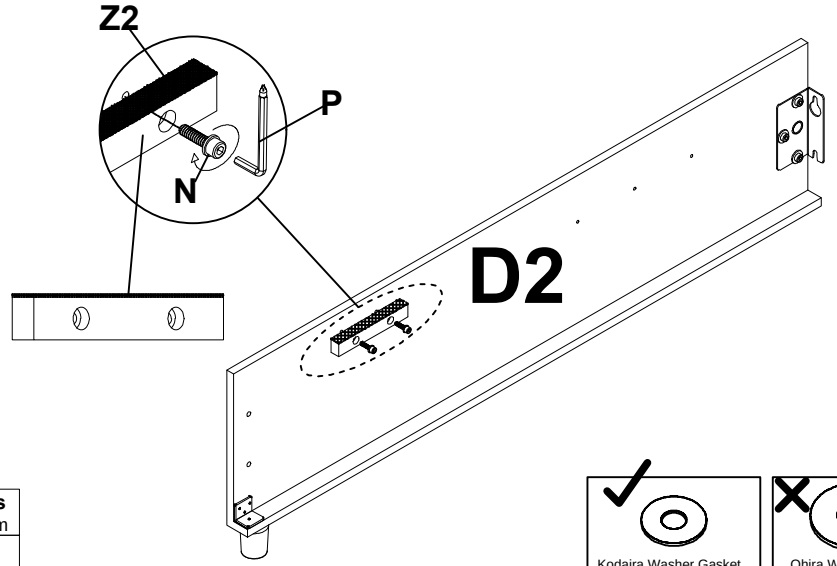
Note that the countersink hole faces outward
and the EVA non-slip sticker faces upward when installing



	N x 2pcs M8X30mm
	P x 1pc

STEP 3

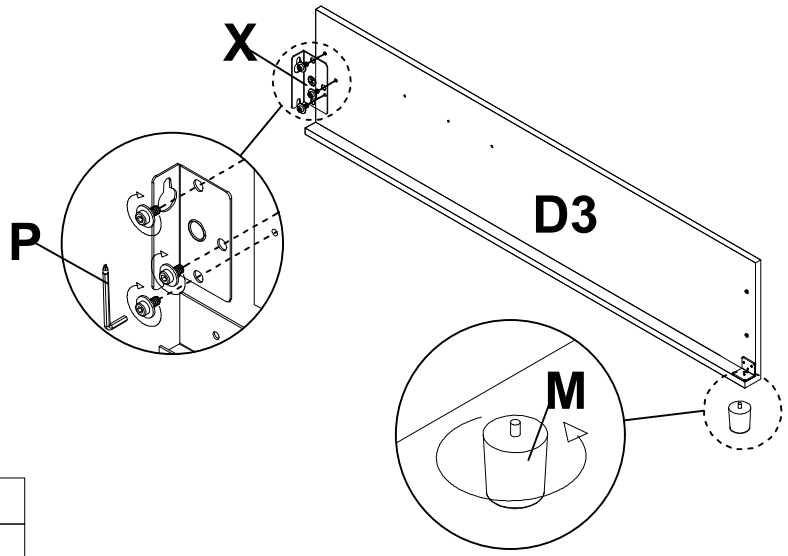
Loosen the screws first, and then lock the hanging piece
Pay attention to the opening up on the side near the foot post



	X x 1pc
	P x 1pc


STEP 4

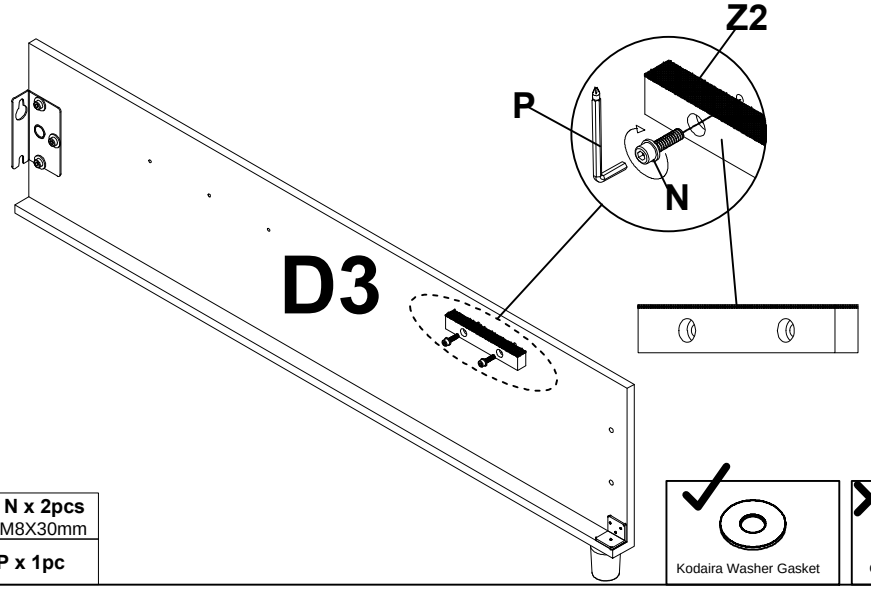Note that the countersink hole faces outward
and the EVA non-slip sticker faces upward when installing




	N x 2pcs M8X30mm
	P x 1pc

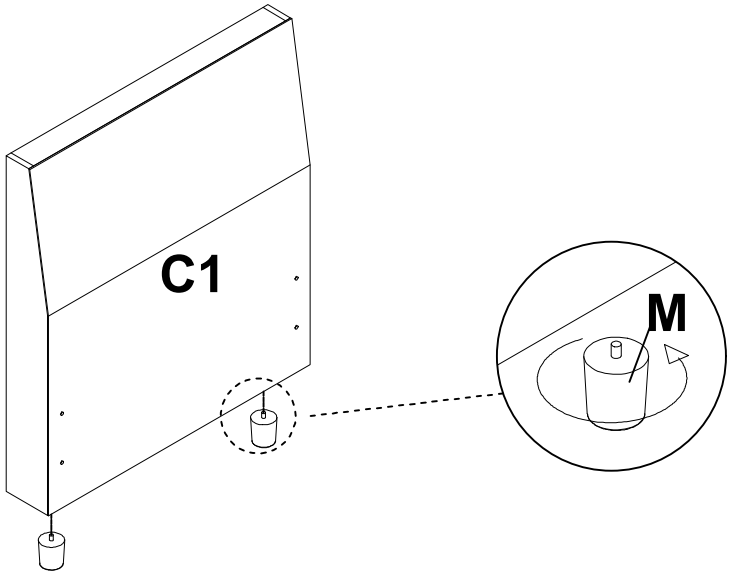STEP 5




STEP 6

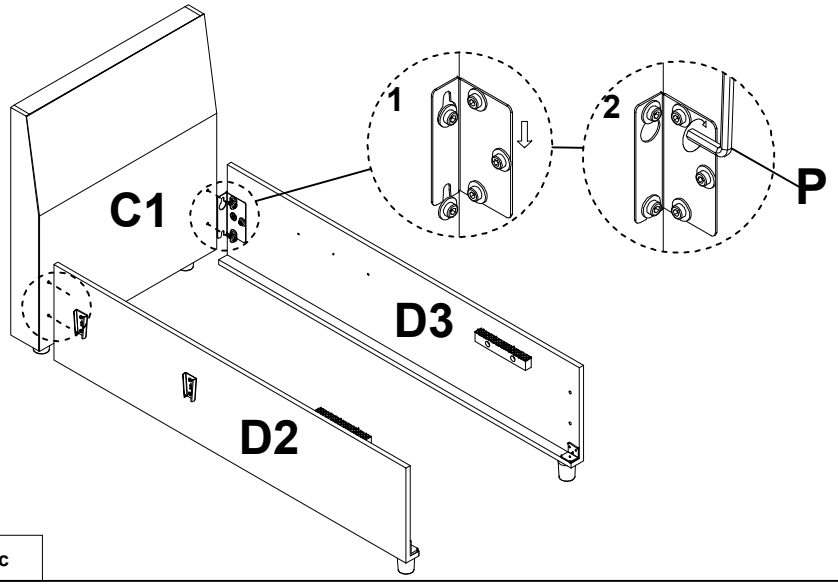First loosen the screws, install the mounting plate and lock the screws




	P x 1pc

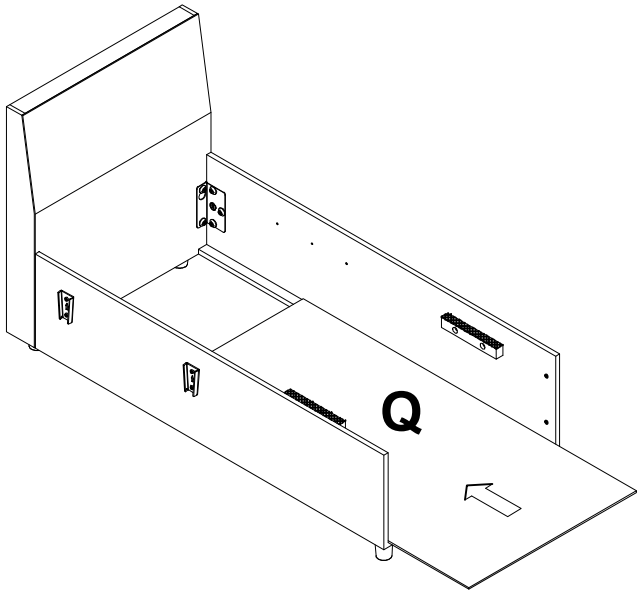STEP 7




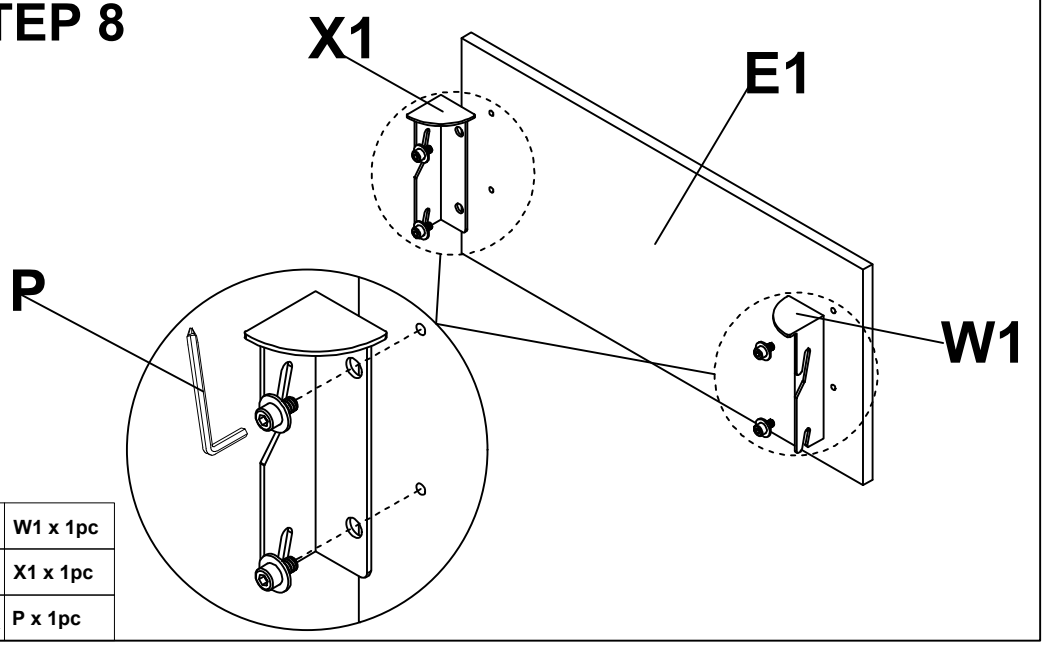STEP 8



	W1 x 1pc
	X1 x 1pc
	P x 1pc

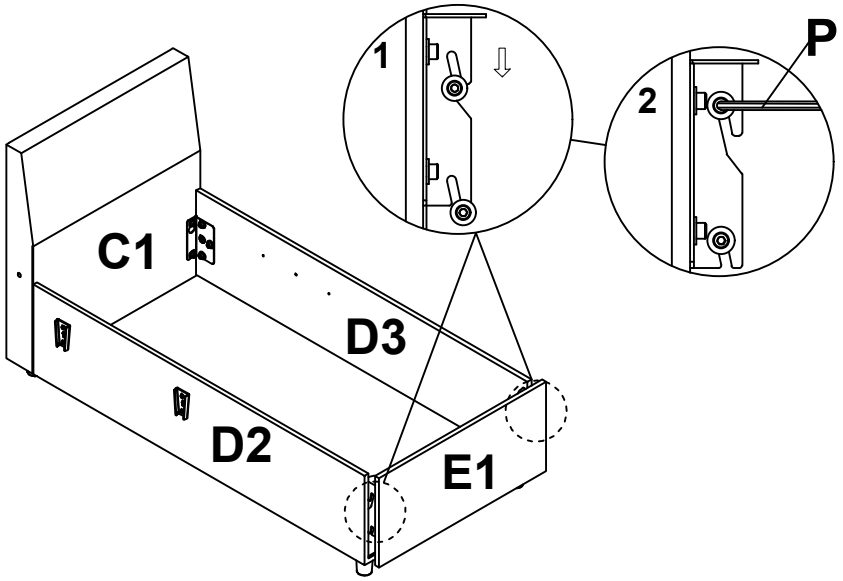
STEP 9



	P x 1pc


STEP 10

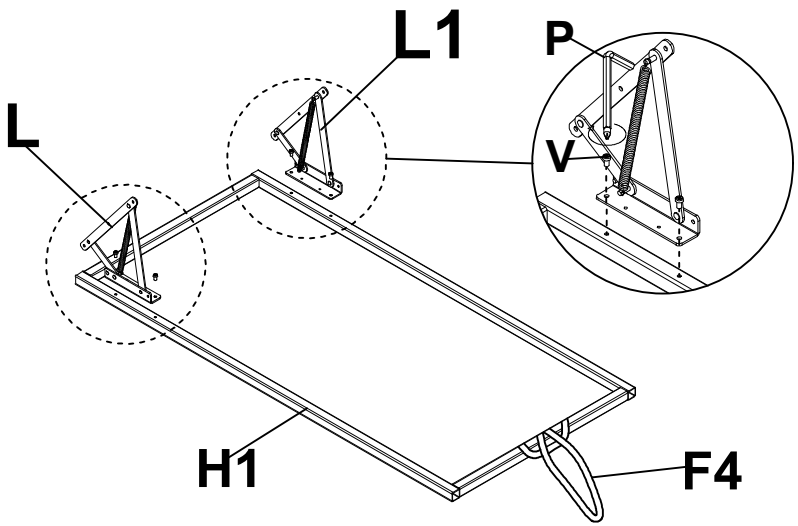Note that accessories distinguish left and right, after installation and lock the screws



	V x 4pcs M6X17mm
	P x 1pc

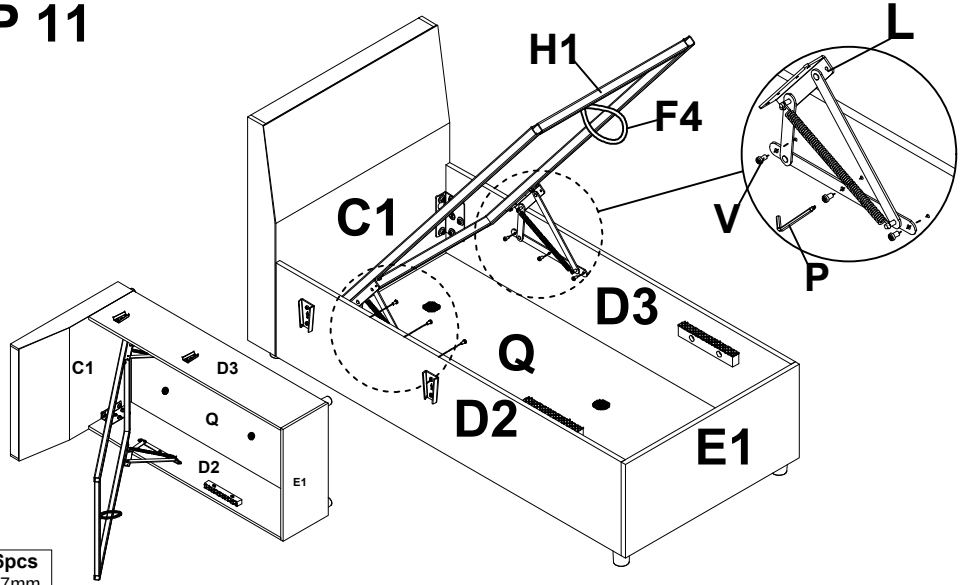STEP 11





	V x 6pcs M6X17mm
	P x 1pc


Note:Easier to install when tilted

STEP 12

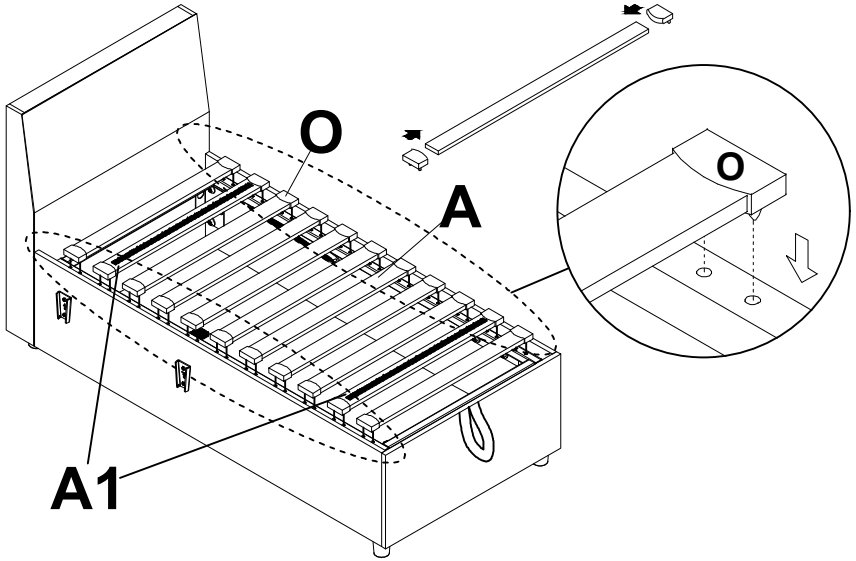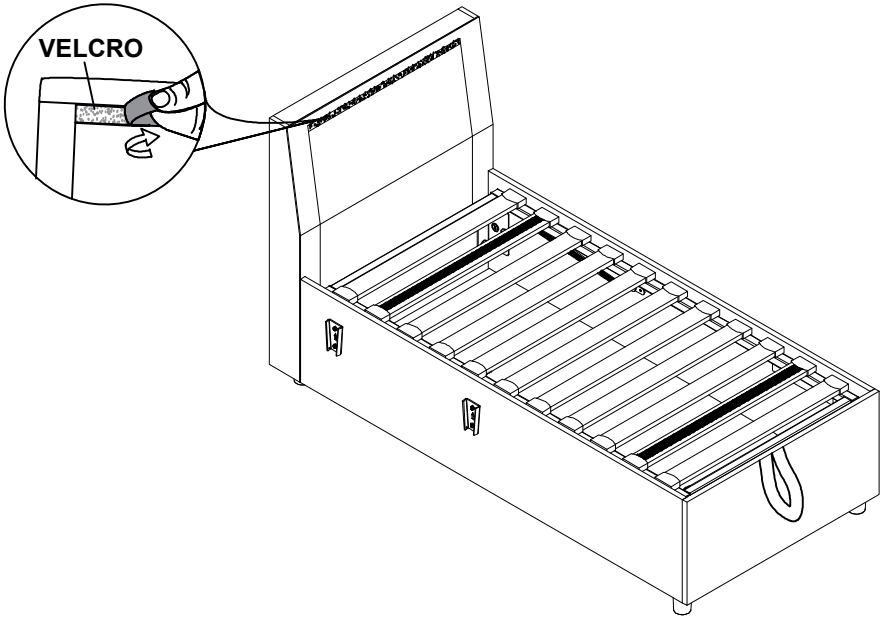
Place the A1 in the second position and note that the Nylon Fastener side is facing up





VELCRO









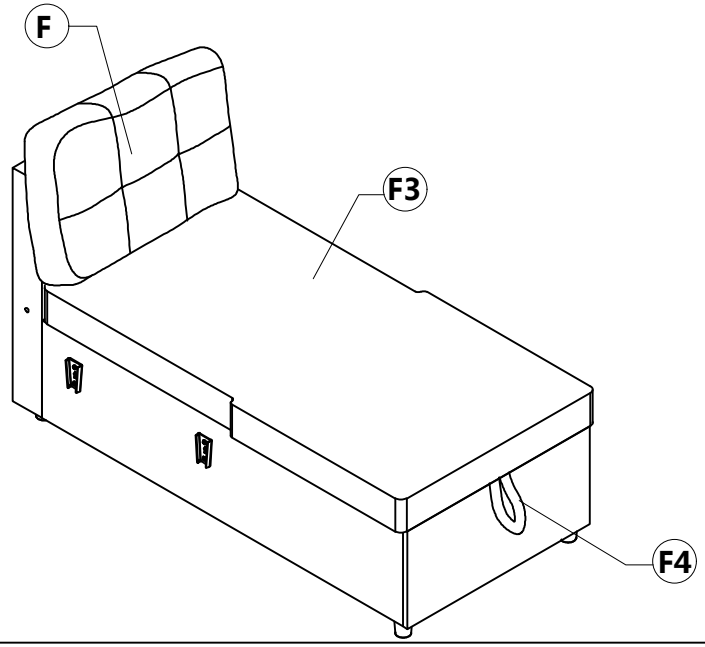

F
F3
F4

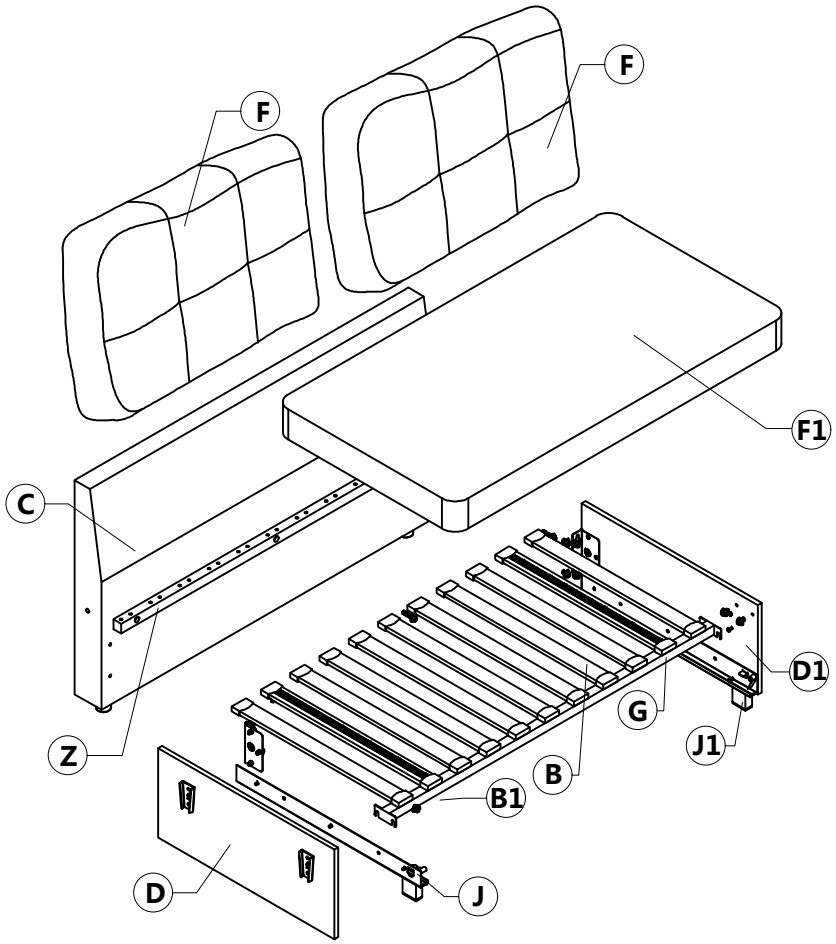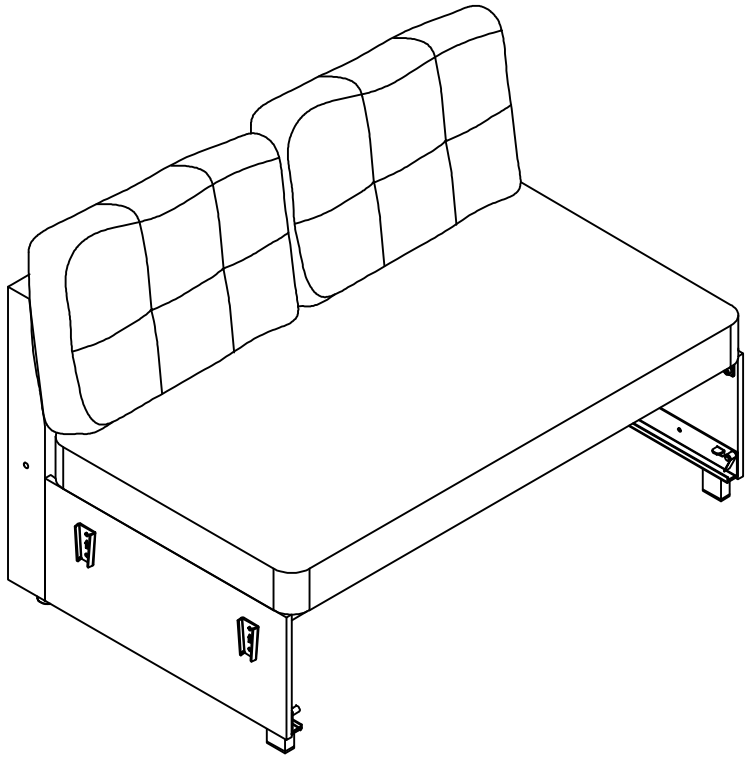TWO SEATS














Main Structure Accessories

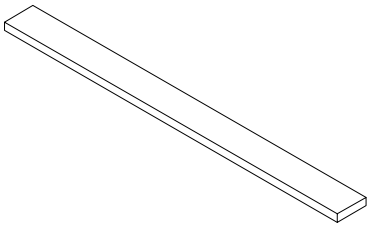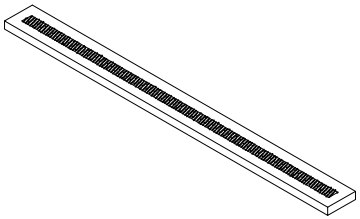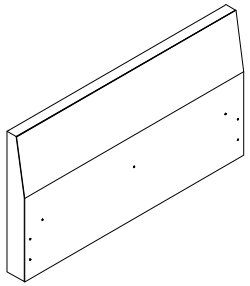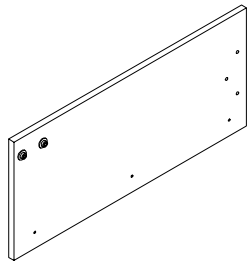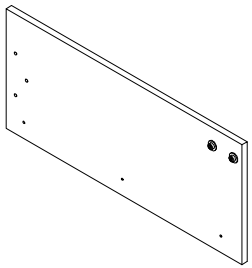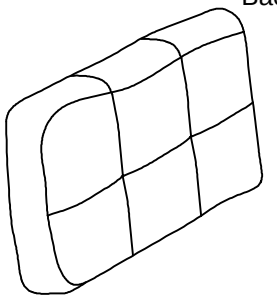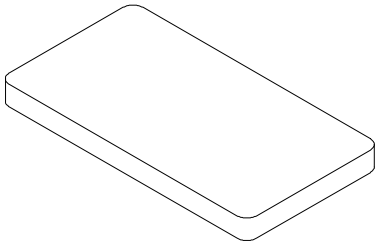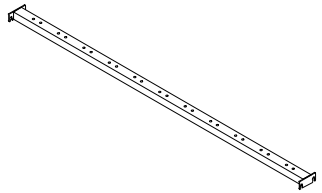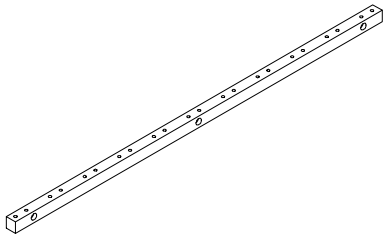B Slats  9pcs	**B1** Slats with velcro  2pcs	**C** Two-seat Back Frame  1pc	**D** Two-seat Left Side Board  1pc
D1 Two-seat Right Side Board  1pc	**F** Back Cushion  2pcs	**F1** Two-seat Sitting Pad  1pc	**G** Two-seat Front Brace  1pc
Z Two-seat Back Support Wood  1pc			

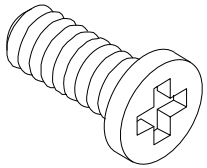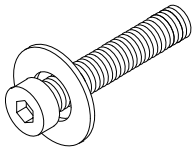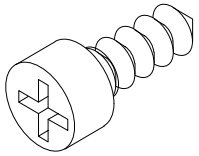
Hardware Parts

V M6X17mm Bolt  6pcs	N M8X30mm Bolt  3pcs	U M5X14mm Bolt  4pcs

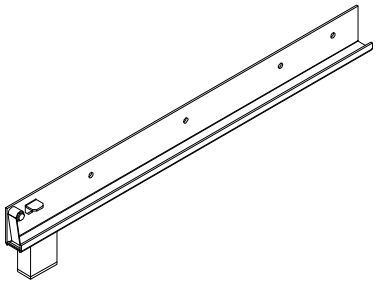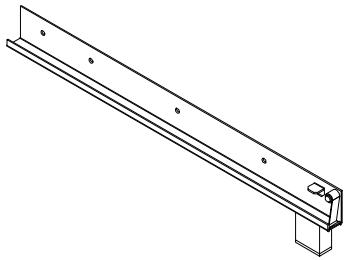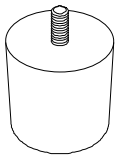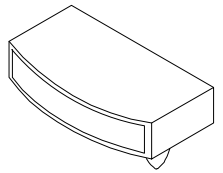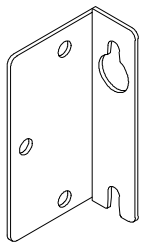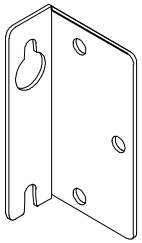Structural Accessories


J Pullout Bed Left Track  1pc	J1 Pullout Bed Right Track  1pc	M Sofa Feet  2pcs	O Slats cap  22pcs
W Bracket  1pc	X Bracket  1pc		

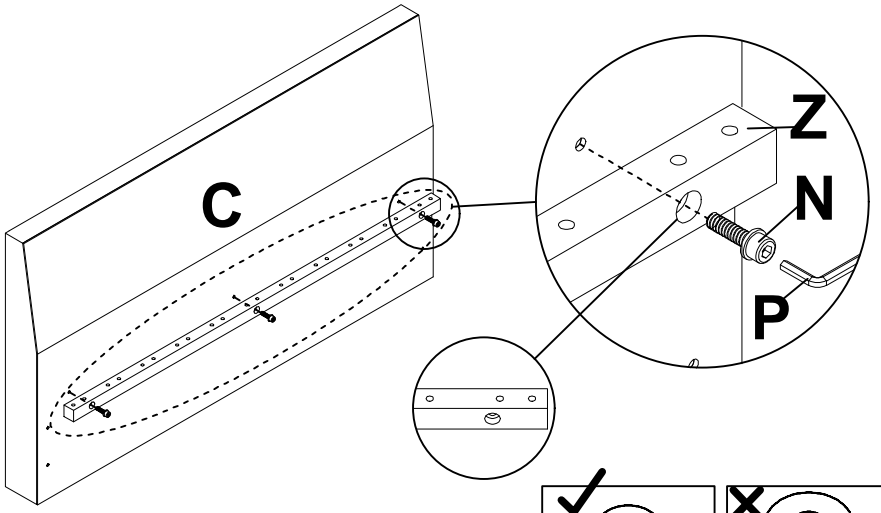STEP 1




	N x 3pcs M8X30mm
	P x 1pc

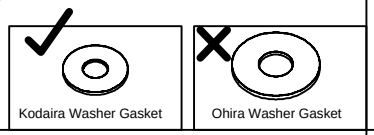
Note that the hole of the buckle faces upward and the countersunk hole faces outward



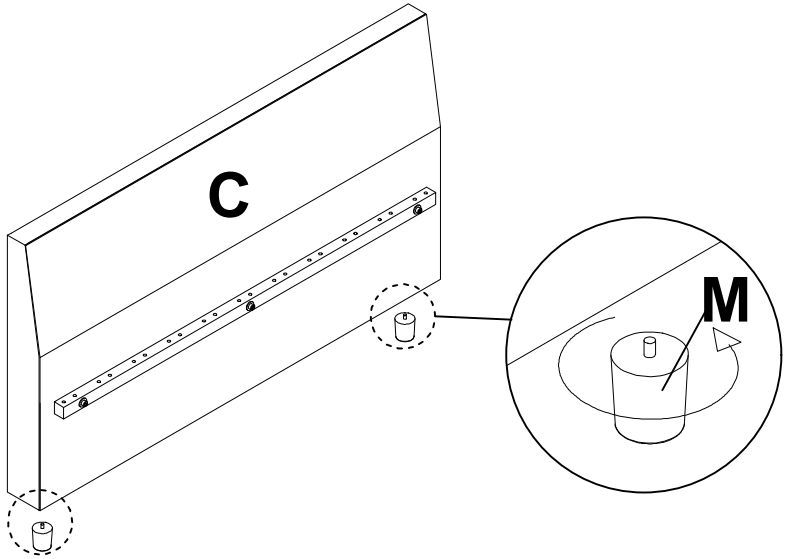STEP 2



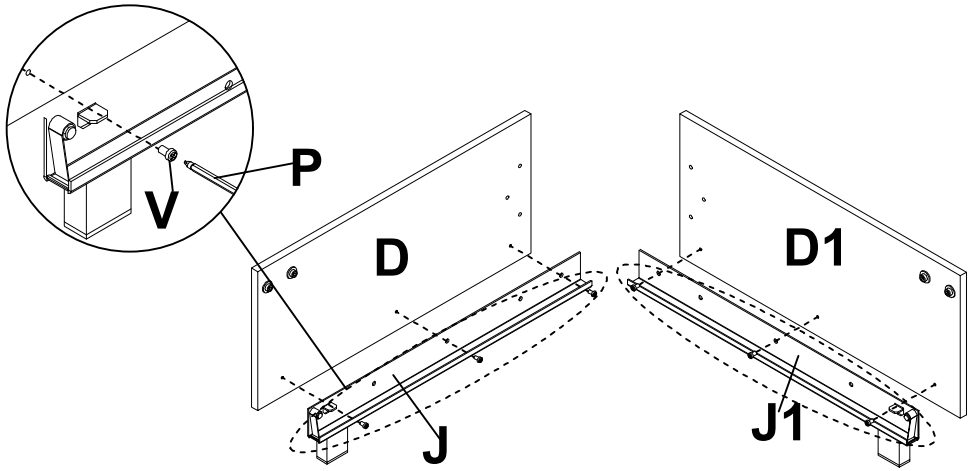
STEP 3



	V x 6pcs M6X17mm
	P x 1pc

STEP 4

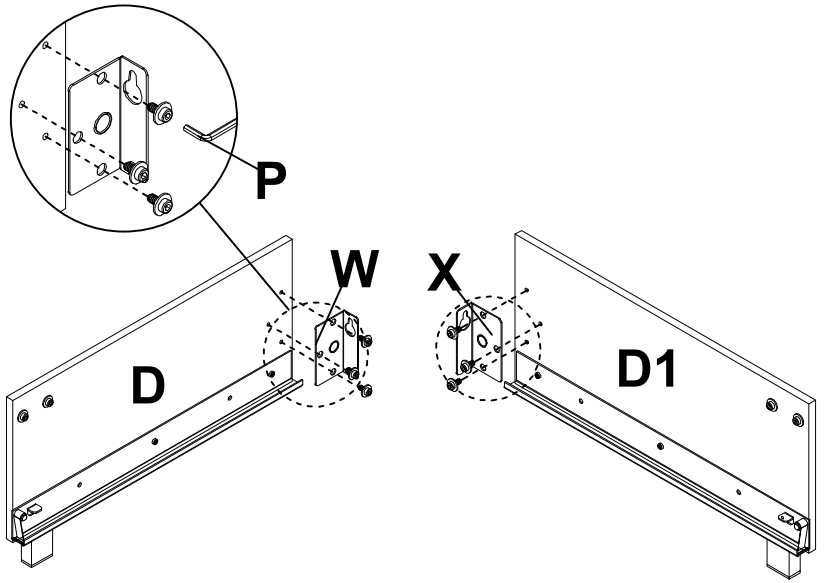
Loosen the screws properly first for better engagement.



	X x 1pc
	W x 1pc
	P x 1pc

STEP 5

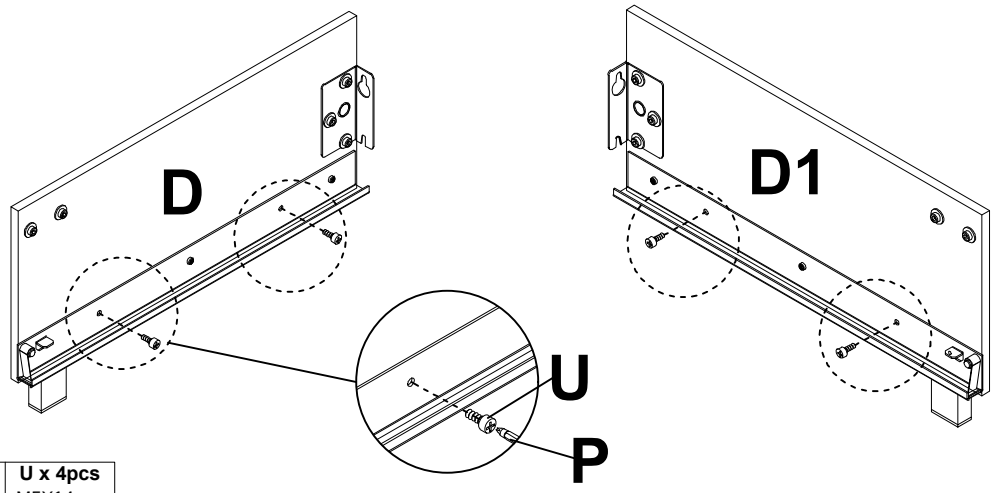Reinforcing lock with self-tapping screws




U x 4pcs M5X14mm	
P x 1pc	

Tips: Self-tapping screw is an auxiliary reinforcement function, you can choose to reinforce or not.

STEP 6

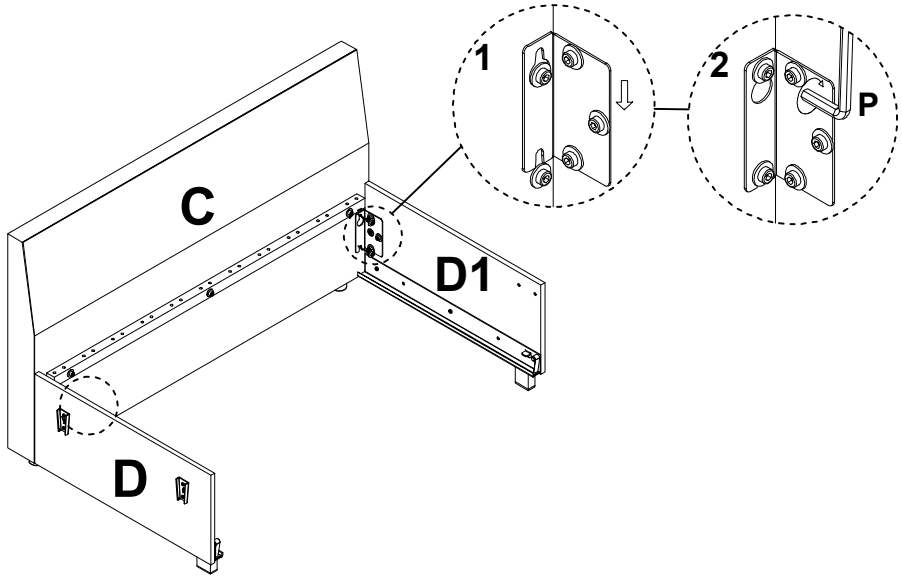
First loosen the screws, install the mounting plate and lock the screws



P x 1pc

STEP 7

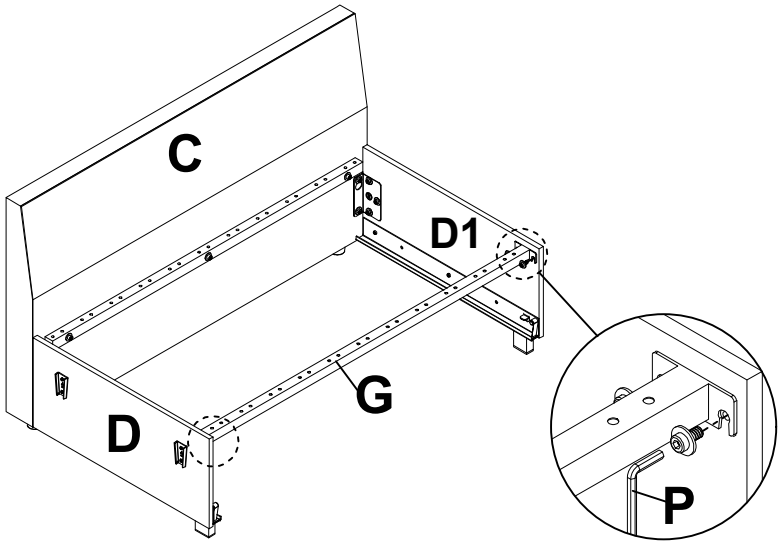
Loosen the screws properly first for better engagement.





P x 1pc

STEP 8

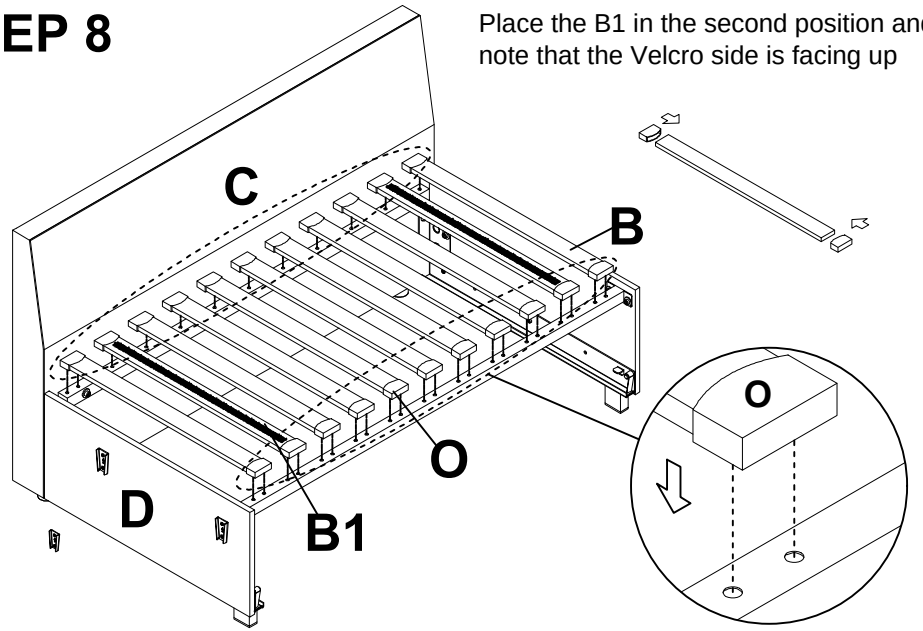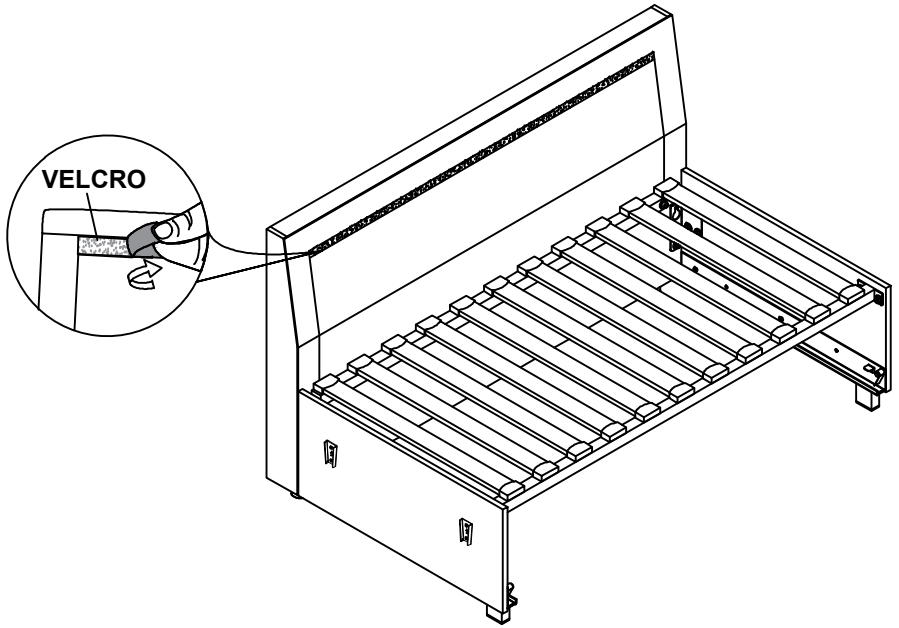
Place the B1 in the second position and note that the Velcro side is facing up





VELCRO







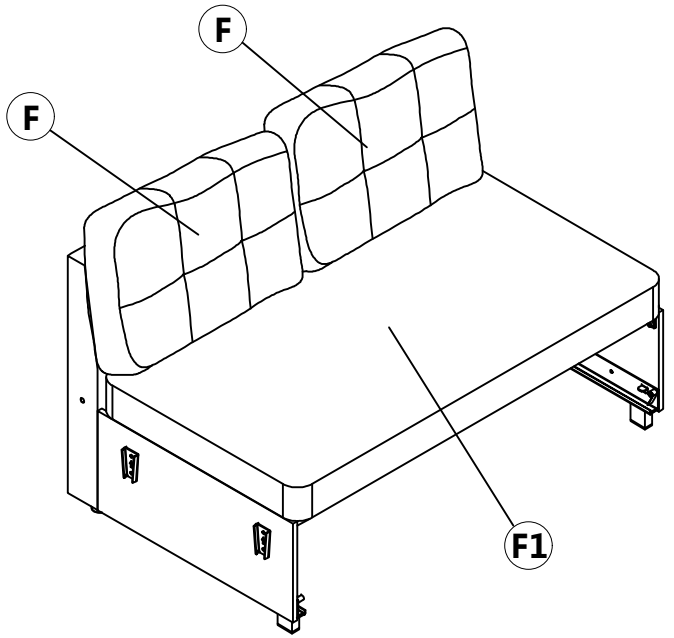

F
F
F1

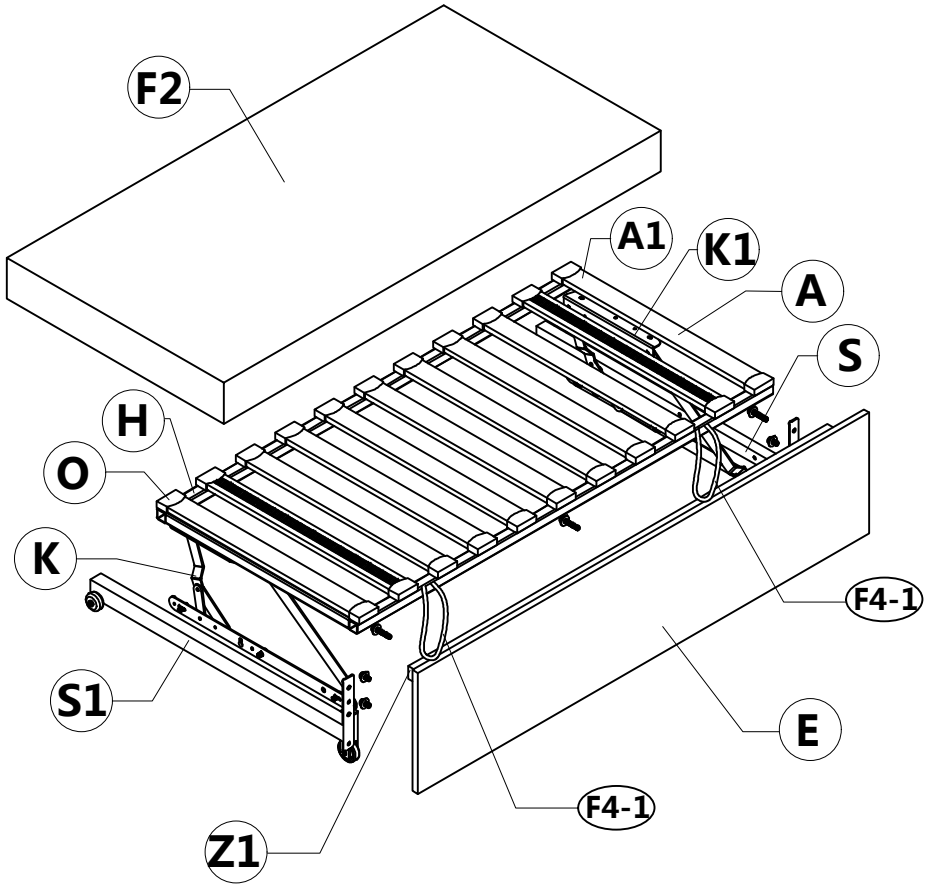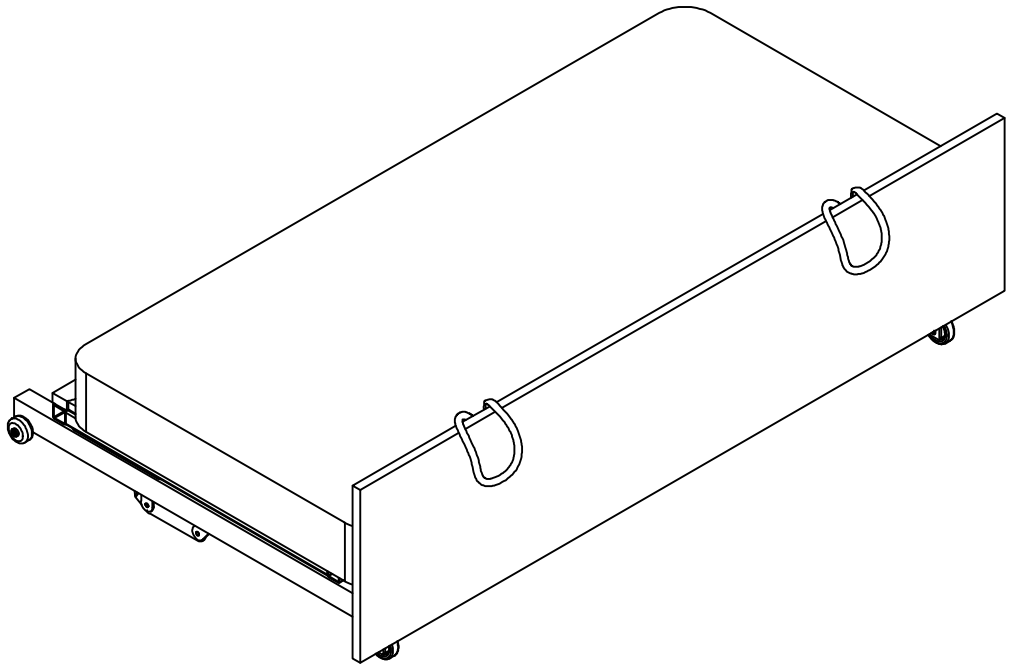PULL-OUT














Main Structure Accessories

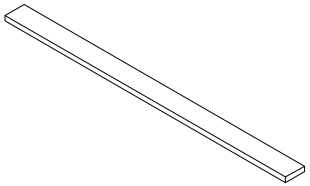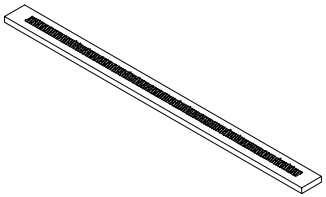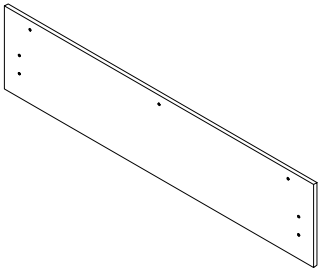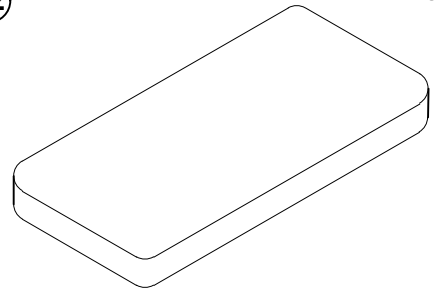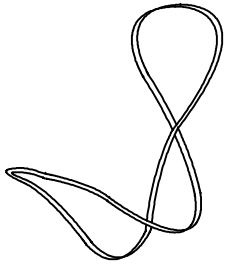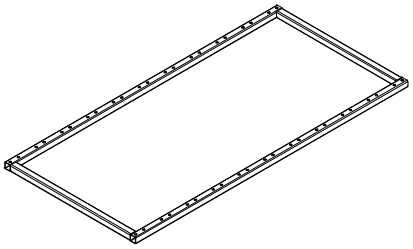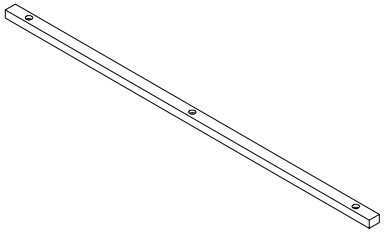A Slats  9pcs	**A1** Slats with velcro  2pcs	**E** Pullout bed Panel  1pc	**F2** Pullout bed Sitting Pad  1pc
F4-1 Long Rope  2pcs	**H** Two-seat Metal Frame  1pc	**Z1** Two-seat Front Support Wood  1pc	

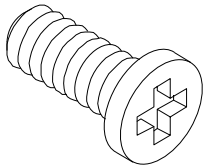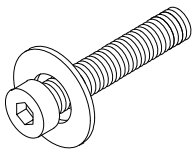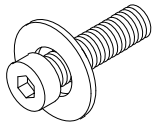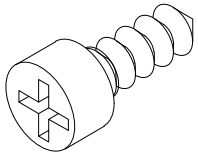
Hardware Parts

V M6X17mm Bolt  M6X17mm 4pcs	N M8X30mm Bolt  M8X30mm 3pcs	Y M8X18mm Bolt  6pcs	U M5X14mm Bolt  M5X14mm 4pcs

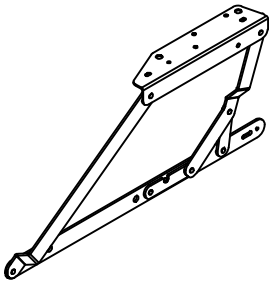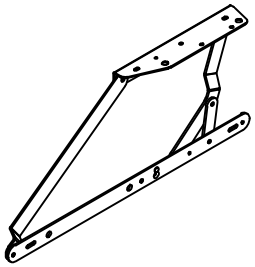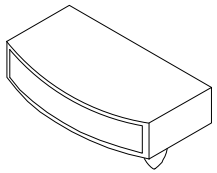Structural Accessories


K Two-seat Left Connector  1pc	K1 Two-seat Right Connector  1pc	O Slats cap  22pcs	S Right Pulling Wheel Bracket  1pc
S1 Left Pulling Wheel Bracket  1pc			

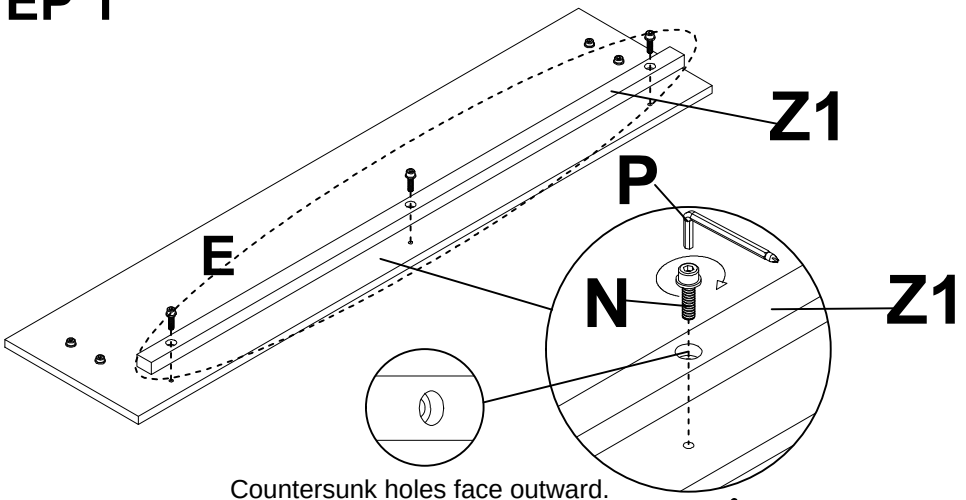STEP 1




Countersunk holes face outward.

N x 3pcs M8X30mm	
P x 1pc	

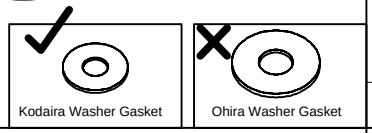

STEP 2

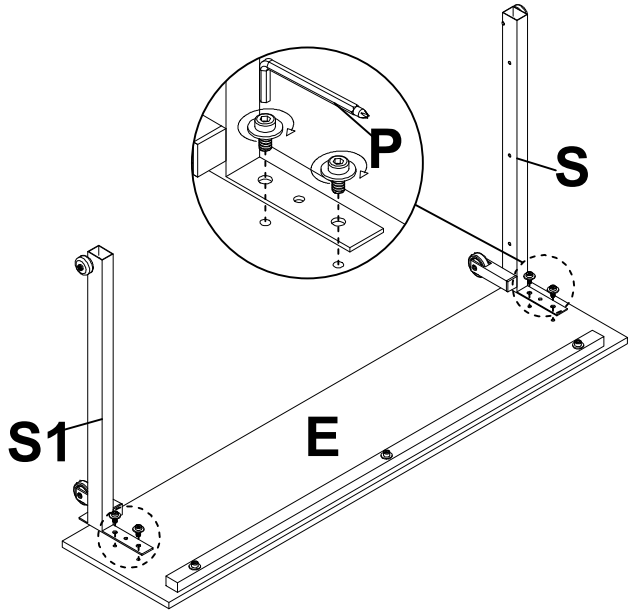
Loosen the screws properly first for better engagement.



P x 1pc


STEP 3

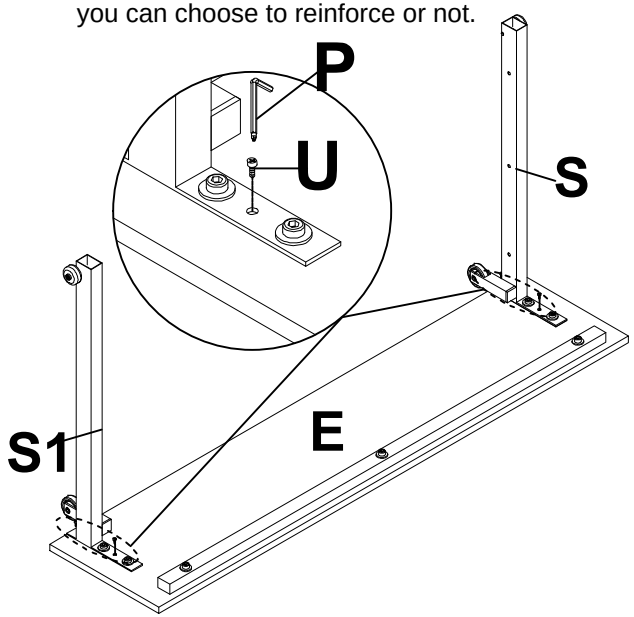Tips: Self-tapping screw is an auxiliary reinforcement function, you can choose to reinforce or not.




U x 4pcs M5X14mm	
P x 1pc	

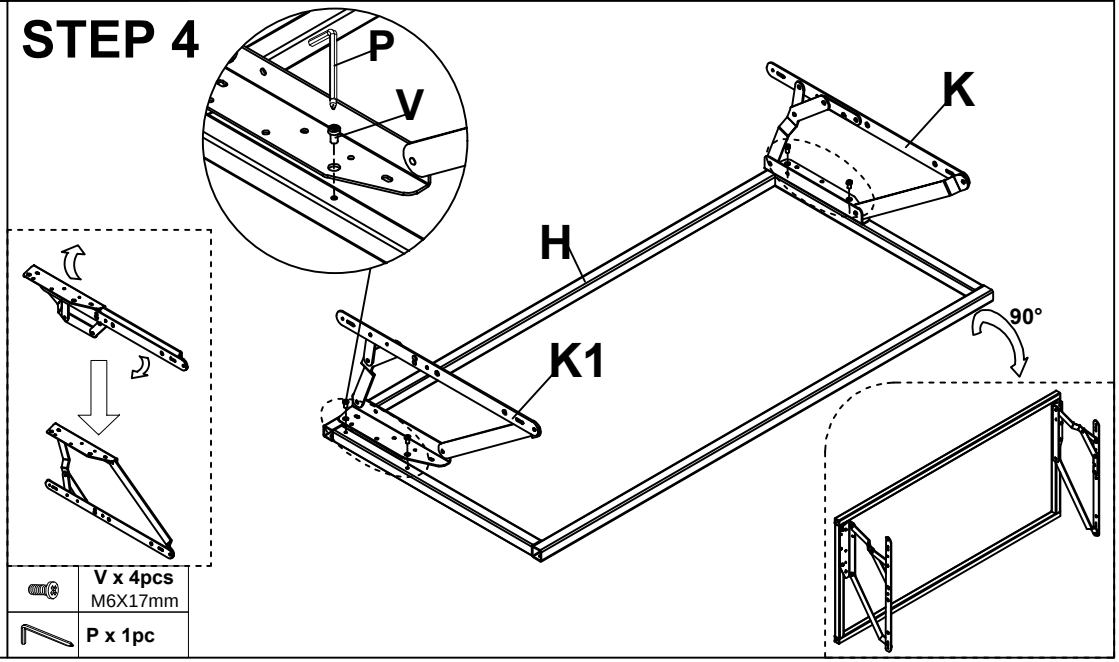STEP 4



V x 4pcs M6X17mm	
P x 1pc	

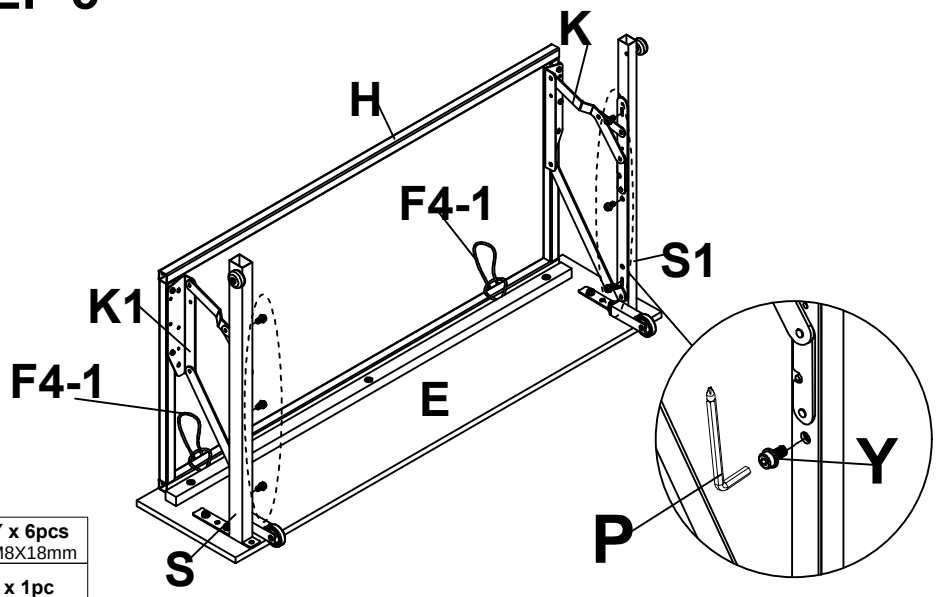
STEP 5




	Y x 6pcs M8X18mm
	P x 1pc

STEP 6

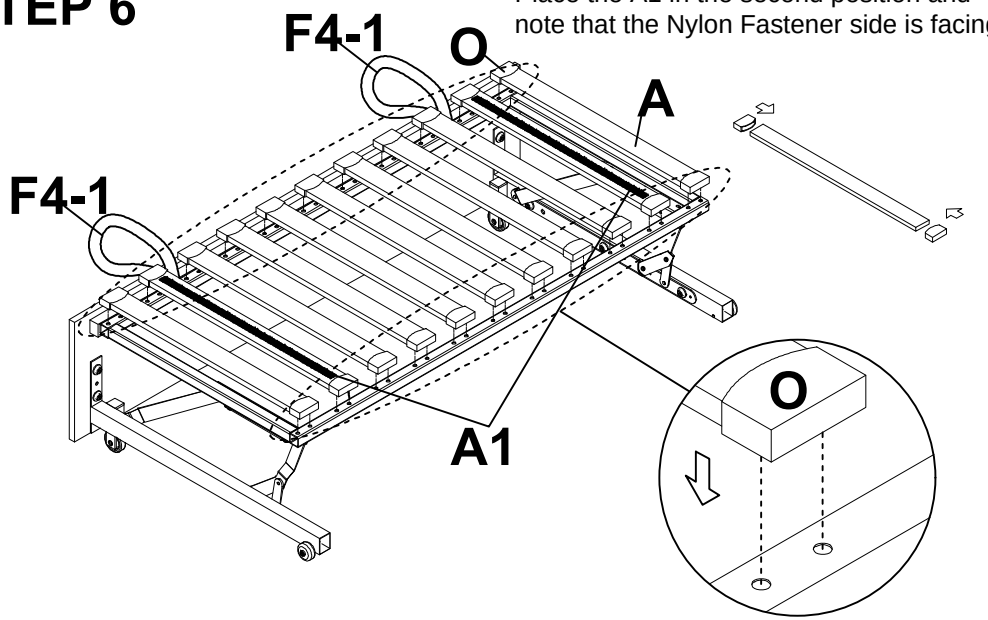Place the A1 in the second position and note that the Nylon Fastener side is facing up.




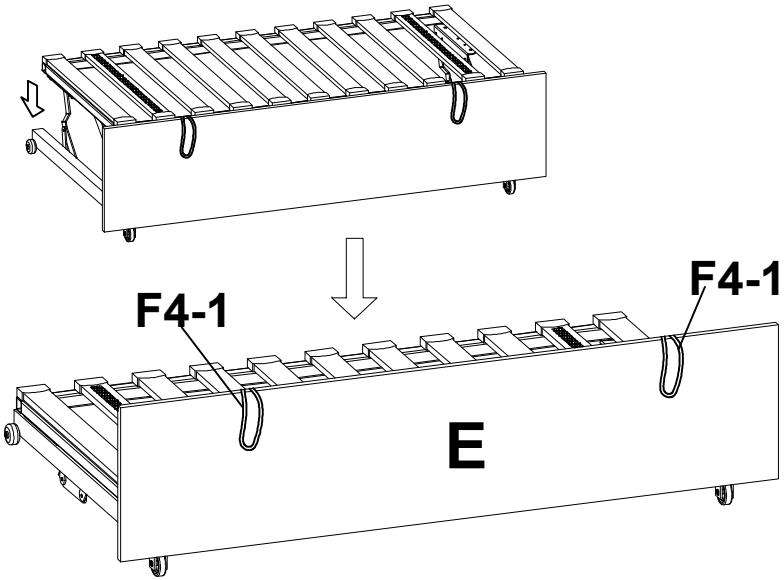STEP 7






Pull the drawstring to adjust the supporting frame.

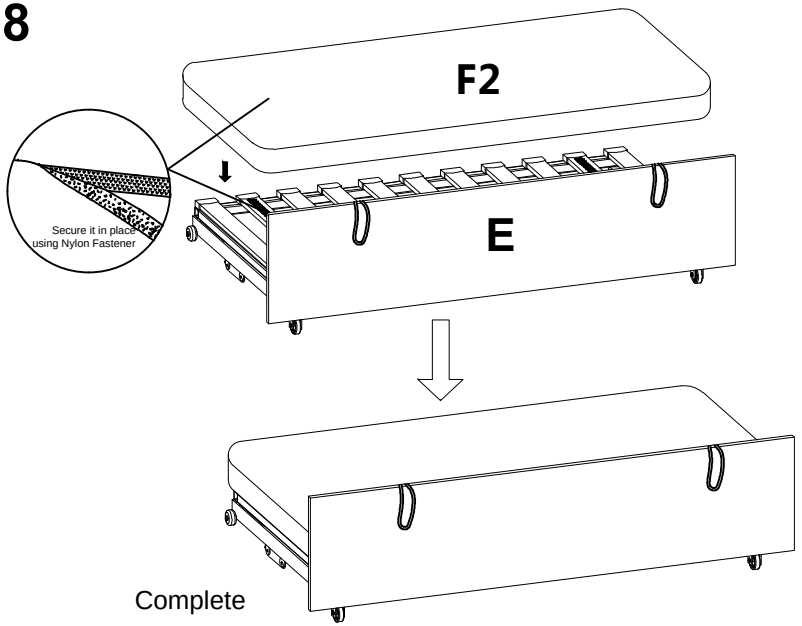STEP 8






Complete

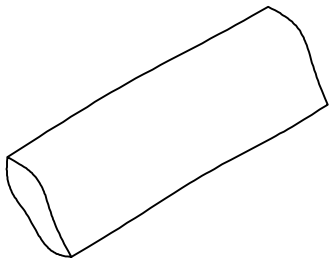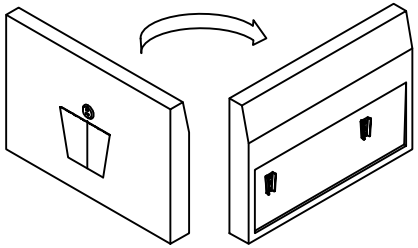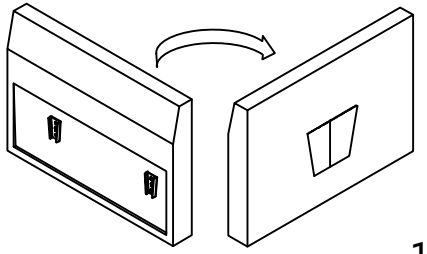
Main Structure Accessories

F5 Arm Cushion  2pcs	R1 Left Armrest  1pc	R2 Right Armrest  1pc

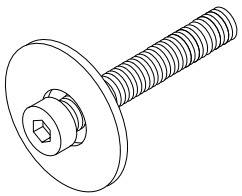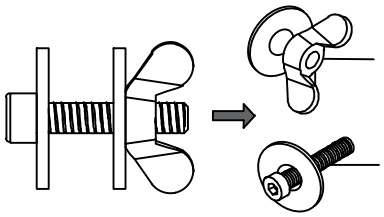
Structural Accessories

M Sofa Feet  4pcs	N1 M8X45mm Bolt  2pcs	T M8X50mm Bolt  1pc

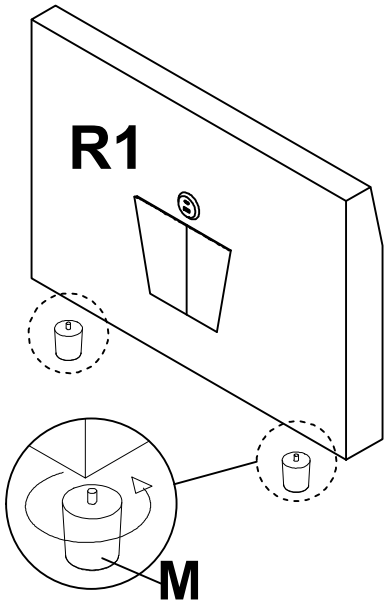STEP 1




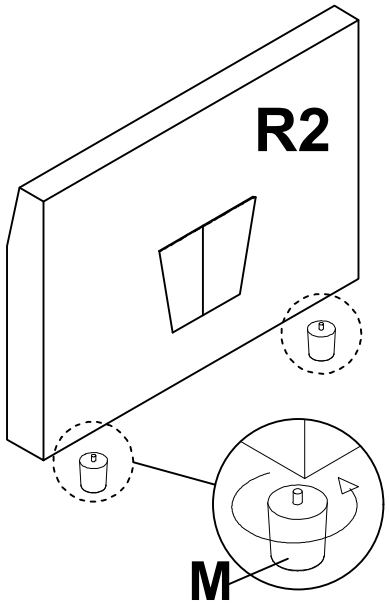STEP 2



Plan A (When the CHAISE is on the left)

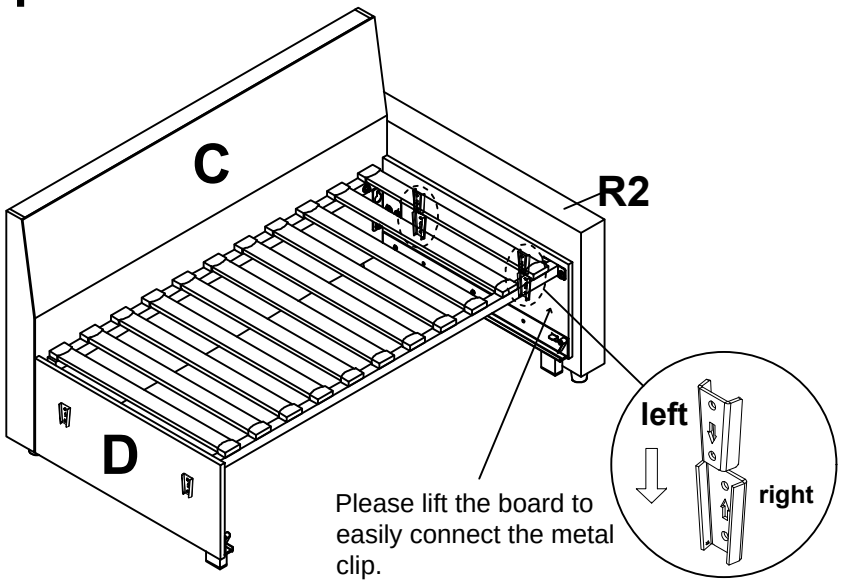
STEP 1




Please lift the board to easily connect the metal clip.

STEP 2

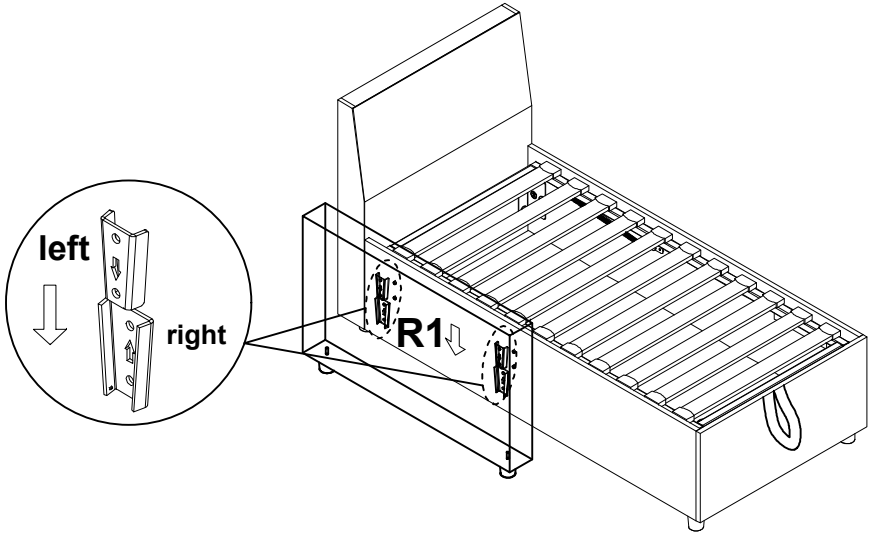Please lift the board to easily connect the metal clip.




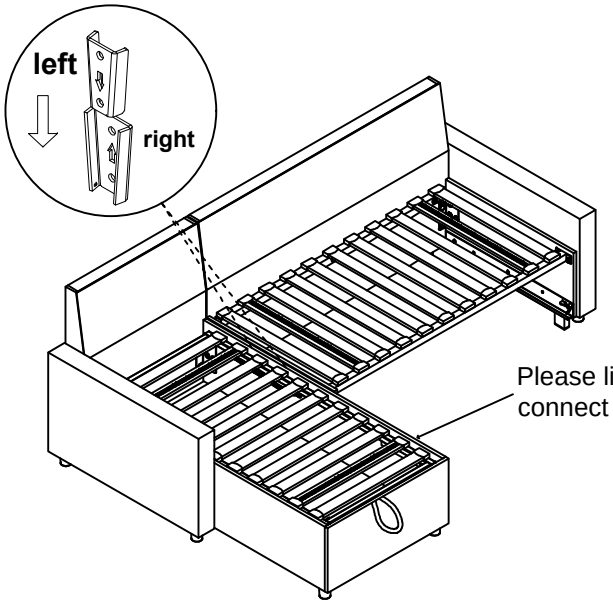STEP 3




Please lift the board to easily connect the metal clip.

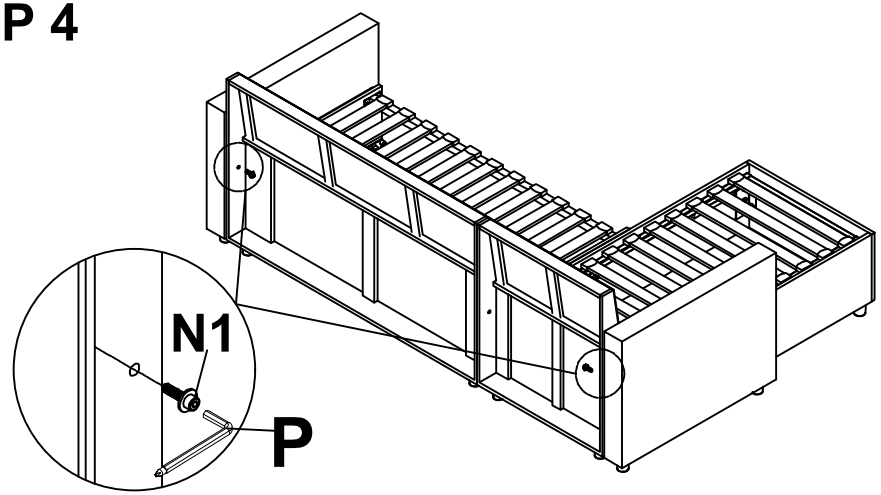STEP 4




Secure with locking screws

	N1 x 2pcs M8X45mm
	P x 1pc




Plan A (When the CHAISE is on the left)

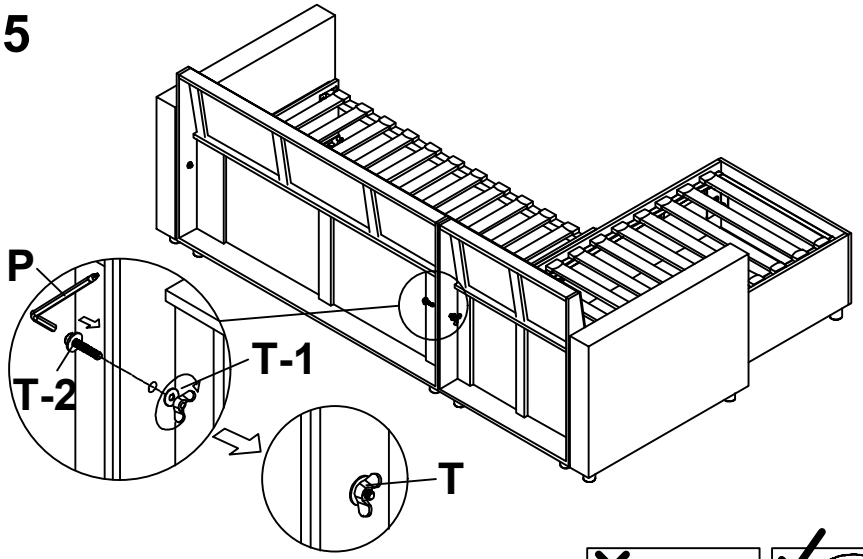STEP 5




	T x 1pc M8X50mm
	P x 1pc

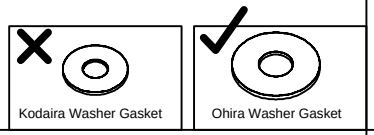Screw through hole and tighten with butterfly nut.




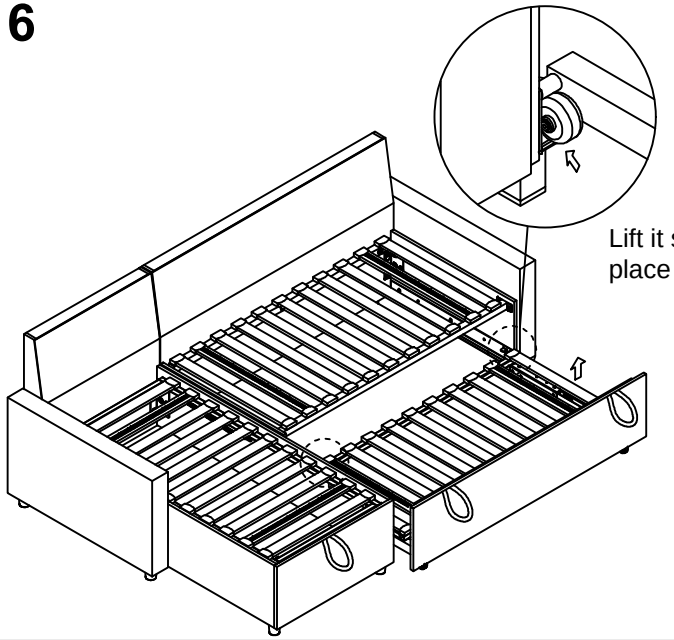STEP 6




Lift it slightly and place it on the track.

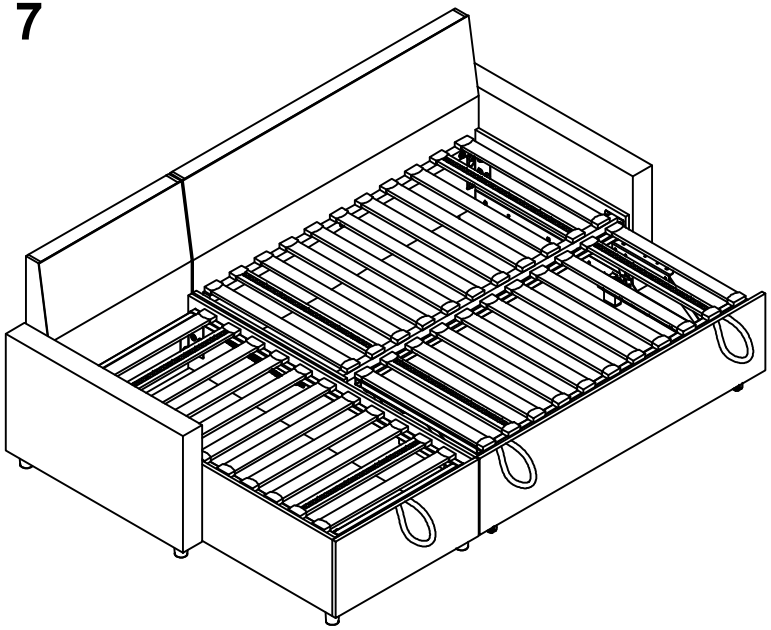STEP 7




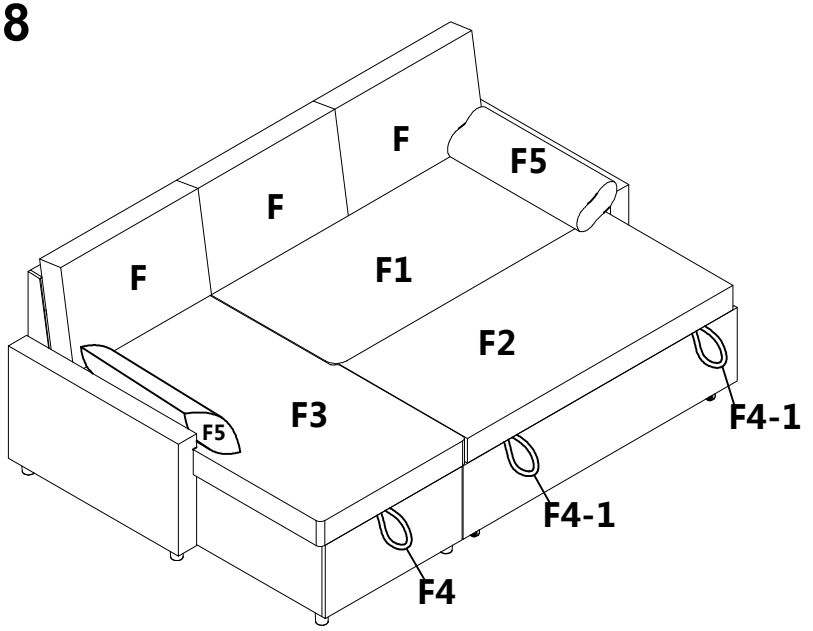STEP 8




Plan B (When the CHAISE is on the right)

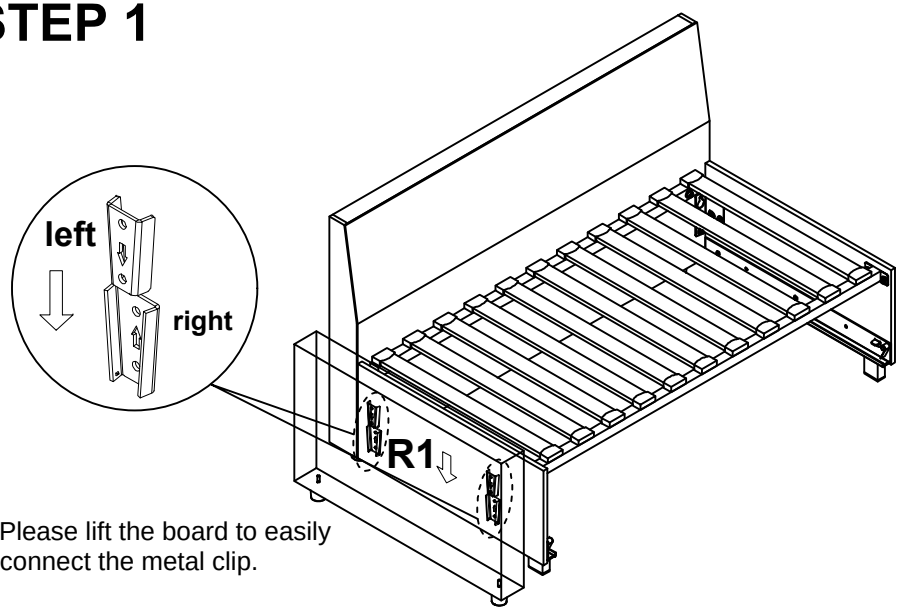STEP 1




Please lift the board to easily connect the metal clip.

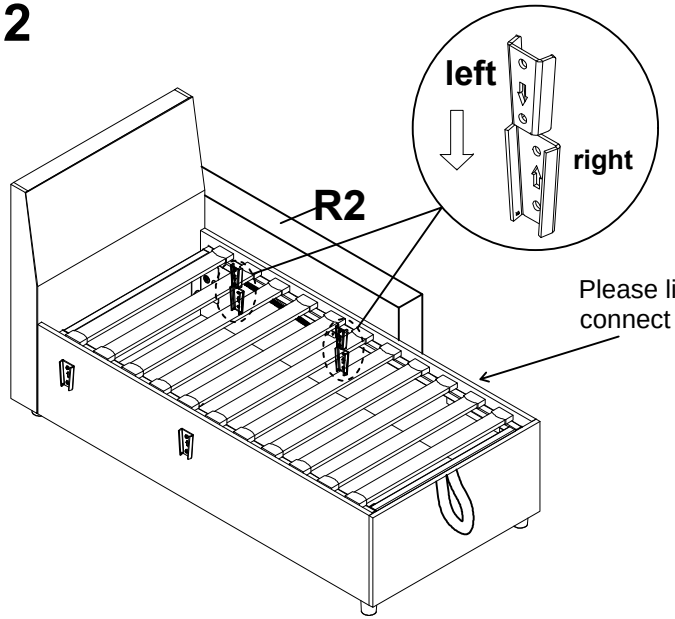STEP 2




Please lift the board to easily connect the metal clip.

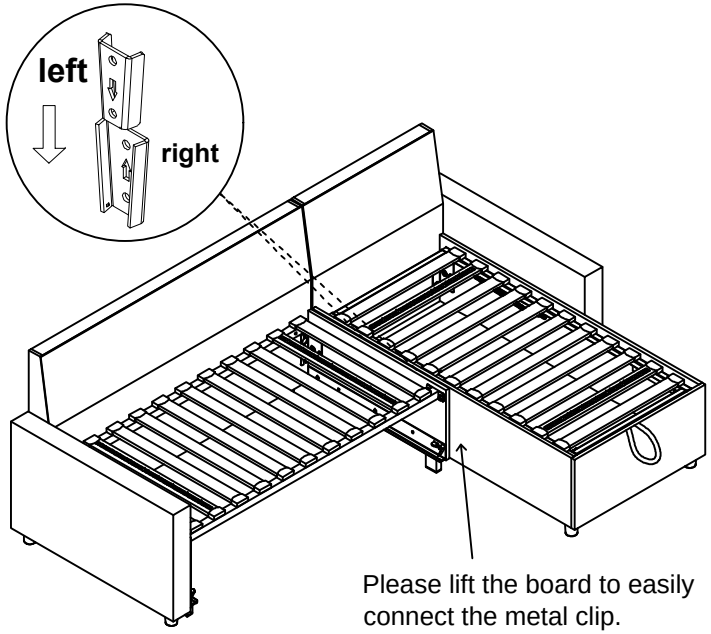STEP 3




Please lift the board to easily connect the metal clip.

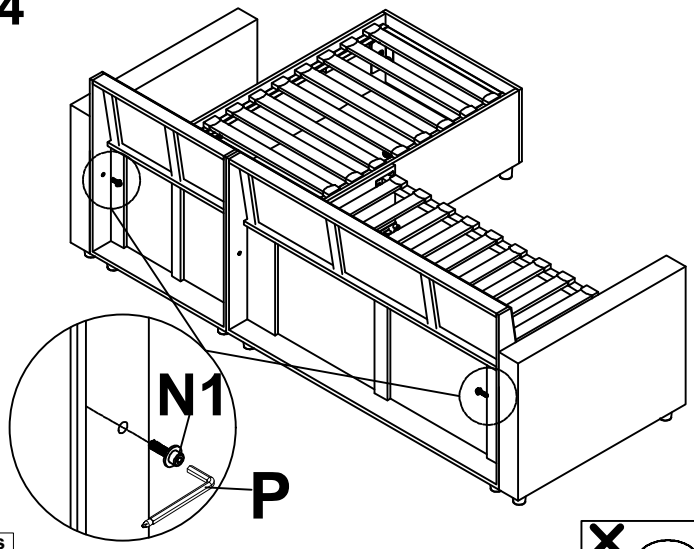STEP 4




N1 x 2pcs M8X45mm	
P x 1pc	

Secure with locking screws




Plan B (When the CHAISE is on the right)

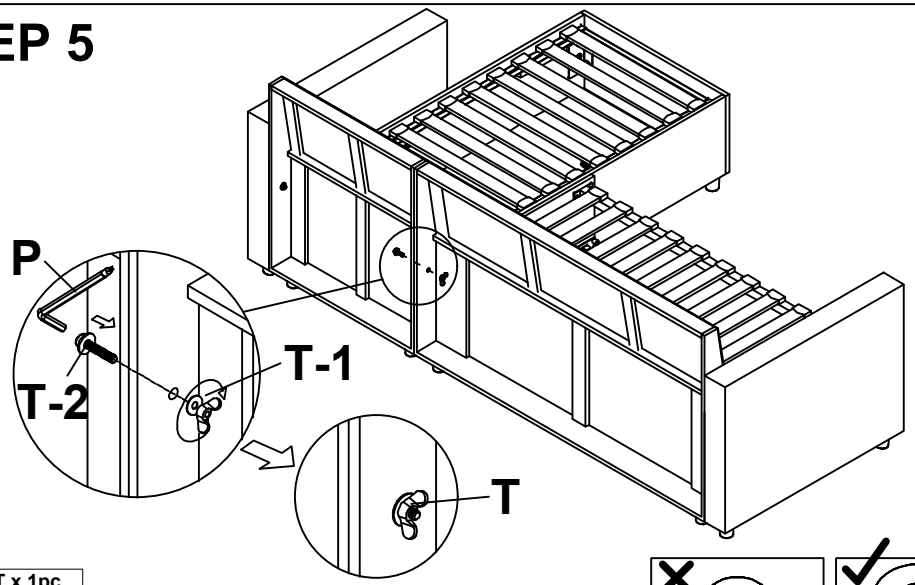STEP 5




	T x 1pc M8X50mm
	P x 1pc

Screw through hole and tighten with butterfly nut.




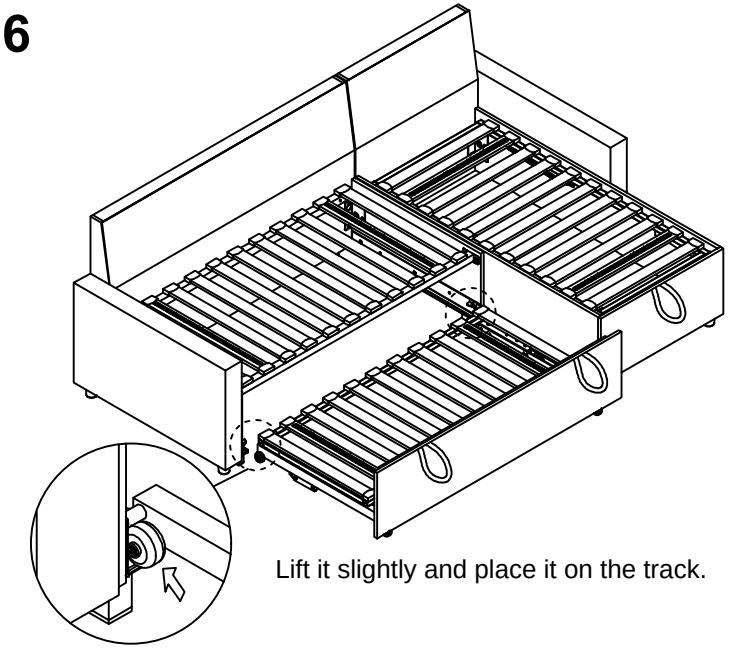STEP 6





Lift it slightly and place it on the track.

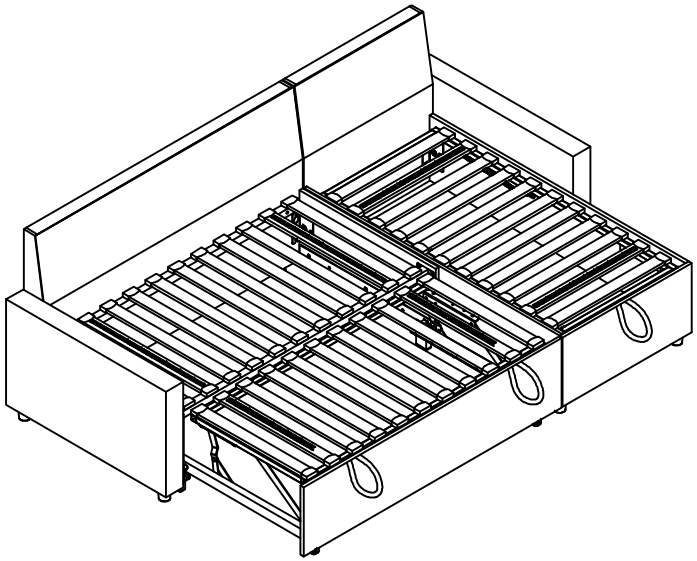STEP 7



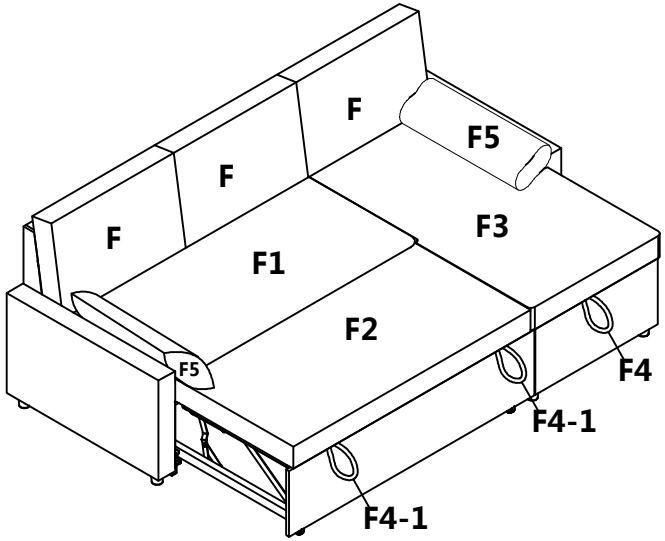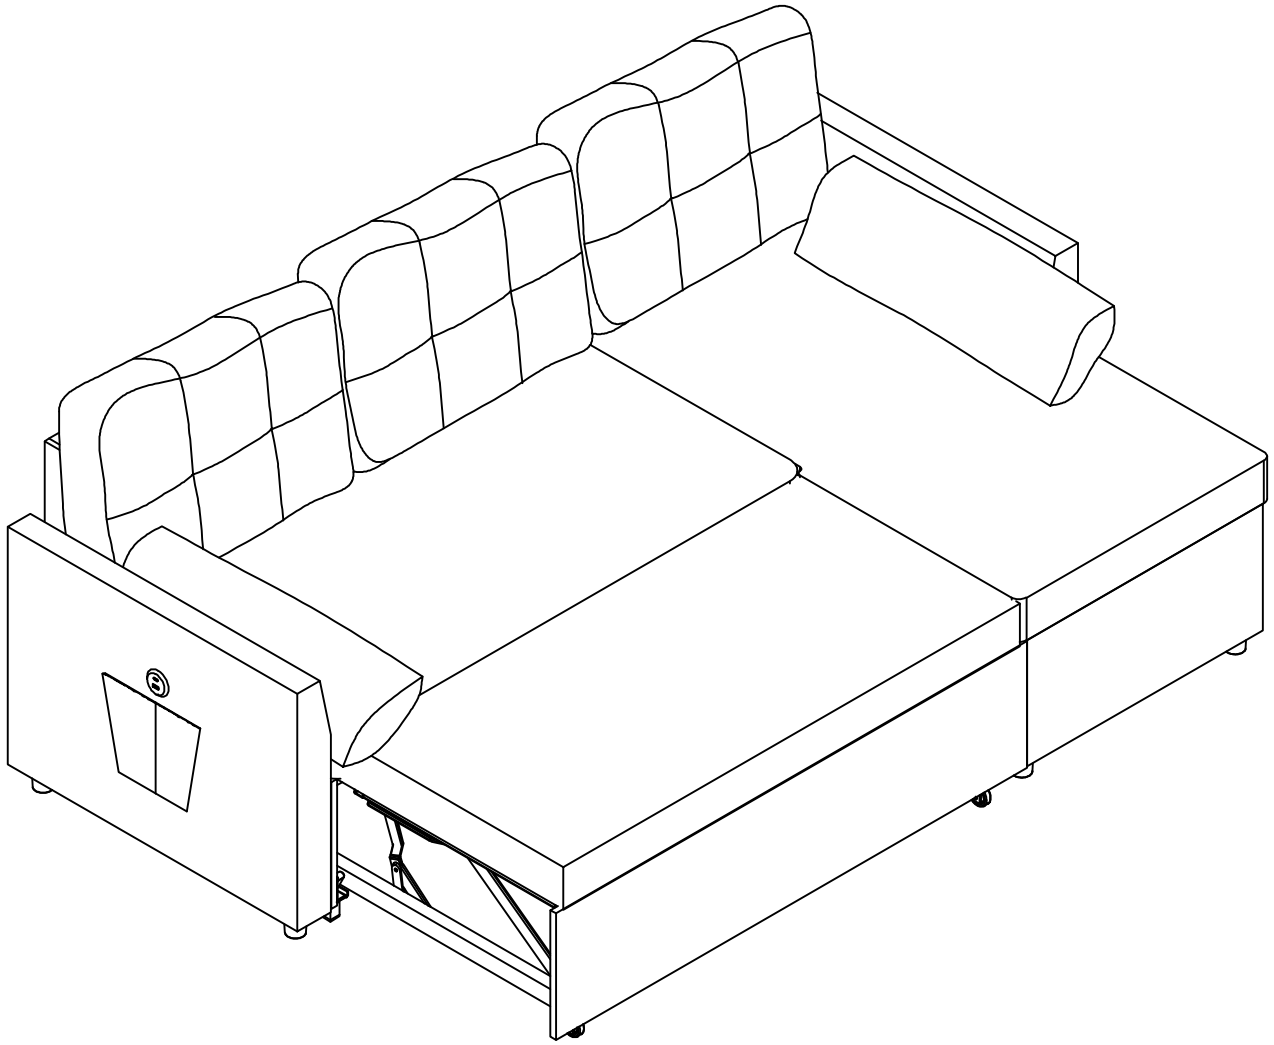STEP 8





finished product display