
Assembly Instruction

INSTRUCTION DE MONTAGE MONTAGEANLEITUNG SAMLEVEJLEDNING

MAKE SURE THE LETTERS MATCH BEFORE ASSEMBLING

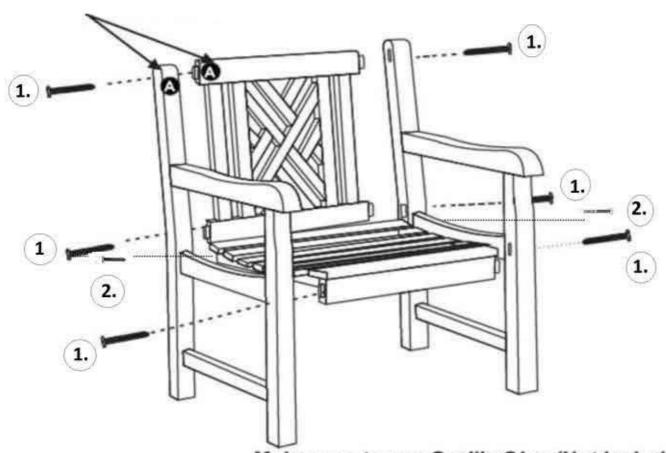

Make sure to use Gorilla Glue (Not Included) on all wood joints before assembly

Hardware



- 1. F. BOLT 60mm (6 pcs)
- 2. SCREW 30mm (4 pcs)

Tool



Socket Wrench 4m/m Ht

Total Section

4 Section