

# MITCHELL BLACK™


---

Premium (Unpasted) Wallpaper  
Preparation & Installation Guide

# MITCHELL BLACK™


## Premium (Unpasted) Wallpaper - Preparation Guide

### Wall Preparation :

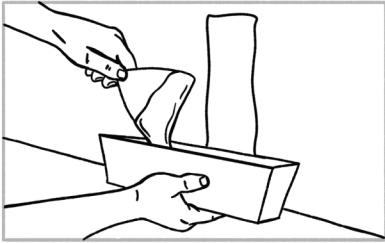


#### 1. Inspecting the wall :

Prepare all surfaces, including drywall, old paint, residual wallpaper, and any imperfections, if necessary. Fill chips, holes, and cracks, then sand and prime blank or repaired areas.

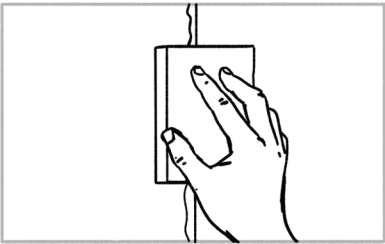


#### 2. Cleaning the wall :

For Matte Surfaces: Scrape flaking areas, sand flat, wash with all-purpose cleaner. For Glossy Surfaces: Clean thoroughly and seal with an acrylic primer. In rooms prone to mildew: Clean the walls with a bleach & hot water mixture.

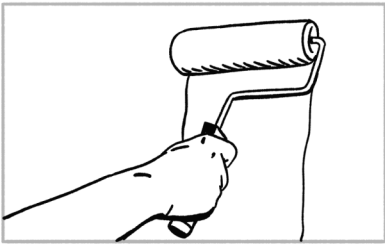

#### 3. Priming the wall :

Apply an even coat of acrylic primer to seal the wall against moisture. This coat will assist with wallpaper positioning. Allow the primer to cure for at least 48 hr. (If using paint allow up to 30 days for the paint to set.)

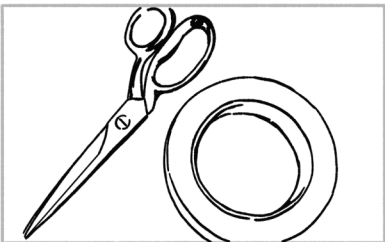


#### Additional Tips :

Use sharp tools and replace blades as needed.  
Smooth bubbles outward with gentle, even strokes to avoid creasing.  
Protect wallpaper edges from excess adhesive with painter's tape.  
For proper curing, avoid high humidity and maintain room temperature.

### Tools :


#### Installation Tools :

Medium Wallpaper Paste  
Microfiber Cloth  
Paint Brush or Paint Roller  
Pencil  
Seam Roller / Smoother  
Sharp Scissors  
Straight-Edge Level  
Utility Knife (& Spare Blades)  
Wallpaper Brush




#### Wall Prep Tools :

All Purpose Cleaner  
Bleach & Water (if needed)  
Painter's Tape  
Sandpaper  
Spackle (if needed)

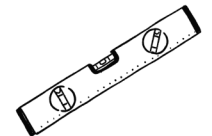


# MITCHELL BLACK™

## Premium (Unpasted) Wallpaper - Installation Guide

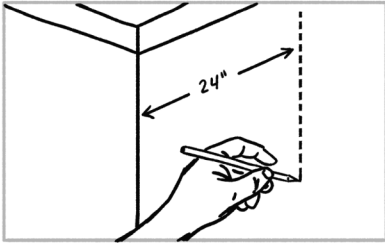

### 1. Create a Vertical Guideline :

Check the ceiling for level, then measure one wallpaper width (e.g., 24") from the corner and draw a vertical guideline for all of your panels to follow.

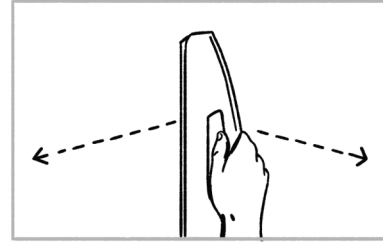


### 5. Smooth the Wallpaper :

Use a wallpaper brush or smoother to smooth from top to bottom and center outward, removing all bubbles. Unfold the lower section and repeat.




### 2. Cut and Paste the Wallpaper :

Trim your wallpaper adding a few inches of extra length for your wall height. Lay the wallpaper face down and apply a thin, even coat of medium/heavy weight premixed paste.

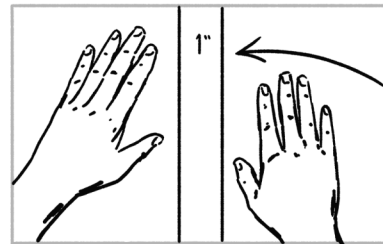


### 6. Apply Additional Strips :

Position each new strip with about 1" overlap to align the pattern. Smooth the wallpaper as you go.

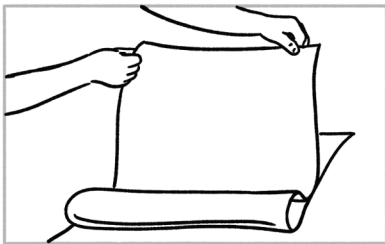


### 3. "Book" the Wallpaper :

Fold the bottom third up (paste to paste), then fold the top down to overlap slightly. Avoid creasing, and let the booked wallpaper rest for ~ 5 min.

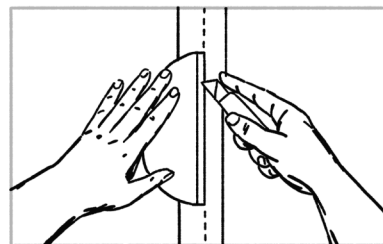


### 7. "Double-Cut" the Seam (Optional) :

Use a straightedge and knife to cut the overlap, leaving 1/2" of material on each side of the cut. Lift the seam to remove both 1/2" strips, then press the seam flat with a seam roller for a "butt-joint" look.

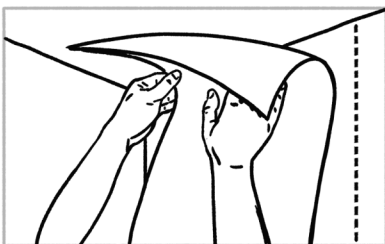

### 4. Hang the First Strip :

Unfold the top half of the booked wallpaper. Align it with the vertical guideline at the top and smooth it onto the wall.

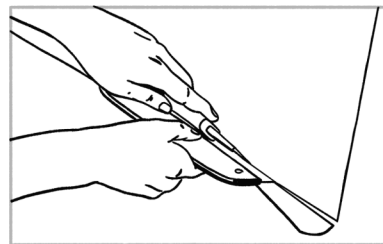

### 8. Final Trimming and Cleanup :

Trim excess wallpaper at the top and bottom with a sharp knife. Wipe away any extra paste with a damp cloth. Repeat for all strips.