


## IMPORTANT NOTE

- 1.PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED**
- 2.BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP**
- 3.DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP**

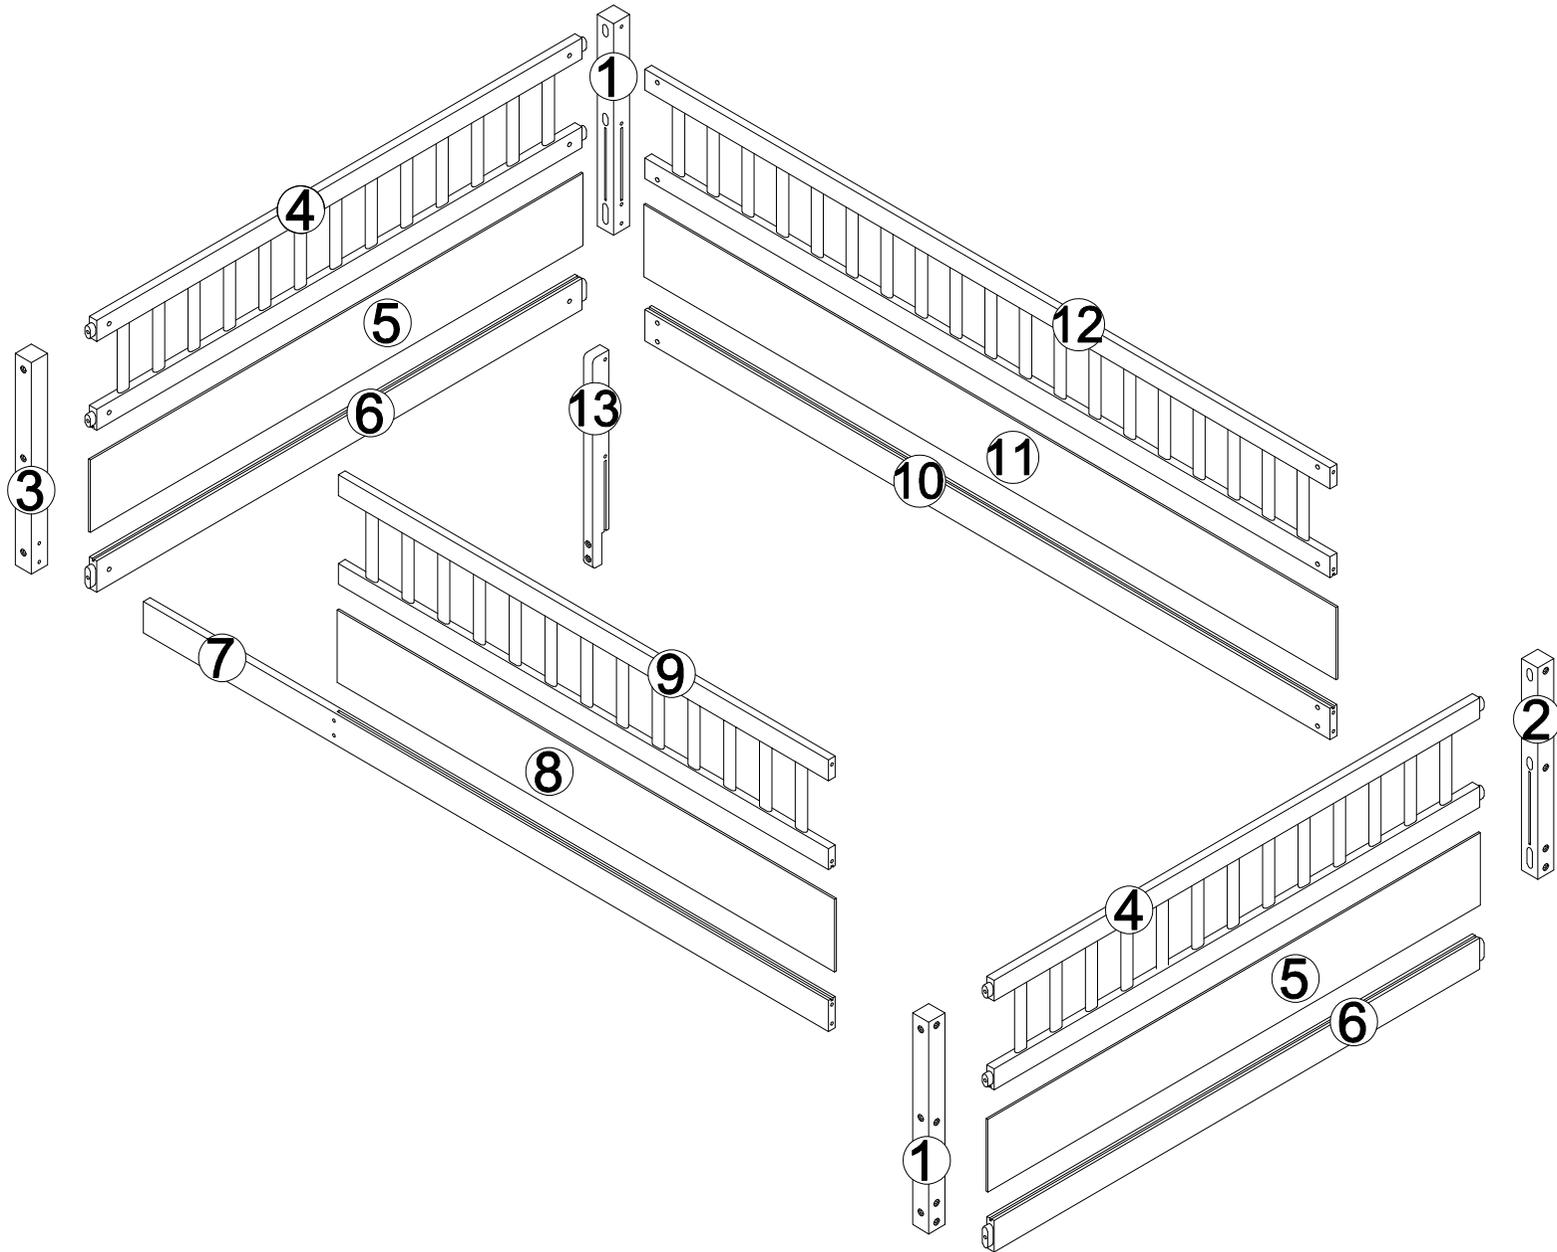

**1**



**Legs-2pcs**

**2**




**Leg-1pc**

**3**




**Leg-1pc**

**4**

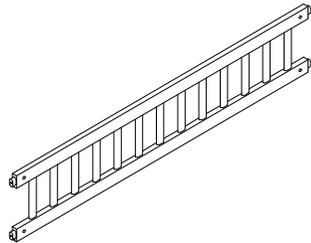

**Side Frames-2pcs**

**5**

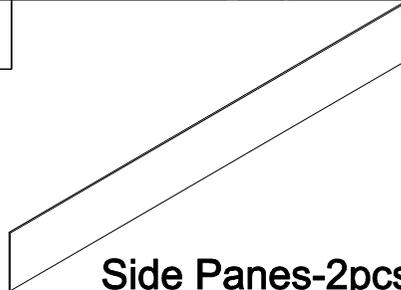


**Side Panes-2pcs**

**6**




**Wood Bars-2pcs**

**7**

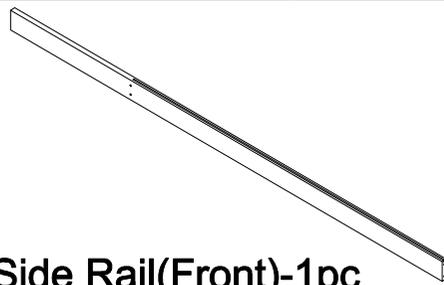


**Side Rail(Front)-1pc**

**8**

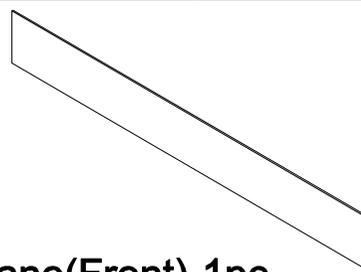


**Pane(Front)-1pc**

**9**

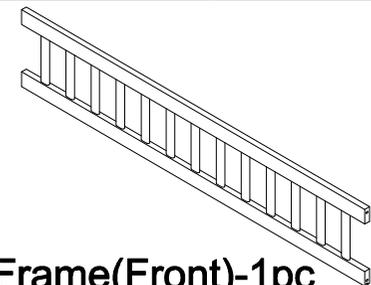


**Frame(Front)-1pc**

**10**

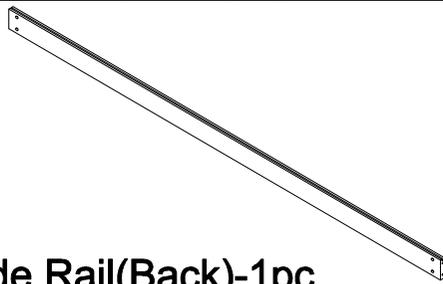


**Side Rail(Back)-1pc**

**11**

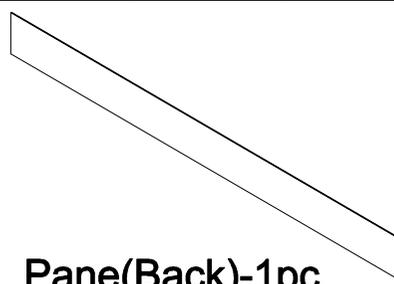

**Pane(Back)-1pc**

**12**

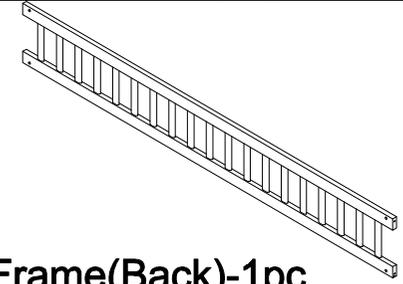

**Frame(Back)-1pc**


**13**



**Rail-1pc**

**HARDWARE LIST**

**A**

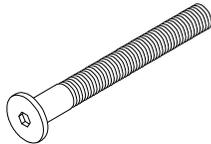


**Ø1/4" x 80 mm  
Hex-Head bolts 26pcs**

**B**



**Ø1/4" x 13 mm  
Horizontal-Hole bolts 28pcs**

**C**

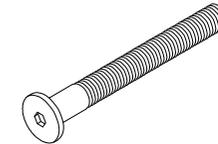

**Ø1/4" x 70 mm  
Hex-Head bolts 2pcs**

**D**




**Ø1/4" x 15 mm  
Canopy head through -2pcs**

**E**




**Ø1/4" x 35 mm  
Hex-Head bolts 2pcs**

**F**





**Allen Key 1pc**




**Assembly Tools Required (Not Included)**


STEP 1:

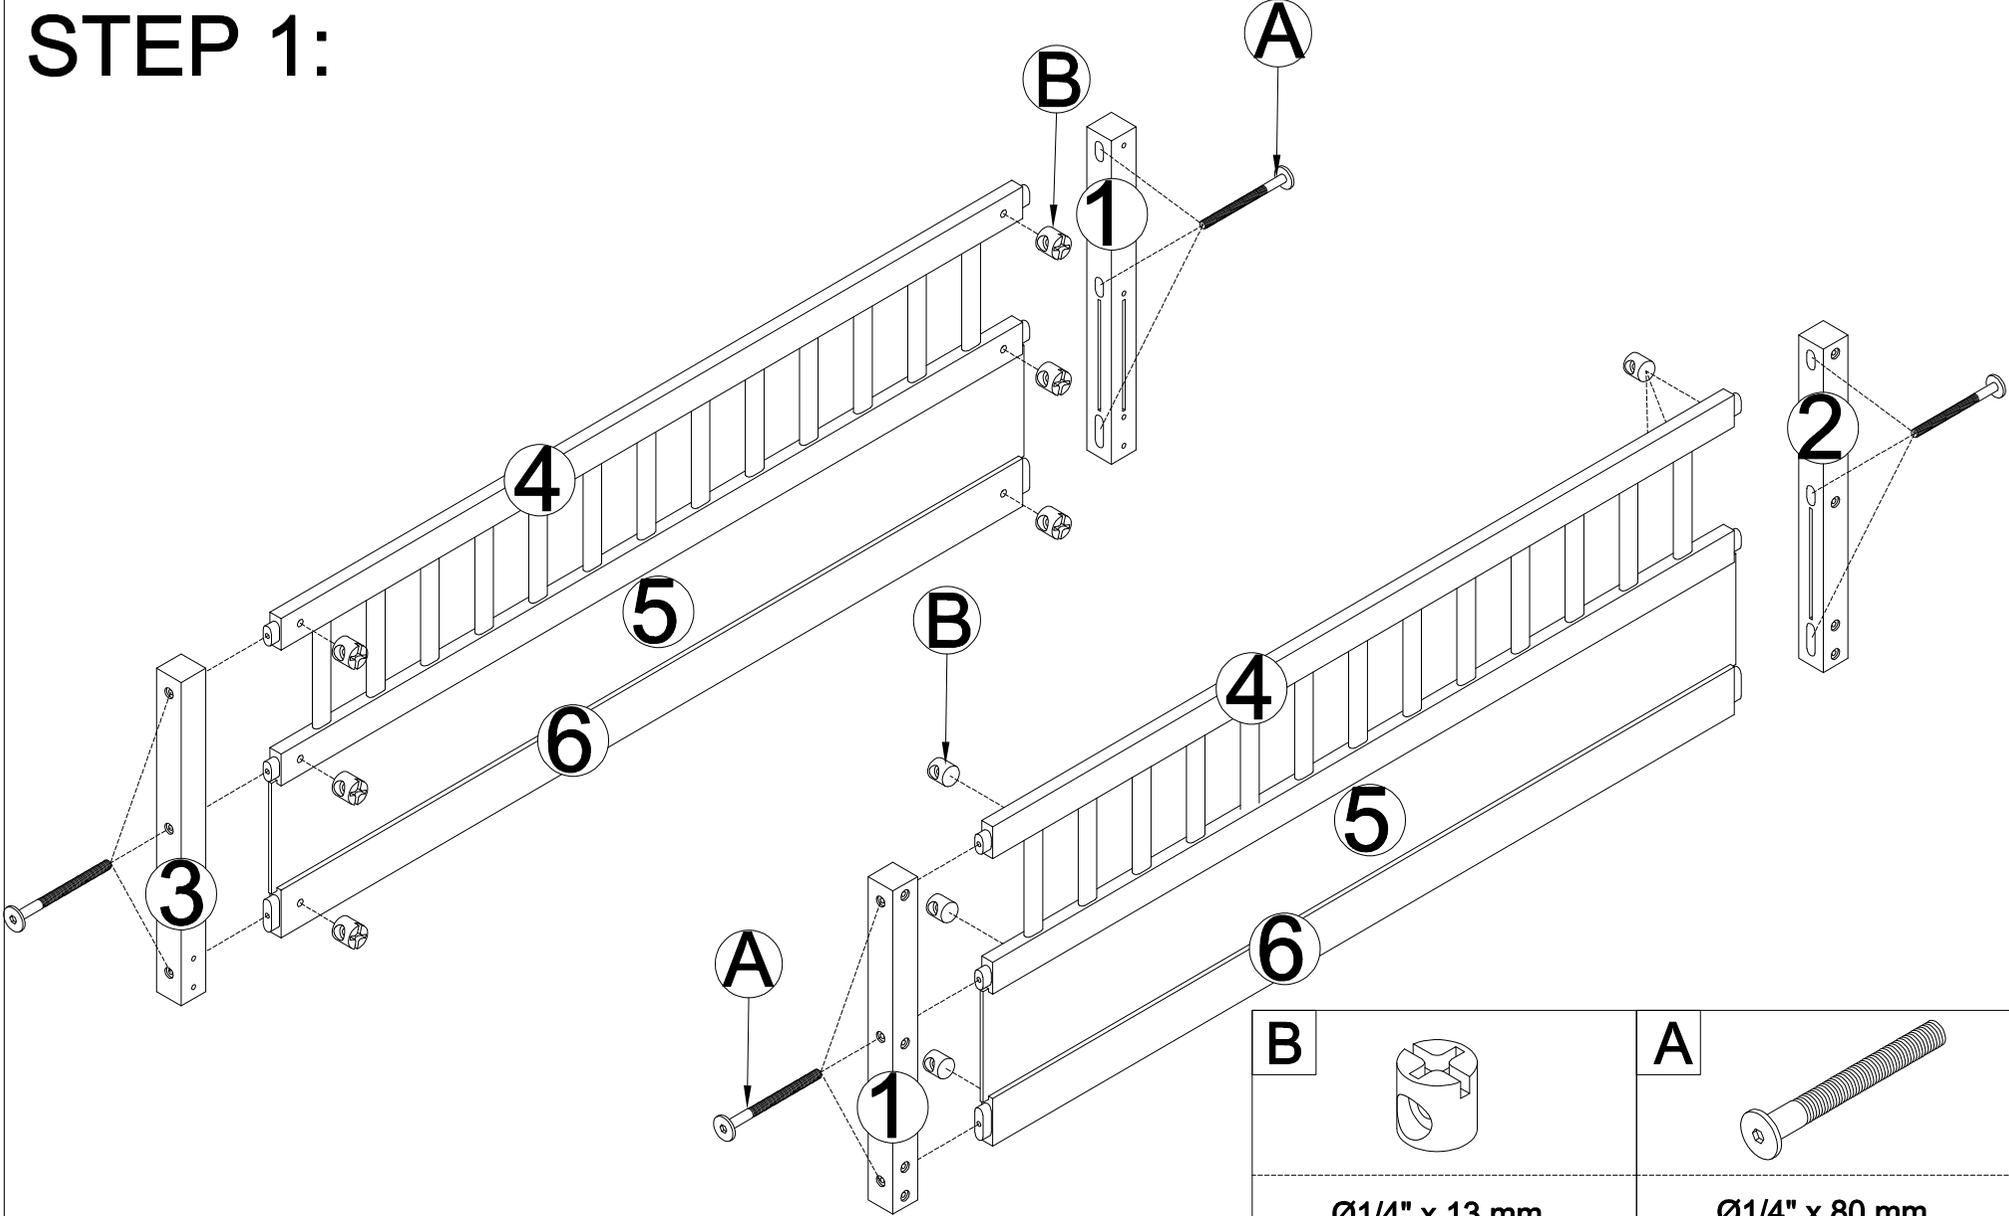

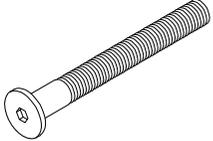
<b>B</b> 	<b>A</b> 
Ø1/4" x 13 mm Horizontal-Hole bolts 12pcs	Ø1/4" x 80 mm Hex-Head bolts 12pcs

STEP 2:

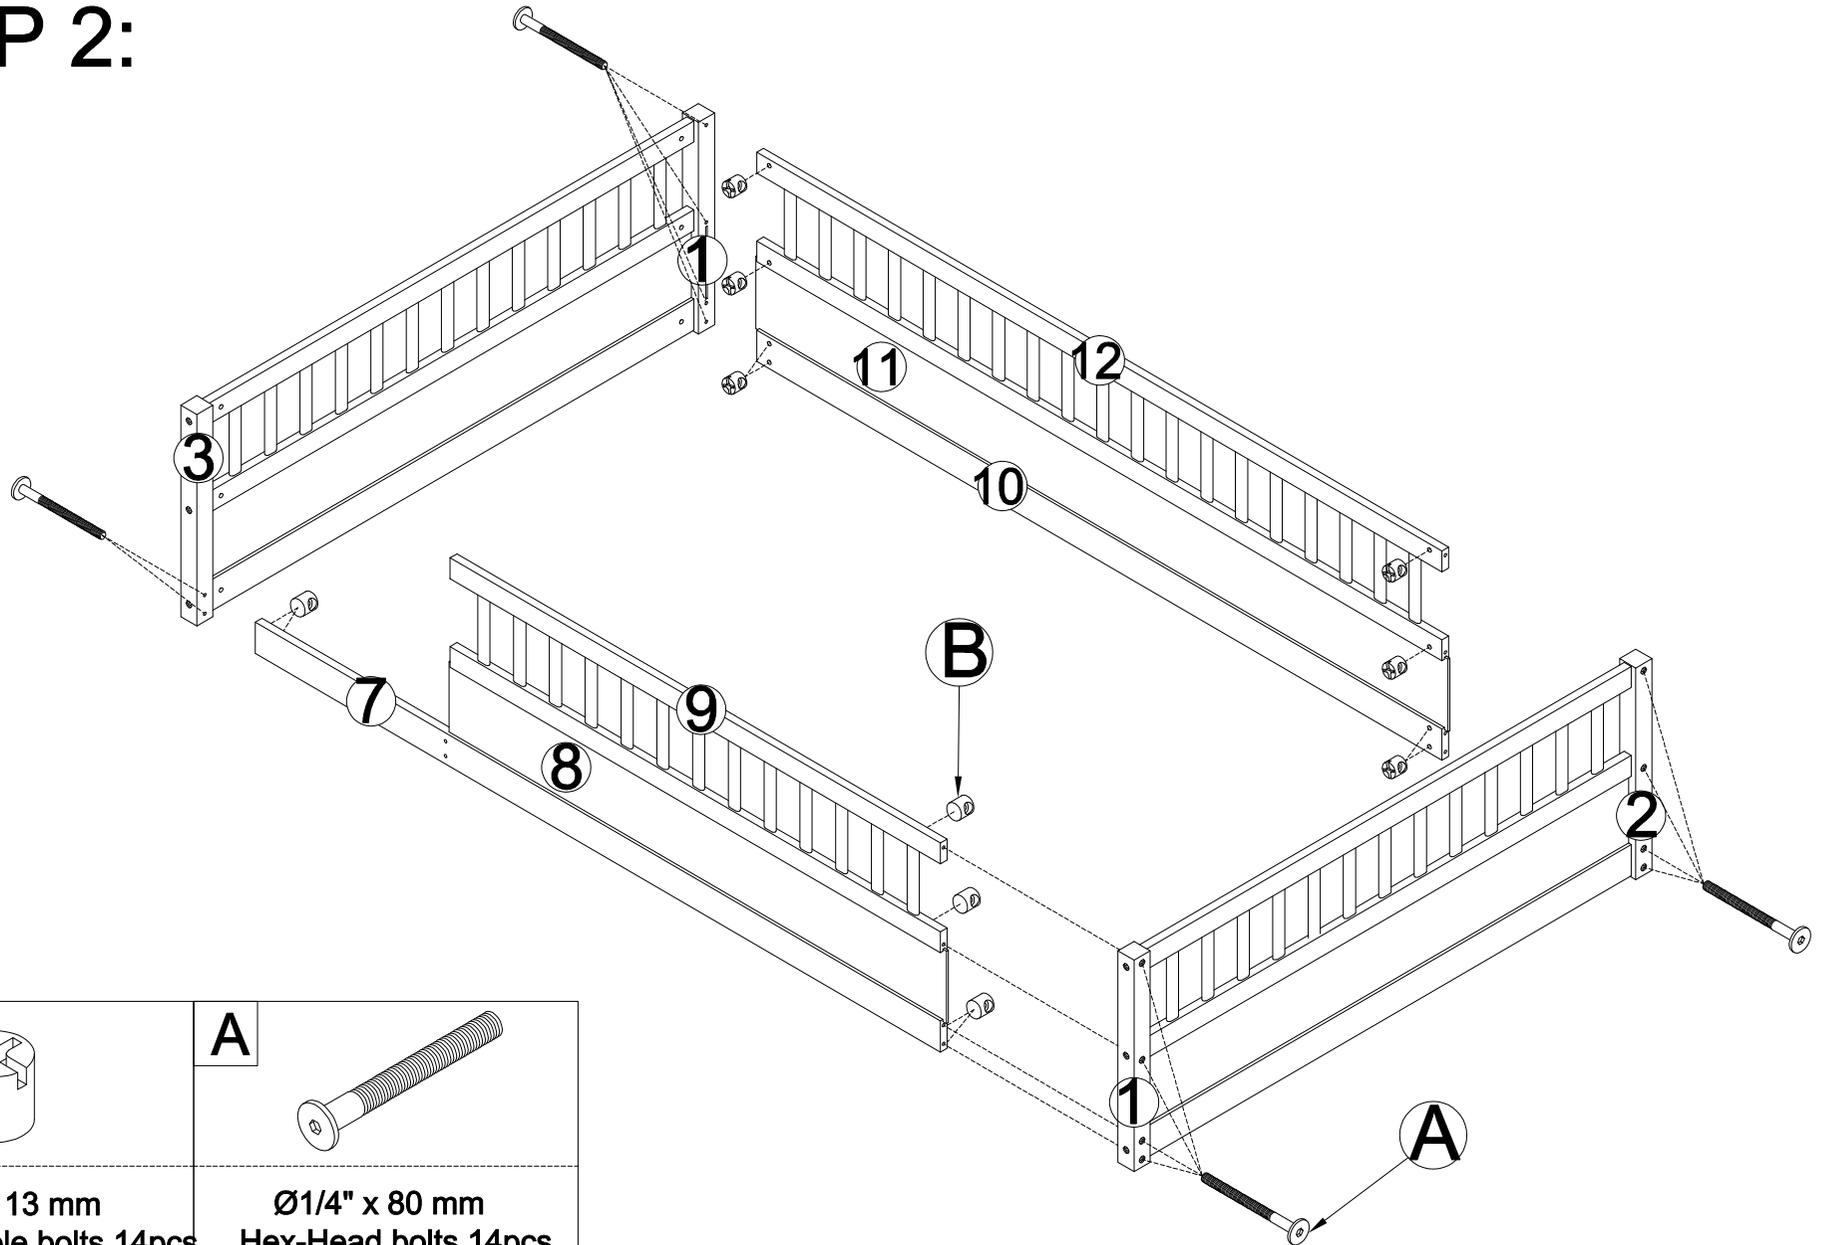

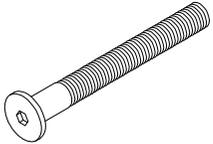
<b>B</b> 	<b>A</b> 
Ø1/4" x 13 mm Horizontal-Hole bolts 14pcs	Ø1/4" x 80 mm Hex-Head bolts 14pcs

## STEP 3:

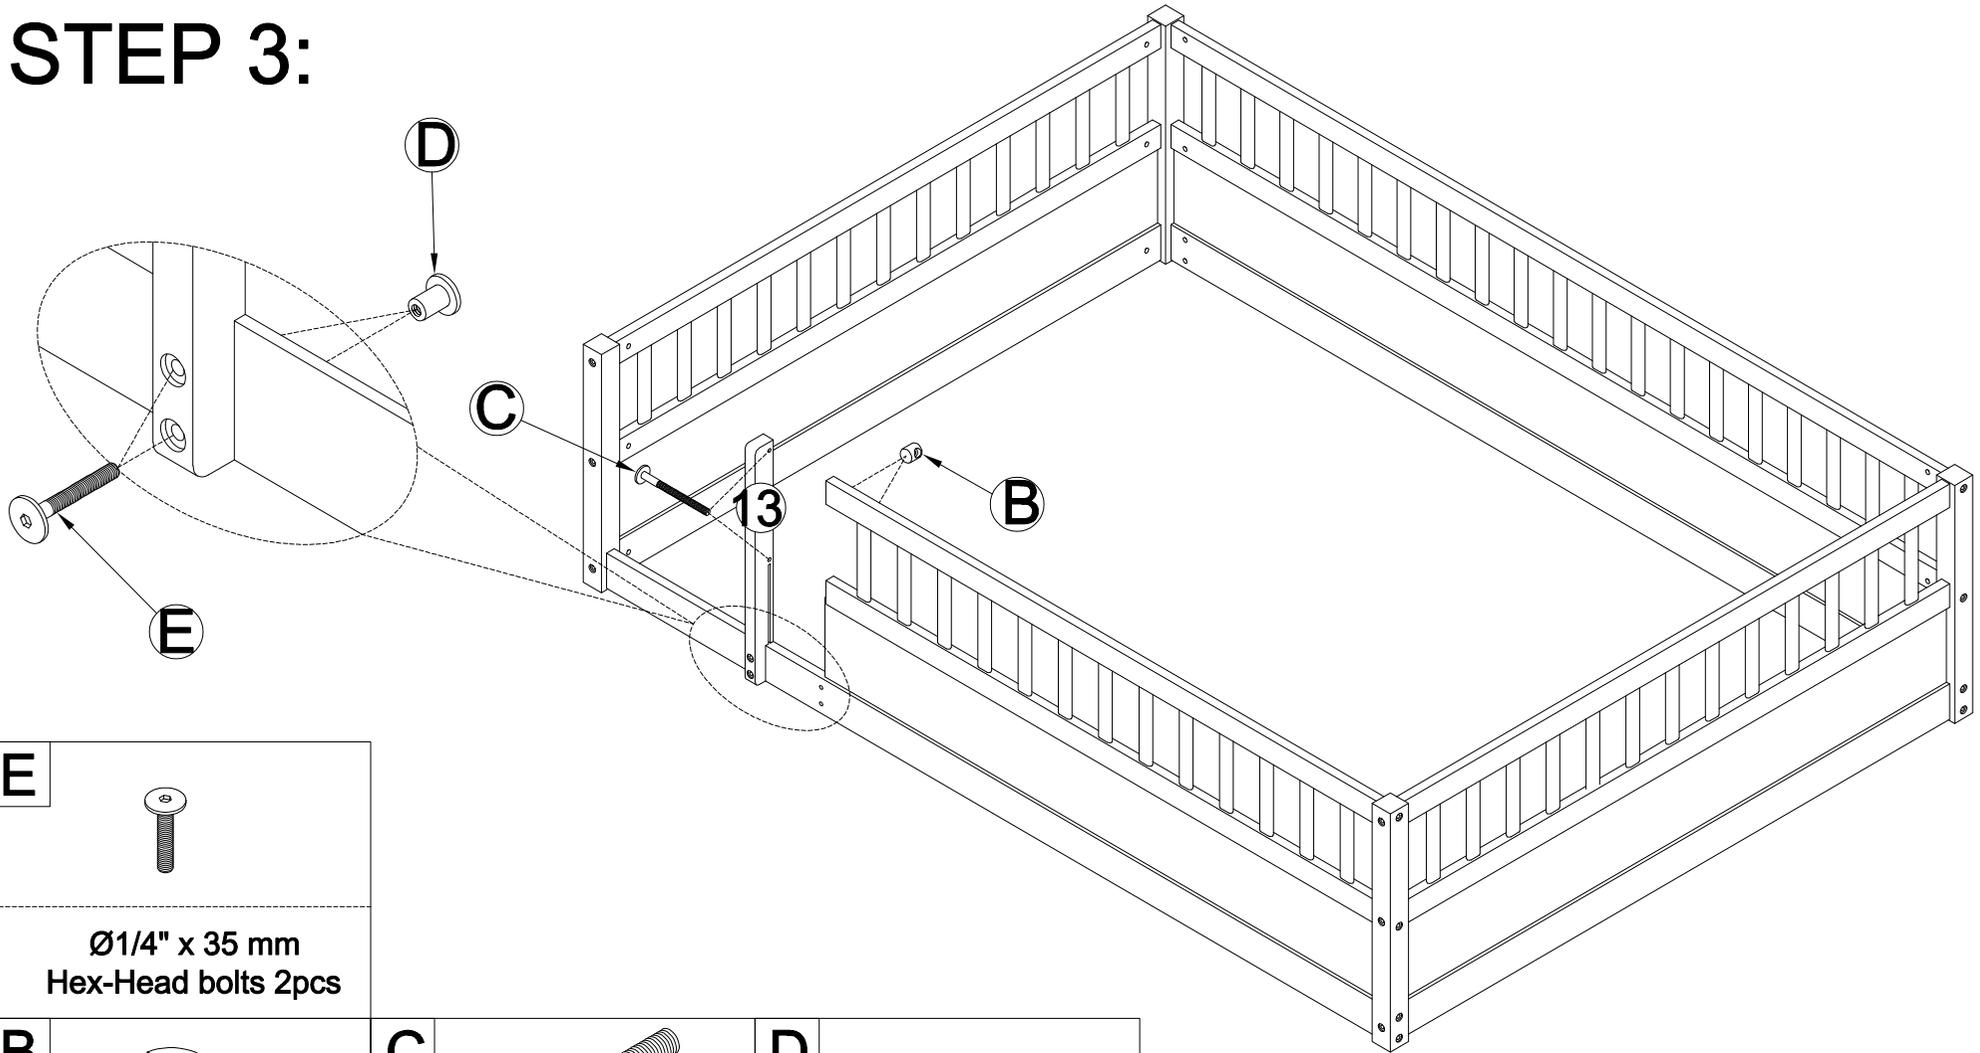

<b>E</b>	
<p>Ø1/4" x 35 mm Hex-Head bolts 2pcs</p>	

<b>B</b>	
<p>Ø1/4" x 13 mm Horizontal-Hole bolts 2pcs</p>	
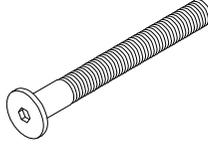
<b>C</b>	
<p>Ø1/4" x 70 mm Hex-Head bolts 2pcs</p>	

<b>D</b>	
<p>Ø1/4" x 15 mm Canopy head through-2pcs</p>	