


# Assembly Instructions

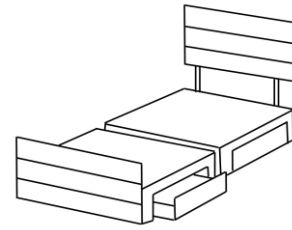

## Contents

1 x Headboard with 2 wooden Struts and 4 small M5 Bolts (attached) if you have a floor standing headboard no struts or M5 bolts are required

for 3FT there is 1 x Base, For 4FT, 4FT6, 5FT, 6FT there are 2 x Bases

if drawers ordered these are inside the bases.

8 x Feet/Wheels

2 x Large M8 Bolts to attach Base

2 x Metal U-Clamps

if the Bed purchase contains footboard this will be included separately and will contain 4 x M8 bolts to attach.

## Step1:

Remove the Packaging carefully being mindful not to damage / cut the Bed

To attach the Feet turn both bases on their side and just Pop the feet/wheels into the castor sockets at the bottom of each base (4 per base) do not use a hammer as this can damage them.

Then identify which piece is for the Head end of the bed and Foot end. The head end of the bed should usually contain stickers to identify "headboard bolt goes here" or they may have the headboard bolt pre attached.

If you have purchased a bed which contains the drawers on the foot end then the base that contains the drawers will be the foot end base and the base that has 0 drawers will be the base that attaches to the headboard

If you have purchased a bed which is 2 drawers same side you will have stickers that represent "headboard bolt goes here" on both bases, this is so you can choose which side you would like your drawers. For this you will have to pierce a hole in the fabric to allow the headboard bolt to screw in.

To attach the headboard to the base

If a 26" headboard – the m5 bolts will be pre attached to the headboard you will be required to loosen one of the bolts to align the hole on the wooden struts then re attach the bolt ensuring the strut is secured with both bolt. Once the struts are both securely in place you can begin attaching the headboard to the base.

Loosen the bolts on the base if they are pre attached to allow the wooden strut to attach

Firstly Turn the bases onto its side carefully and add the irstly Assemble the Footboard to one of the Bases to identify which base remove the drawers and on the inside you will see Holes in the Wood that do not have any inserts these then allow to slide through.

After holes have been identified pierce the fabric creating a hole for the bolt to go through

Insert Smaller M5

Bolts and Washer from the inside and attach to the back of the Footboard until tight do not force the screw ensure it is correctly aligned

Lastly once completed put the drawers back in place

### **Step 2:**

To attach the Feet turn both bases on their side and just Pop the feet into the castor sockets at the back of each base (4 per base) do not use a hammer as this can crack the feet

To attach the Metal U clamps ensure both square sides of the bases are to be joined then simply Hit them in place to join the bases together, this step causes you to pierce the Black plastic fabric on the bottom of the bases

Once completed put the bed back down on the floor

### **Step 3:**

To Attach the Headboard firstly on the headboard itself you must remove 2 screws turn the strut sideways and then put the screw back in, then tighten all 4 screws ensuring the struts are tight these are smaller m5 bolts

Look for the Headboard Bolt here sticker on the base, have a feel for the hole with your finger and pierce the fabric creating a hole for the bolt to enter, then simply attach the Larger M8 Bolt and Washer into this not screwing in all the way,

Lastly Slide the Headboard struts into the M8 Bolts once in the correct position and Height tighten bolts ensuring headboard is secure

You have now assembled your bed take a step back and Enjoy 😊