


PRODUCT DRAWING

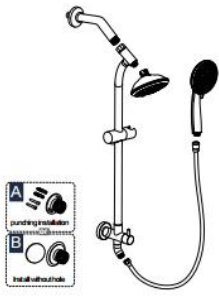

RECOMMENDED TOOLS



INSTALLATION STEPS

BEFORE YOU BEGIN

MAIN WATER VALVE OFF

1. Remove the old showerhead.
2. Mark the wall for the new showerhead.
3. Install the showerhead. **✓** Correct installation. **✗** Incorrect installation (not flush).
4. **A PUNCHING INSTALLATION** OR **B INSTALL WITHOUT HOLE**.
 - A PUNCHING INSTALLATION:** Use a punch tool to create a hole in the wall.
 - B INSTALL WITHOUT HOLE:** Use a sucker and clockwise rotation to install the showerhead.
5. Attach the showerhead to the wall.
6. Attach the handheld showerhead to the showerhead.

HANDHELD SHOWERHEAD & RAIN SHOWER COMBO

Installation instruction



Not include valve
MB / BN / BG / CH / ORB

CARE INSTRUCTIONS

Rinse the product with clear water. Dry the product with a soft cloth.

DO NOT:

Use abrasive cleansers, cloths, or paper towels. Use any cleaning agents containing acid, polish, wax, alcohol, ammonia, bleach, solvent or any other corrosive or harsh chemical cleansers.