

Functional Table

Assembly Instructions - Please keep for future reference

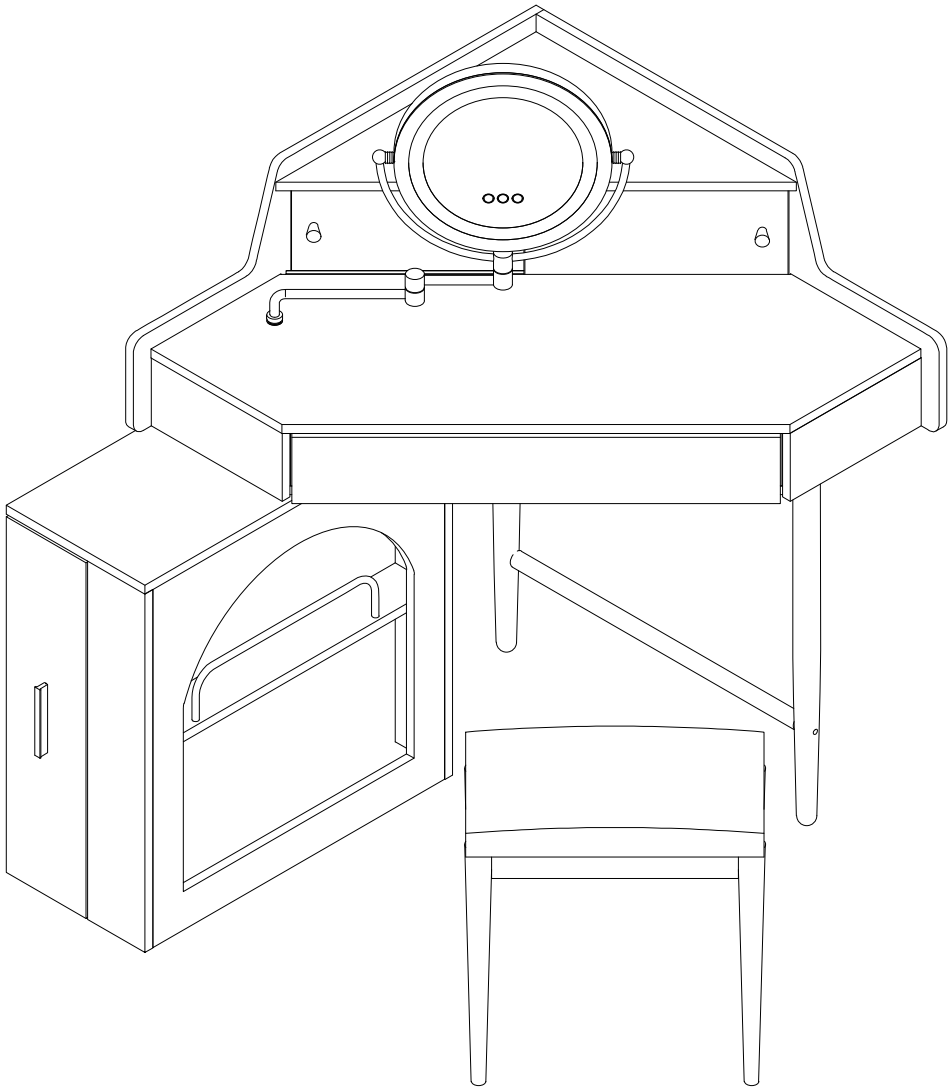

Important – Please read these instructions fully before starting assembly

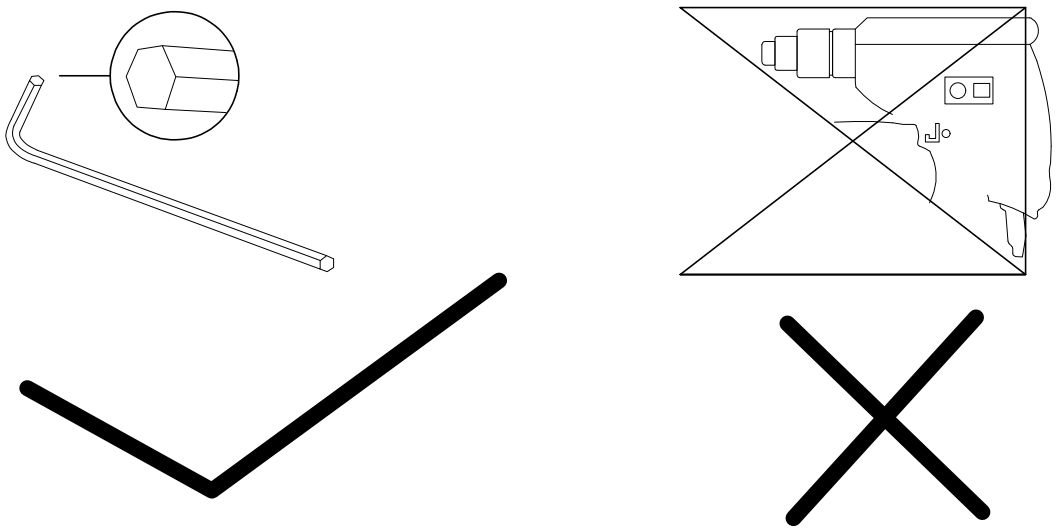

(DE): Verwenden Sie beim Anbringen der Tischplatte keinen Bohrer! Bitte verwenden Sie die im Paket enthaltenen Werkzeuge.

(UK): Do not use an electric drill when installing the desktop! Please use the tools provided in the package.

(FR): Ne pas utiliser de perceuse électrique lors de l'installation du plateau de table ! Veuillez utiliser les outils fournis dans l'emballage.


(IT): Non utilizzare un trapano elettrico durante l'installazione del piano del tavolo! Si prega di utilizzare gli strumenti forniti nella confezione.

(ES): ¡No utilice un taladro eléctrico al instalar el escritorio! Por favor, use las herramientas incluidas en el paquete.

(NL): Gebruik geen elektrische boormachine bij het monteren van het tafelblad! Gebruik de meegeleverde gereedschappen uit de verpakking.


(SE): Använd inte en elektrisk borrmaskin vid montering av bordsskivan! Använd de verktyg som medföljer i förpackningen.

(PL): Nie używaj wiertarki elektrycznej podczas montażu blatu! Użyj narzędzi dołączonych do opakowania.

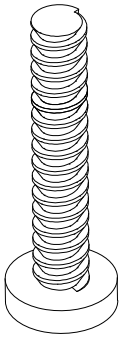


BOLT
M6*60mm

Ⓛ

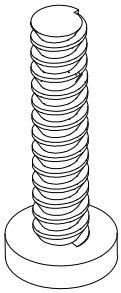


BOLT
M6*50mm

Ⓡ

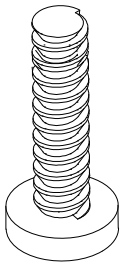


BOLT
M6*45mm

Ⓚ

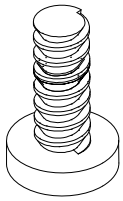

BOLT
M6*25mm

Ⓙ

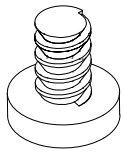

BOLT
M6*10mm

Ⓘ

BOLT M6X60 MM
BOLT M6X50 MM
BOLT M6X45 MM
BOLT M6X25 MM
BOLT M6X10 MM

DE:Bitte beachten Sie, dass Schrauben L,R, K,J und I ähnliche Formen haben. Bitte installieren und unterscheiden Sie sie entsprechend der Anleitung!

UK:Please note that screws L,R, K, J and I have similar shapes. Please install and distinguish them according to the instructions!

FR:S'il vous plaît noter que la forme des vis L,R, K,J, I est similaire, s'il vous plaît installer et distinguer selon les instructions!

IT:Si prega di notare che le viti L,R, K, J e hanno forme simili. Si prega di installarle e distinguerle secondo le istruzioni!

ES:Tenga en cuenta que los tornillos L,R, K,J,I tienen formas similares, instale y distinga de acuerdo con las instrucciones!

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-











Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type


Components - Fittings

Please check you have all the panels listed below

Note:The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.

Ⓐ  Cam Bolt x58	Ⓑ  Cam Lock x58	Ⓒ  3.5*14 Screw x32	Ⓓ  6*40 Screw x38
CL-1  Runner350mm x2	CR-1  Runner350mm x2	DL-1  Runner350mm x2	DR-1  Runner350mm x2
CL  Runner300mm x1	CR  Runner300mm x1	DL  Runner300mm x1	DR  Runner300mm x1
Ⓔ  Mirror accessories x1	Ⓕ  4*8 Screw x2	Ⓖ  Carrot Head Handle x2	
Ⓘ  6*10 Screw x8	Ⓙ  6*25 Screw x4	Ⓚ  6*45 Screw x8	Ⓛ  6*60 Screw x2
Ⓜ  handle x1	Ⓝ 4*35 Screw x6	Ⓞ  Expansion tube x2	Ⓟ  5*50 Screw x2
Ⓠ  4*18 Screw x2	Ⓡ  6*50 Screw x4		

Ruler - Use this ruler to help correctly identify the screws

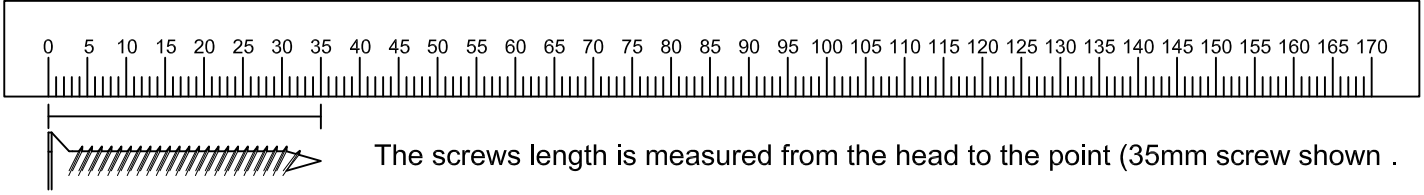


The screws length is measured from the head to the point (35mm screw shown .

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

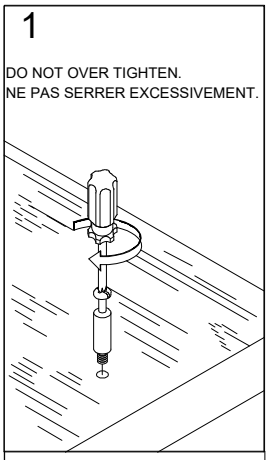

Step 2


Push the male camlock into the entry hole.

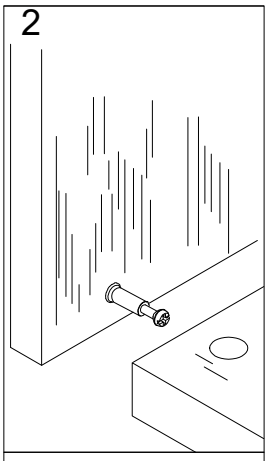

Step 3

Insert the female camlock as shown in the instruction.

Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

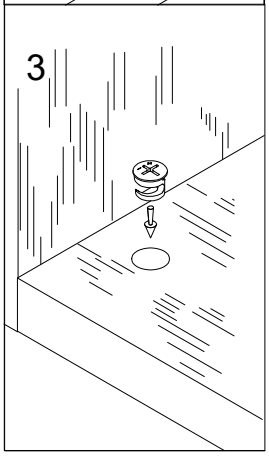


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.














The joint is now secure.

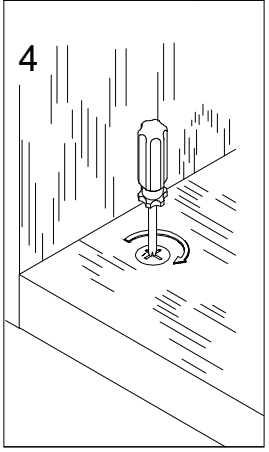













Assembly Instructions

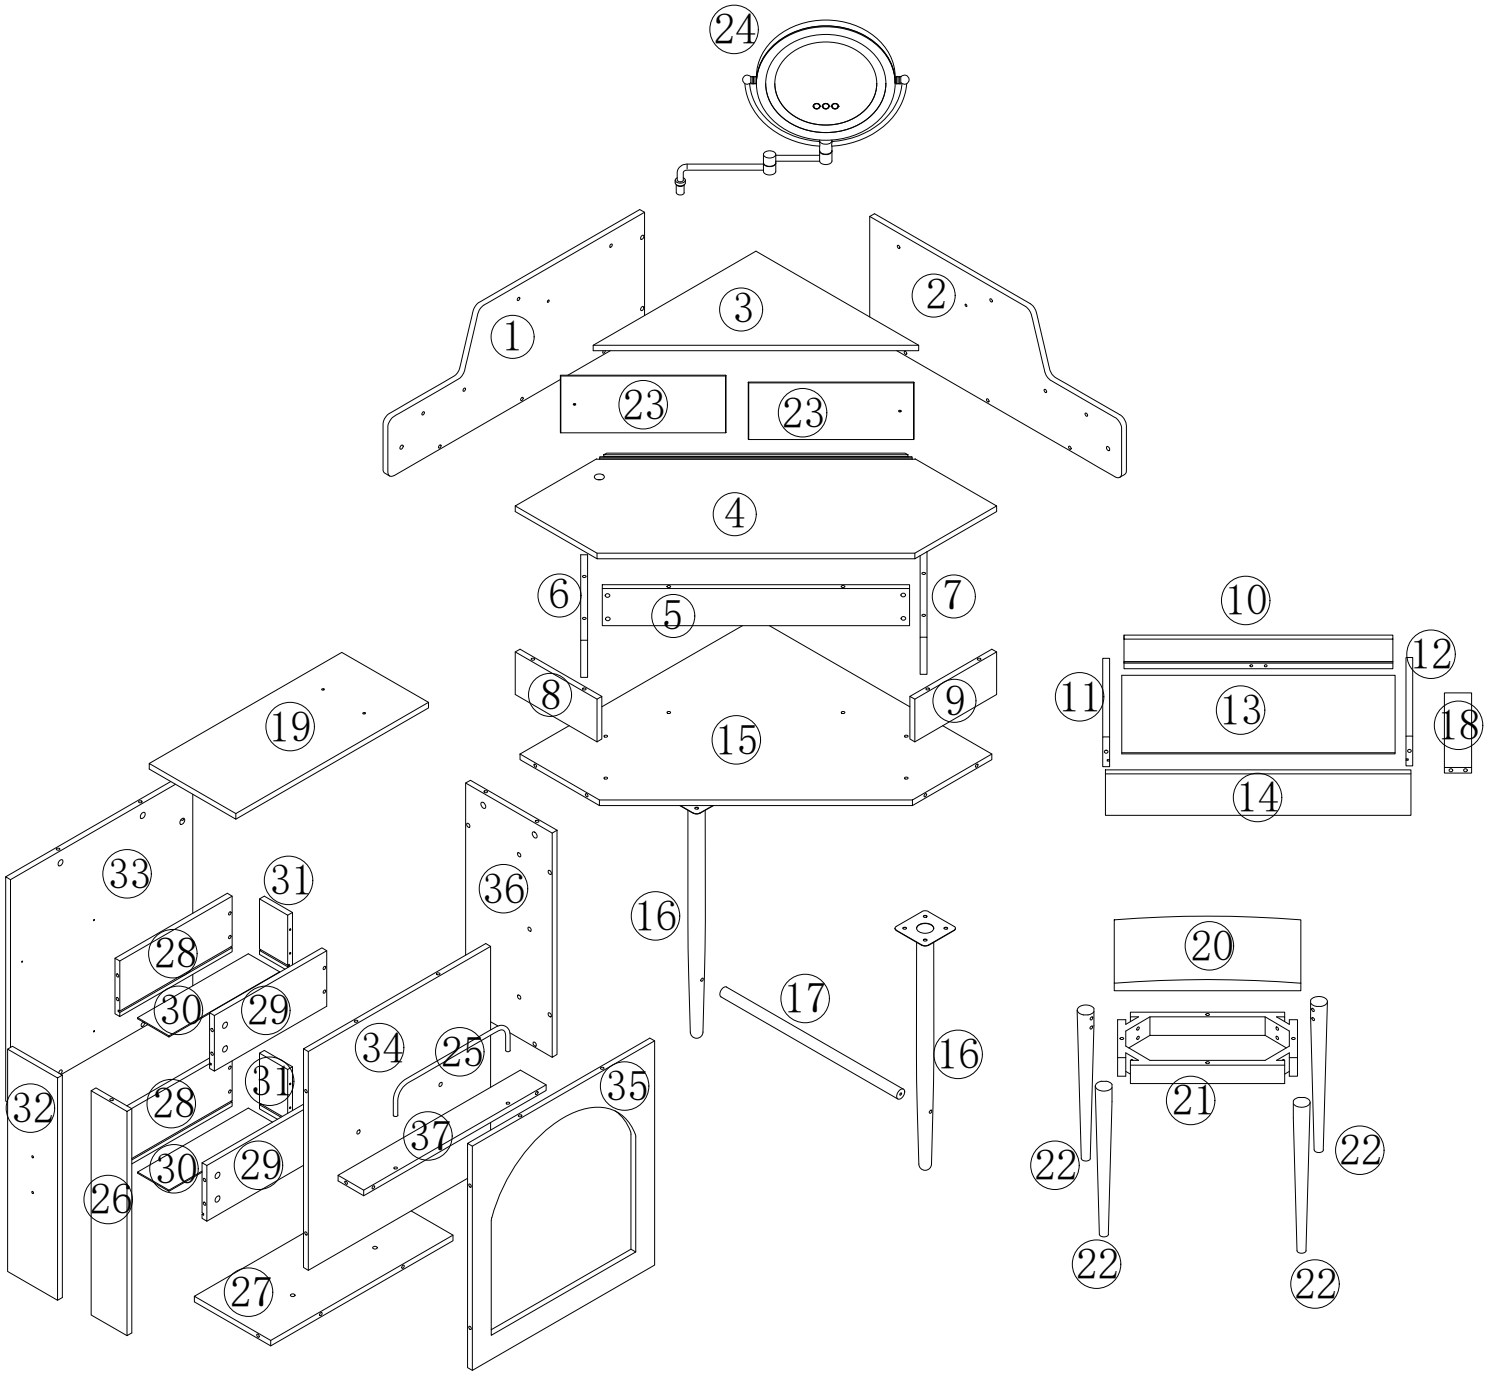









Assembly Instructions

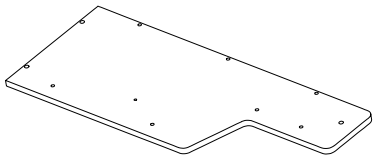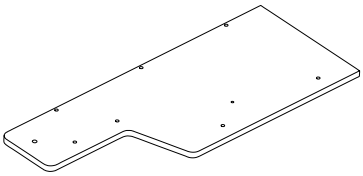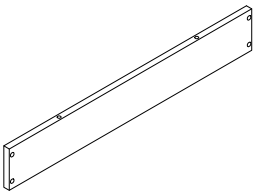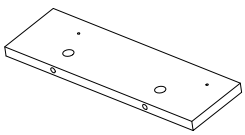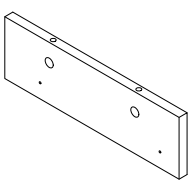1  1	8  1
2  1	9  1
3  1	10  1
4  1	11  1
5  1	12  1
6  1	13  1
7  1	14  1

Assembly Instructions

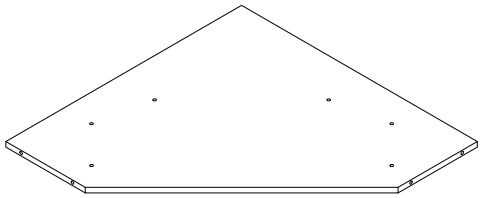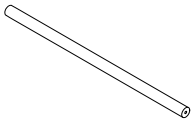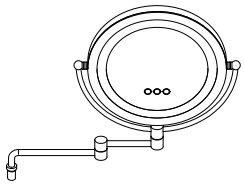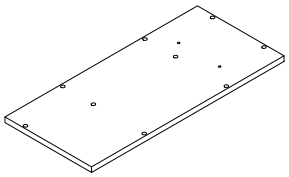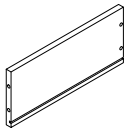
(15)  1	(22)  4
(16)  2	(23)  2
(17)  1	(24)  1
(18)  1	(25)  1
(19)  1	(26)  1
(20)  1	(27)  1
(21)  1	(28)  2

Assembly Instructions

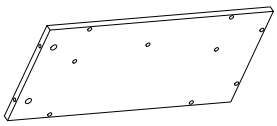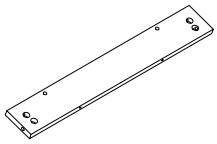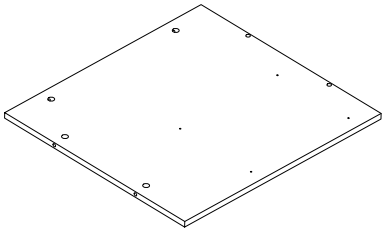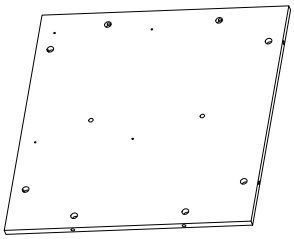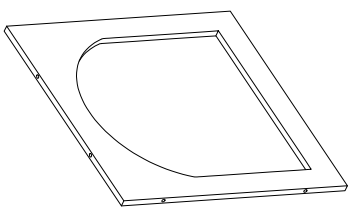㉙  2	㊱  1
㉚  2	㊲  1
㉛  2	
㉜  1	
㉝  1	
㉞  1	
㉟  1	


Assembly Instructions


Step 1

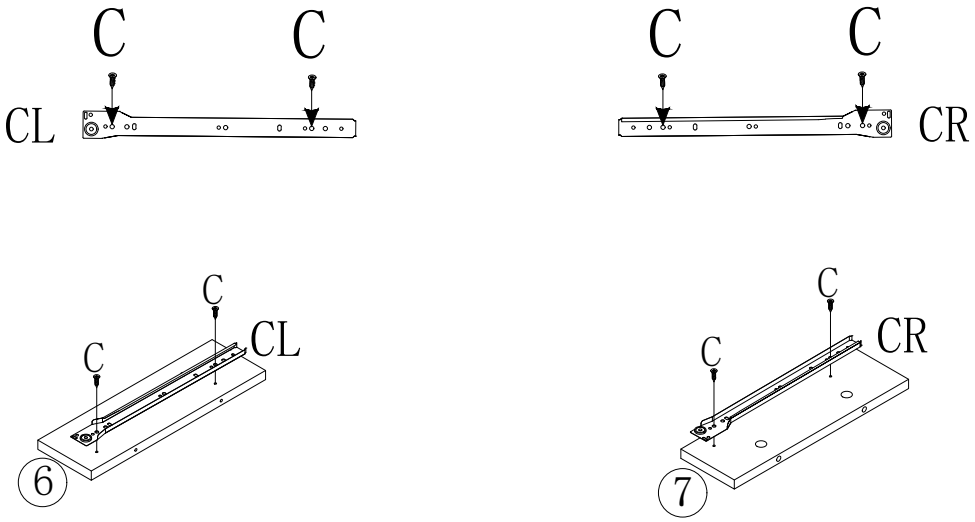


CL	CR	C
Runner300mm x1	Runner300mm x1	3.5*14 Screw x4

Step 2

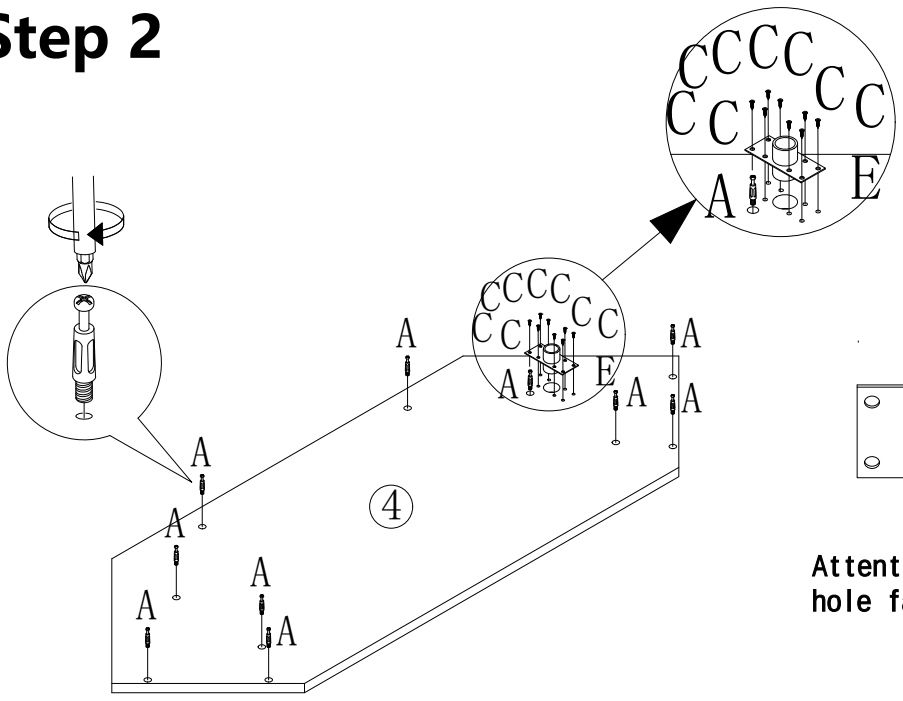

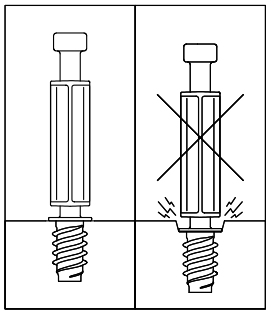


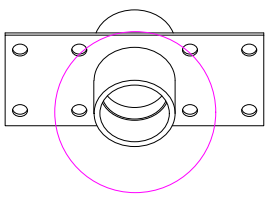


Attention: This side of the hole faces downwards


A	C	E
Cam Bolt x10	3.5*14 Screw x8	Mirror accessories x1


Step 3

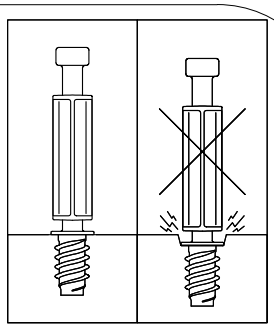



Step 4

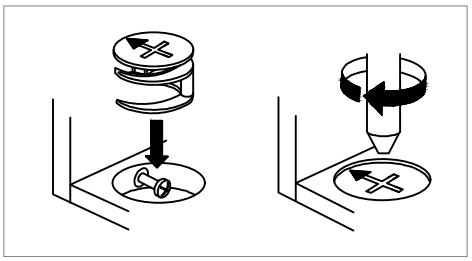

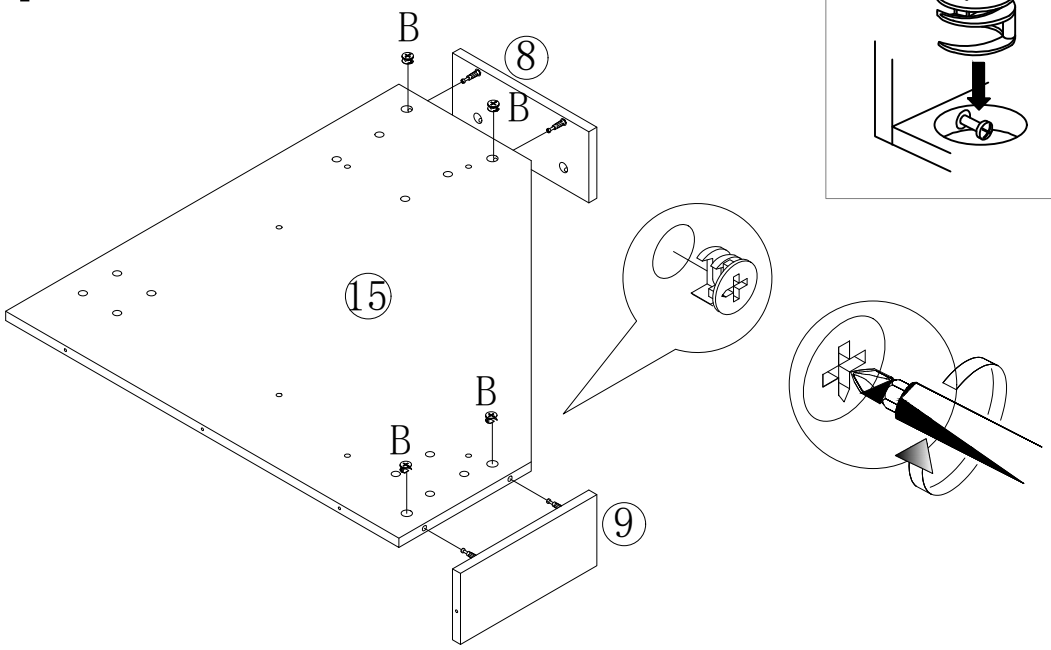

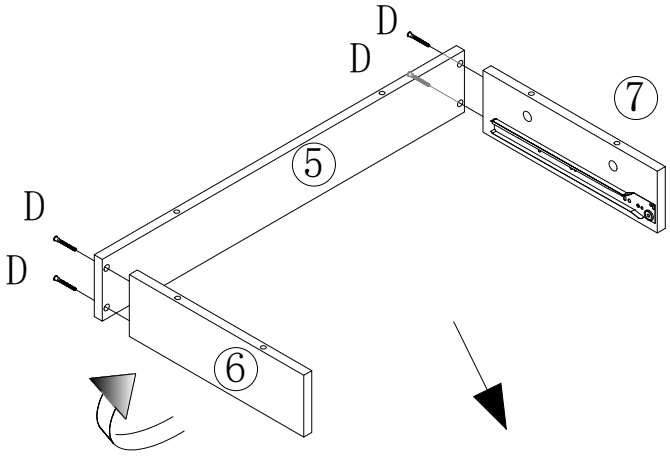


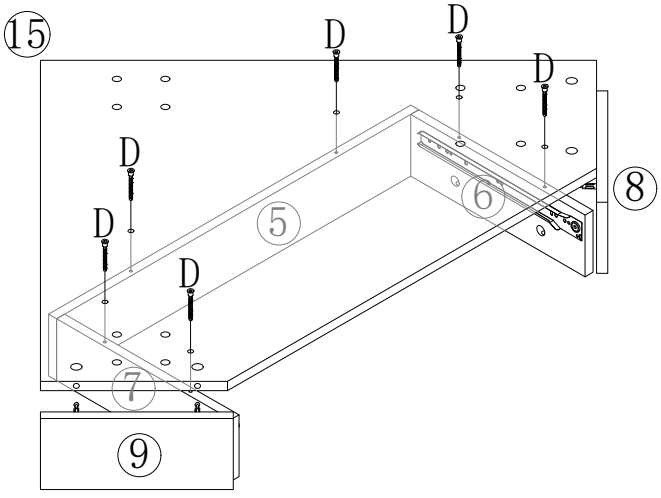



B	D
	
Cam Lock x4	6*40 Screw x10


Assembly Instructions

Step 5

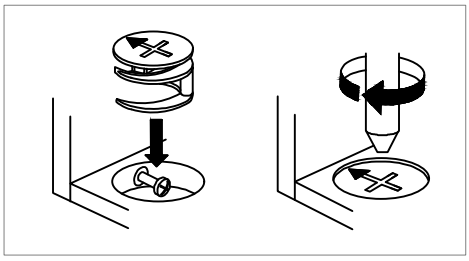


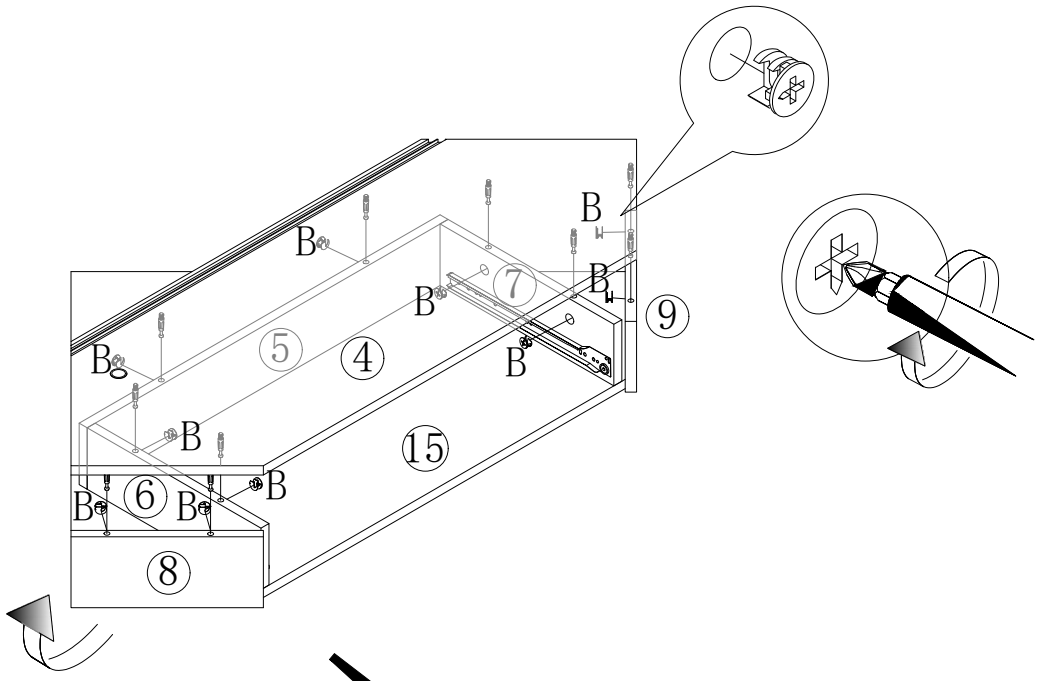


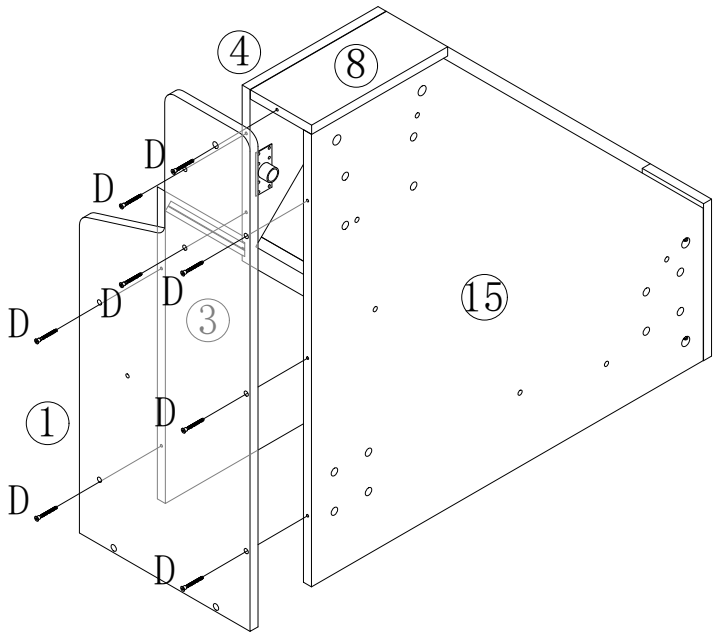


B	D
	
Cam Lock x10	6*40 Screw x8

Step 6

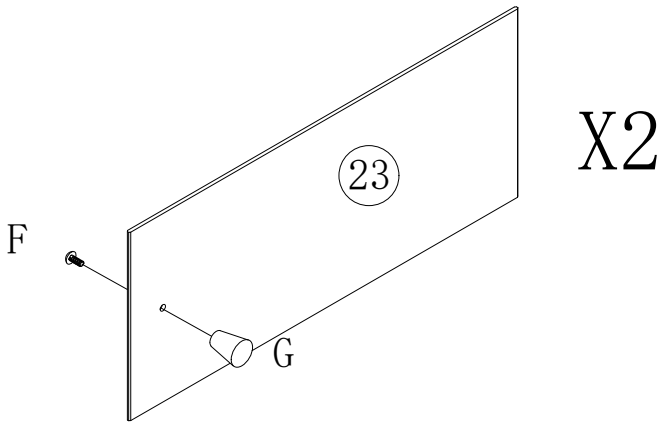


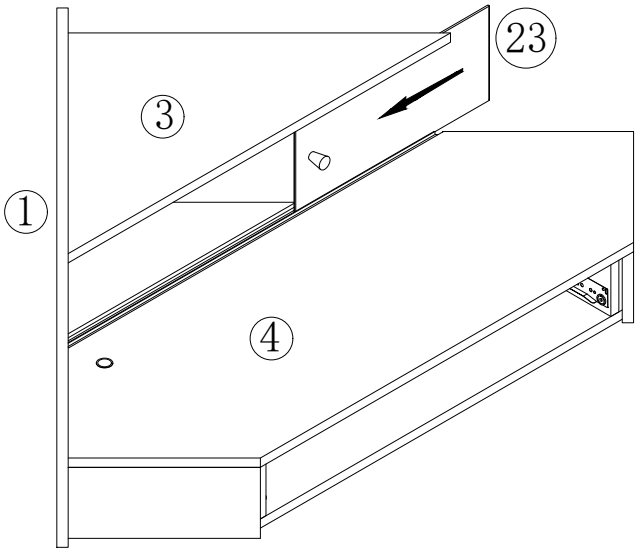

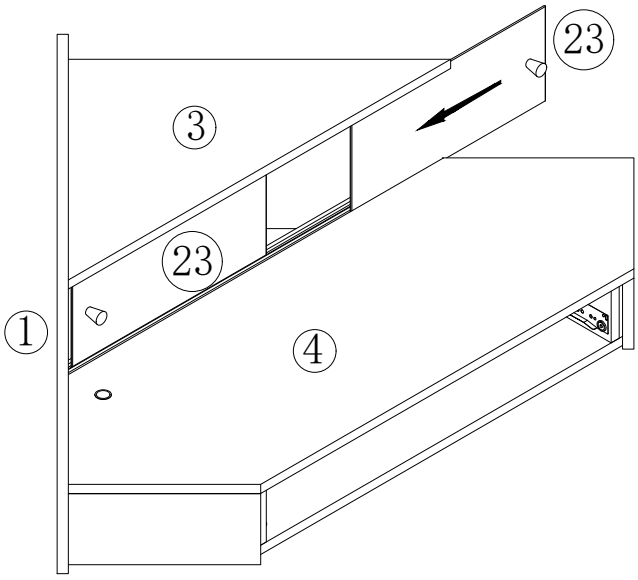


F	G
	
4*8 Screw x2	Carrot Head Handle x2

Step 7

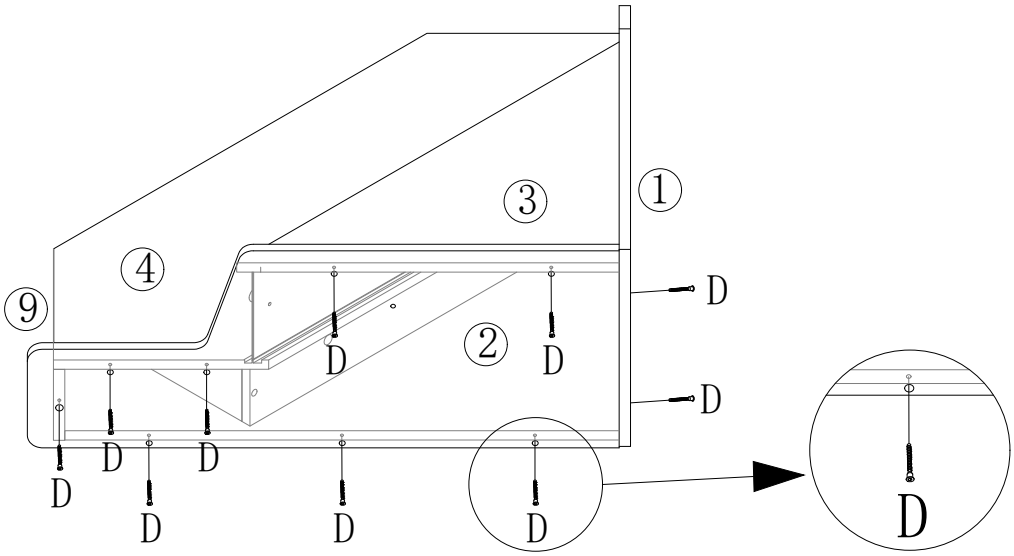


D



6*40 Screw x10


Step 8

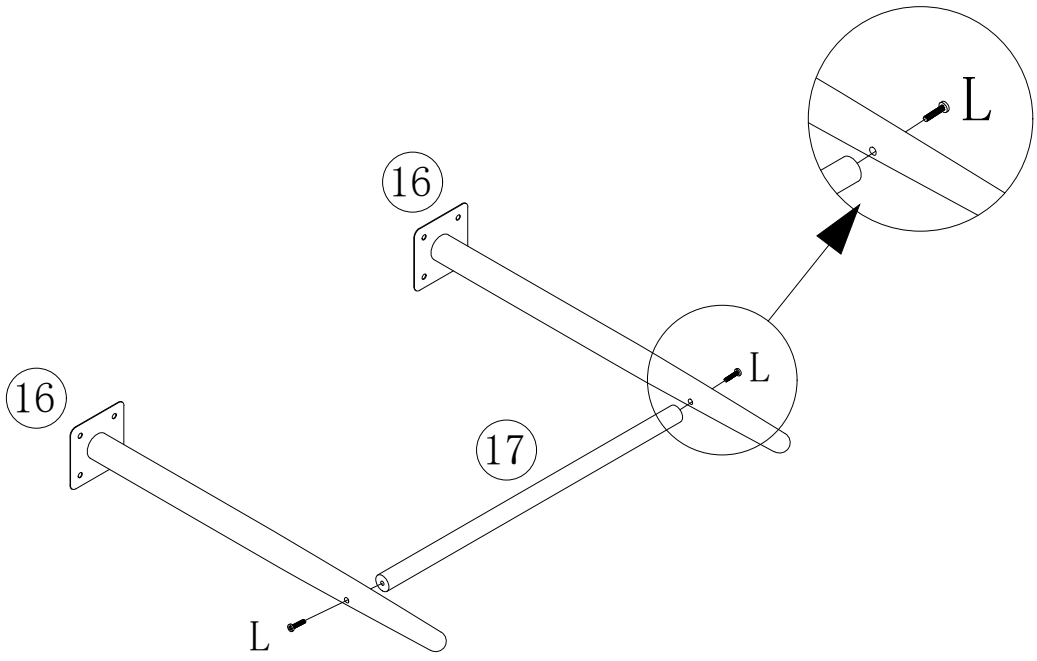

L

6*60 Screw x2


Step 9

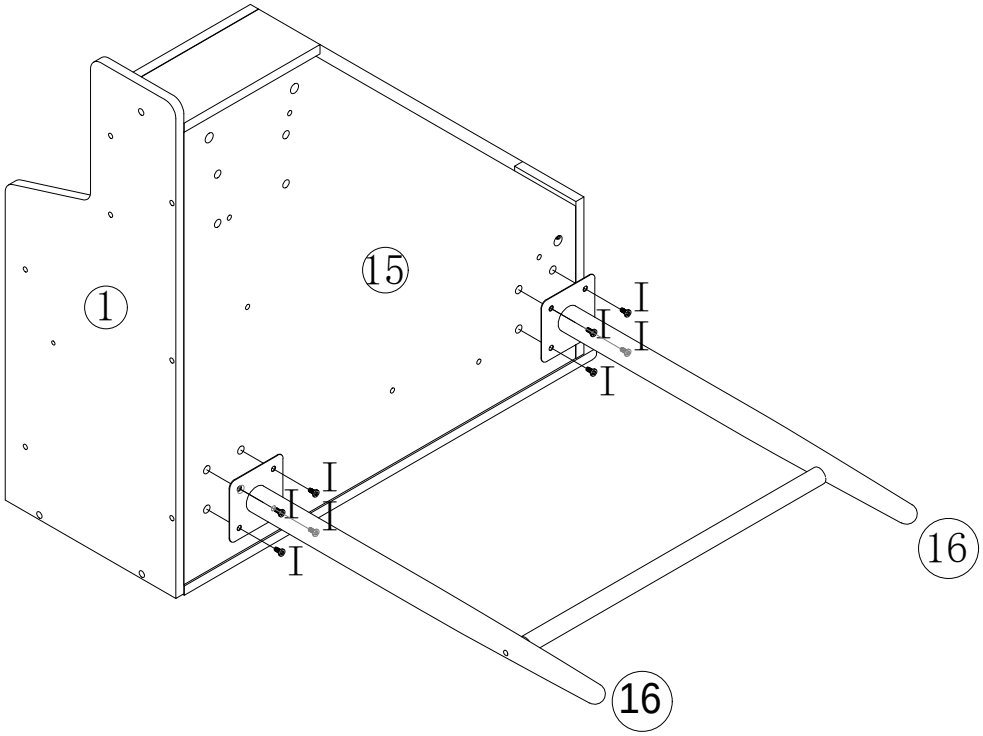

I	
6*10 Screw x8	

Please note: Only I-type screws can be used here, using the wrong screws may cause damage to the countertop!


Step 10

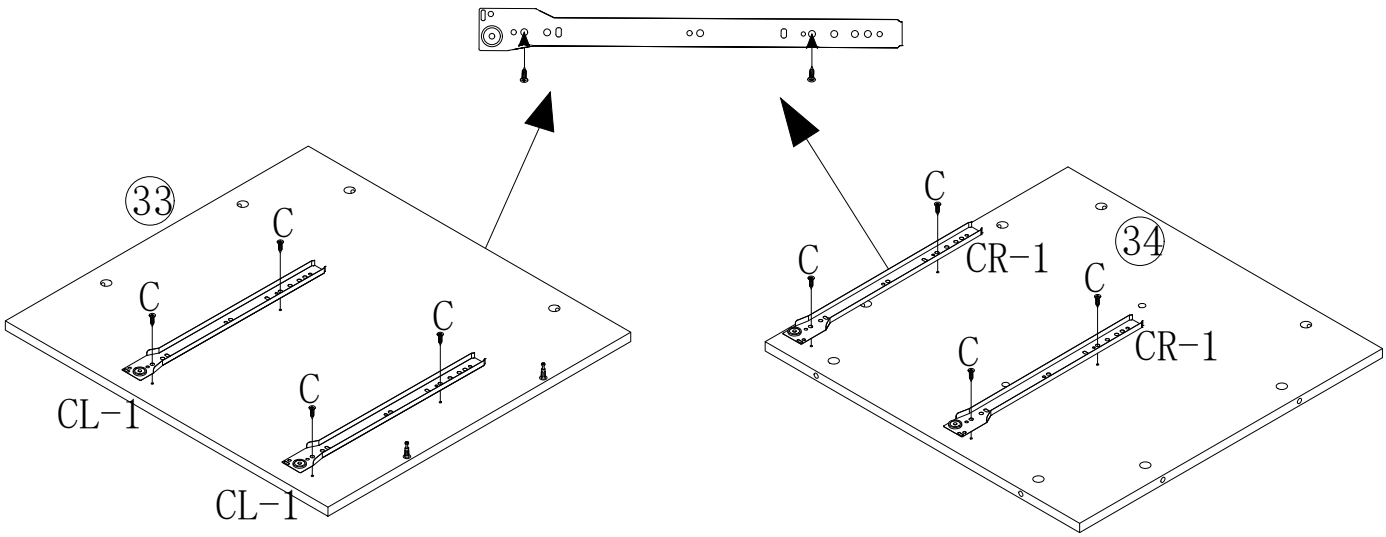



CL-1	CR-1	C
Runner350mm x2	Runner350mm x2	3.5*14 Screw x8


Assembly Instructions


Step 11

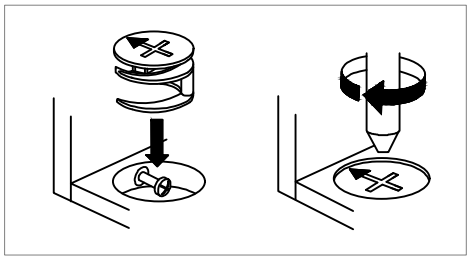



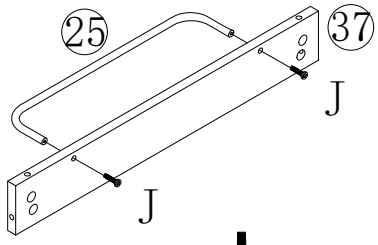


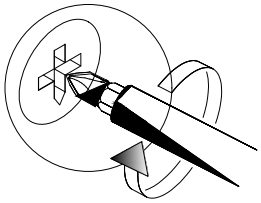

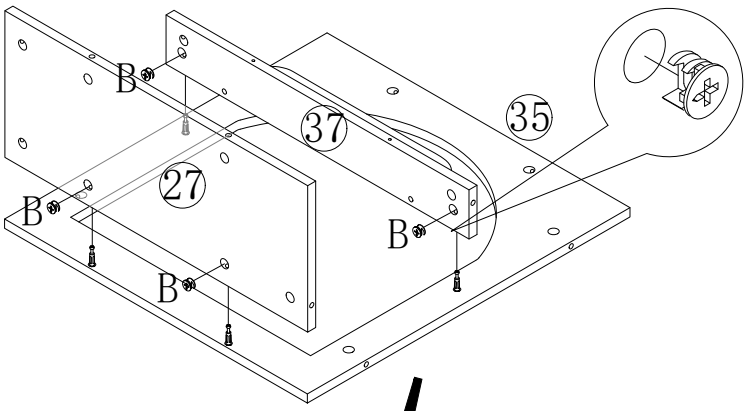


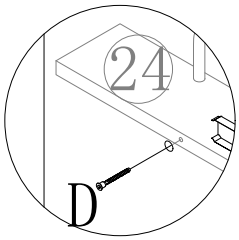


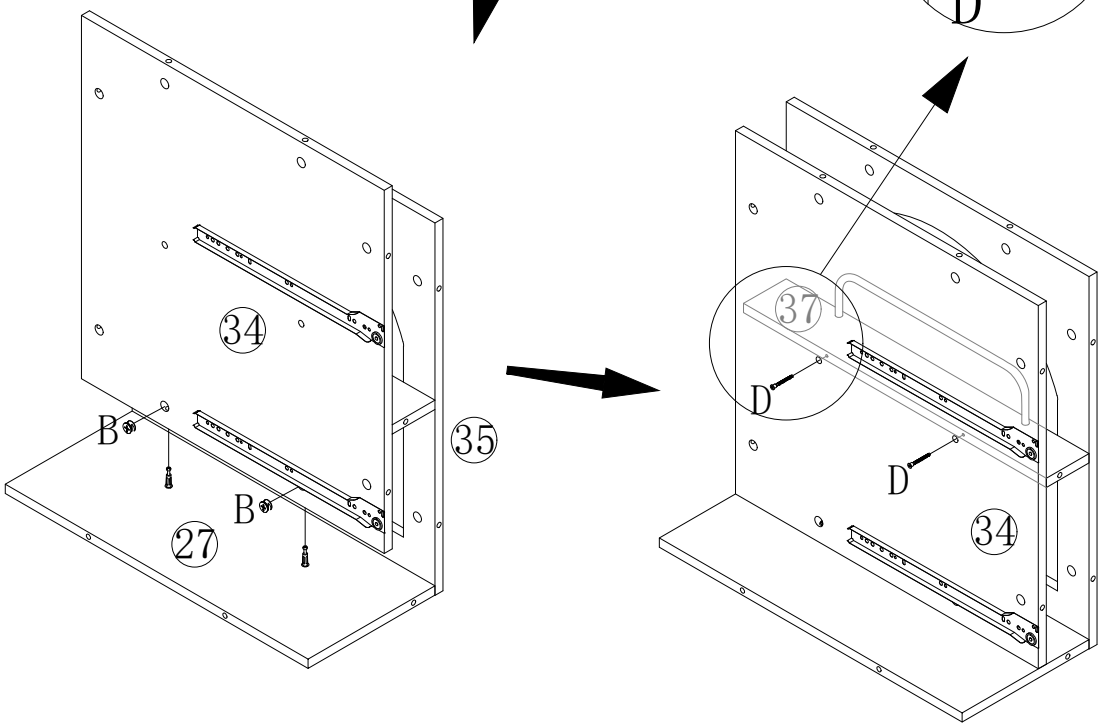



B	D	J
		
Cam Lock x6	6*40 Screw x2	6*25 Screw x2

Step 12

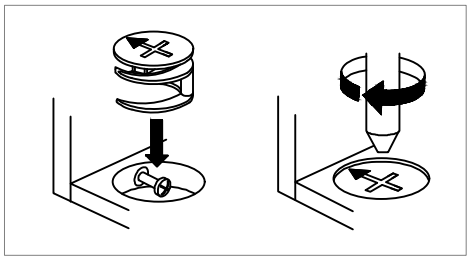

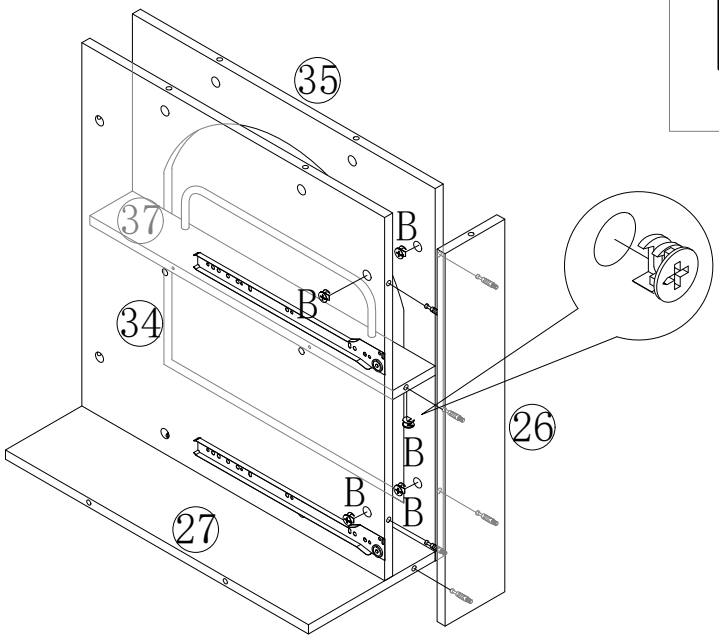

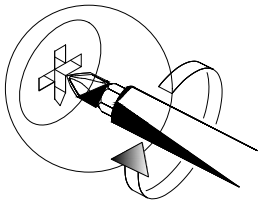

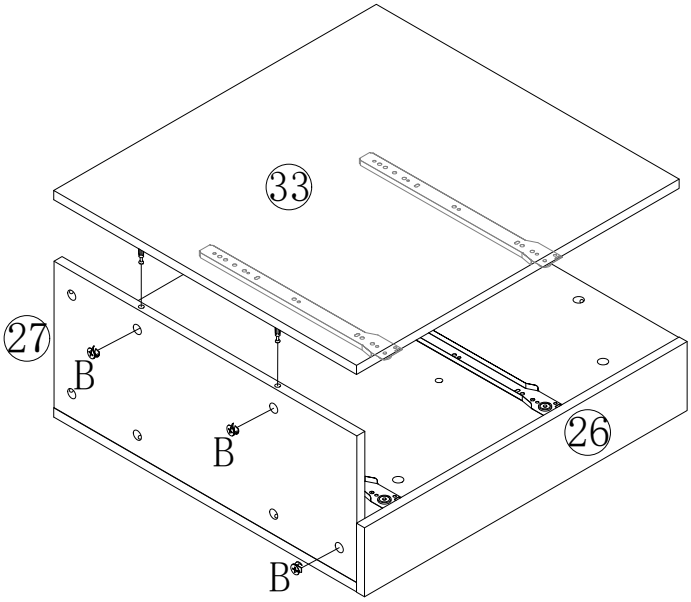



B





Cam Lock x8

Step 13

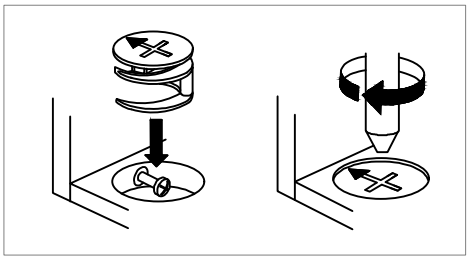

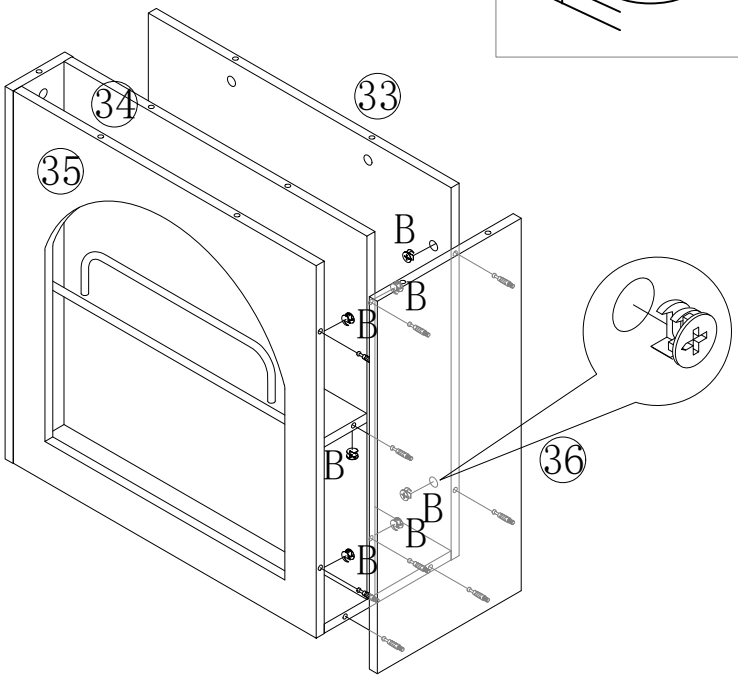

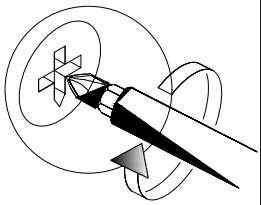

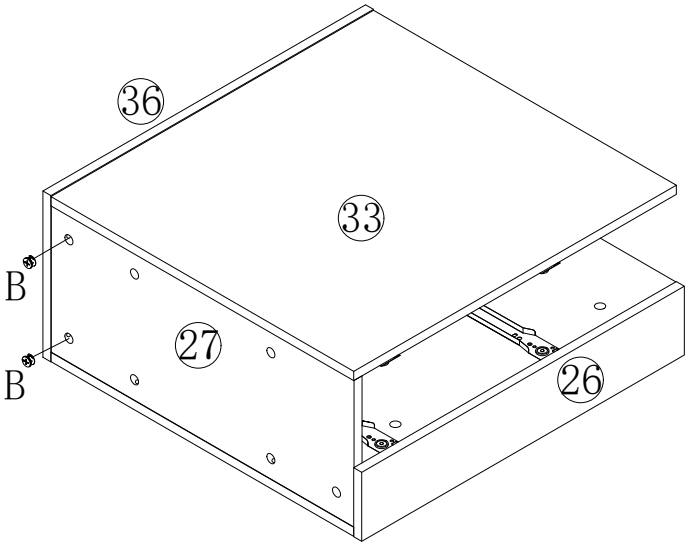


B



Cam Lock x9

Step 14

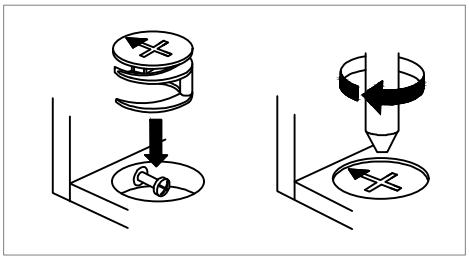



B




Cam Lock x9


Step 15

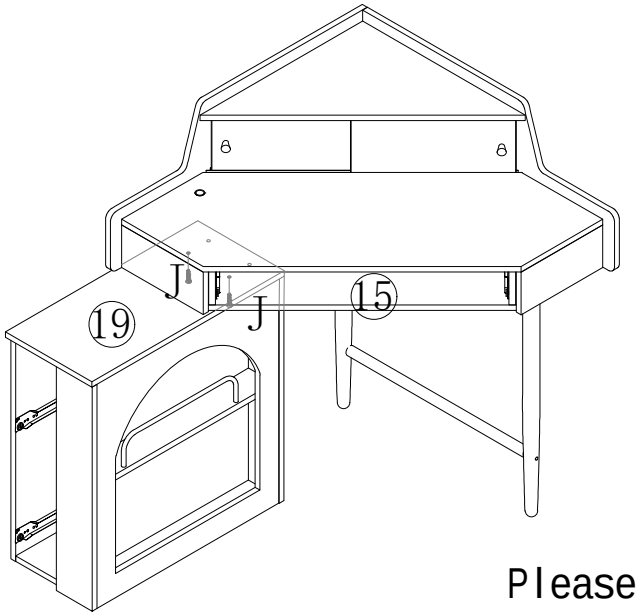

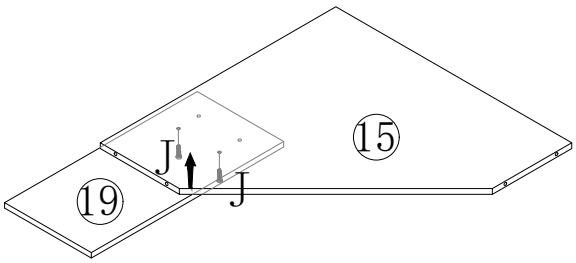

Please note: Only P-type screws can be used here, using the wrong screws may cause damage to the countertop!

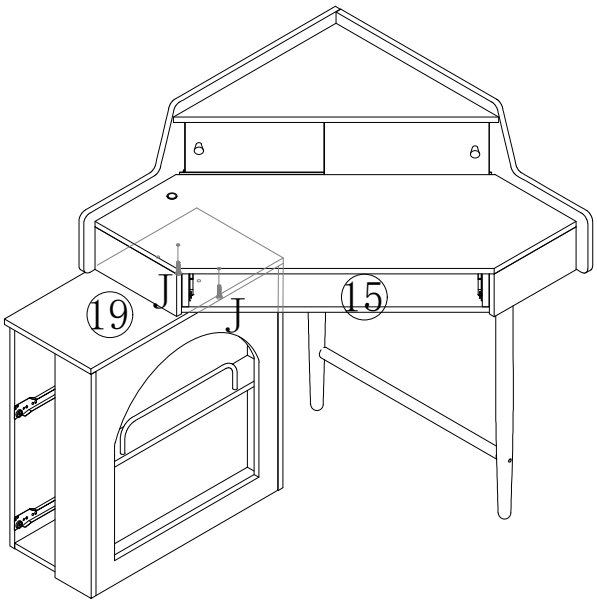

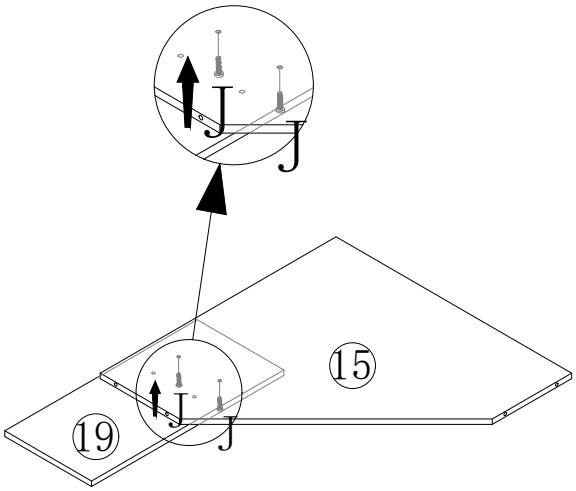



J



6*25 Screw x2

Step 16

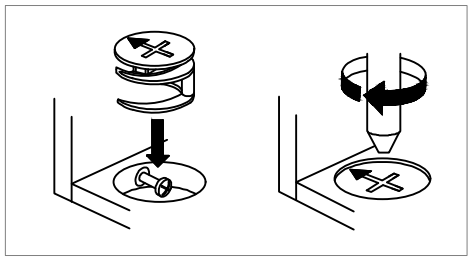


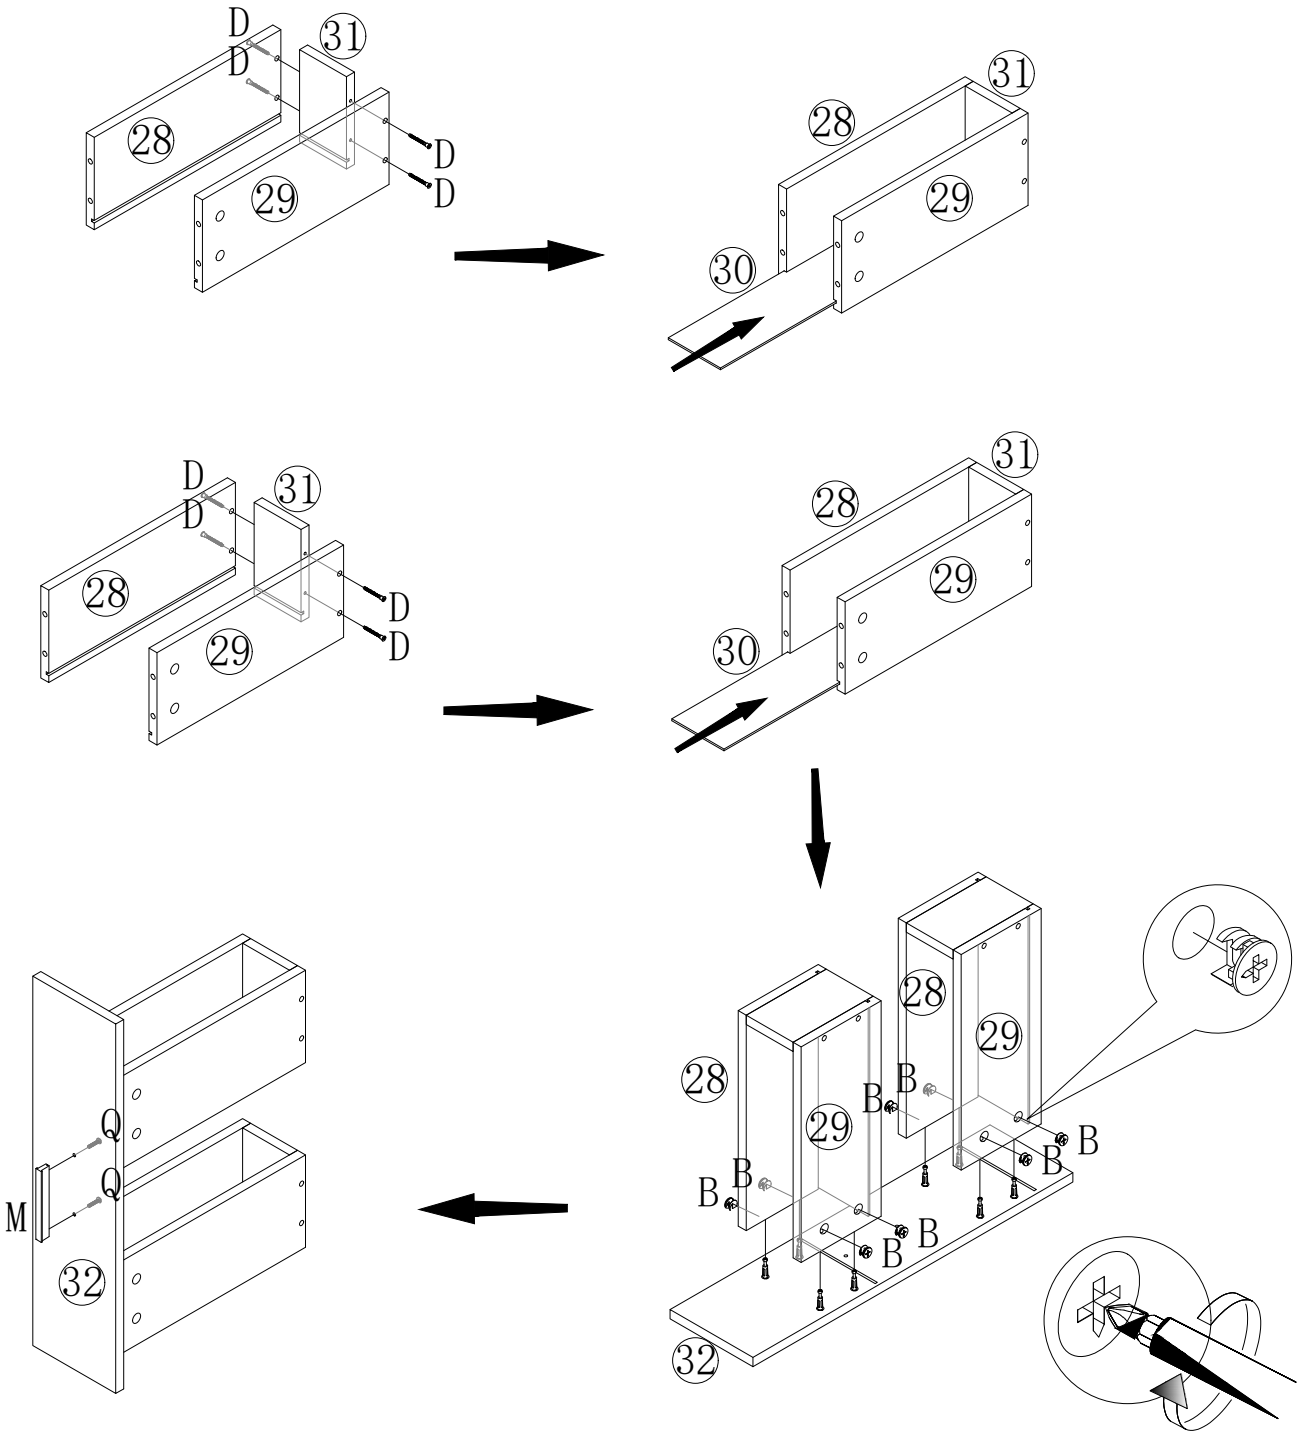




B	D	Q	M
Cam Lock x8	6*40 Screw x8	4*18 Screw x2	handle x1

Assembly Instructions


Step 17

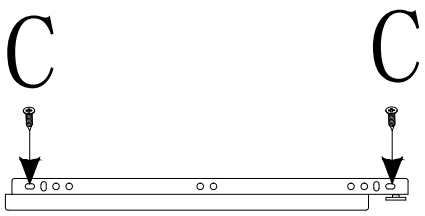

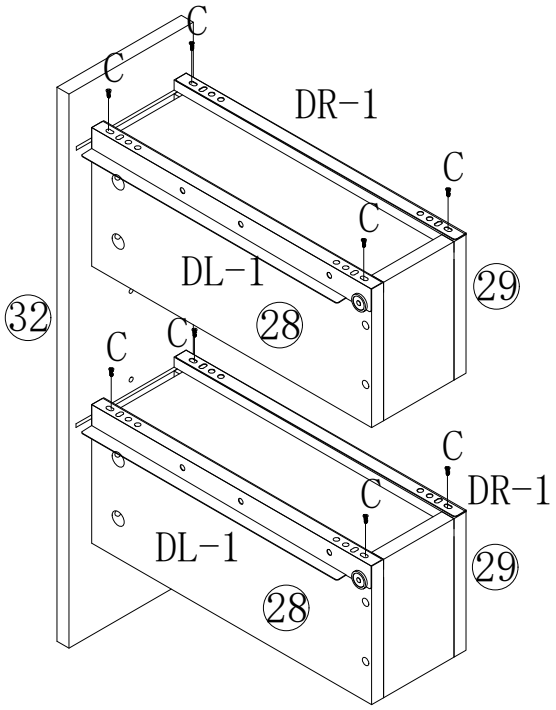


DL-1	DR-1	C
		
Runner350mm x2	Runner350mm x2	3.5*14 Screw x8

Step 18

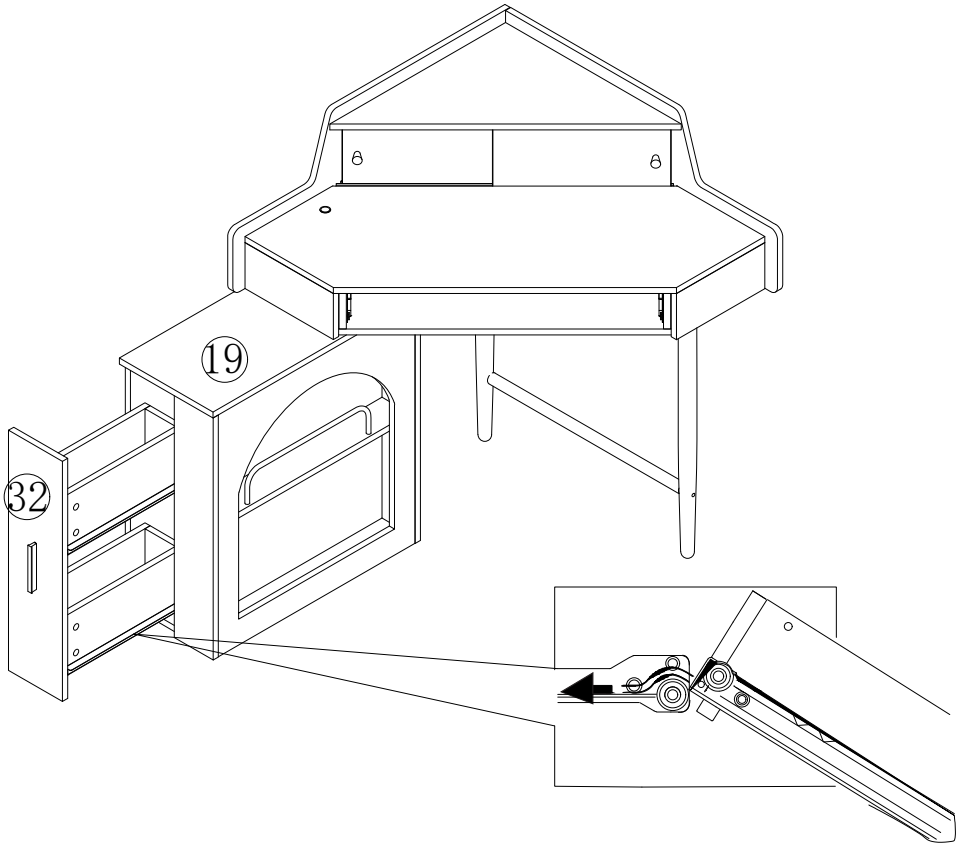


Assembly Instructions


Step 19

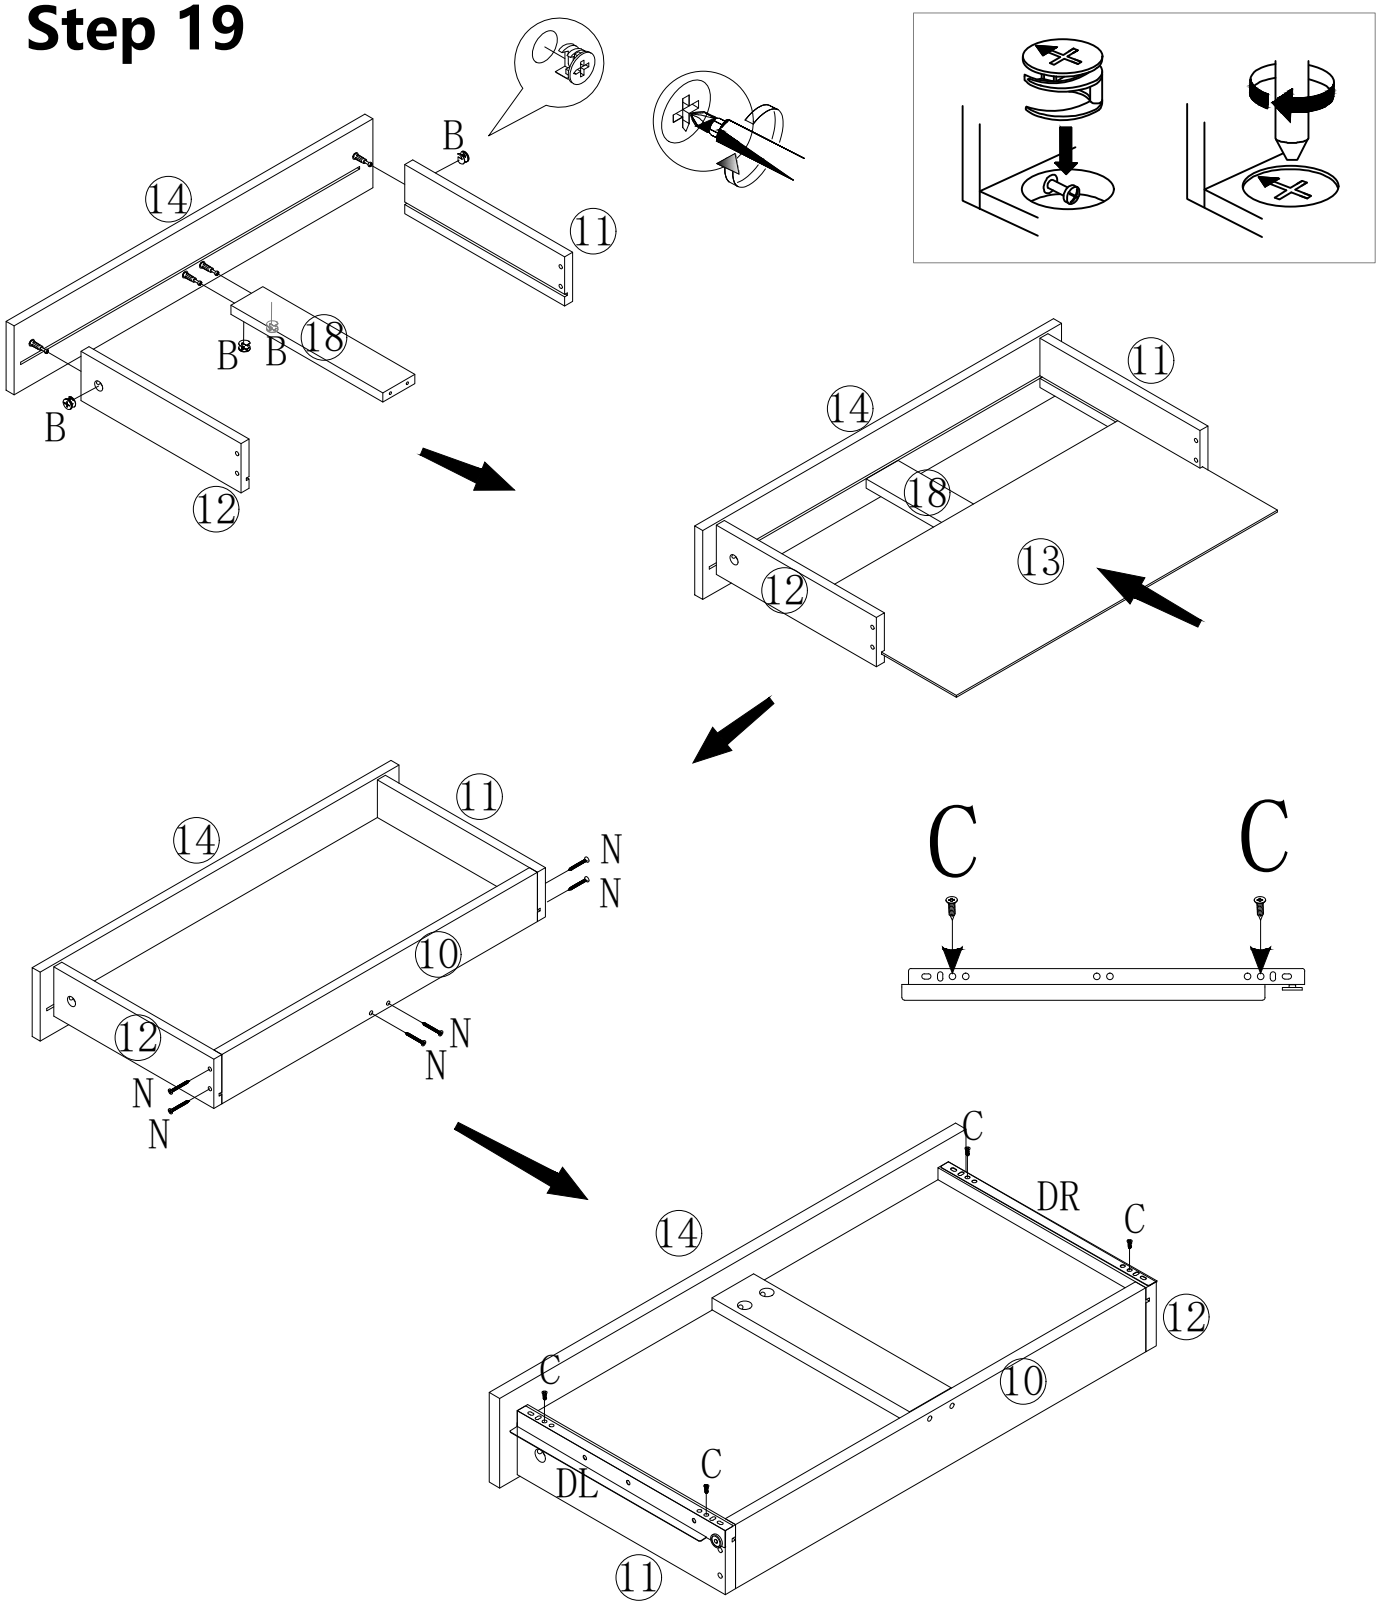

B	C	N	DL	DR
Cam Lock x4	3.5*14 Screw x4	4*35 Screw x6	Runner300mm x1	Runner300mm x1

Step 20

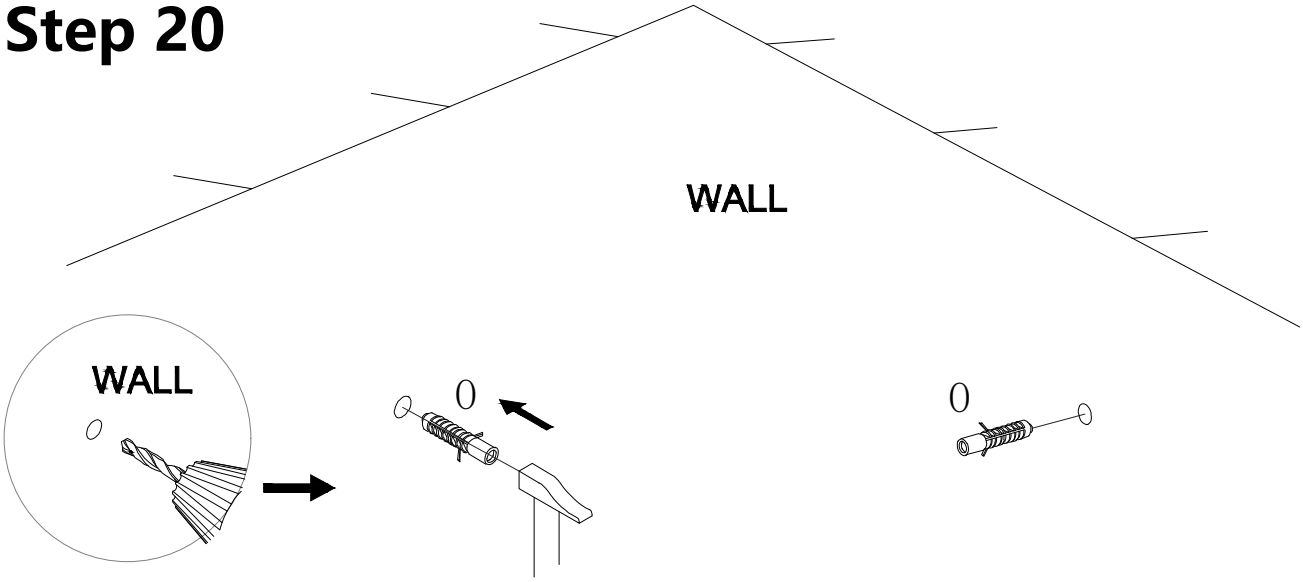


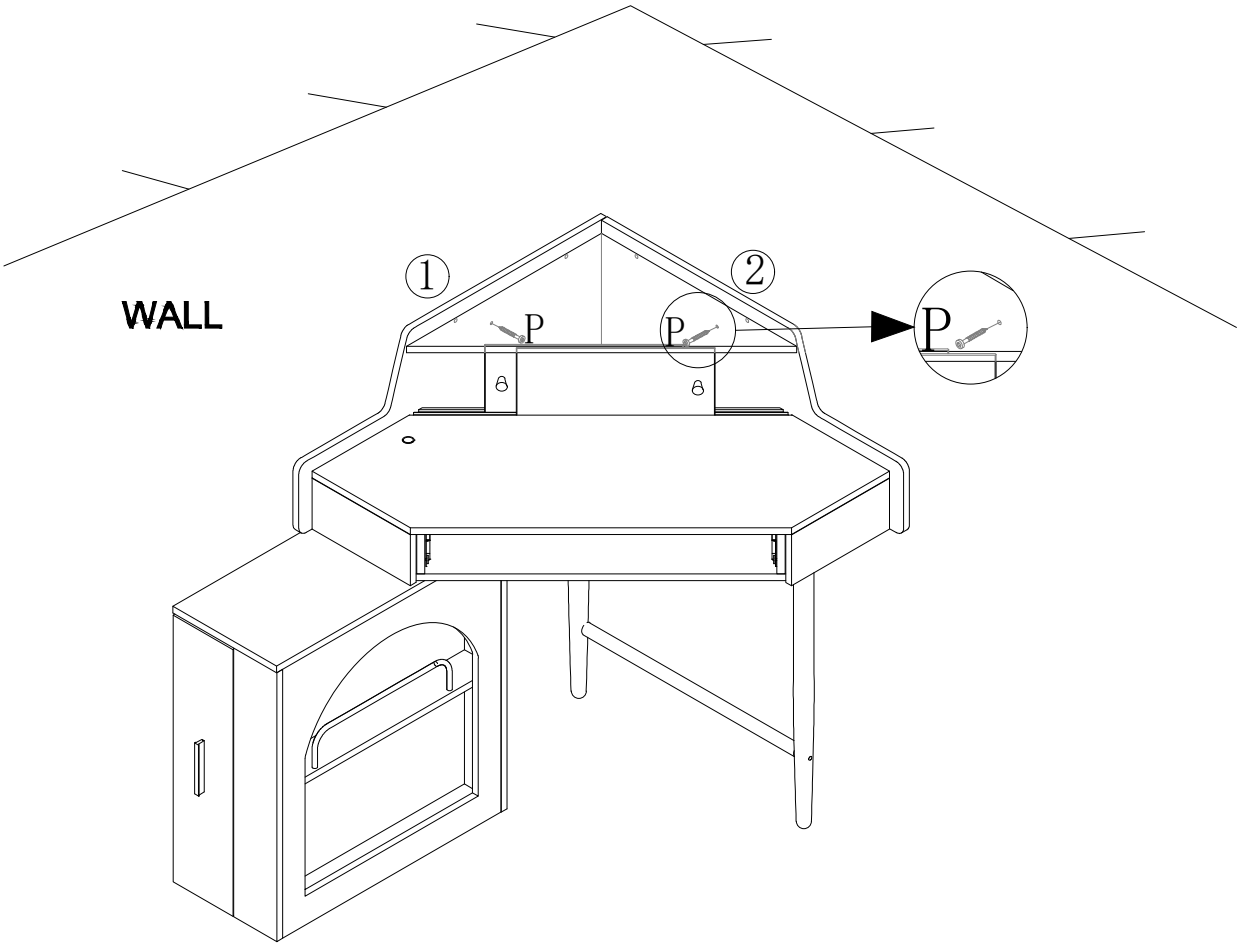


P	0
5*50 Screw x2	Expansion tube x2


Step 21

Please put three AA batteries in the battery compartment behind the mirror.
Notice：Batteries are not provided due to transportation prohibited.

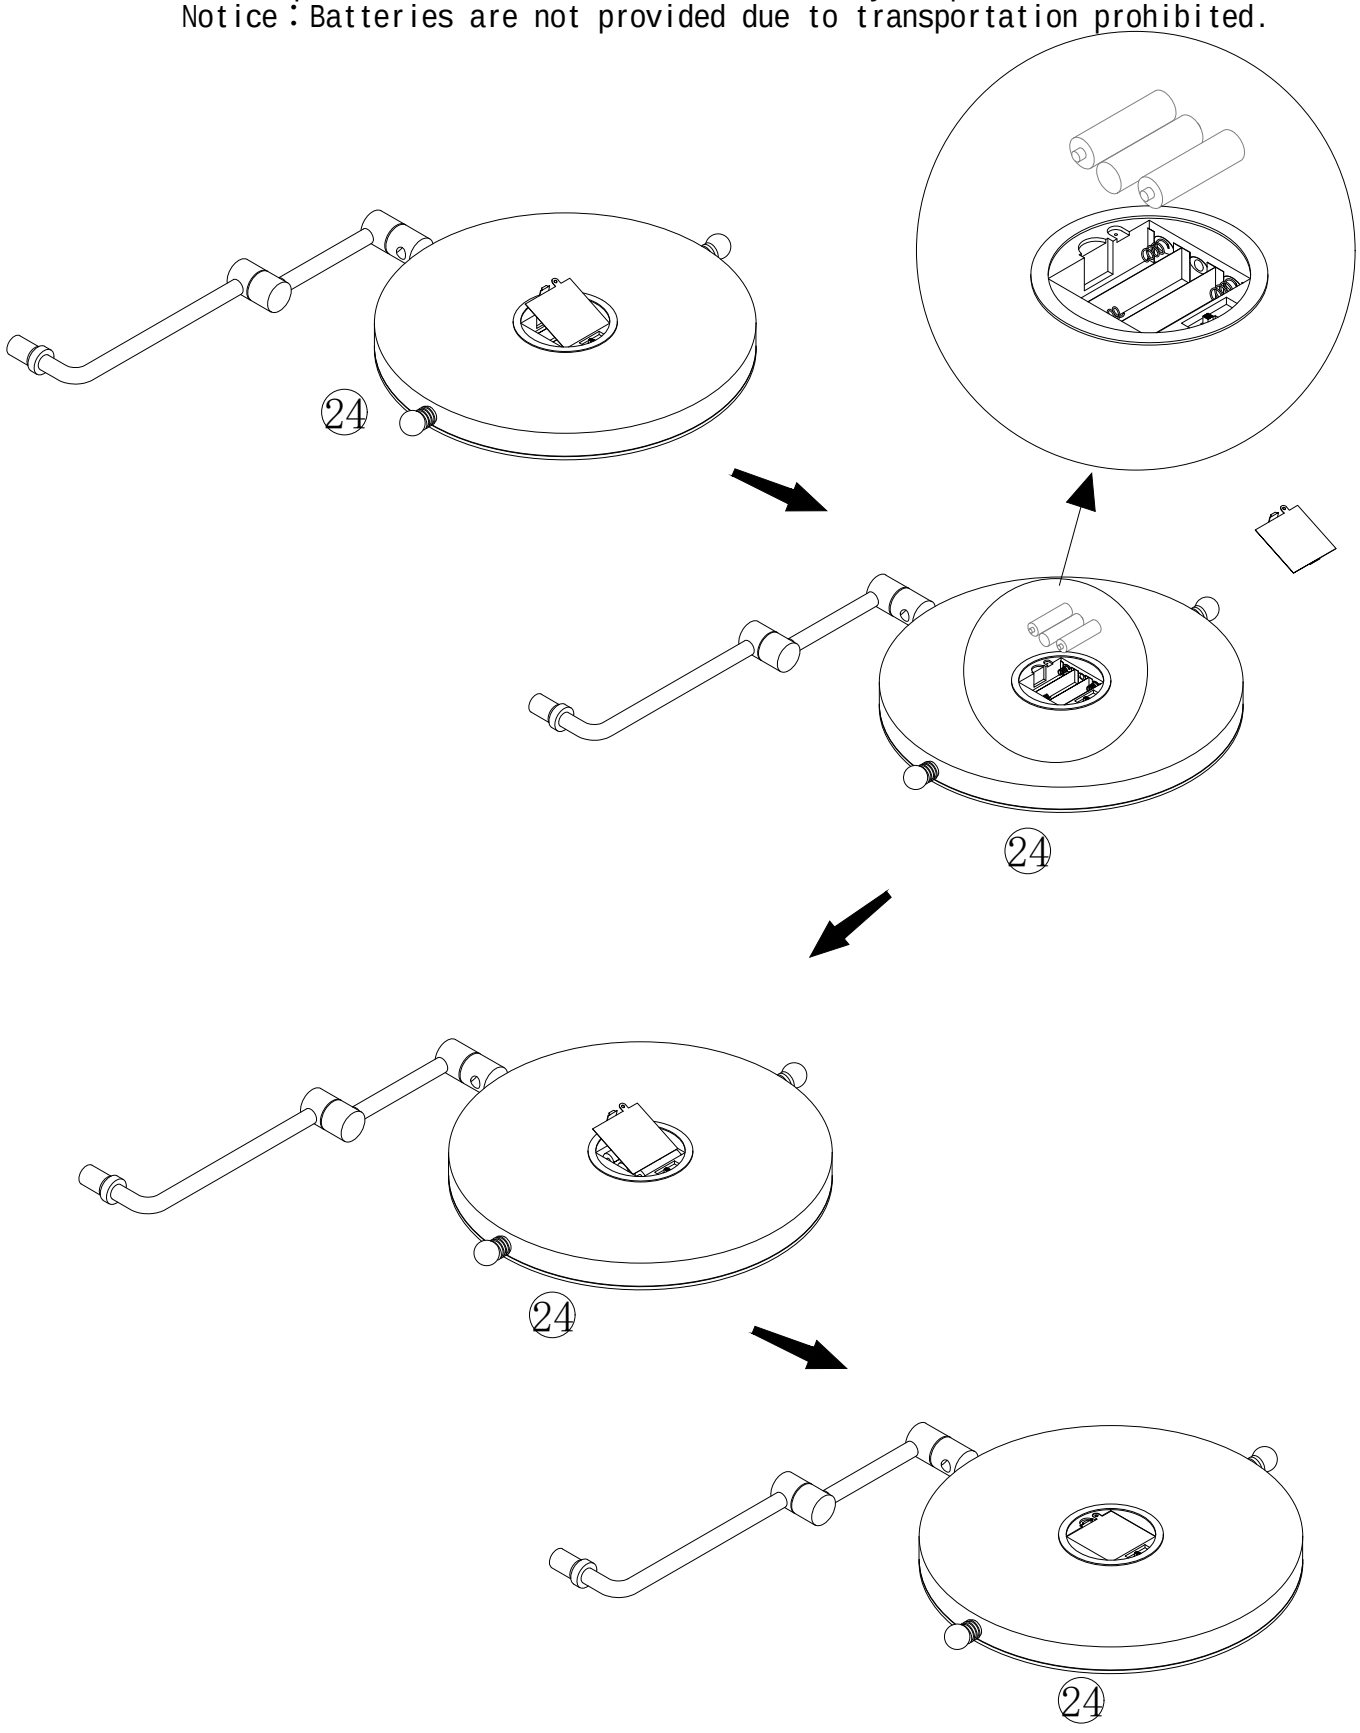



Step 22

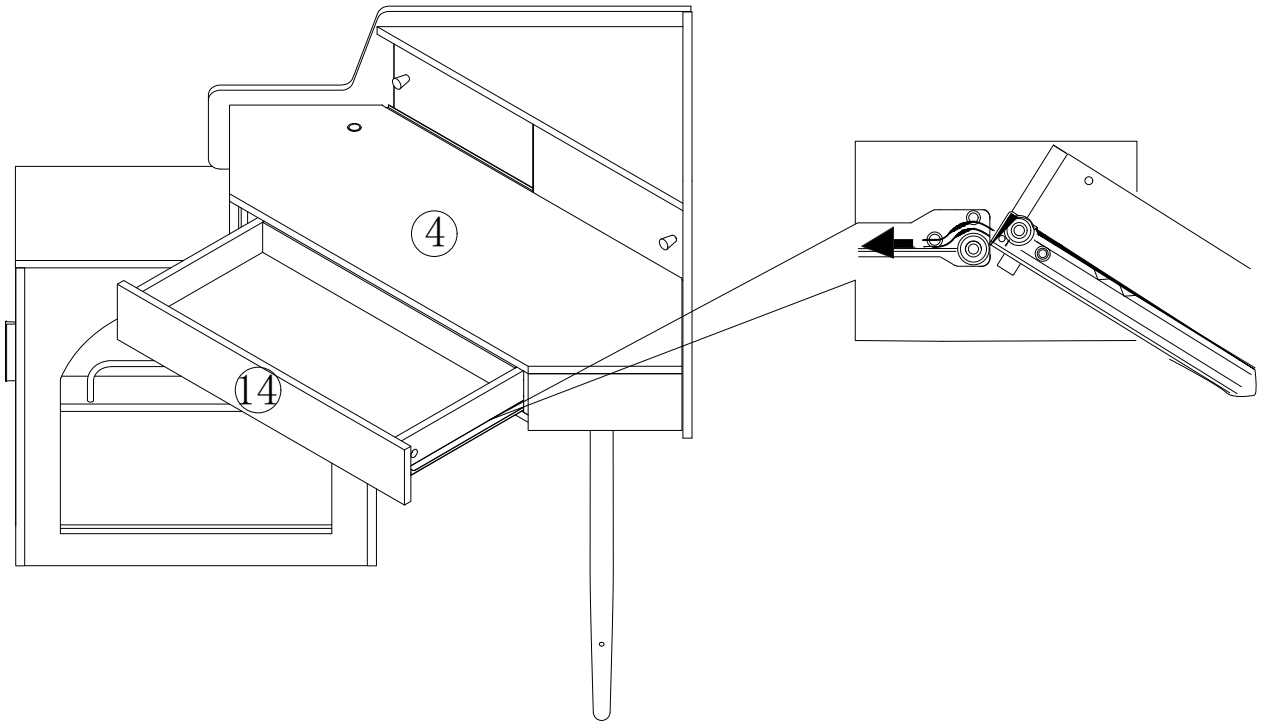

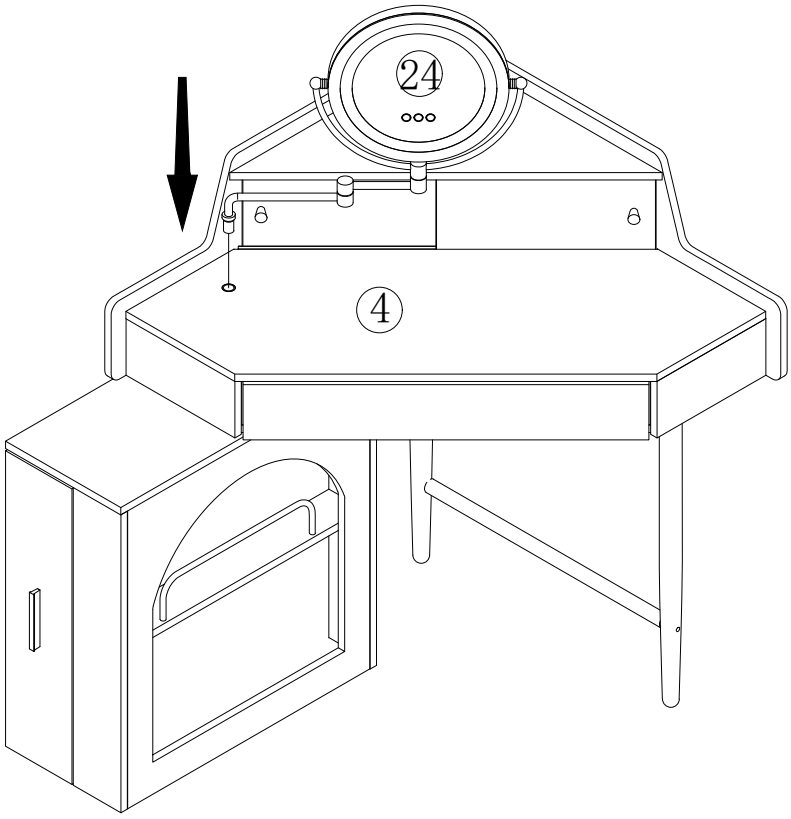

Step 23

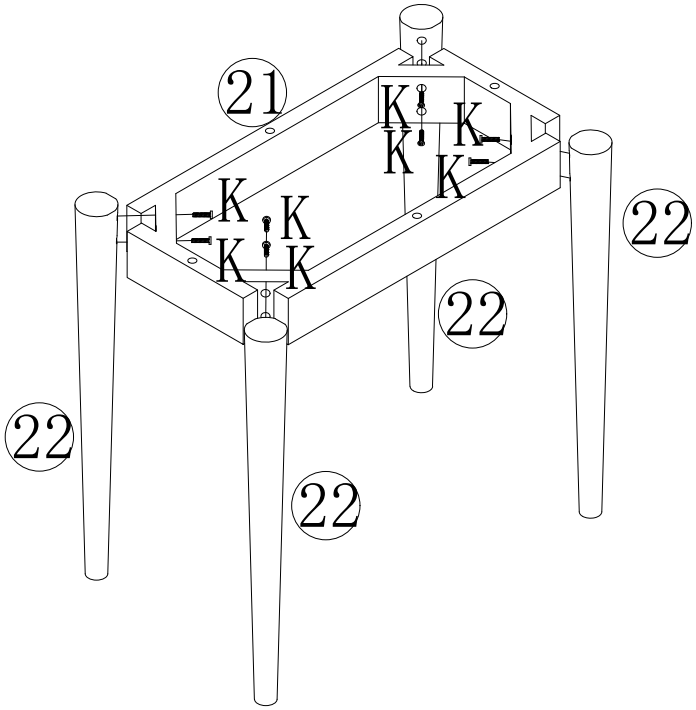

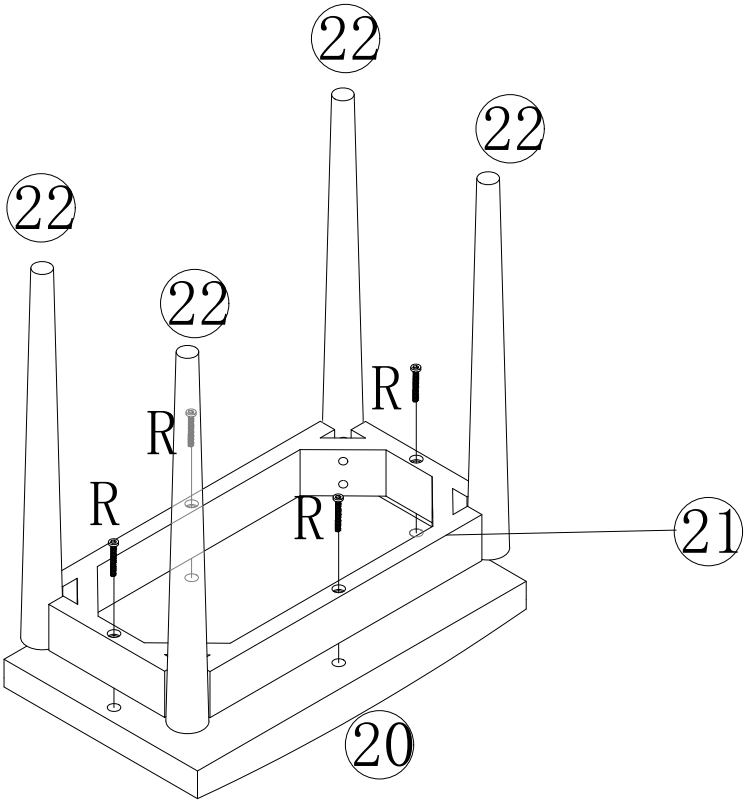

K	R
6*45 Screw x8	6*50 Screw x4

Step 24

