

## QUEEN SIZE BED

---

### ASSEMBLY INSTRUCTIONS



# ASSEMBLY INSTRUCTIONS

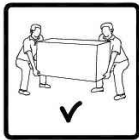
## ASSEMBLY TIPS:

- 1 . Remove hardware from box and sort by size.
- 2 . Please check to see that all hardware and parts are present prior to start of assembly.
- 3 . Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### Warning !







- 1 . Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2 . This product is for home use only and not intended for commercial establishment.




ASSEMBLY TIME | 20 MINUTES

## PARTS IDENTIFICATION

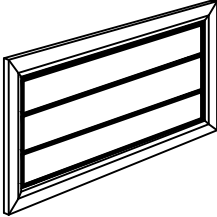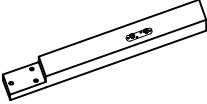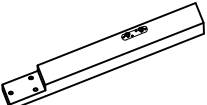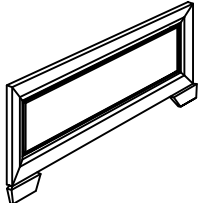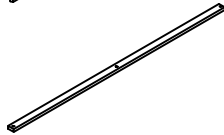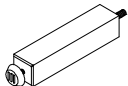
### B1 (BOX 1)

<b>A</b>		HEADBOARD PANEL	1PC
<b>B</b>		RIGHT HEADBOARD LEG	1PC
<b>C</b>		LEFT HEADBOARD LEG	1PC
<b>D</b>		FOOTBOARD	1PC
<b>E</b>		BED SLAT	4PCS
<b>F</b>		BED SLAT SUPPORT WITH LEVELER	4PCS

### B2 (BOX 2)

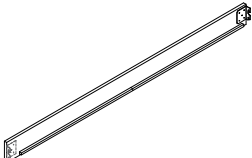
<b>G</b>		BED RAIL	2PCS
----------	---	----------	------

**HB**

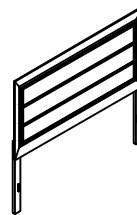

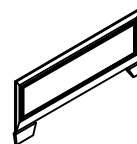(B1) HEADBOARD COMPLETE \*FROM BOX 1 1PC







**D**



(B1) FOOTBOARD \*FROM BOX 1 1PC

## HARDWARE IDENTIFICATION

### Z - B1 (BOX 1) - HARDWARE PACK IS LOCATED IN B1

<b>1</b>		BOLT	6PCS
<b>2</b>		LOCK WASHER	6PCS
<b>3</b>		FLAT WASHER	6PCS
<b>4</b>		FLAT HEAD SCREW	8PCS
<b>5</b>		SMALL ALLEN WRENCH	1PC
<b>6</b>		BIG ALLEN WRENCH	1PC

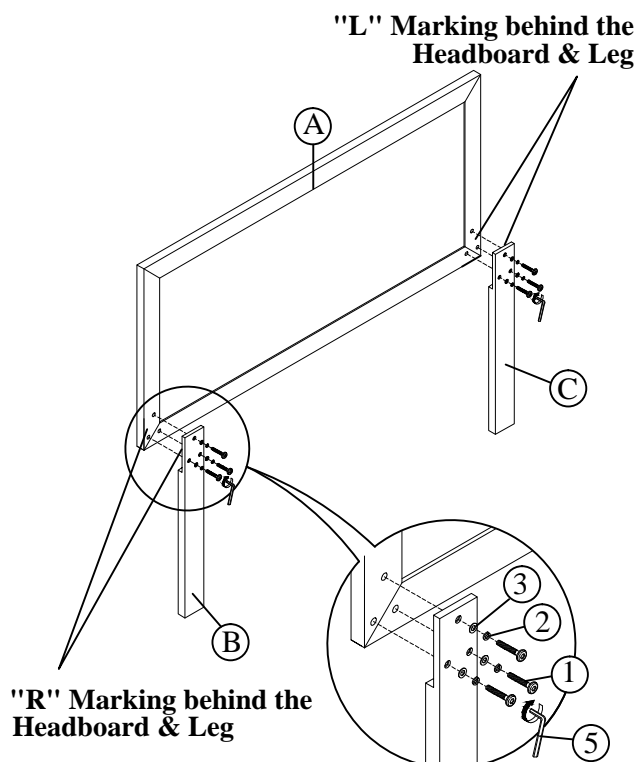
NOTE : PHILLIPS HEAD SCREW DRIVER IS REQUIRED IN THE ASSEMBLY PROCESS. HOWEVER, MANUFACTURER DOES NOT PROVIDE THIS ITEM.

# ASSEMBLY INSTRUCTIONS

## (B1) - BOX 1


### STEP 1

**\*\*Please take note the marking on the leg and headboard\*\***



## (B1 & B2) - BOX 1 & BOX 2
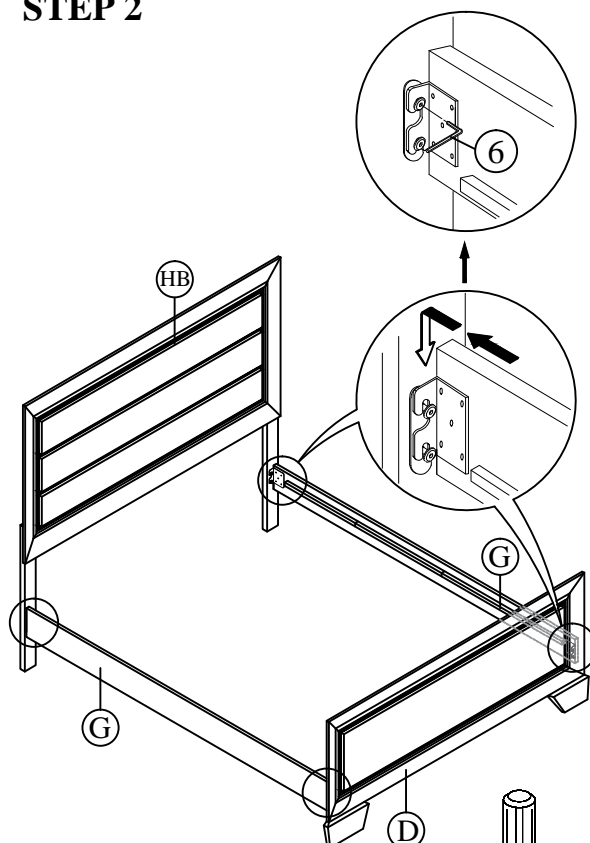
### STEP 2



### STEP 3

