


HB EZON

Tara Series Mirror Medicine Cabinet


SKU#: TARA-2028-WN

SIZE: 20"Wx28"Hx5"D (MEDIUM)

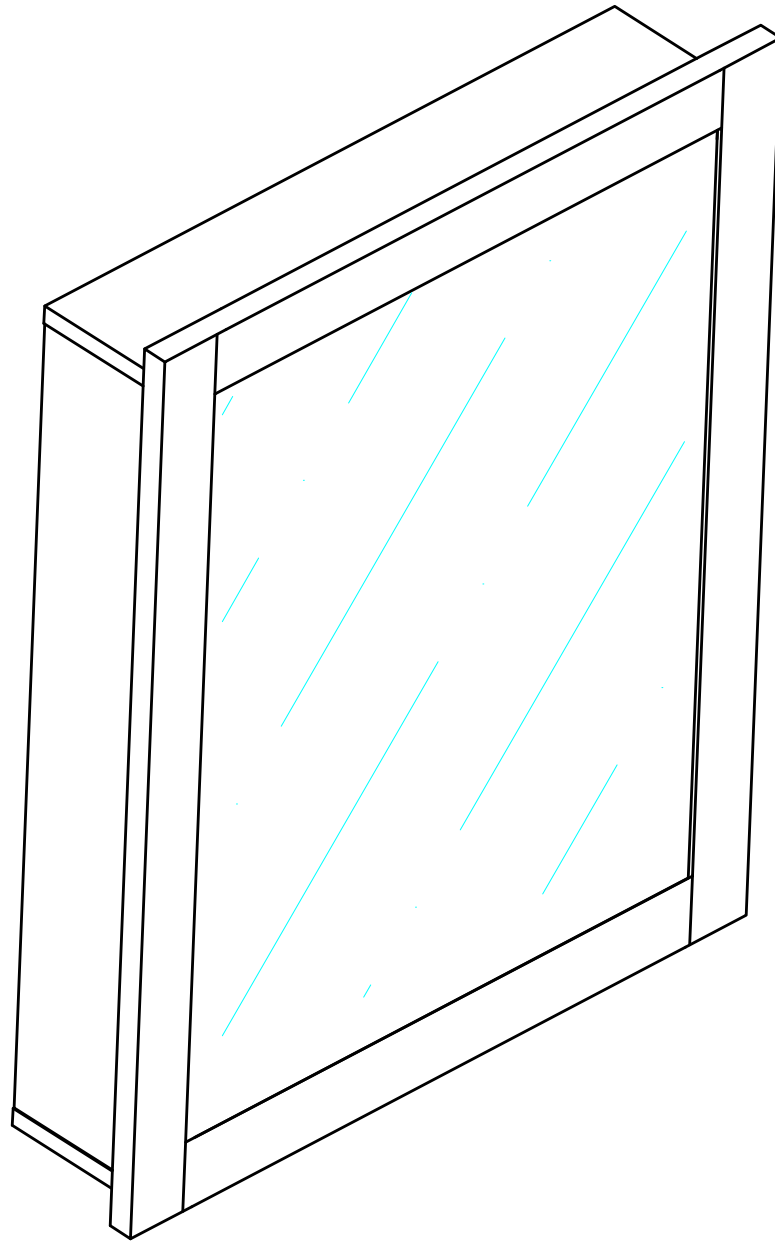












Installation Manual

Exploded Diagram

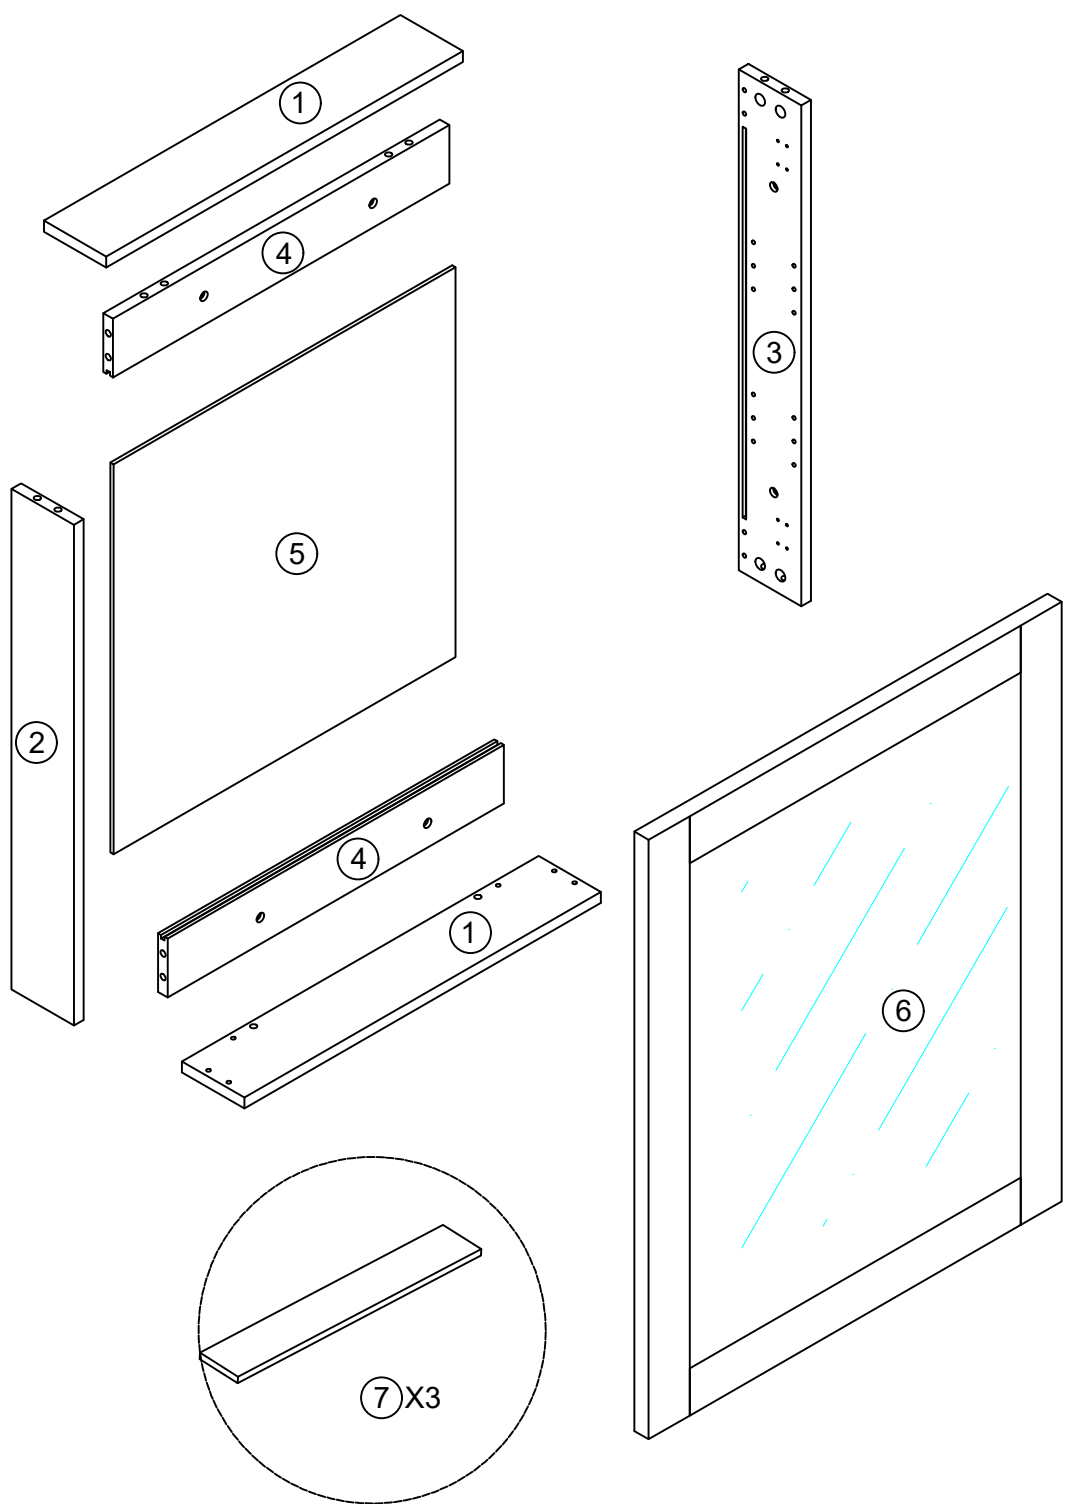


Assembling Instruction

Attention: Do not tighten the screws until all of them are in right positions

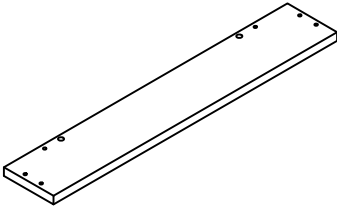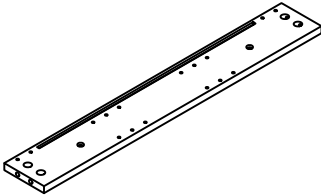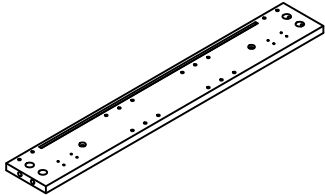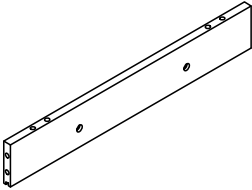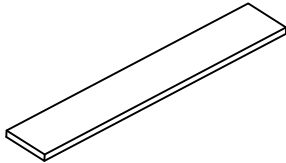 Top/Bottom Panel ① X2	 Side Panel ② X1	 Hinge Side Panel ③ X1
 Rear Support Rails ④ X2	 Back Panel ⑤ X1	 Mirror Door ⑥ X1
 Cabinet Shelves ⑦ X3		
A  Connector Screws (20 + 2 PCS)	B  Locking Screws (20 + 2 PCS)	C  Wooden Dowels (4 + 1 PCS)
D  Self-Tapping Screws (12 + 2 PCS)	E  Soft-Close Hinges (2 PCS)	F  Plastic Wall Anchors (4 PCS)
G  Mounting Screws for Wall Anchors (4 PCS)	H  Shelf Pins (12 PCS)	I  Screw Hole Covers (16 + 2 PCS)

Step:1.1


Insert connector screws (A) into the pre-drilled holes on the side panels ②, ③

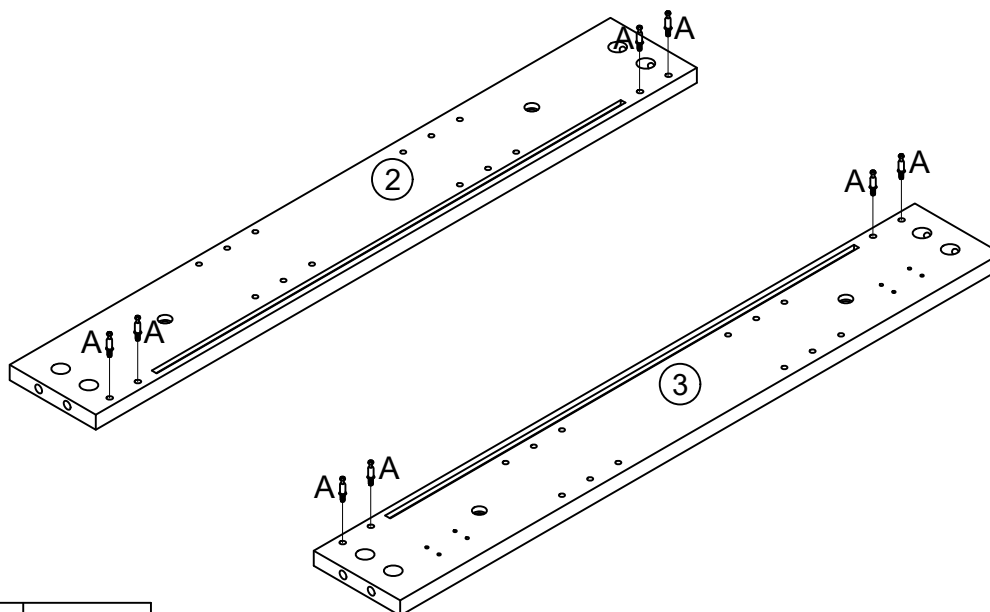

A x8PCS

Step:1.2


Insert connector screws (A) into the pre-drilled holes on the top/bottom panel ①

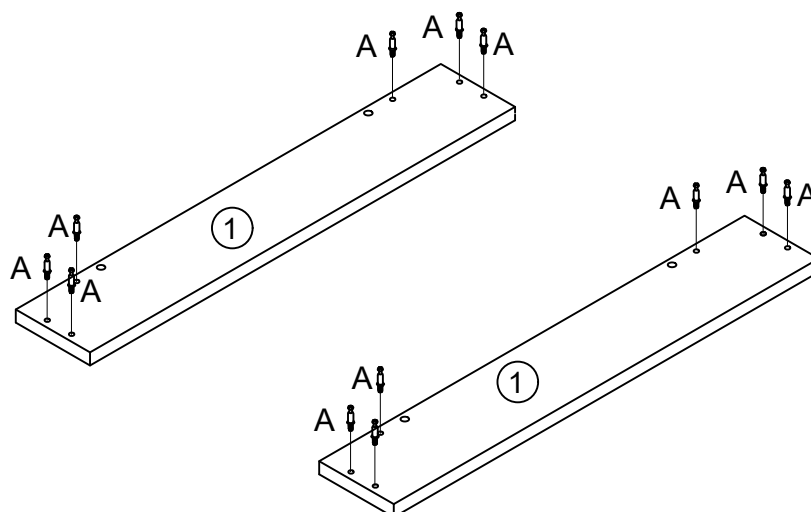

A x12PCS

Step:2


Connect the rear support rails ④ to the side panel ② and secure with locking screws (B).

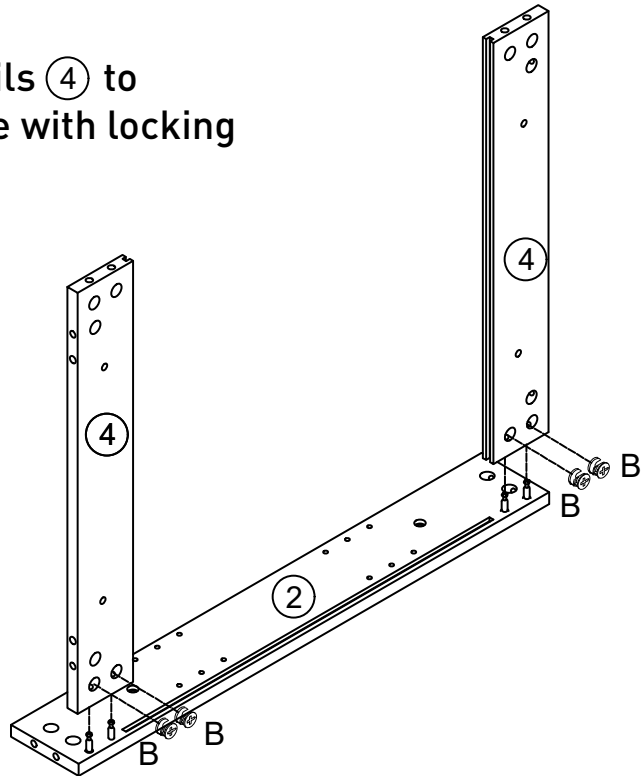

B x4PCS

Step:3


Slide the back panel ⑤ between the rear support rails ④ along the guide grooves.

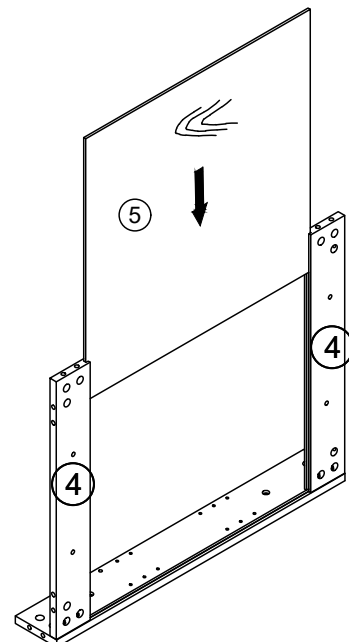

Note: Ensure the grain direction of panel ⑤ is the same as that of rails ④ .

Step:4


Connect side panel ③ to the structure, then secure with locking screws (B).

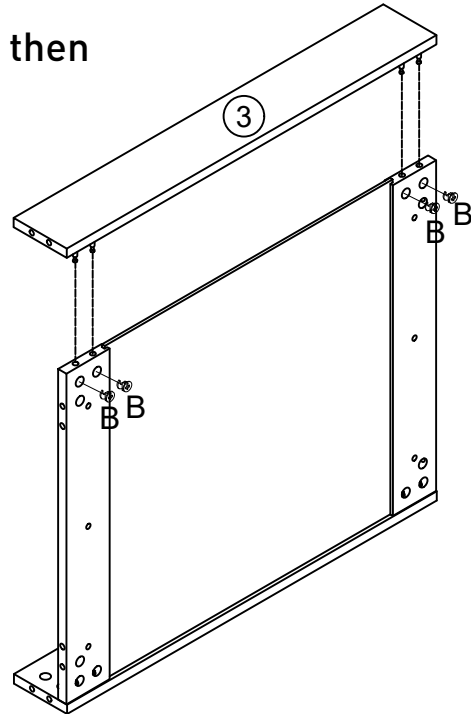

B x4PCS

Step:5

Connect the top panel ① to the frame using wooden dowels (C), then secure with locking screws (B).
Cover screw holes with screw hole covers (I).

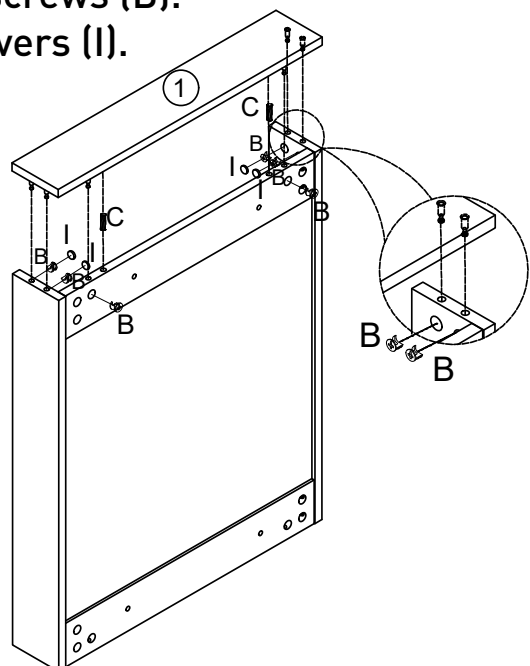

I x 4PCS



C x 2PCS




B x6PCS

Step:6

Connect the bottom panel ① to the frame using wooden dowels (C), then secure with locking screws (B).


Cover screw holes with screw hole covers (I).

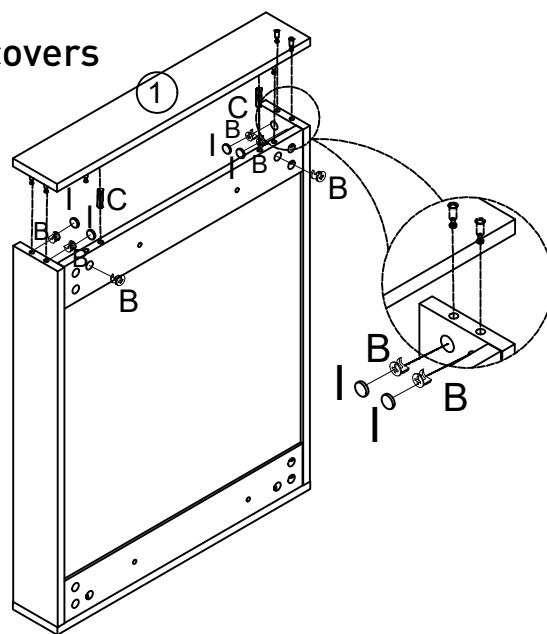

	I x 4PCS
	C x 2PCS
	B x 6PCS

Step:7

Install the hinges (E) onto the mirror door ⑥ using screws (D).

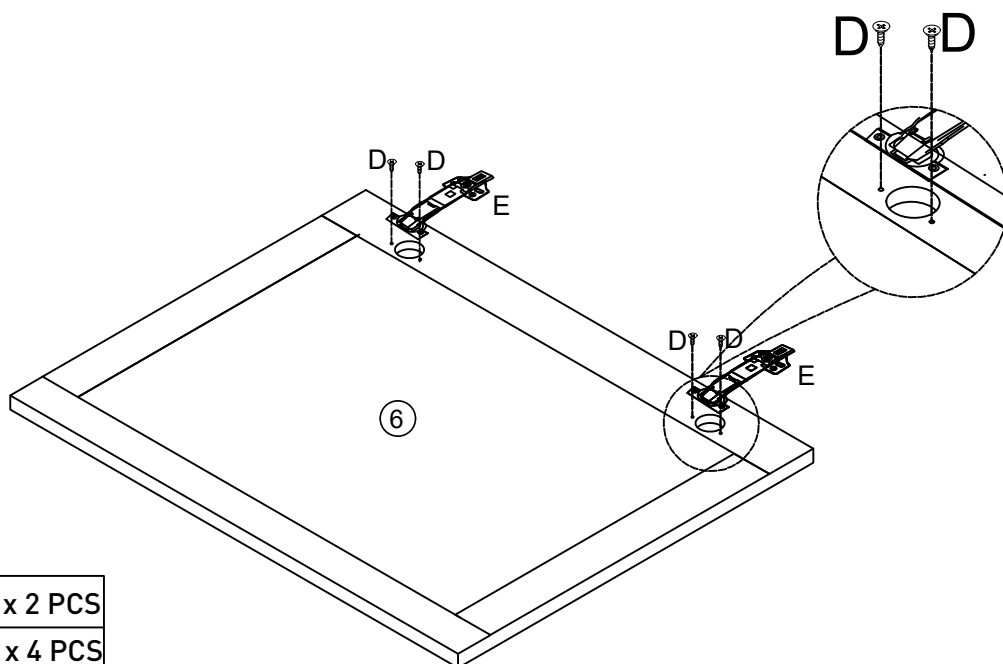

	E x 2 PCS
	D x 4 PCS


Installation Instructions

Wall Mount

Step:8.1

Wall Mount Installation

Drill holes in the wall,
install wall anchors (F),
then mount the cabinet
using screws (G).

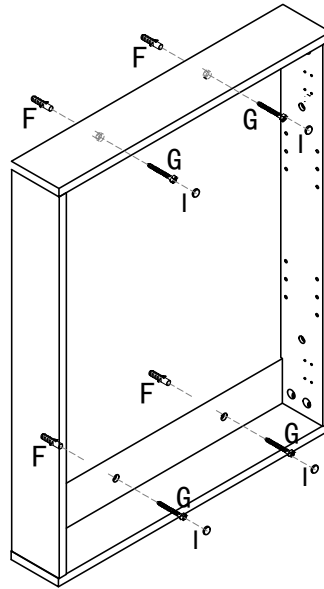


	I x 4PCS
	F x 4PCS
	G x 4PCS

Recessed Mount

Step:8.2

Recessed Mount Installation


Cut a recessed opening, insert the cabinet into the wall, install wall anchors (F), and secure with mounting screws (G).

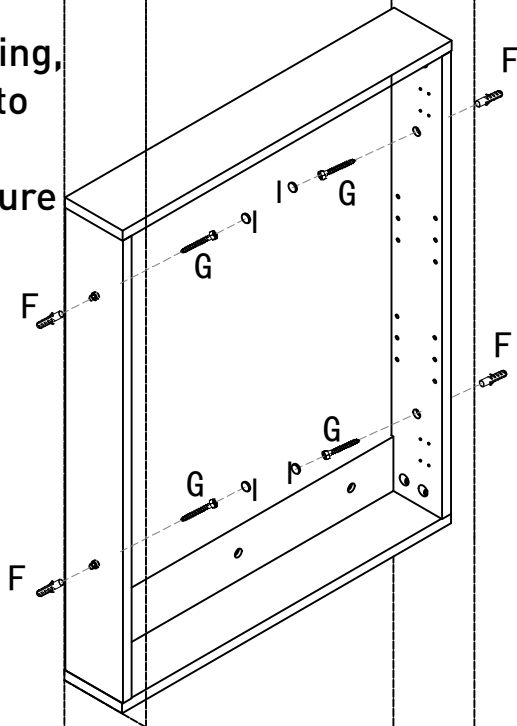

	1 x 4PCS
	Fx 4PCS
	Gx4PCS


Step:9

Attach the mirror door ⑥ to the cabinet using hinges (E), and secure with screws (D).

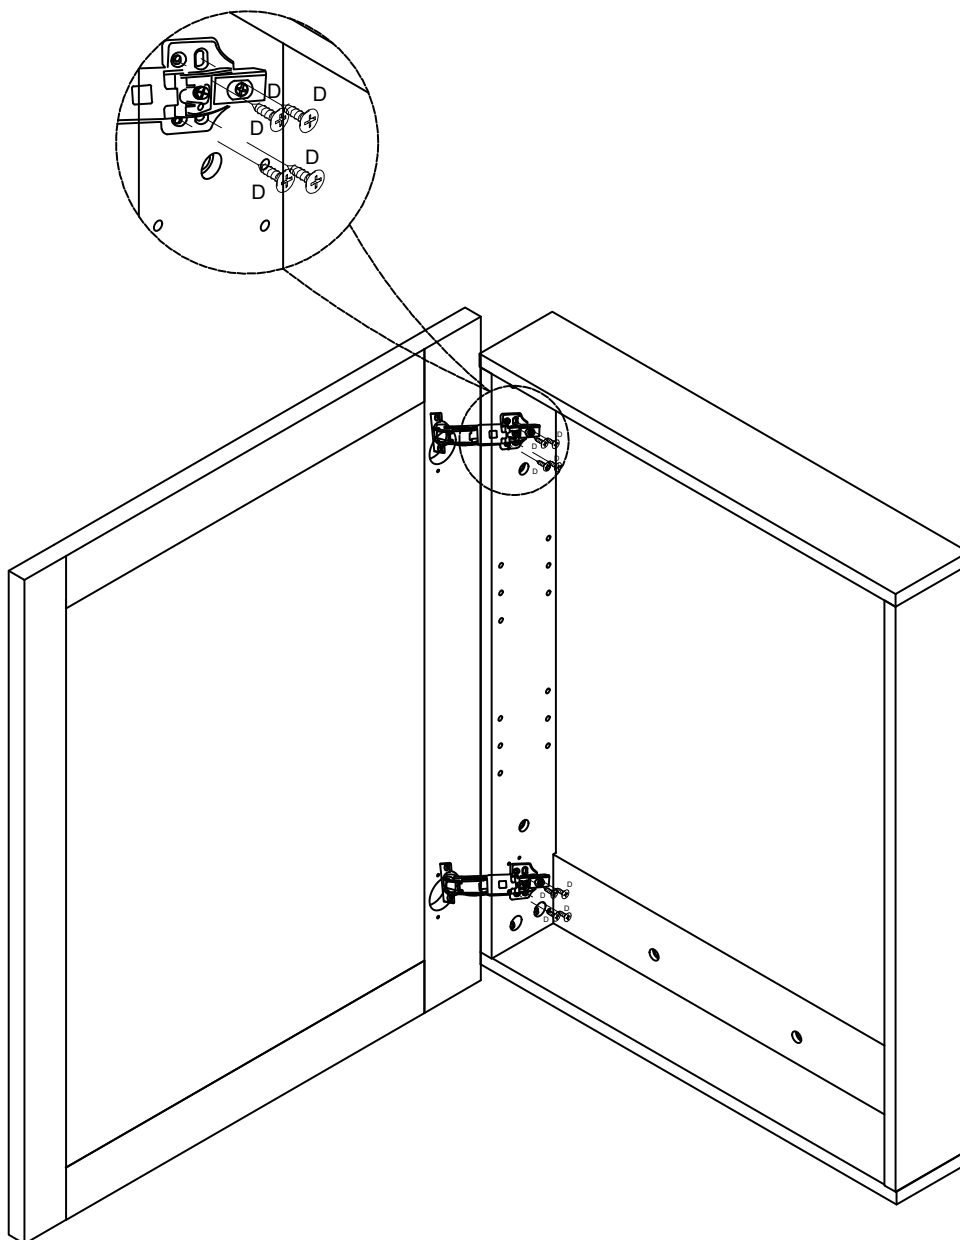


D x 8 PCS

Step:10

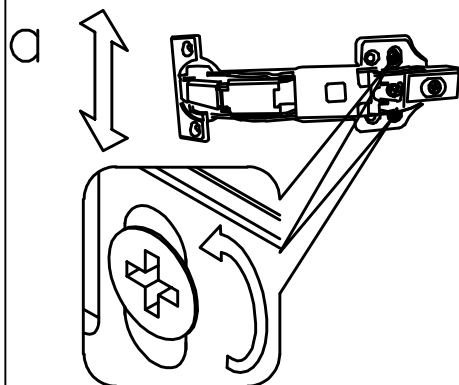


Vertical adjustment:

Move the hinge up or down to adjust door height.

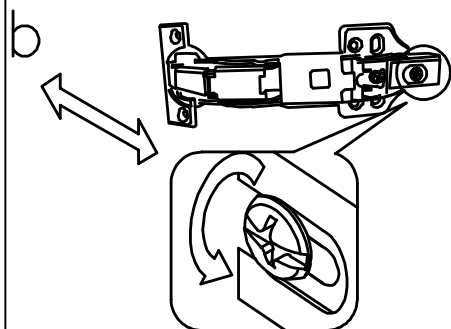

Horizontal adjustment:

Turn the screw to shift the door left or right.

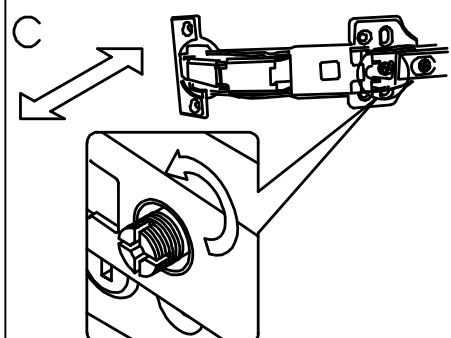


Depth adjustment:

Turn the screw to move the door in or out.

Step:11


Insert shelf pins (H) into the pre-drilled holes inside the cabinet.

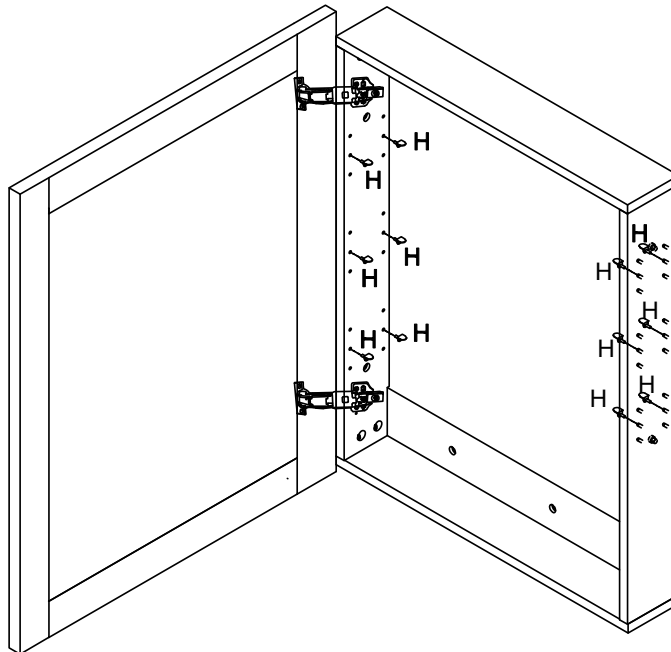


H x 12PCS

Step:12

Place the cabinet shelves ⑦ onto the shelf pins (H).

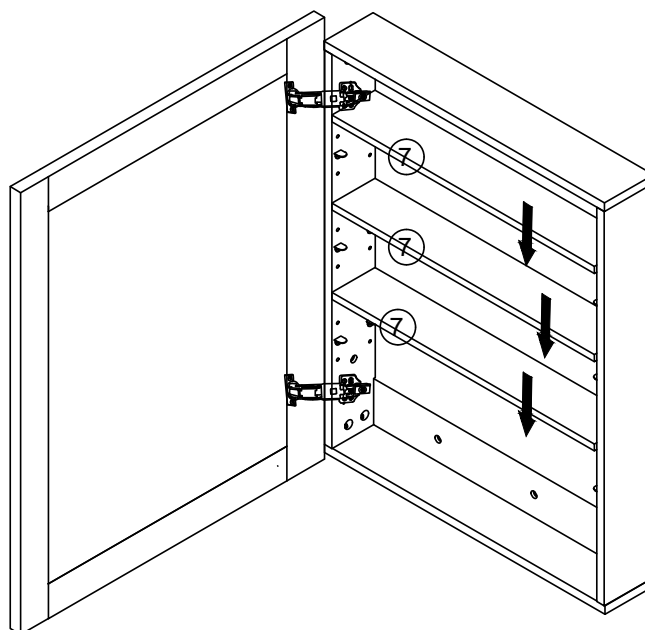

Assembly complete. Your mirror cabinet is ready for use.

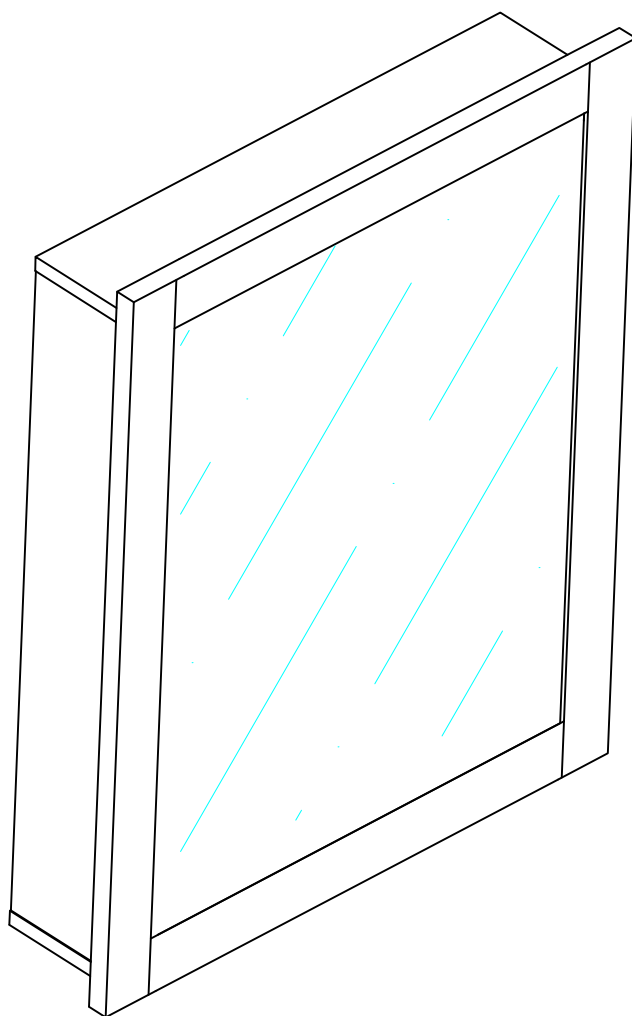

Care & Maintenance

Keep the cabinet body dry to prevent warping or moisture damage.

Wipe the mirror and wooden surfaces with a soft, damp cloth, then dry immediately with a clean towel.

Avoid prolonged exposure to high humidity or direct sunlight.

Do not use harsh chemicals, abrasive pads, or ammonia-based cleaners.

Periodically check and tighten all screws and hardware.

Do not overload the shelves beyond their intended weight limit.

Warranty Information

Your HBEZON wood medicine cabinet is backed by a 1-year limited warranty from the date of purchase. This warranty covers manufacturing defects and hardware issues under normal residential use.

For assistance or service, please contact us at:



cs@hbezon.com

We are here to assist and typically respond within 24 hours.