







CAST ALUM. LOVE SEAT

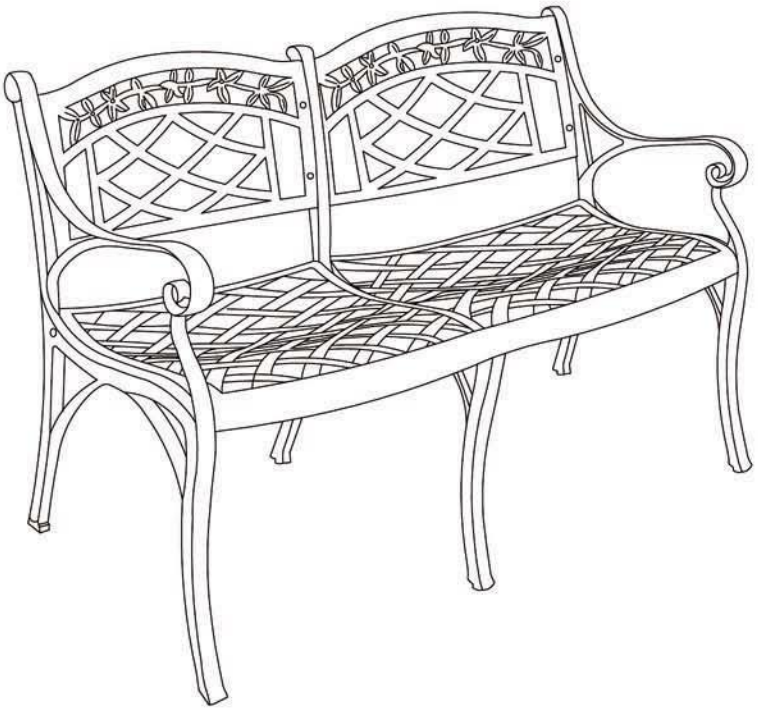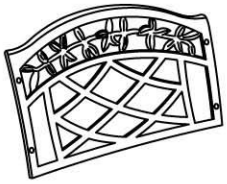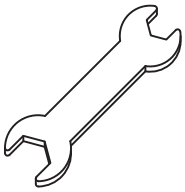


PARTS LIST

A	B	C	D	E
				
Back 2 PCS	Seat 2 PCS	Left Side Frame 1 PC	Middle Side Frame 1 PC	Right Side Frame 1 PC

HARDWARE LIST

1	2	3	4	5
				
Phillips Heat Bolt (M6*30) 8 pcs	**Spring Washer (M6) 8 pcs**	**Flat Washer (M6) 8 pcs**	**Nut (M6) 8 pcs**	**Nut Cap (M6) 8 pcs**
6	**7**	**8**	**9**	**10**
				
Short Bolt (M8*30) 4 pcs	**Spring Washer (M8) 6 pcs**	**Flat Washer (M8) 12 pcs**	**Nut (M8) 6 pcs**	**Nut Cap (M8) 6 pcs**
11	**12**	**13**		
				
Wrench (M6 & M8) 1 pc	**Long Bolt (M8*45) 2 pcs**	**Bolt Cap (M8) 4 pcs**		

Step 1: Attach Frames (C,D&E) to Seats (B) With Short Bolts (Part #6),Long Bolts(Part #12), Flat Washers(Part #8),Spring Washers(Part #7) & Nuts (Part #9).Note- Long Bolts (Part #12) will be used to attach the Middle Frame (D) & Short Bolts (Part #6) will be used to attach the Left & Right Side Frames (C & E).Cover M8X30 mm bolts (Part #6) with bolt caps (Part #13).Note - Do not fully tighten bolts at this time.

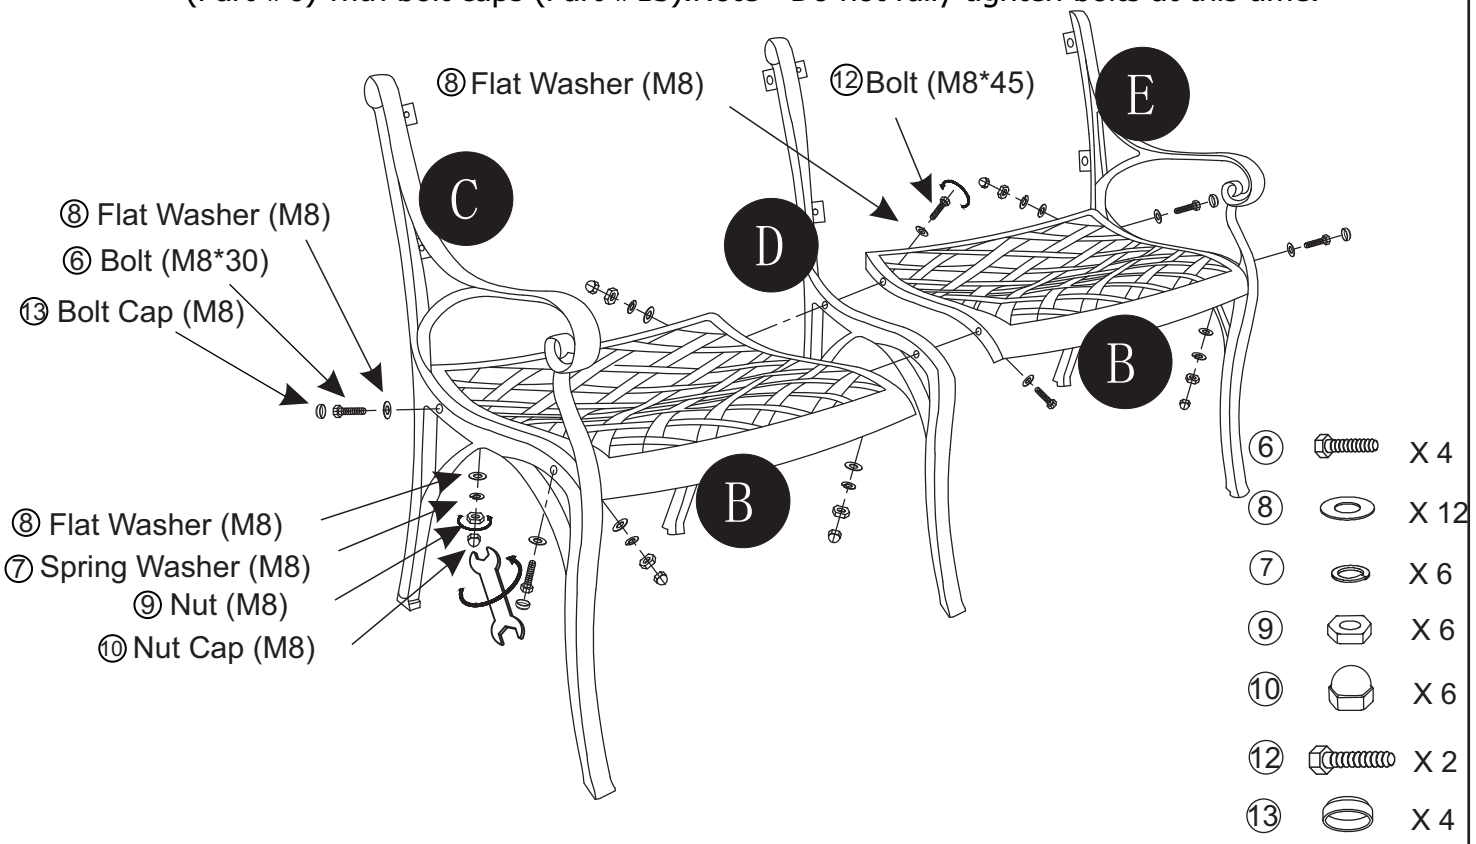

Step 2: Attach Back (A) to unit with Phillips Head Bolts (Part #1),Flat Washers (Part #3), Spring Washers (Part #2),and Nuts (Part #4).Tighten all bolts completely.Cover all Nuts (Part #'s 4) with Nut Caps (Part #'s 5).

