


Hall Tree

Assembly Instructions - Please keep for future reference

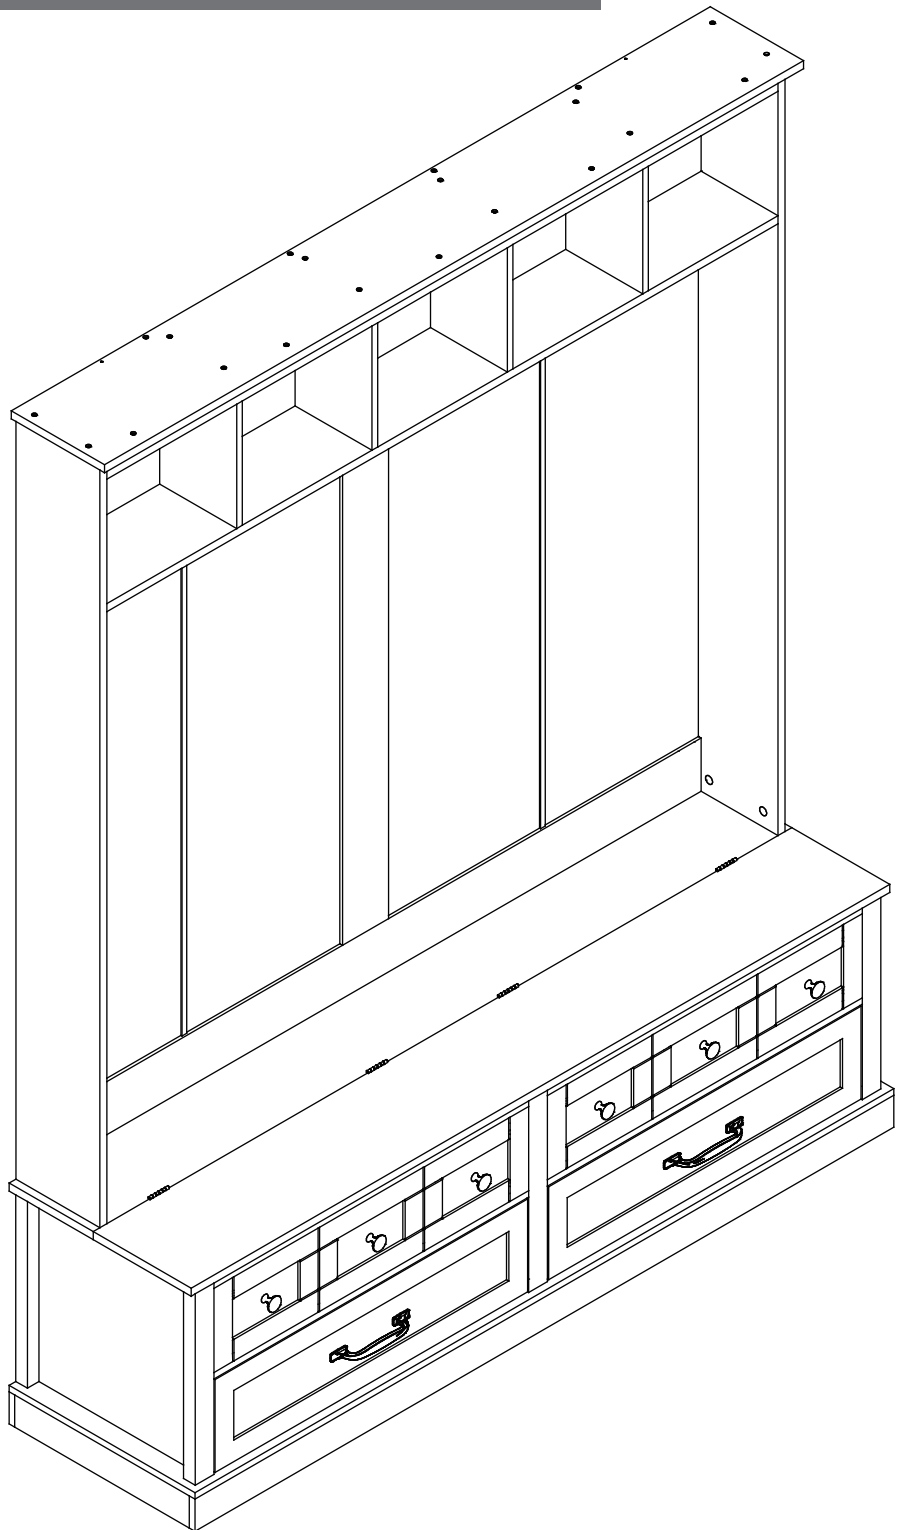

Dimensions

Width- 59.05inch

Depth-15.75inch

Height-73.85inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions






















To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required

 (A) Cam Bolt x 112	 (B) 6*30mm Dowel x 77	 (C) Cam lock x 112	 (D) 3*12mm Hook x 5set
 (E) 4*14mm Screw x 2set	 (F) 4*30mm Screw x 31	 (G) 4*20mm Screw x 4	 (H) 3*12mm Screw x 16
 (I) 4*8mm Handle x 6set	 (J) 4*40mm Screw x 6	 (K) 3*12mm Three fold hinge x 4set	 (L) 3*12mm Screw x 1set
 (M) Foot pad x 3	 (N) 4*8mm Handle x 2set	 (O) 4*40mm Plastic expansion x 2set	 (R) Allen key x 1
 (CR) runner x 2	 (CL) runner x 2	 (DR) runner x 2	 (DL) runner x 2
 (P) Perfect fit x 112			

Tools required Not Included



Phillips screwdriver
(medium & large)

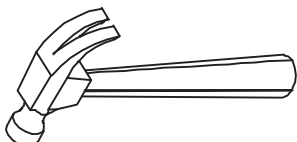


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

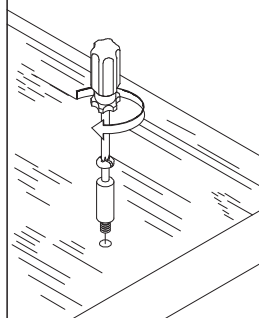

Step 2

Push the male camlock into the entry hole.

2

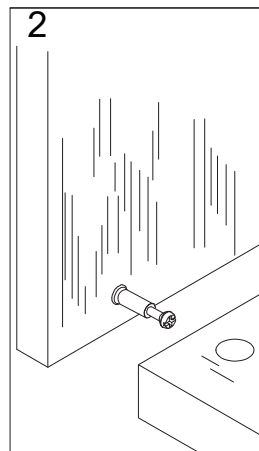


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

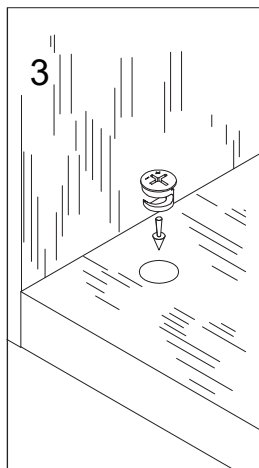


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4




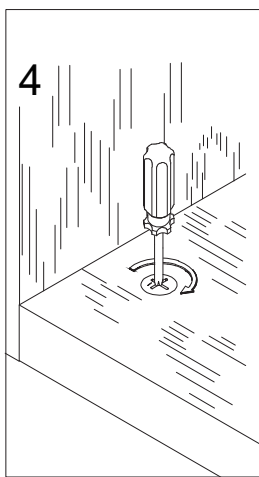












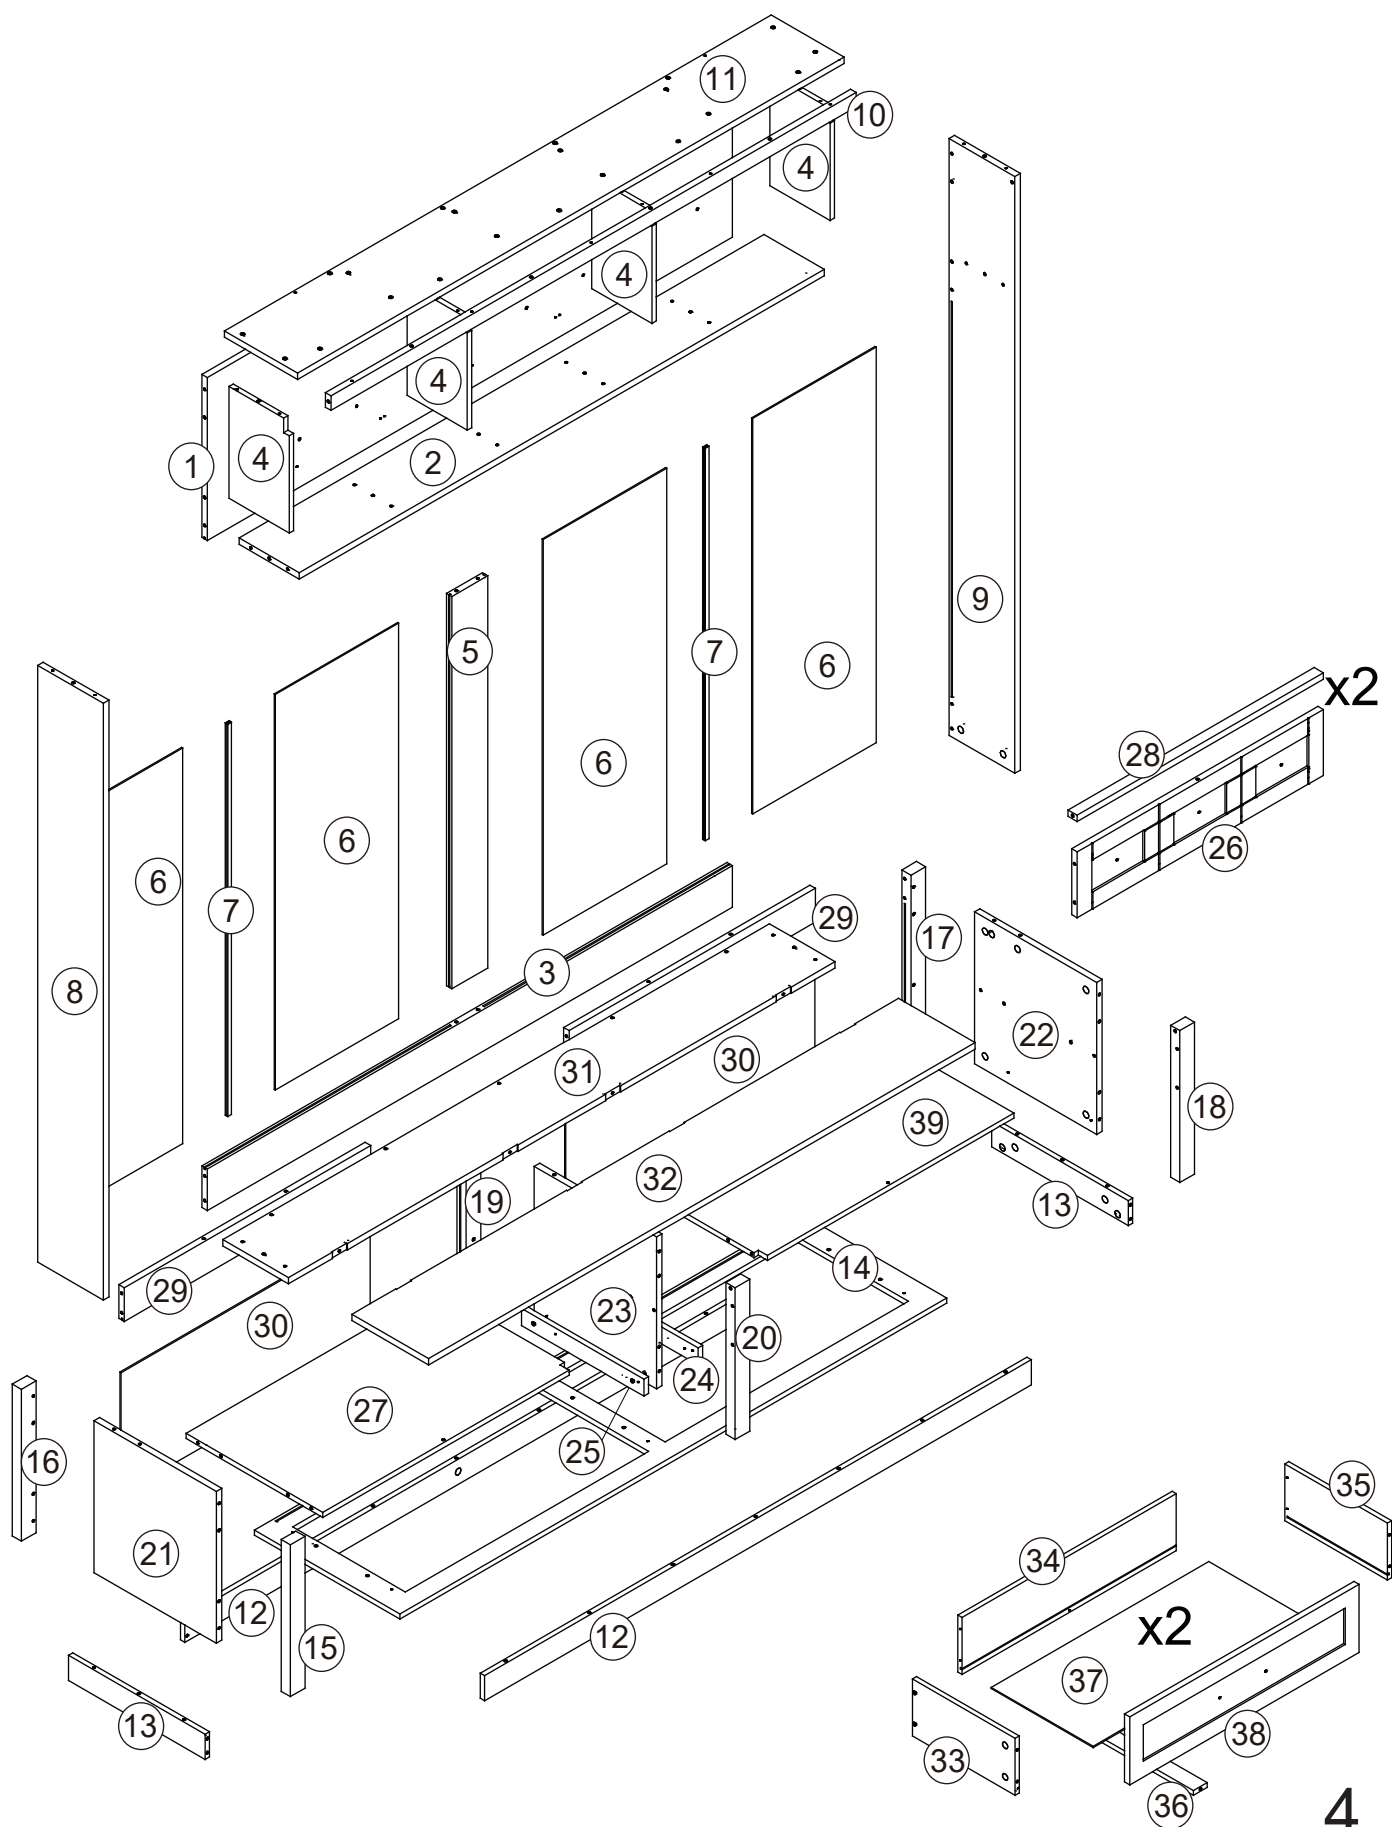




Assembly Instructions

















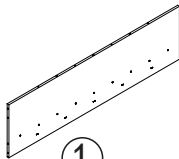
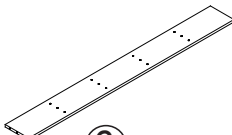
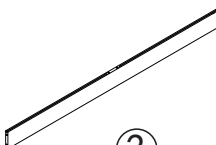



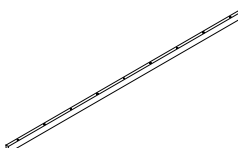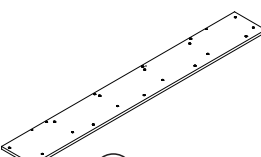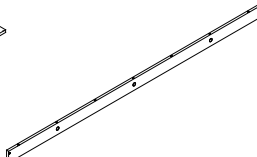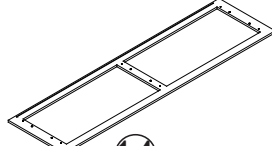PART LIST

There are 1 boxes of this product.


 ① x1 On the back panel 1439x385x15mm	 ② x1 roof 1439x170x15mm	 ③ x1 Lower back cross bar 1439x100x15mm	 ④ x4 Medium Vertical Partition 263x170x12mm	
 ⑤ x1 Middle back vertical bar 930x100x15mm	 ⑥ x4 Upper back panel 938x338x3mm	 ⑦ x2 Back slats	 ⑧ x1 Upper side panel 1414x187x15mm	 ⑨ x1 Upper side panel 1414x187x15mm
 ⑩ x1 Roof Front horizontal bar 1439x35x15mm	 ⑪ x1 tip plate 1498x200x15mm	 ⑫ x2 Front and back of floor 1502x60x12mm	 ⑬ x2 Bottom Plate left and right bar 375x60x12mm	 ⑭ x1 base plate 1502x400x12mm
 ⑮ x1 Front and rear side panels 360x40x25mm	 ⑯ x1 Front and rear side panels 360x40x25mm	 ⑰ x1 Front and rear side panels 360x40x25mm	 ⑱ x1 Front and rear side panels 360x40x25mm	 ⑲ x1 Front and rear side panels 360x40x25mm

PART LIST

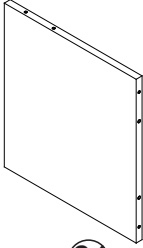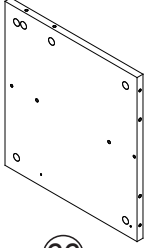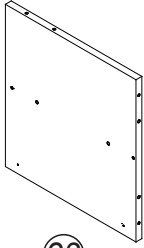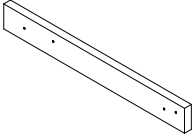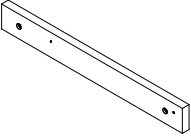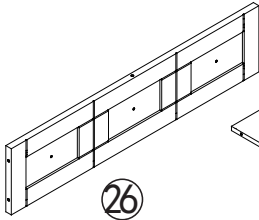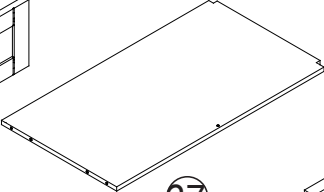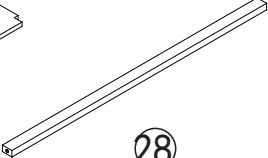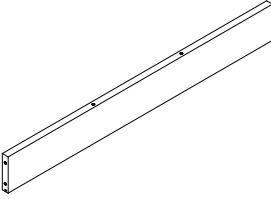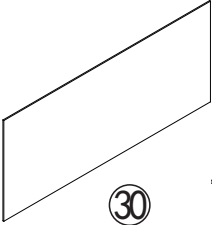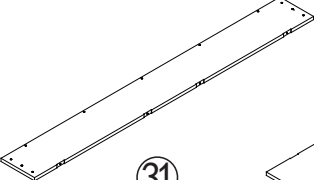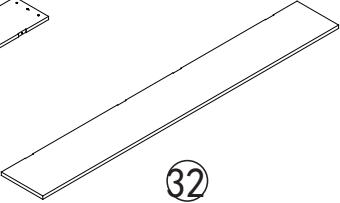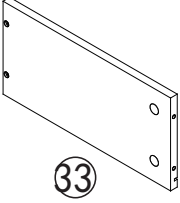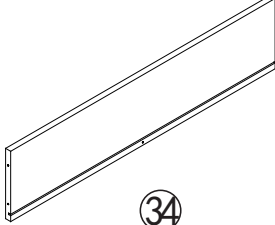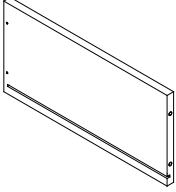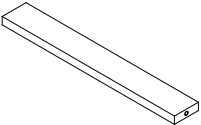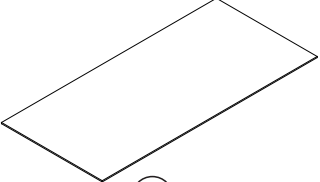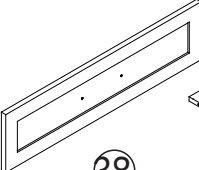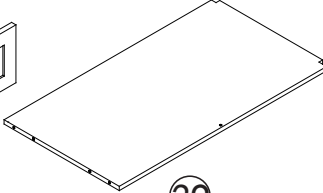
				
②0	②1	②2	②3	②4
x1 Front and rear side panels 360x40x25mm	x1 Side panels 335x360x15mm	x1 Side panels 335x360x15mm	x1 Medium vertical plate 335x360x15mm	x1 Medium vertical plate sticker 335x39x12mm
				
②5	②6	②7	②8	②9
x1 Medium vertical plate sticker 268x339x15mm	x2 Fake noodles 675x156x15mm	x1 Fixed Laminate 687x375x12mm	x2 Cross bar on false drawing surface 675x25x15mm	x2 Rear Bar 675x80x15mm
				
③0	③1	③2	③3	③4
x2 Lower back panel 683x288x3mm	x1 Rear Middle Panel 1498x190x15mm	x1 Front center panel 1498x210x15mm	x2 Draw the side plate 300x144x12mm	x2 Draw back board 626x144x12mm
				
③5	③6	③7	③8	③9
x2 Draw the side plate 300x144x12mm	x2 Draw the bottom 288x40x12mm	x2 Draw the bottom plate 634x296x3mm	x2 Draw the panel 670x168x15mm	x1 Fixed Laminate 687x375x12mm

Assembly Instructions

Step 1

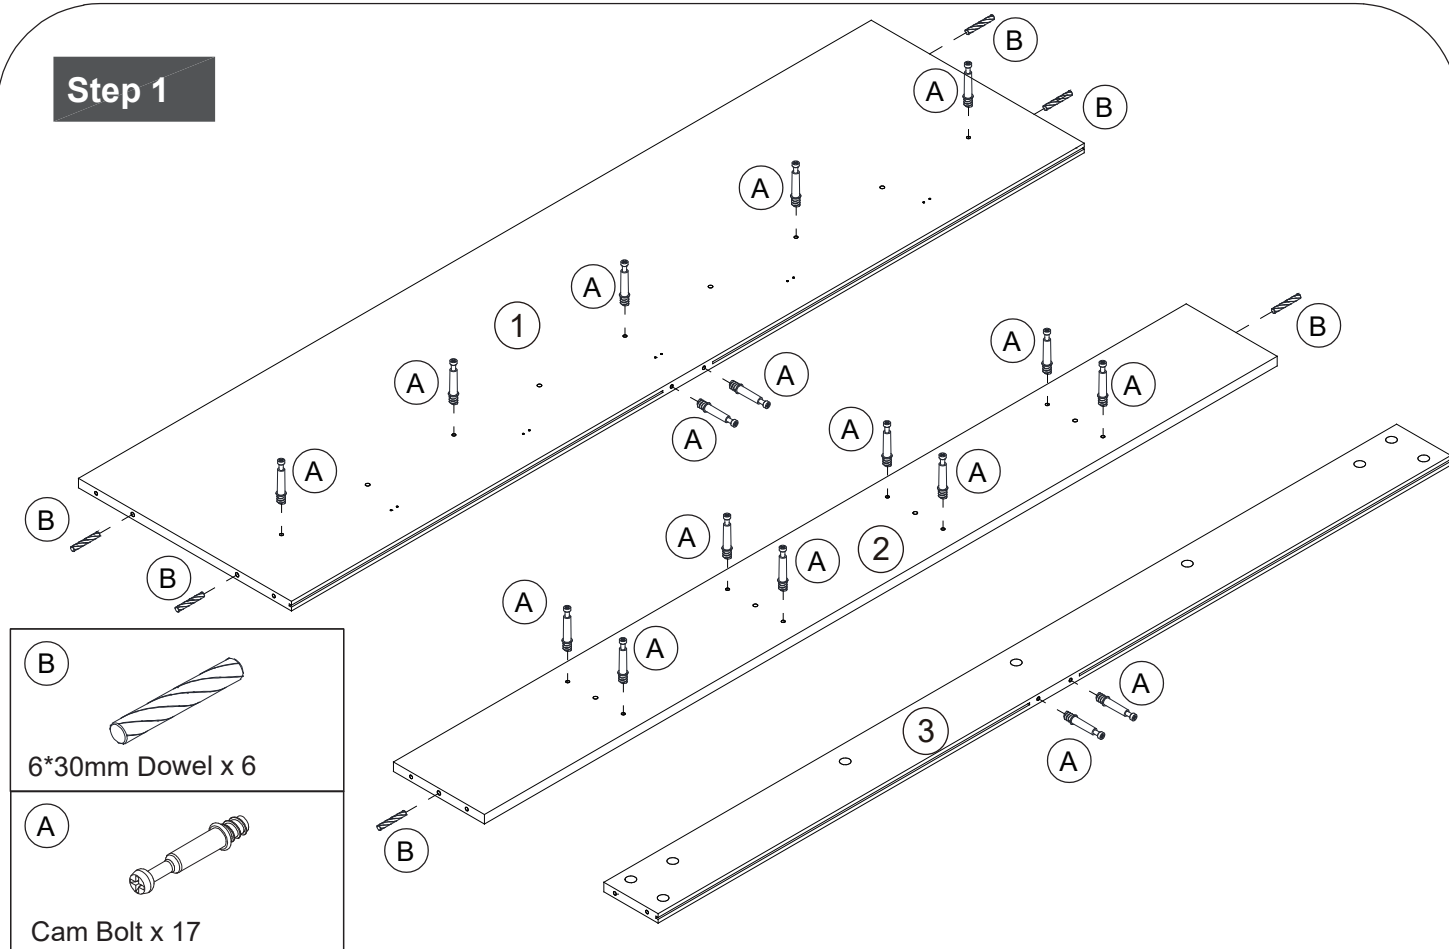


Step 2

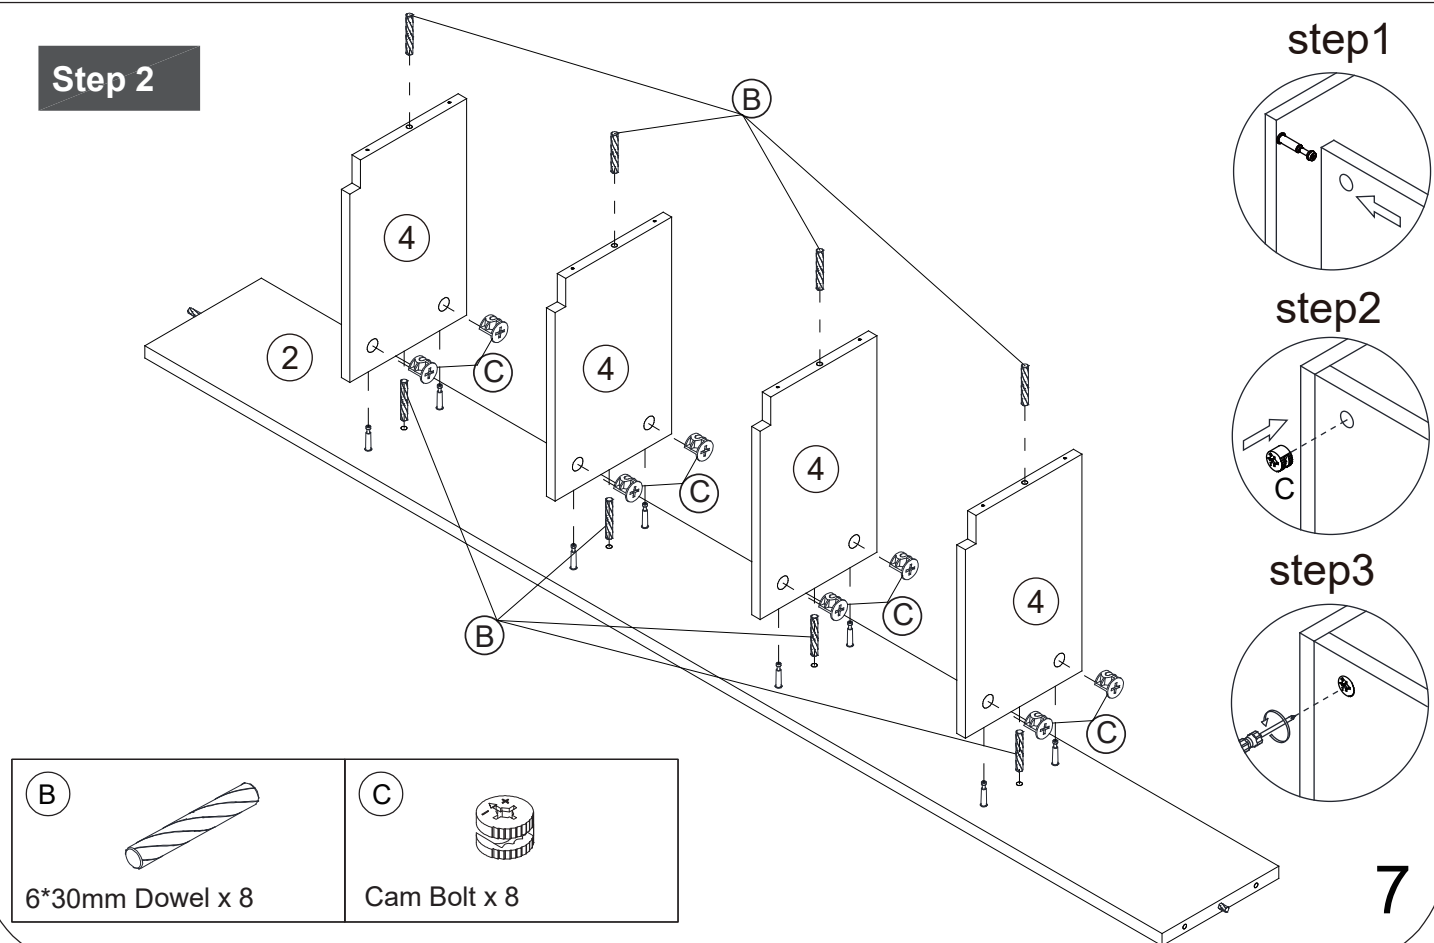

Assembly Instructions

Step 3

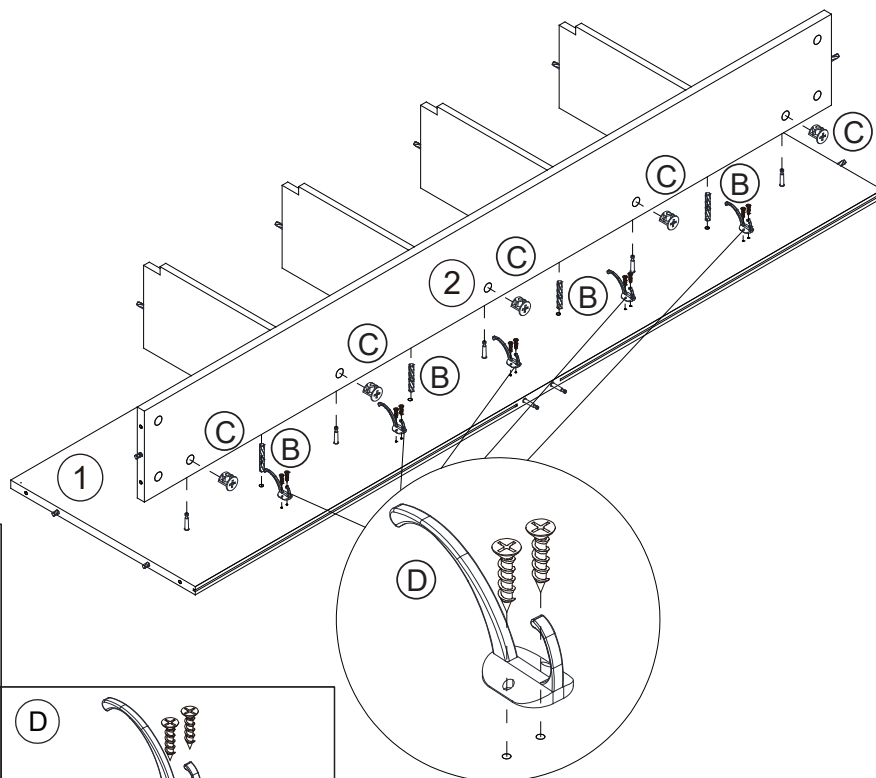

(B)




6*30mm Dowel x 4

(C)




Cam Bolt x 5

(D)




3*12mm Hook x 5set

Step 4

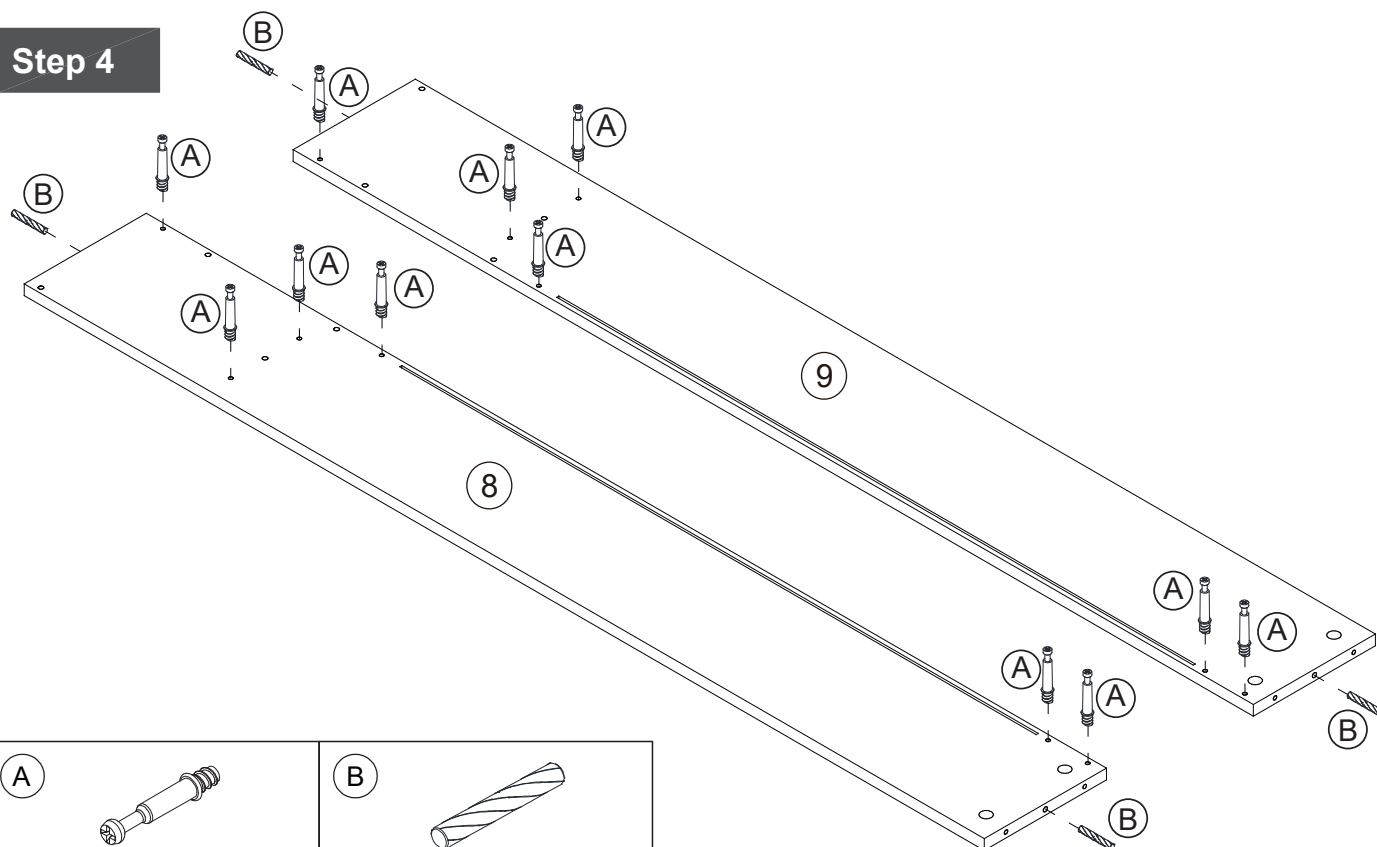

(A)



Cam Bolt x 12

(B)



6*30mm Dowel x 4

Step 5




Cam lock x 4

Step 6




Assembly Instructions

Step 7

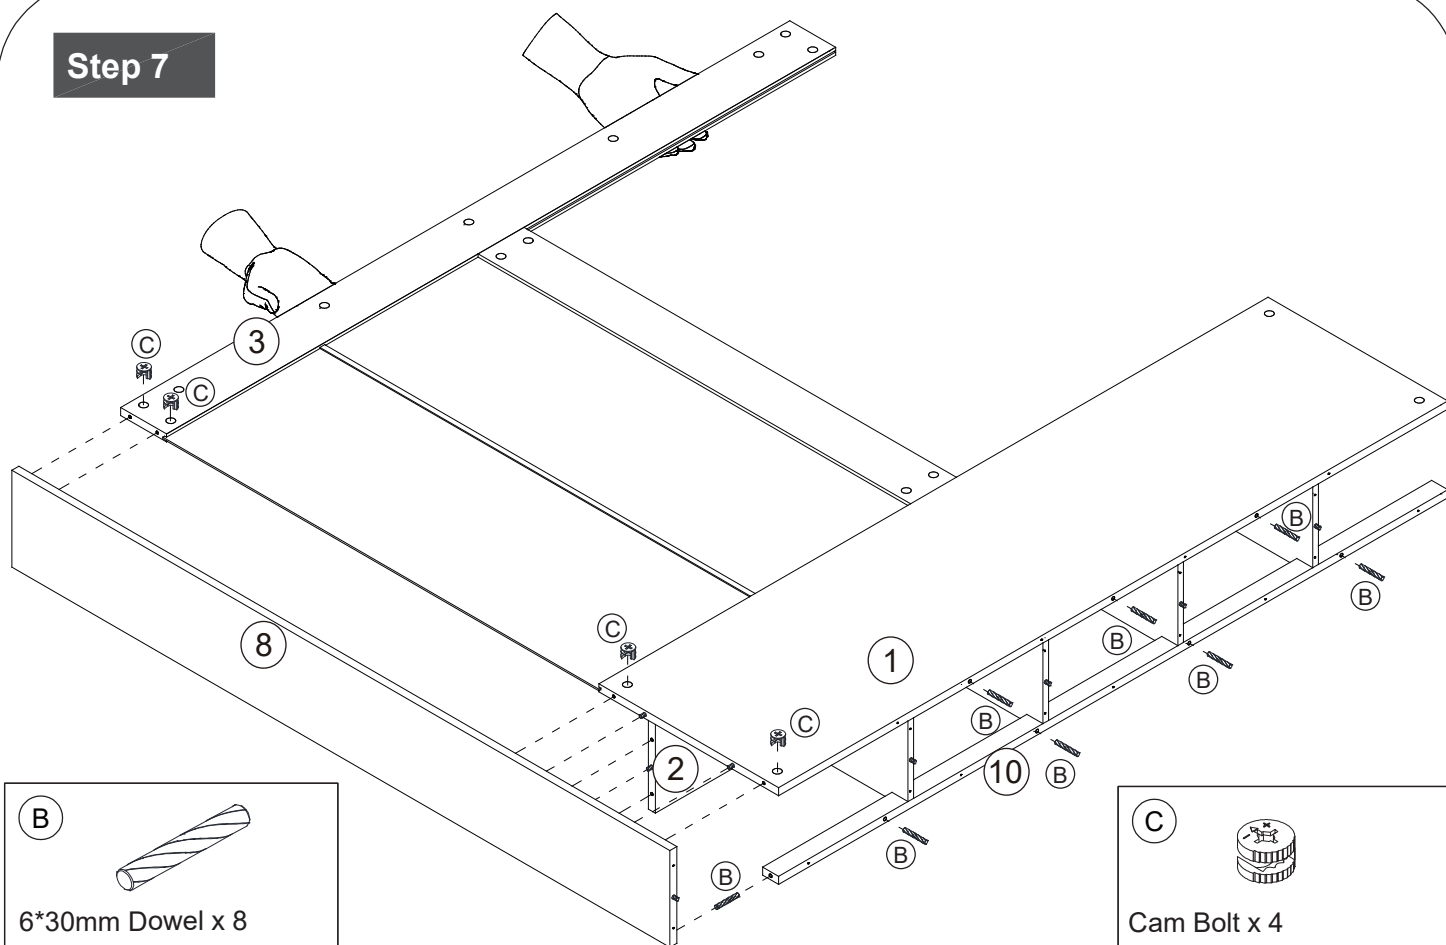


Step 8

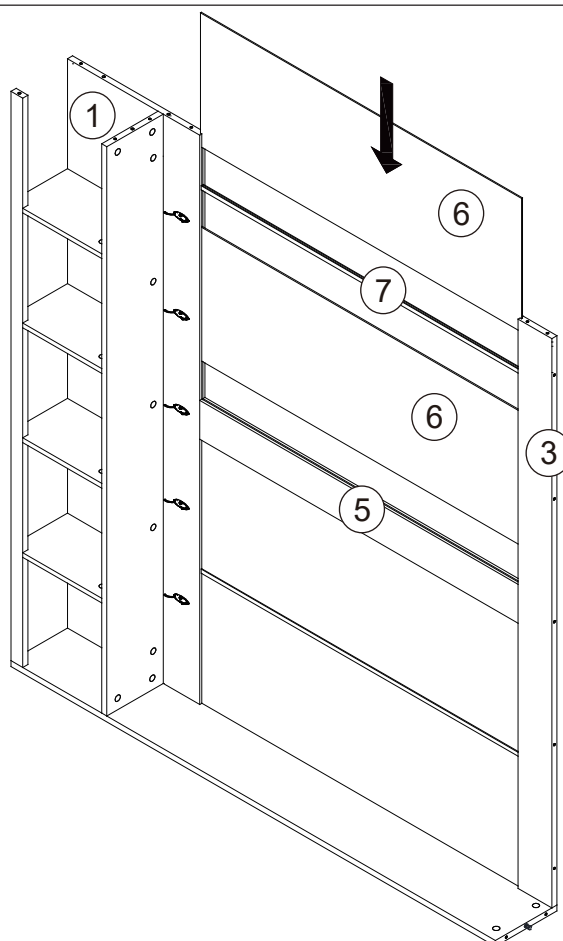


Assembly Instructions

Step 9

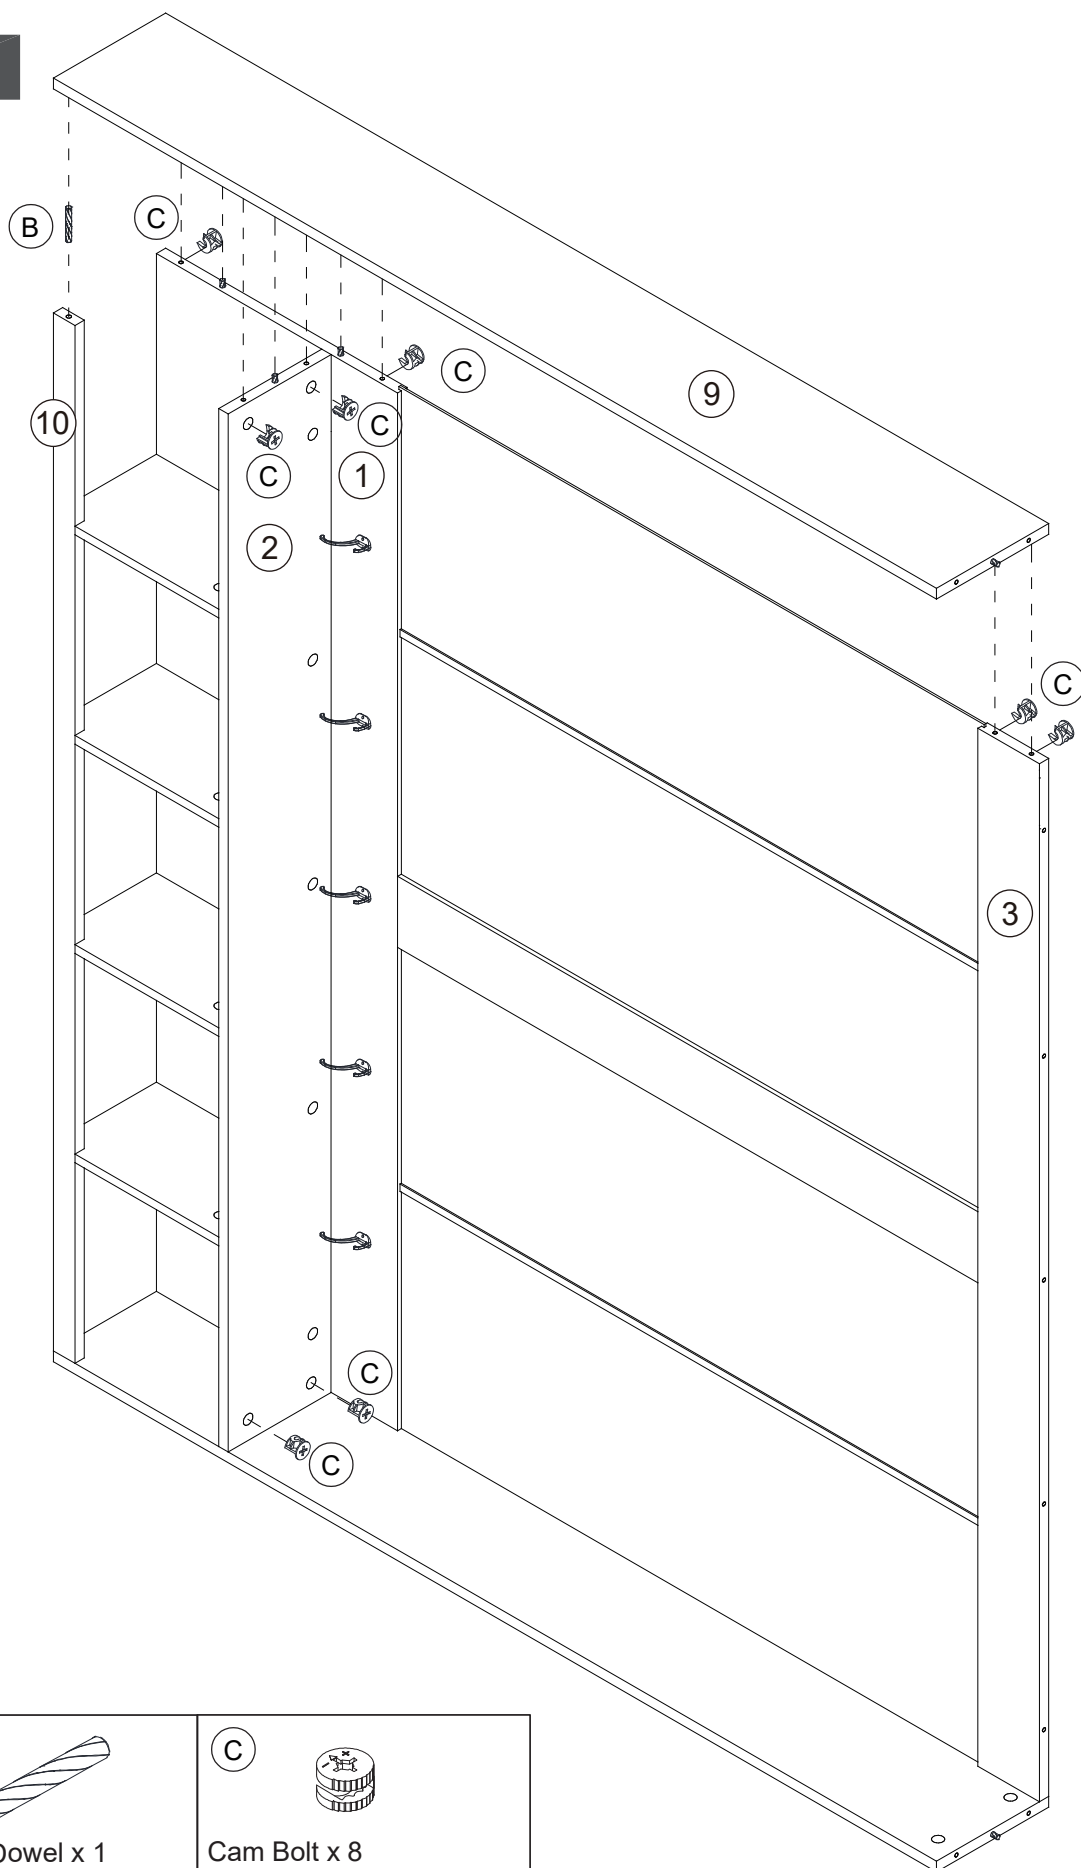

(B)



6*30mm Dowel x 1


(C)



Cam Bolt x 8


Assembly Instructions

Step 10

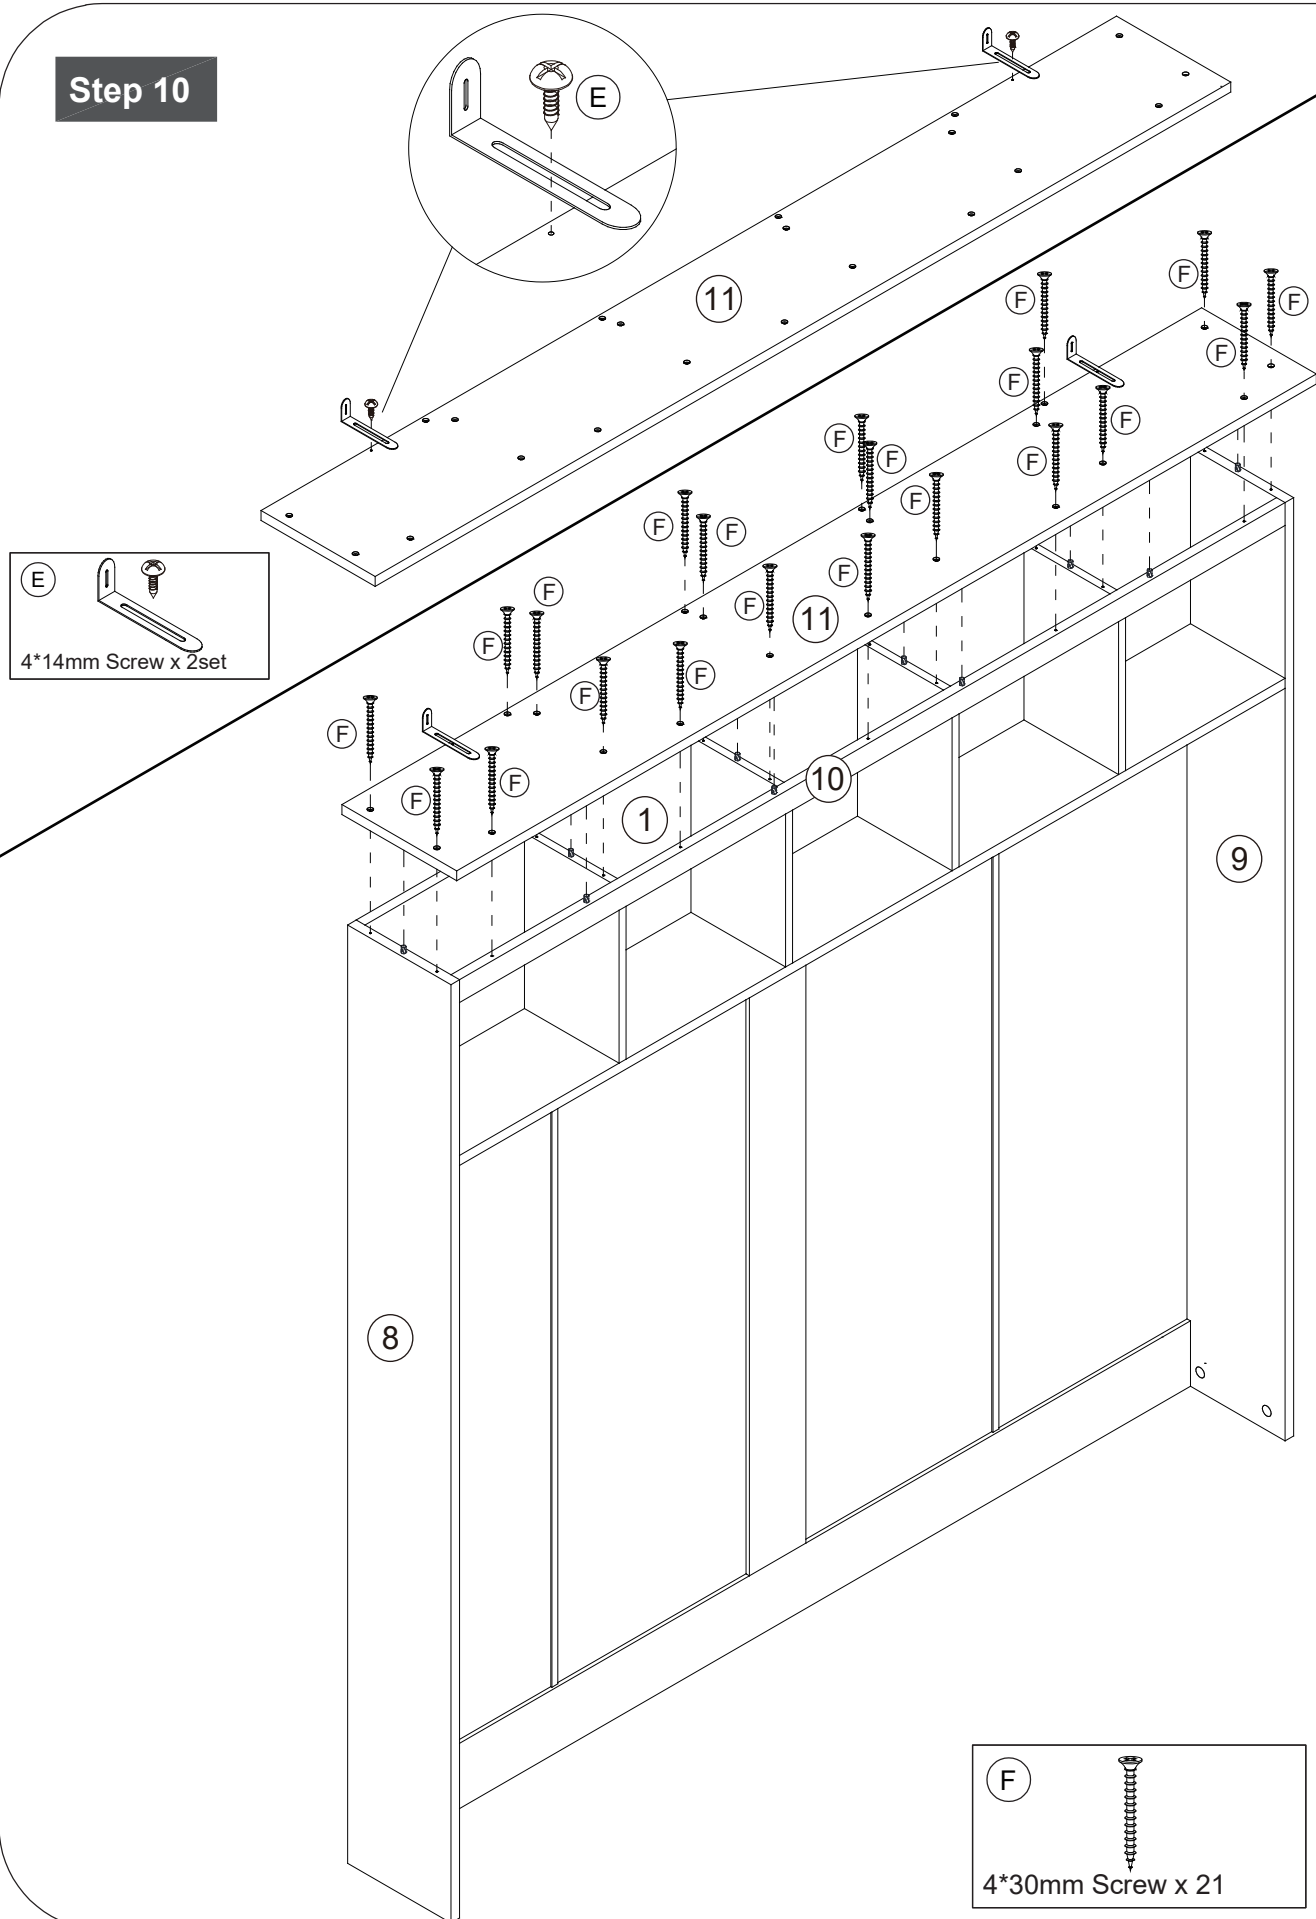


Assembly Instructions

Step 11

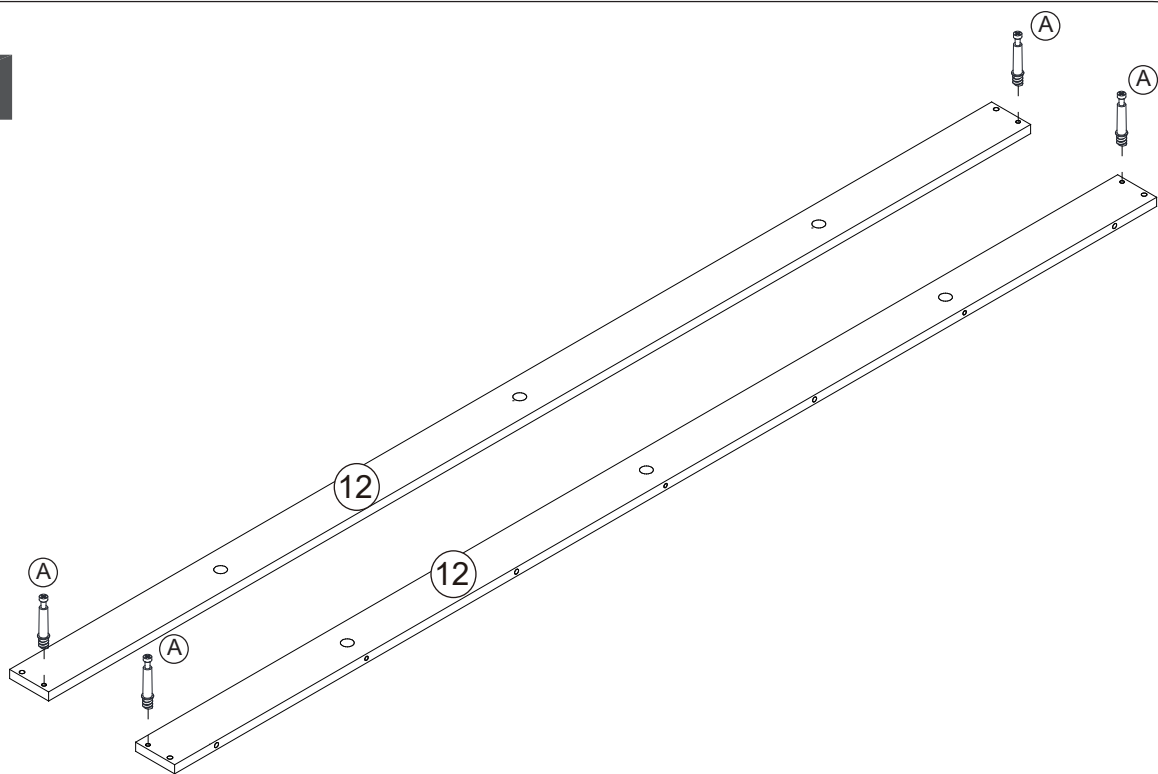


(A)




Cam Bolt x 4

Step 12



step3

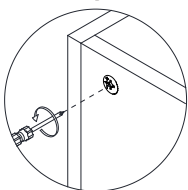

step2

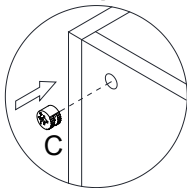

step1

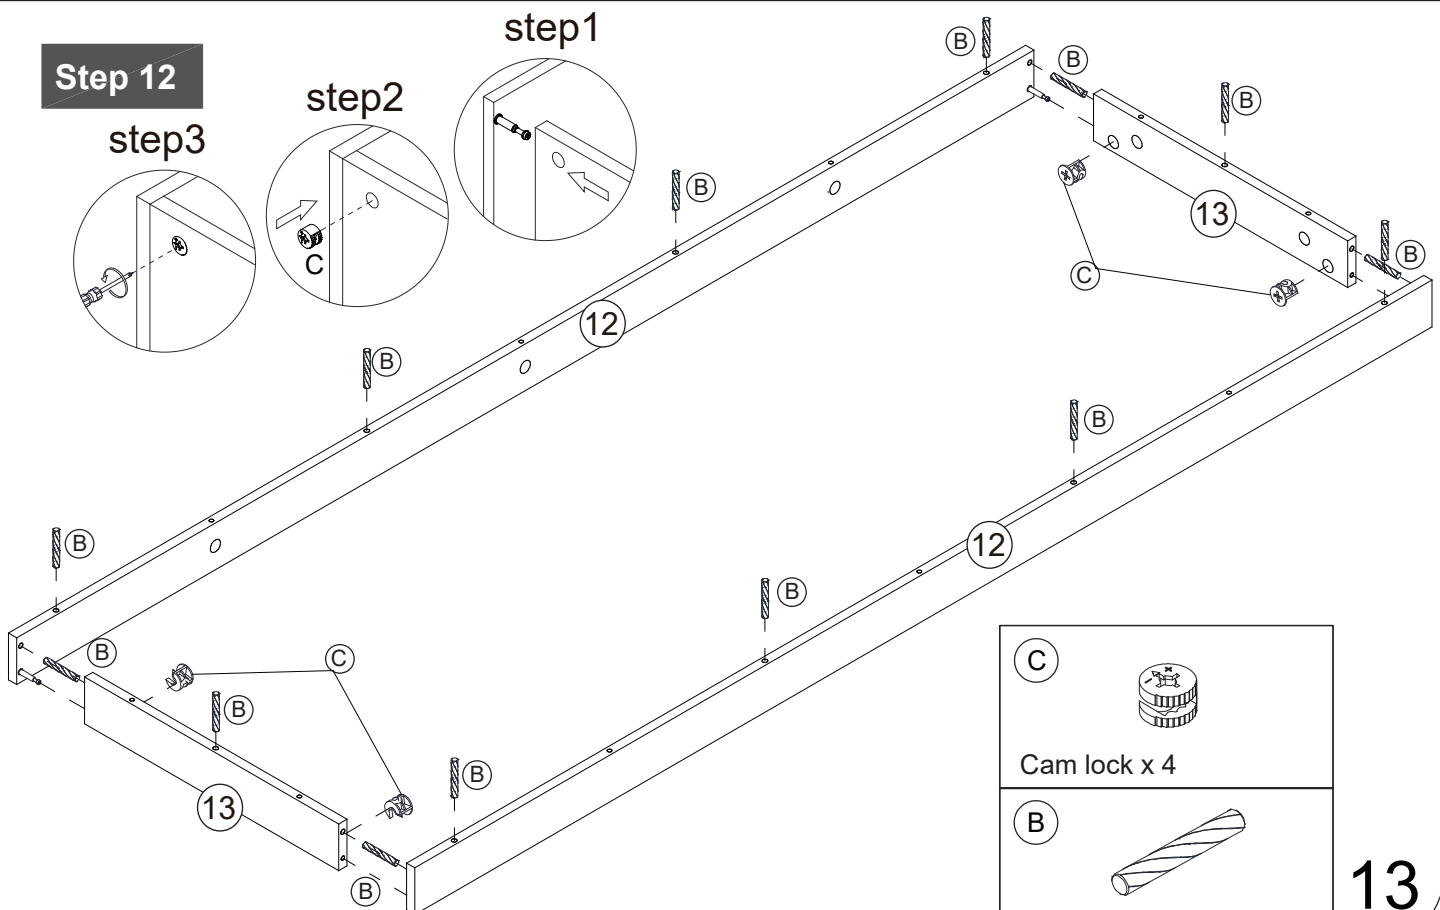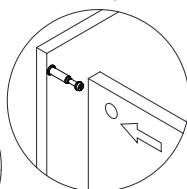

(C)



Cam lock x 4

(B)




6*30mm Dowel x 14


13

Assembly Instructions

Step 13

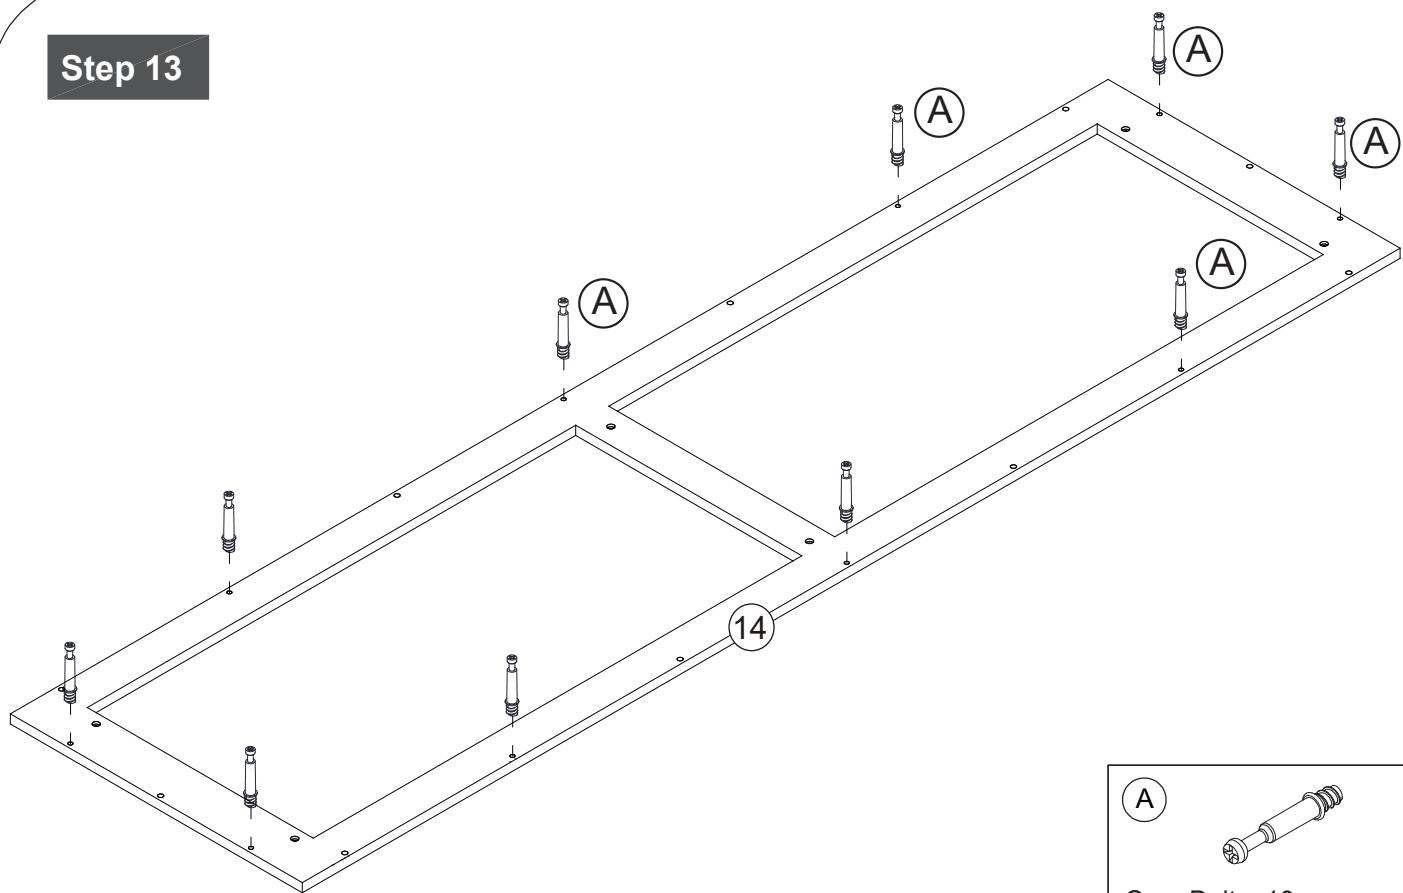


A



Cam Bolt x 10

Step 14

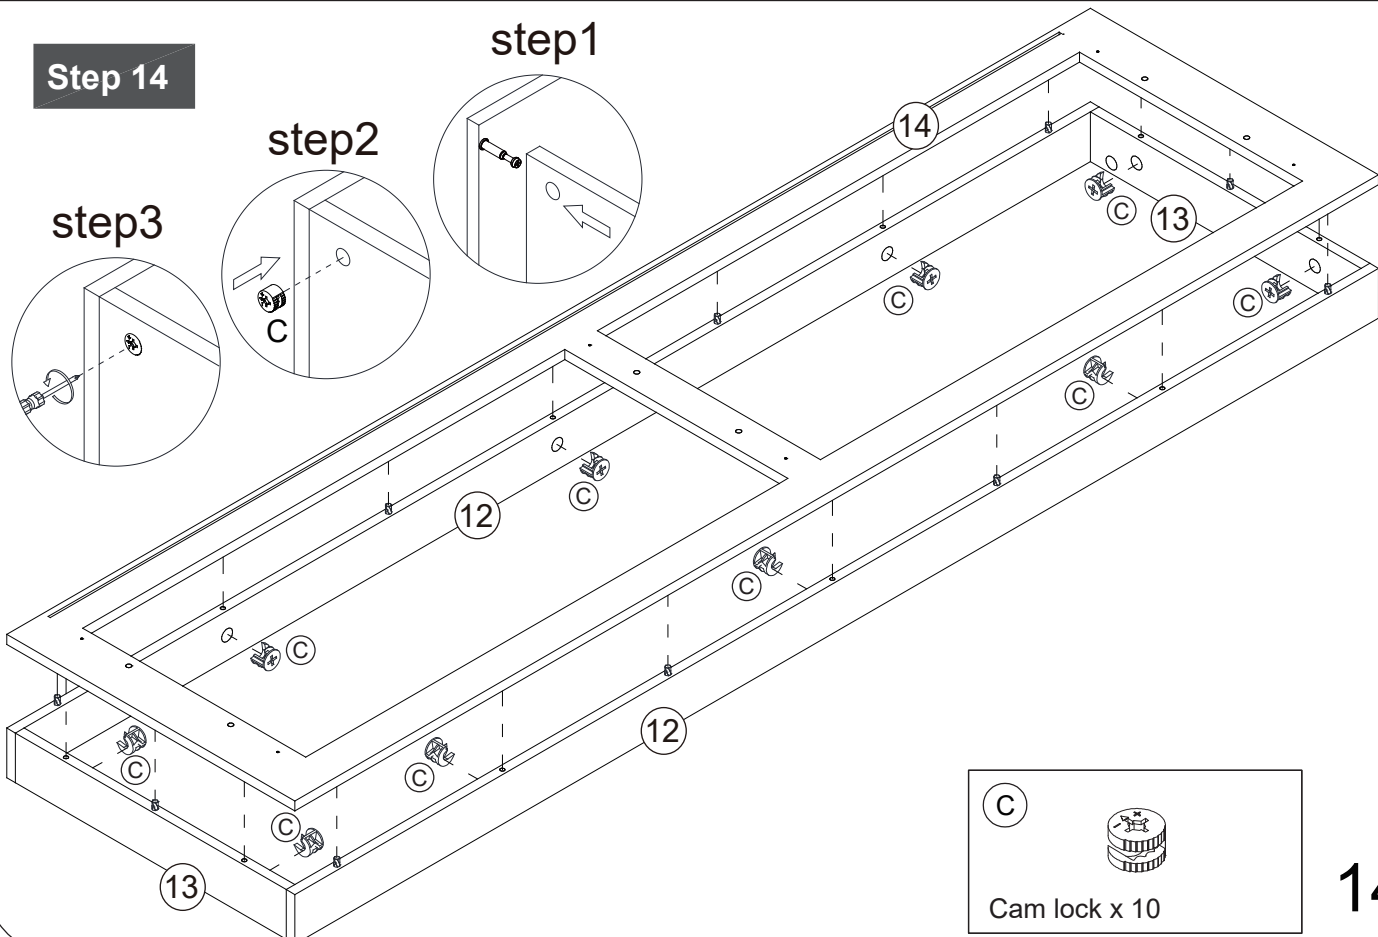


C




Cam lock x 10

Assembly Instructions

Step 15

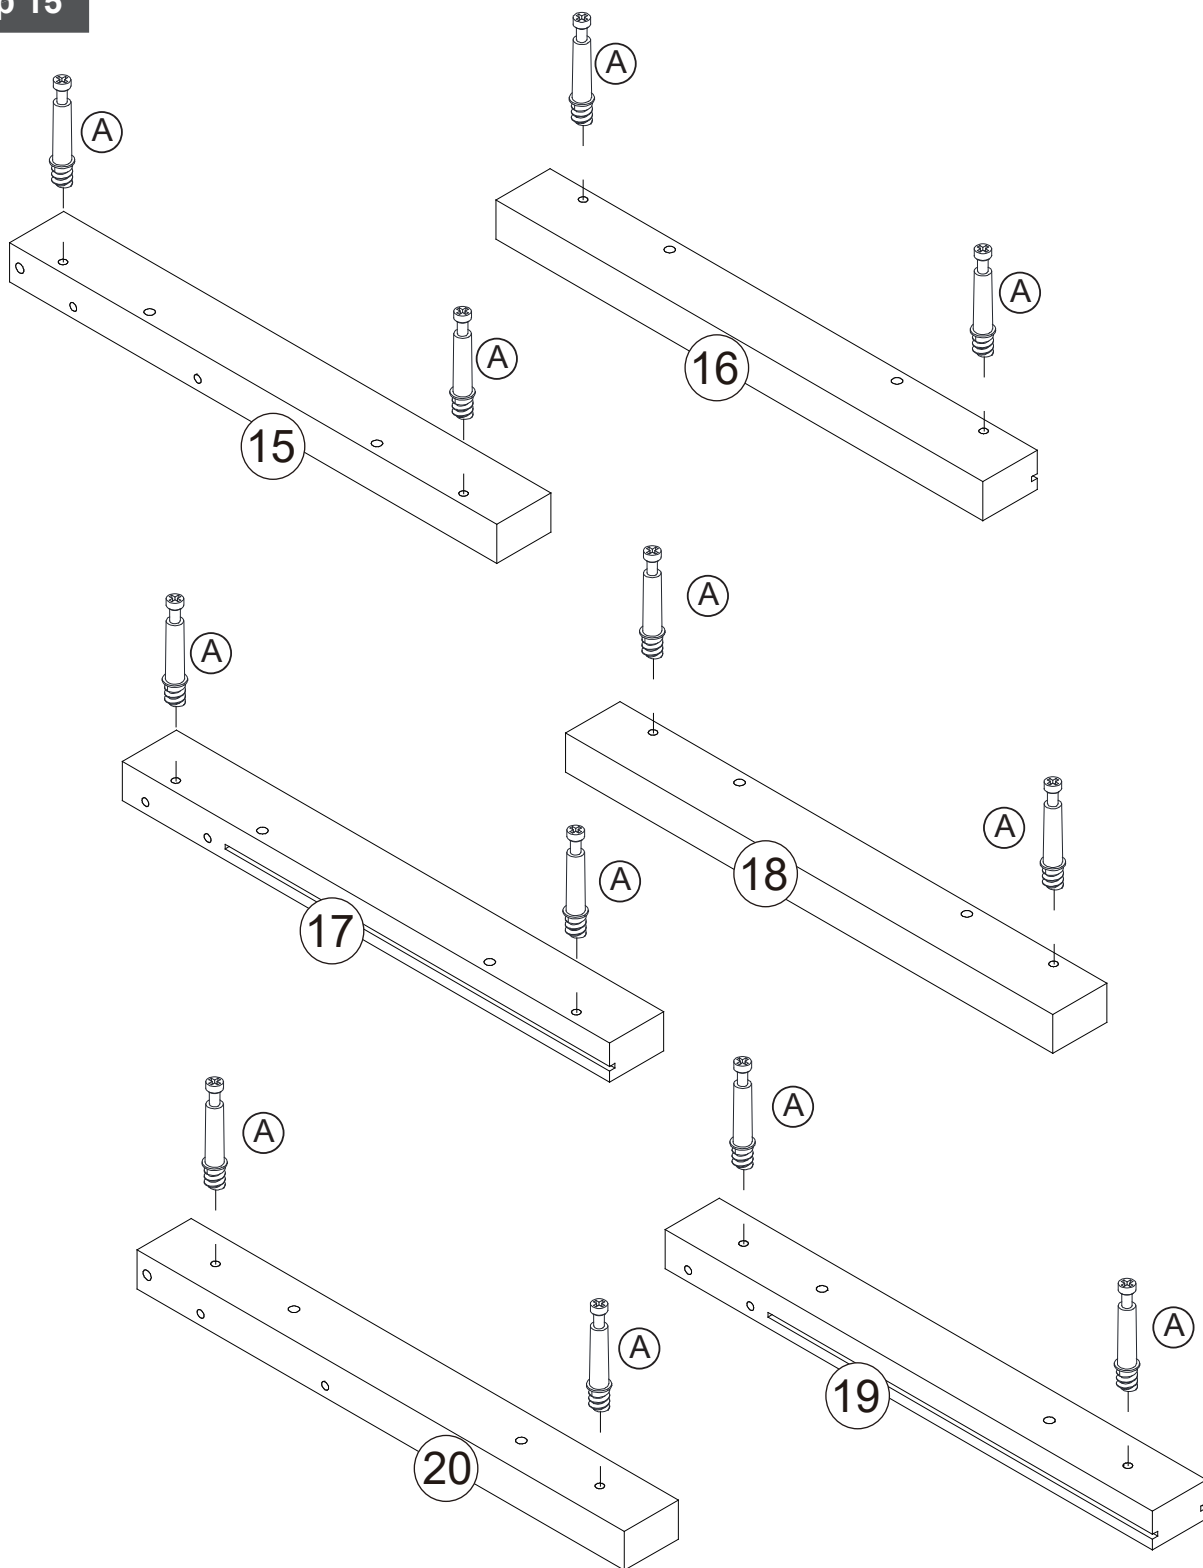

A




Cam Bolt x 12


Assembly Instructions

Step 16




step1

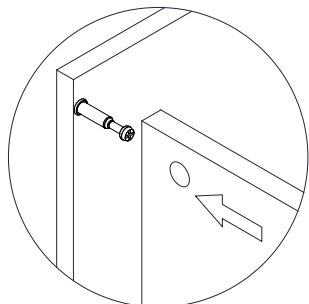

step2

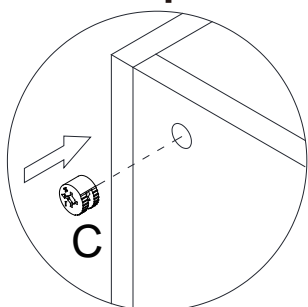


step3

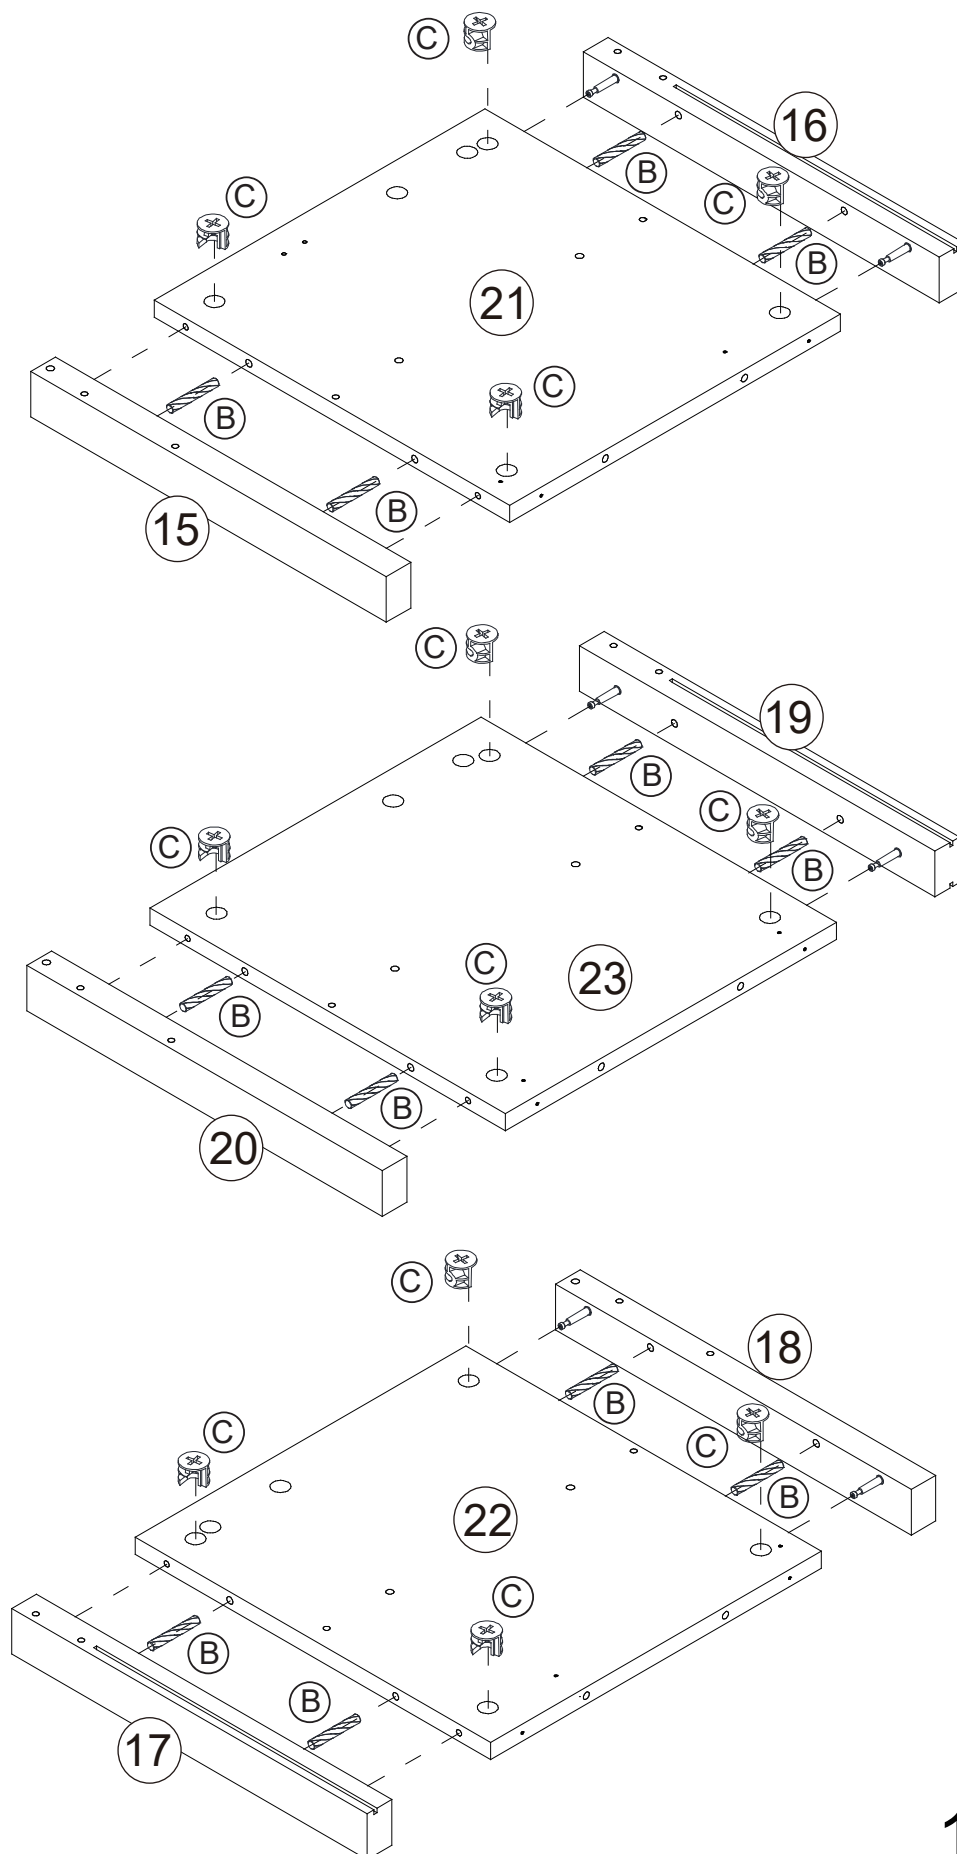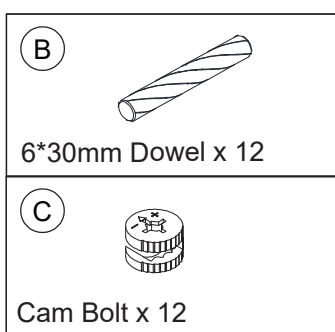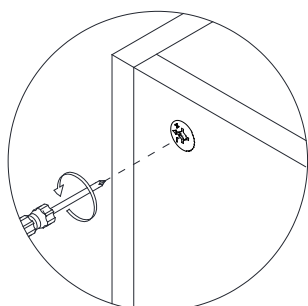


Assembly Instructions

Step 17

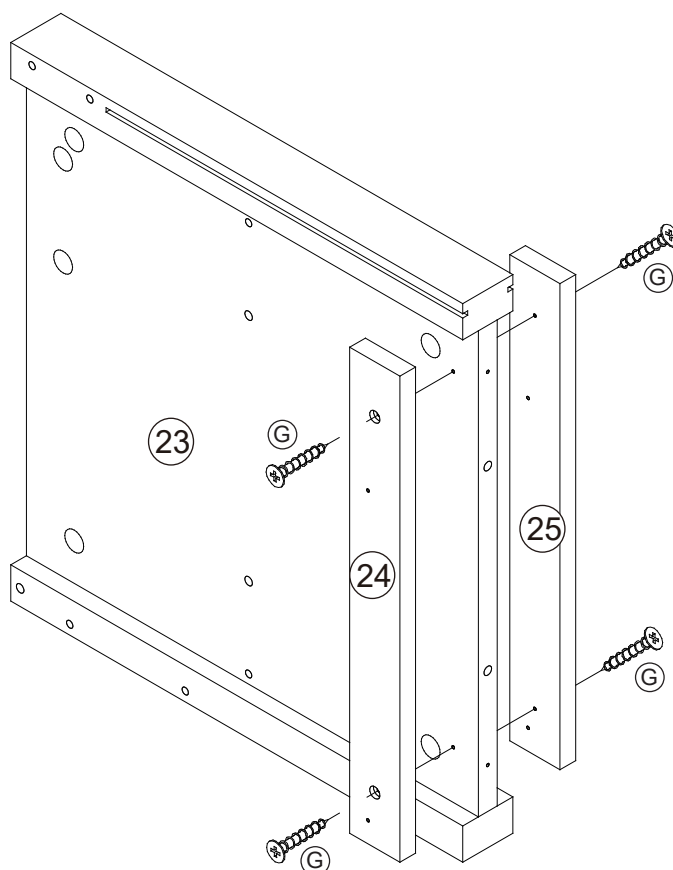


(G)



4*20mm Screw x 4

Step 18

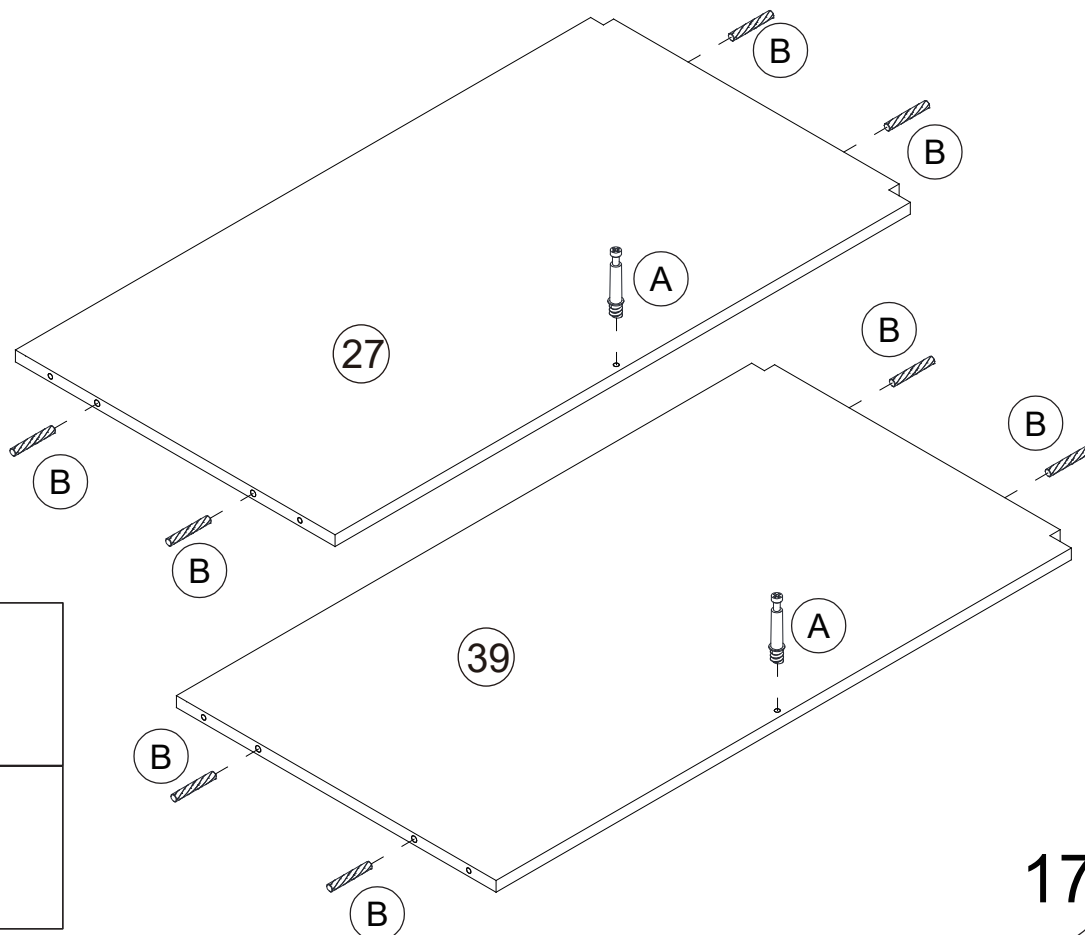


(B)



6*30mm Dowel x 8

(A)




Cam Bolt x 2


Assembly Instructions






Step 19

This part requires installations on both sides

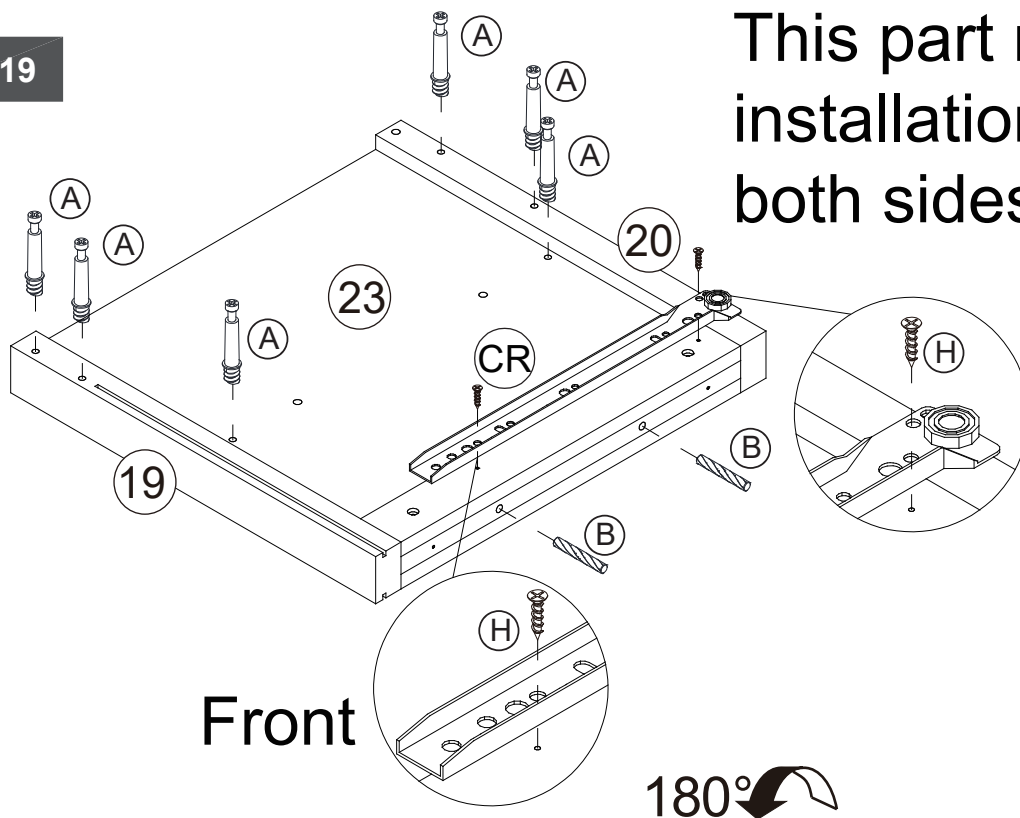


Part6 requires mounting screws on both sides

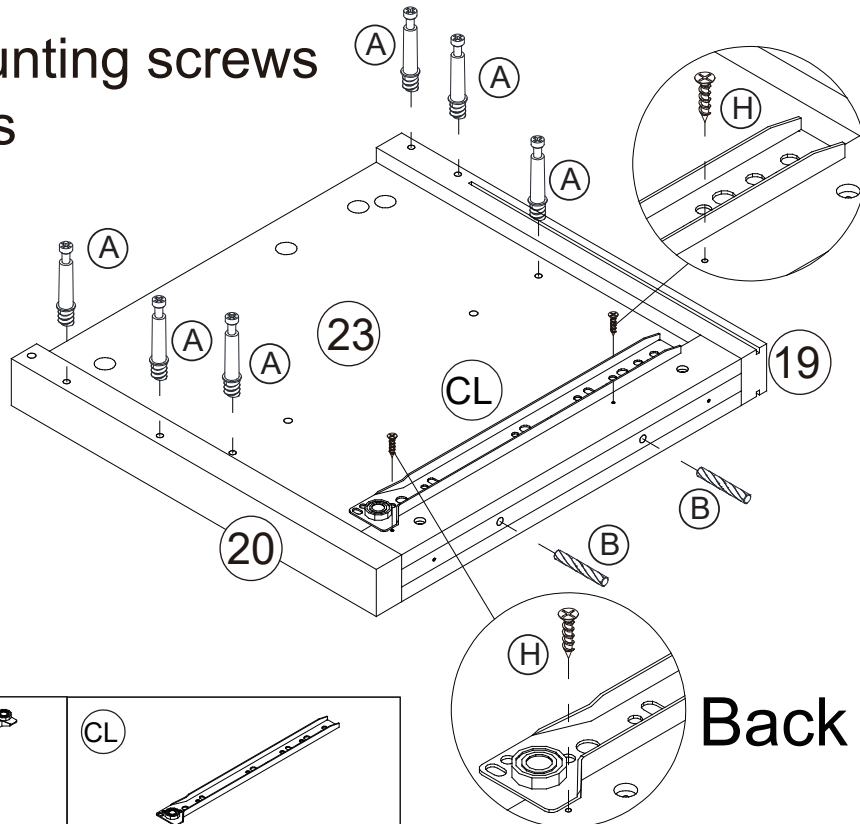





<p>(CR)</p>  <p>runner x 1</p>	<p>(CL)</p>  <p>runner x 1</p>	
<p>(A)</p>  <p>Cam Bolt x 12</p>	<p>(B)</p>  <p>6*30mm Dowel x 4</p>	<p>(H)</p>  <p>3*12mm Screw x 4</p>


Assembly Instructions


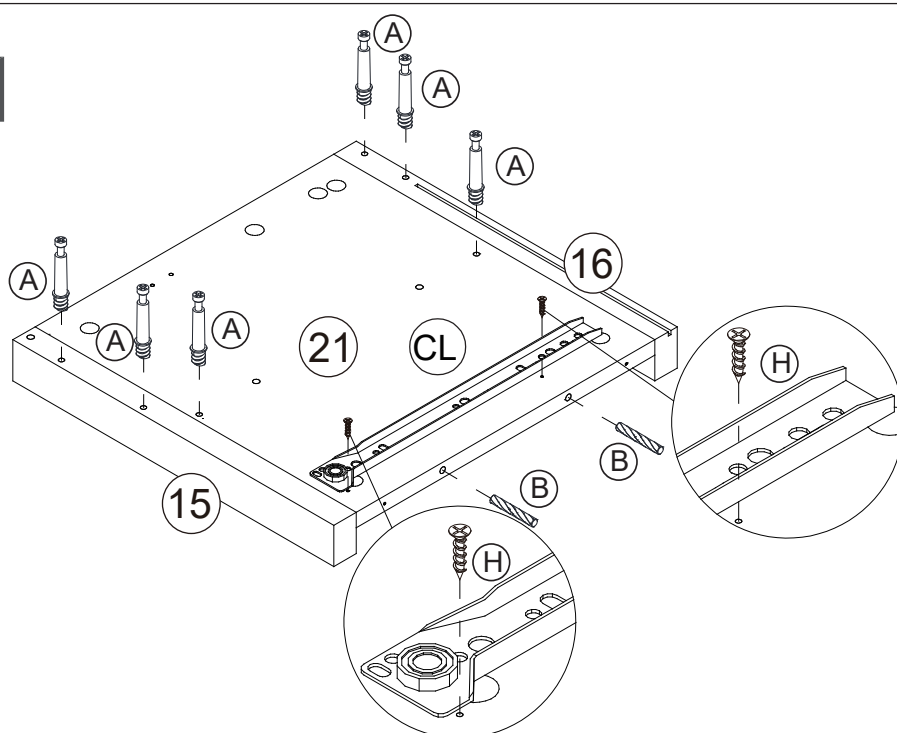


Step 20



<p>(A)</p>  <p>Cam Bolt x 6</p>	<p>(B)</p>  <p>6*30mm Dowel x 2</p>	<p>(H)</p>  <p>3*12mm Screw x 2</p>	<p>(CL)</p>  <p>runner x 1</p>
---	---	--	--

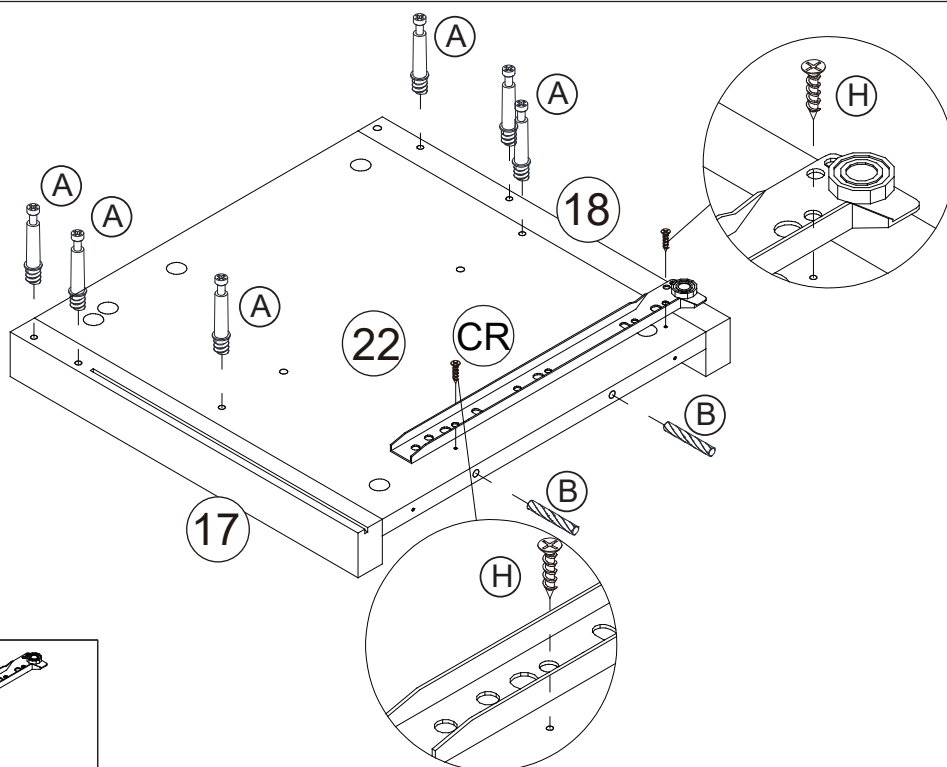Step 21







<p>(CR)</p>  <p>runner x 1</p>		
<p>(A)</p>  <p>Cam Bolt x 6</p>	<p>(B)</p>  <p>6*30mm Dowel x 2</p>	<p>(H)</p>  <p>3*12mm Screw x 2</p>

Assembly Instructions

Step 22

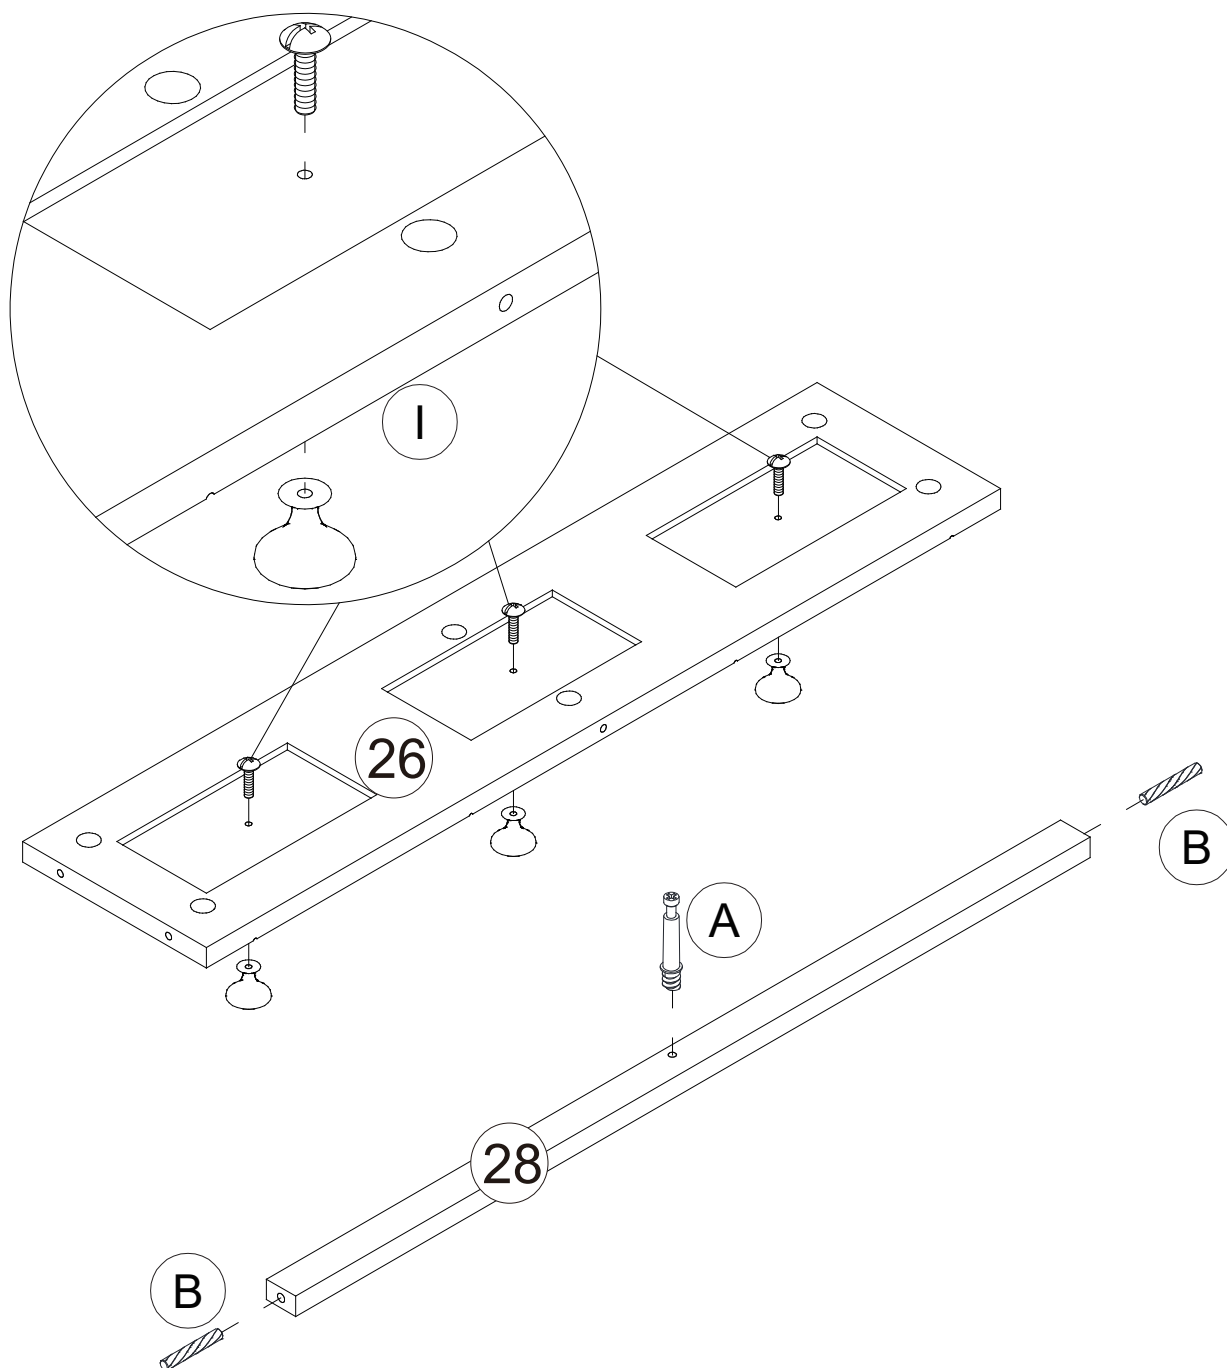
x2




<p>(A)</p>  <p>Cam Bolt x 2</p>	<p>(B)</p>  <p>6*30mm Dowel x 4</p>	<p>(I)</p>  <p>4*8mm Handle x 6set</p>
--	--	--


Assembly Instructions


Step 23

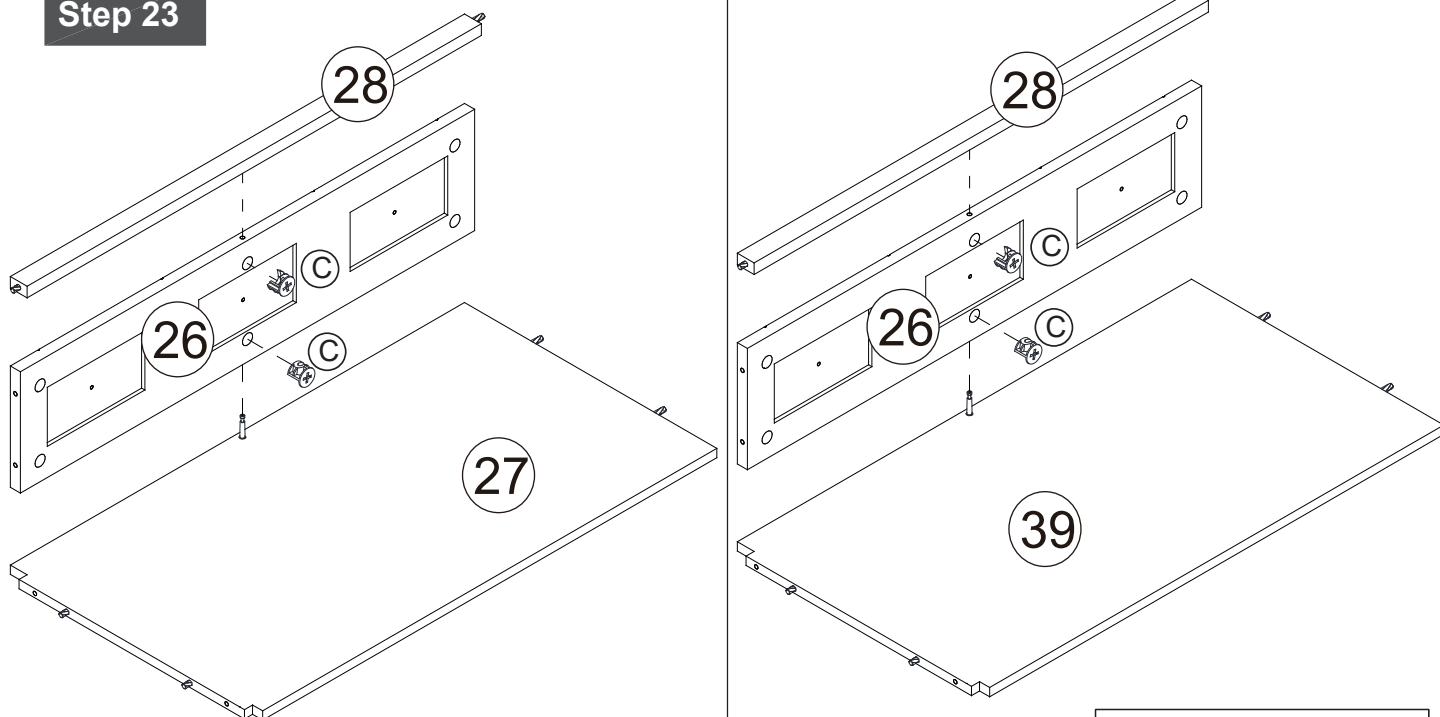


(C) 
Cam lock x 4

Step 24

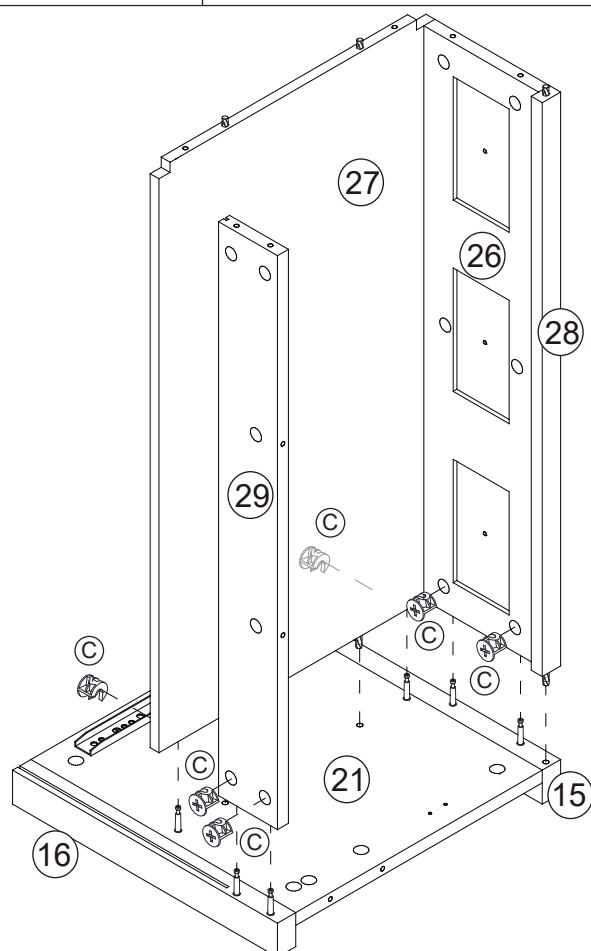


(C) 
Cam lock x 6


step1

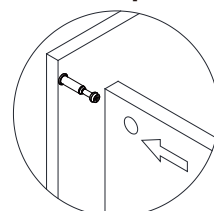

step2

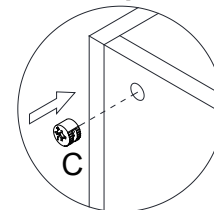


step3

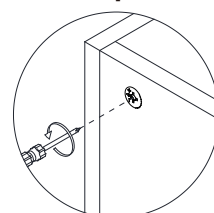

21

Assembly Instructions

Step 25

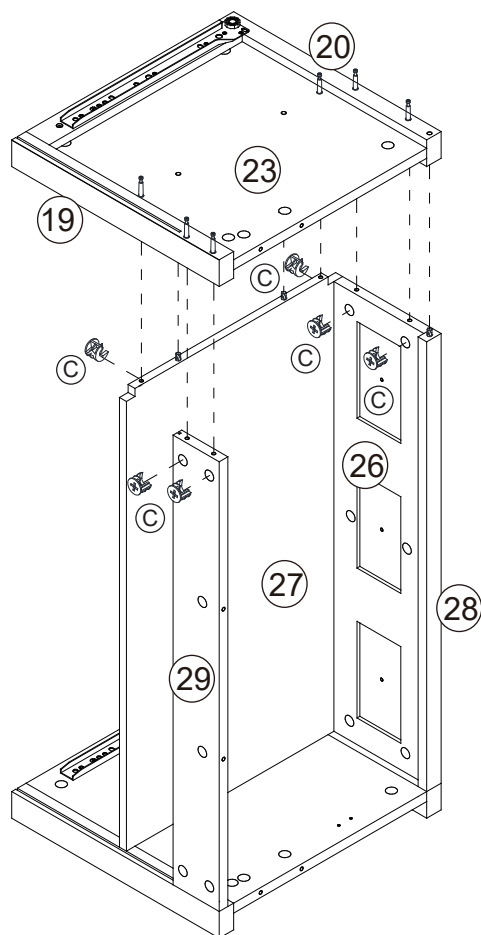


(C)



Cam lock x 6

Step 26

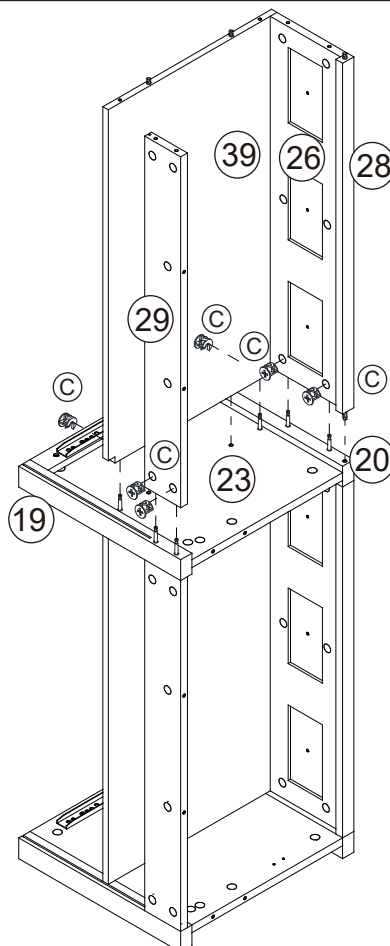


(C)




Cam lock x 6

Assembly Instructions


Step 27

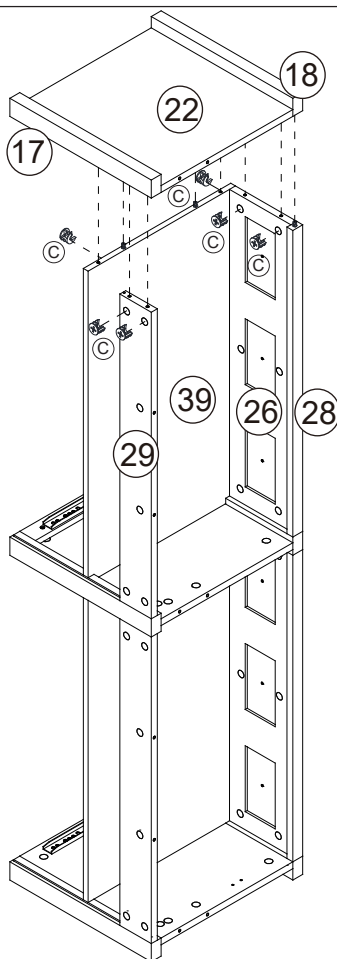


step1

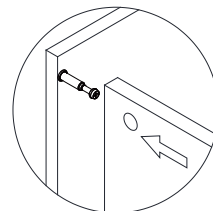

step2

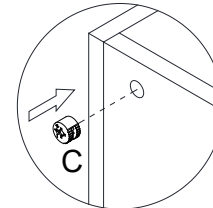

step3

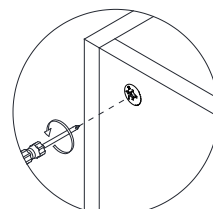


C




Cam lock x 6

Step 28

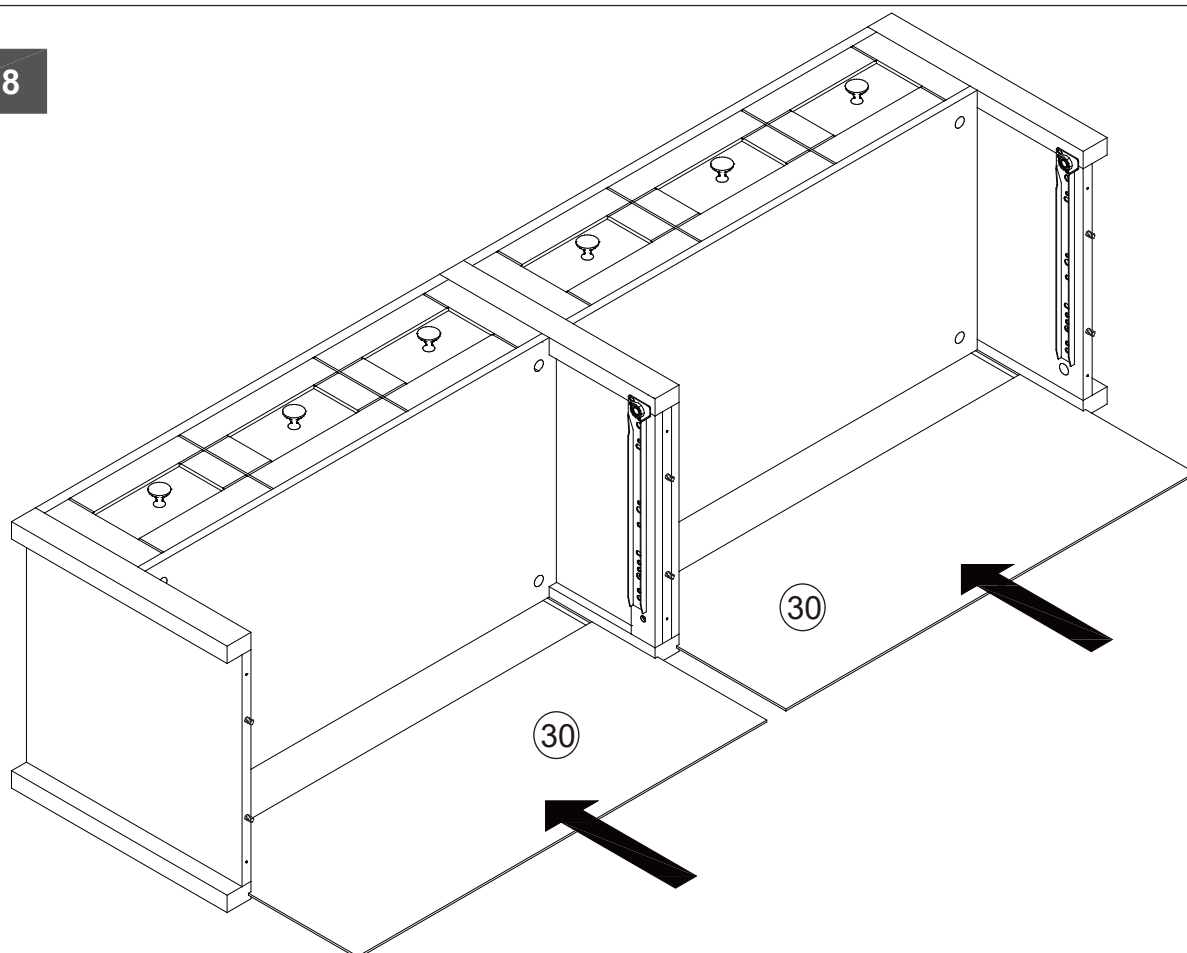


Assembly Instructions


Step 29

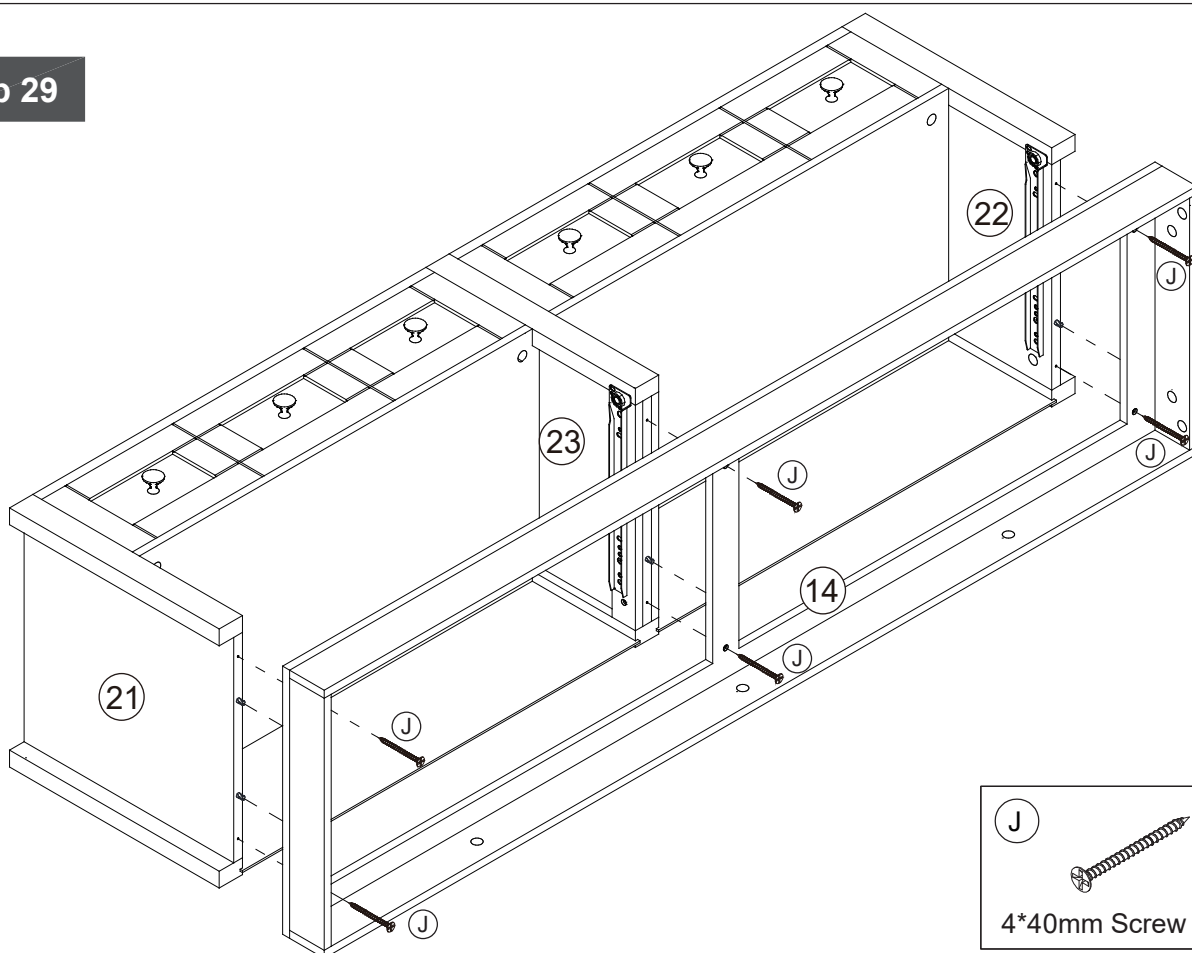

Step 30

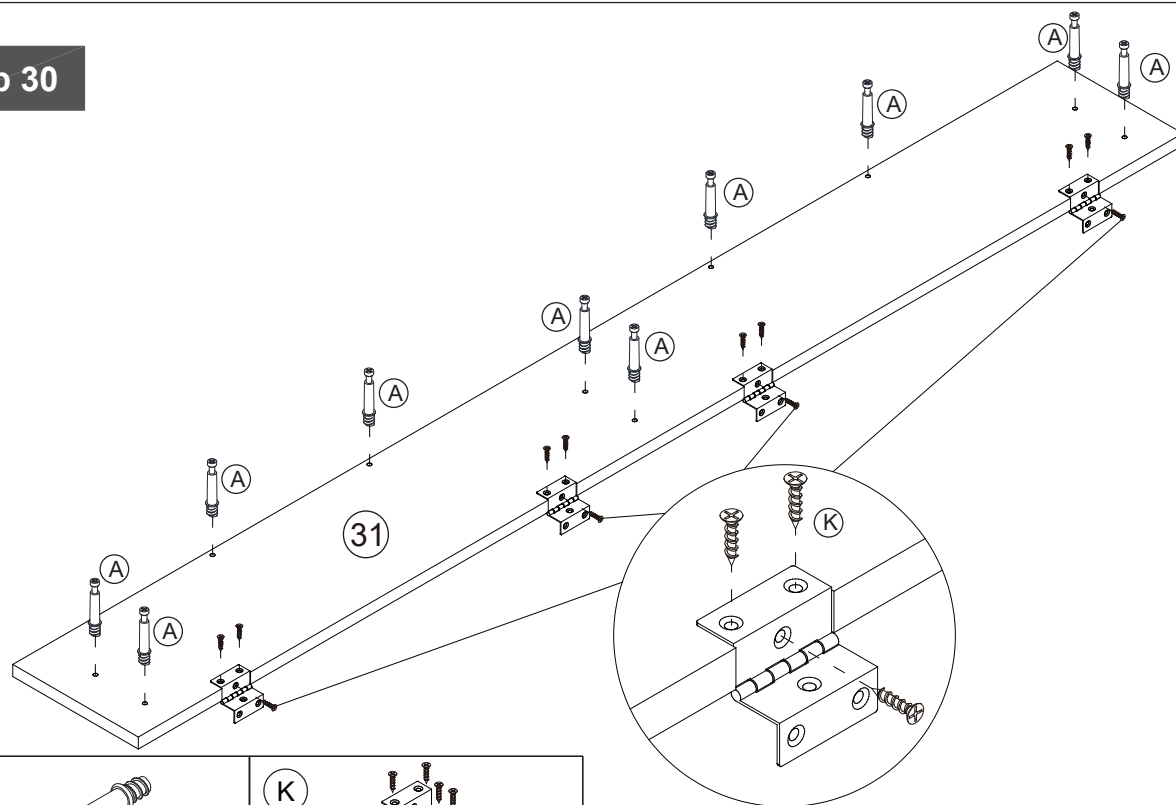

A



Cam Bolt x 10


K




3*12mm Three fold
hinge x4set

Assembly Instructions

Step 31

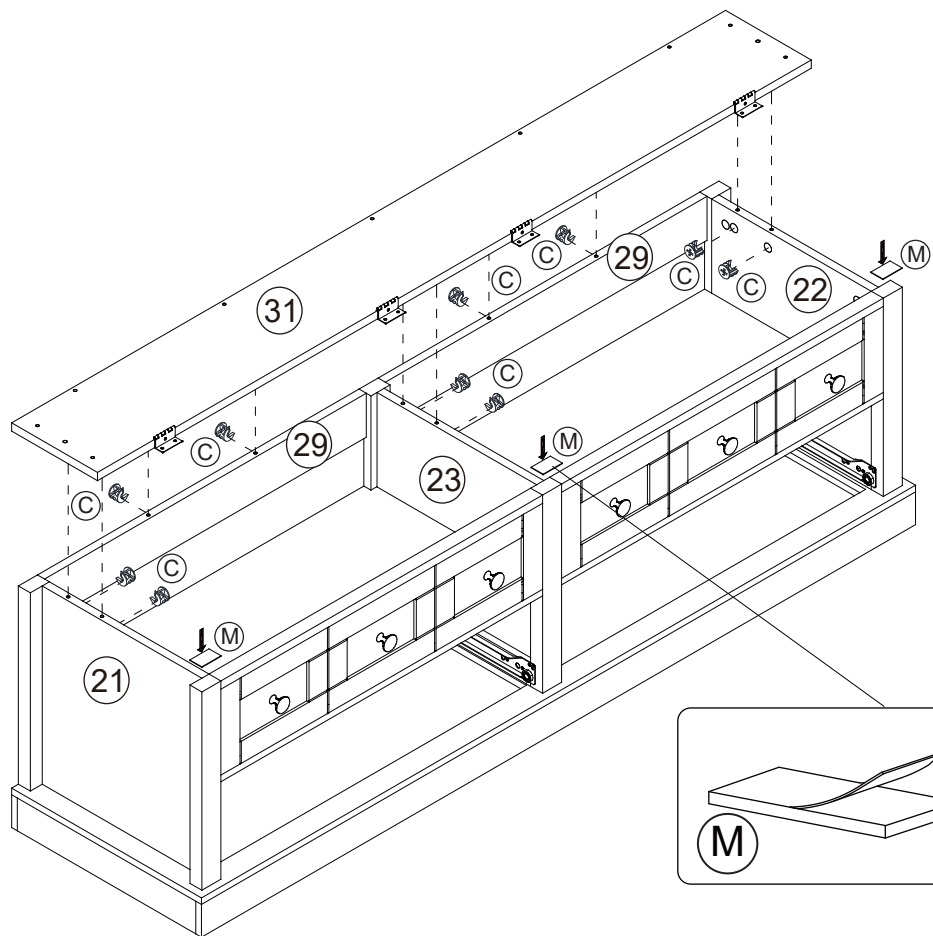

(M)



Foot pad x 3

(C)




Cam lock x 10

(M)



Step 32

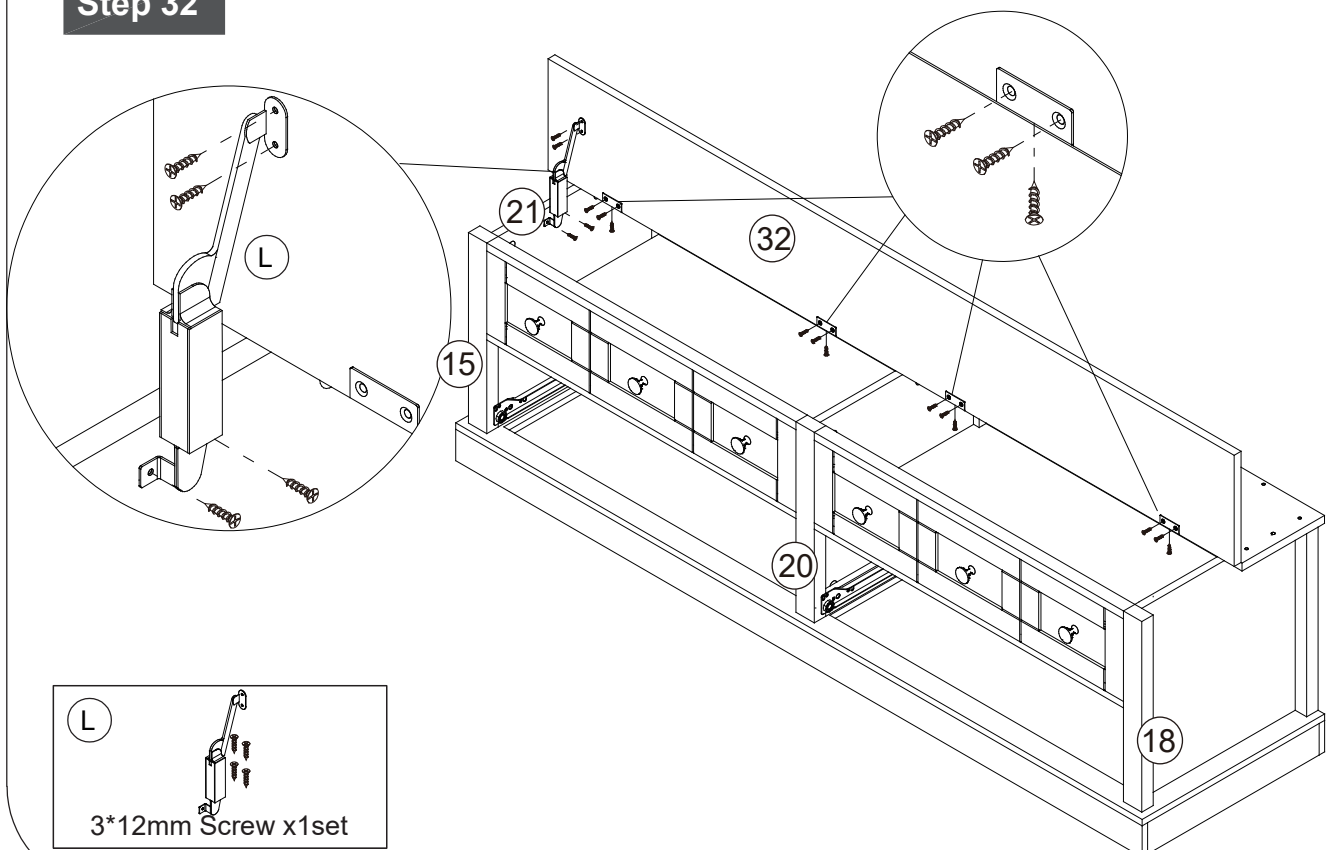


(L)




3*12mm Screw x1set

Assembly Instructions

Step 33

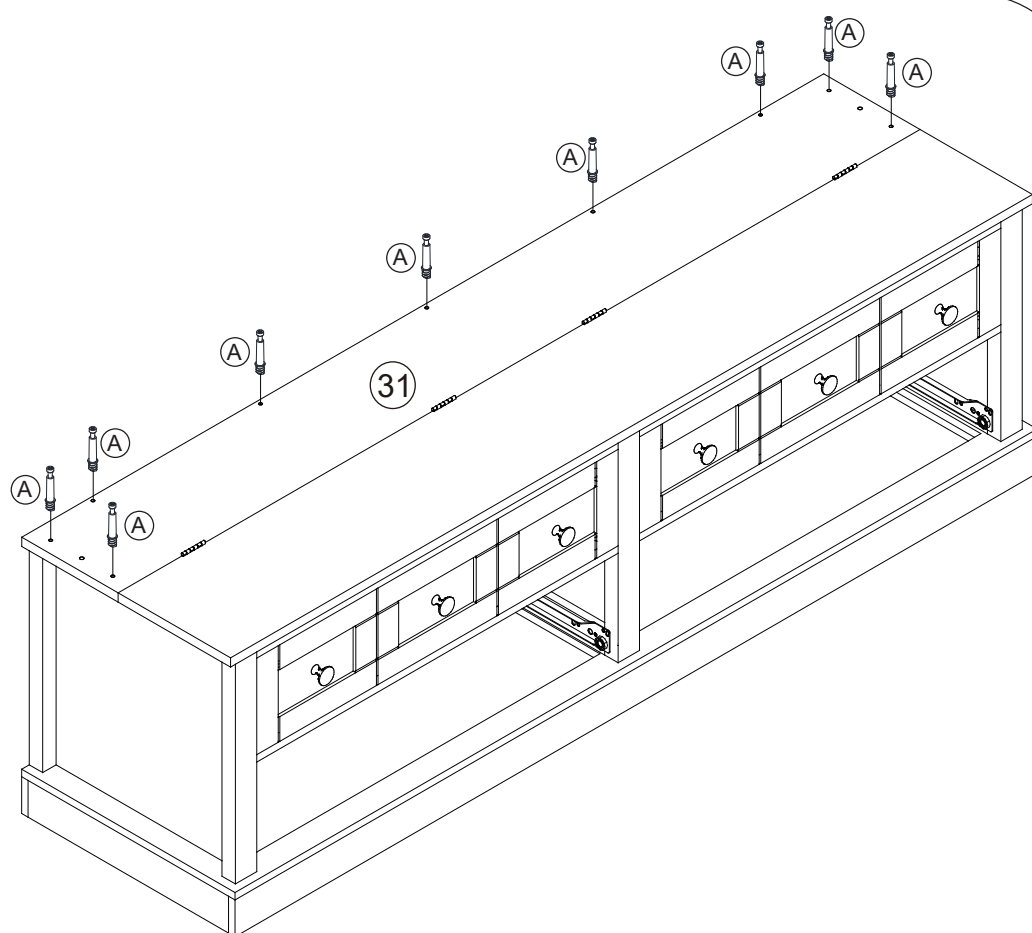


A



Cam Bolt x 9

Step 34

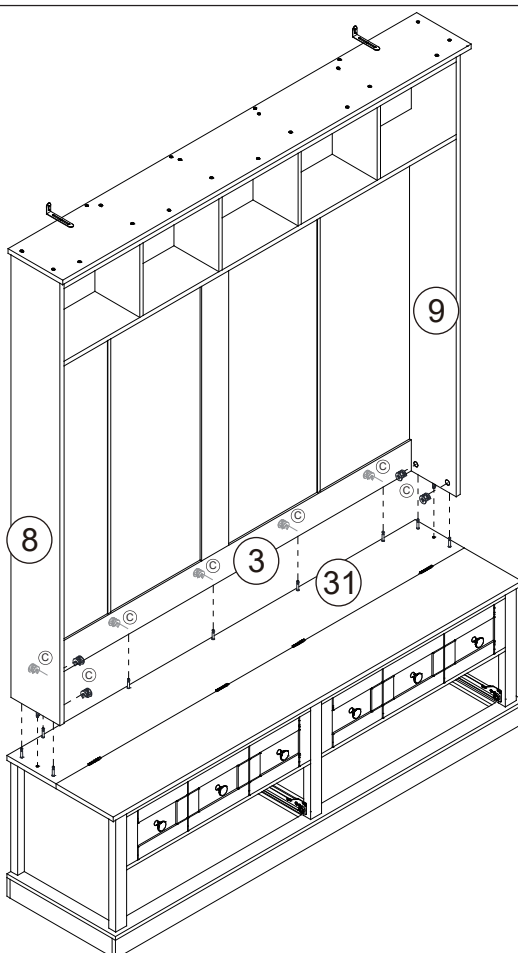


C




Cam lock x 9


step1

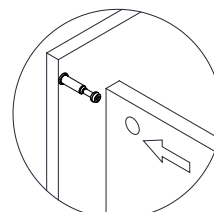

step2

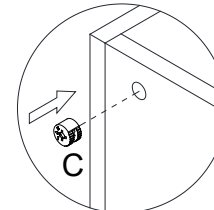


step3

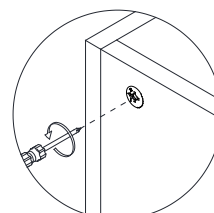


Assembly Instructions

Step 35

1

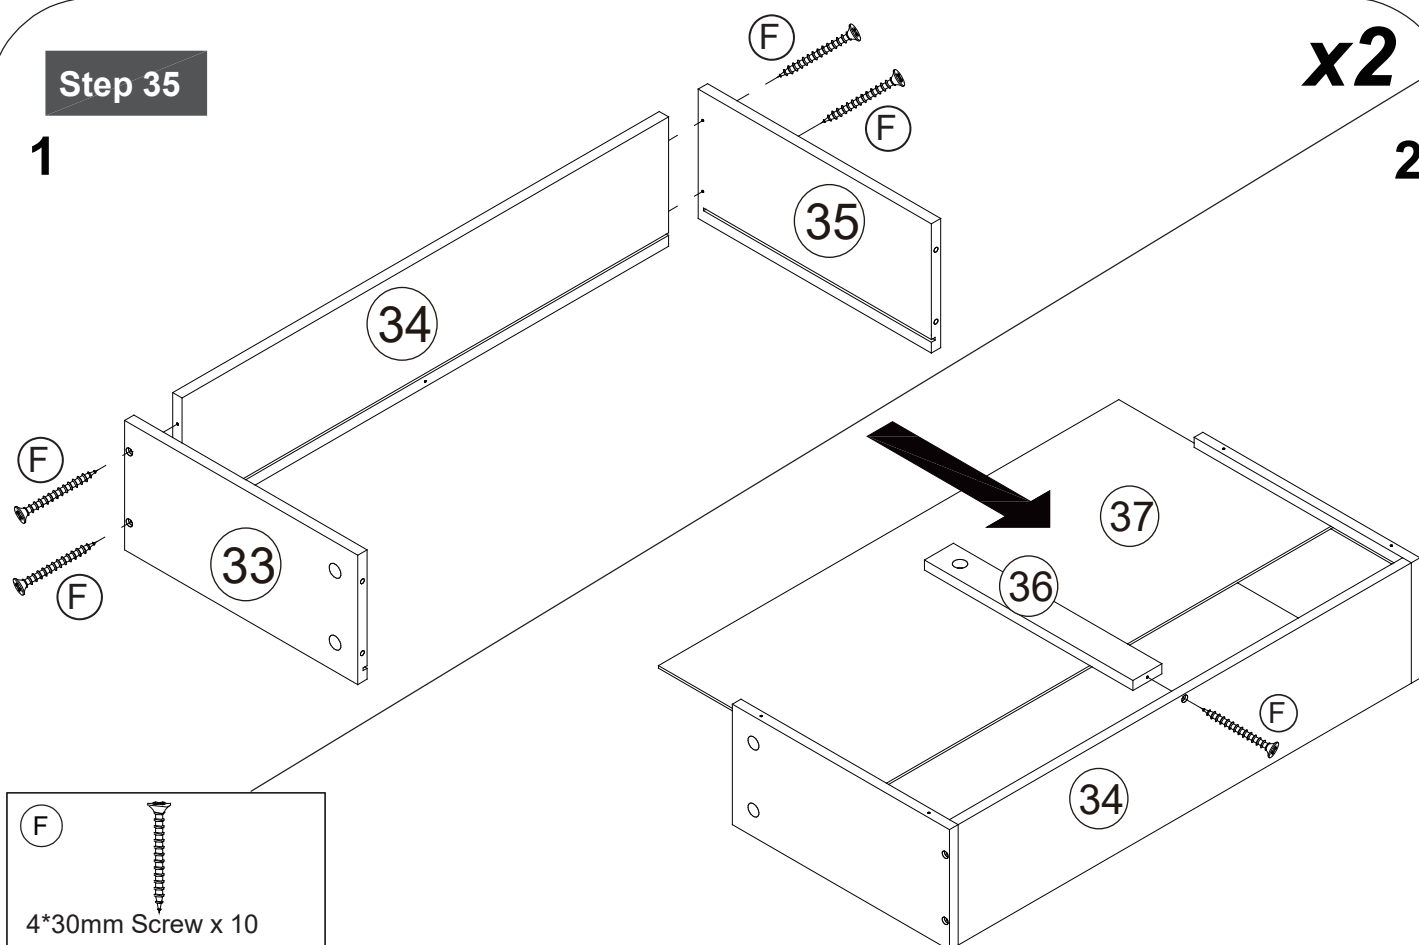



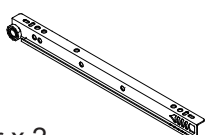
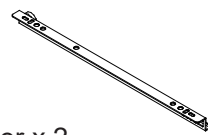
Step 36 3

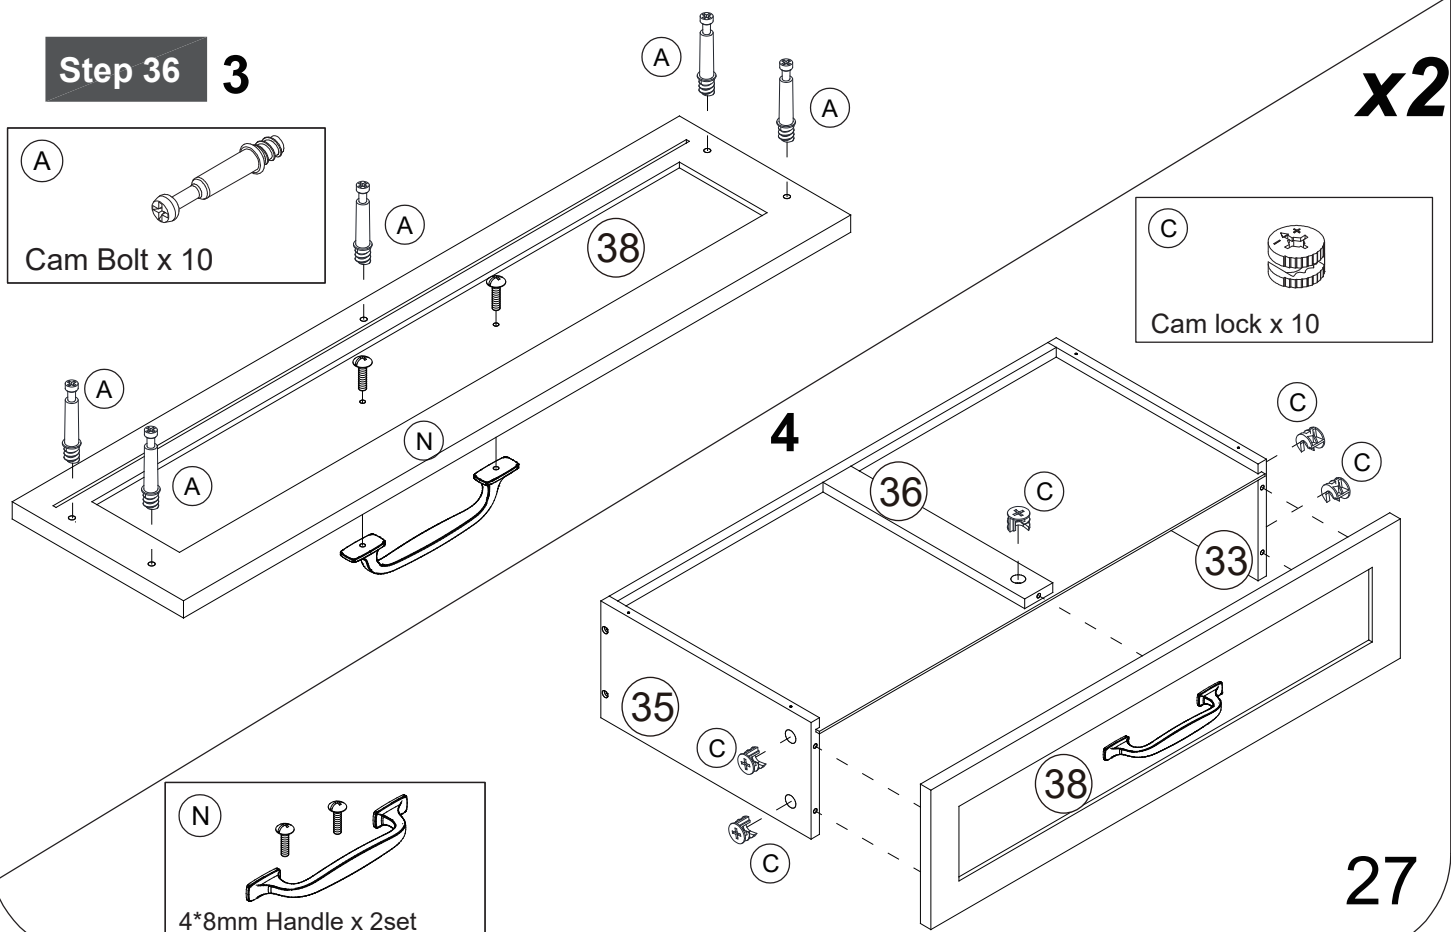

Assembly Instructions

Step 37 **x2**

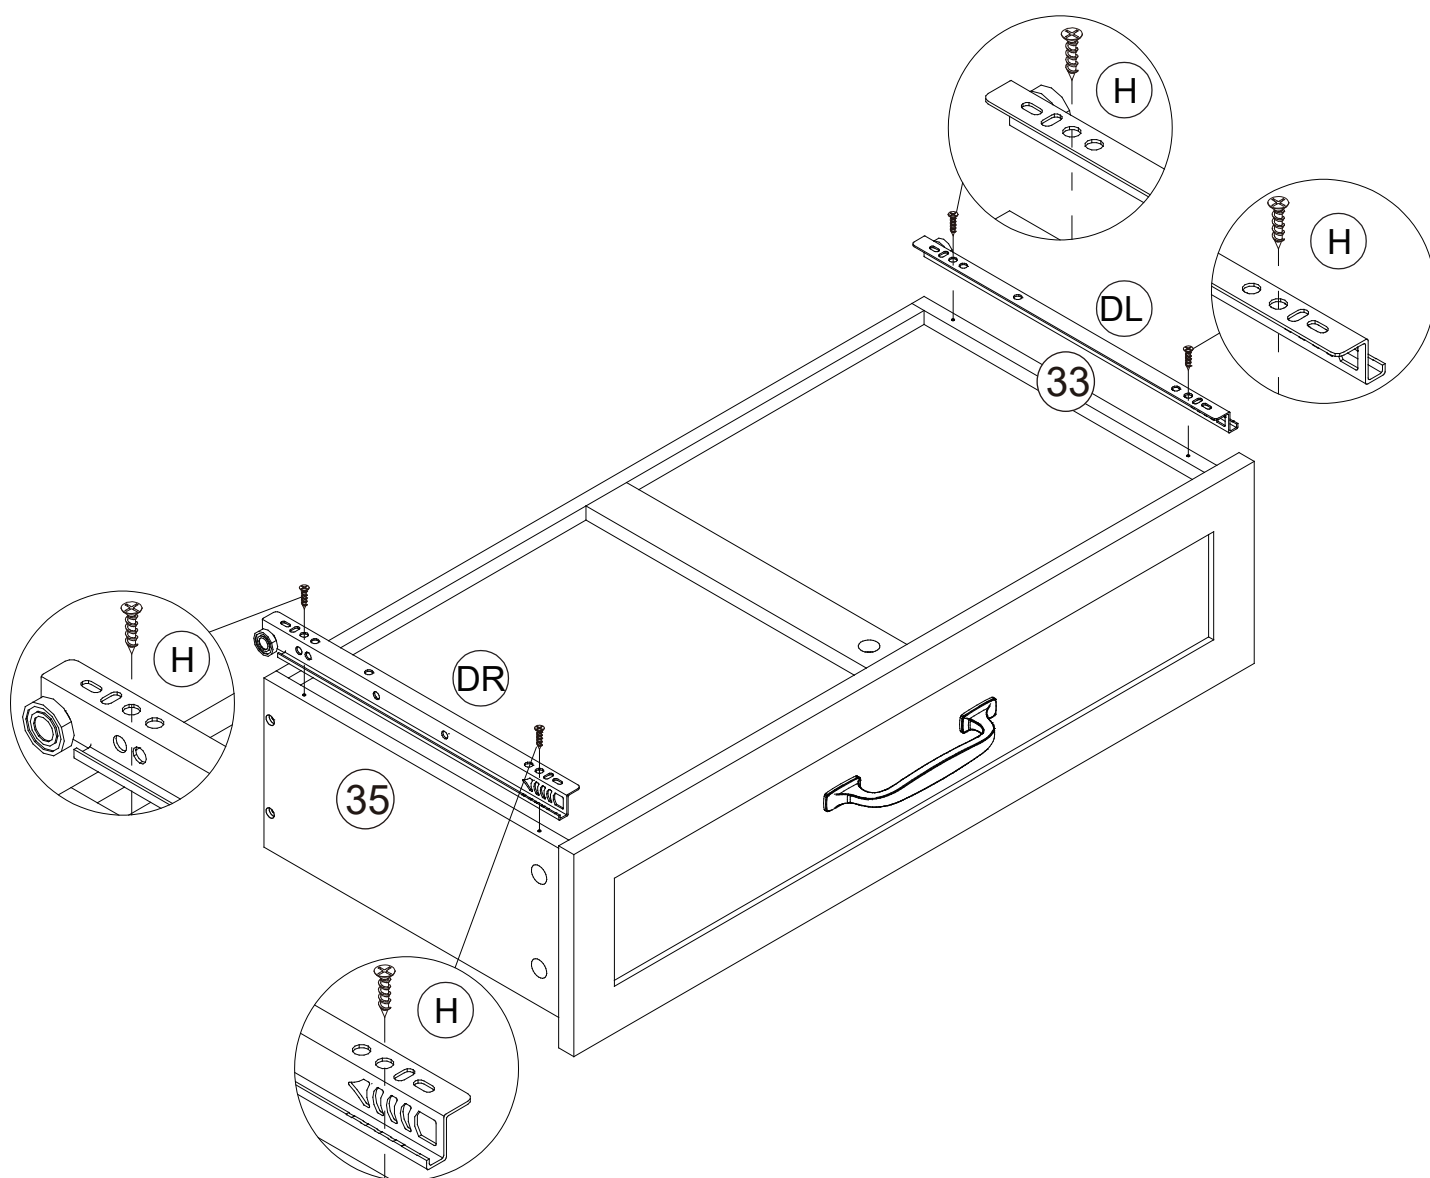


 3*12mm Screw x 8	 runner x 2	 runner x 2
---	---	--




Assembly Instructions

Step 38

WALL

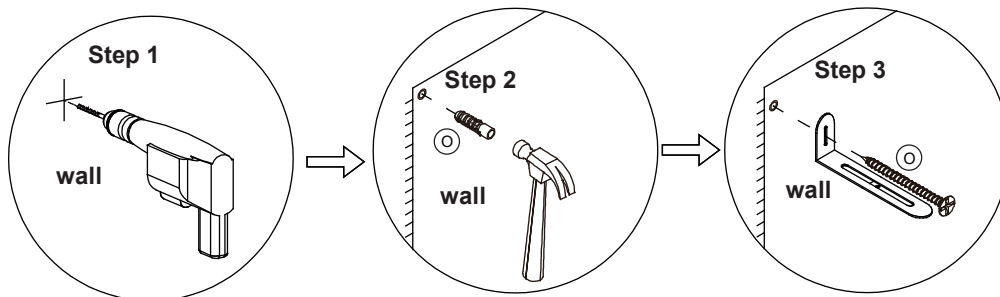

Use stickers to cover cam locks

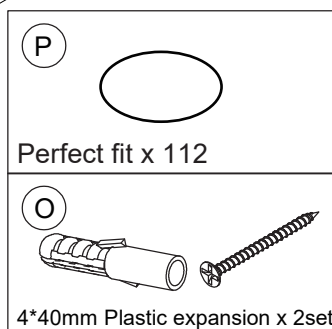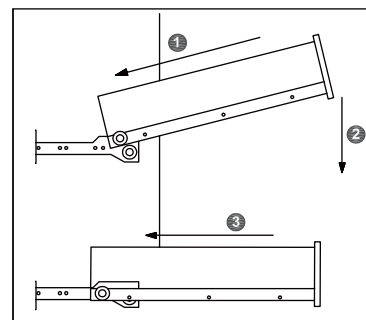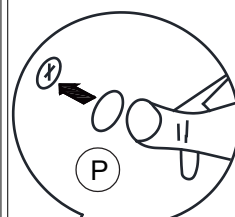

Assembly Instructions

Finish

