

DA0028

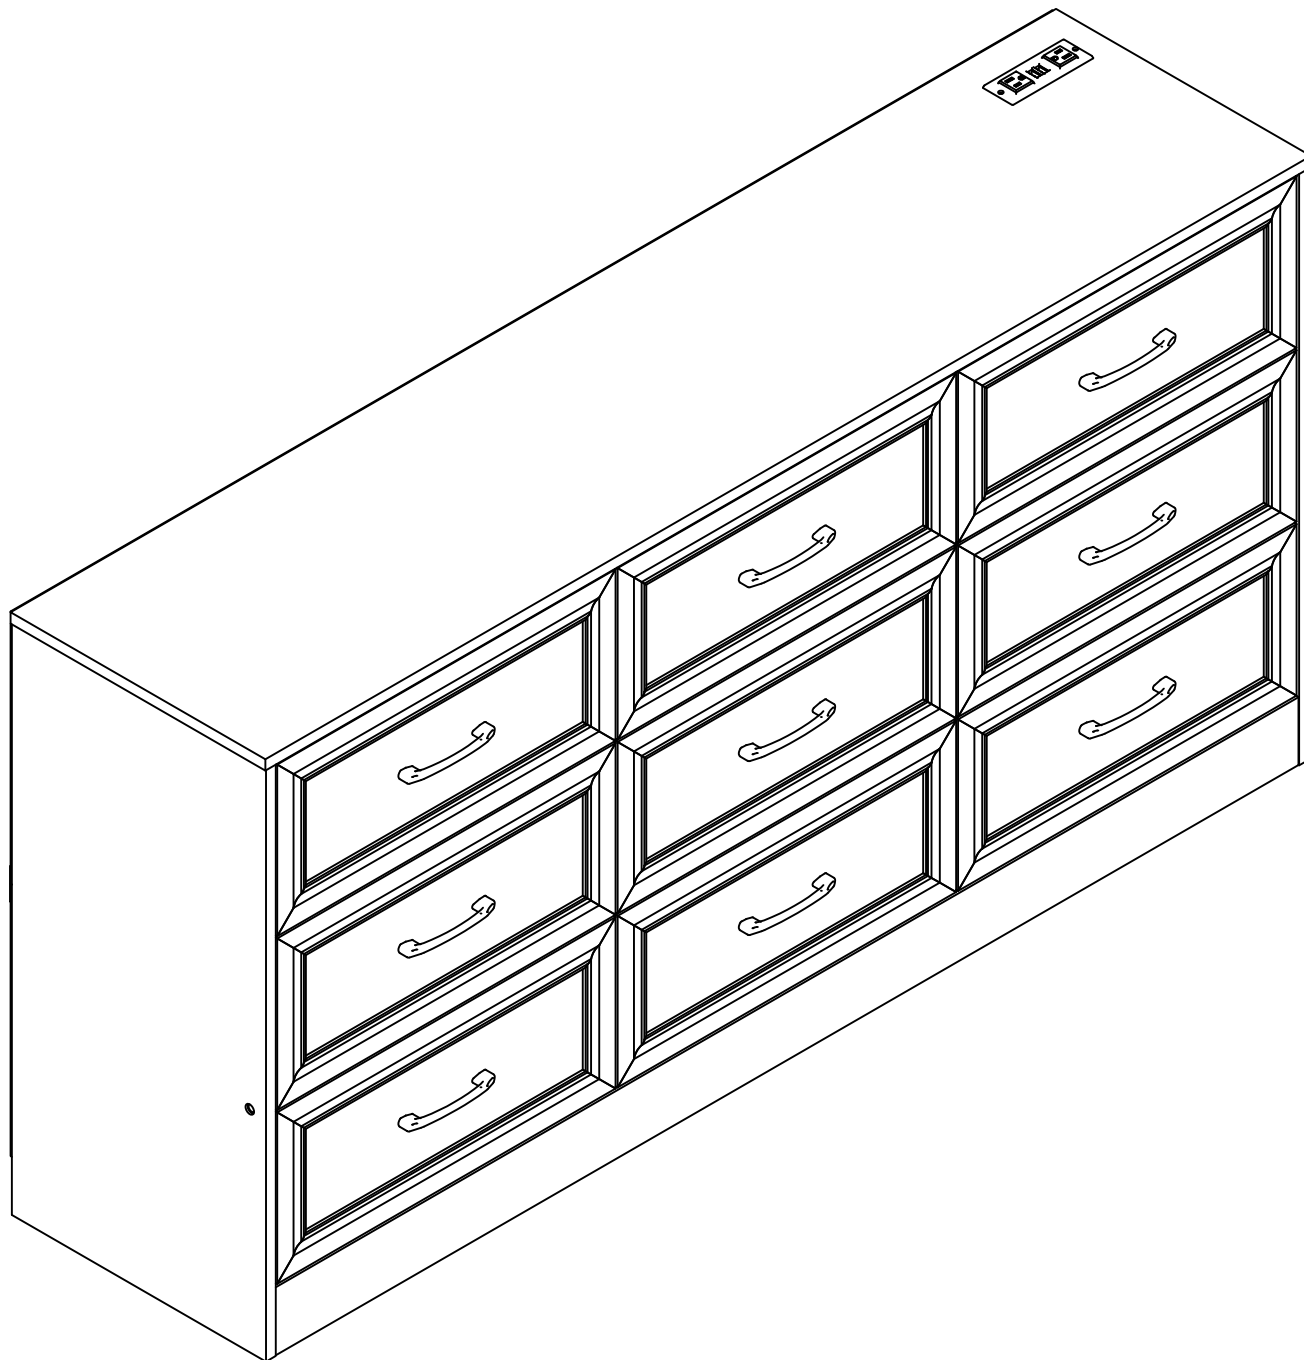


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start





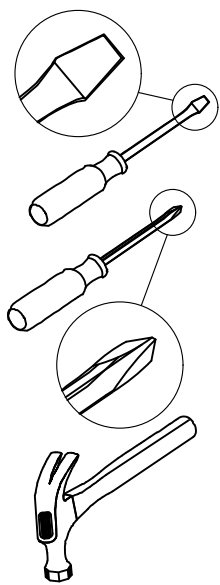


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

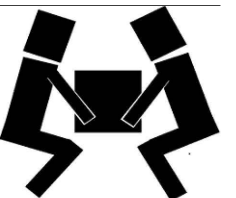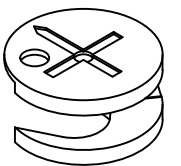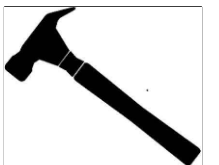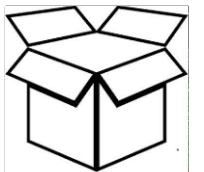


Board Identification


Not actual size

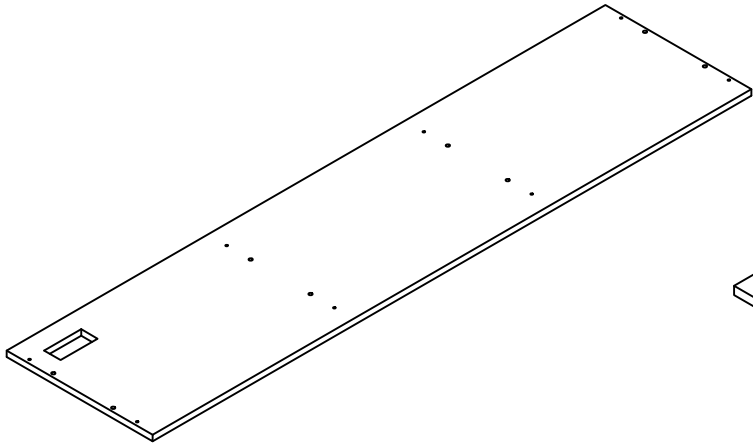


(A)
TOP
Qty:1

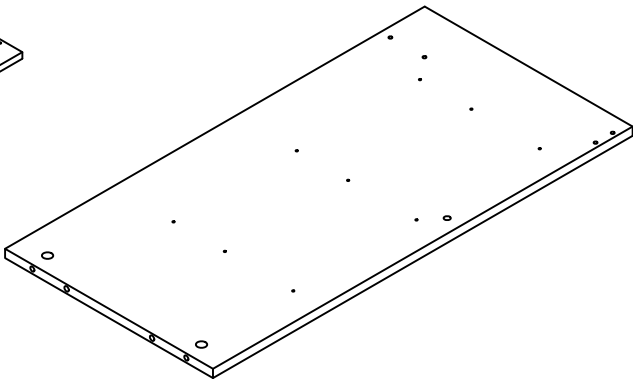


(B)
LEFT SIDE PANEL
Qty:1

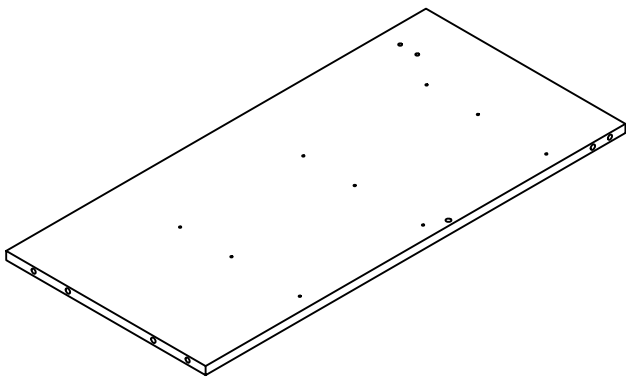


(C)
PARTITION
Qty:1

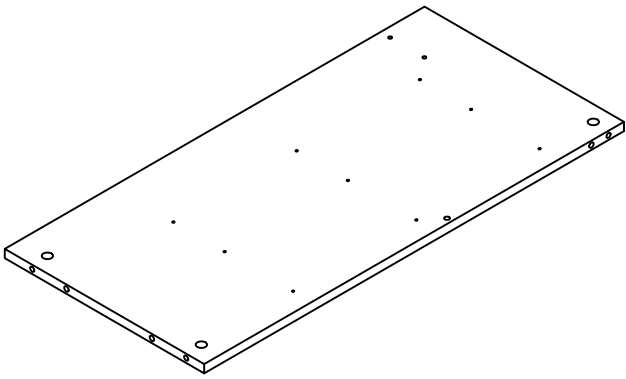


(D)
PARTITION
Qty:1

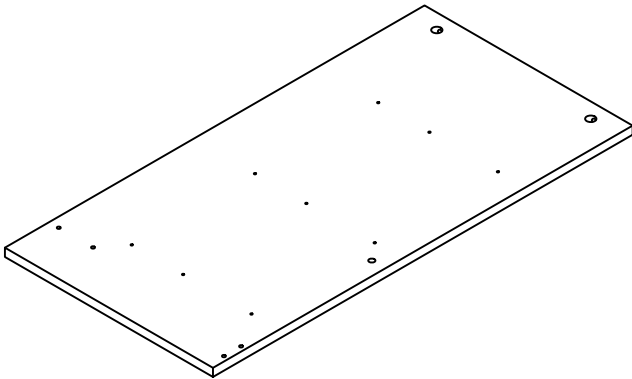


(E)
RIGHT SIDE PANEL
Qty:1

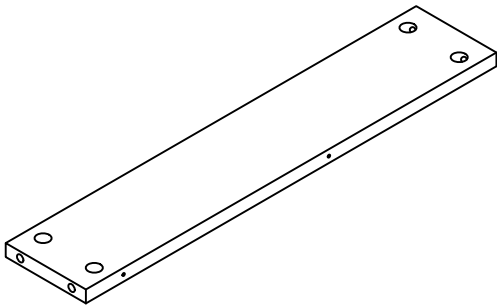


(F)
LEFT REAR PANEL
Qty:1

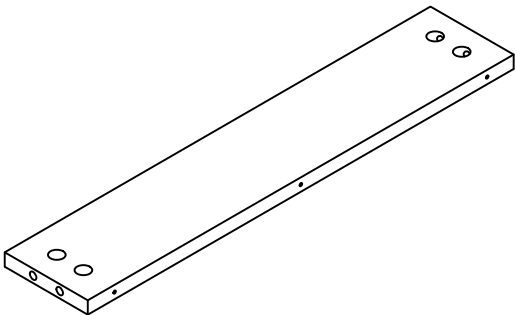

(G)
MIDDLE REAR PANEL
Qty:1

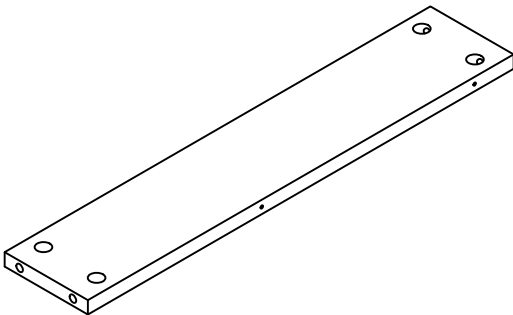


(H)
RIGHT REAR PANEL
Qty:1

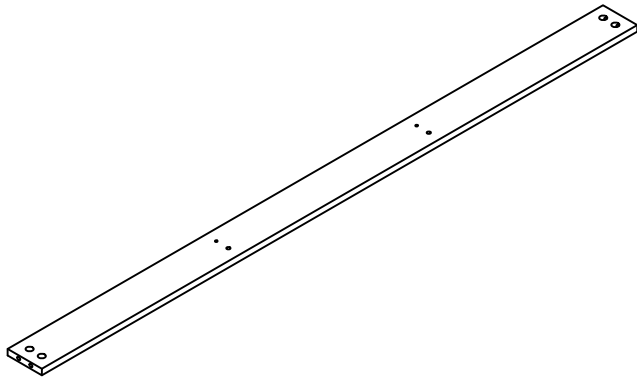

(I)
FRONT RAIL
Qty:1


Board Identification

Not actual size

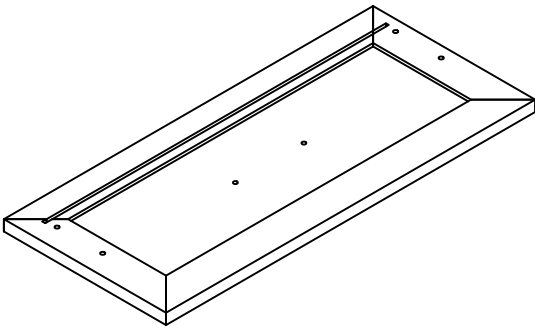


ⓐ

RIGHT DRAWER FRONT
Qty:3

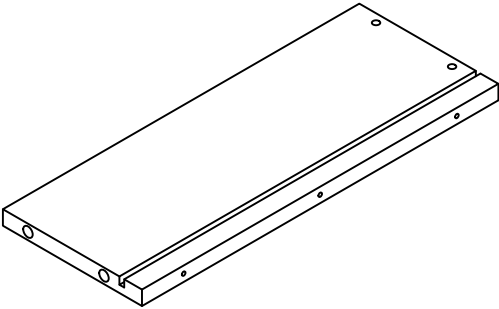


ⓑ

DRAWER LEFT SIDE
Qty:9

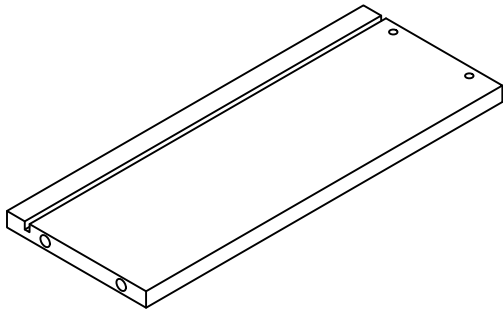


ⓒ

DRAWER RIGHT SIDE
Qty:9

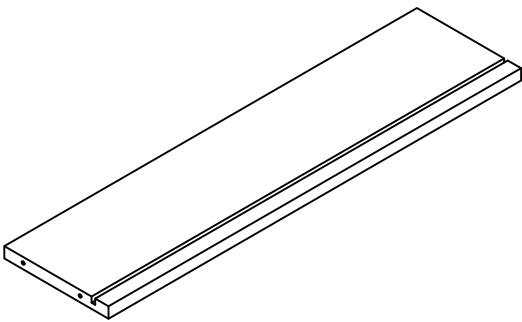


ⓓ

DRAWER BACK
Qty:9

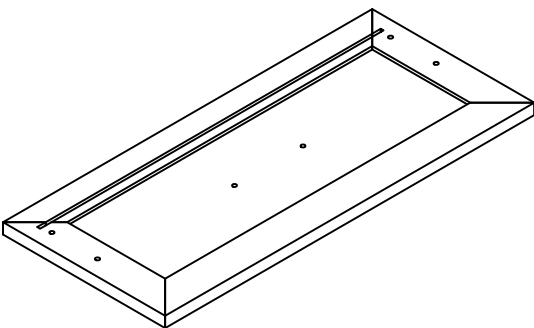


ⓔ

MIDDLE DRAWER FRONT
Qty:3

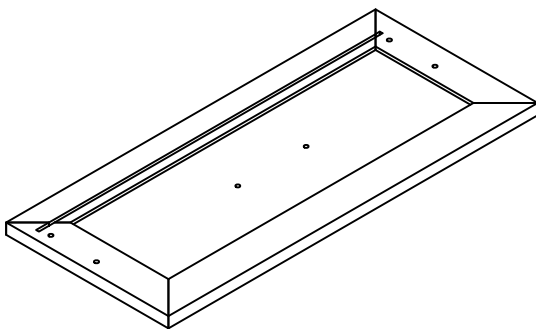


ⓕ

LEFT DRAWER FRONT
Qty:3

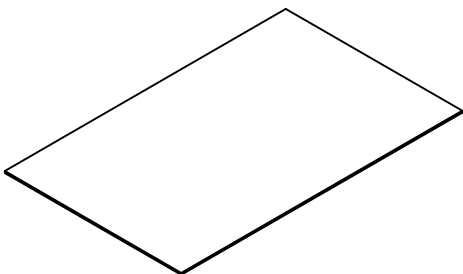


ⓖ

DRAWER BOTTOM
Qty:9

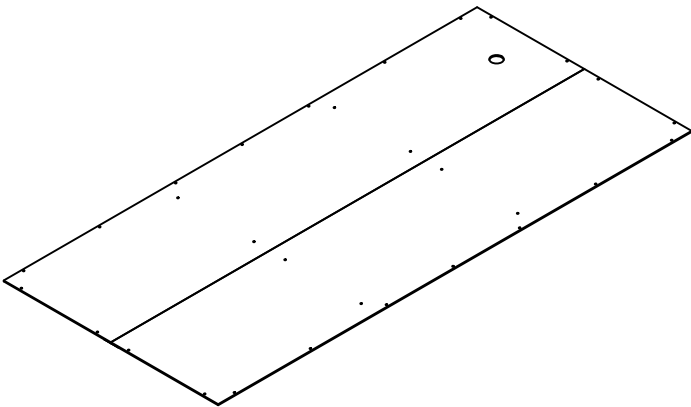

ⓓ

BACK PANEL
Qty:1

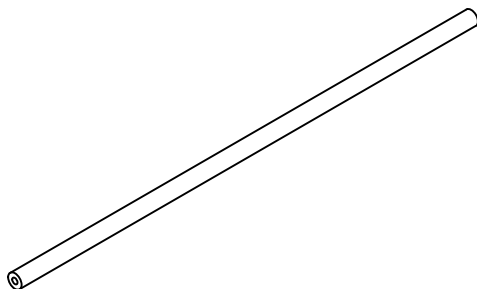


ⓓ

CIRCULAR TUBE
Qty:2

Board Identification


Not actual size

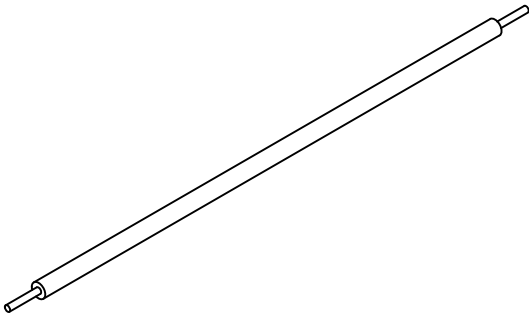


S

CIRCULAR TUBE
Qty:1


Part List

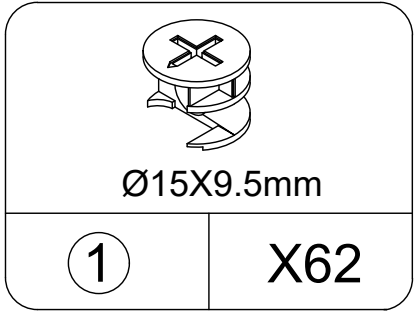


CAM LOCK
spare:3

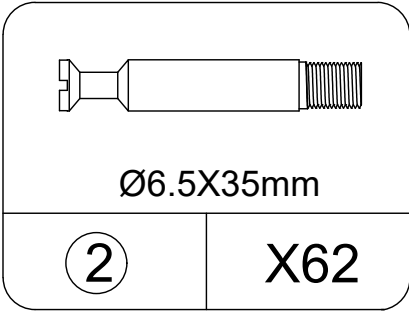


CAM BOLT
spare:3

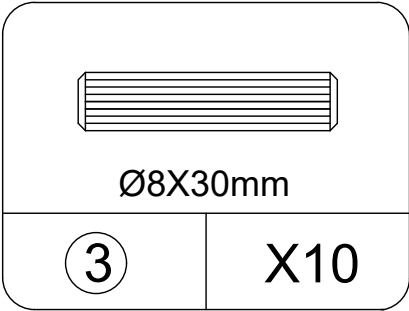


WOOD DOWEL
spare:1

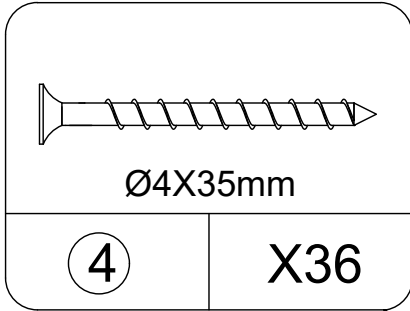


SCREW
spare:3

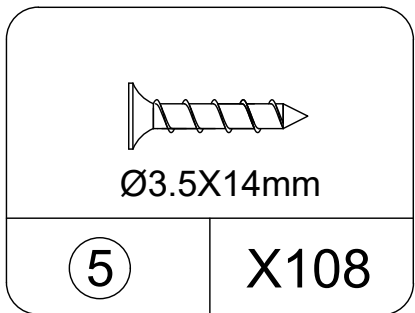


SCREW
spare:3

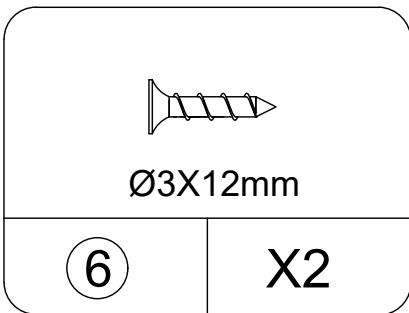


SCREW
spare:1

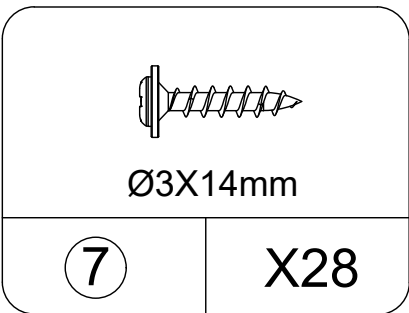


SCREW
spare:2

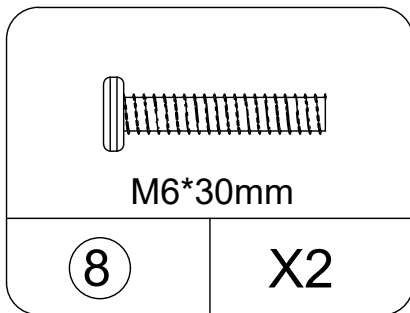


SCREW
spare:1

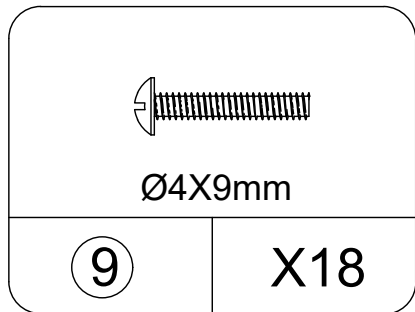


SCREW
spare:1

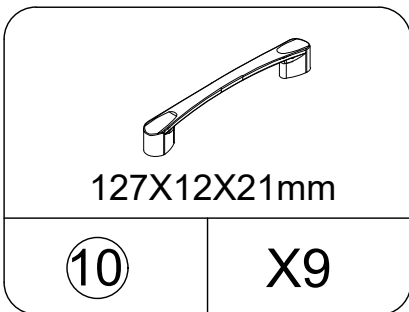


HANDLE

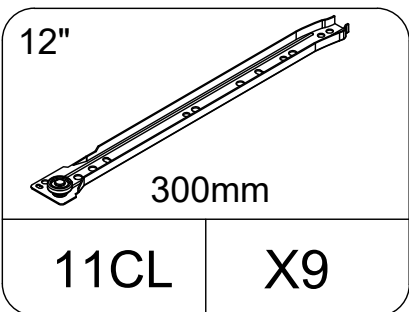


LEFT CABINET MEMBER

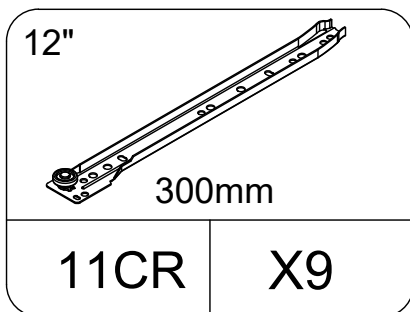


RIGHT CABINET MEMBER

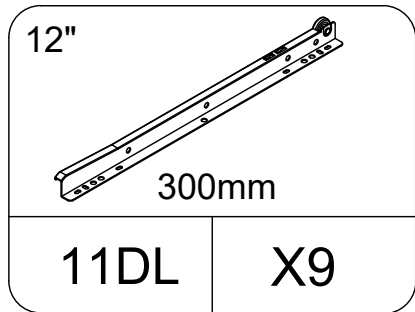


LEFT DRAWER RUNNER

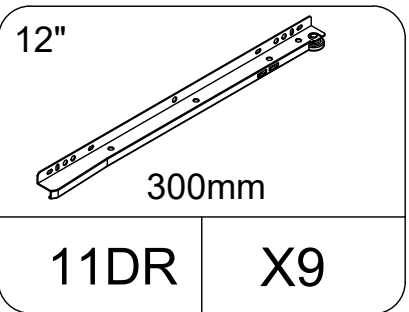


RIGHT DRAWER RUNNER

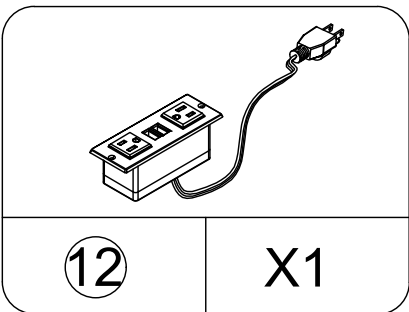

POWER STRIP

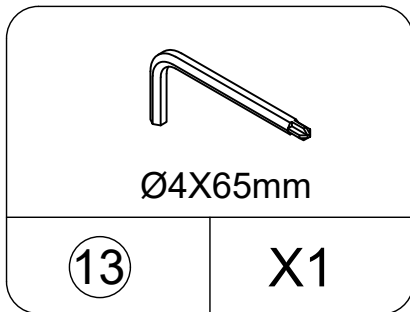

HEX KEY

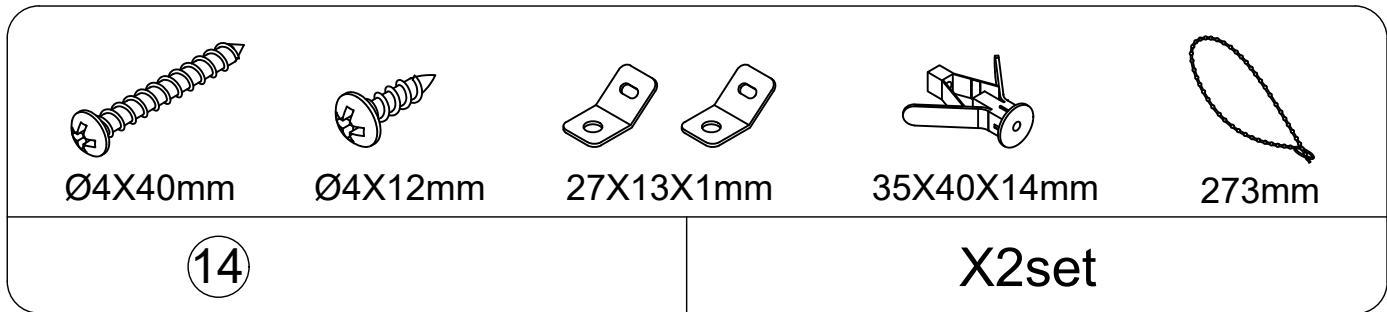


TIPPING RESTRAINT
HARDWARE KIT

Part List


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

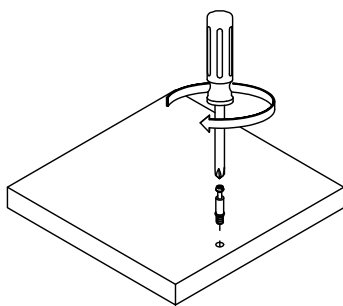

2

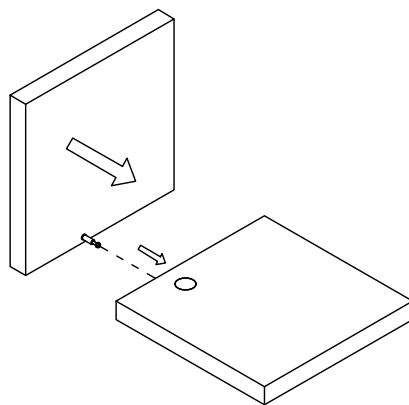


3

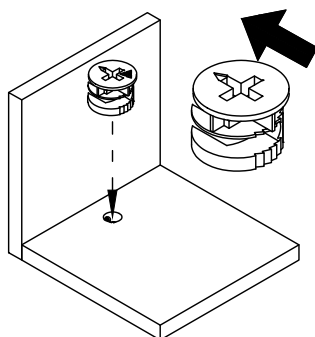


The opening must point toward the edge of the board

4

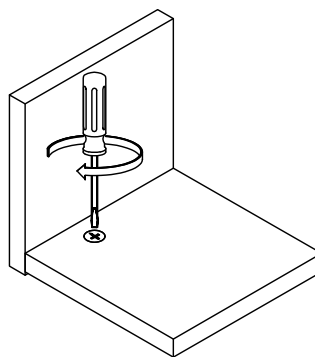


Board Identification

Not actual size

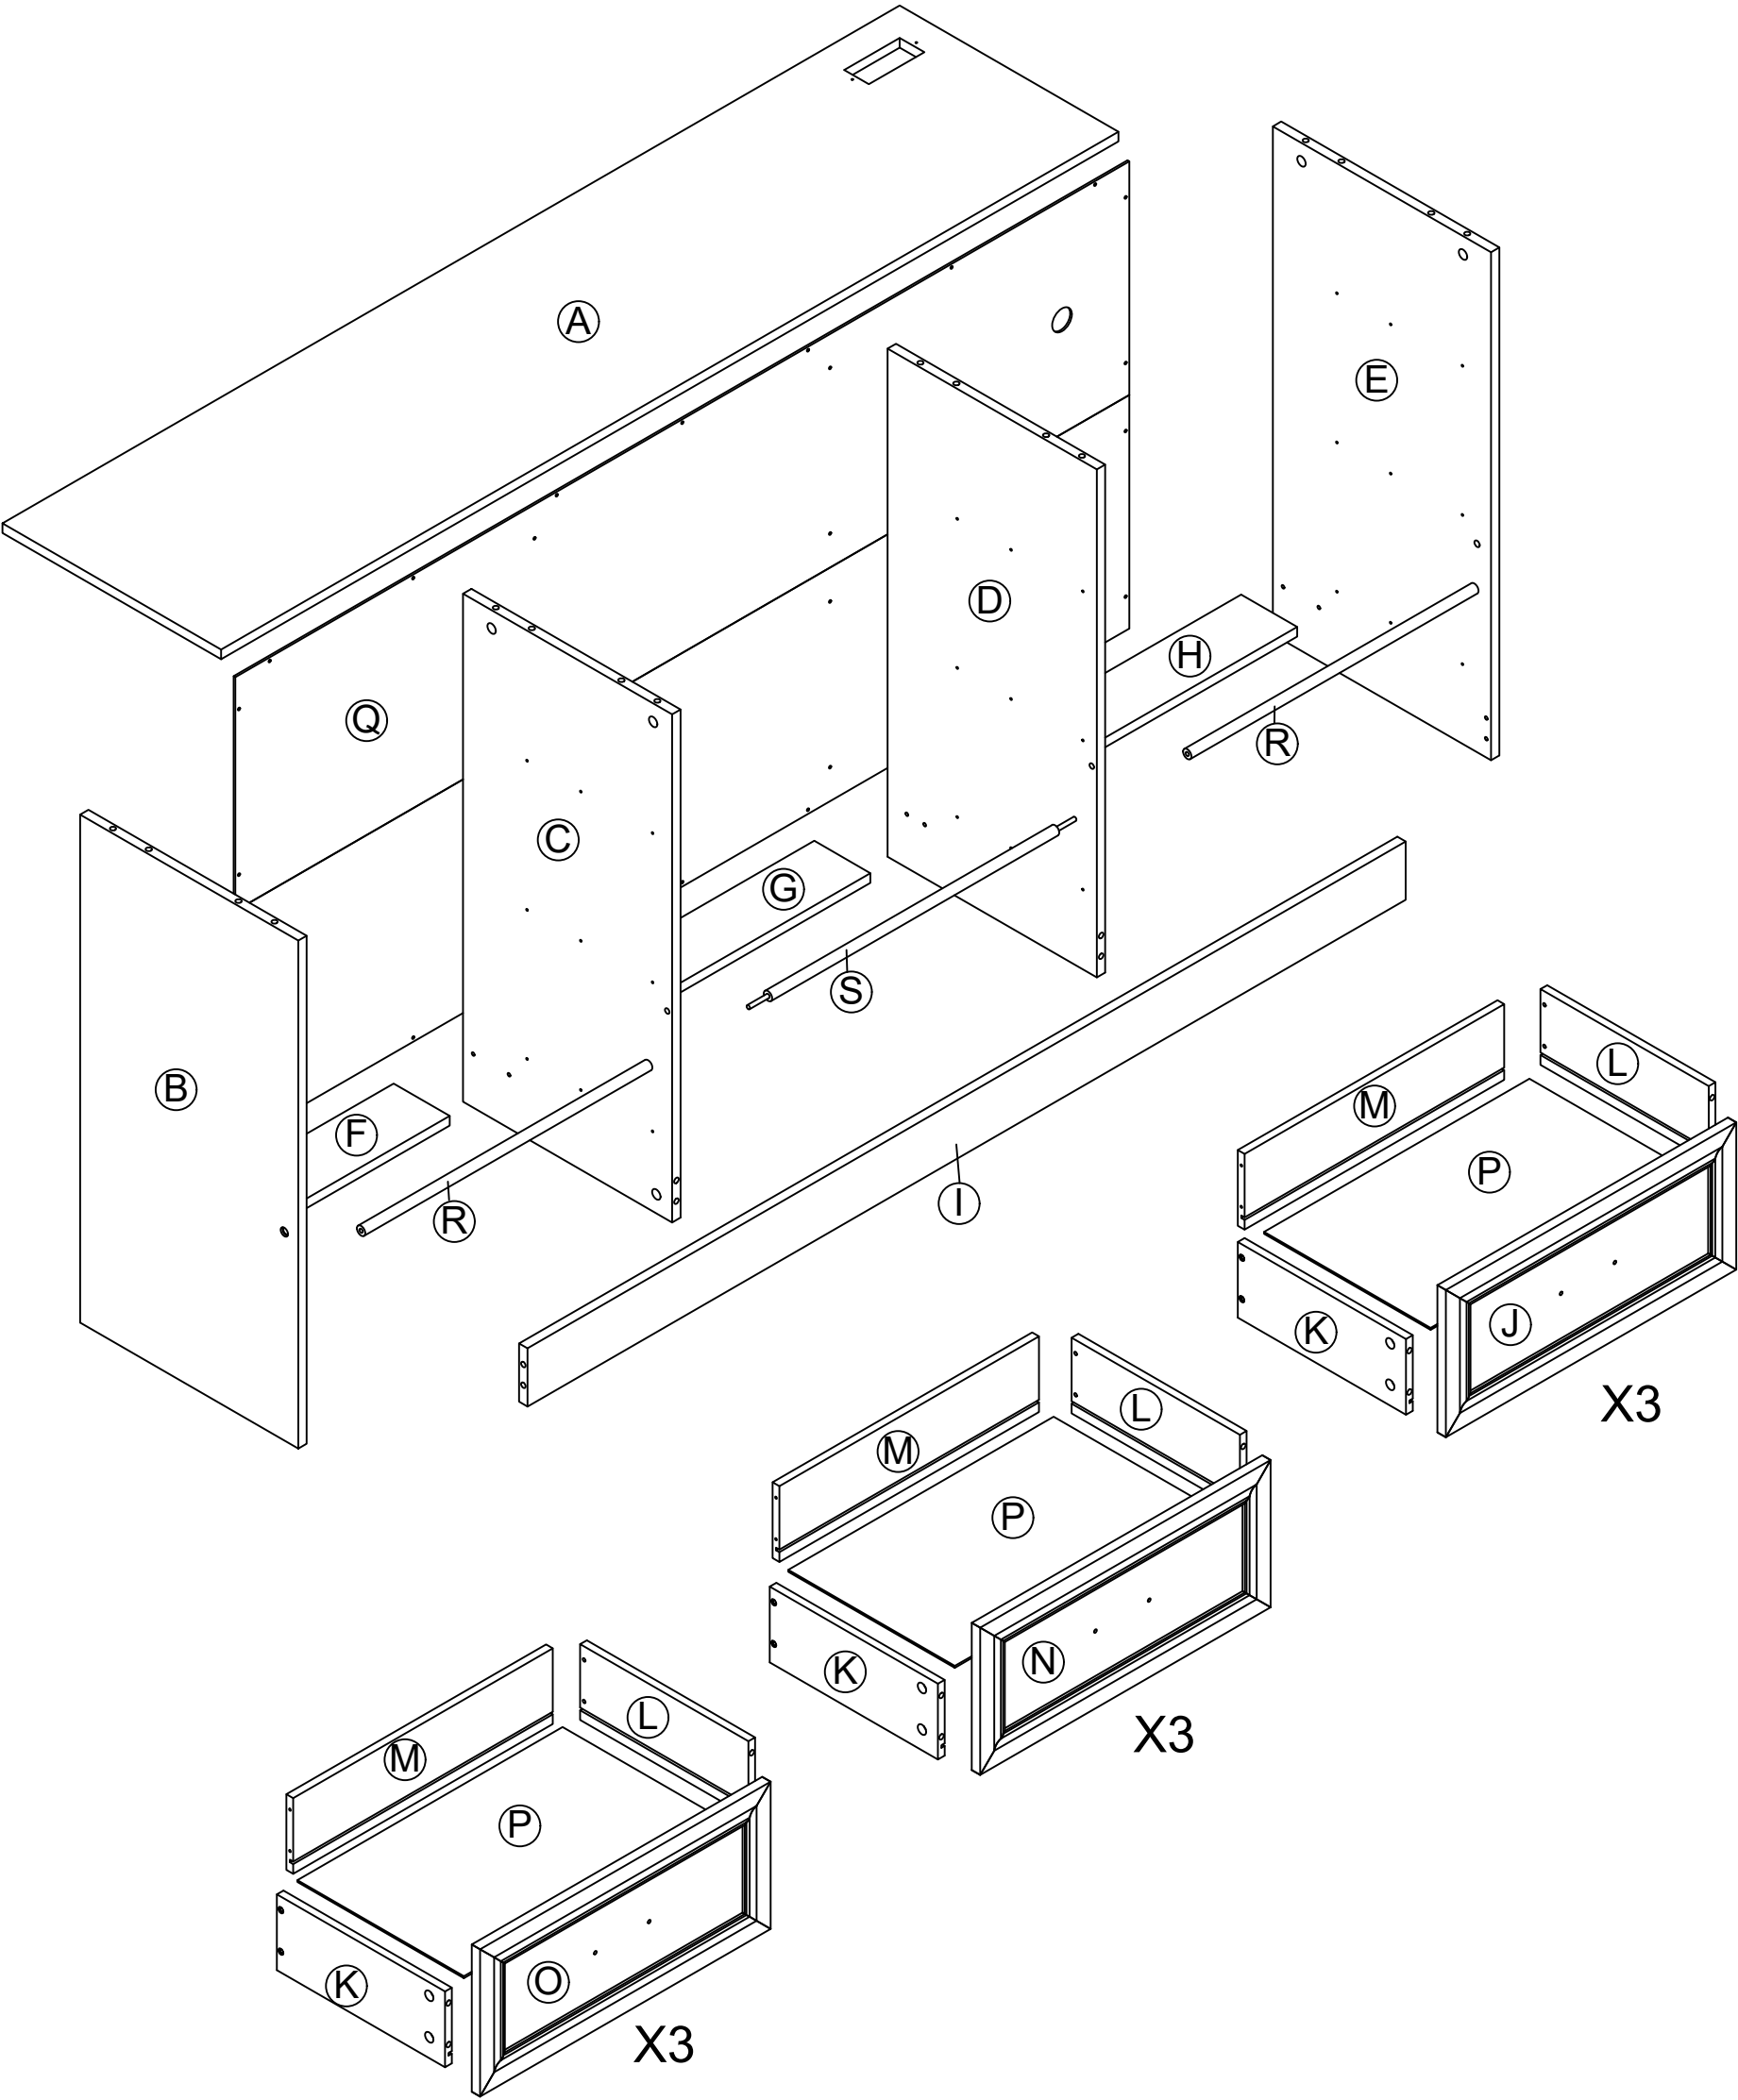

STEP1

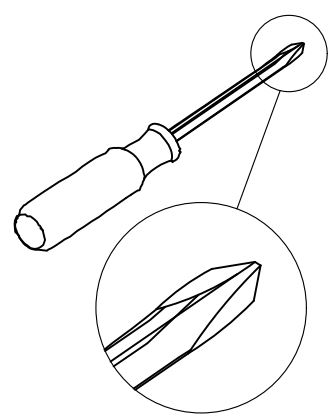




Ø15X9.5mm

1


X12



Ø6.5X35mm

2

X12



Ø4X35mm

4


X12



Ø4X9mm

9



X6

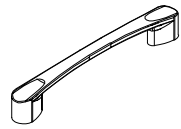



127X12X21mm

10

X3


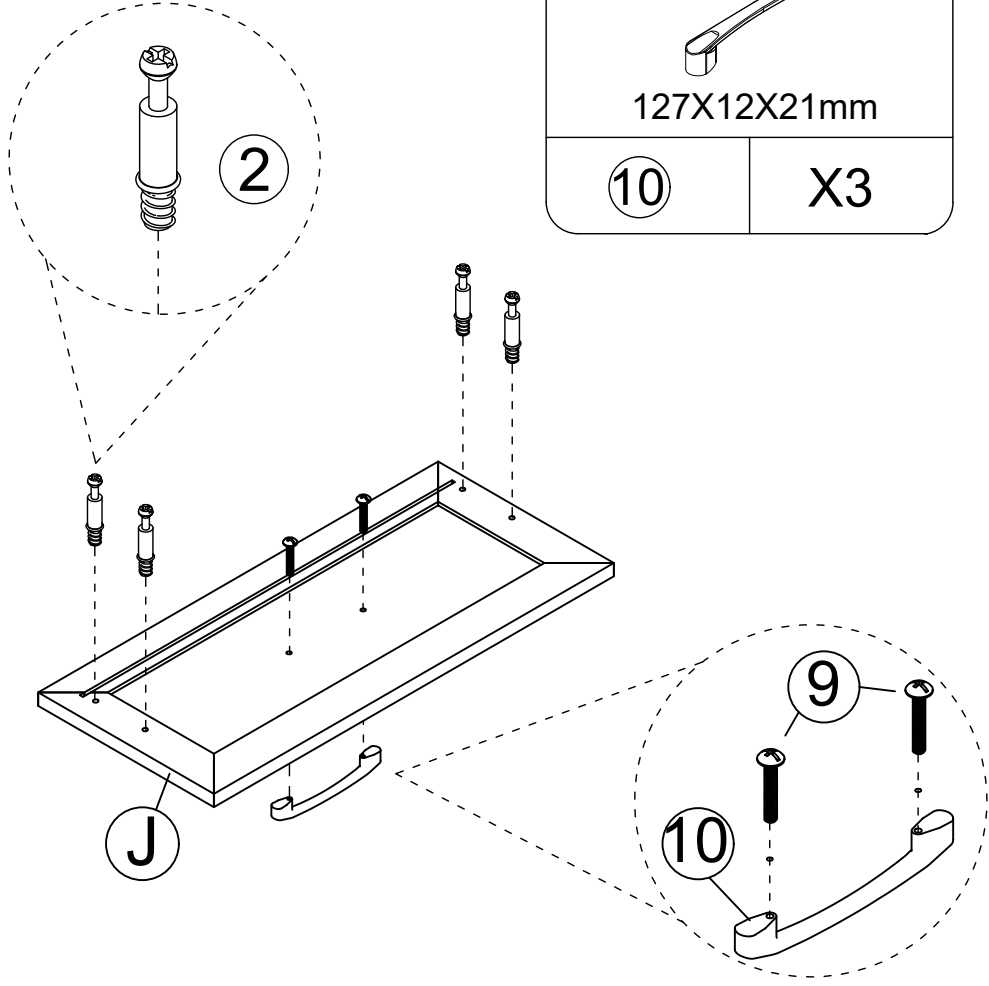
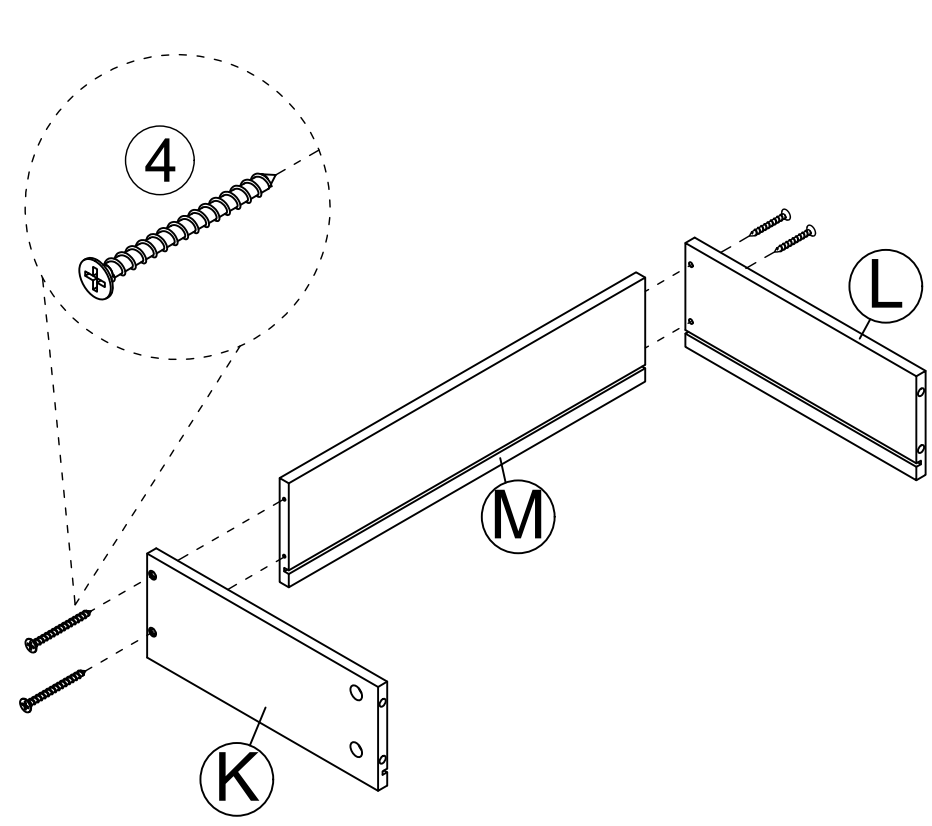


Step 1

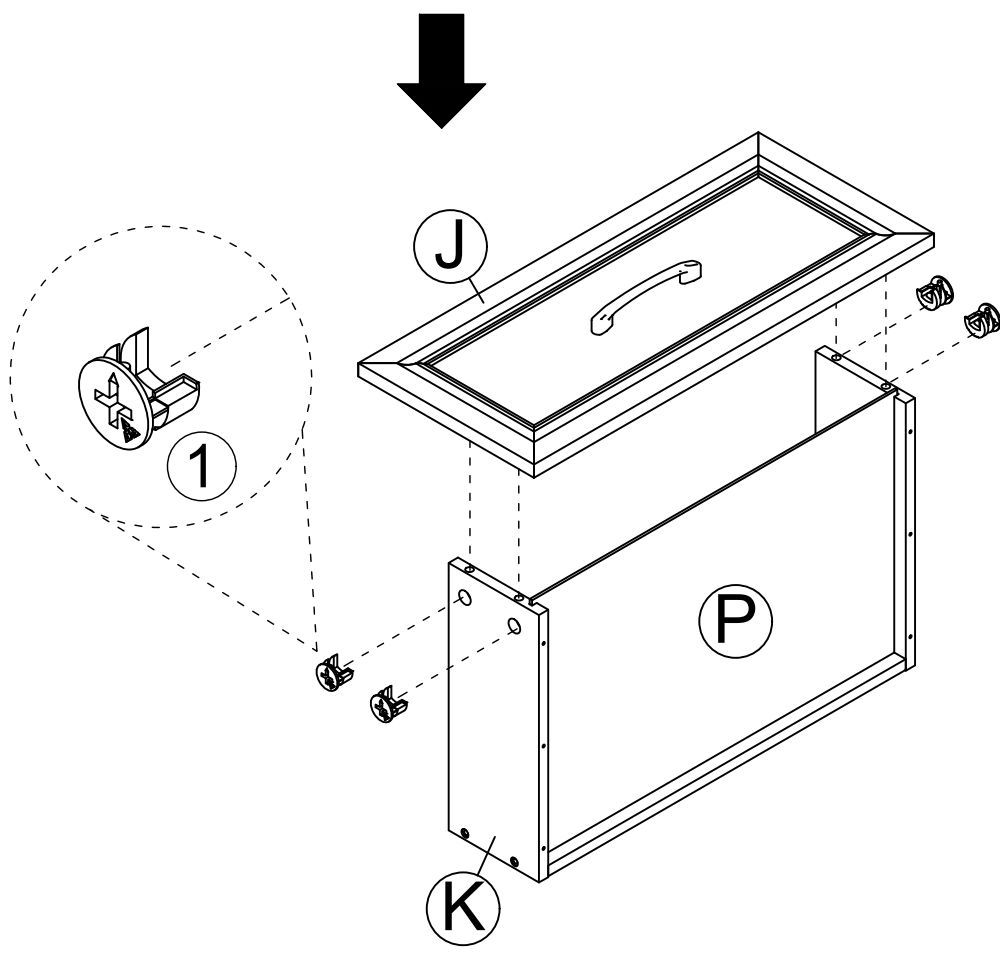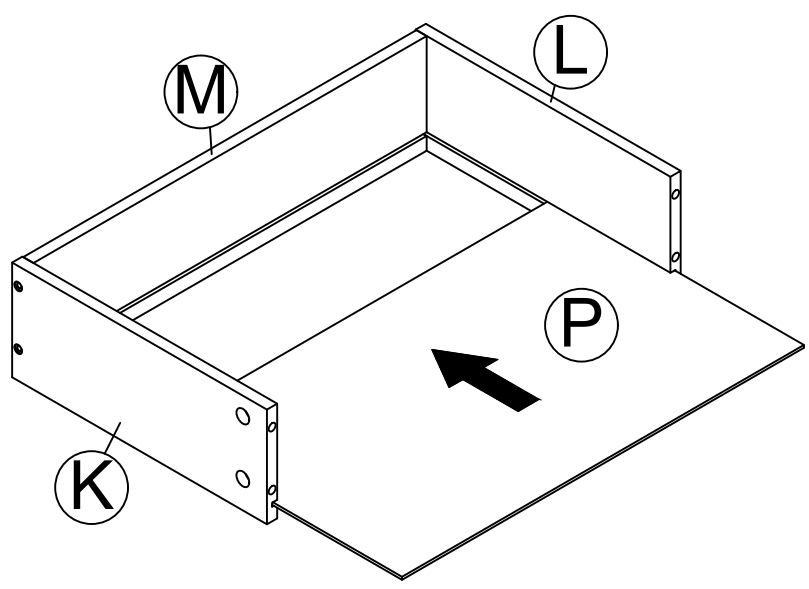

Step 2

Step 3

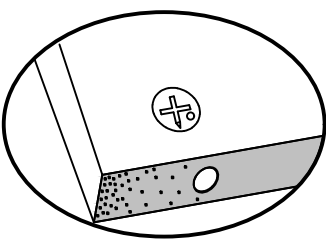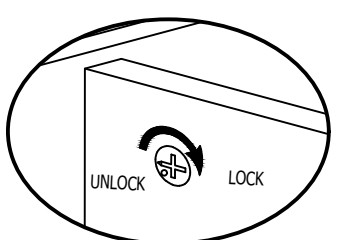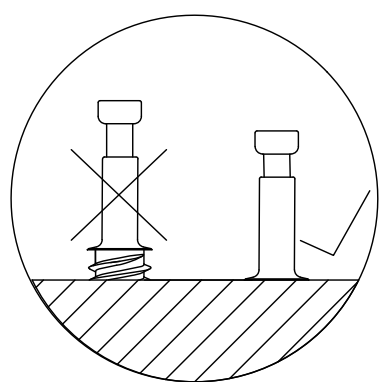


Proper orientation of CAM LOCK


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


X3

STEP2

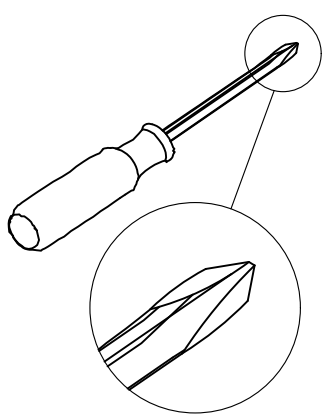





Ø15X9.5mm
①
X12


Ø6.5X35mm
②
X12




Ø4X35mm
④
X12


Ø4X9mm
⑨
X6

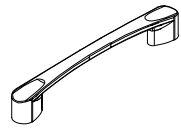
127X12X21mm
⑩
X3


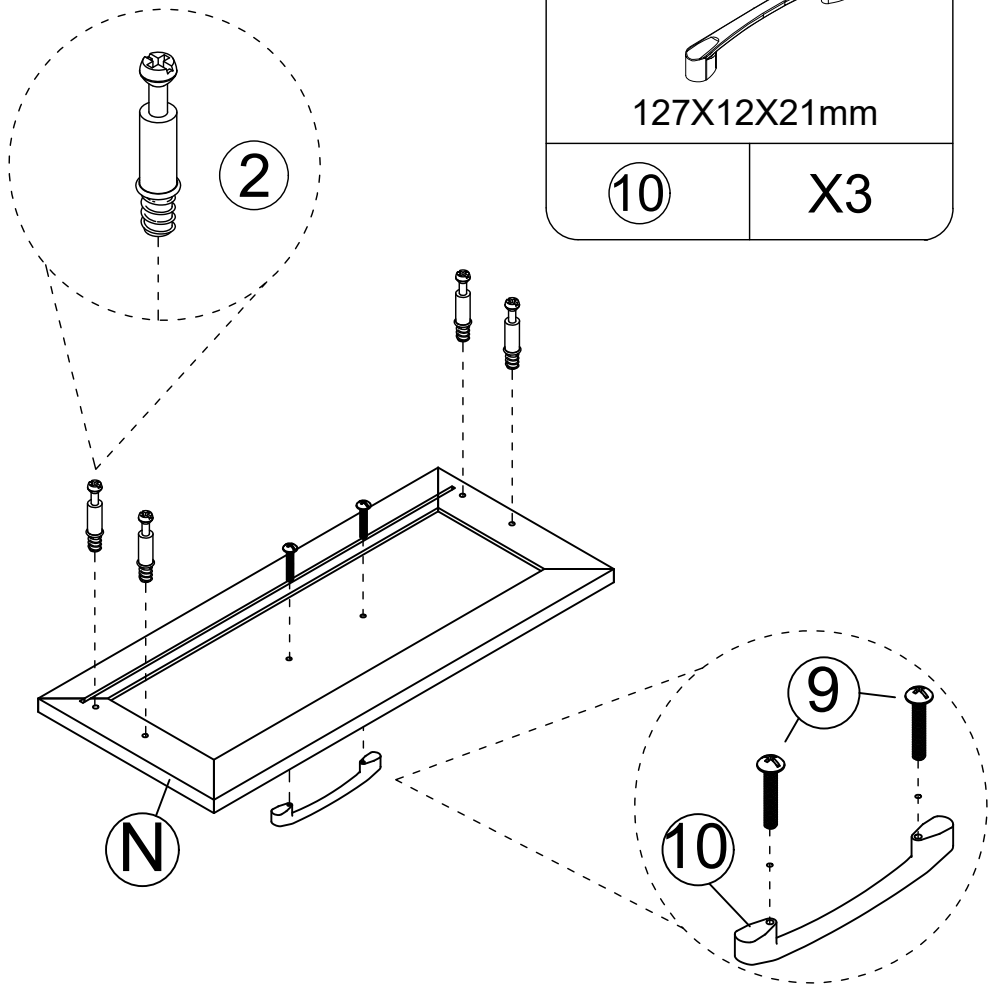
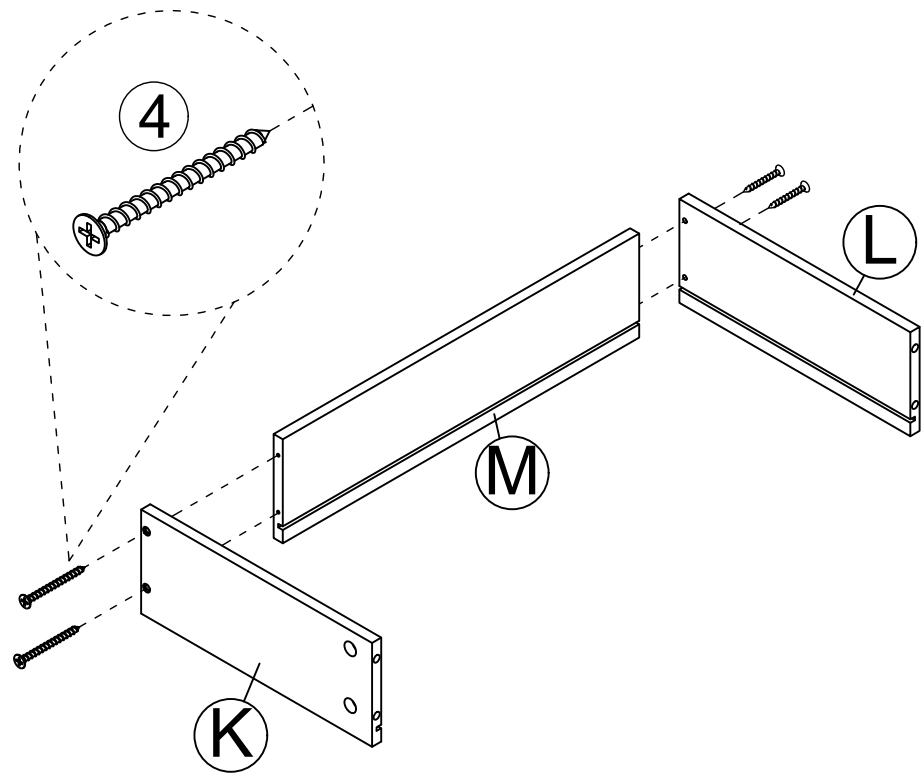


Step 1

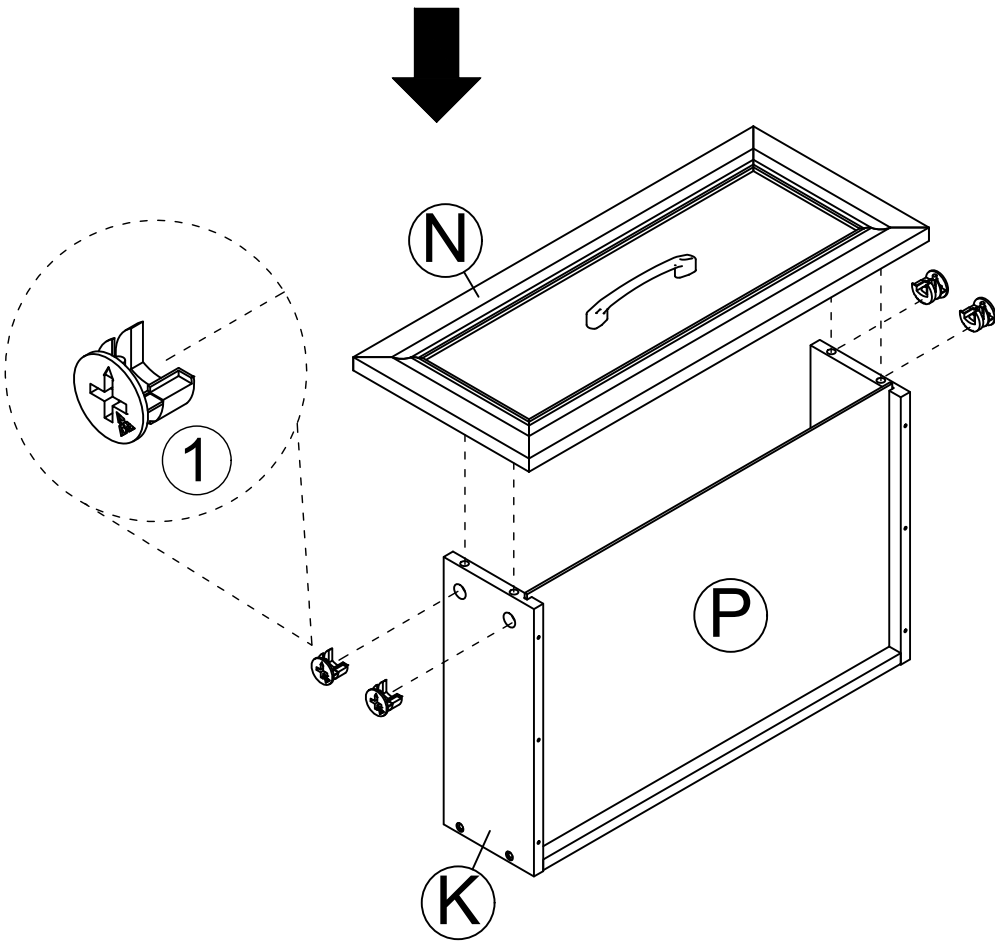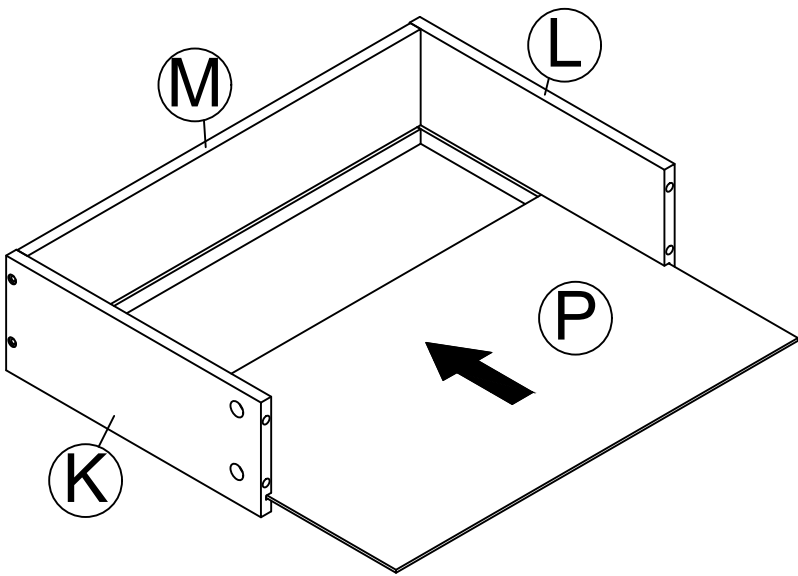

Step 2

Step 3

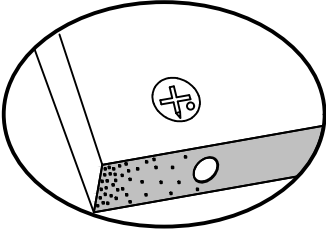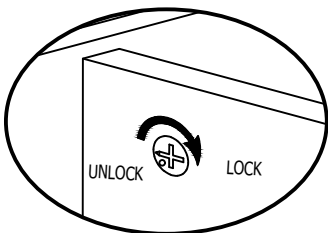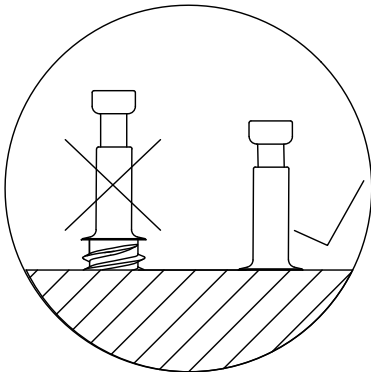


Proper orientation of CAM LOCK

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

X3

STEP3

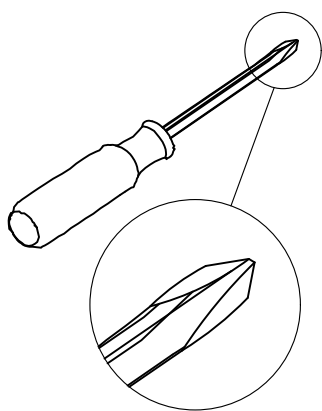




Ø15X9.5mm

1


X12



Ø6.5X35mm

2

X12



Ø4X35mm

4


X12



Ø4X9mm

9



X6

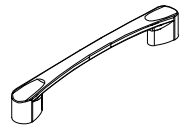



127X12X21mm

10




X3

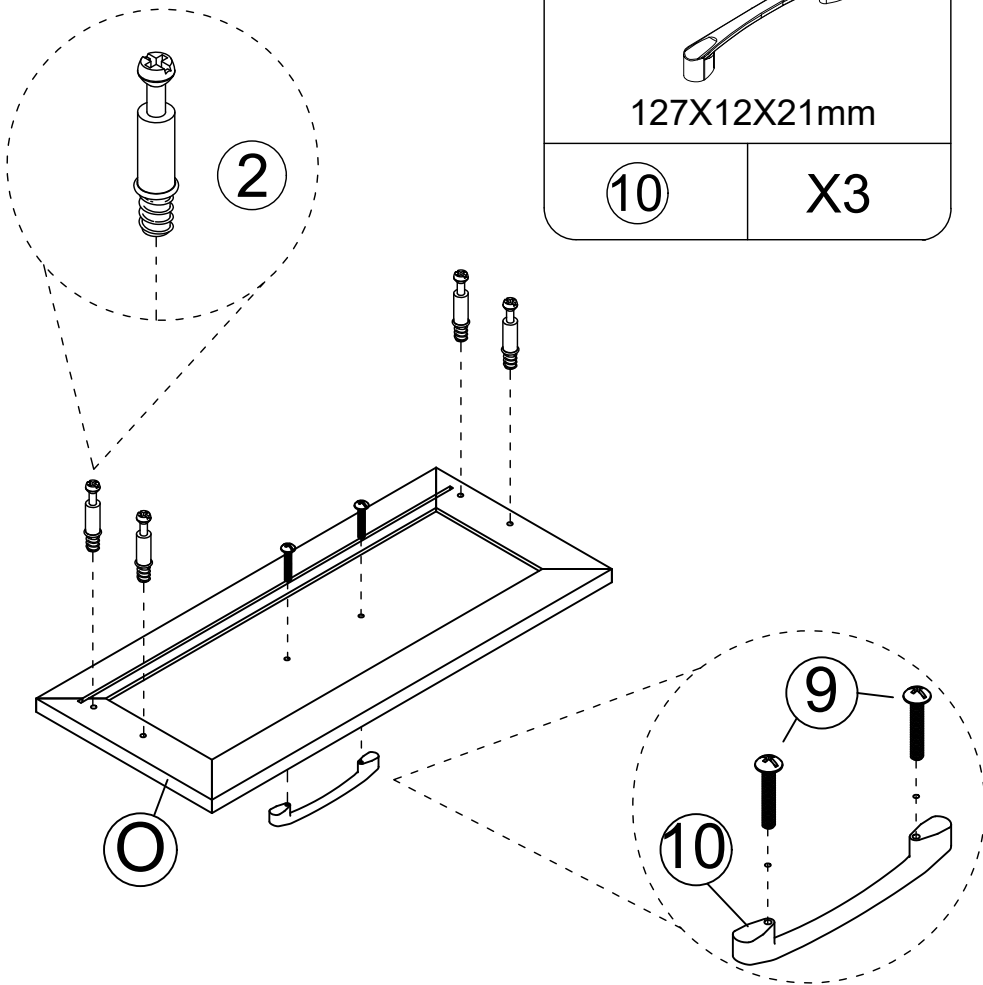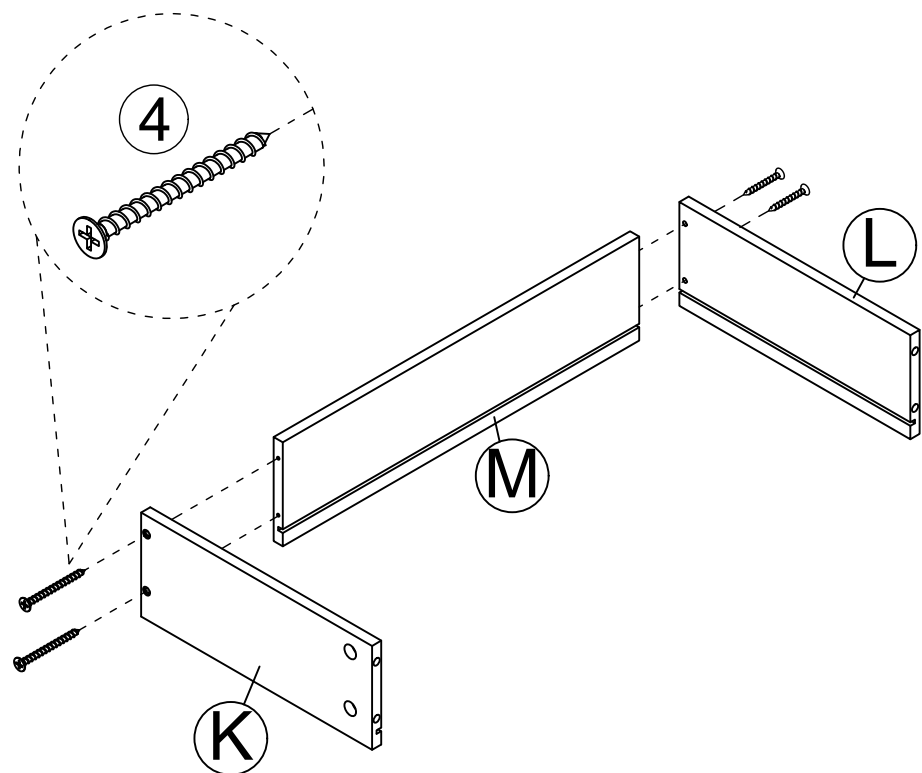

Step 1

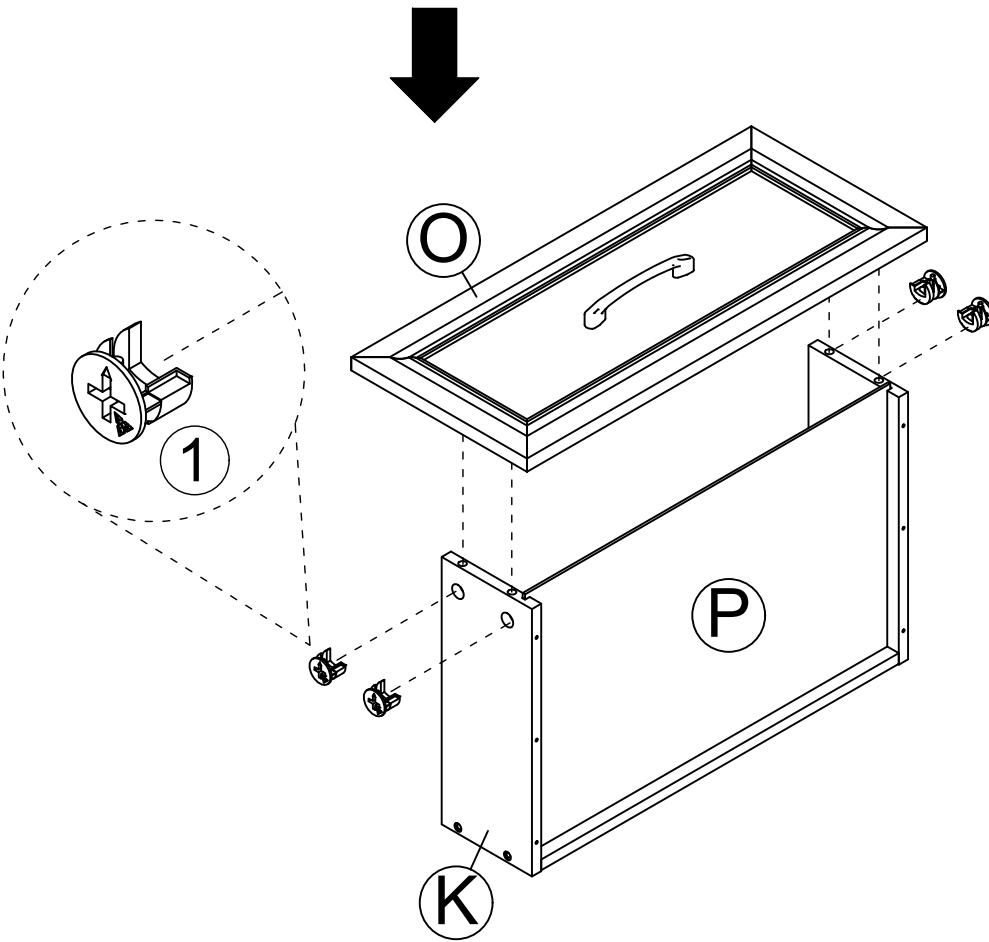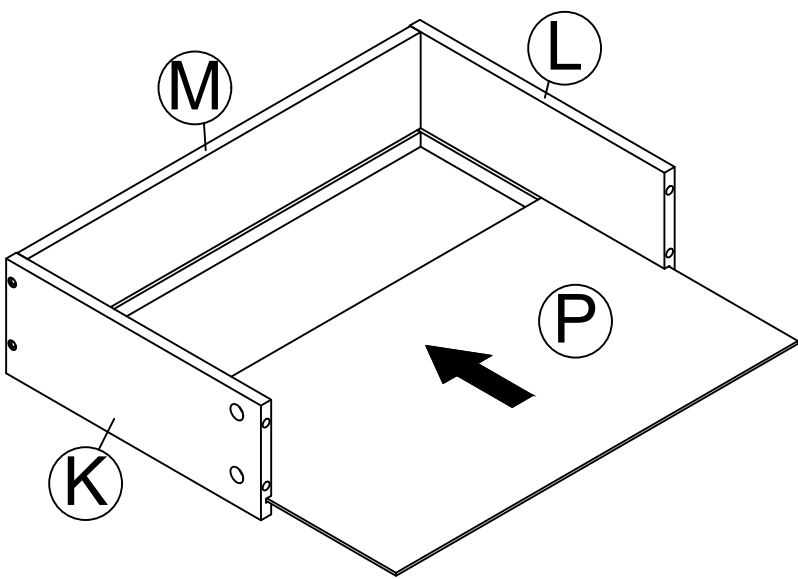

Step 2

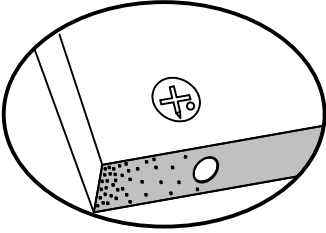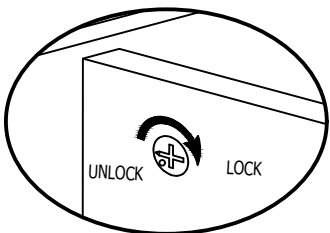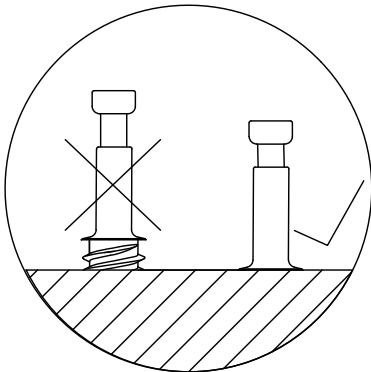


Proper orientation of CAM LOCK


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


Step 3


X3


STEP4

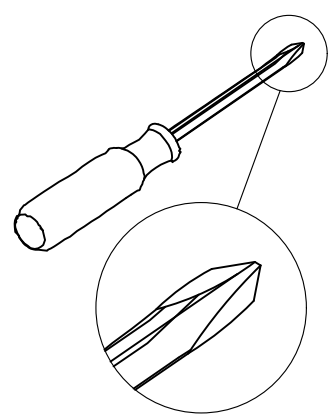

 Ø3.5X14mm	
⑤	X18

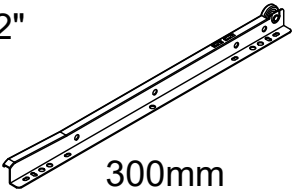
12"  300mm	
11DL	X3

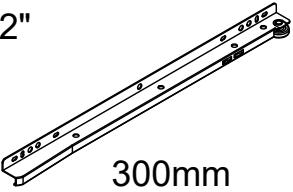
12"  300mm	
11DR	X3

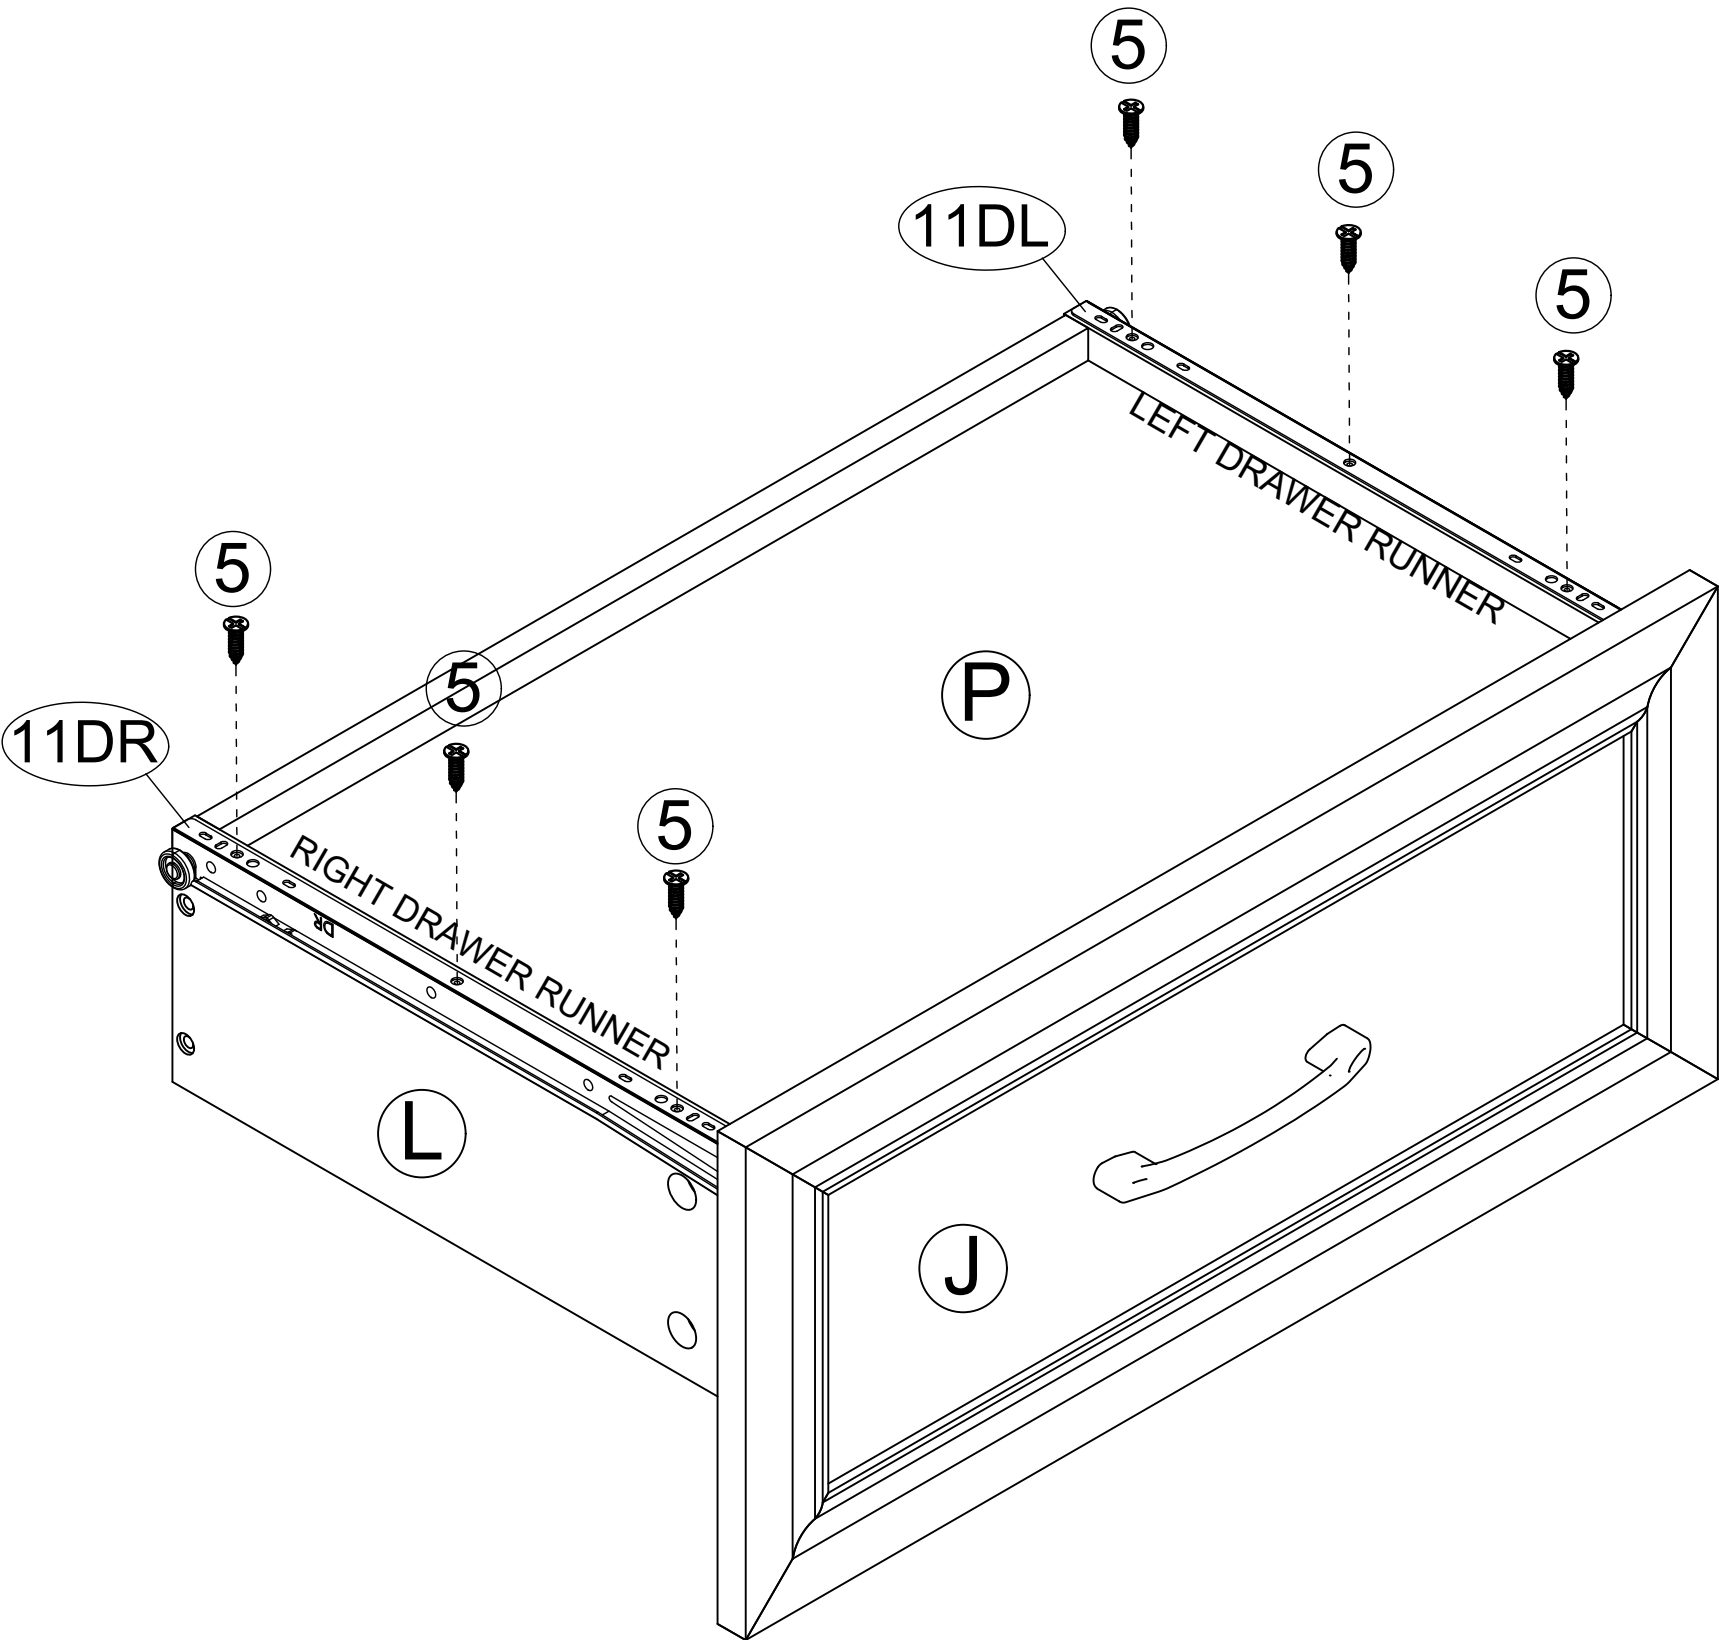



X3


STEP5

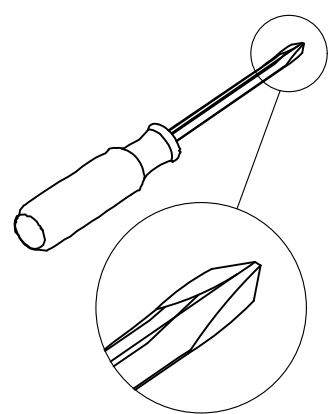

 Ø3.5X14mm	
⑤	X18

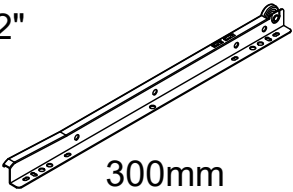
12"  300mm	
11DL	X3

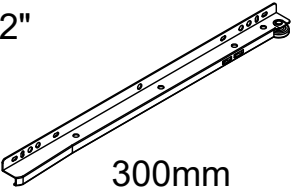
12"  300mm	
11DR	X3

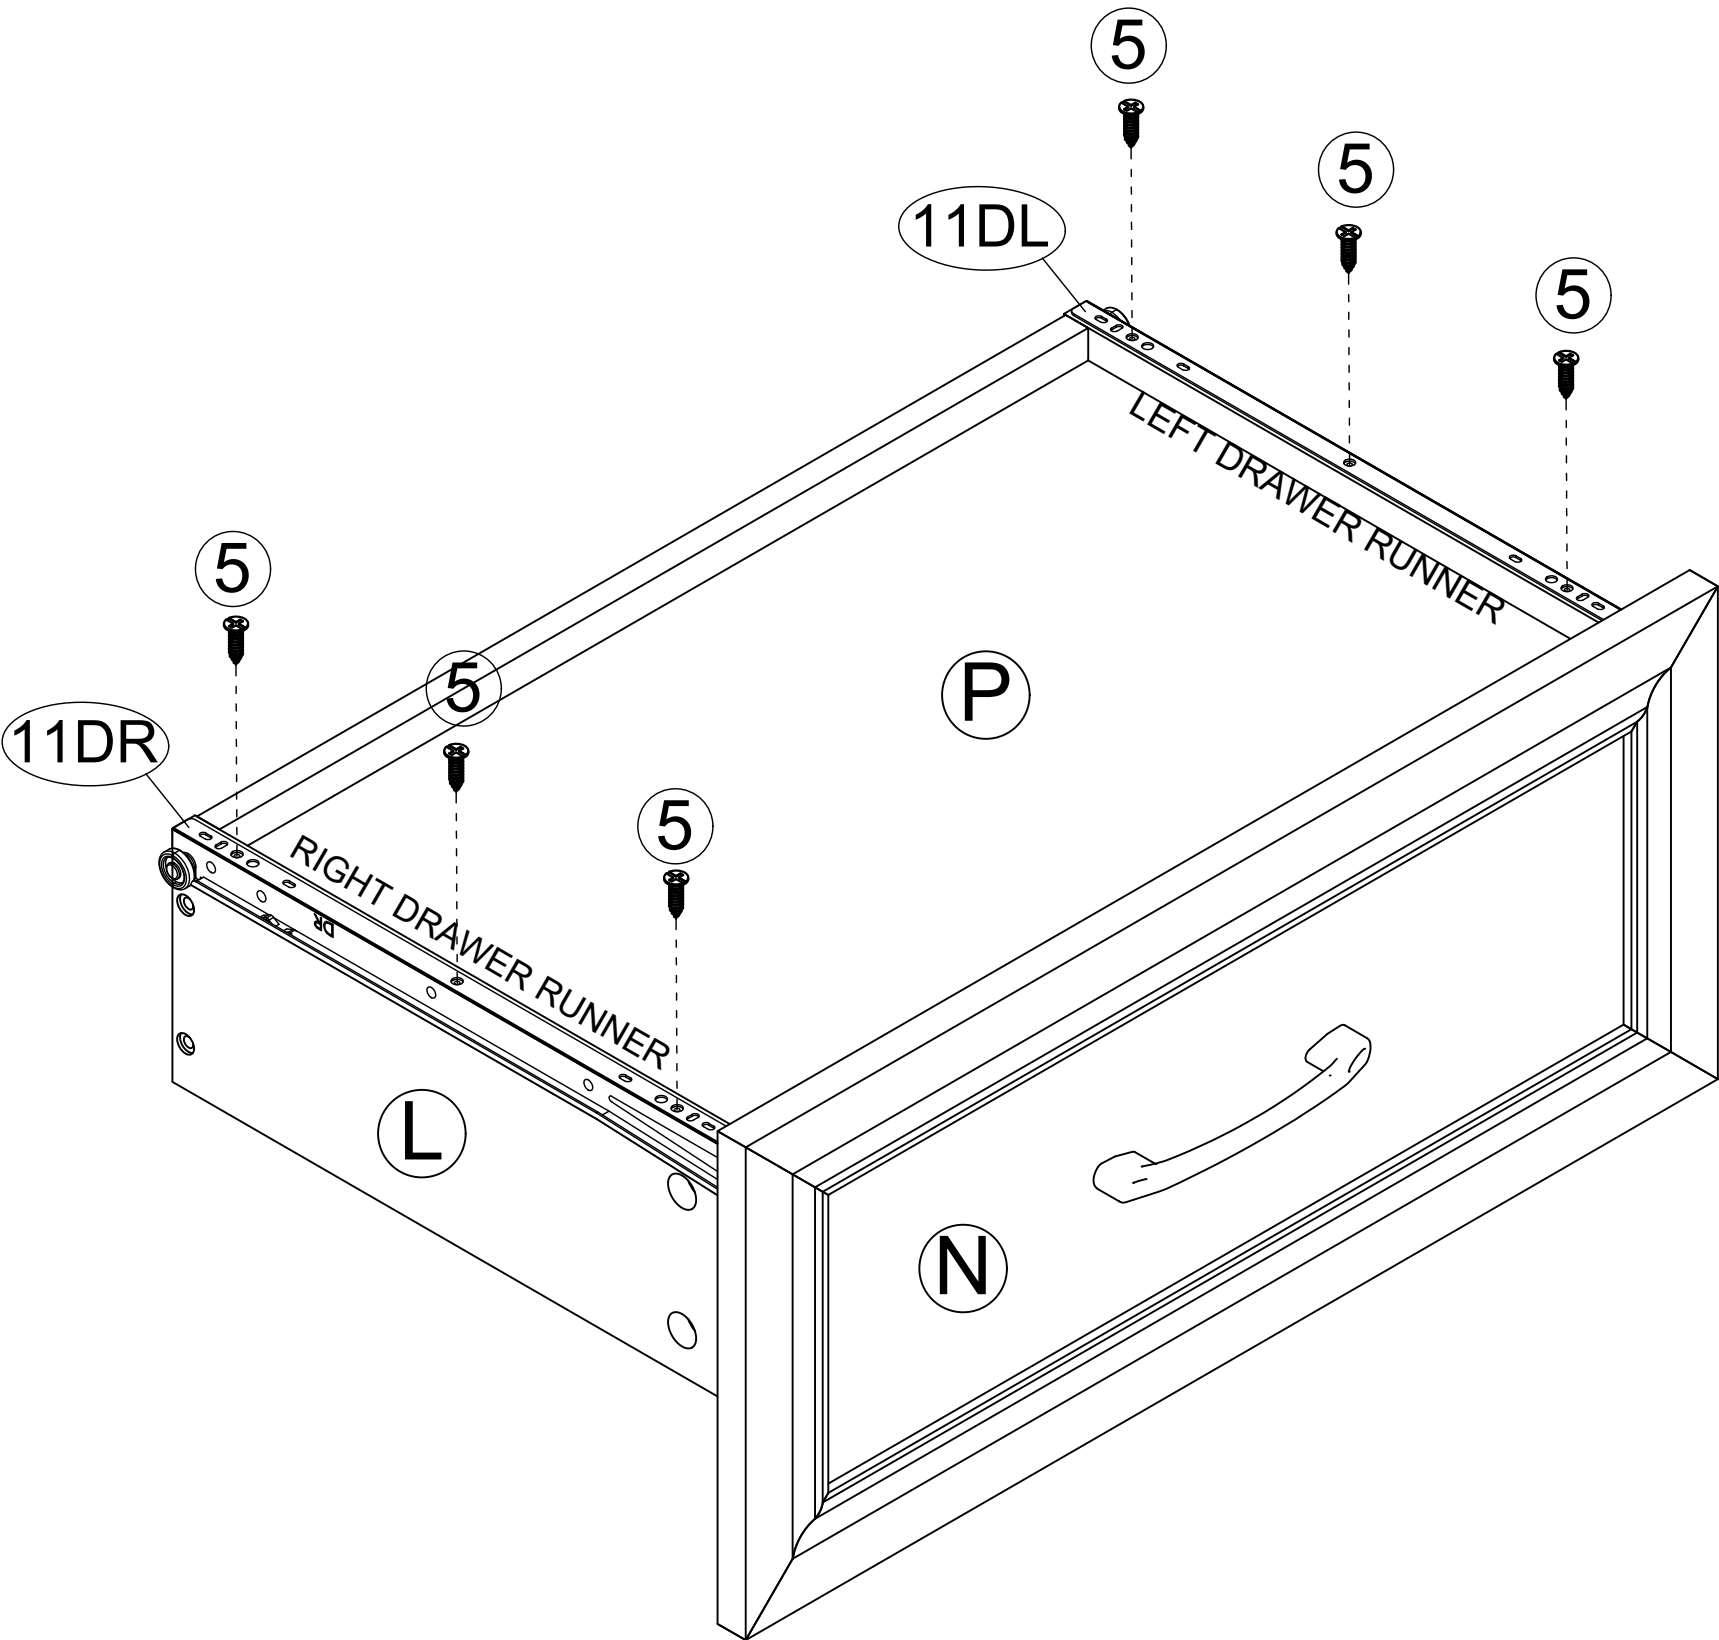



X3


STEP6

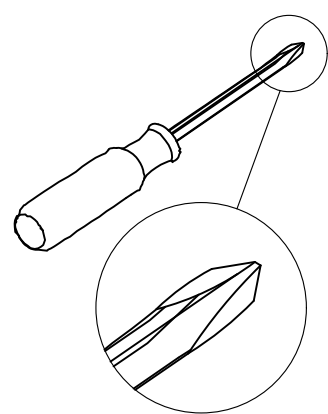

 Ø3.5X14mm	
⑤	X18

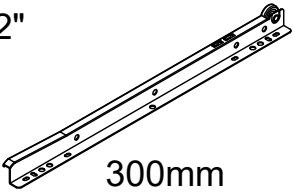
12"  300mm	
11DL	X3

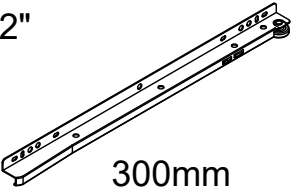
12"  300mm	
11DR	X3

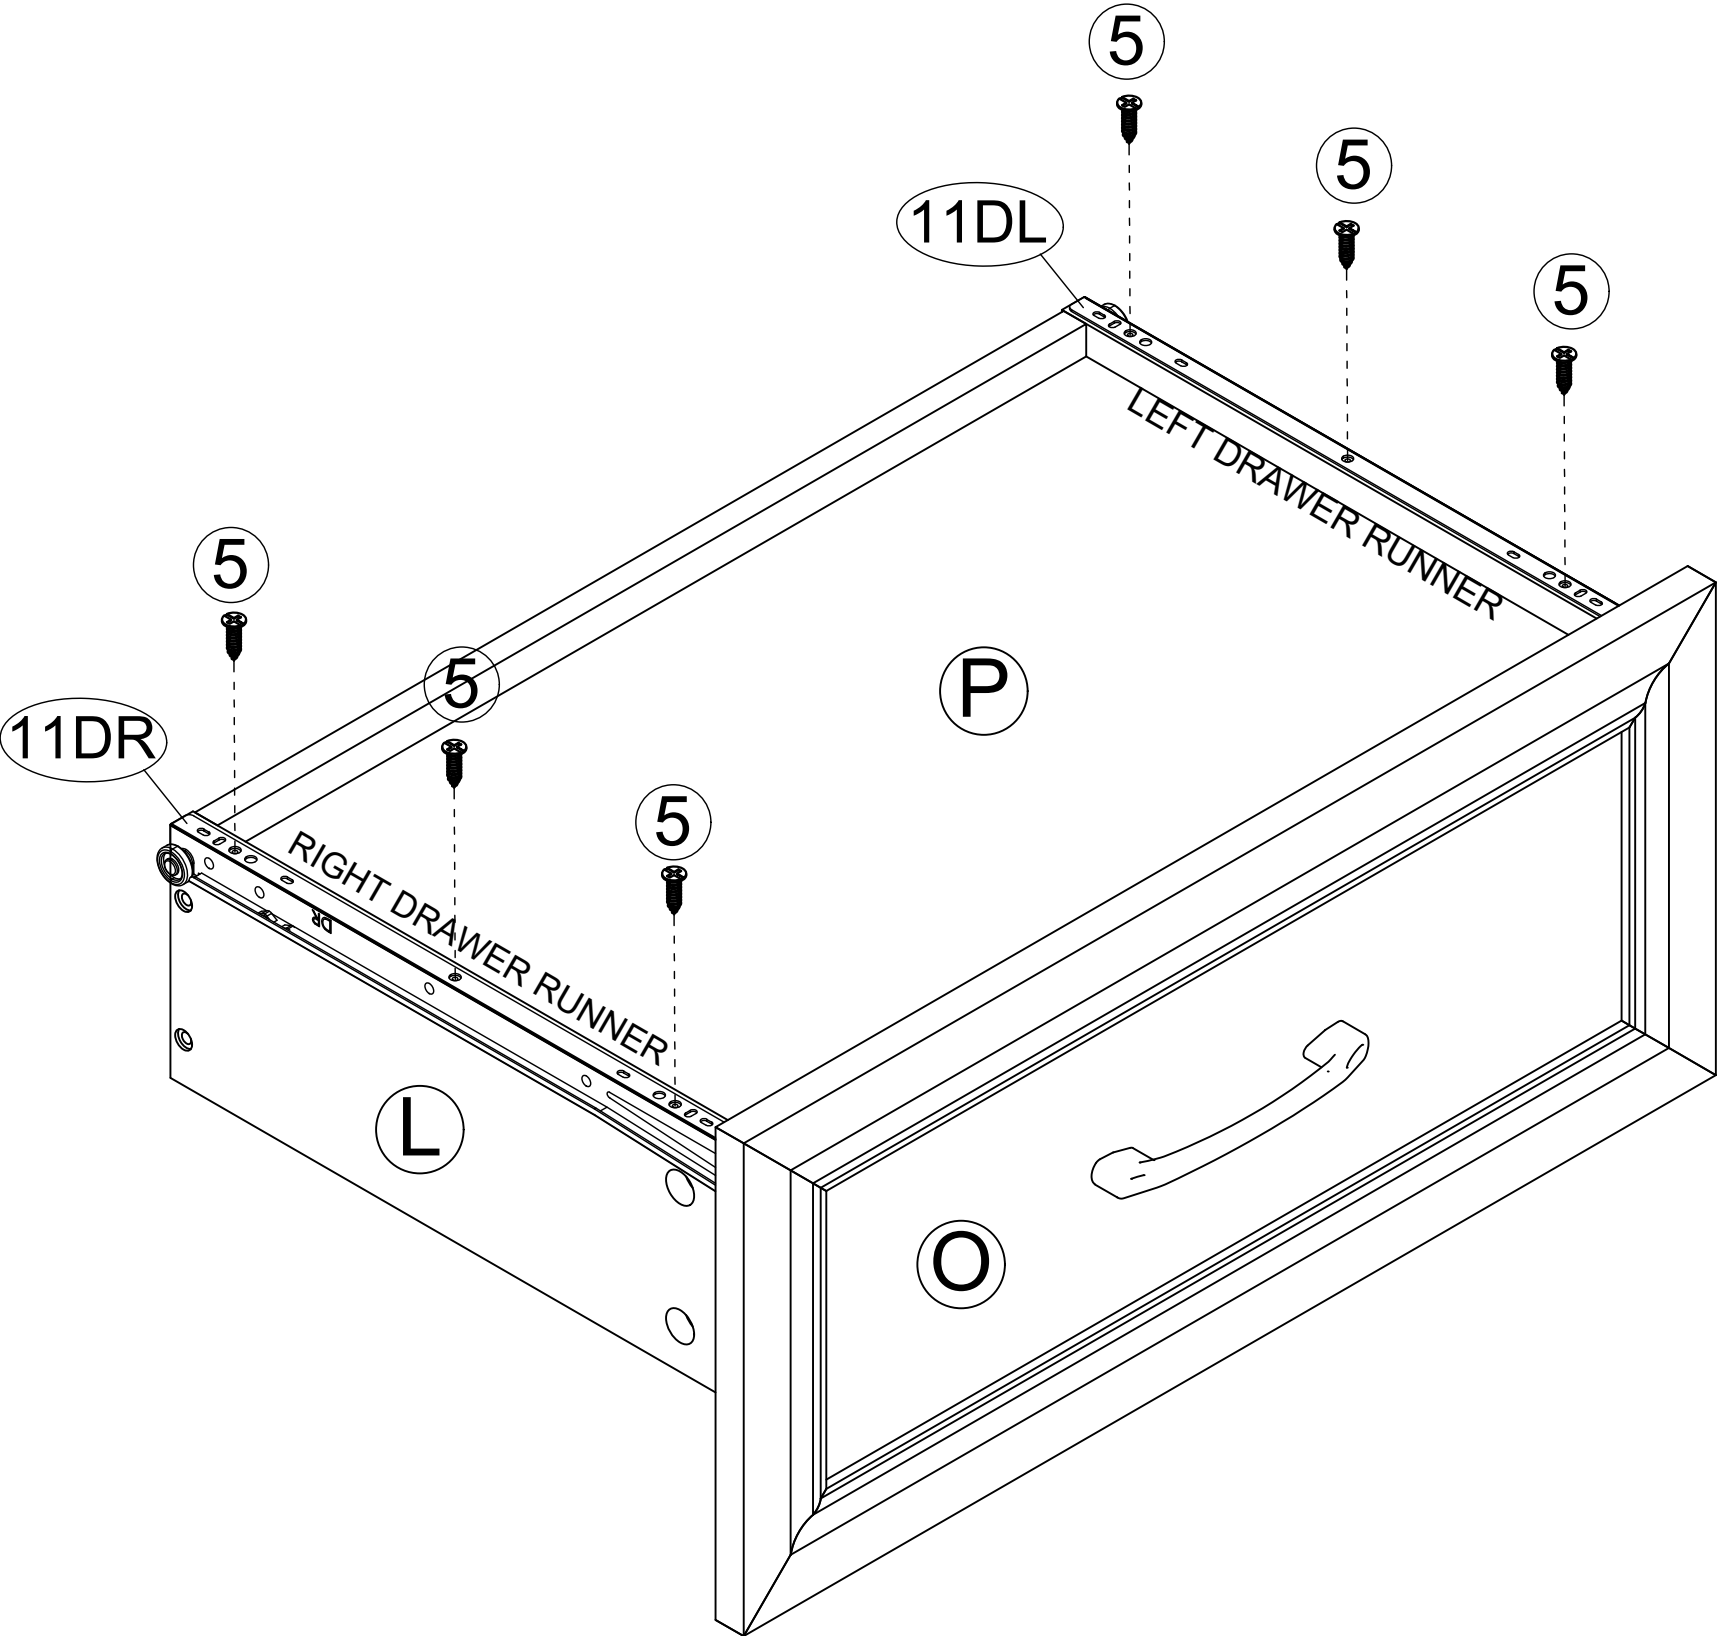



X3


STEP7

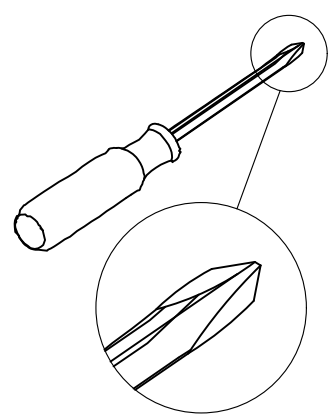






 Ø3.5X14mm	
5	X18

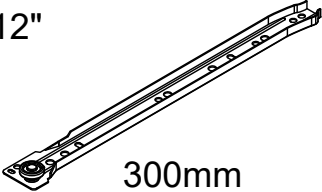12"  300mm	
11CL	X3

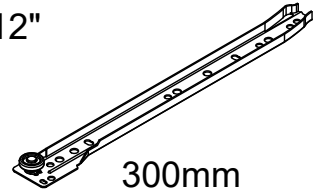
12"  300mm	
11CR	X3

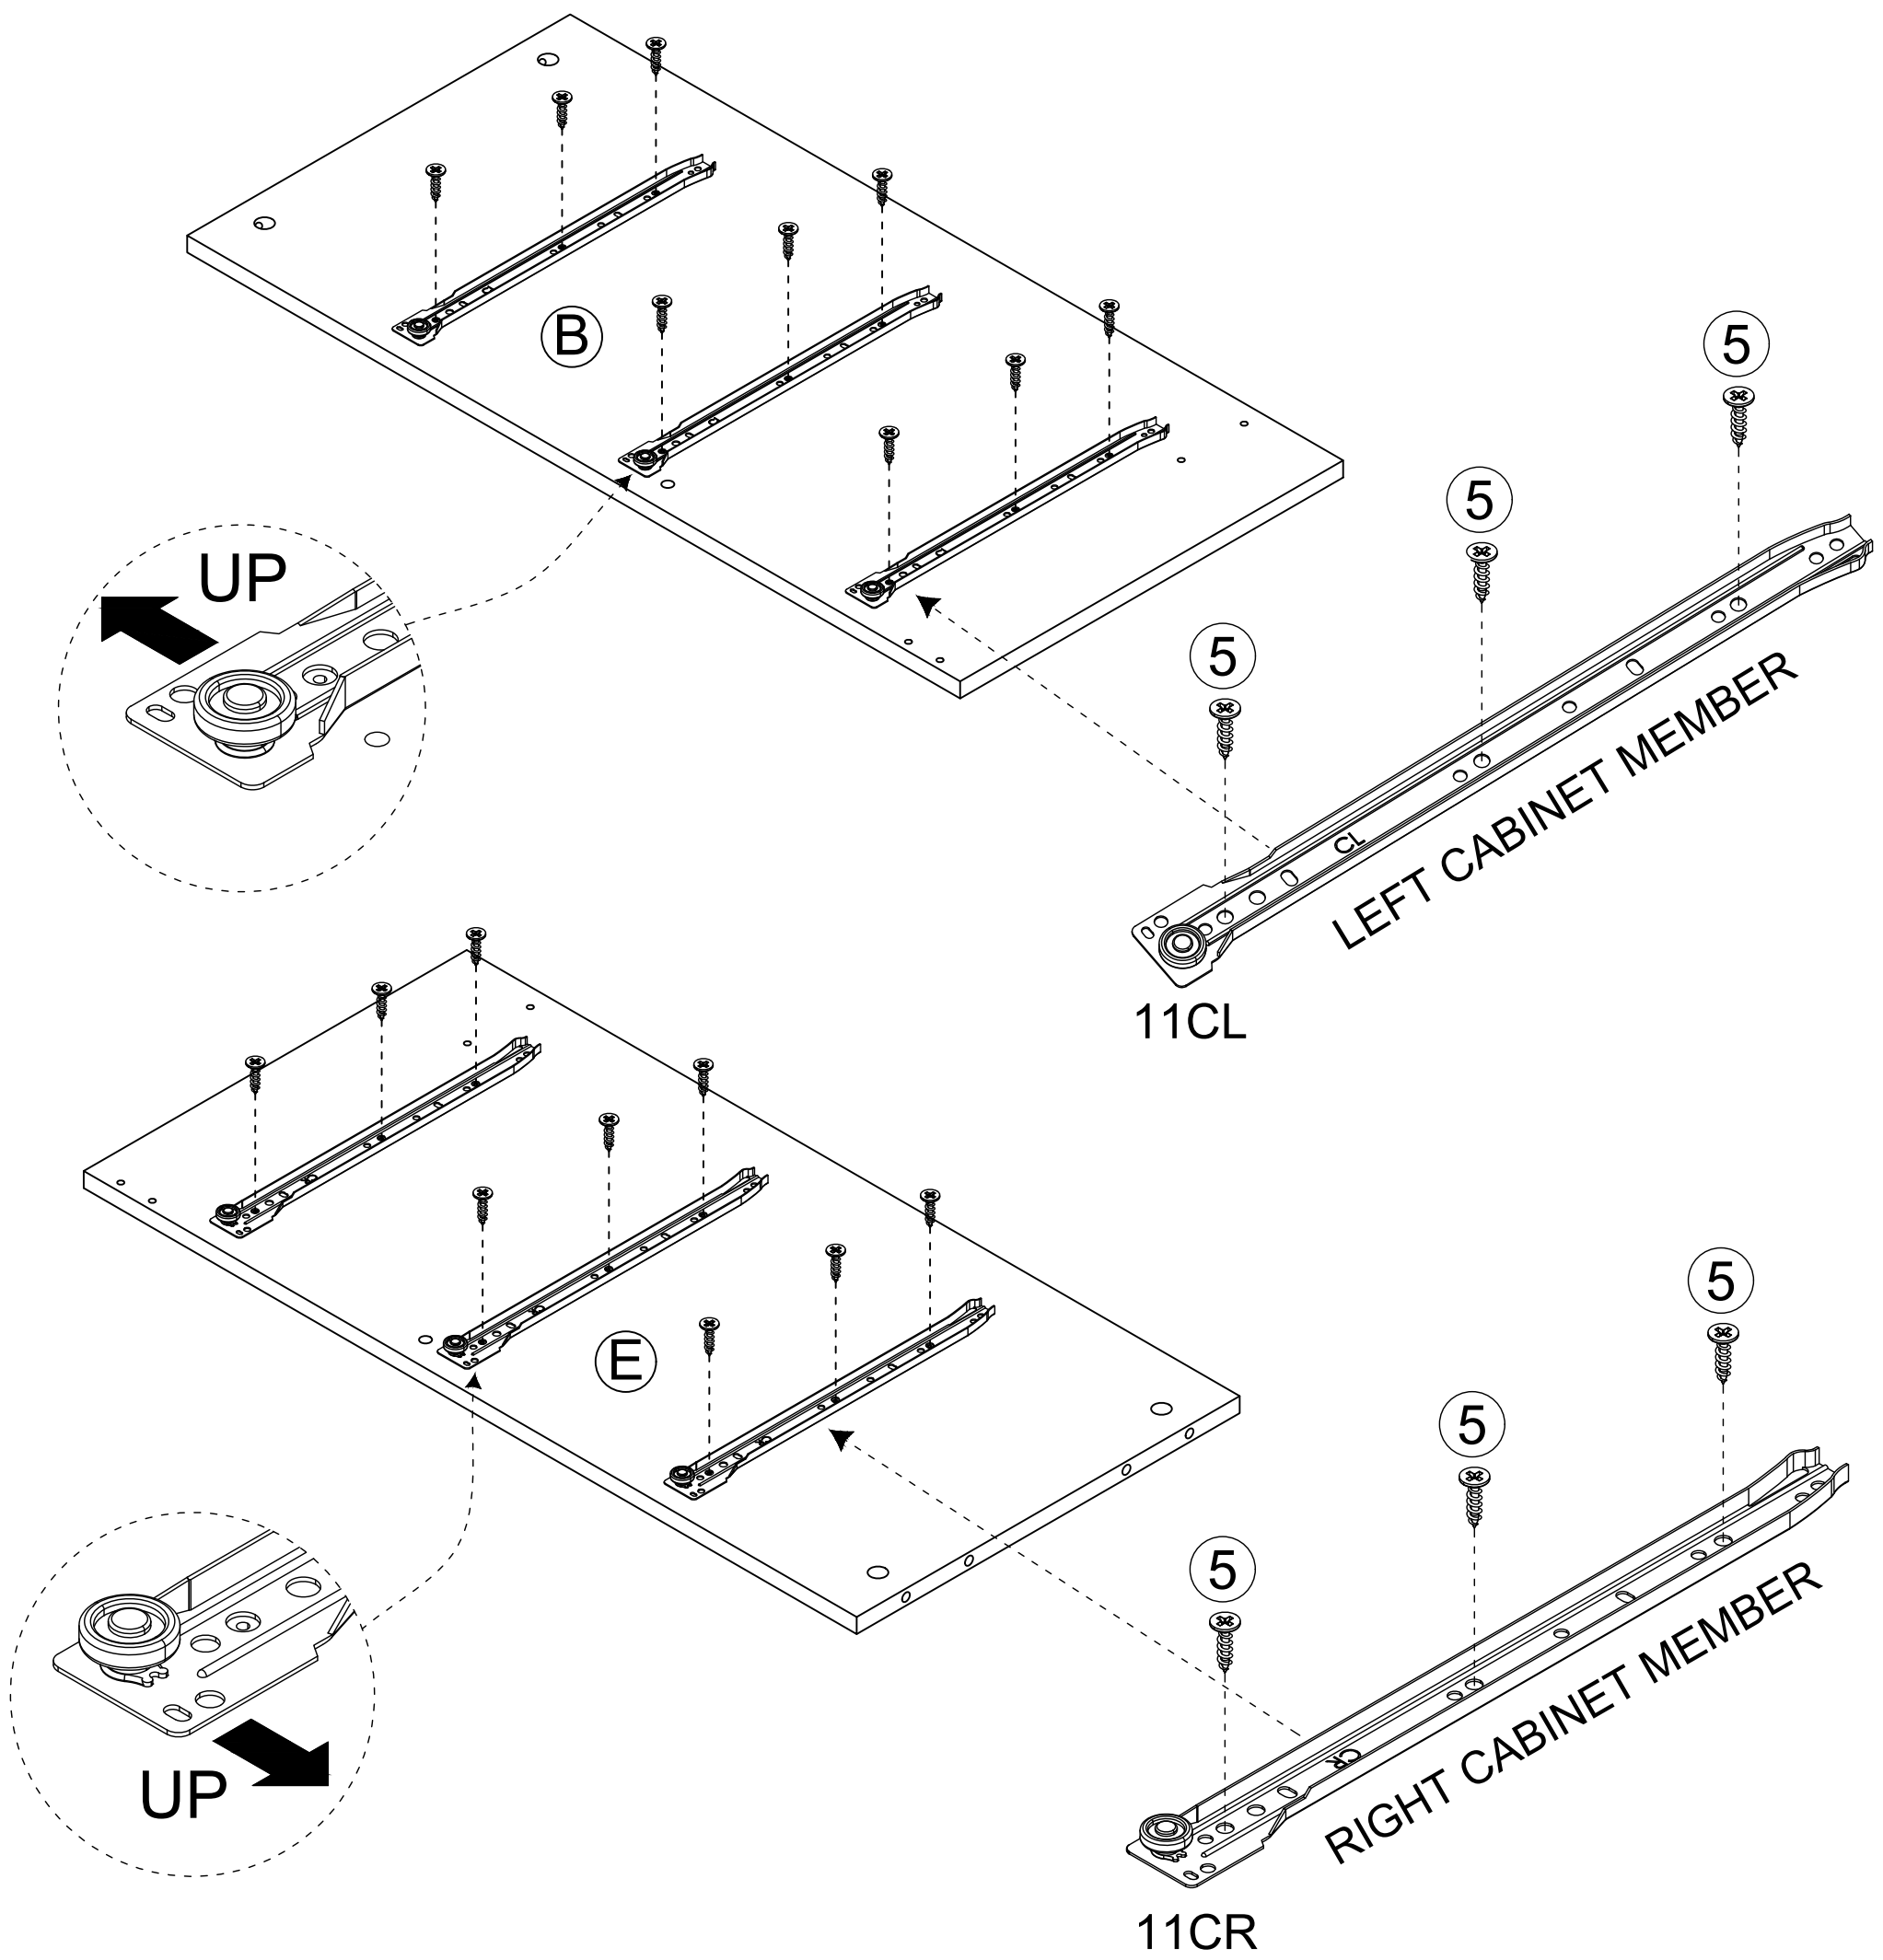



STEP8

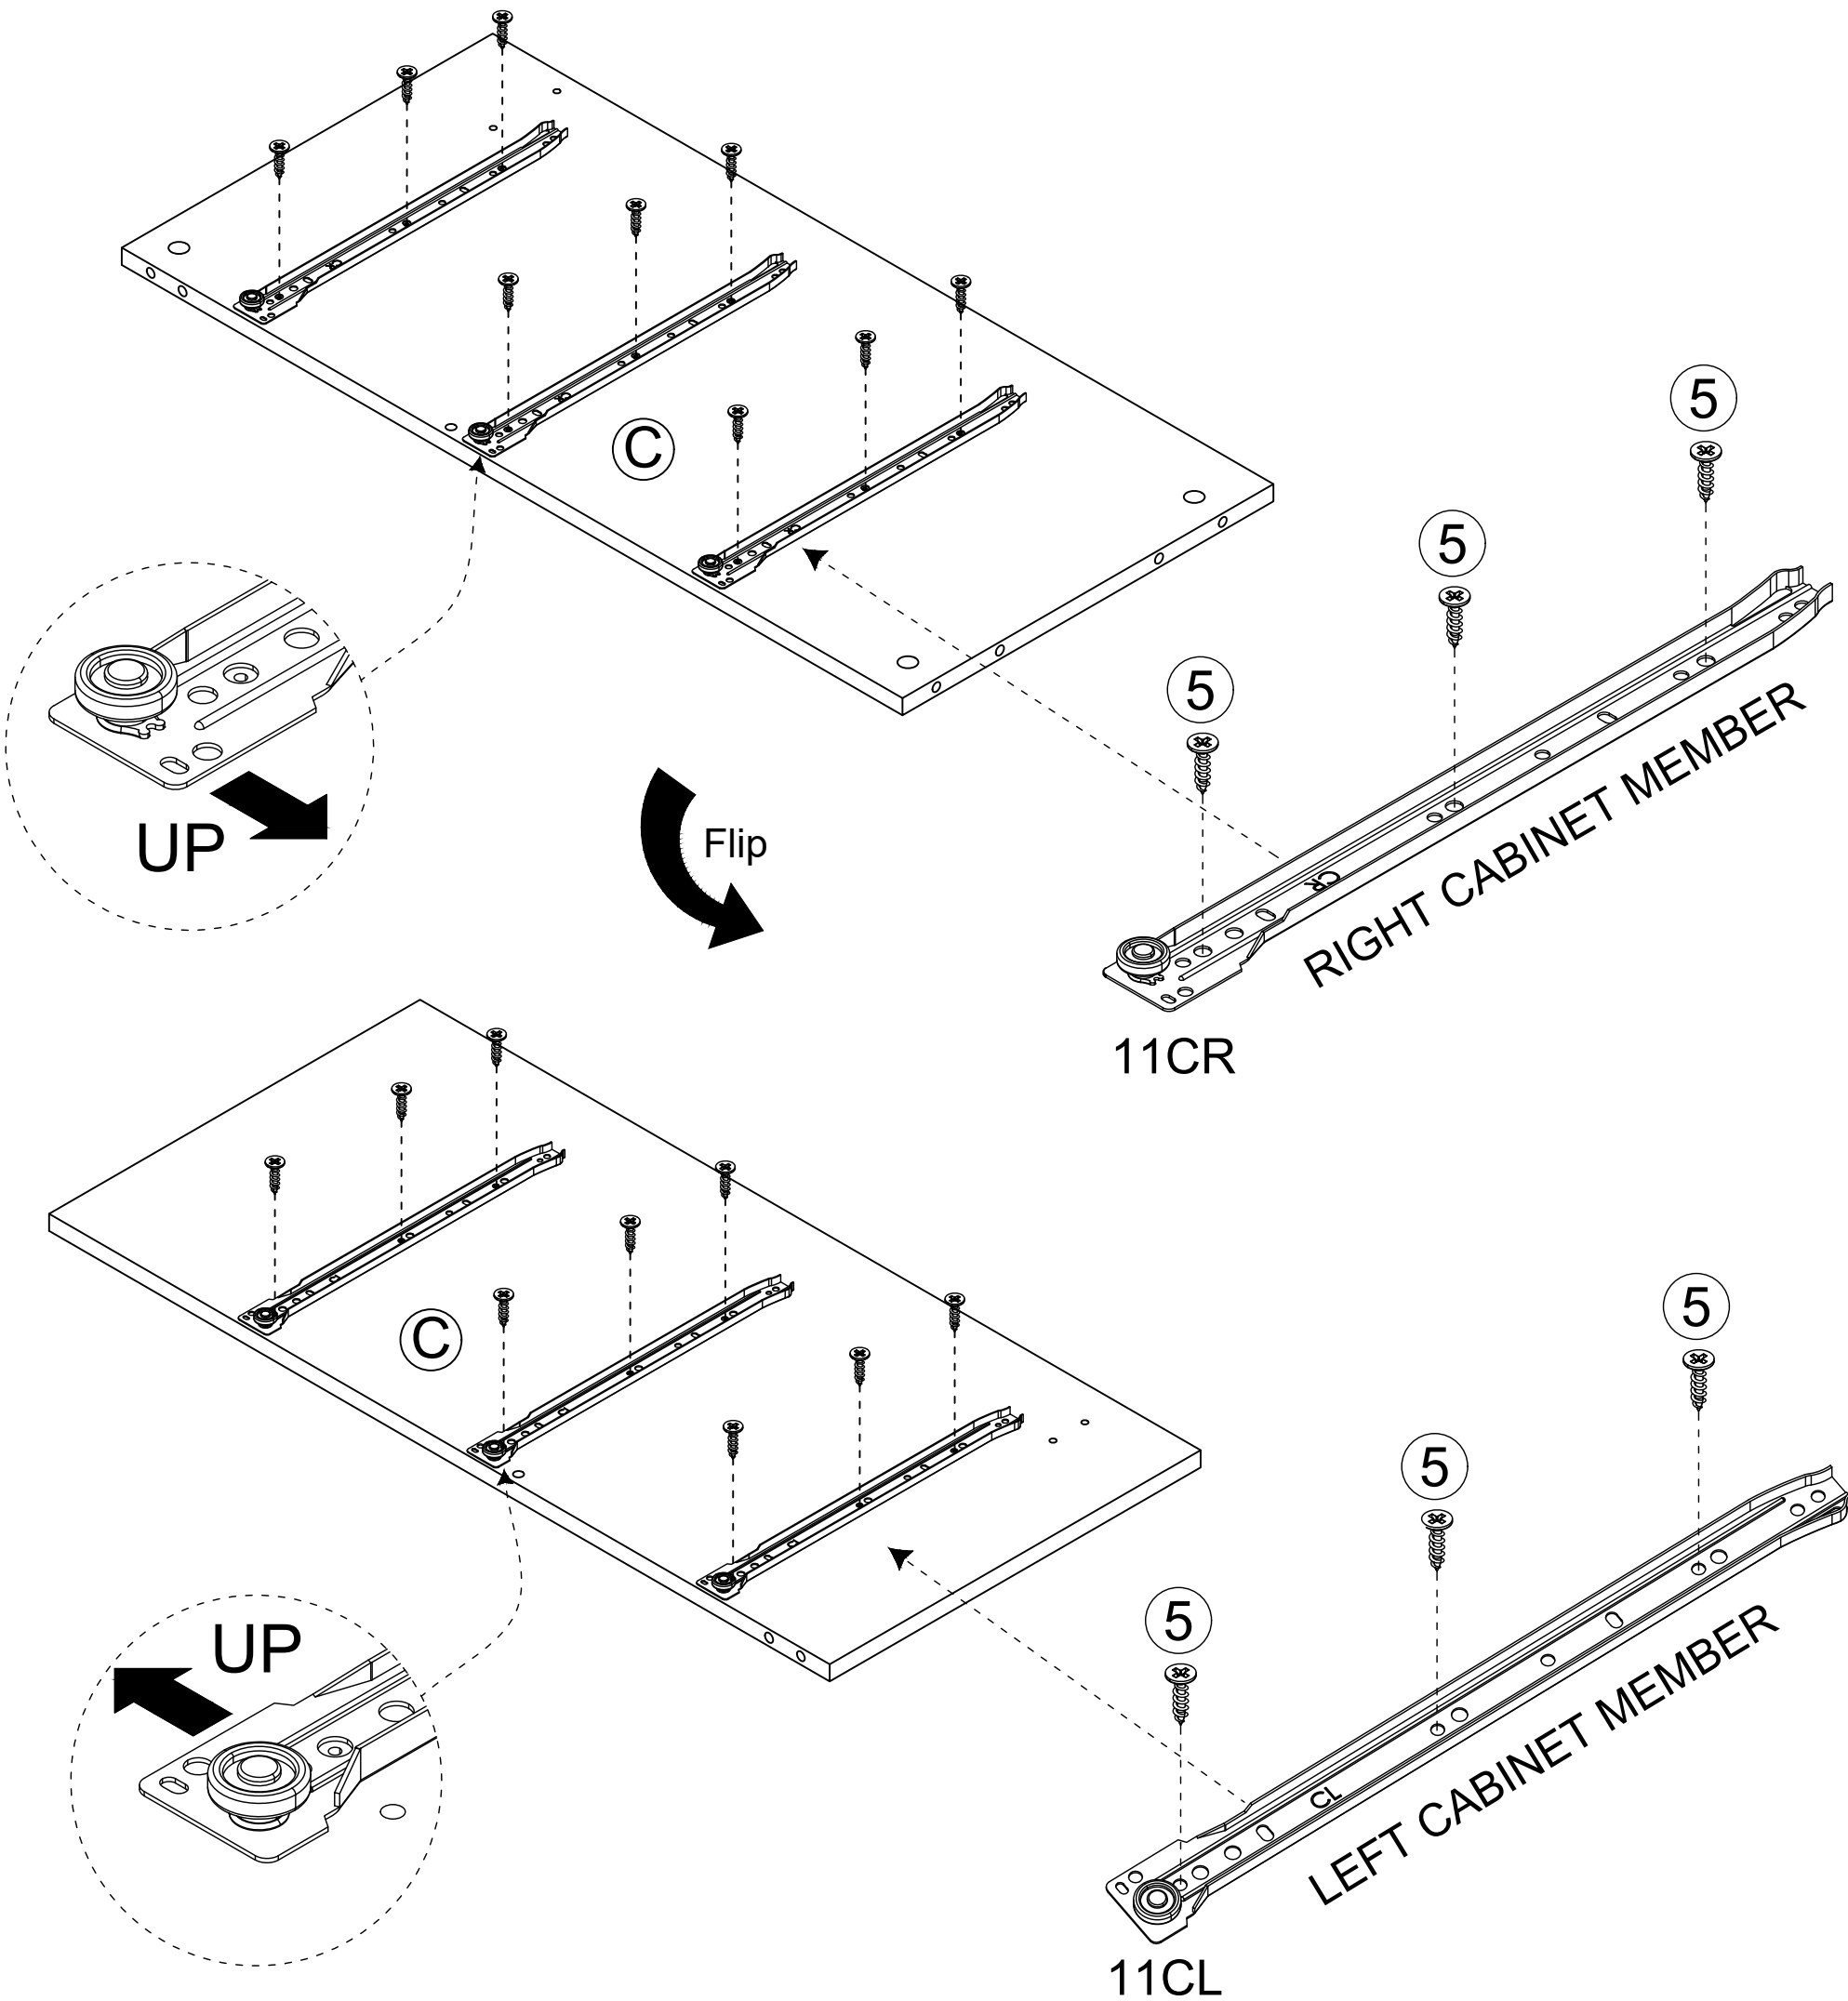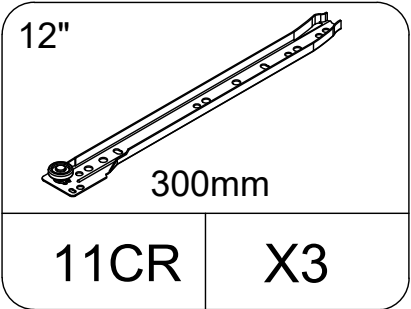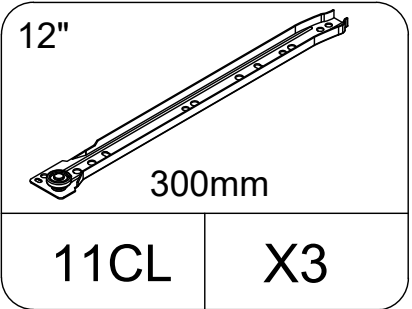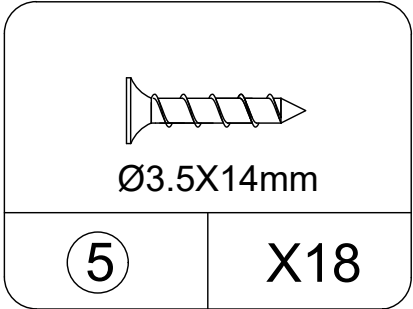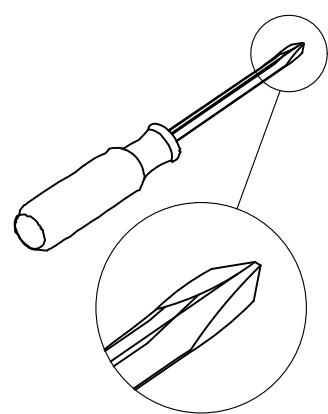



STEP9

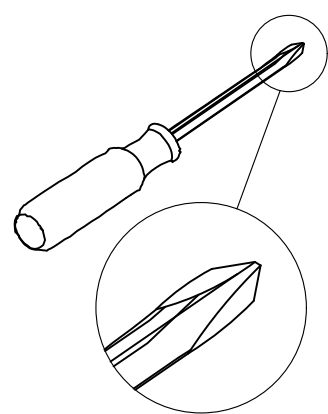












 Ø3.5X14mm	
5	X18

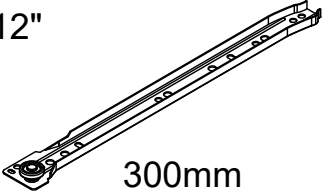12"  300mm	
11CL	X3

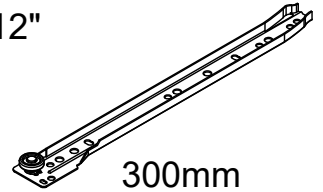
12"  300mm	
11CR	X3

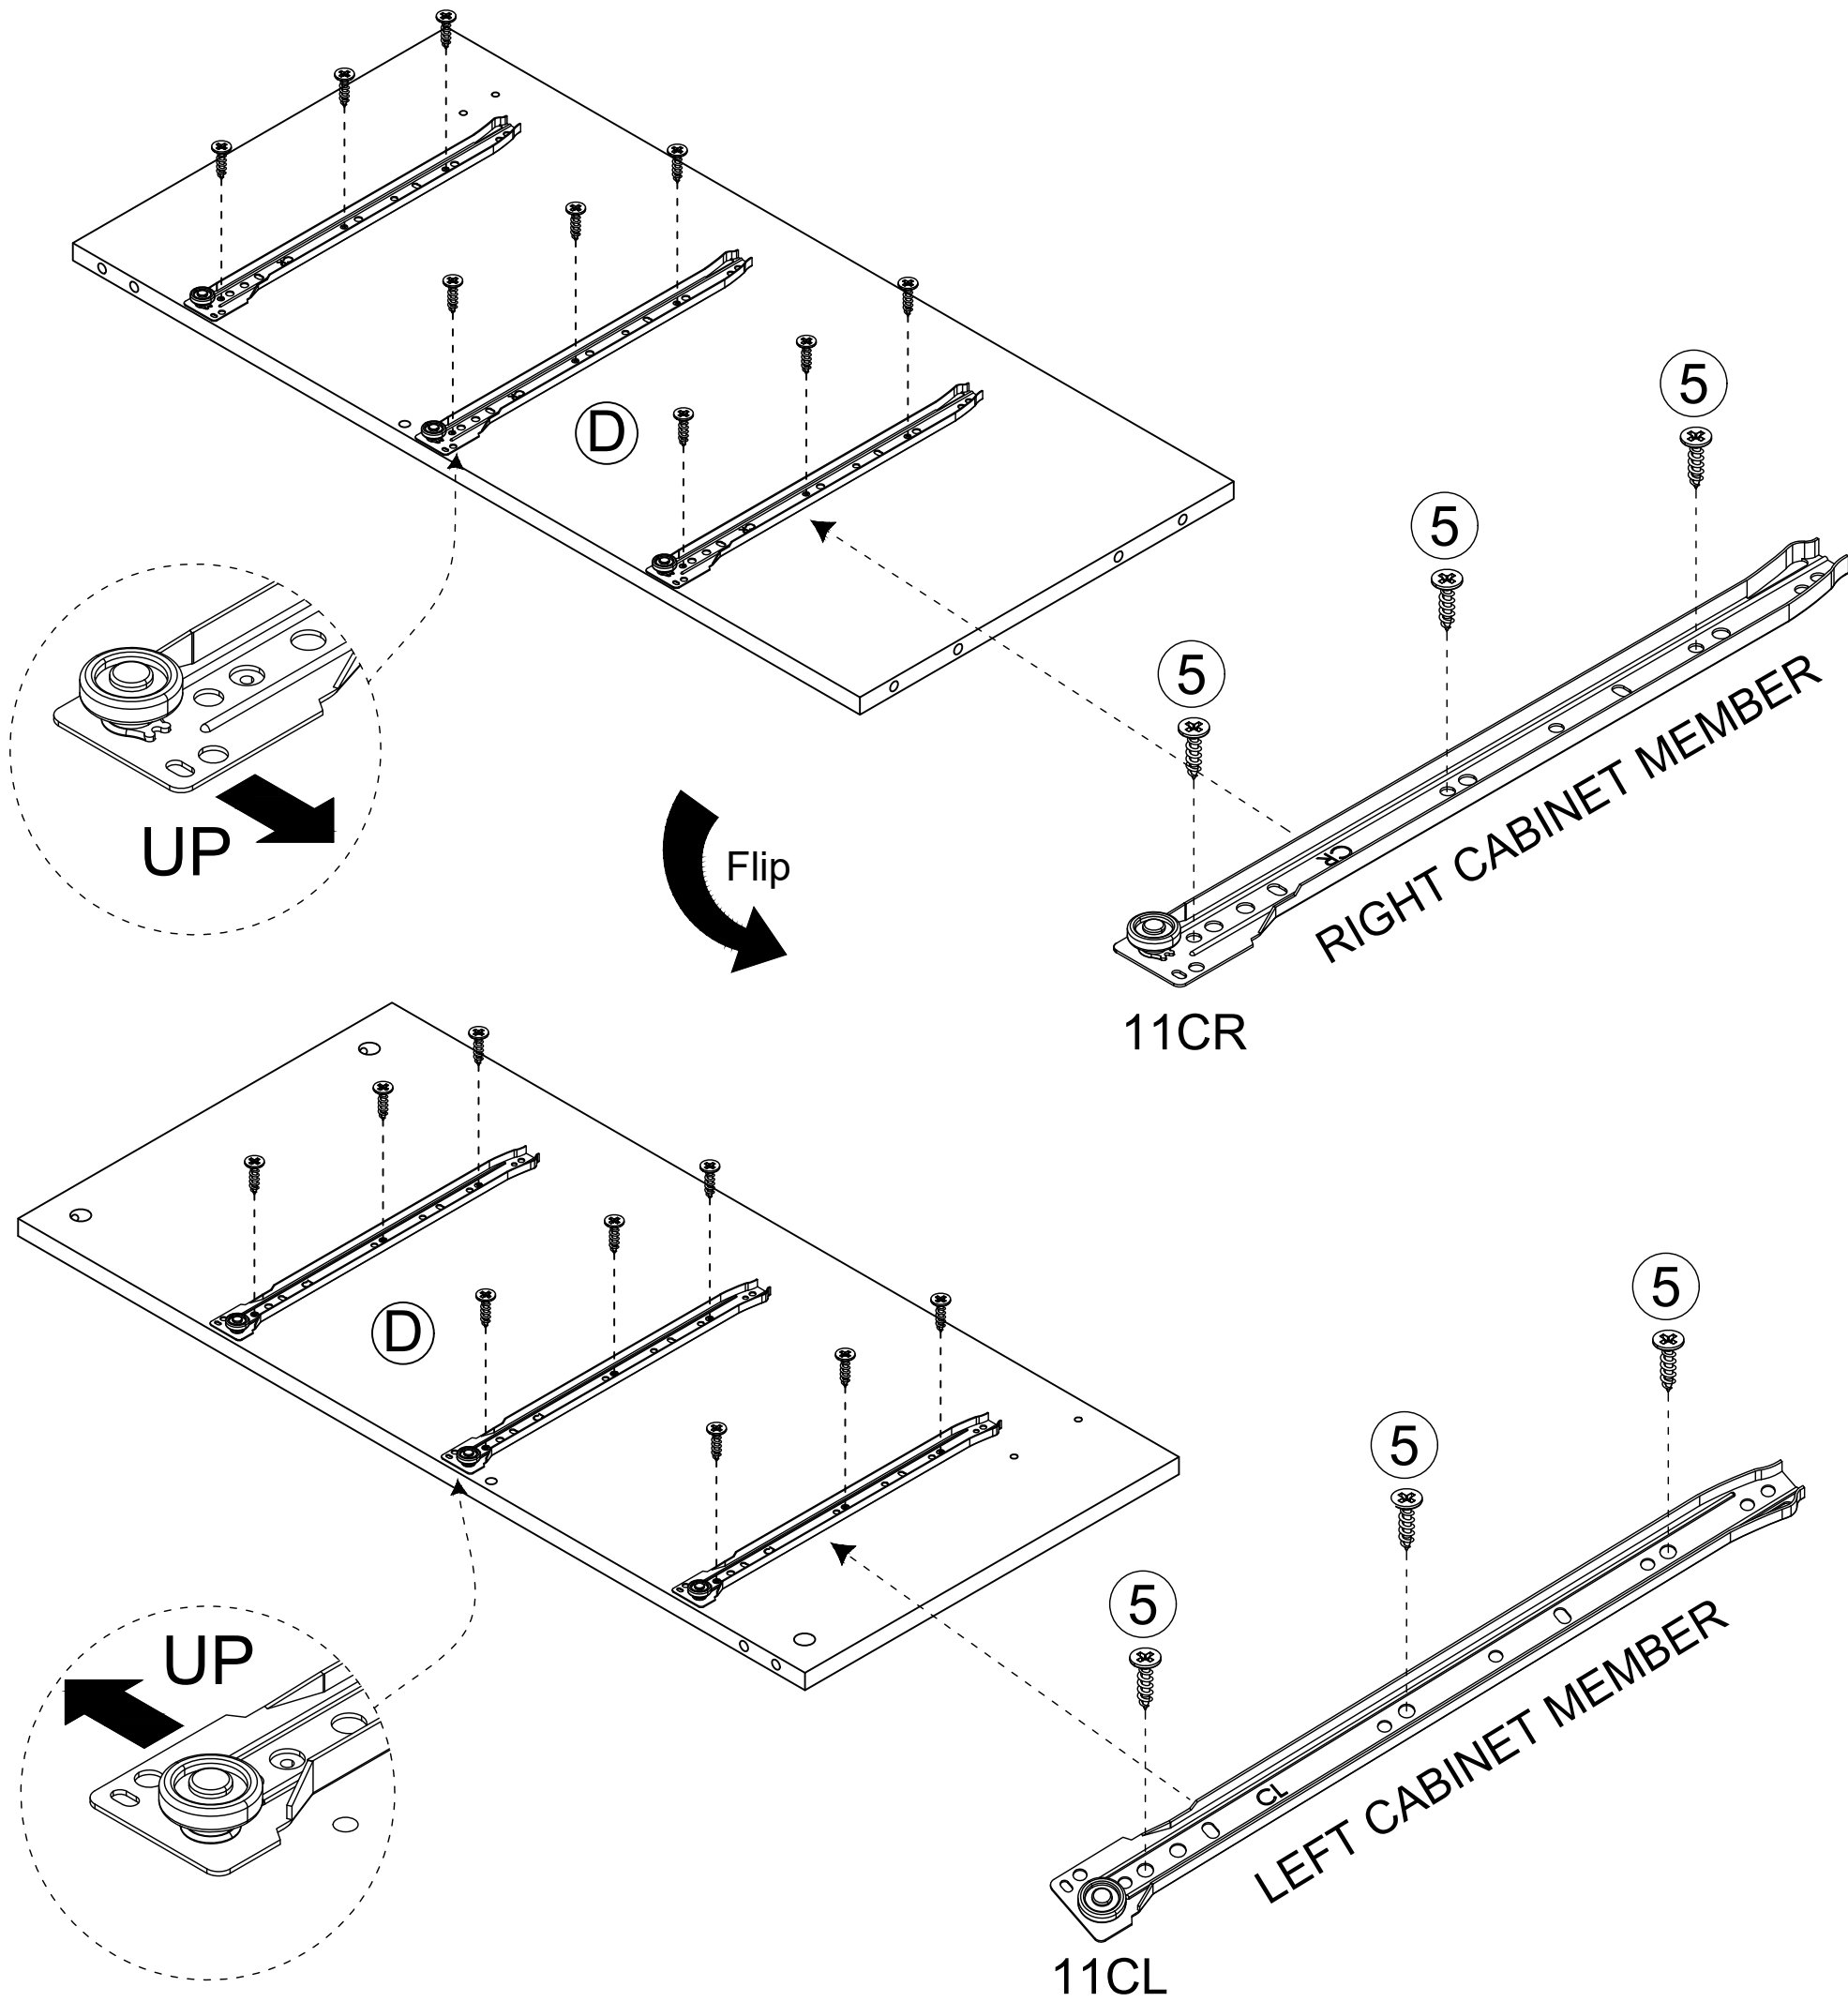


STEP10

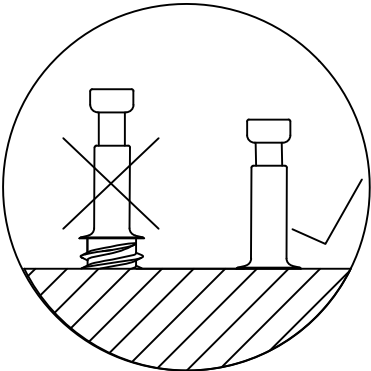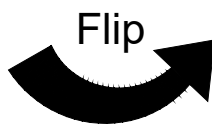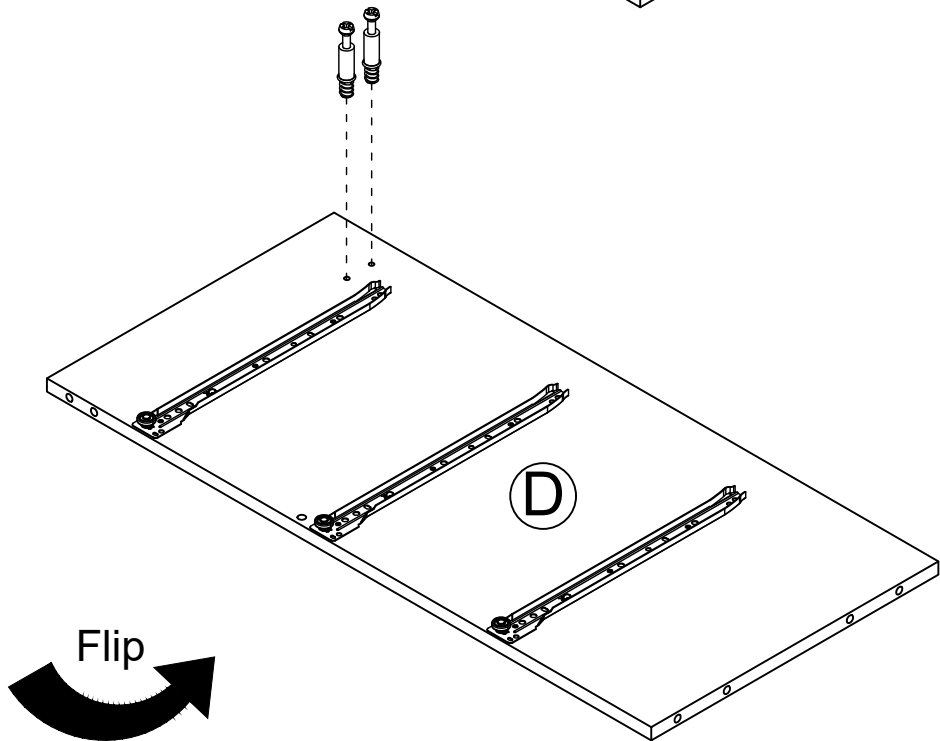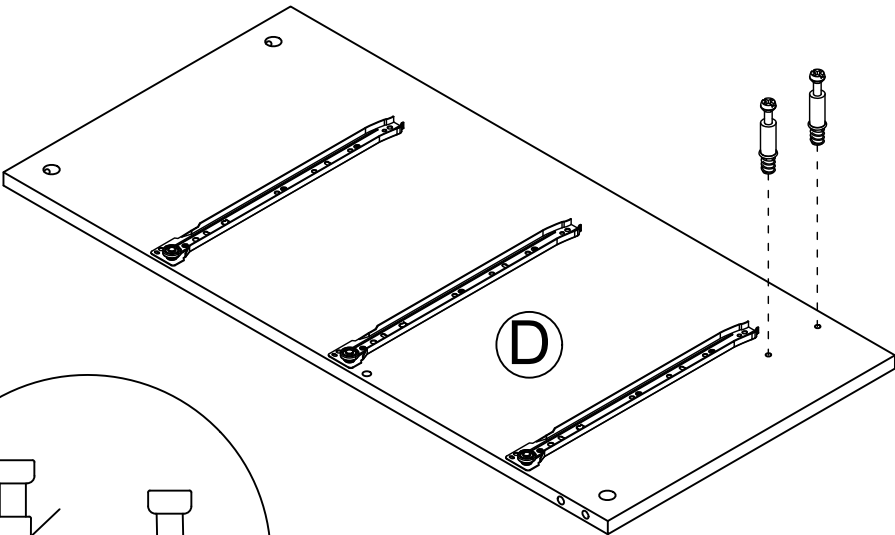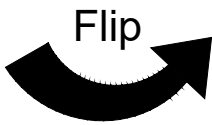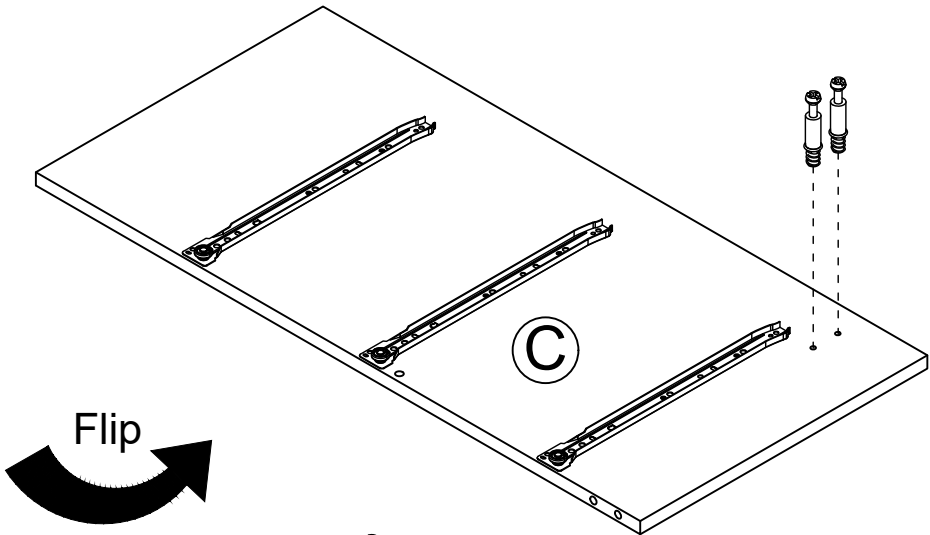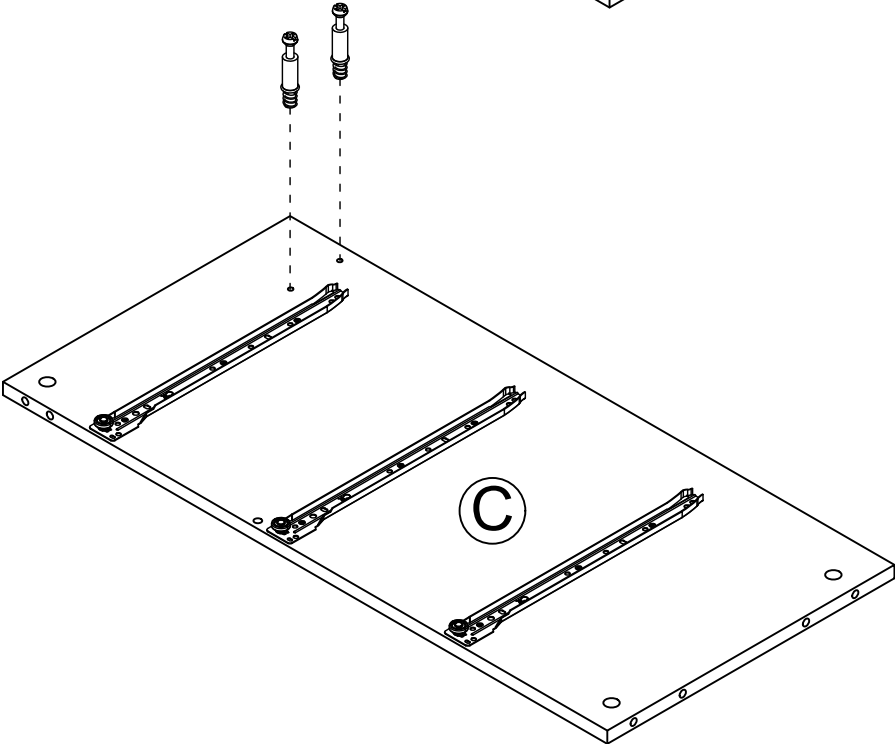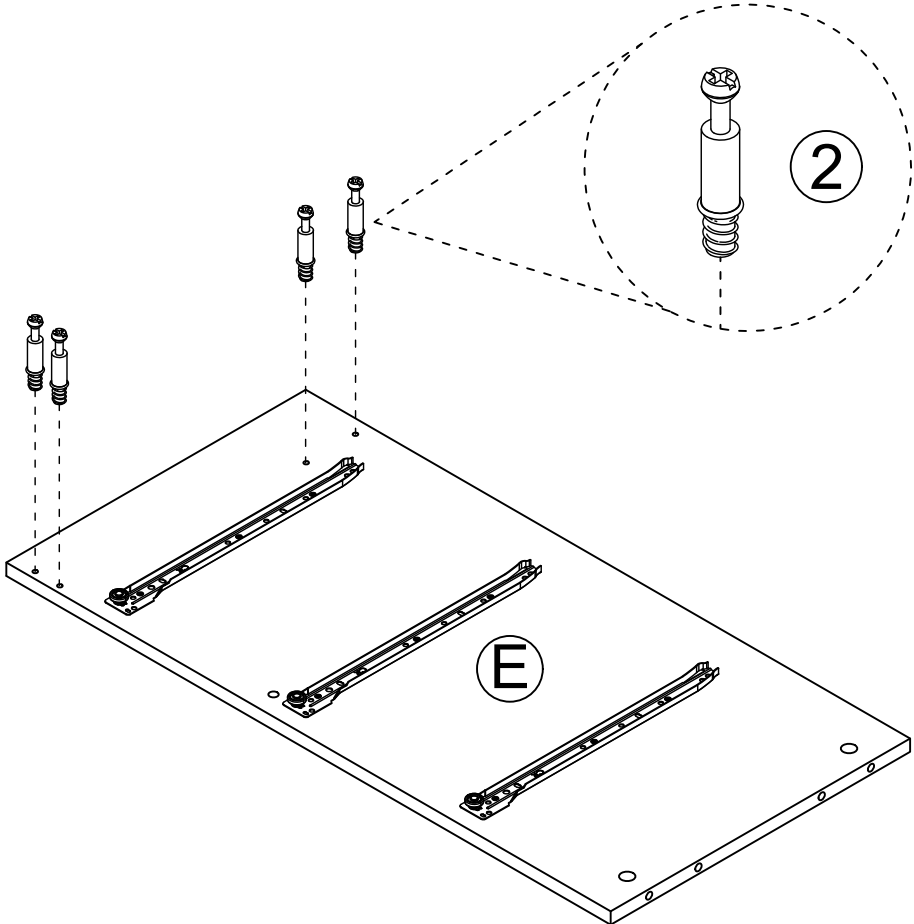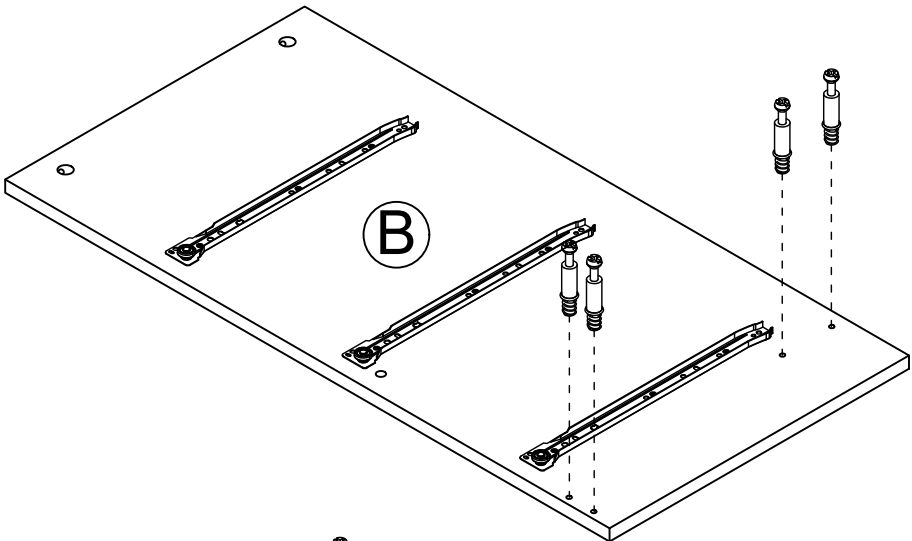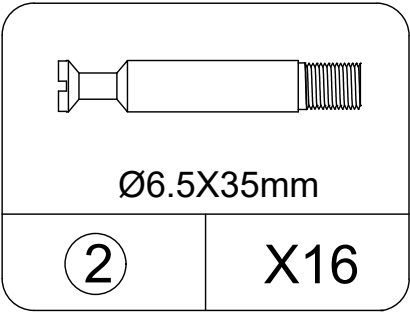
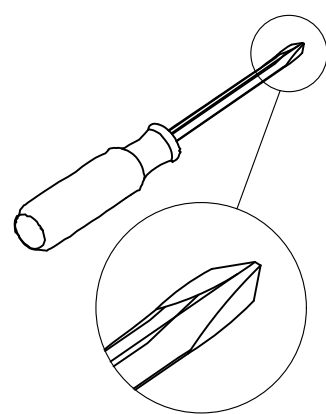


STEP11



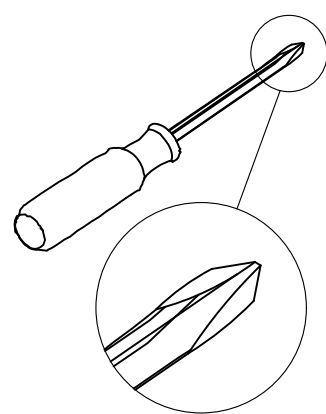


	
Ø6.5X35mm	
②	X2


	
Ø8X30mm	
③	X2

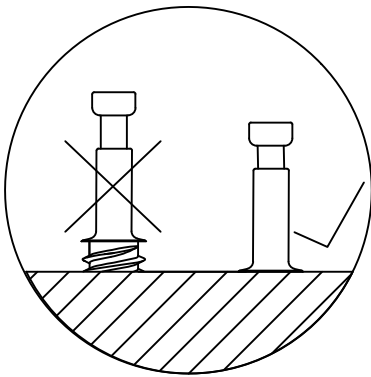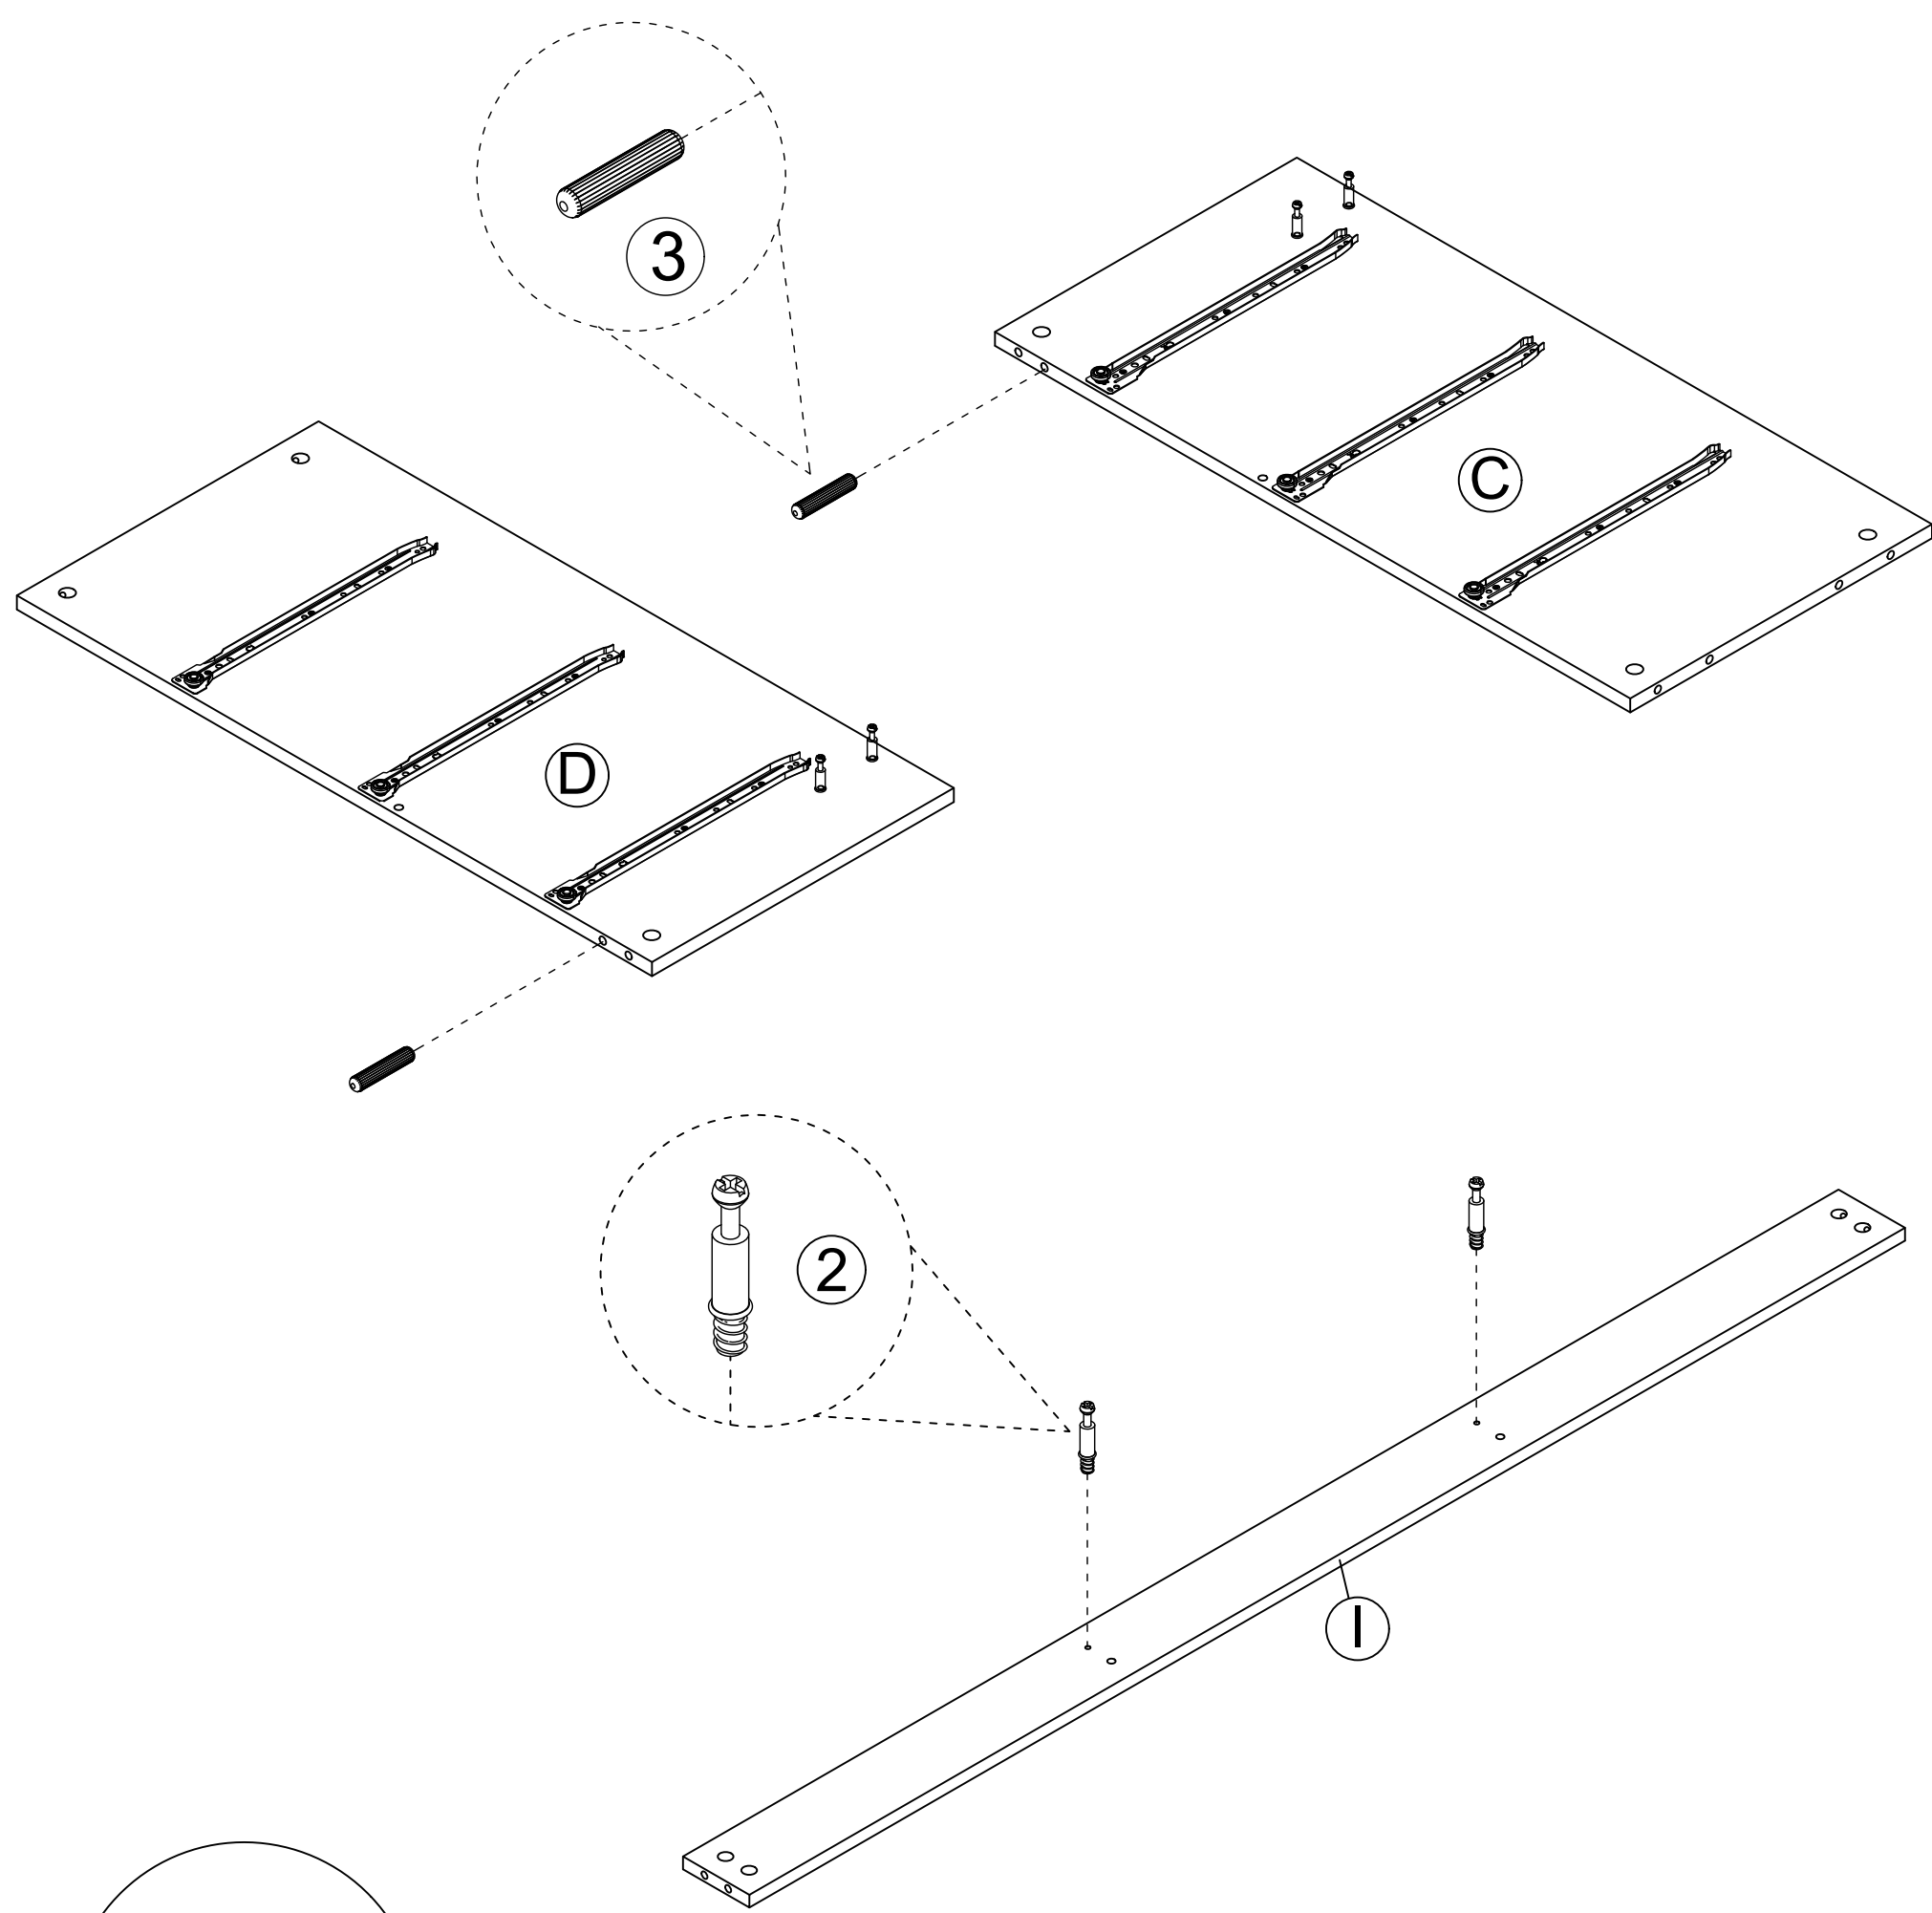


STEP12

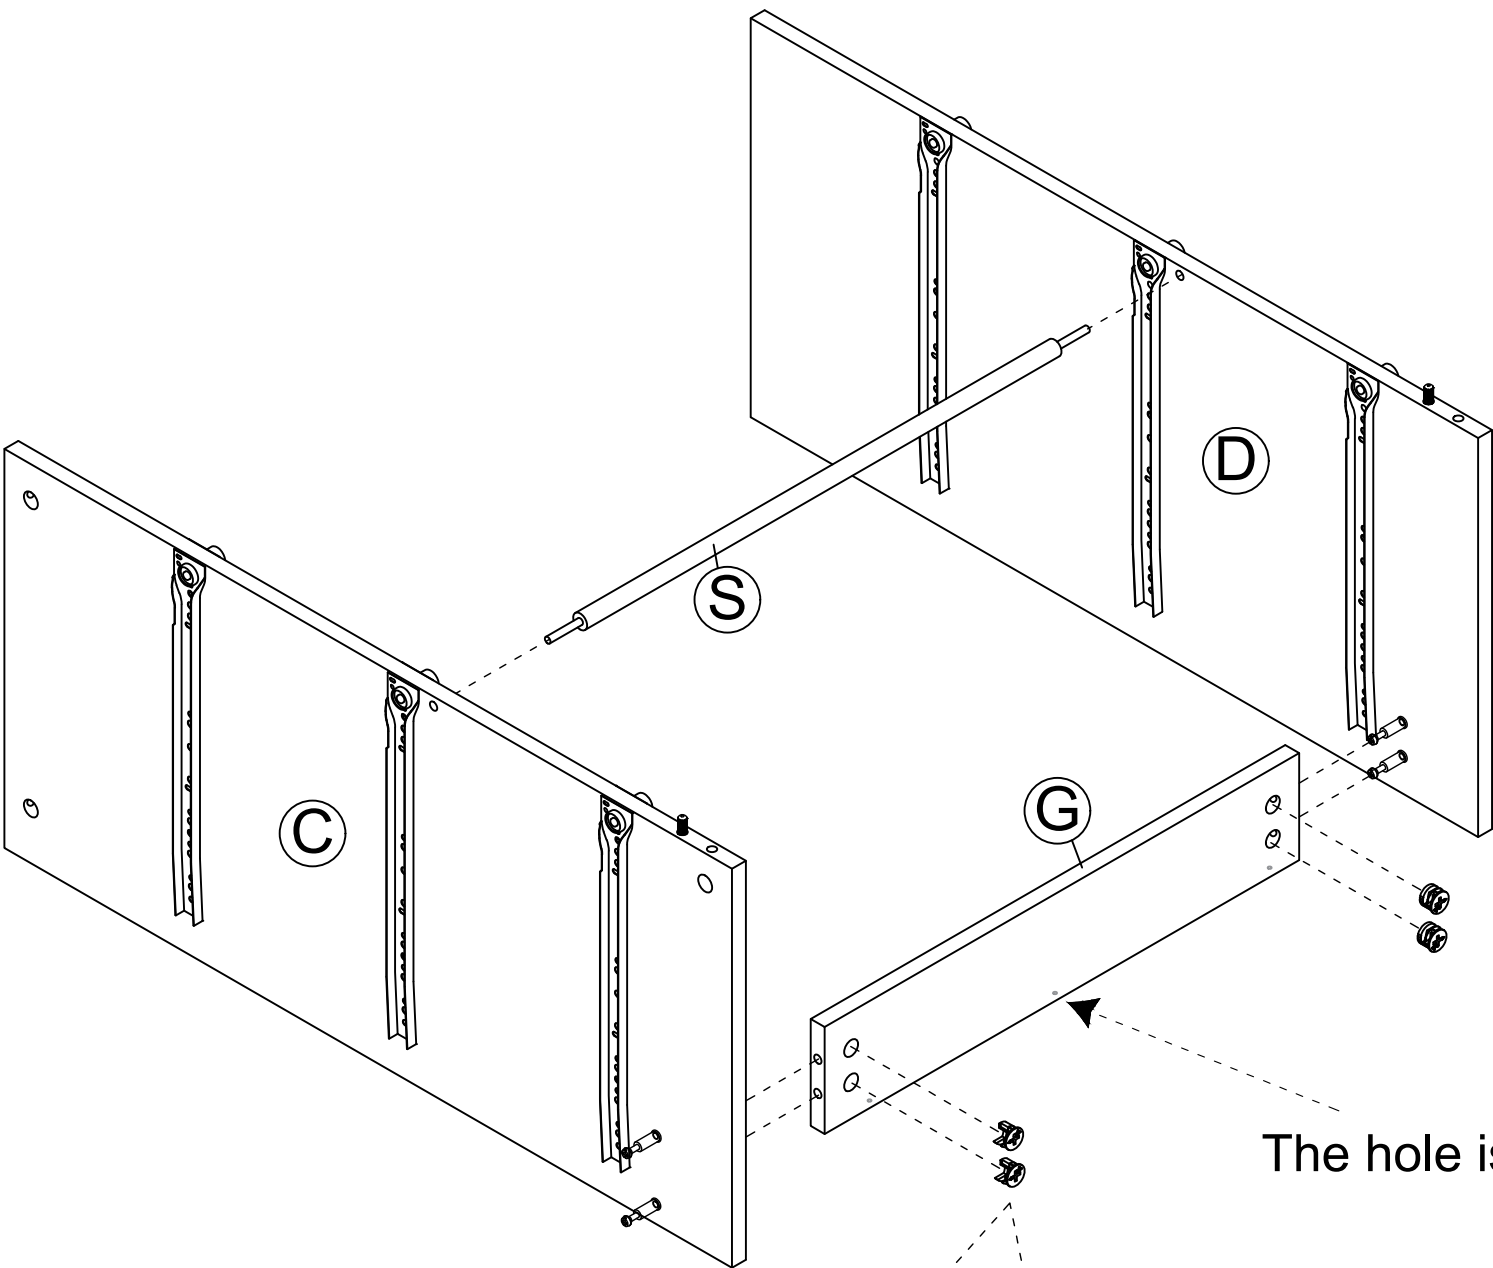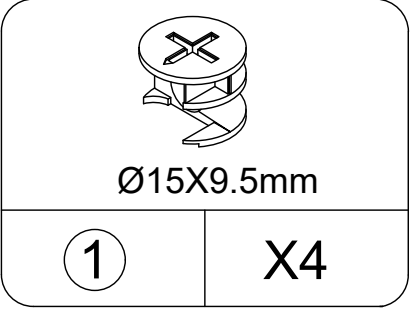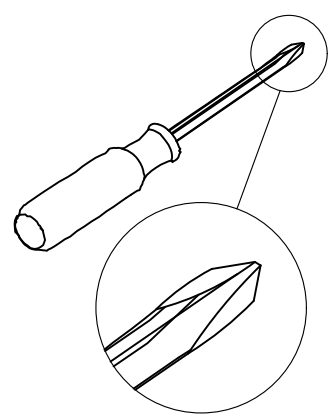

The hole is on the back.

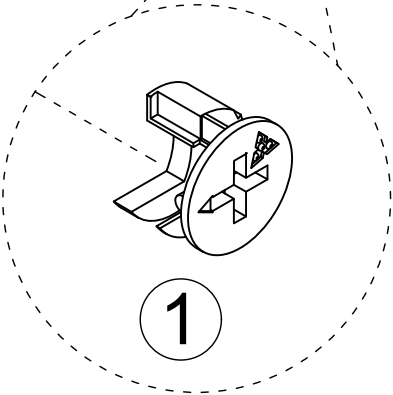


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

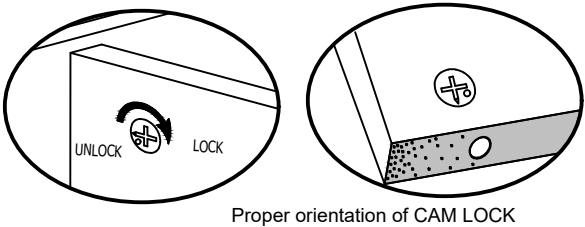


Proper orientation of CAM LOCK


STEP13

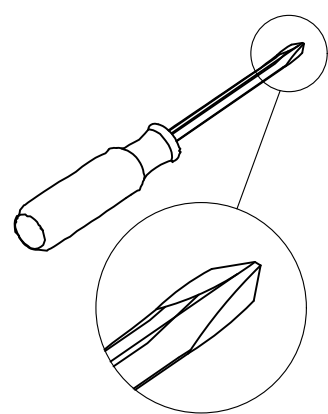

 Ø15X9.5mm	
1	X2

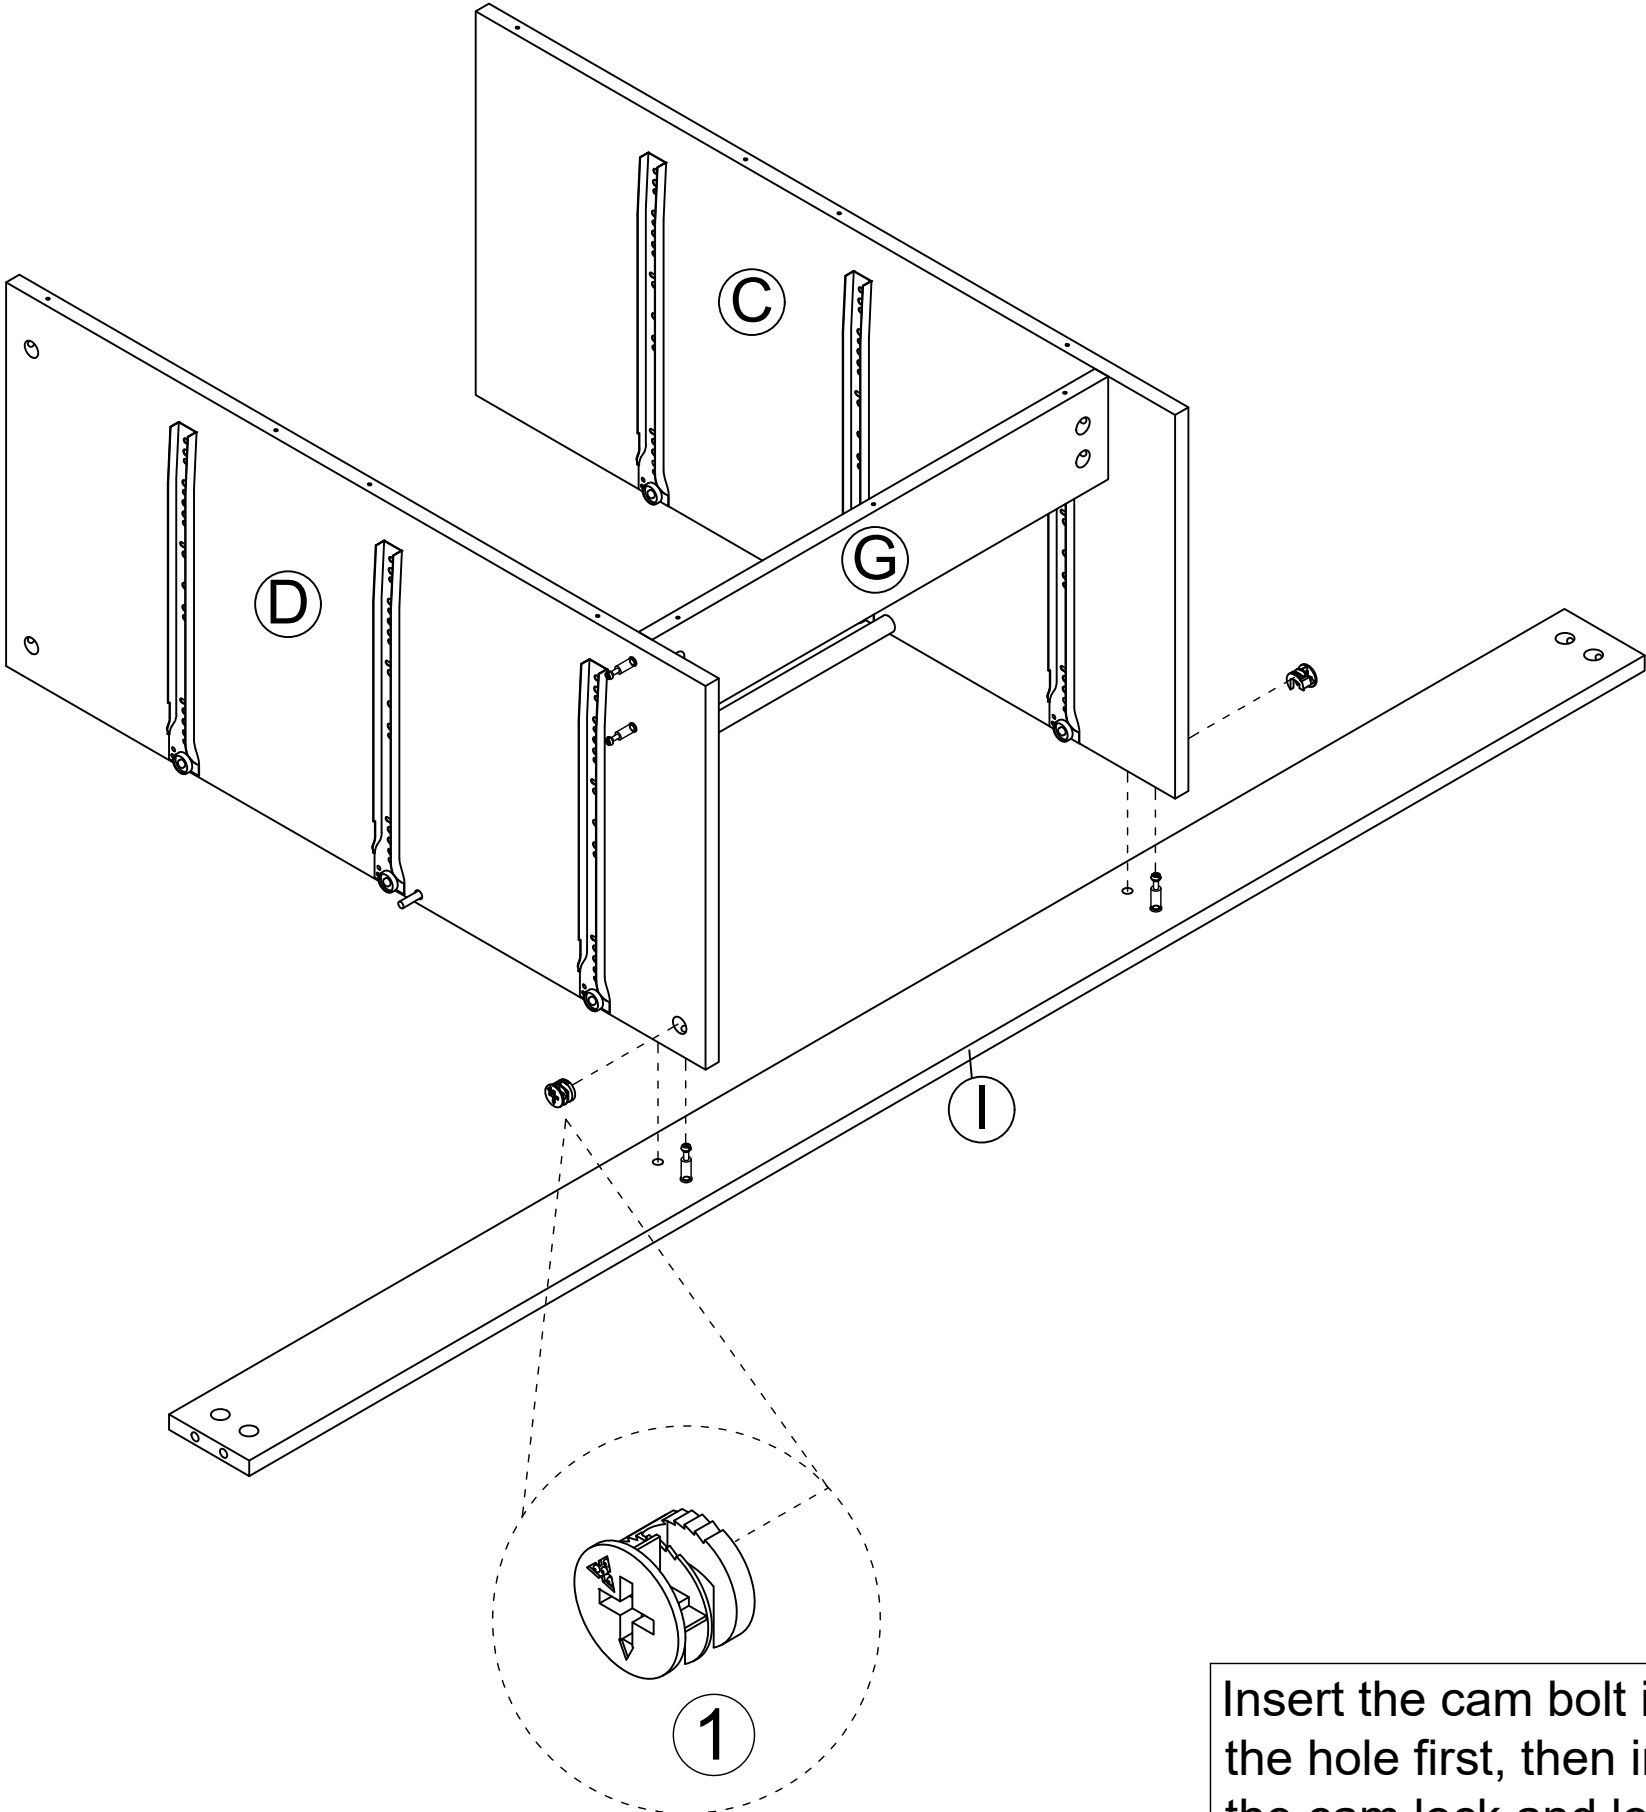


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

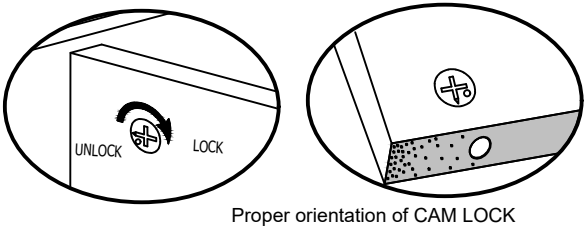



Proper orientation of CAM LOCK

STEP14

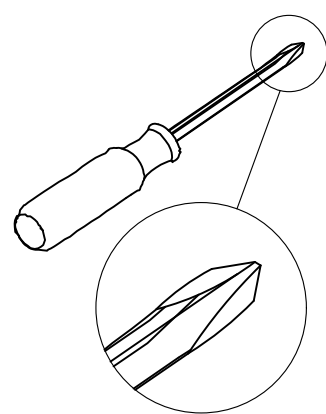


 Ø15X9.5mm	
1	X4


The wide part at the back is shown in Fig.

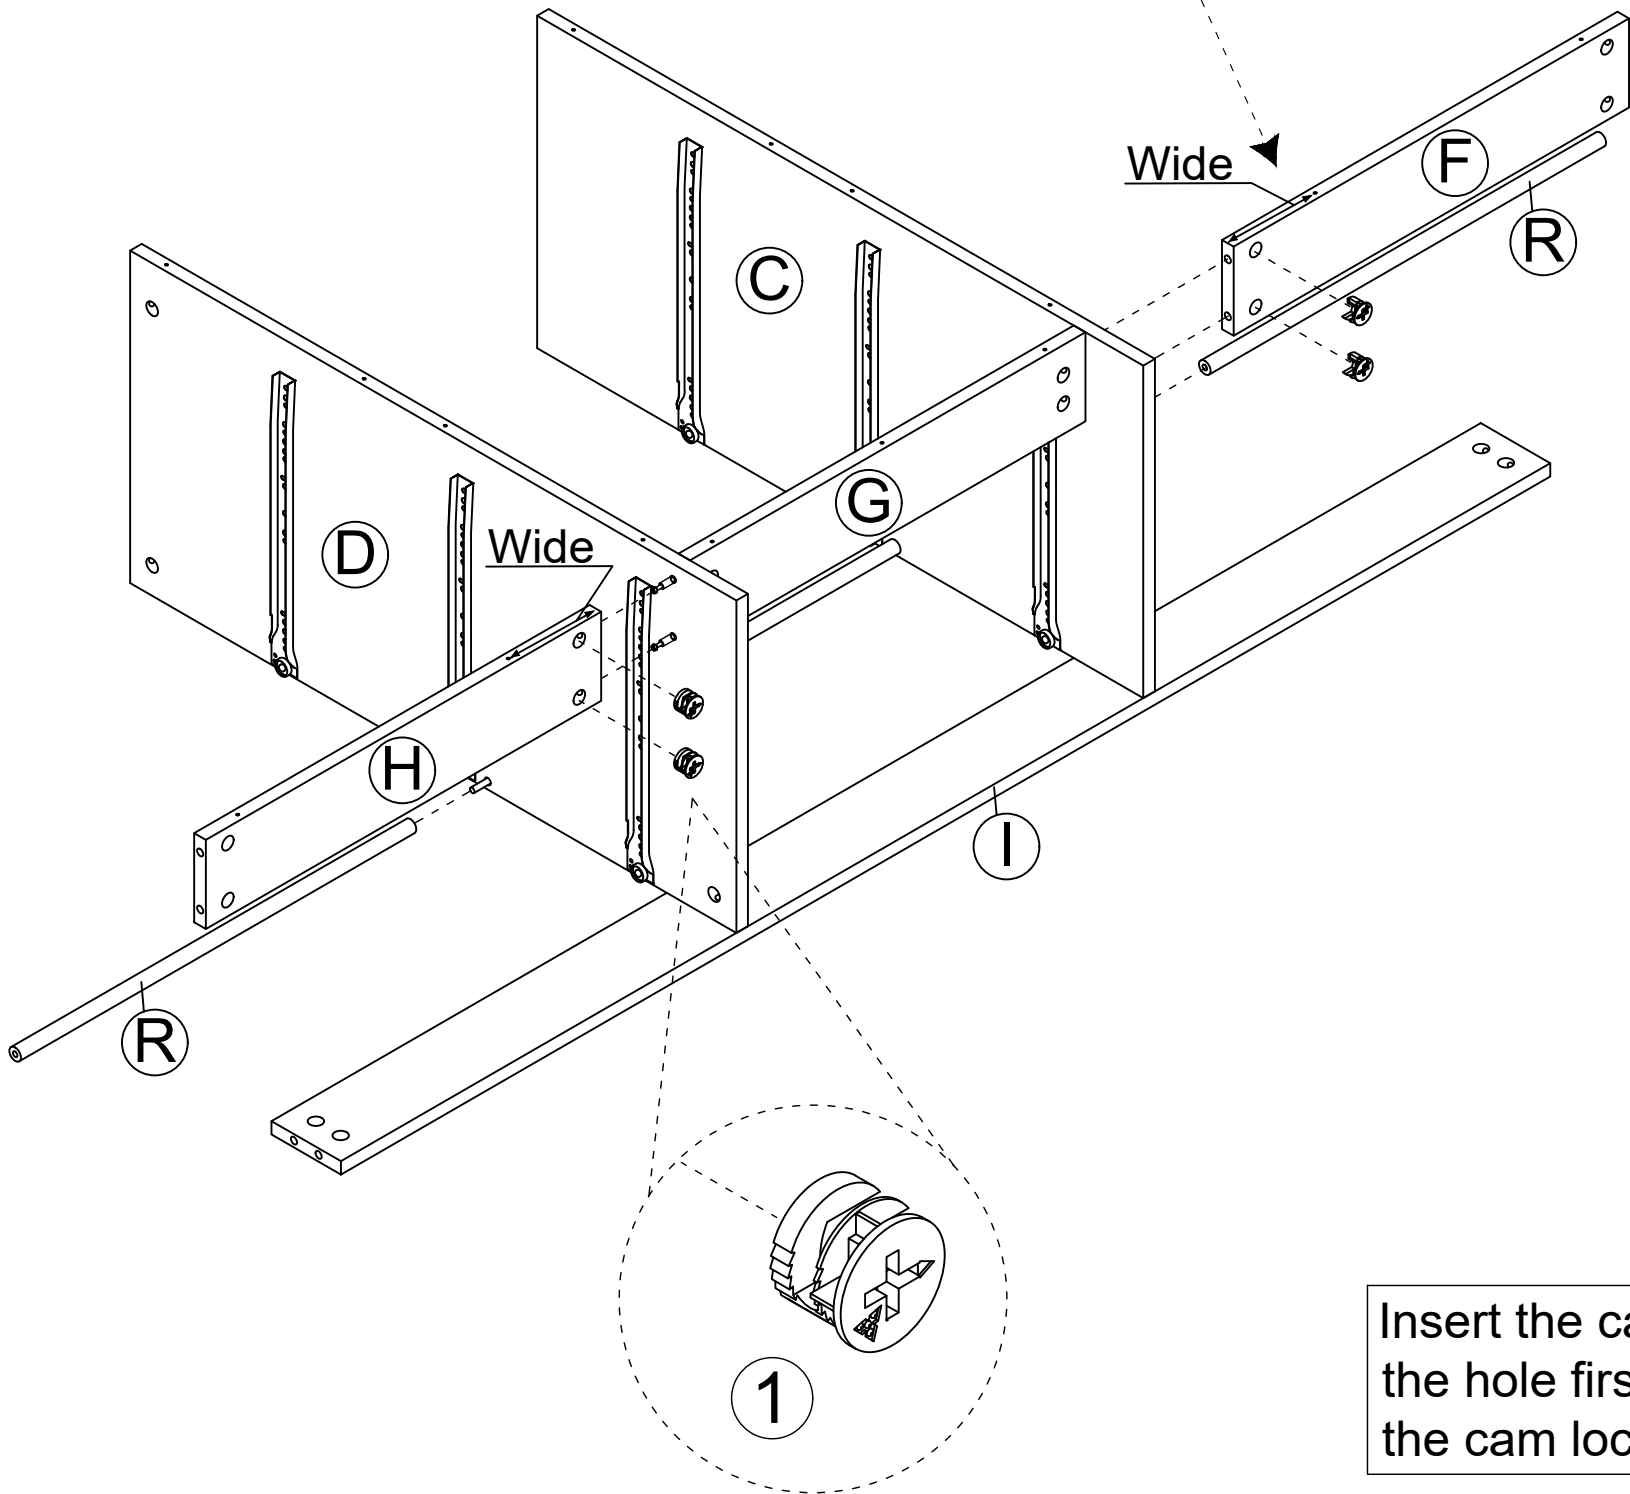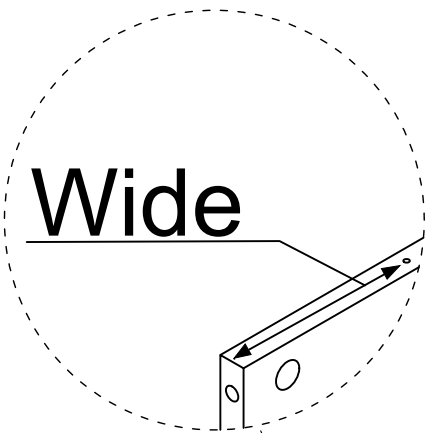


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

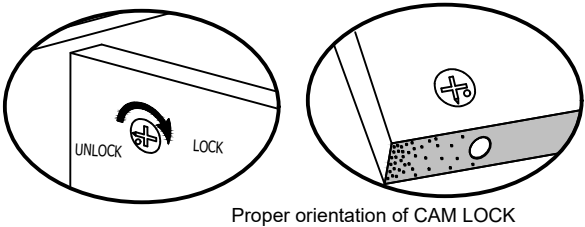


STEP15

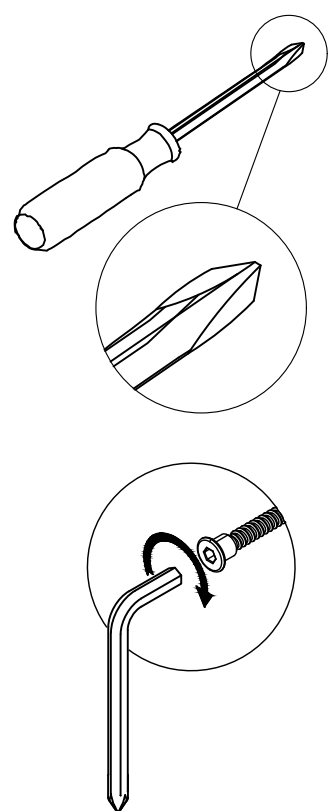


 Ø15X9.5mm	
1	X8

 M6*30mm	
8	X2


 Ø4X65mm	
13	X1

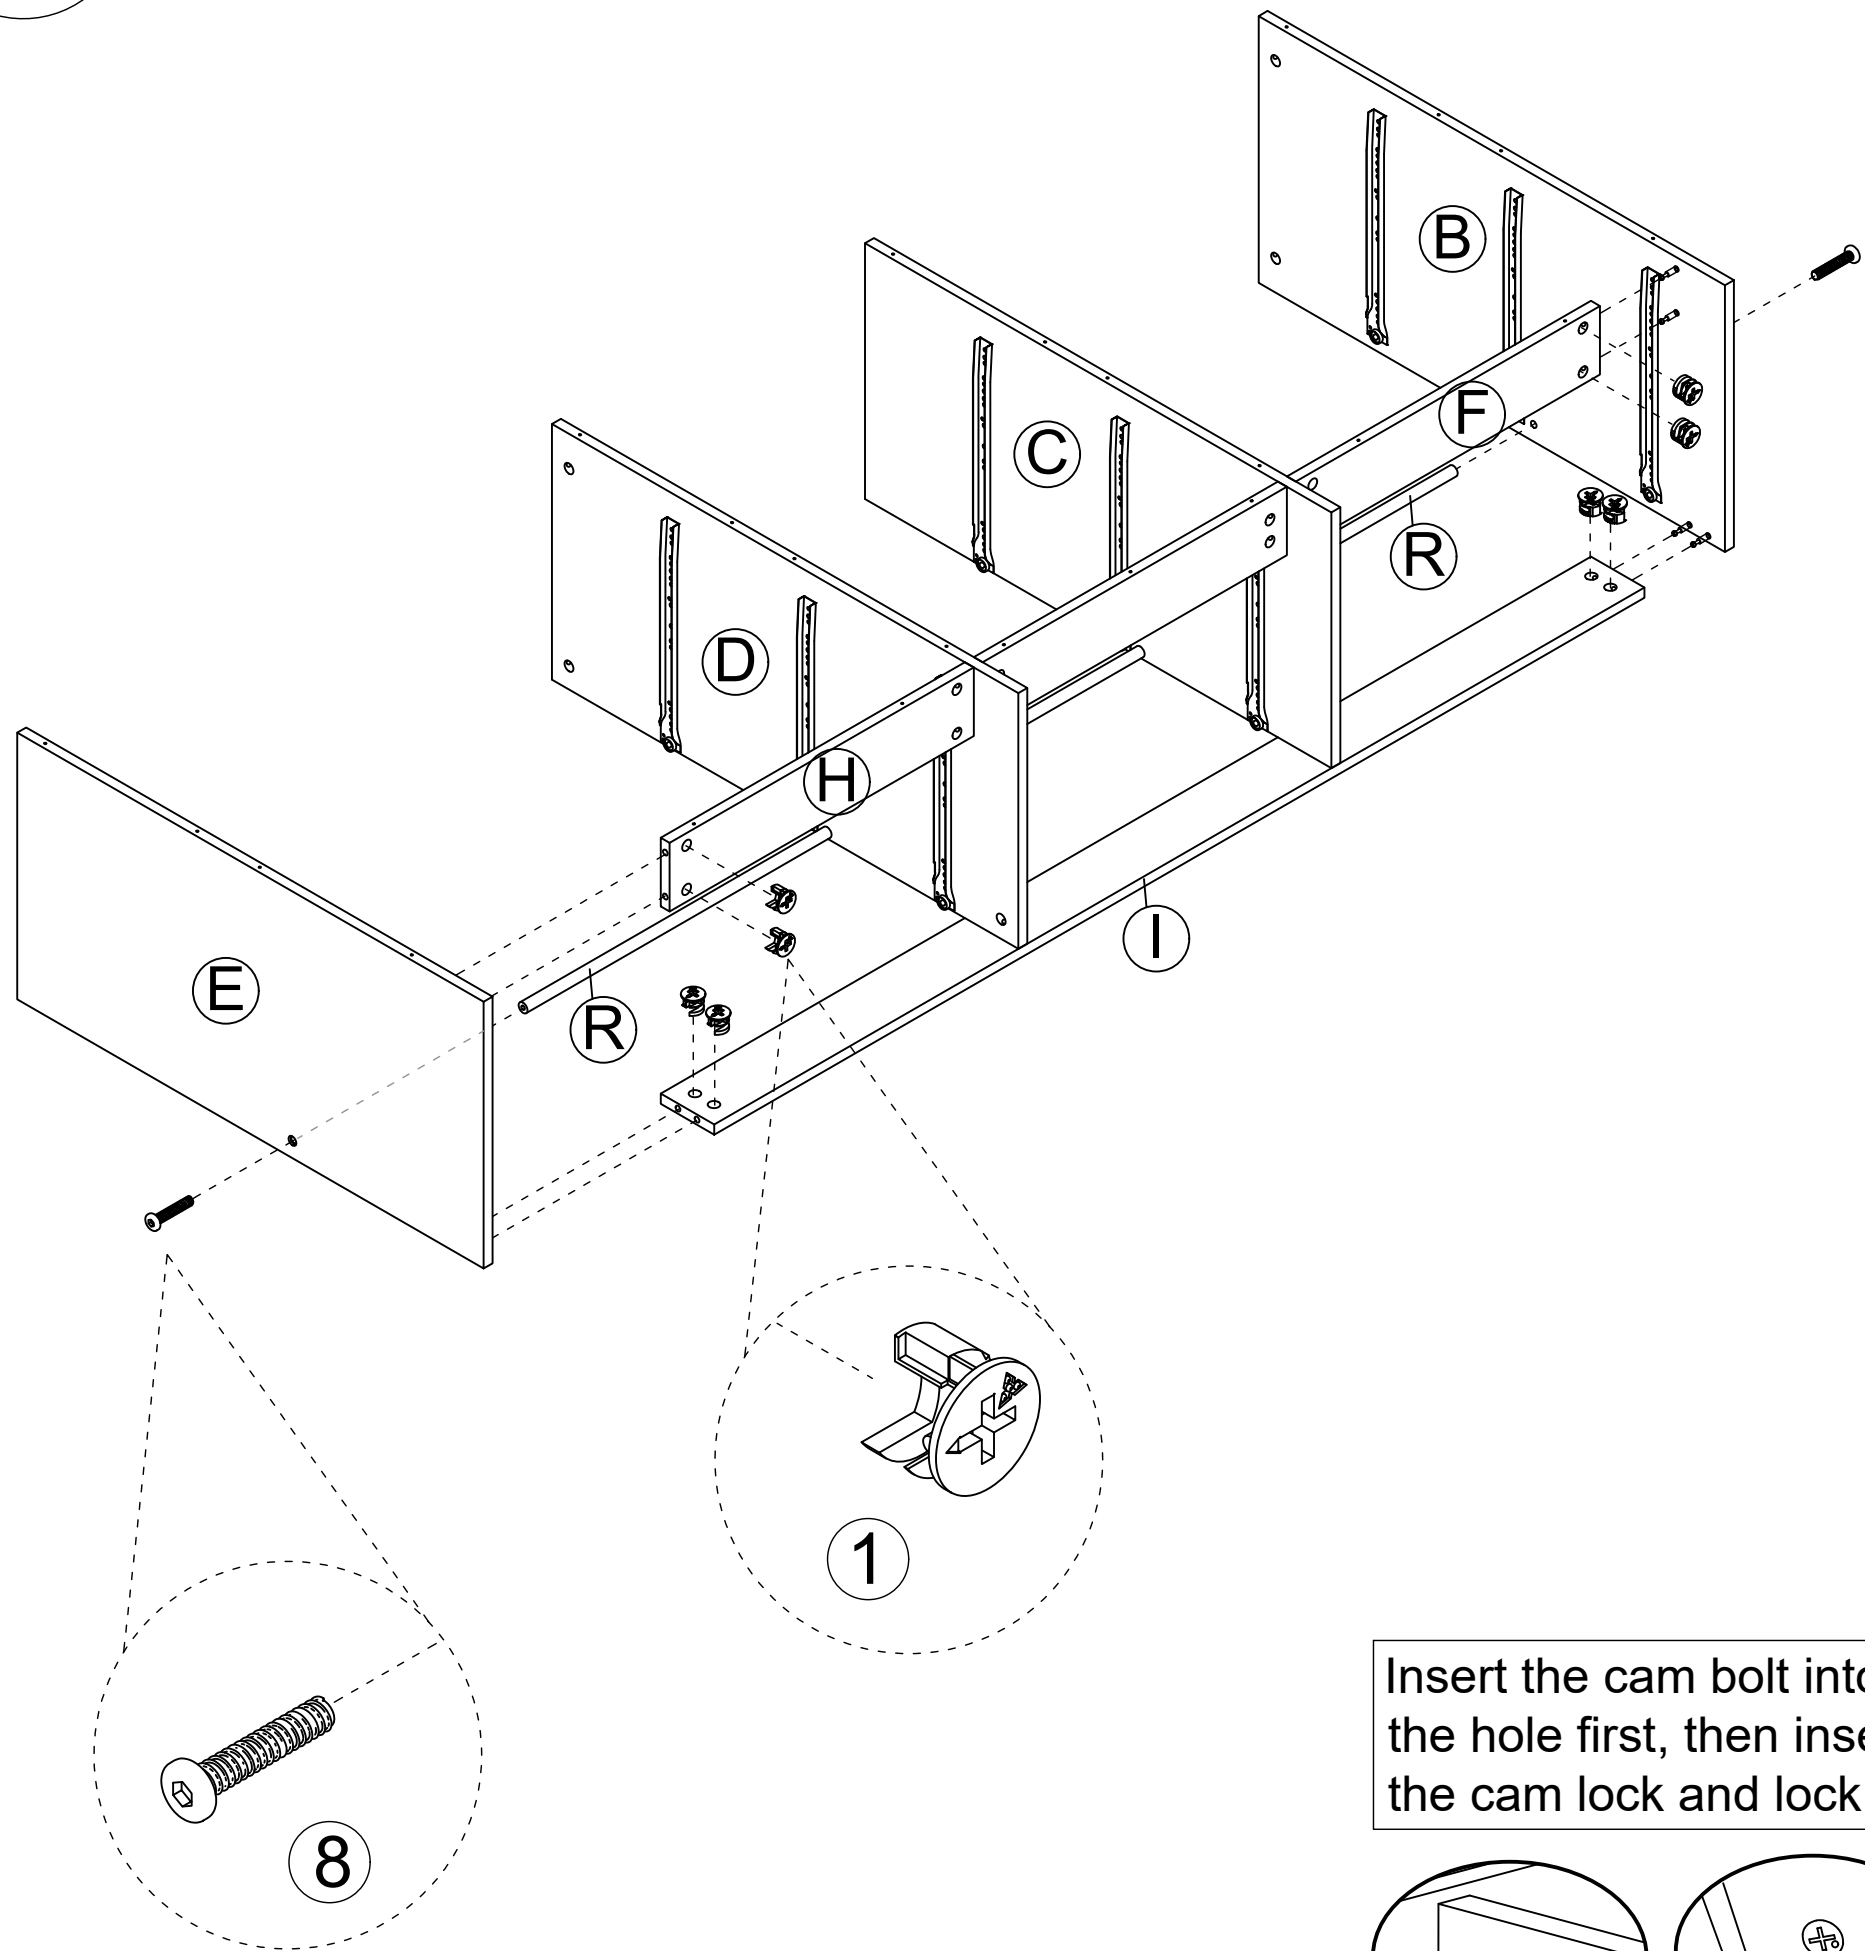


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


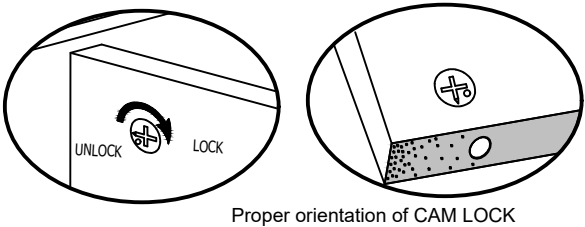


STEP16

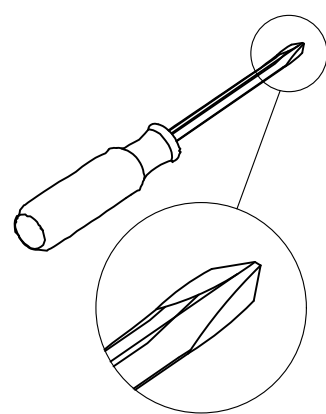


	
Ø6.5X35mm	
2	X8

	
Ø8X30mm	
3	X8

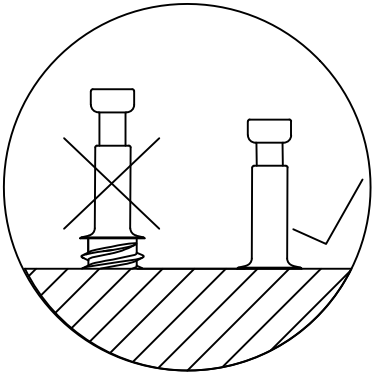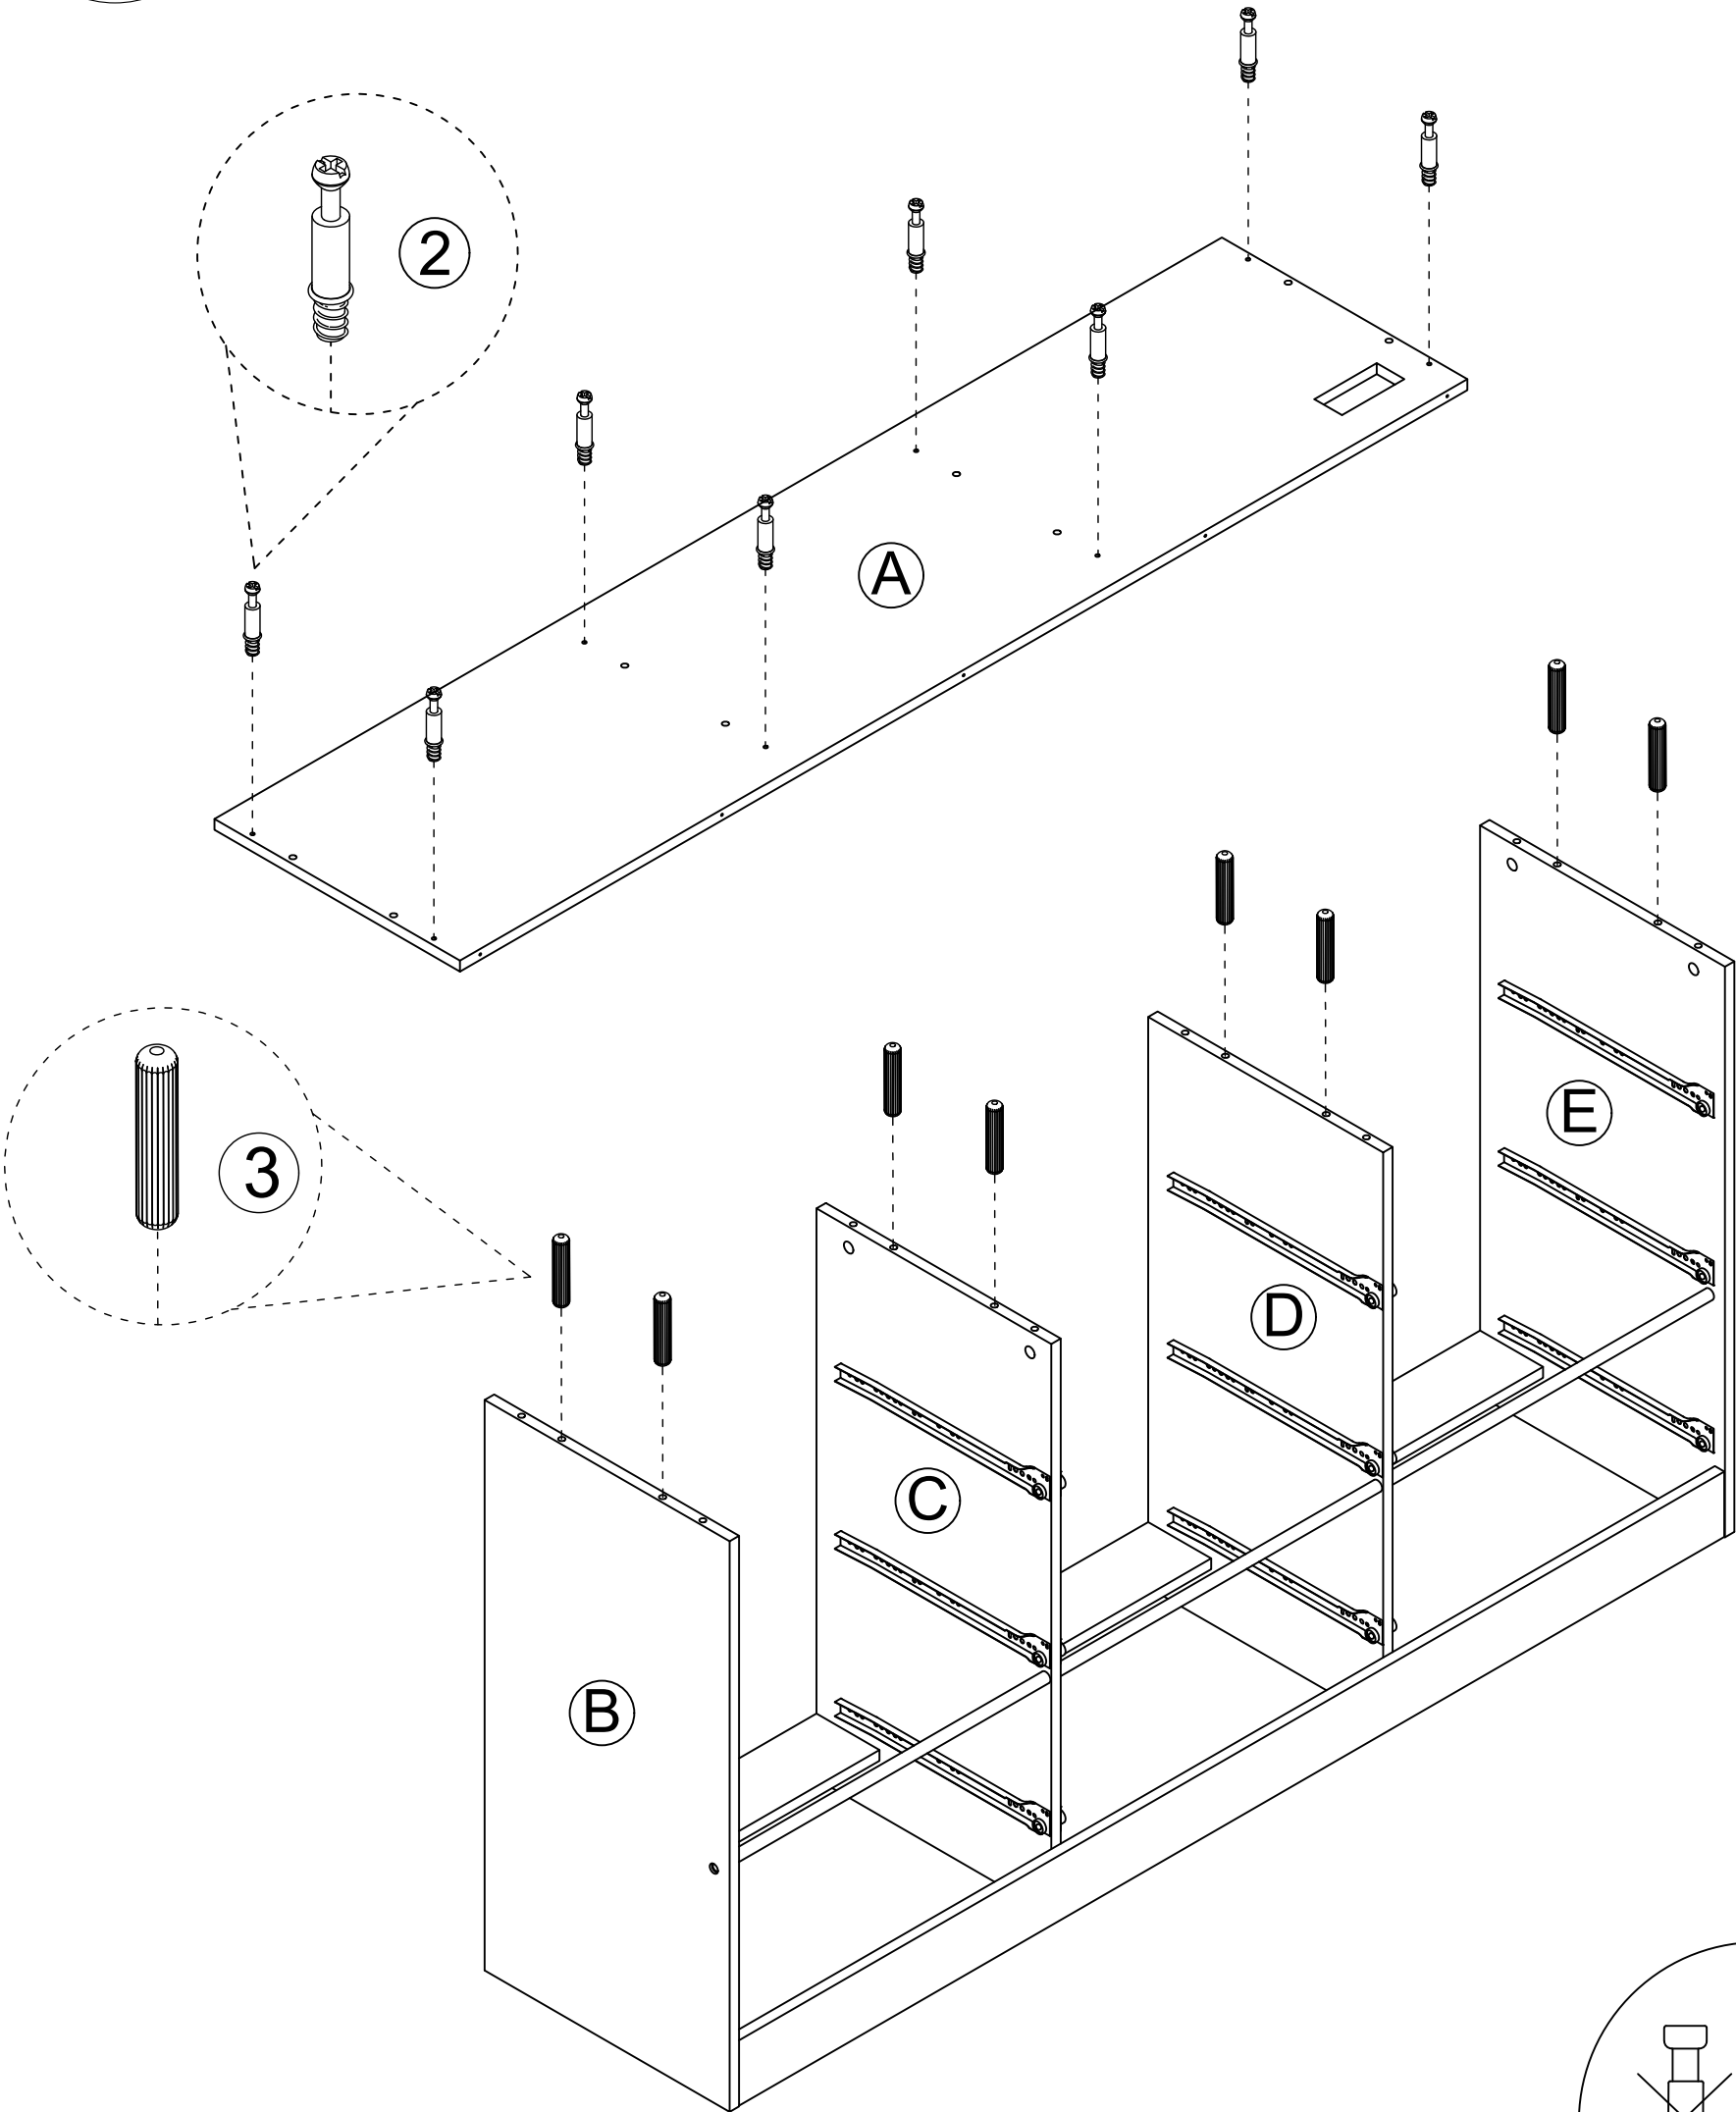



STEP17

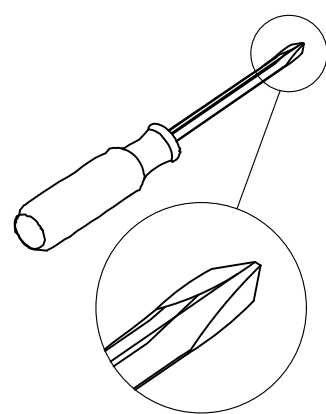





Ø15X9.5mm

1	X8
---	----

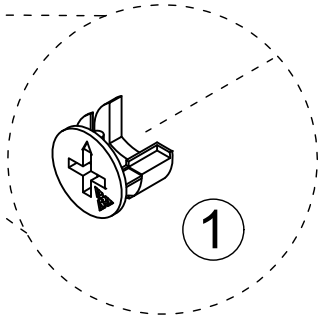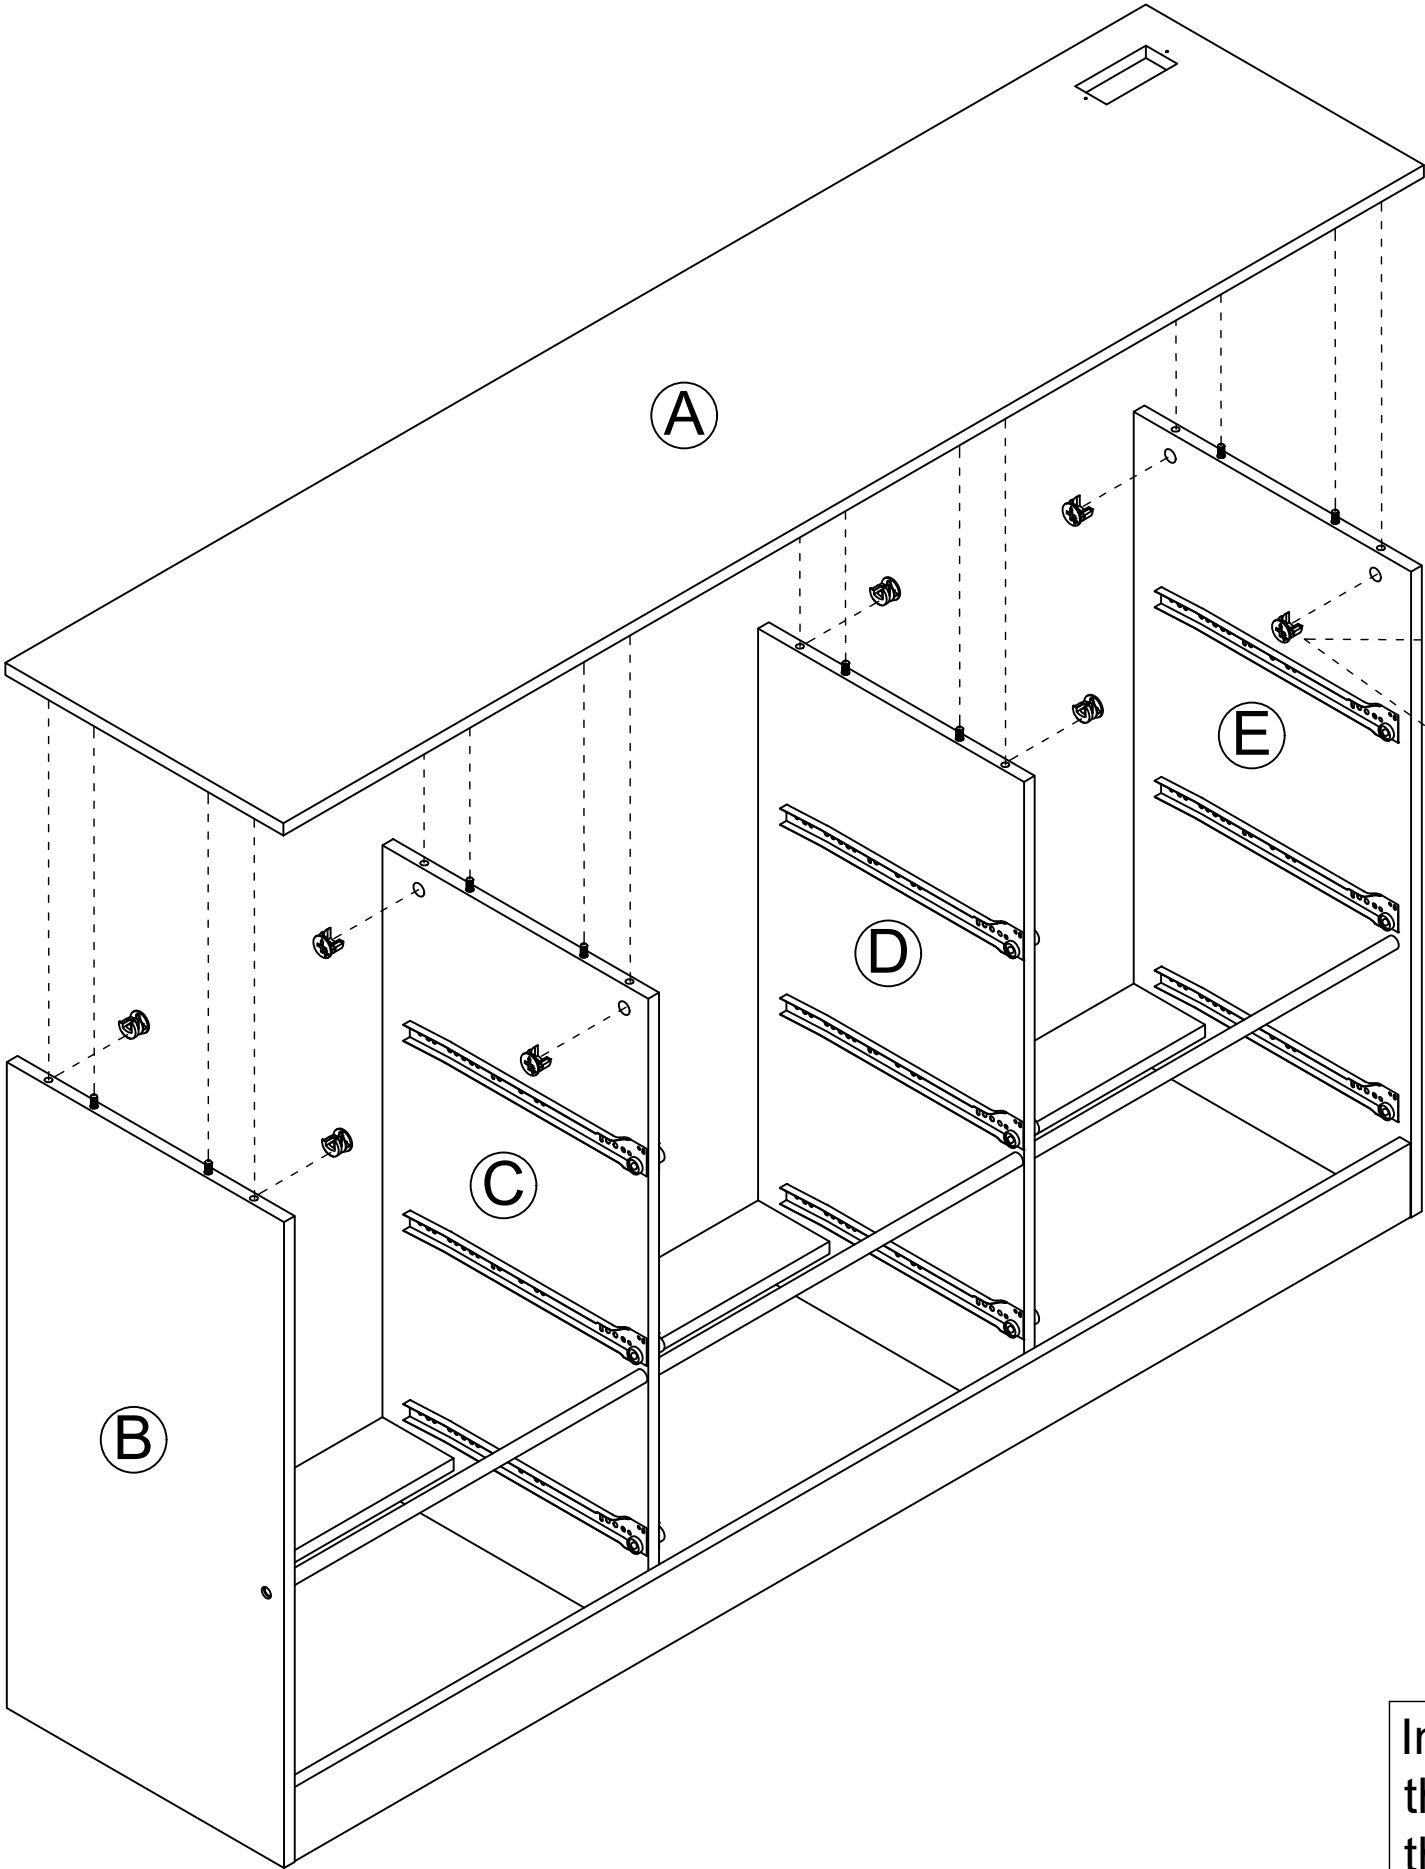



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

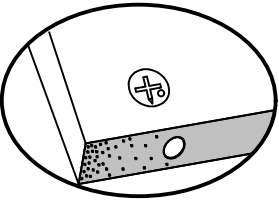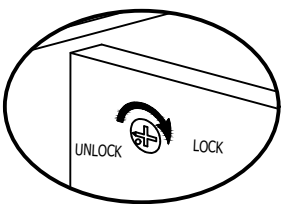



Proper orientation of CAM LOCK


STEP18

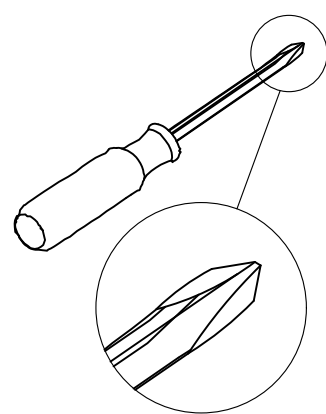

 Ø3X12mm	
⑥	X2


 Ø3X14mm	
⑦	X28

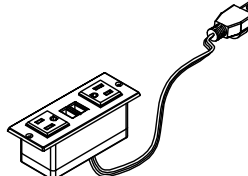 12	
12	X1

 4X12mm 27X13X1mm	
⑭	X2set





The power of using electrical appliances cannot exceed 1500W.


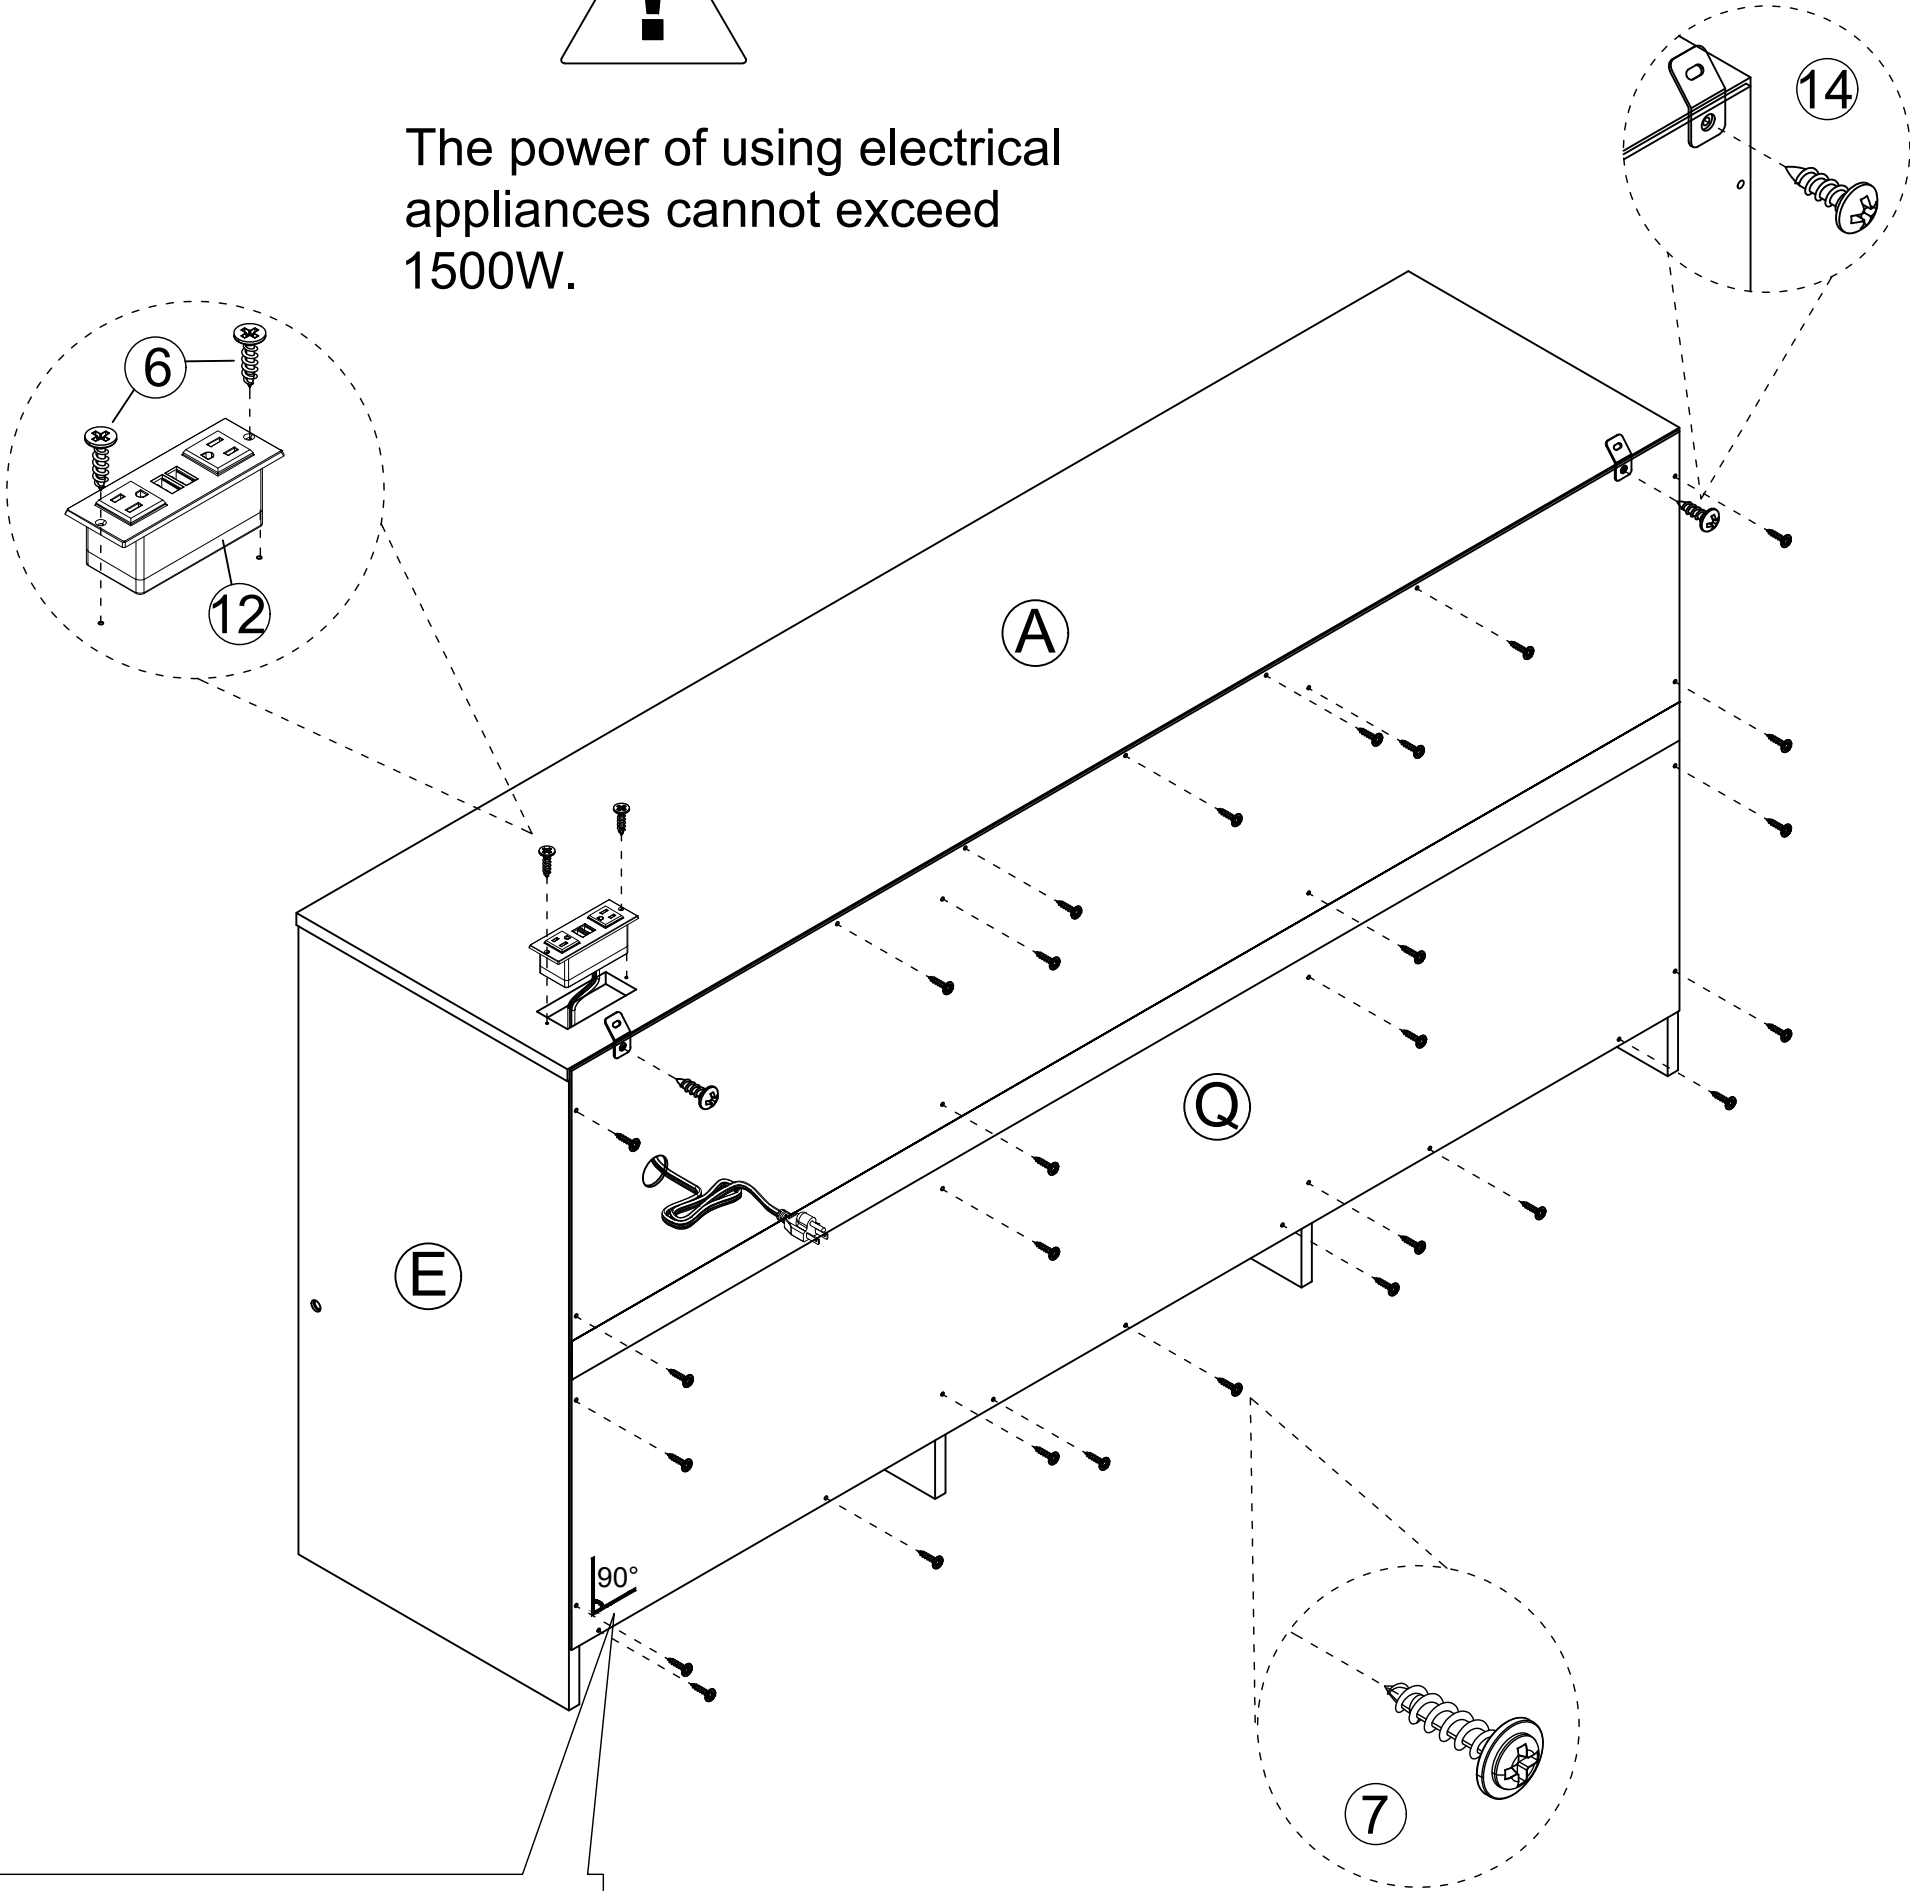


Before attaching the back panel, be sure that the unit is at 90°.

STEP19

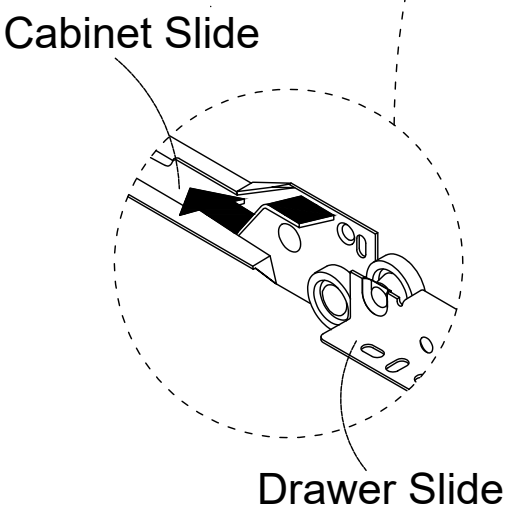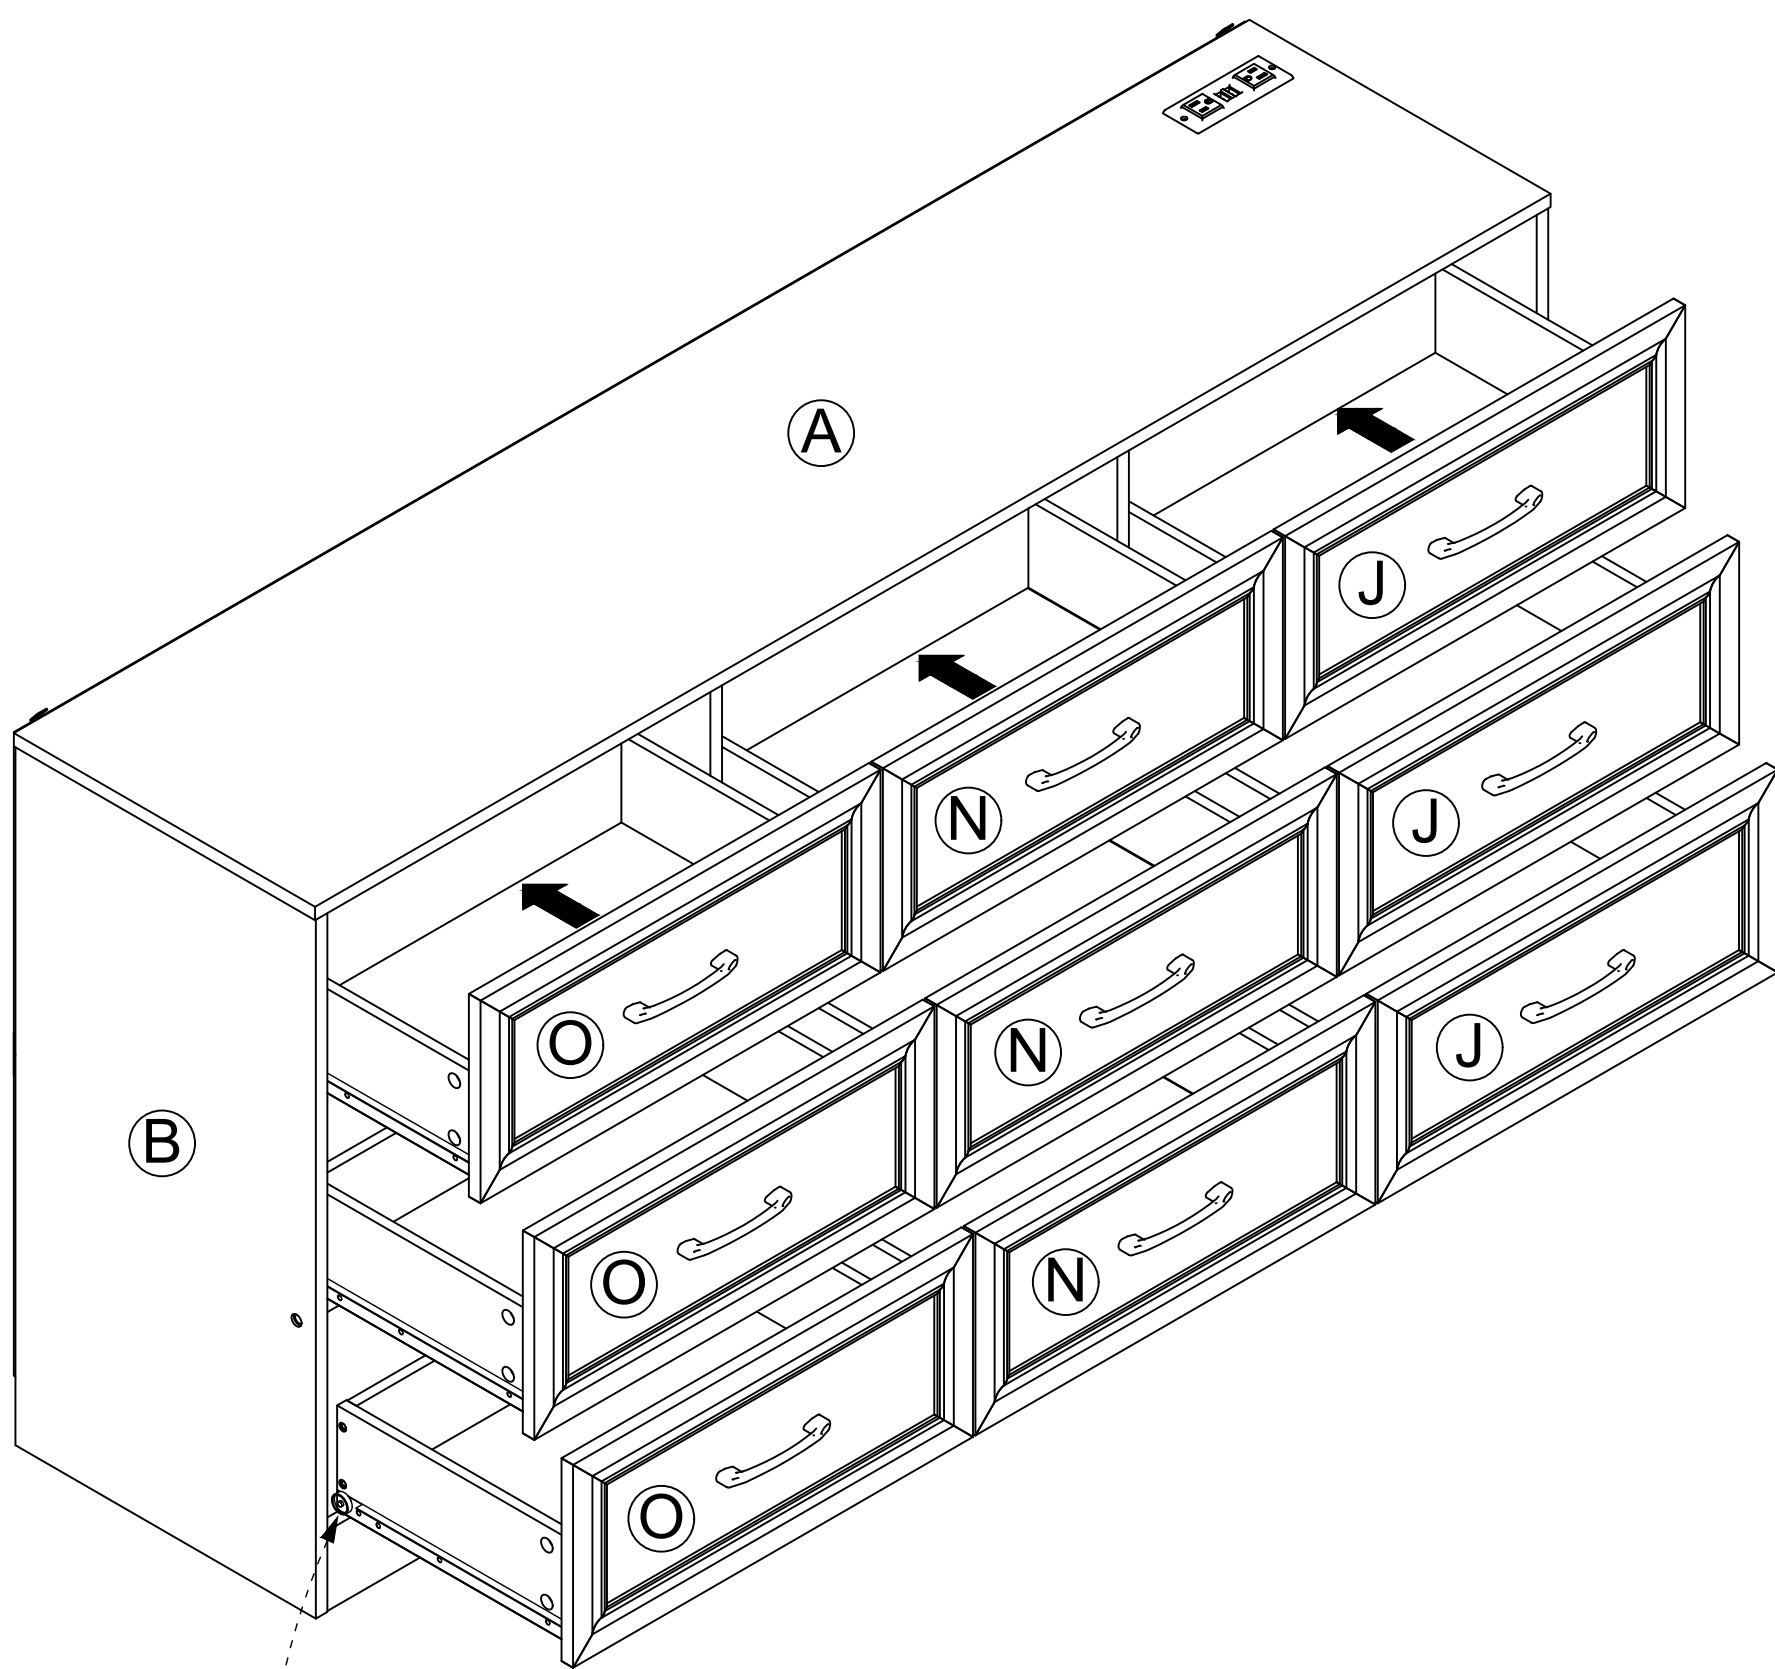


STEP20


			
4X40mm	27X13X1mm	35X40X14mm	273mm
17		X2set	

NOTE:The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.


Install the tipping restraint hard ware

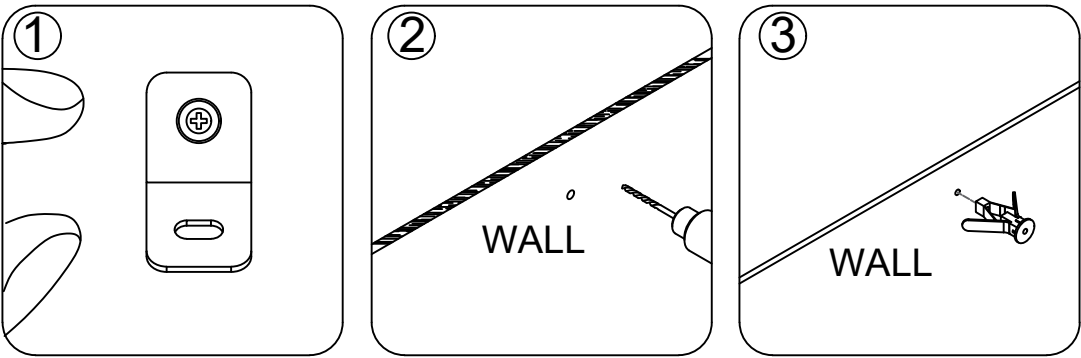

- 1.make mark on the wall
- 2.drill two Ø6 holes on the wall
- 3.put two anchors in the holes

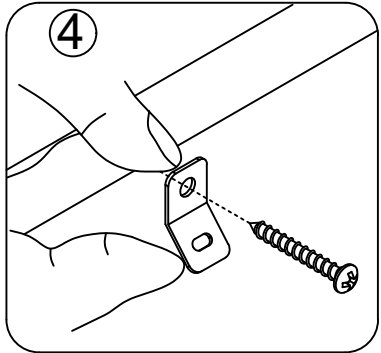

- 4.fix the device on the wall by the long screws

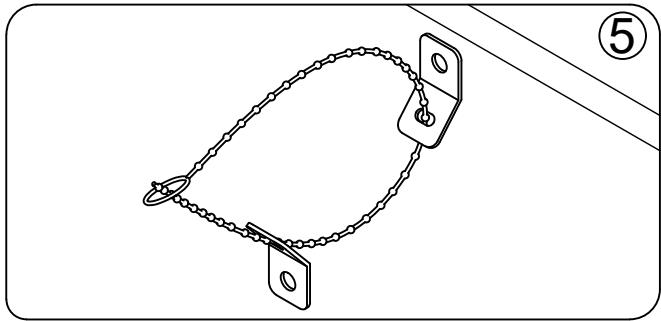

- 5.Push the cabinet close to the wall so that the two bases are close to each other, and then put on nylon tie to tighten it.

