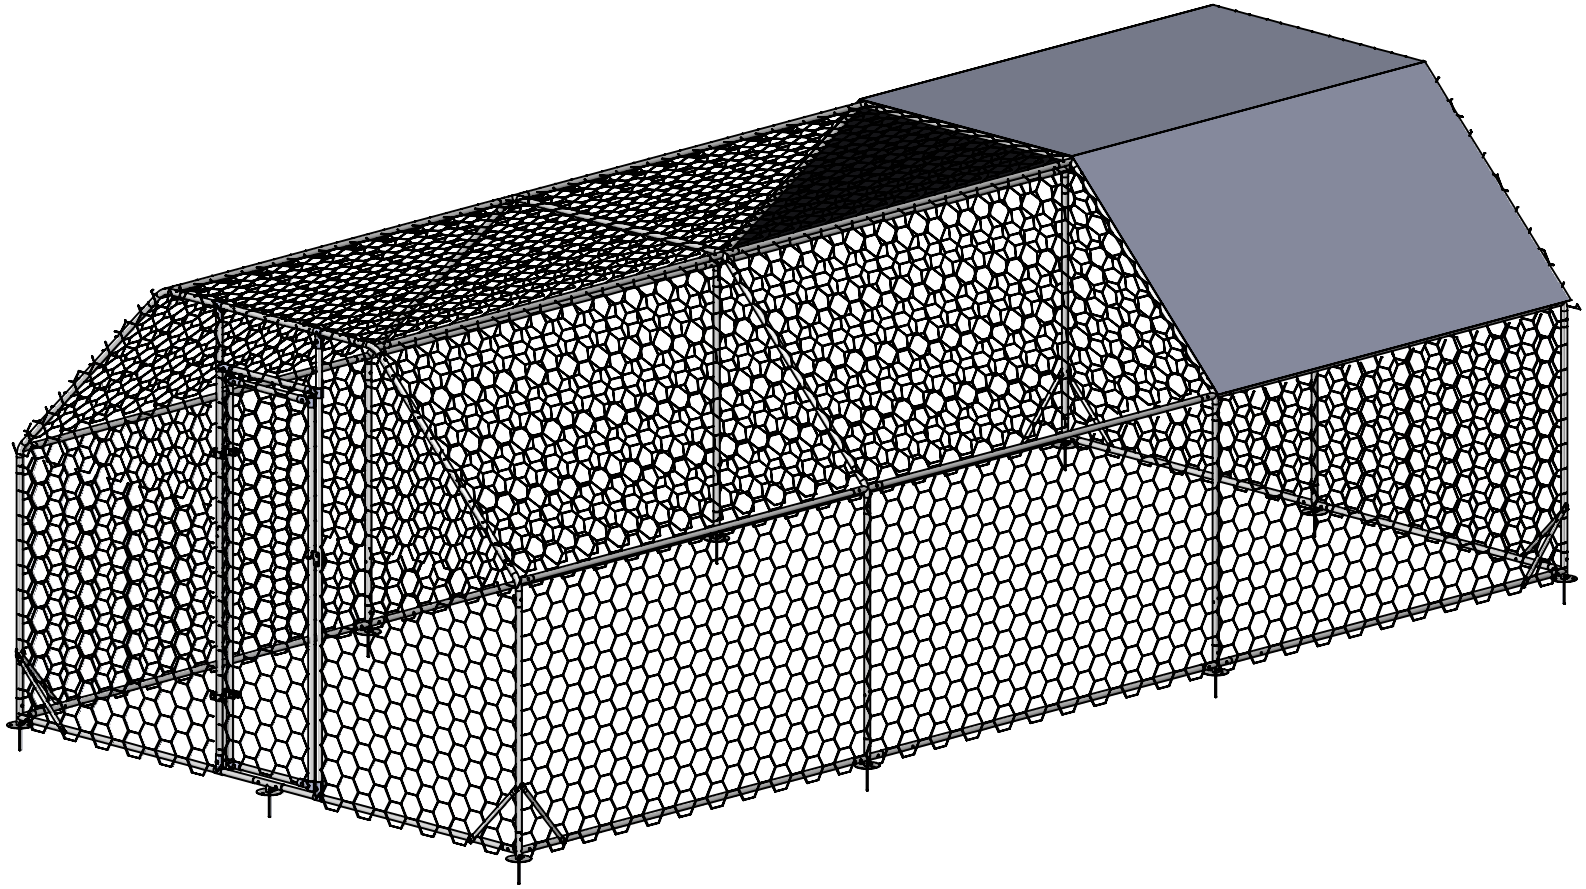









# CHICKEN COOPS INSTRUCTIONS

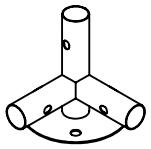
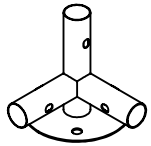
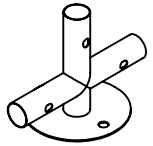


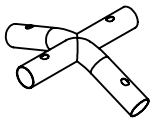


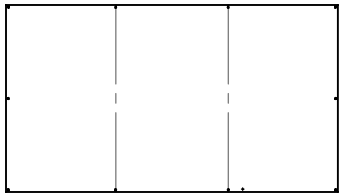
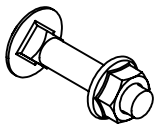
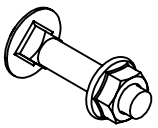
SKU:ZYPC001701

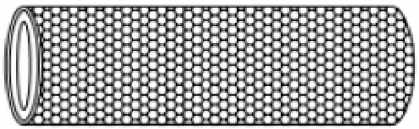


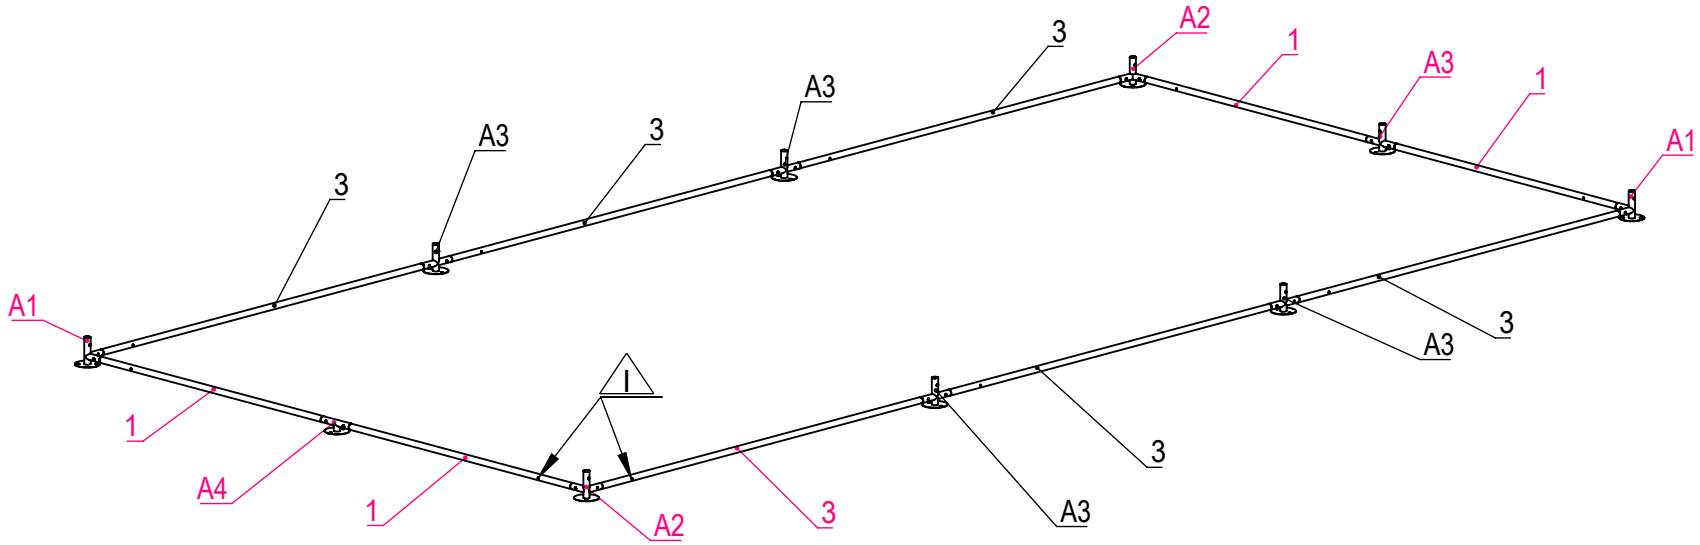
1.Recommend multiple people to assemble.
2.Do not over torque screws an bolts.
3.Do not install on flammable place in case of fire.
4.Use on a flat ground.
5.Gloves must be worn during assembly.

IMPORTANT.RETAIN FOR FUTURE REFERENCE

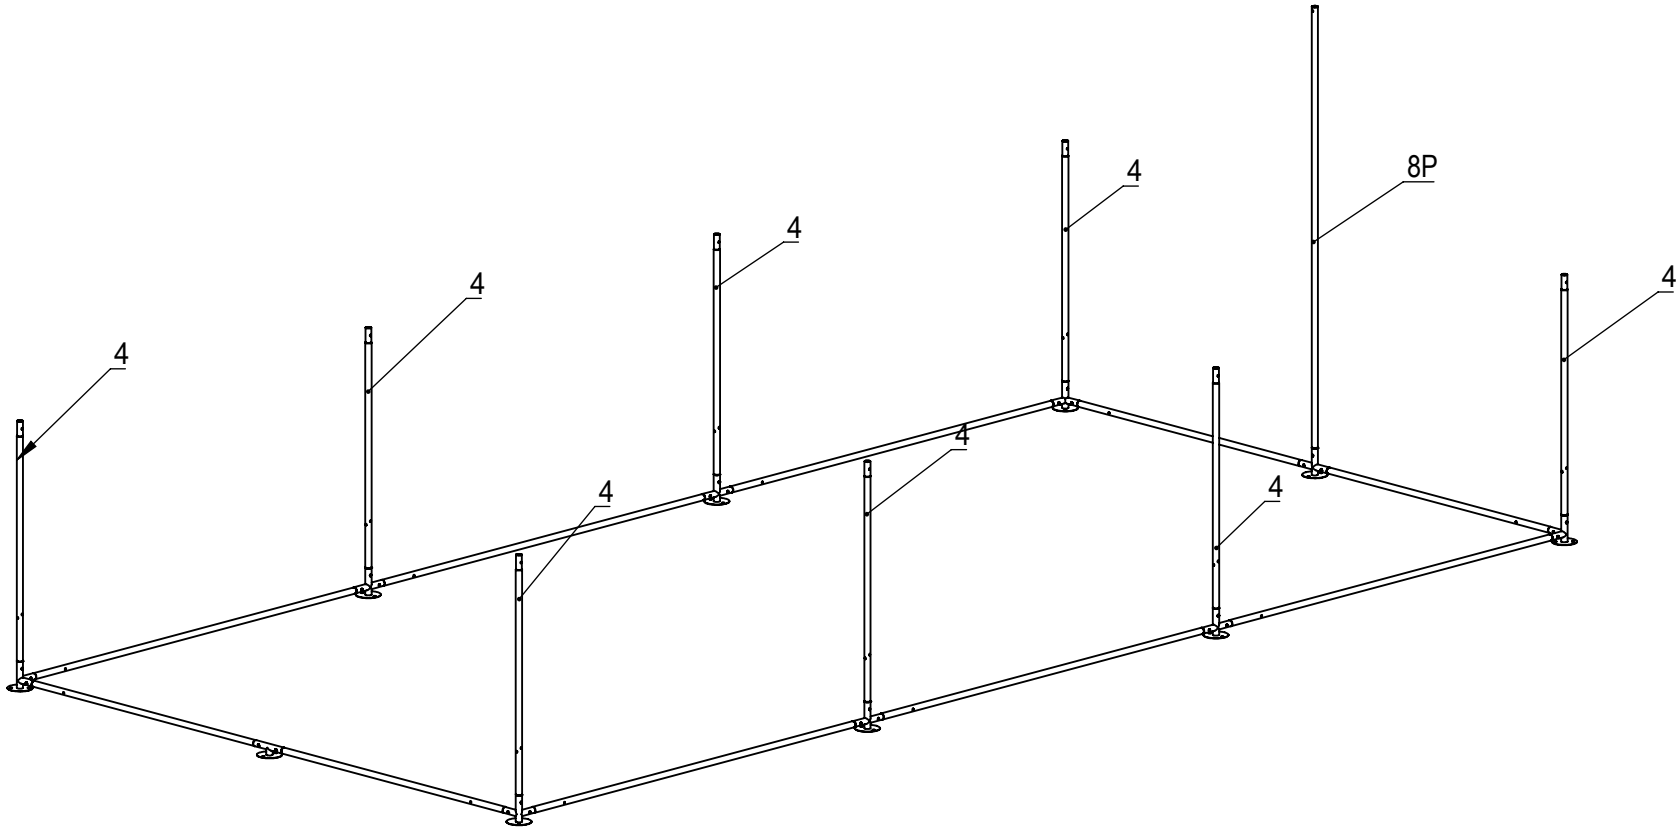
| NO. | PIC | TYB | PCS |
|---|---|---|---|
| 1 |  | 1364mm | 4 |
| 2 |  | 1919mm | 12 |
| 3 |  | 1919mm | 6 |
| 4 |  | 1049mm | 8 |
| 5P |  | 1061mm | 8 |
| 6P |  | 1874mm | 2 |
| 7 |  | 515mm | 1 |
| 8P |  | 1877mm | 1 |
| 9 |  | 1620mm | 2 |
| 10 |  | 407mm | 2 |
| 11 |  | 385mm | 8 |
| 12 |  | 1100mm | 4 |

| | | | | | | | |
|---|---|---|---|---|---|---|---|
|  | A1 |  | A2 |  | A3 |  | A4 |
| | 2 | | 2 | | 5 | | 1 |
|  | B4 |  | B5 |  | E1 |  | E2 |
| | 8 | | 8 | | 2 | | 2 |
|  | F1 |  | F2 |  | PP | | |
| | 1 | | 2 | | 1 | | |
|  | C |  | L |  | K |  | R |
| | 22 | M8*40 | 4 | M6*40 | 29 | | 10 |
|  | G |  | S |  | Z |  | U |
| | 10 | | 1 | | 1 | | 1 |

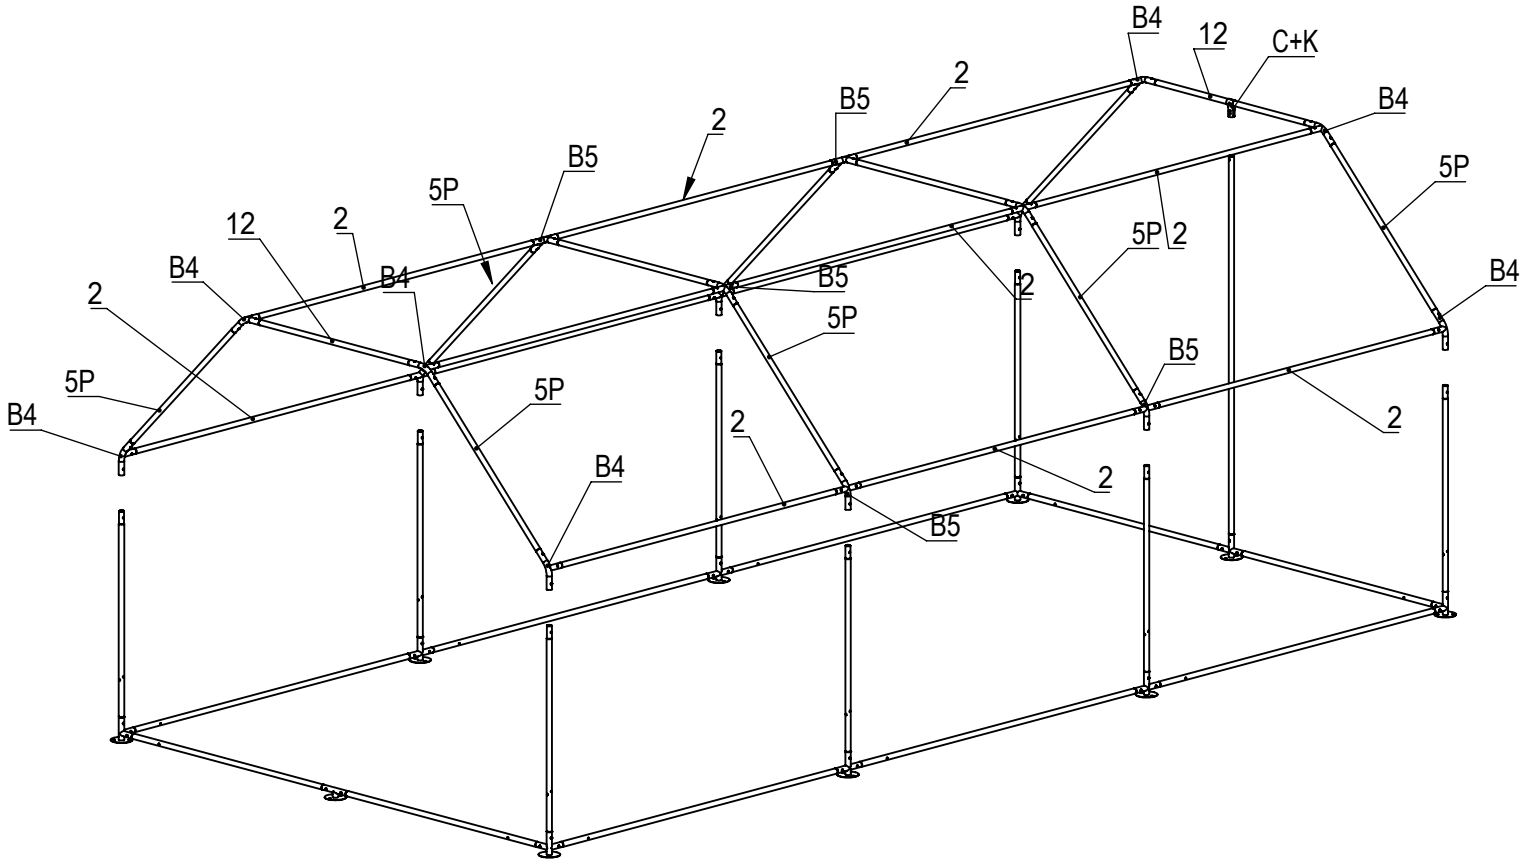
| | | |
|---|---|---|
|  | W3 | |
| | 1 | |




| NO. | PCS |
|---|---|
| A1 | 2 |
| A2 | 2 |
| A3 | 5 |
| A4 | 1 |
| 1 | 4 |
| 3A | 6 |

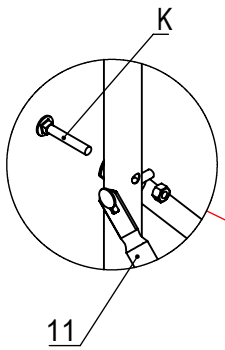


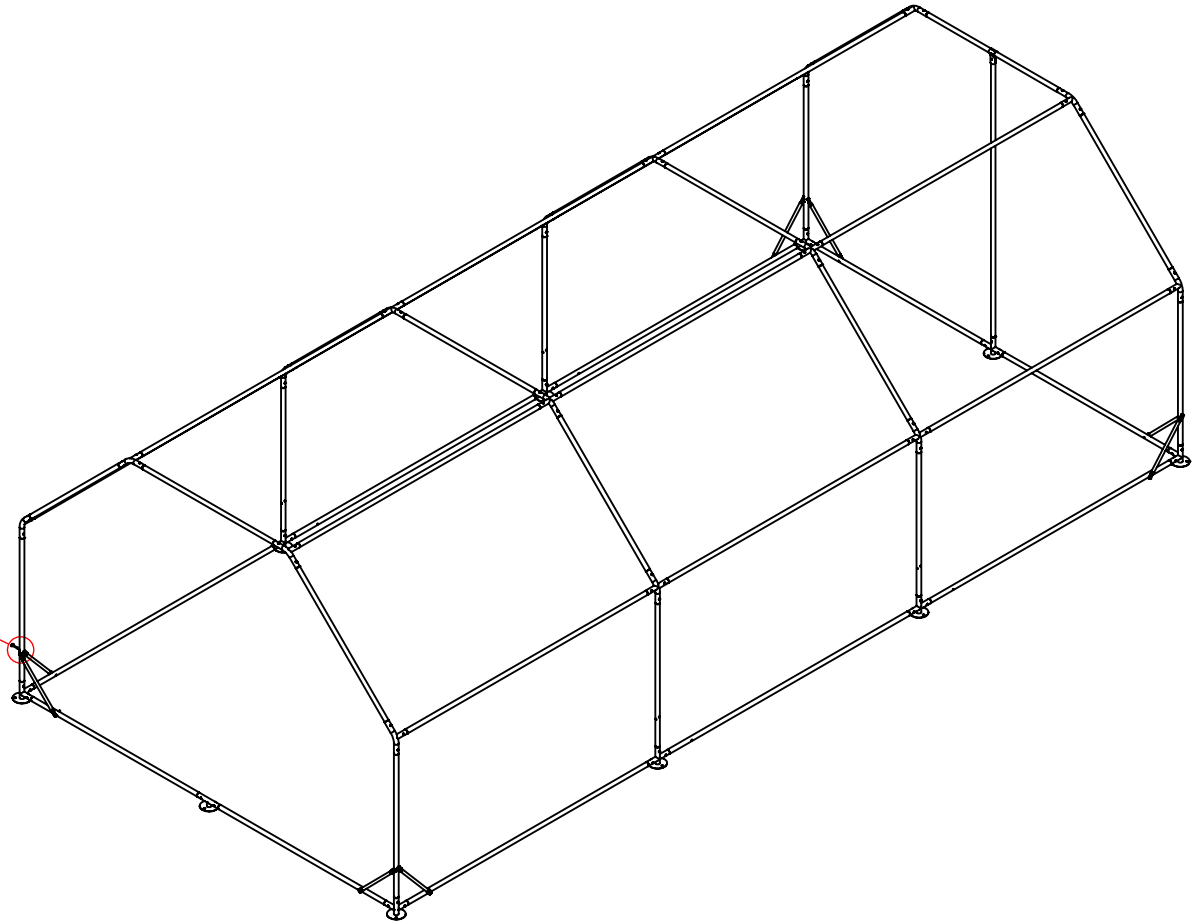

| NO. | PCS |
|---|---|
| 4 | 8 |
| 8P | 1 |



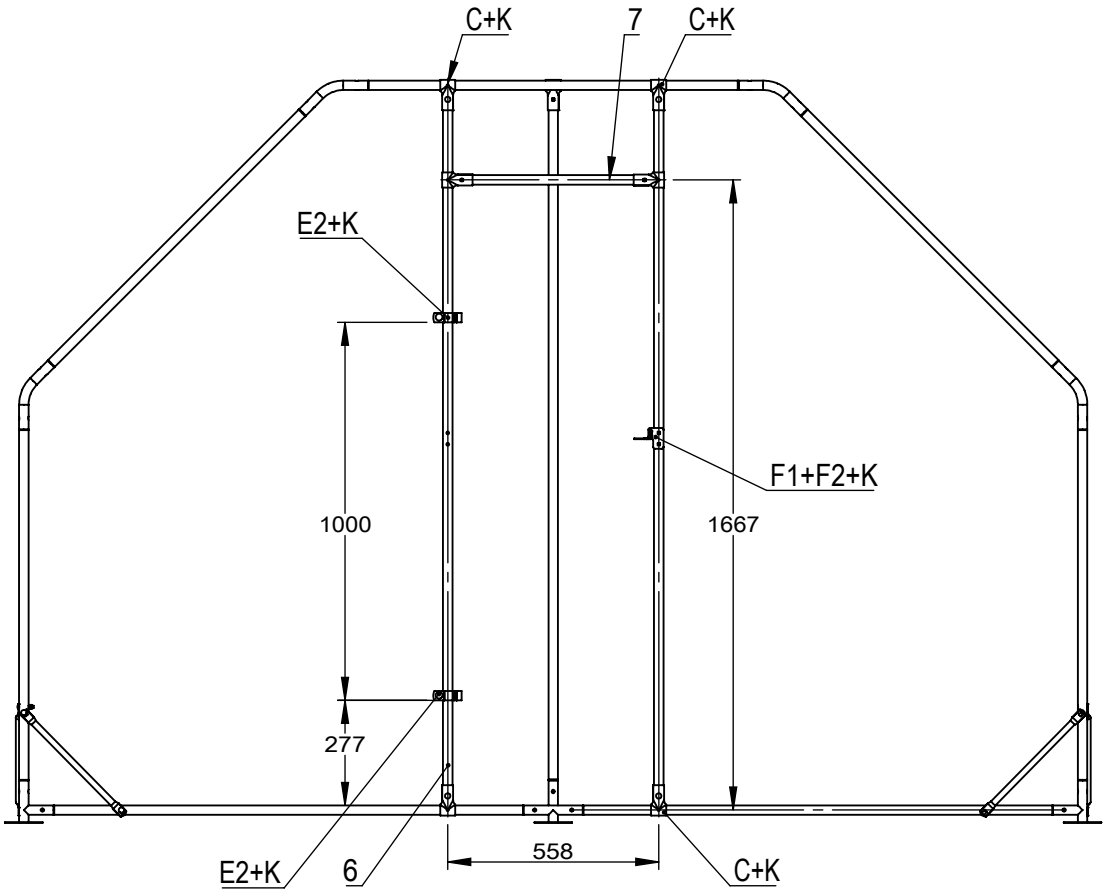

| NO. | PCS |
|---|---|
| 2 | 12 |
| 5P | 8 |
| 12 | 4 |
| B4 | 8 |
| B5 | 8 |
| C | 2 |
| K | 1 |

XV
1 : 5

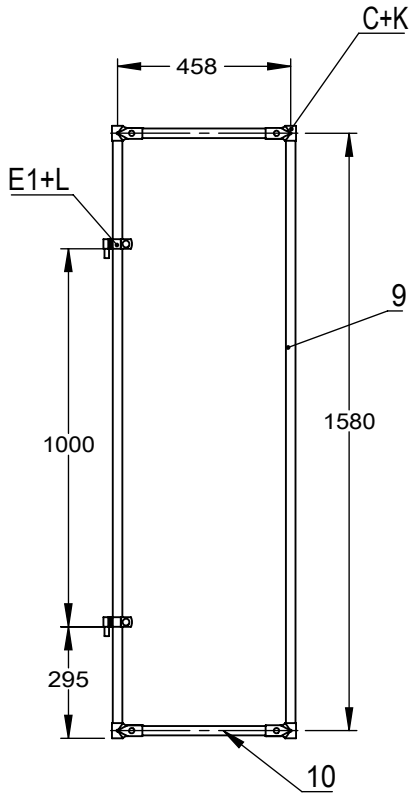


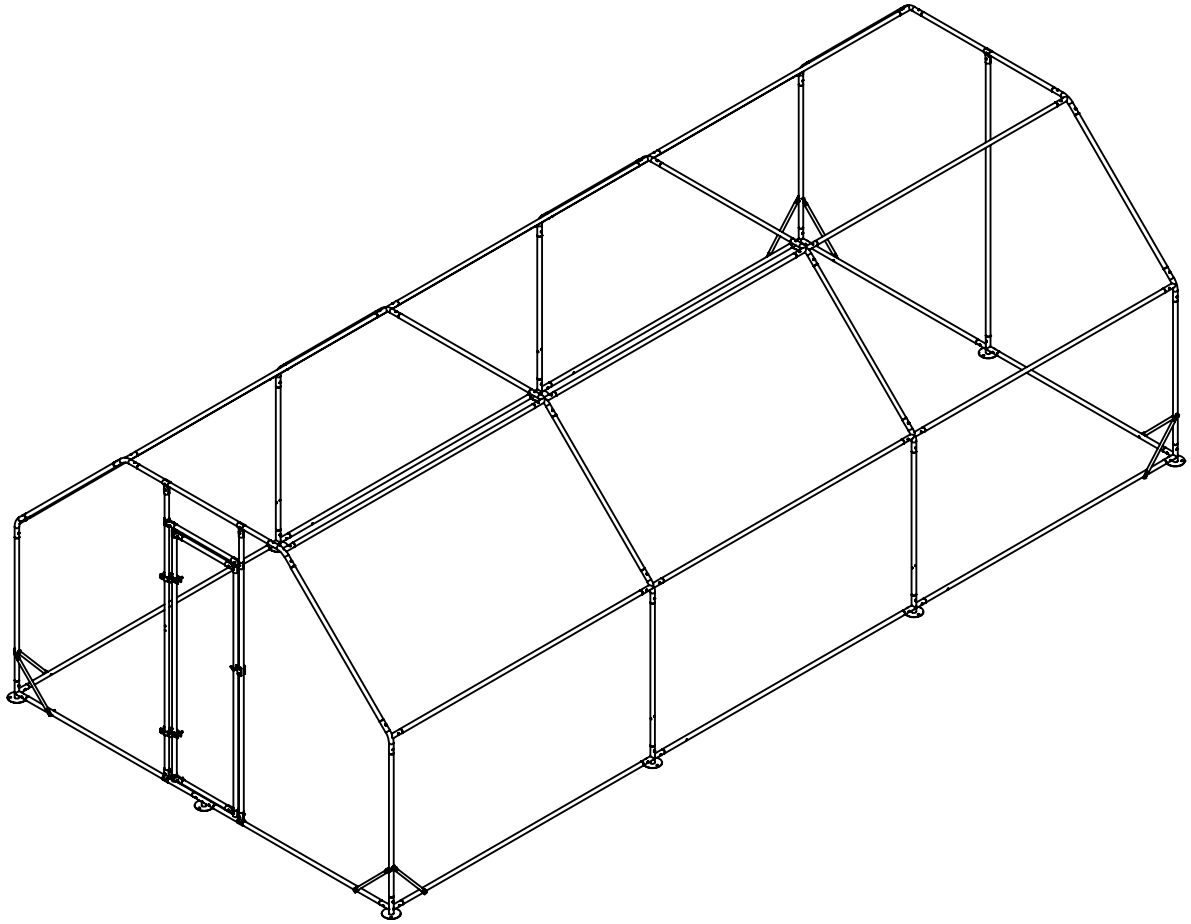



| NO. | PCS |
|---|---|
| 11 | 8 |
| K(M6*40) | 16 |


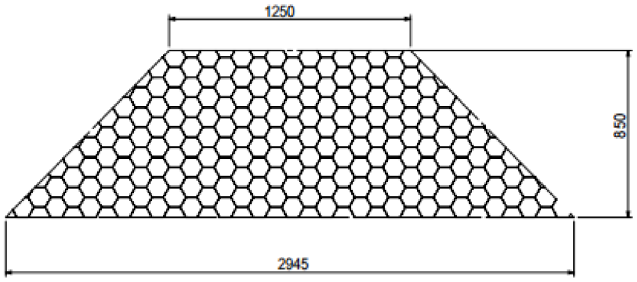
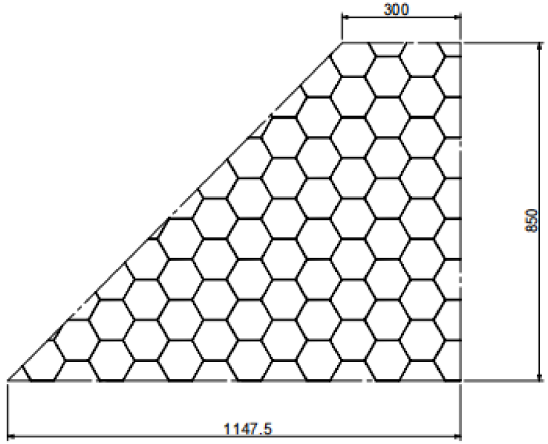
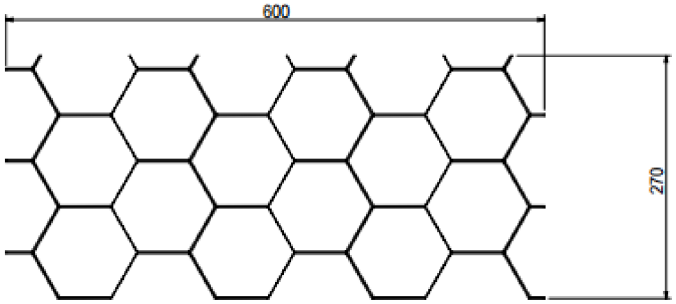
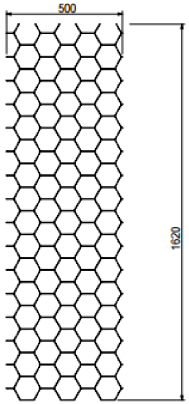
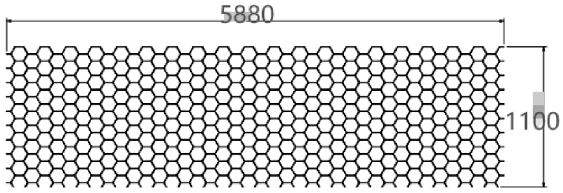


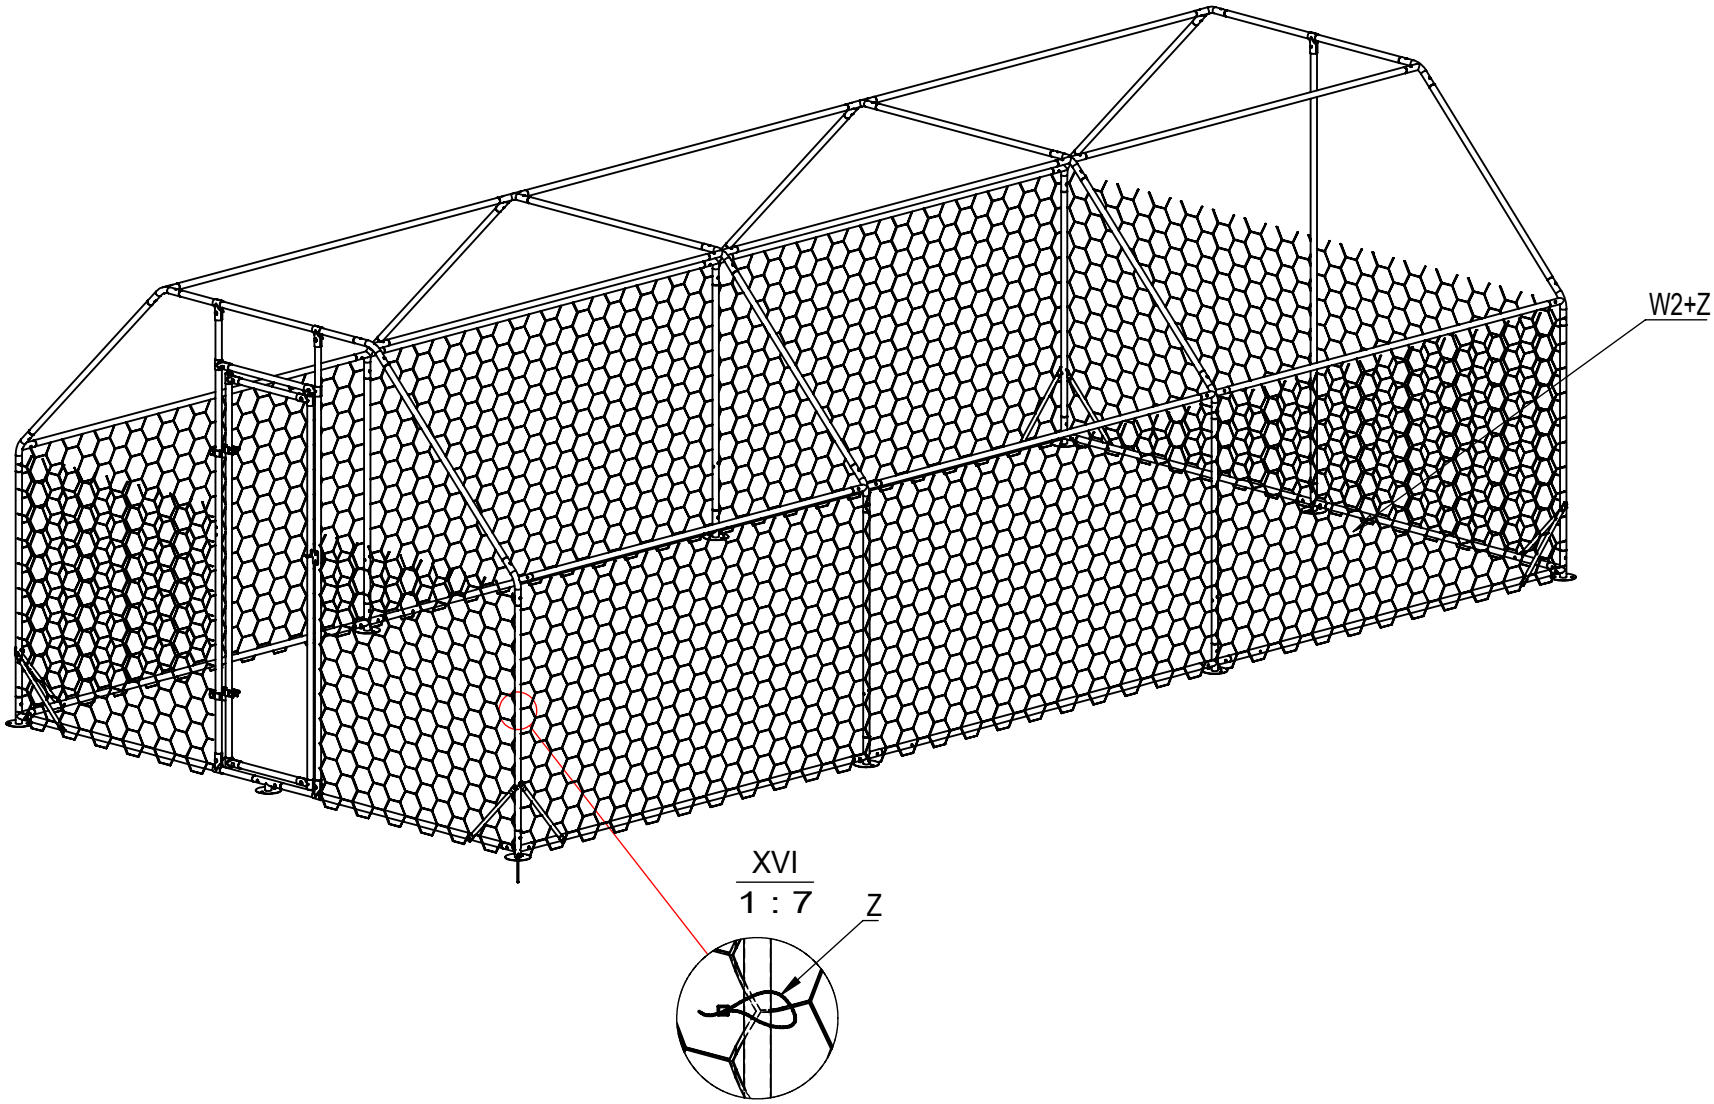

| NO. | PCS |
|---|---|
| C | 12 |
| 6 | 2 |
| 7 | 1 |
| E2 | 2 |
| F2 | 2 |
| F1 | 1 |
| L | 2 |
| K | 8 |

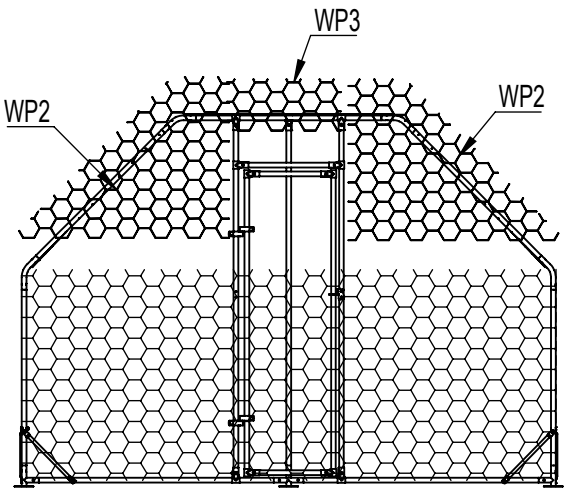


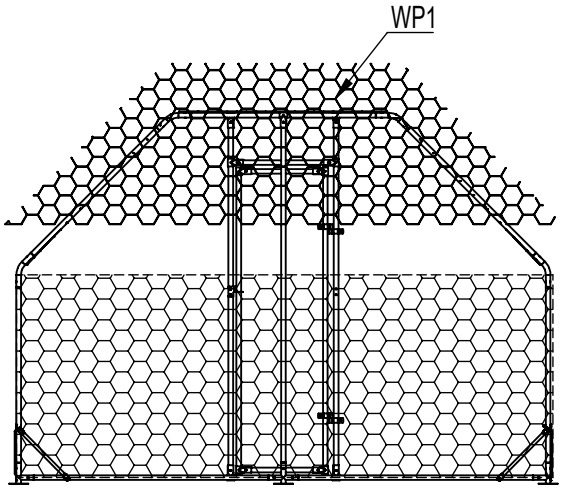



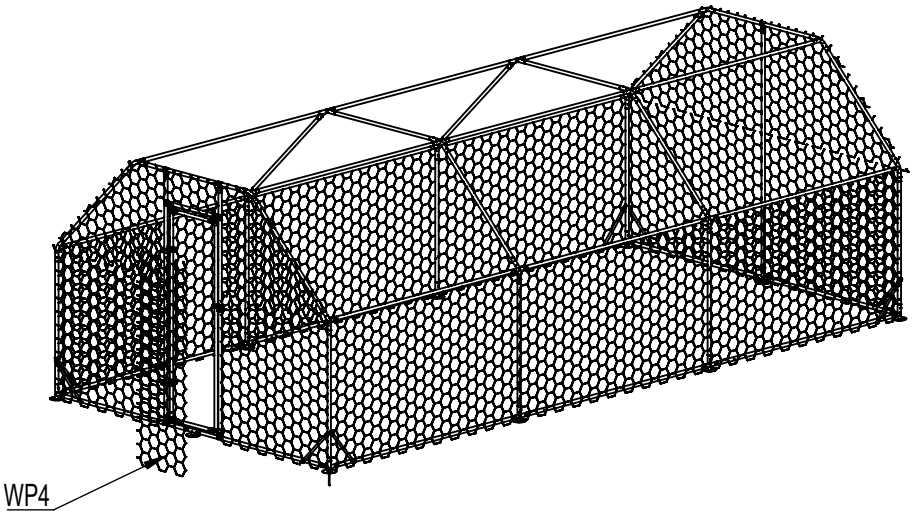
| NO. | PCS |
|---|---|
| C | 8 |
| 10 | 2 |
| 9 | 2 |
| E1 | 2 |
| L | 2 |
| K | 4 |

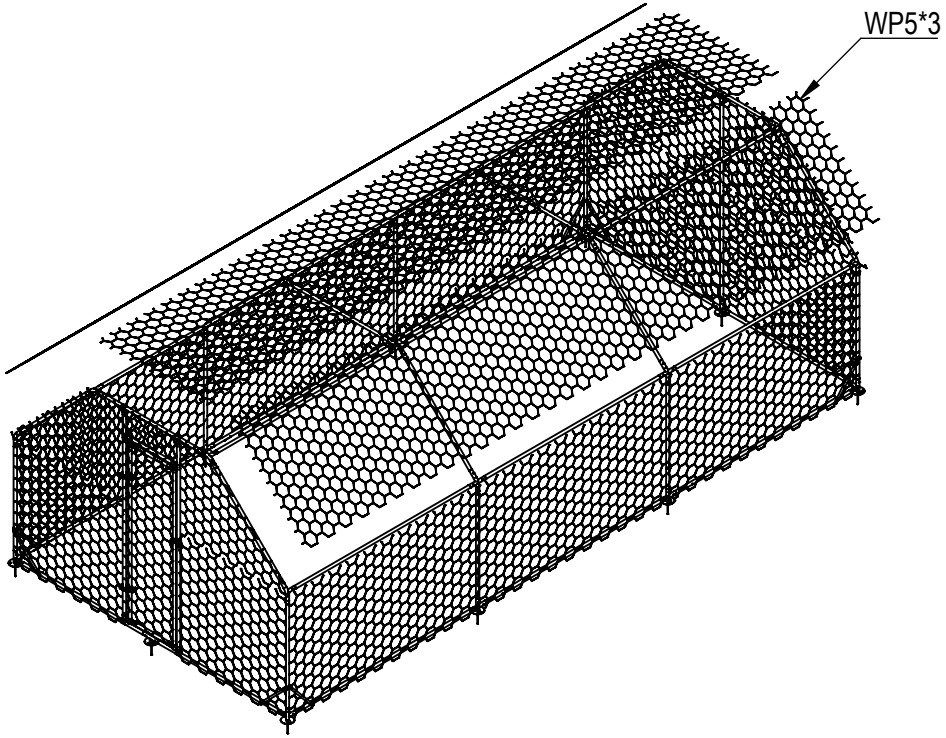
| | | | |
|---|---|---|---|
|  | W3 |  | WP1 |
| | 1 | | 1 |
|  | WP2 |  | WP3 |
| | 2 | | 1 |
|  | WP4 |  | WP5 |
| | 1 | | 3 |

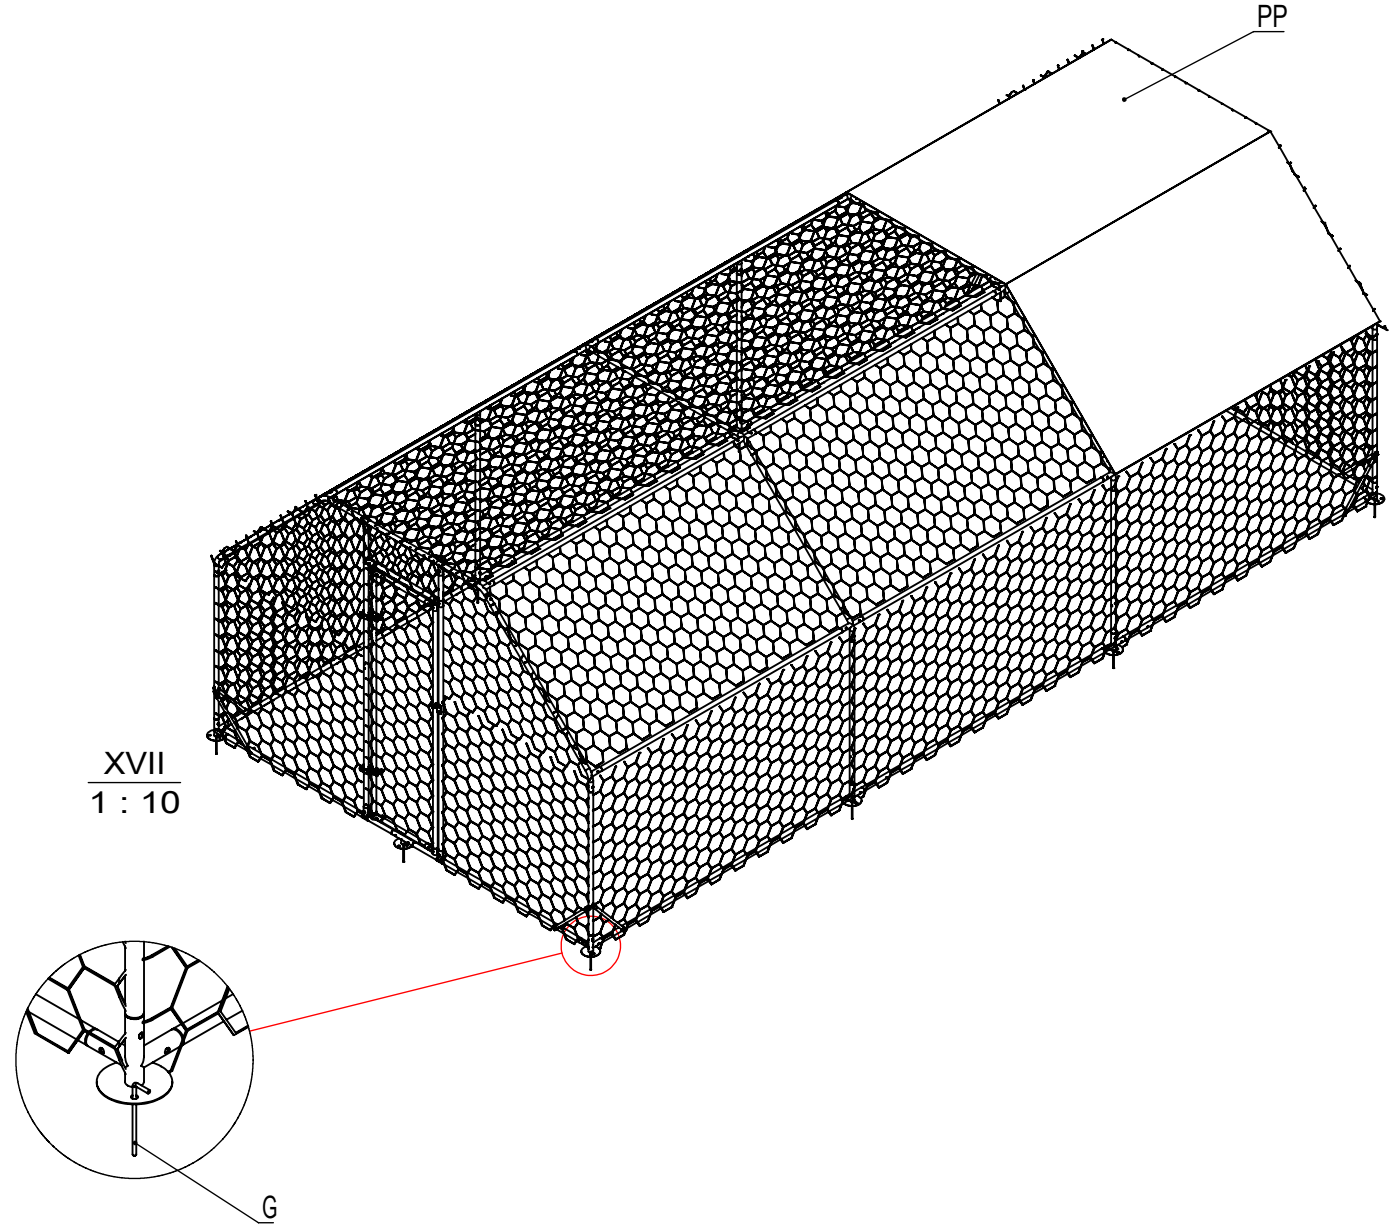

W2+Z
XVI
1 : 7
Z


WP3
WP2
WP2


WP1


WP4


WP5*3




XVII
1 : 10





