


ASSEMBLY INSTRUCTION

Outdoor Aluminum Arm Chair with Cushion

Part #	Names and Description	Picture	Qty
A	Left armrest		1
B	Right armrest		1
C	Seat		1
D	Backrest		1
E	Bolt (M6*50mm)		10
F	Bolt (M6*25mm)		4
G	Plastic Bolt Cap		14
H	Metal Washer		14
I	Allen Key		1
J	Base Cushion		1
K	Back Cushion		1

OVERVIEW

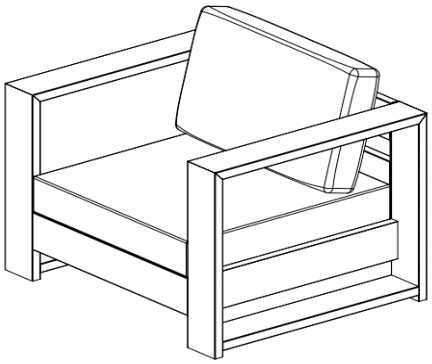


Step 1


Prepare the Assembly Area

Set up a clean, flat workspace to prevent any potential damage to parts during assembly. Organize all parts and tools, and confirm that all components match the parts list.

Note: Do not fully tighten screws until all parts are assembled.

Step 2

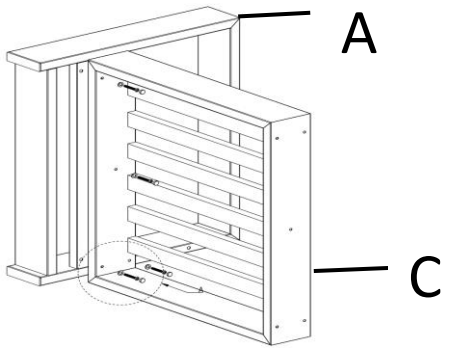

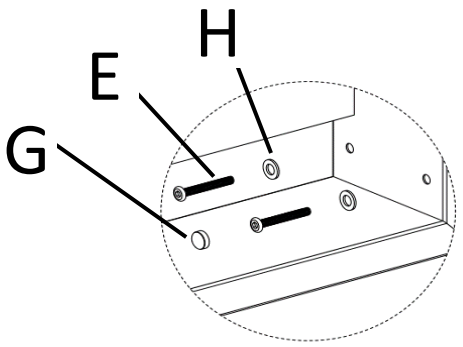



Attach the Left Armrest

Place the Left Armrest (A), Seat Frame (C), and Right Armrest (B) on a flat surface as shown in the illustration. Use Bolt (E), Metal Washer (H), and the Allen Key (I) to connect the parts.

Note: Leave all screws slightly loose until final assembly.

Step 3

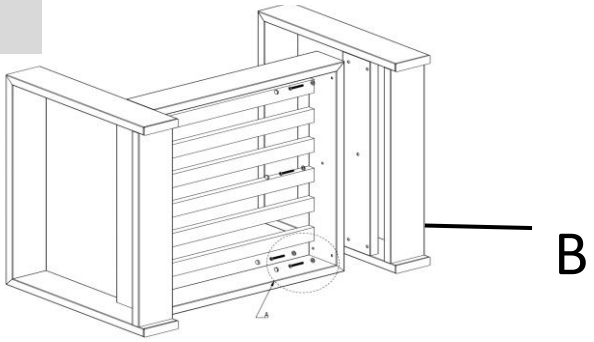

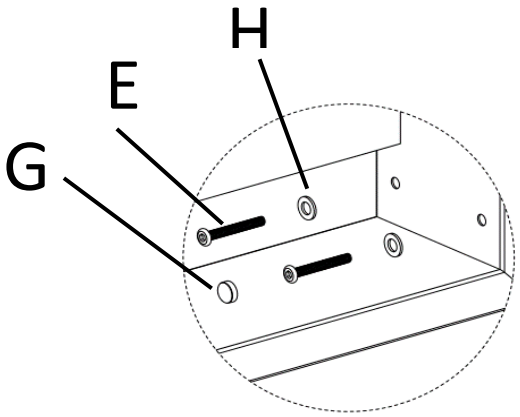



Attach the Right Armrest.

Following the illustration, use Bolt (E), Metal Washer (H), and the Allen Key (I) to connect the Seat Frame (C) and the Right Armrest (B).

Note: Keep screws loose until the assembly is complete.

Step 4

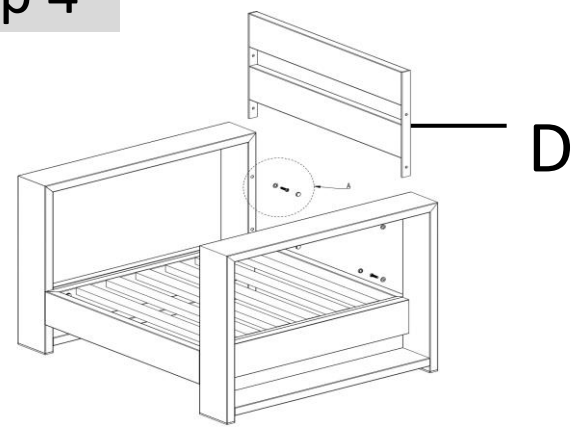

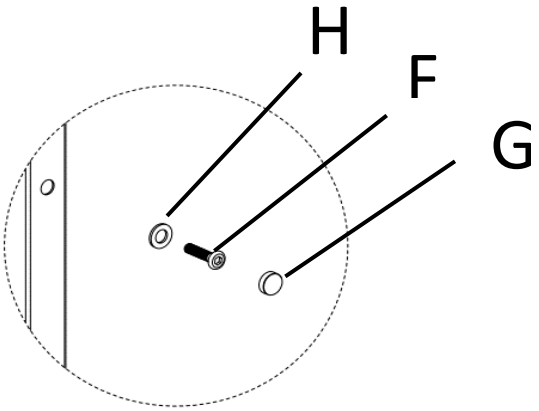

Install the Backrest

Position the Backrest (D) onto the Seat Frame (C) and align it with both the Right Armrest (B) and Left Armrest (A). Secure the Backrest using Bolt (F), Metal Washer (H), and the Allen Key (I). Ensure the sofa is stable and level before fully tightening all screws. Afterward, place Plastic Bolt Caps (G) over all exposed bolt heads for a finished look.

Step 5

Final Assembly

Place the Seat Cushion (J) and Back Cushions (K) on the assembled sofa to complete the setup.