


Assembly Instructions

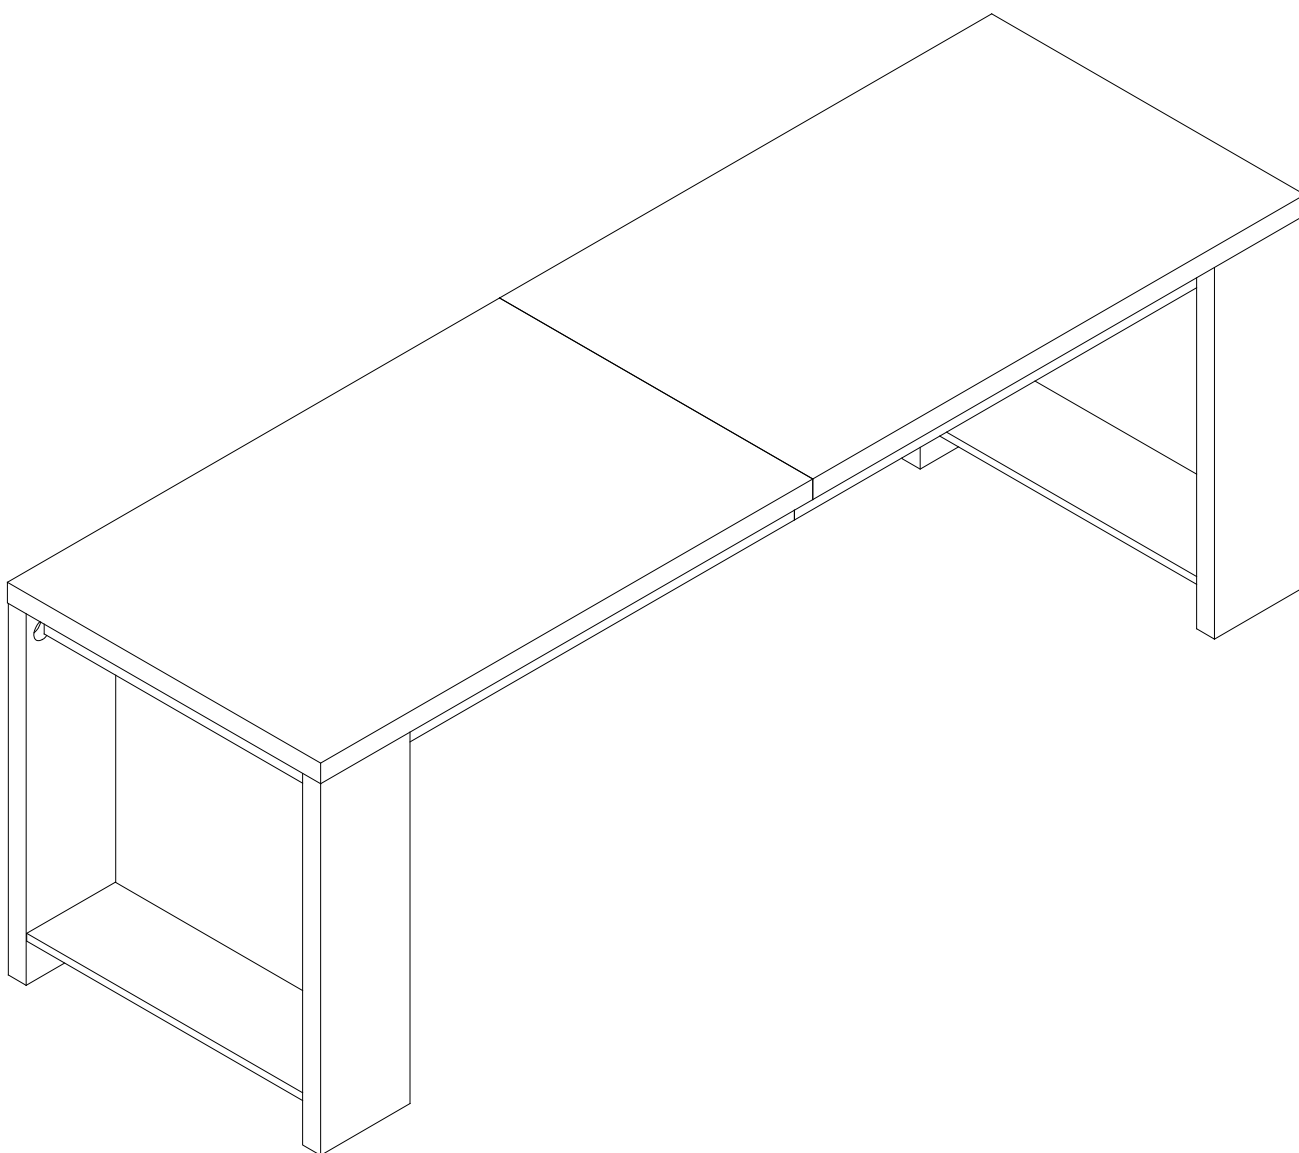




Contact Us

We're here to help you.

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

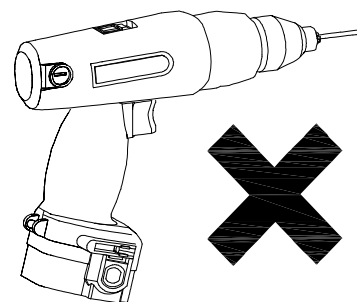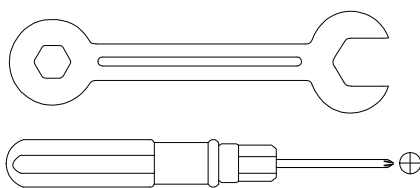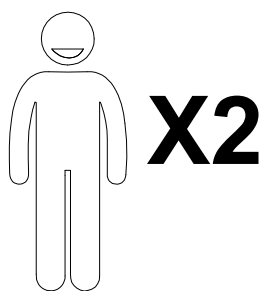



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

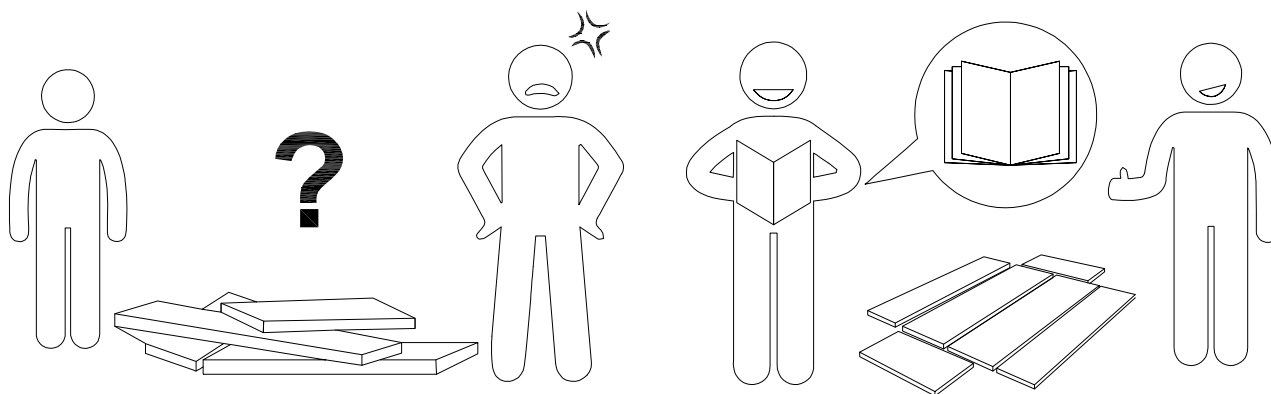

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.










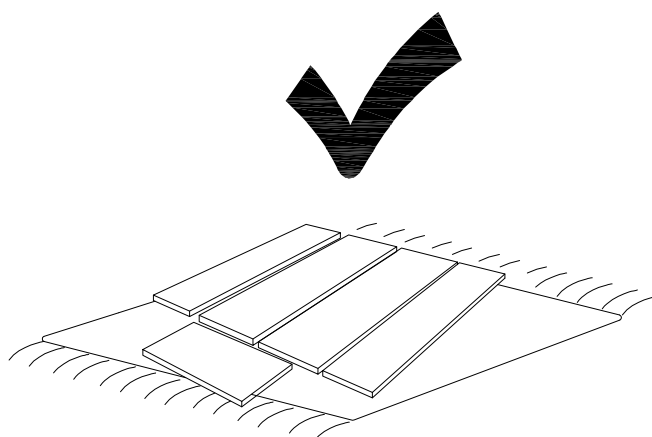
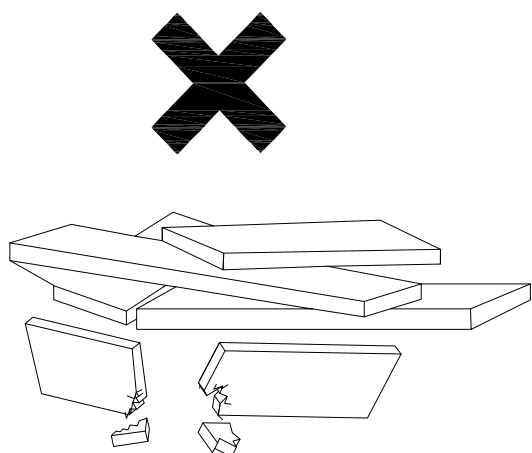


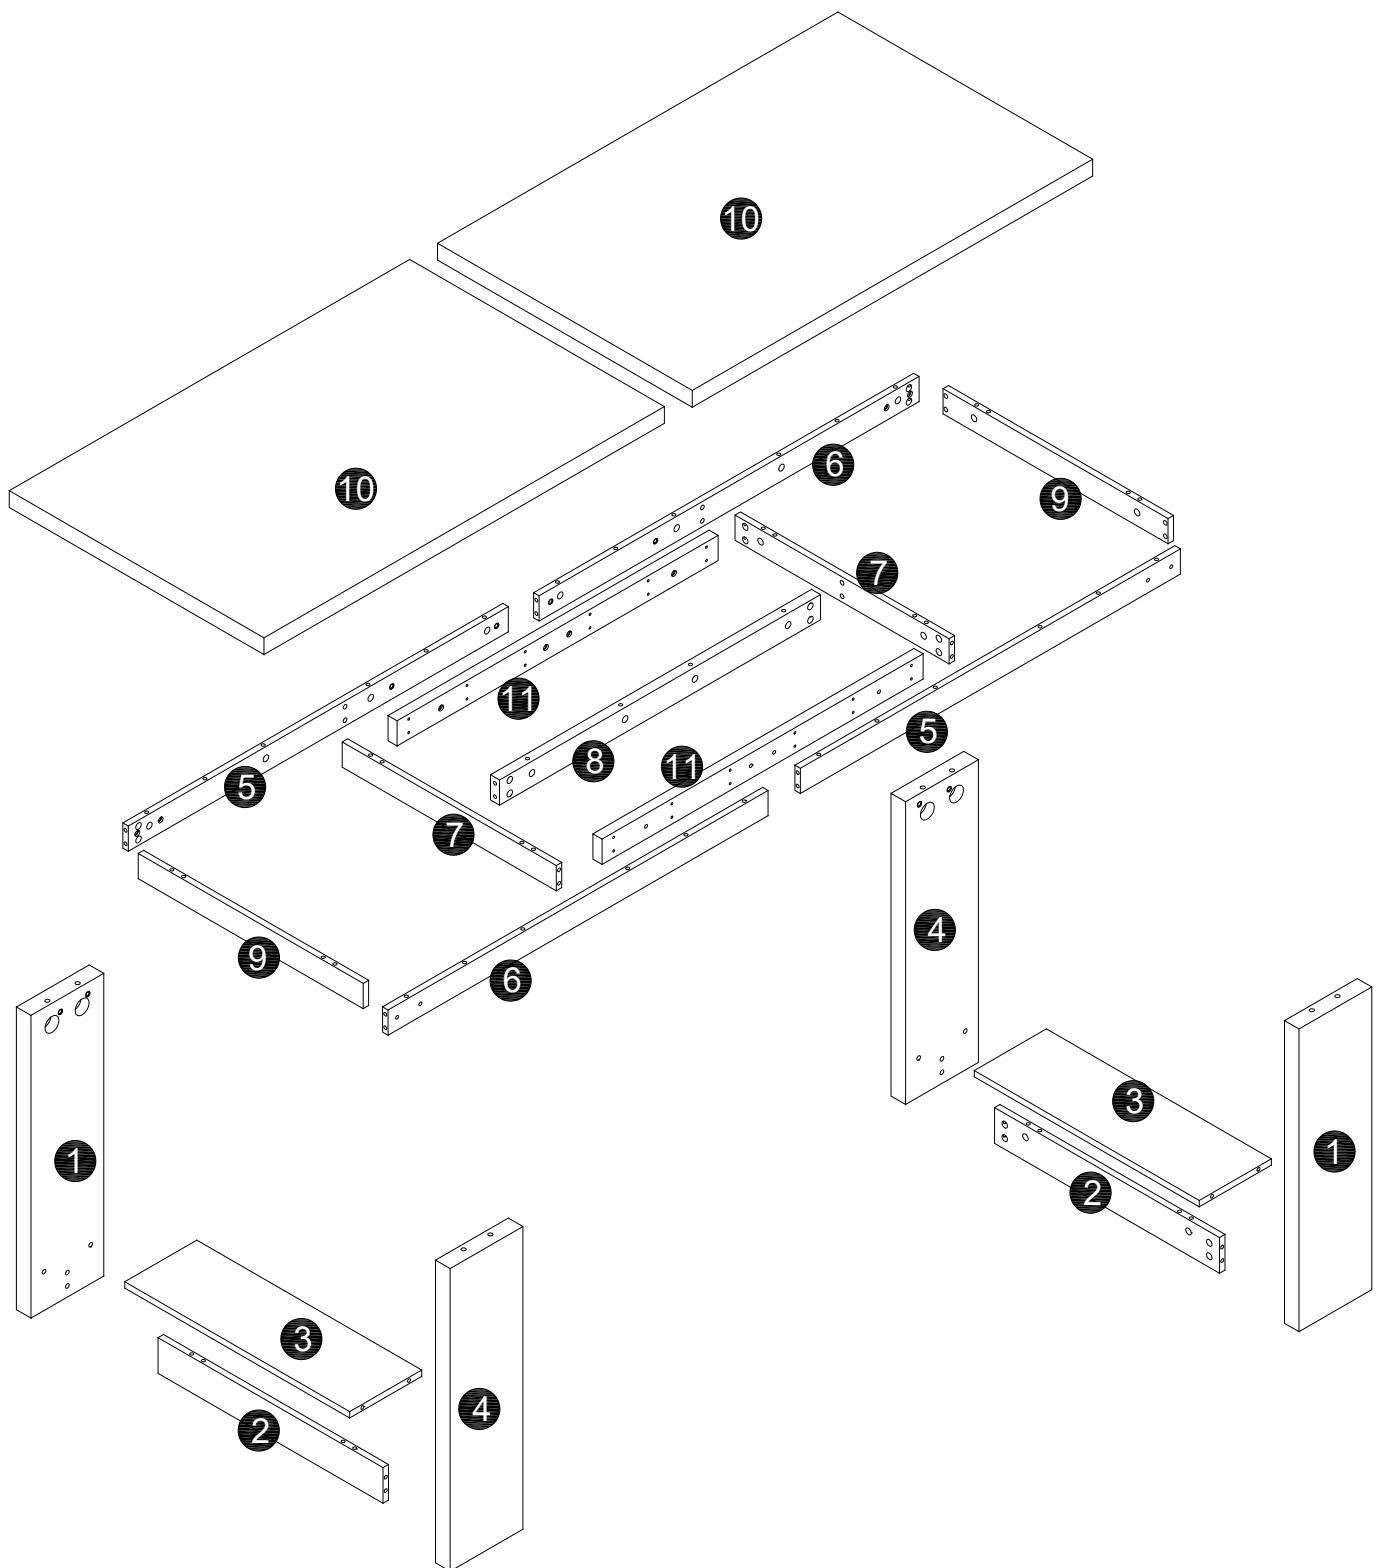






⚠ Caution





Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.


Parts List

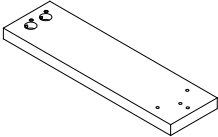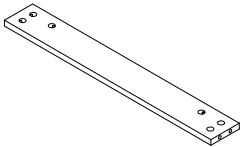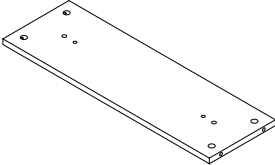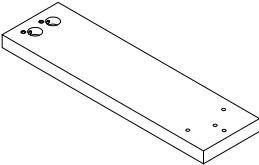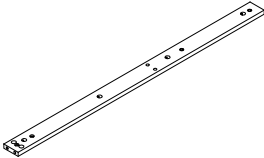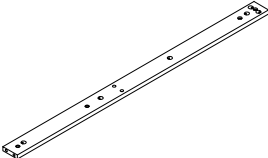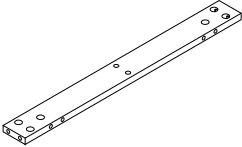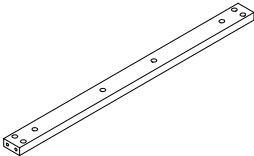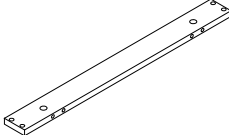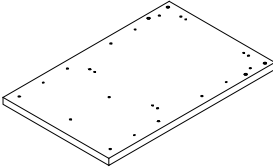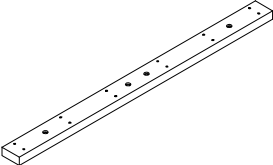1  2 pcs	2  2pcs	3  2 pcs	4  2 pcs	5  2 pcs
6  2 pcs	7  2 pcs	8  1 pc	9  2 pcs	10  2 pcs
11  2 pcs				

Hardware List

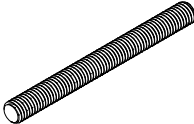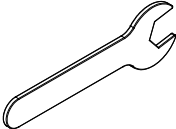
A	B	C	D	E	F
					
M6x35mm	Ø8x30mm	Ø15x12mm	Ø8x40mm	M8x75mm	
68 pcs	20 pcs	68 pcs	4 pcs	8 pcs	1 pc

G	H	I	J	K	L
					
		M6x20mm	M6x30mm	Ø3.5x35mm	
8 pcs	8 pcs	8 pcs	8 pcs	24 pcs	8 pcs

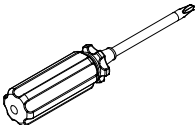
M					
					
Screwdriver					
1 pc					

Installation of Cams and Pins



Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

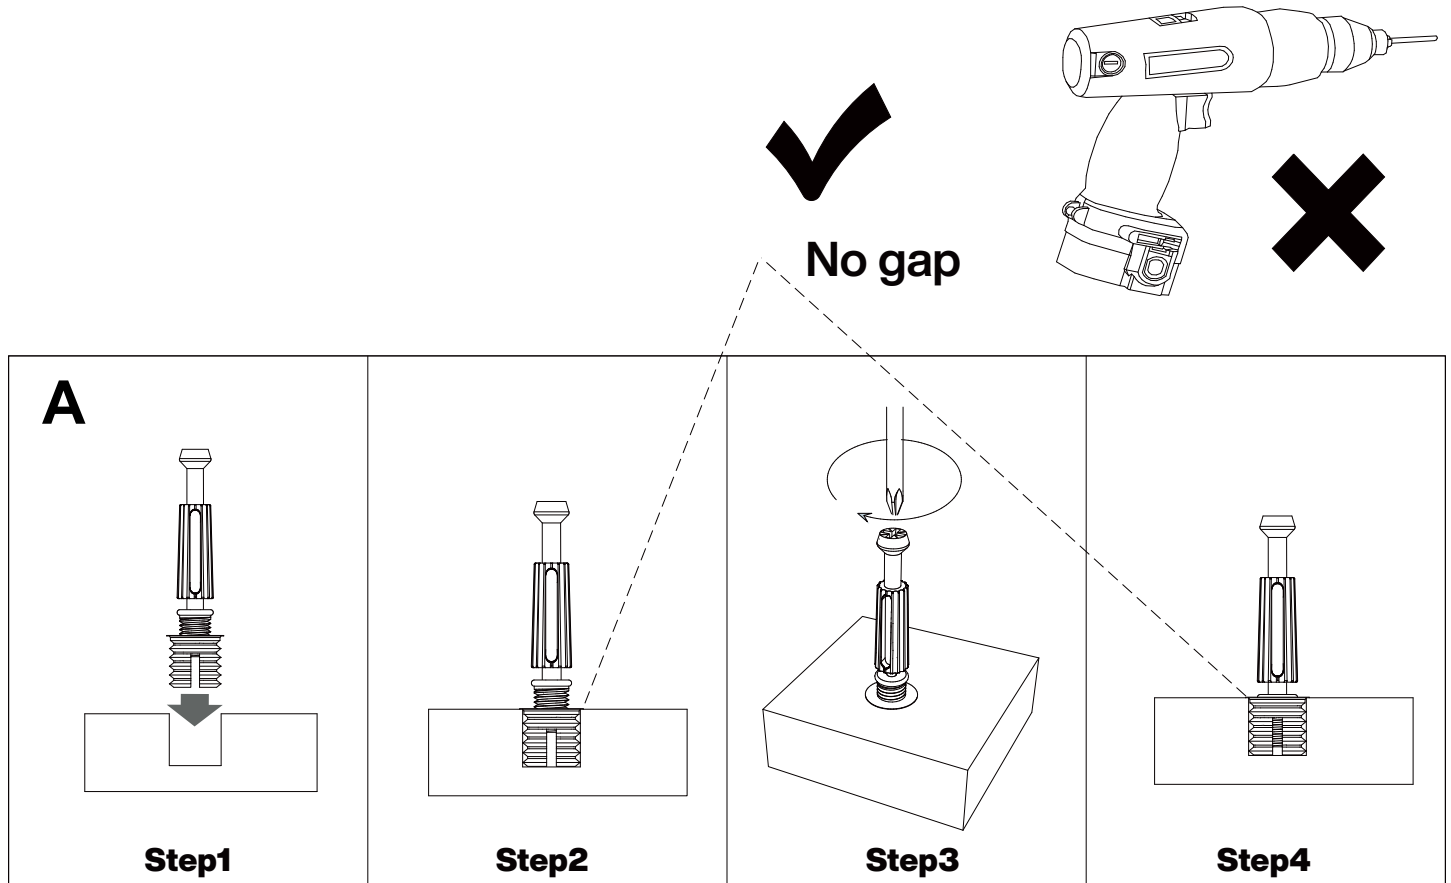


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

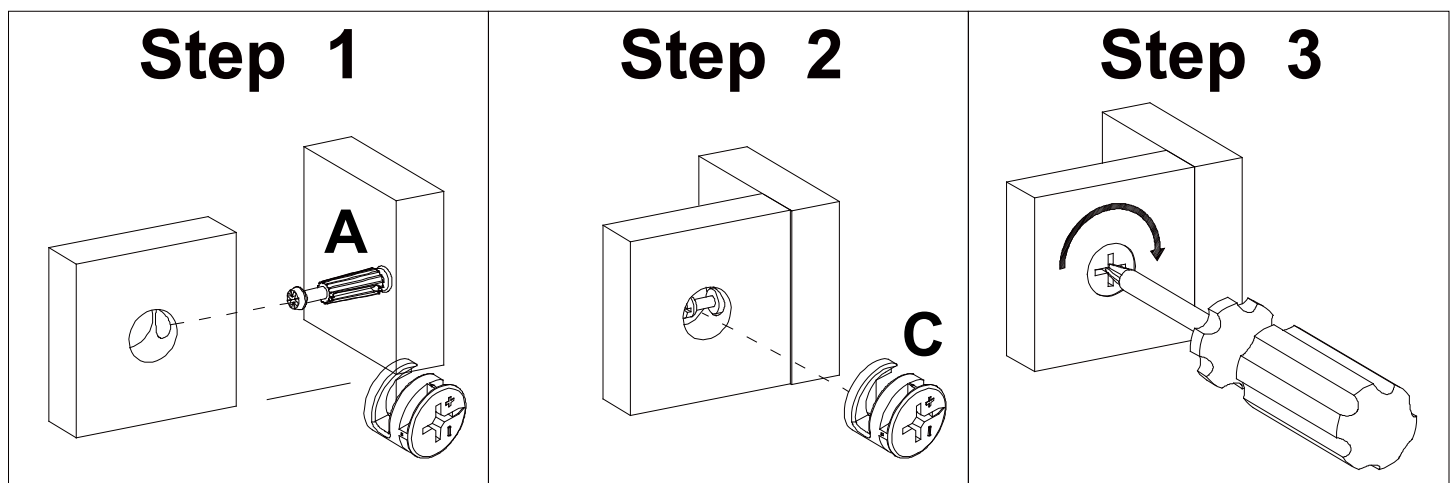


1

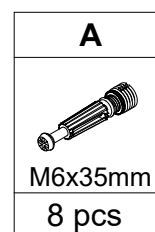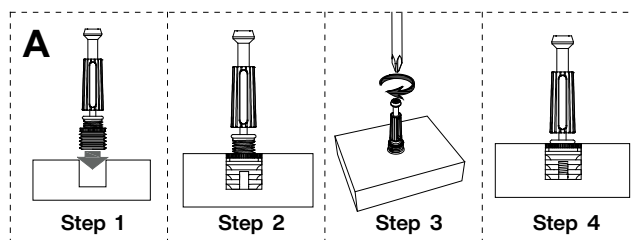


x2

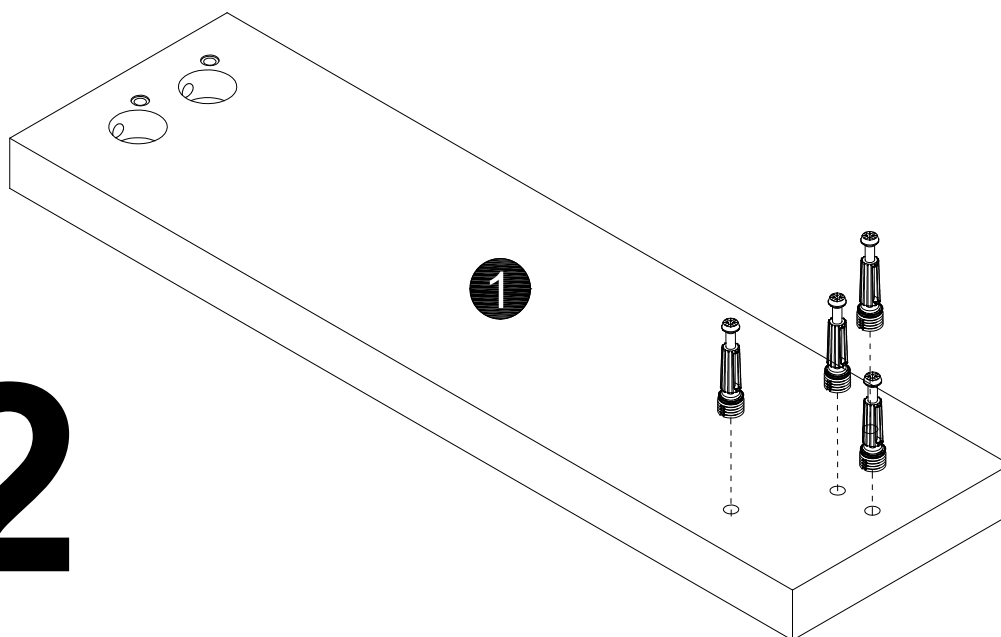


2

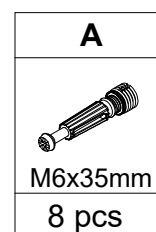



x2

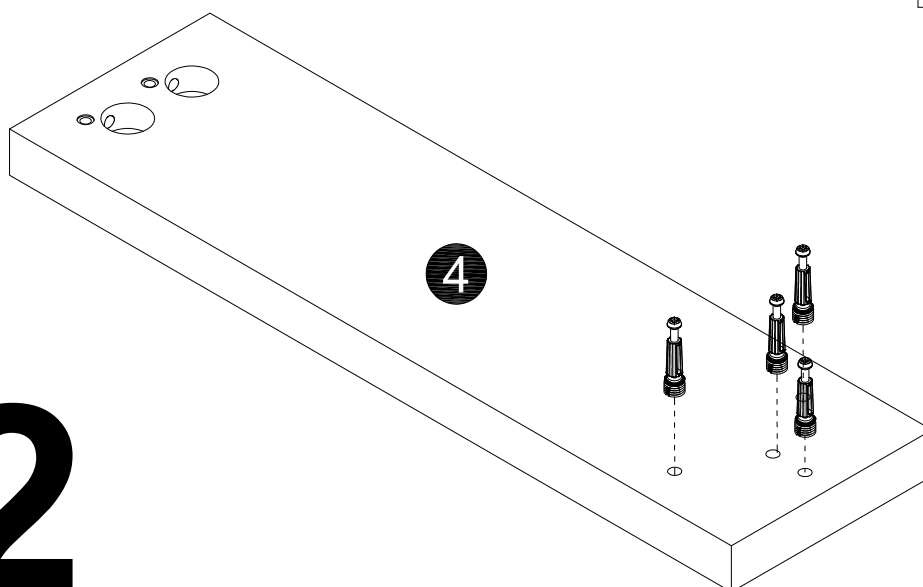


3

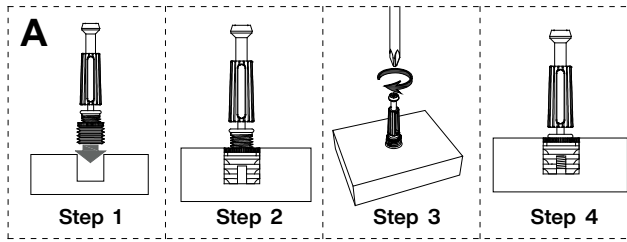

A	B
	
M6x35mm	Ø8x30mm
4 pcs	4 pcs

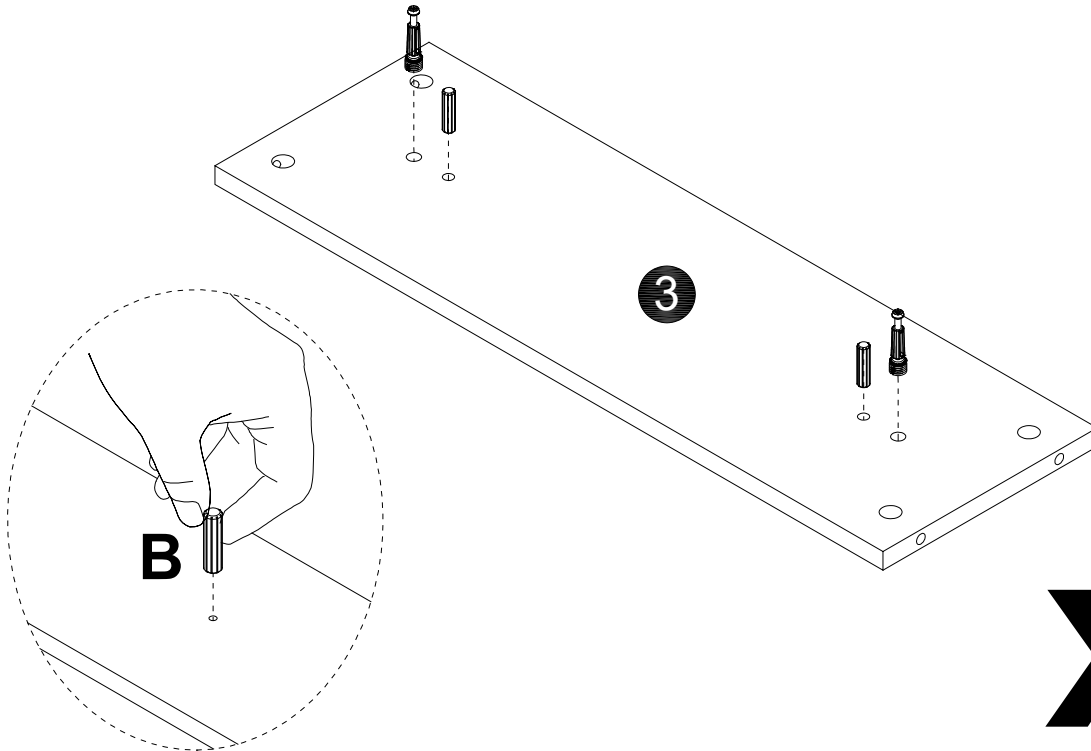


4

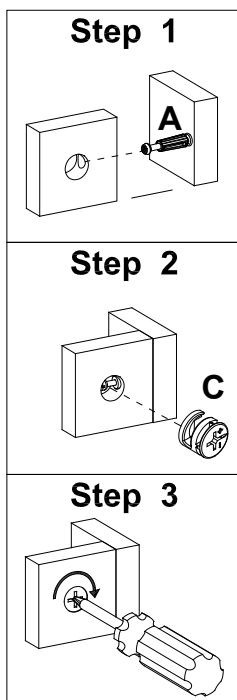


C

Ø15x12mm
4 pcs

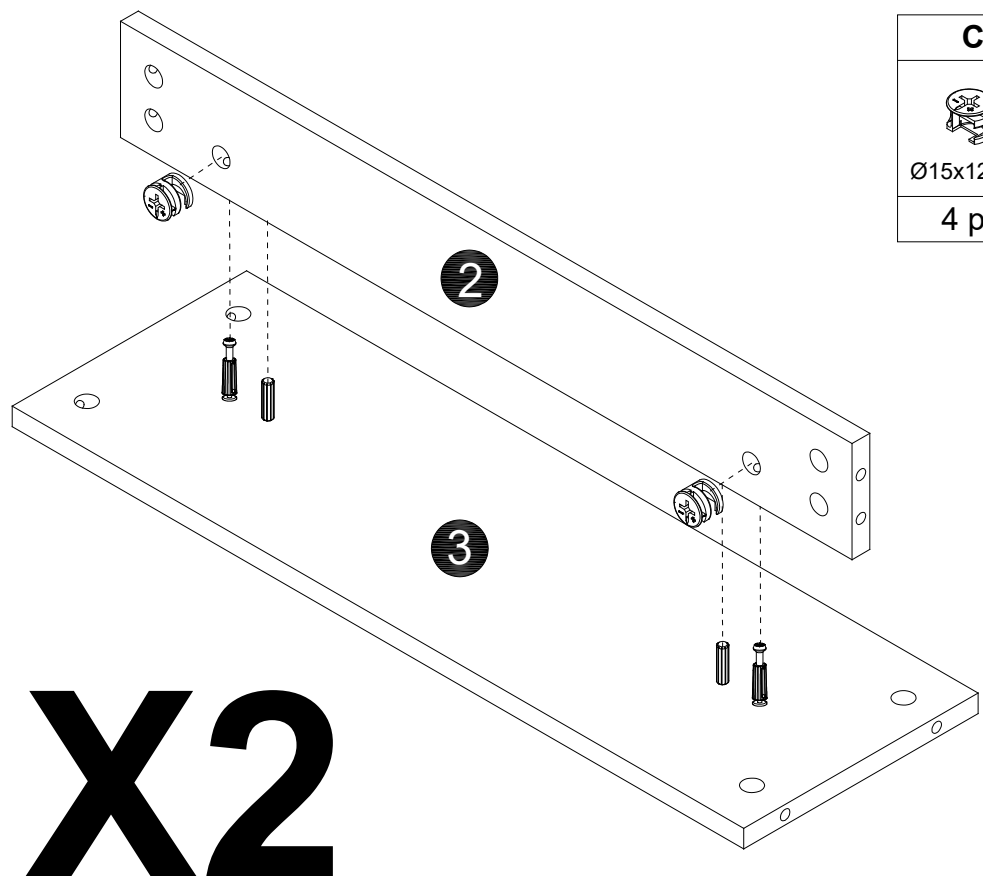


5

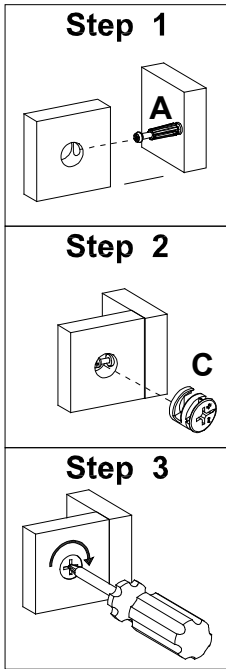


C

Ø15x12mm
8 pcs

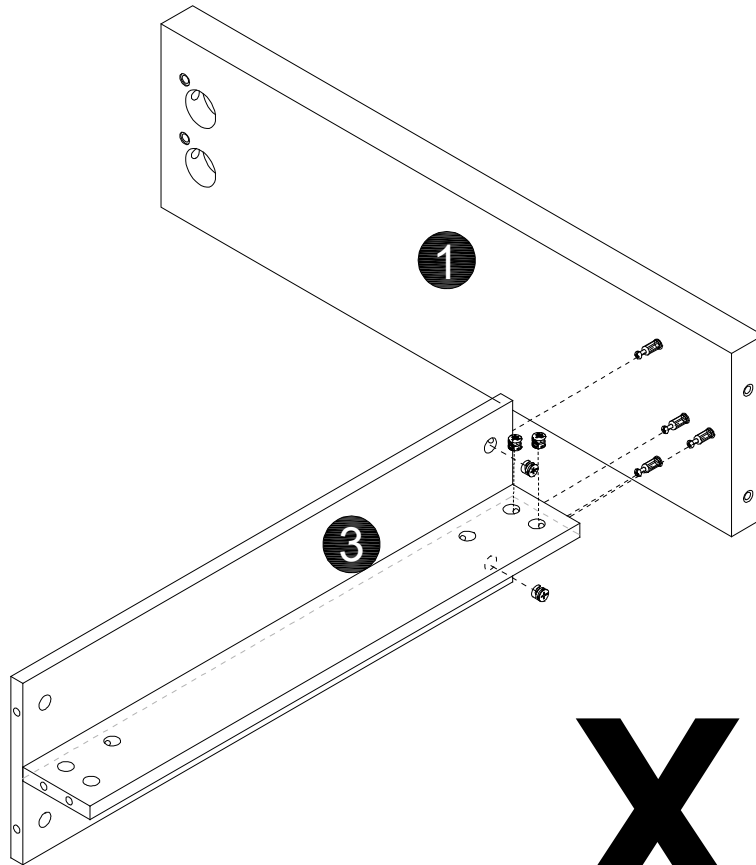

X2

6

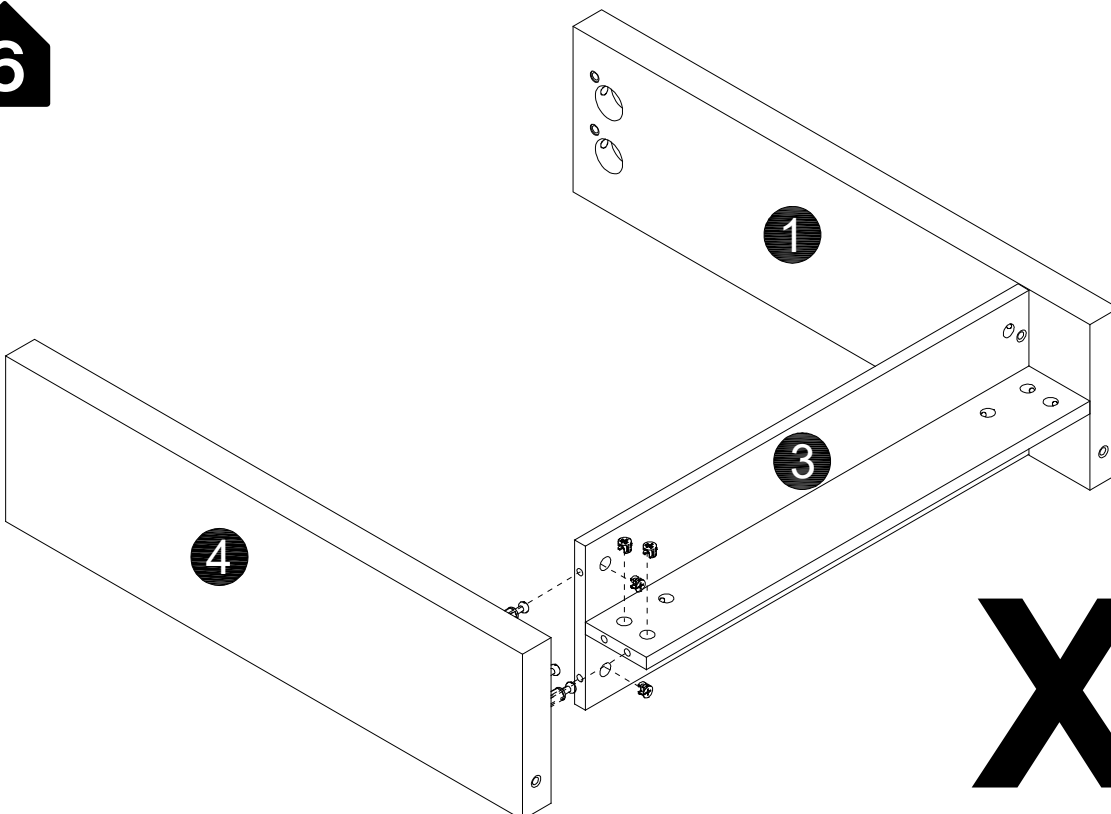


C

Ø15x12mm
8 pcs


X2

7

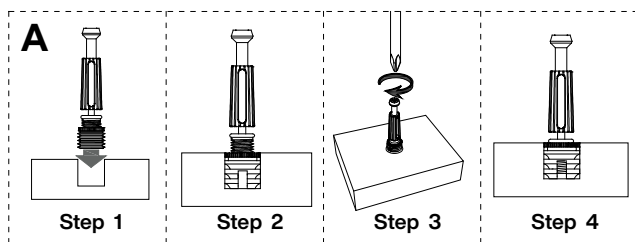



A


M6x35mm
8 pcs

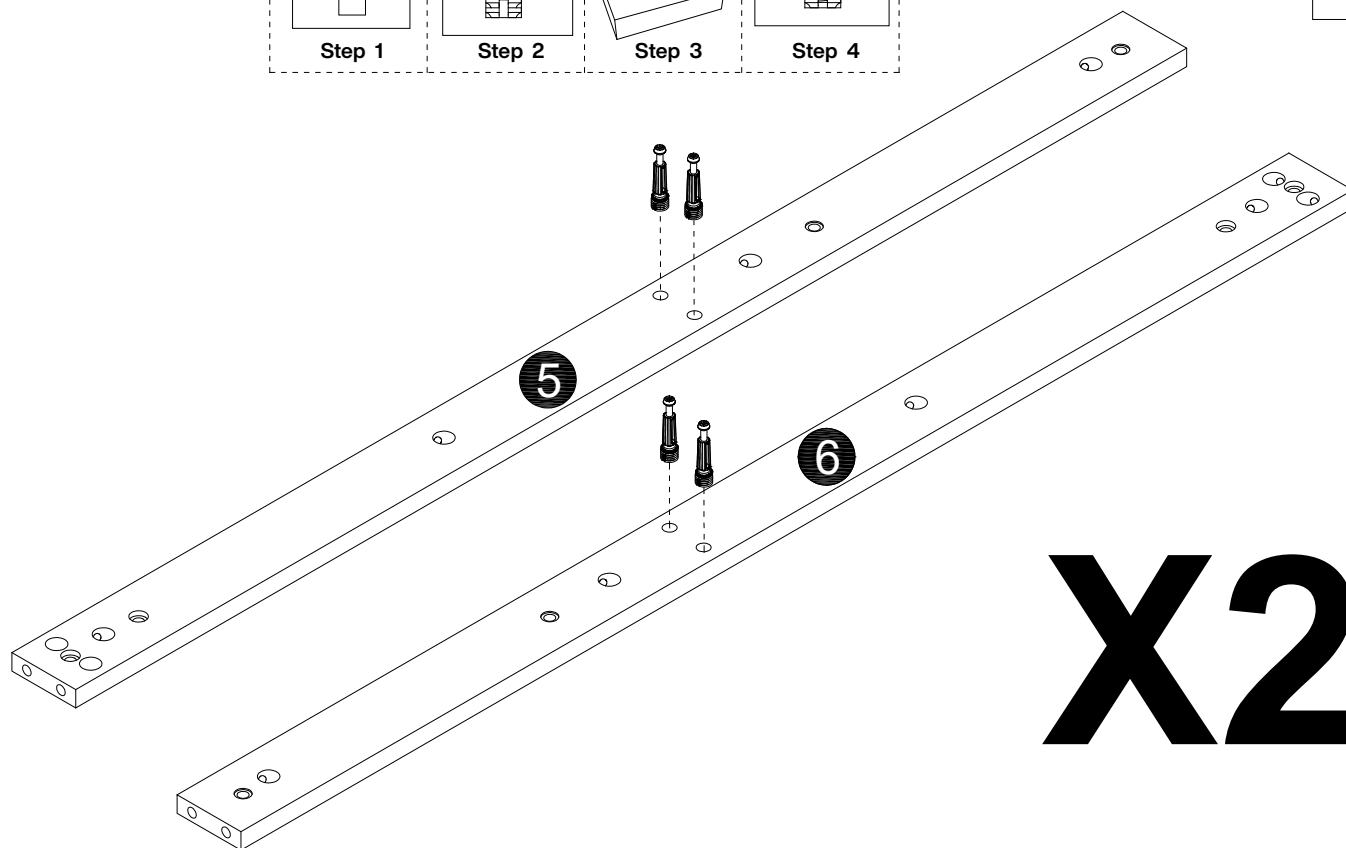




8

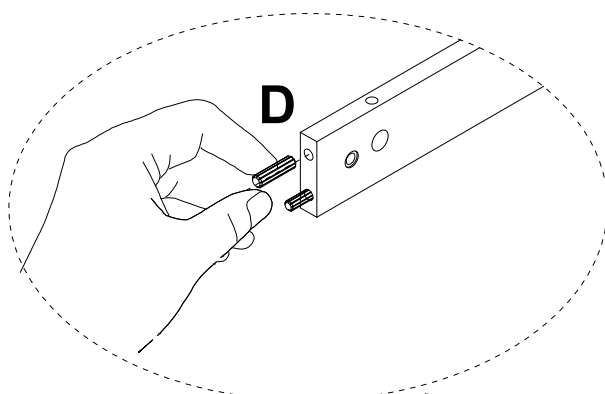




D

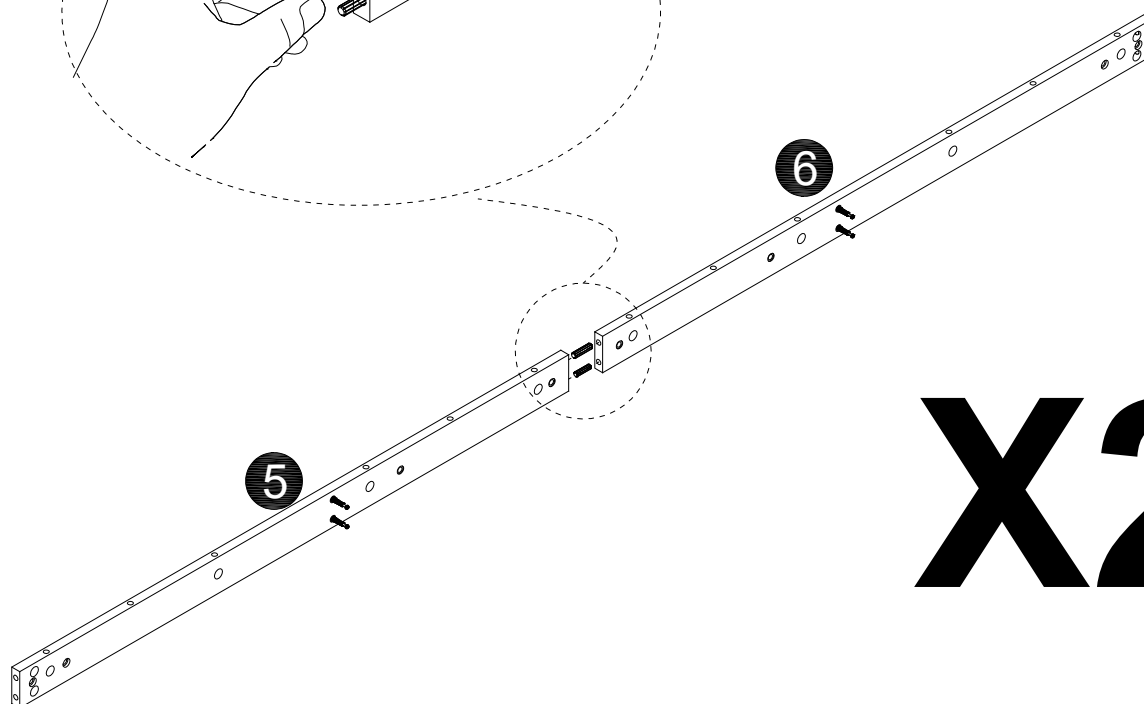Ø8x40mm
4 pcs

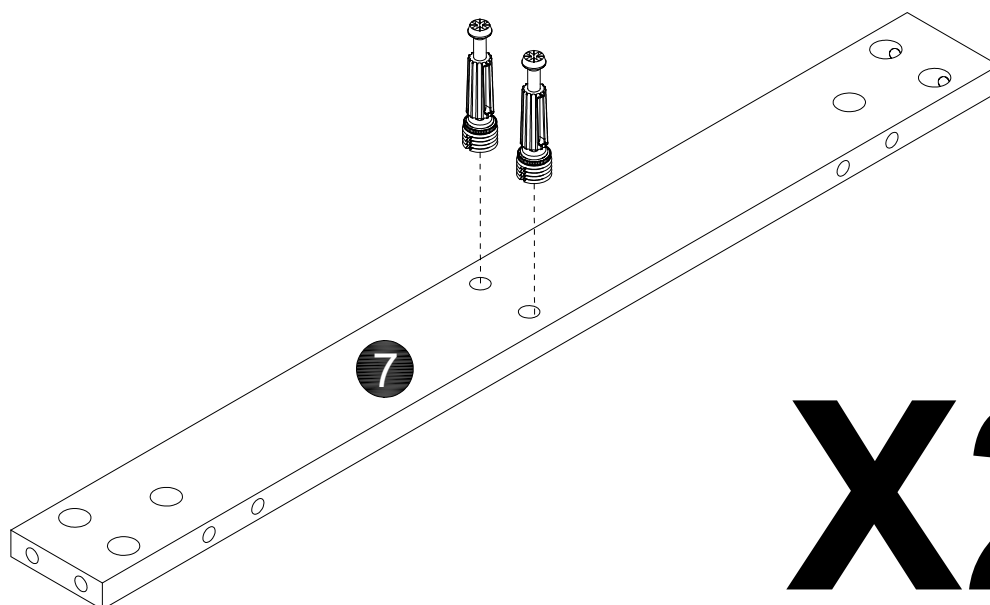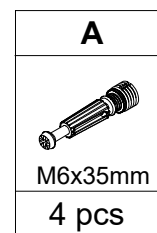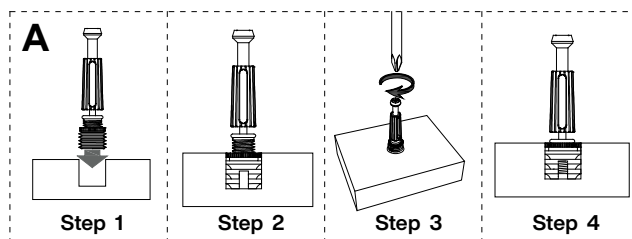




9

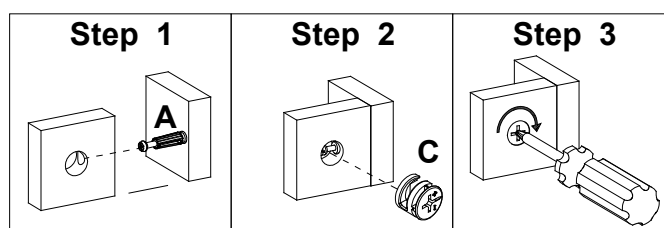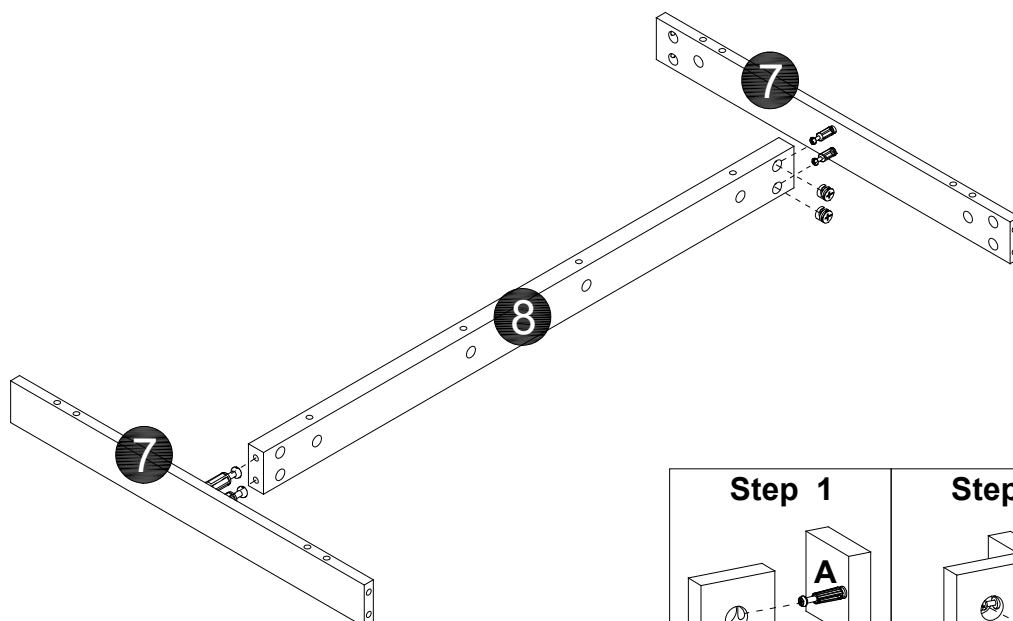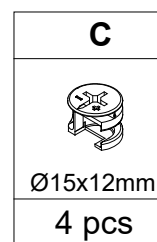



10






11

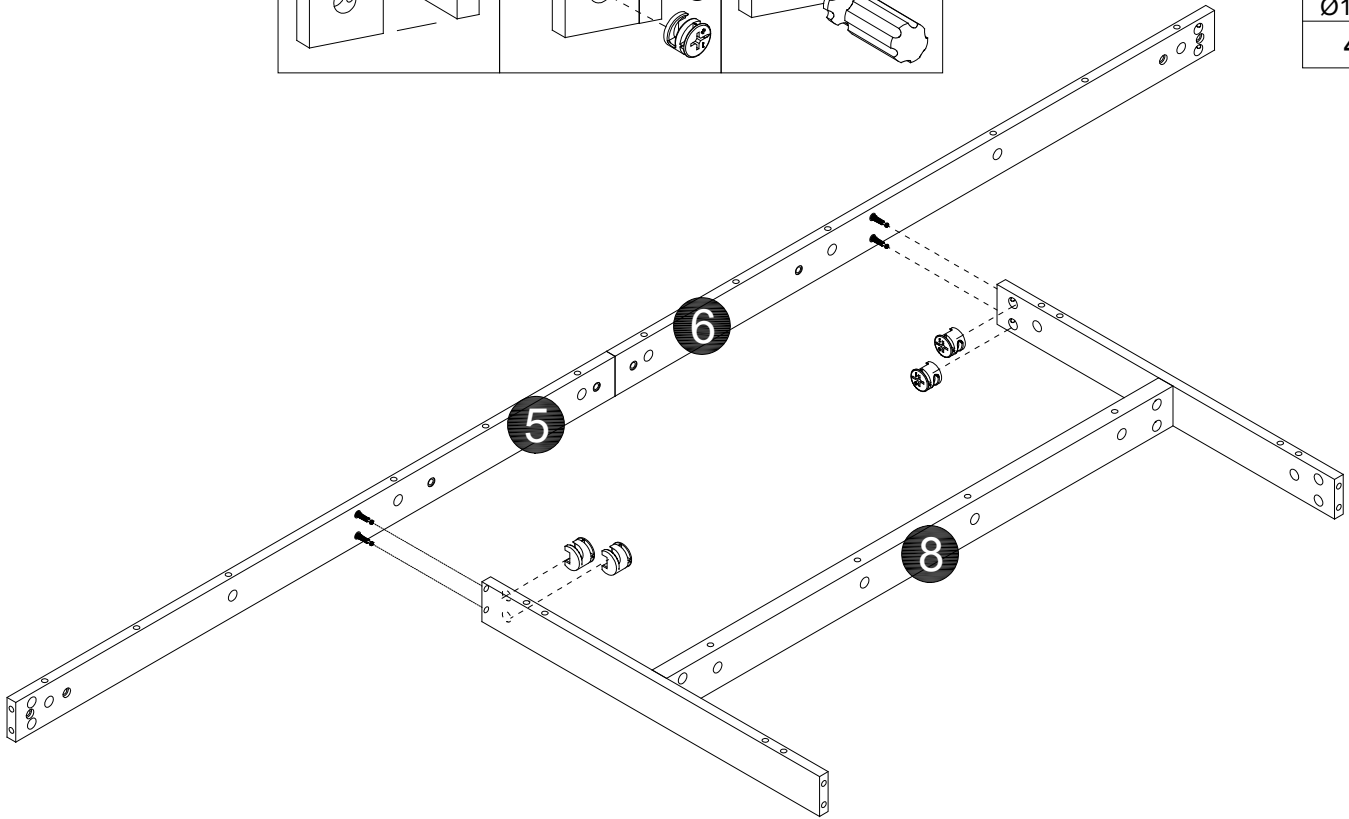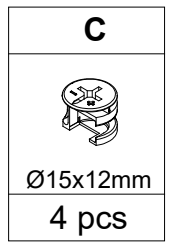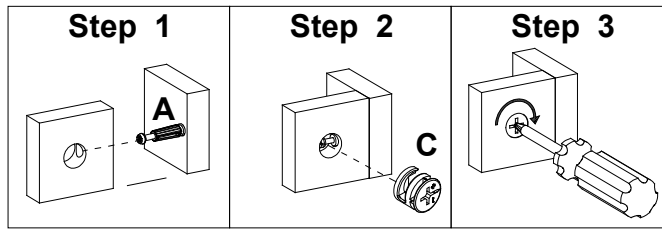




12

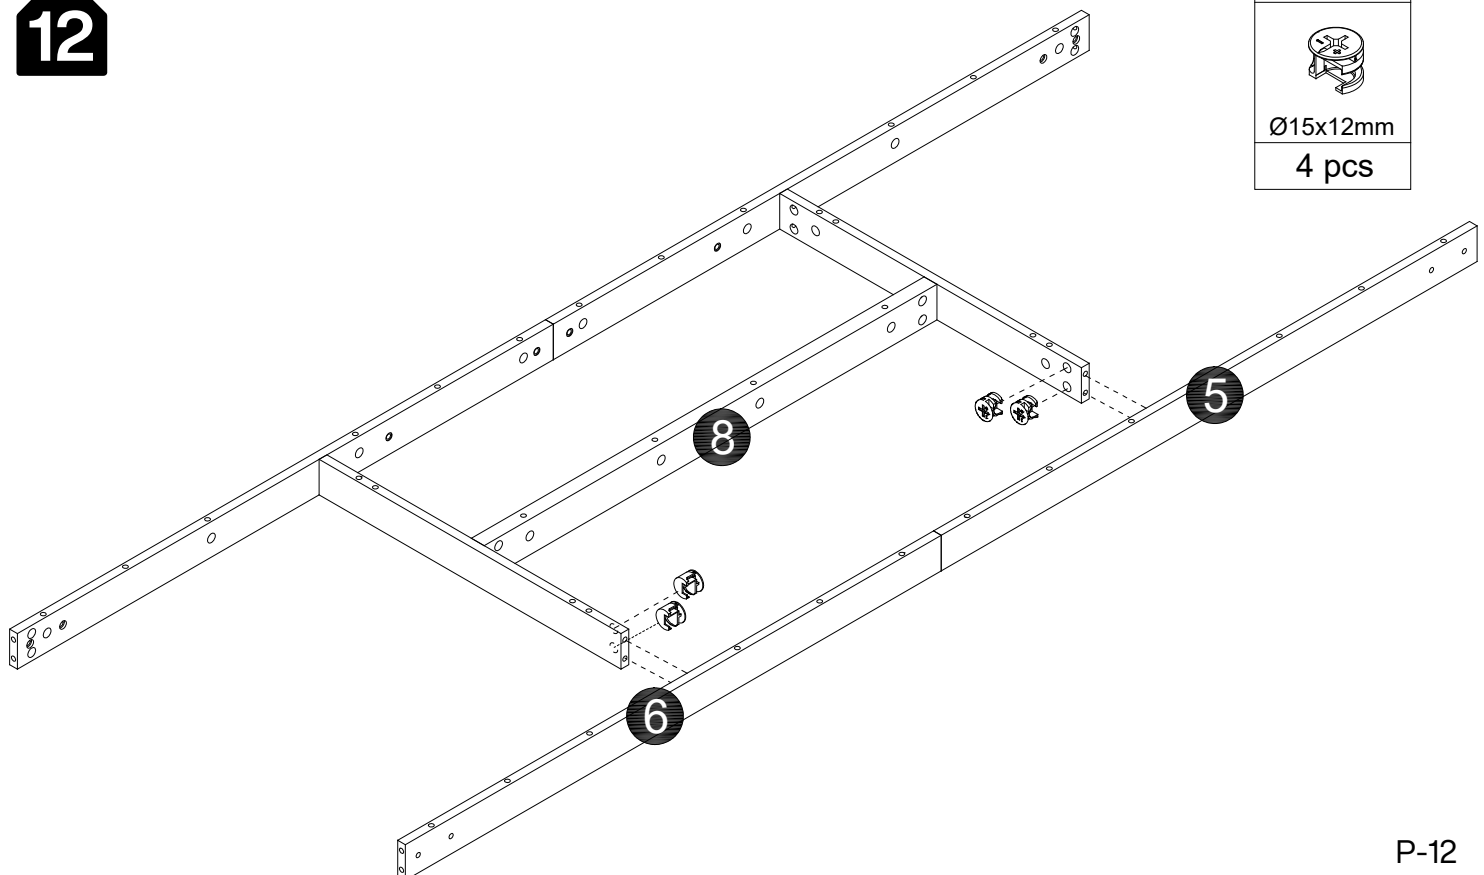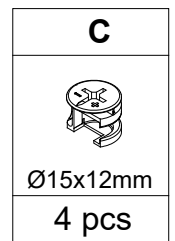


13

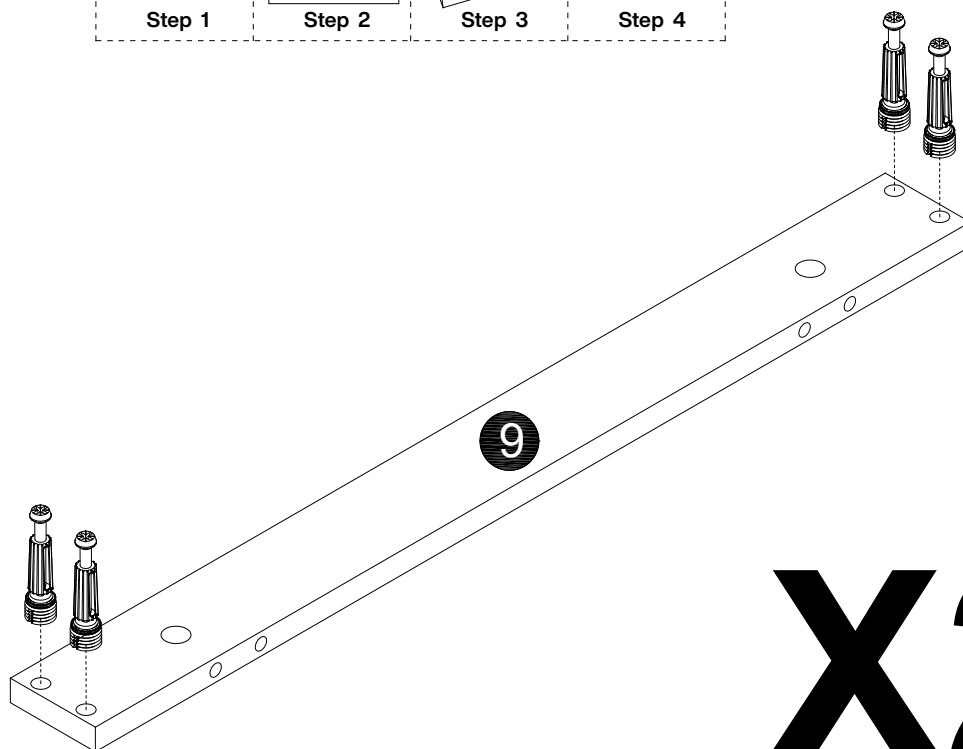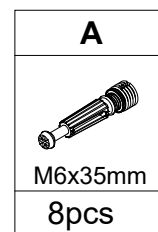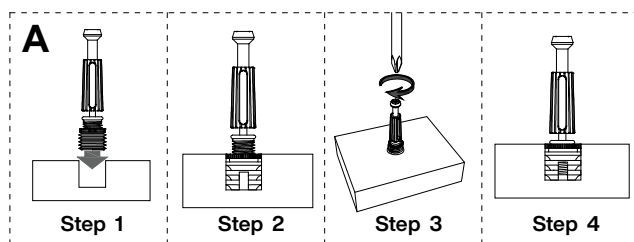

14

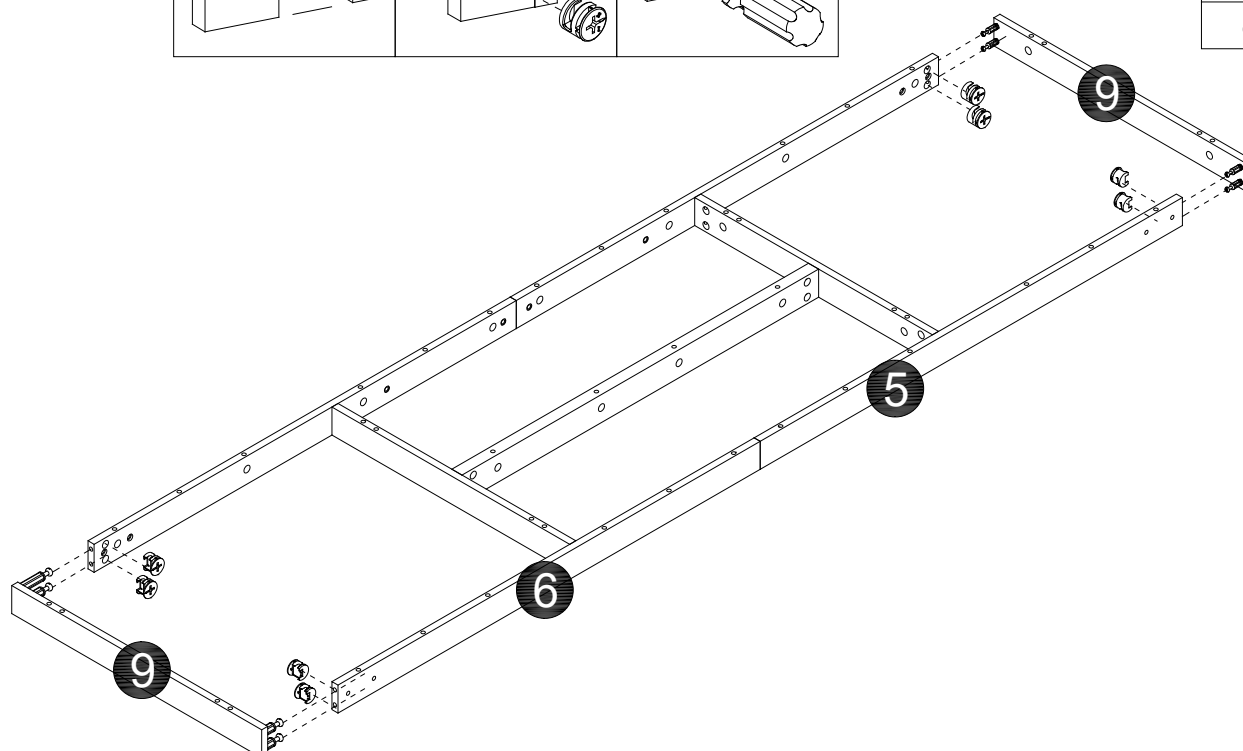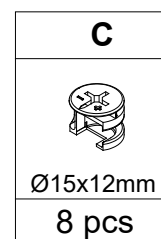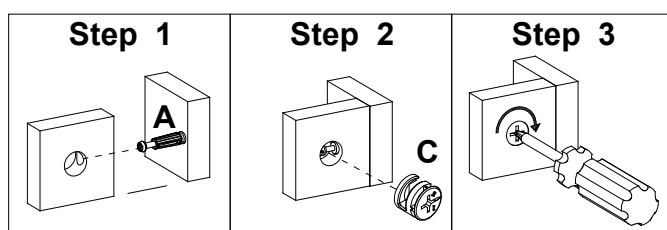

15

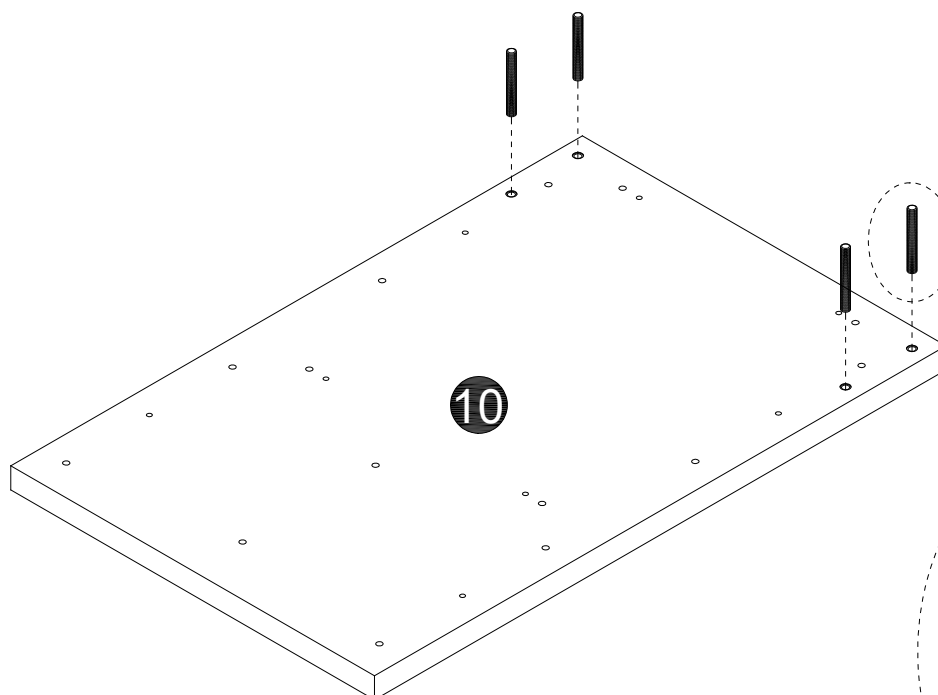



E



M8x75mm
8 pcs

X2


16

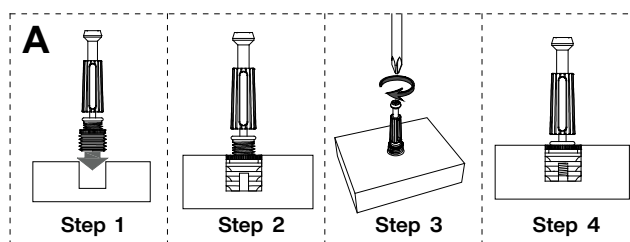


A	B
	
M6x35mm	Ø8x30mm
28 pcs	16 pcs

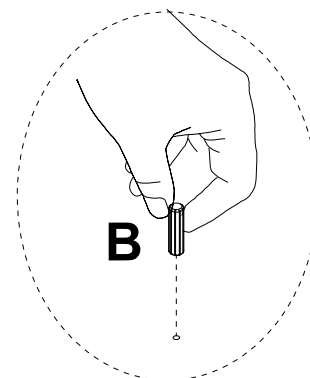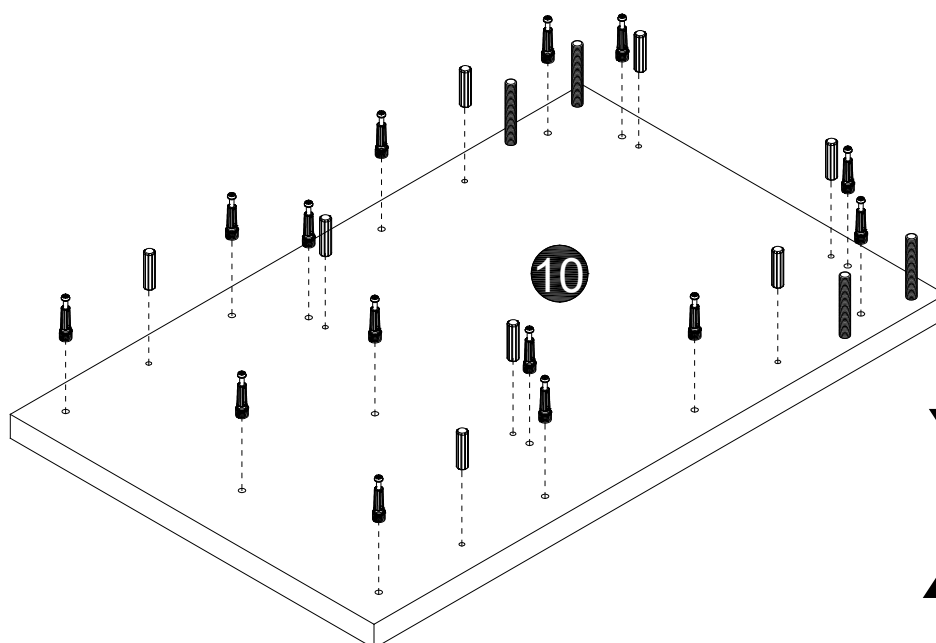


X2

F	G	H
		
1 pc	8 pcs	8 pcs


Step 1

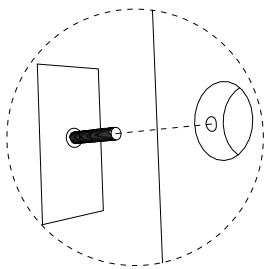


Step 2

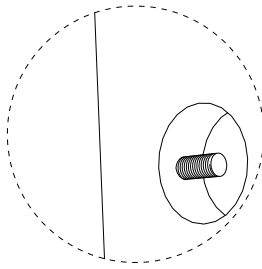



Step 3

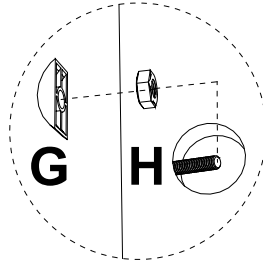



Step 4

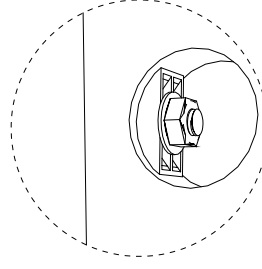


Step 5

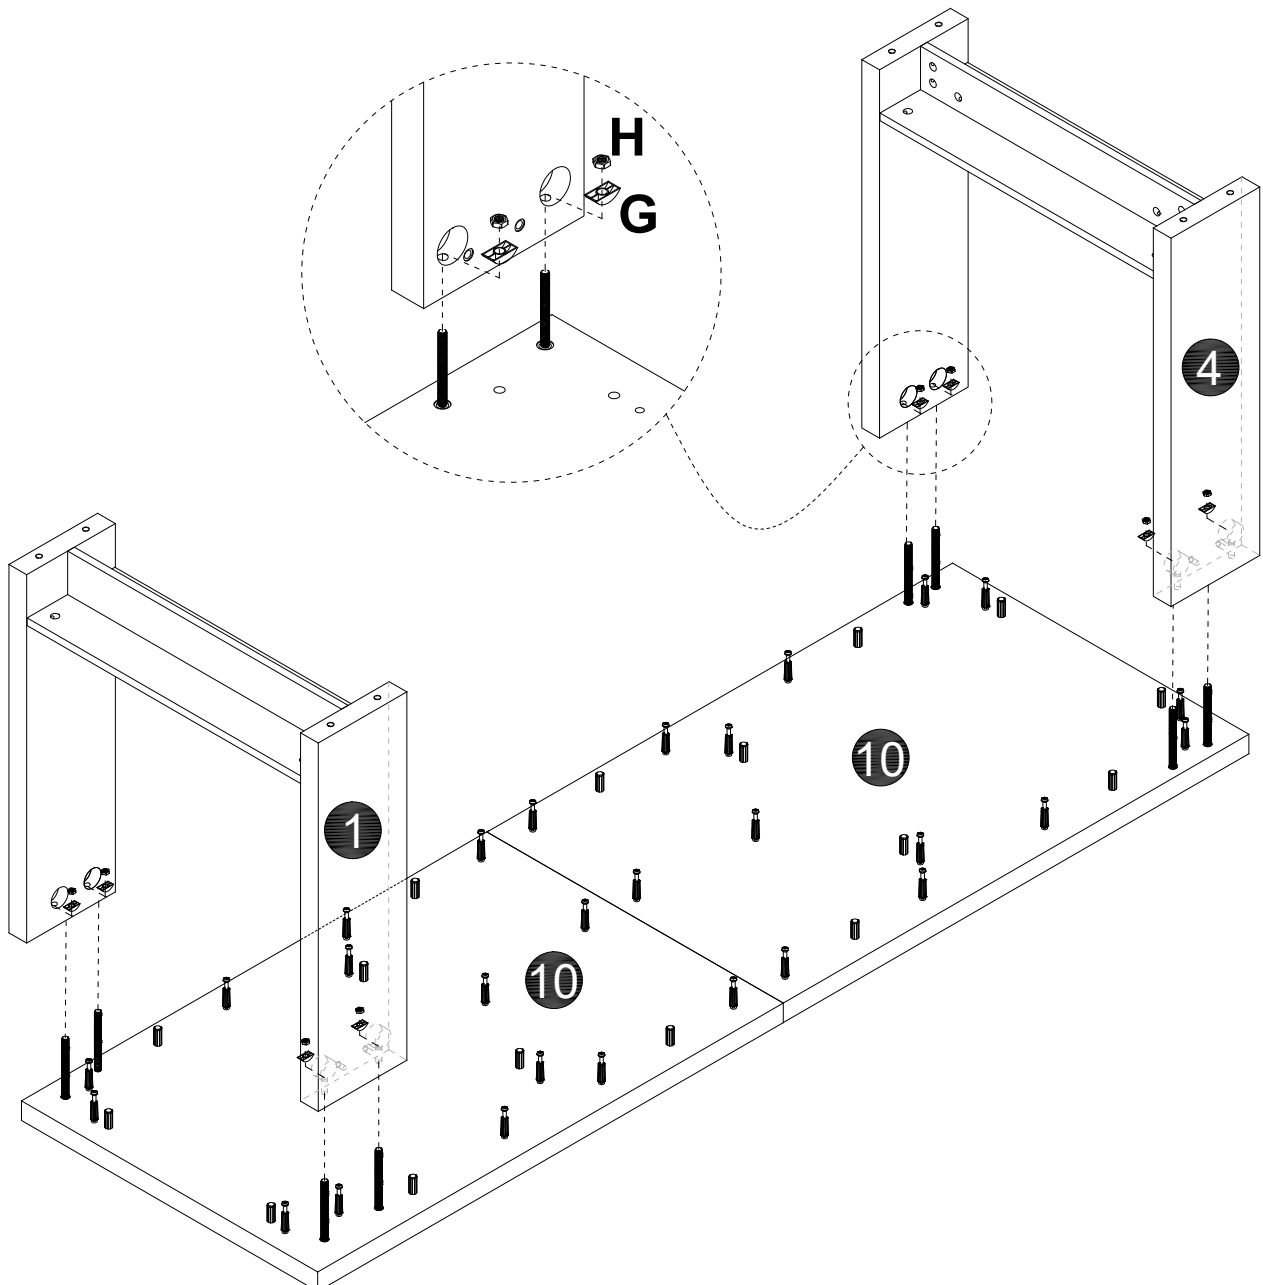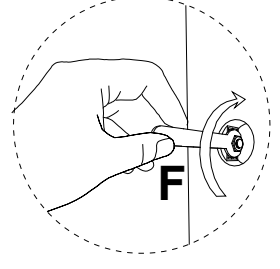


18

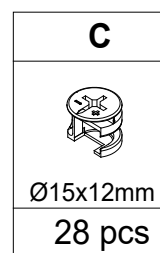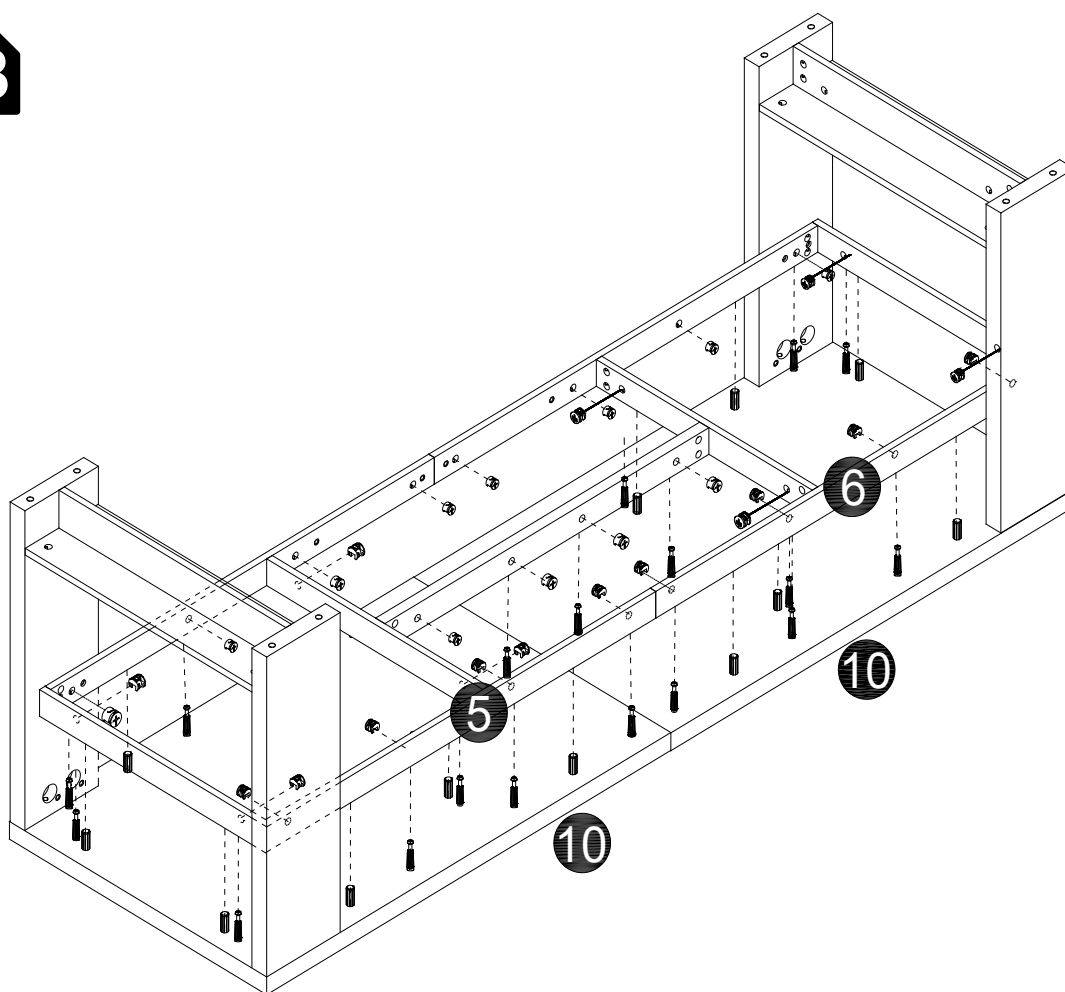


Step 1

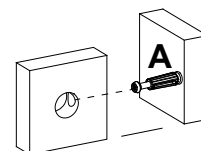



Step 2

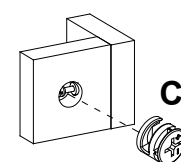


Step 3

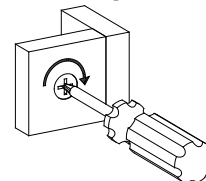


19

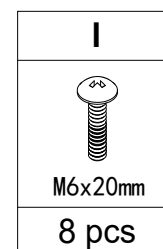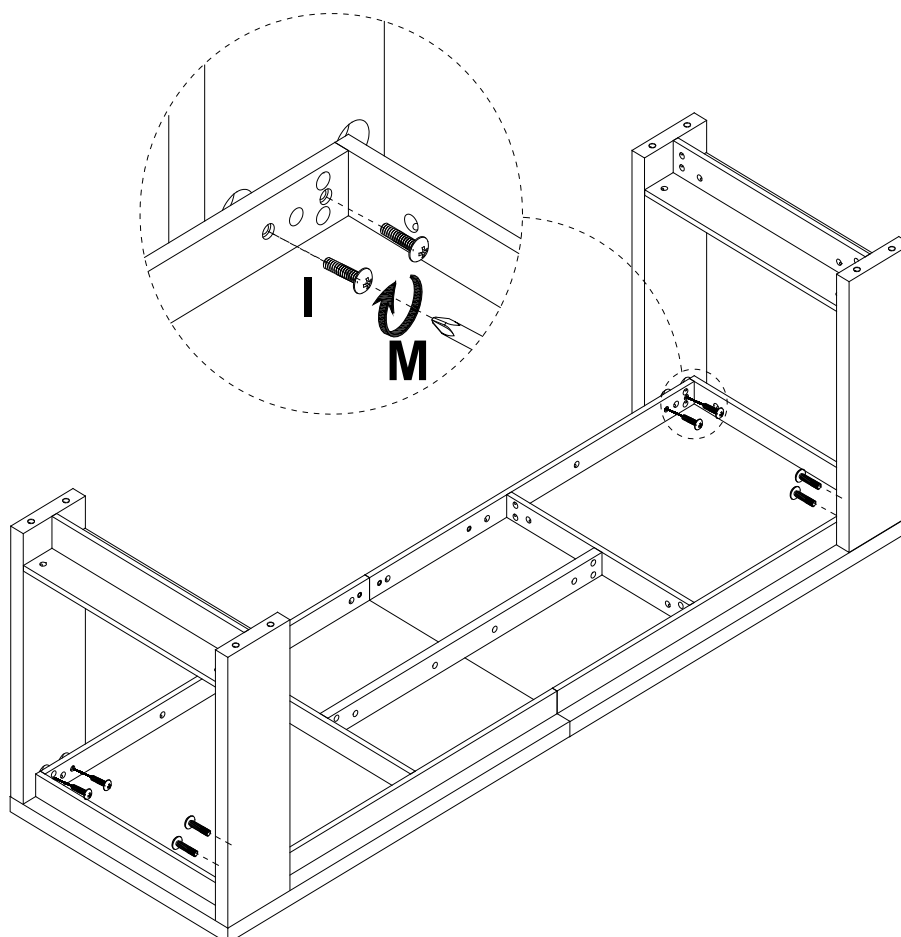


20

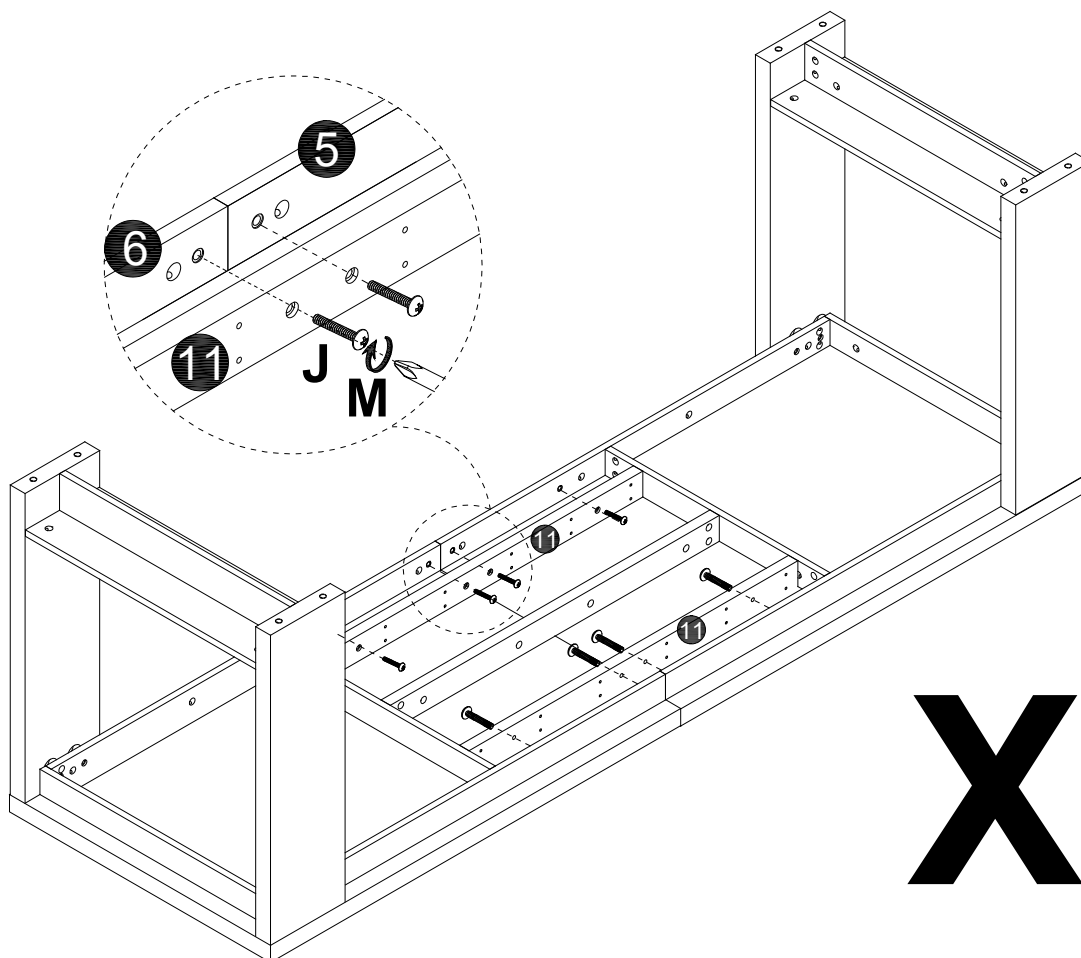

J

M6x30mm
8 pcs

X2


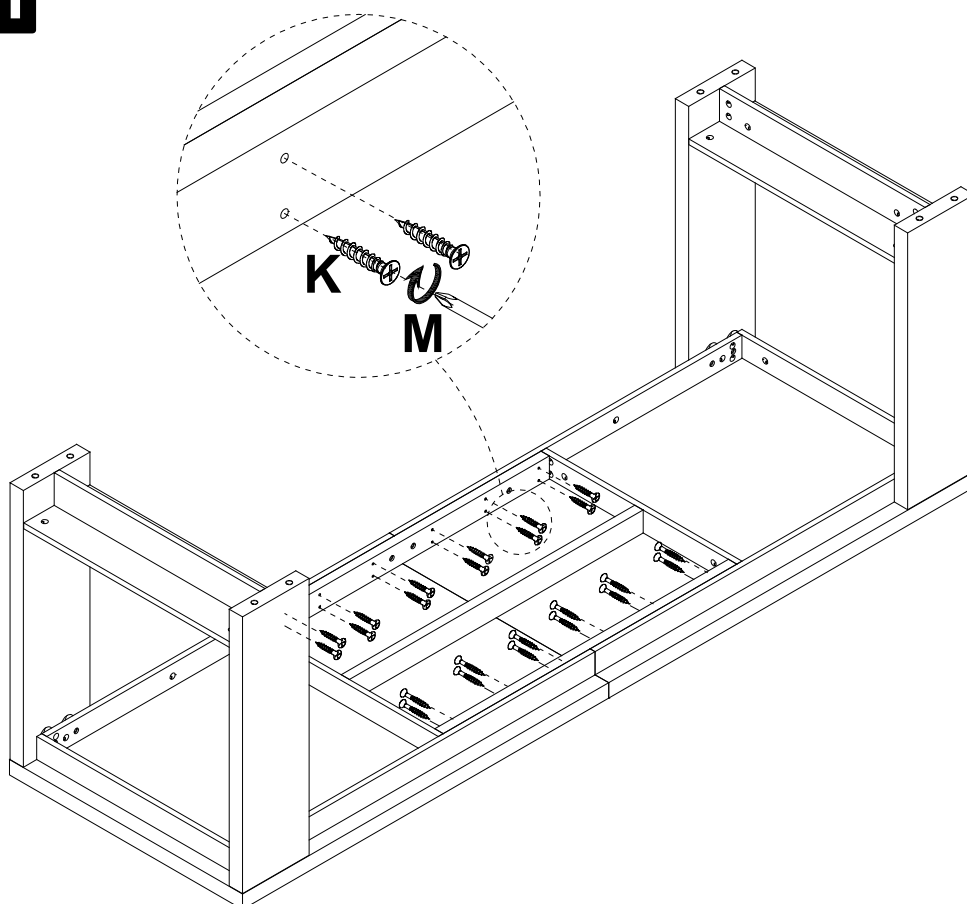
21



K

Ø3.5x35mm
24 pcs

22

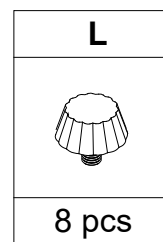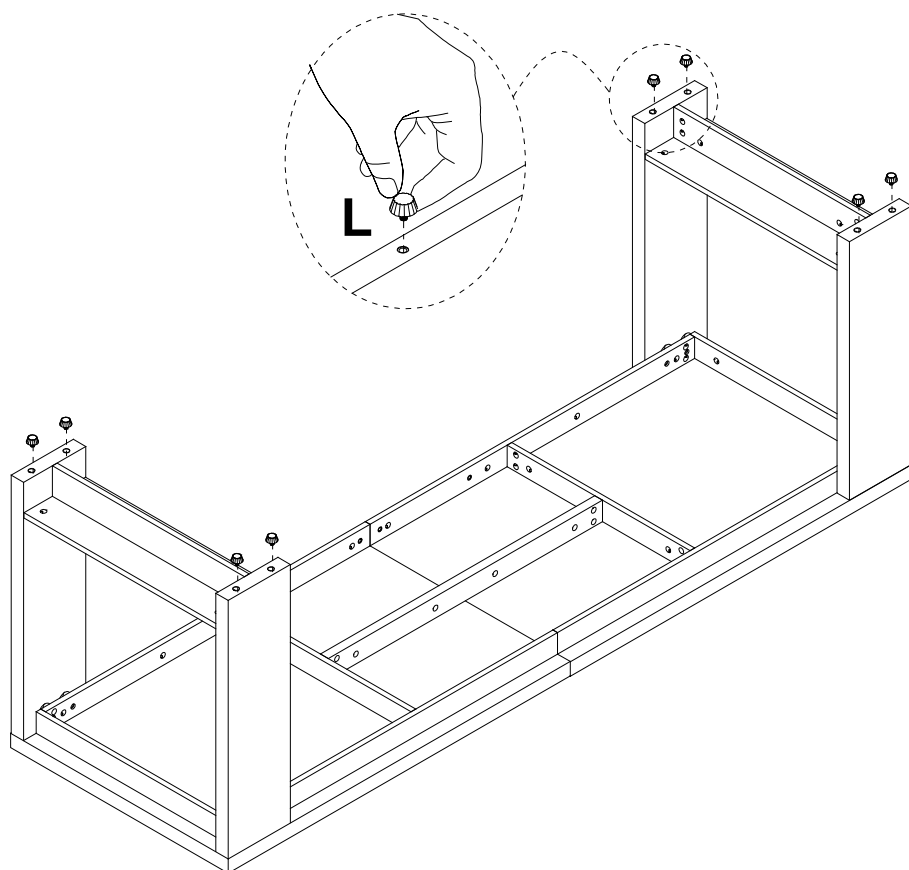

23

