ASSEMBLY INSTRUCTION


Read this instruction carefully. See hardware and furniture part list For guidance. Be sure all part is complete, before you start assembling, Place all wooden part on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTION:


- 1.Do not FULLY TIGHTEN the nut or bolt untill all nut or bolt is ready assembled.
- 2.Do not OVER TIGHTEN the nut or bolt to aviod causing damages to the thread.
- 3. Keep all hardware part out of reach of children.

PART LIST				
NO.	DESCRIPTION	QTY.		
Α	BACK REST	1 PC		
В	CUSHION SEAT UPHOLSTRY	1 PC		
С	FRONT LEG (LEFT)	1 PC		
D	FRONT LEG (RIGHT)	1 PC		
E	STRETCHER (LEFT)	1 PC		
F	STRETCHER (RIGHT)	1 PC		
G	FRONT STRETCHER	1 PC		

HARDWARE LIST				
NO.	DESCRIPTION	QTY.		
Н	JCBC M6 x 40mm	2 PCS		
1	JCBC M6 x 50mm	4 PCS		
J	JCBC M6 x 80mm	4 PCS		
K	SPRING WASHER 1/4"	10 PCS		
L	FLAT WASHER 1/4"	10 PCS		
М	ALLEN KEY M4	1 PC		
N	CSK M4 x 45mm	6 PCS		

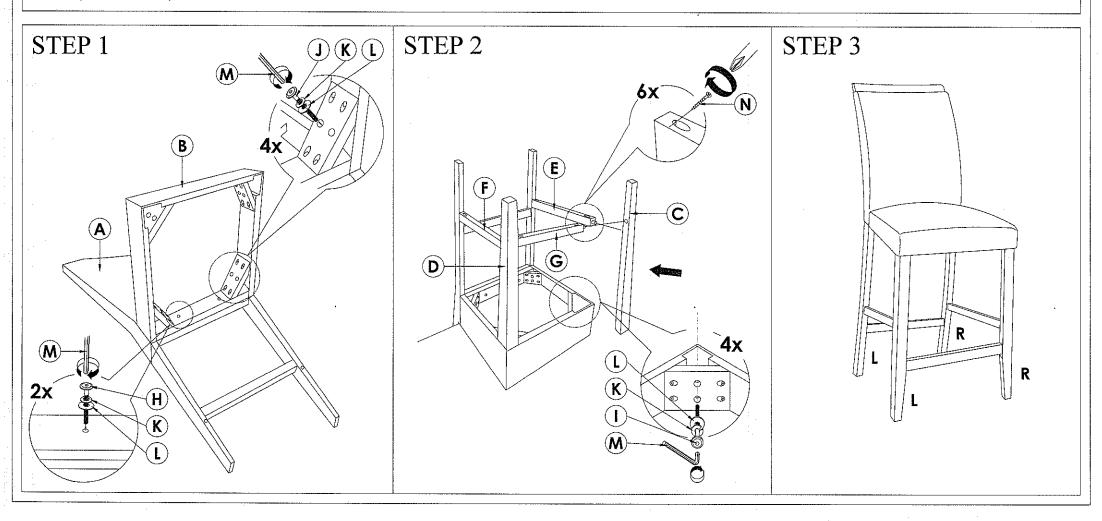


ASSEMBLY INSTRUCTION

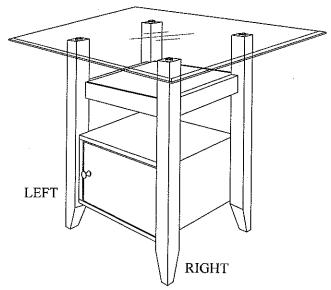


PART LIST		
NO.	DESCRIPTION	QTY.
Α	GLASS TOP	1 PC
В	TABLE LEG FRAME (LEFT)	1 PC
С	TABLE LEG FRAME (RIGHT)	1 PC
D	TOP PANEL	1 PC
E	BOTTOM PANEL	1 PC
F	FRONT & REAR RAIL	2 PCS
G	BACK PANEL	1 PC
Н	DOOR	1 PC
I	SHELF	1 PC

HARDWARE LIST			
NO.	DESCRIPTION	QTY.	
J	JCBC M6 x 50MM	4 PCS	
K	SPRING WASHER M6	4 PCS	
L	ALLEN KEY (LONG)	1 PC	
М	BOLT	8 PCS	
N	MINIFIX	8 PCS	
0	MAGNET	1 PC	
Р	HANDLE	1 PC	
Q	PAN HEAD SCREW M4 x 22MM	1 PC	
R	DOOR SPRING	2 PCS	
S	GLASS SUPPORT Ø38 x 10MM	4 PCS	
T.	INSERT BOLT M6 x 20MM	4 PCS	

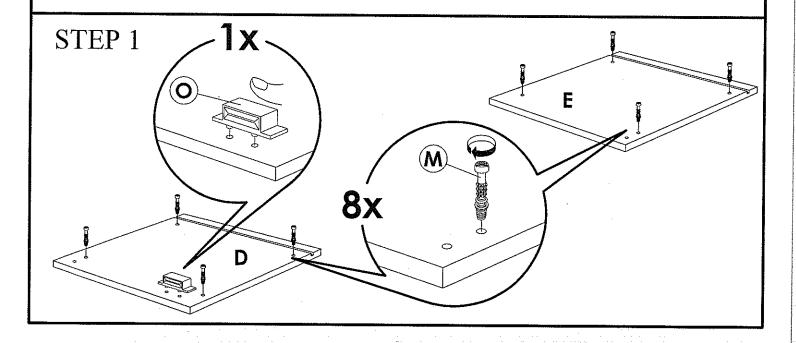


STEP 2

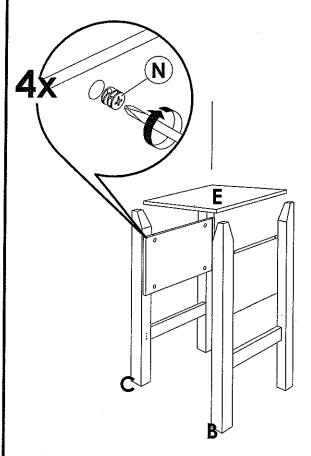

Upside down Table Leg Frame (B) & (C). Attach the Bottom Panel (E) as shown.

STEP 3


IMPORTANT!!
DO NOT
TIGHTEN ALL
THE SCREWS
UNTIL STEP 5.

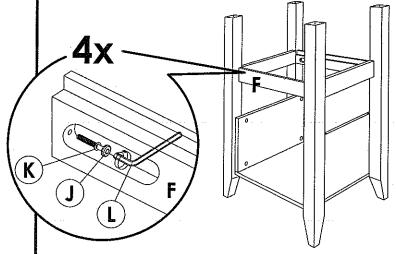

Turn over the Leg Frames with Bottom Panel to the Upright Position. Insert Front And Rear Rail (F).


STEP 4

BACK VIEW

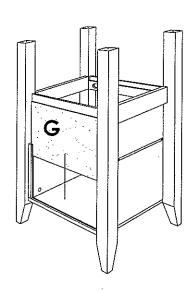


Insert Back Panel (G) to the grooves.

STEP 5

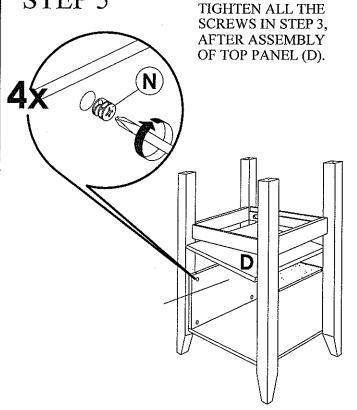

Insert Top Panel (D) as shown CAREFULLY!

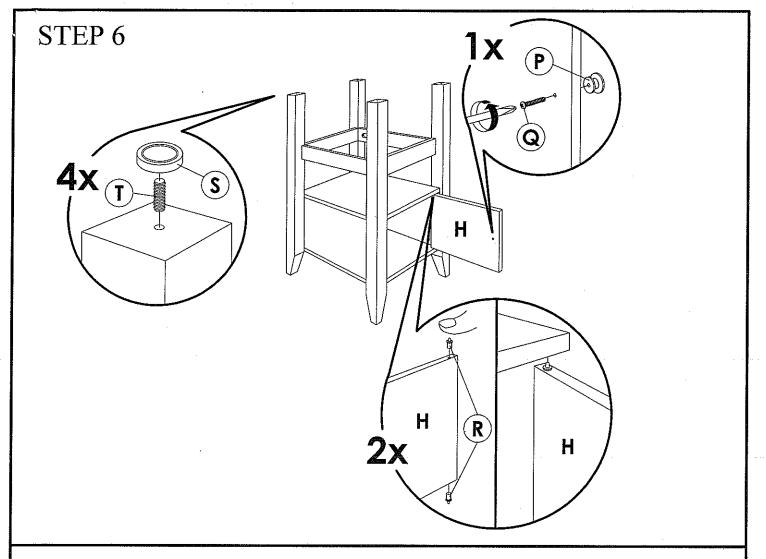

STEP 7

