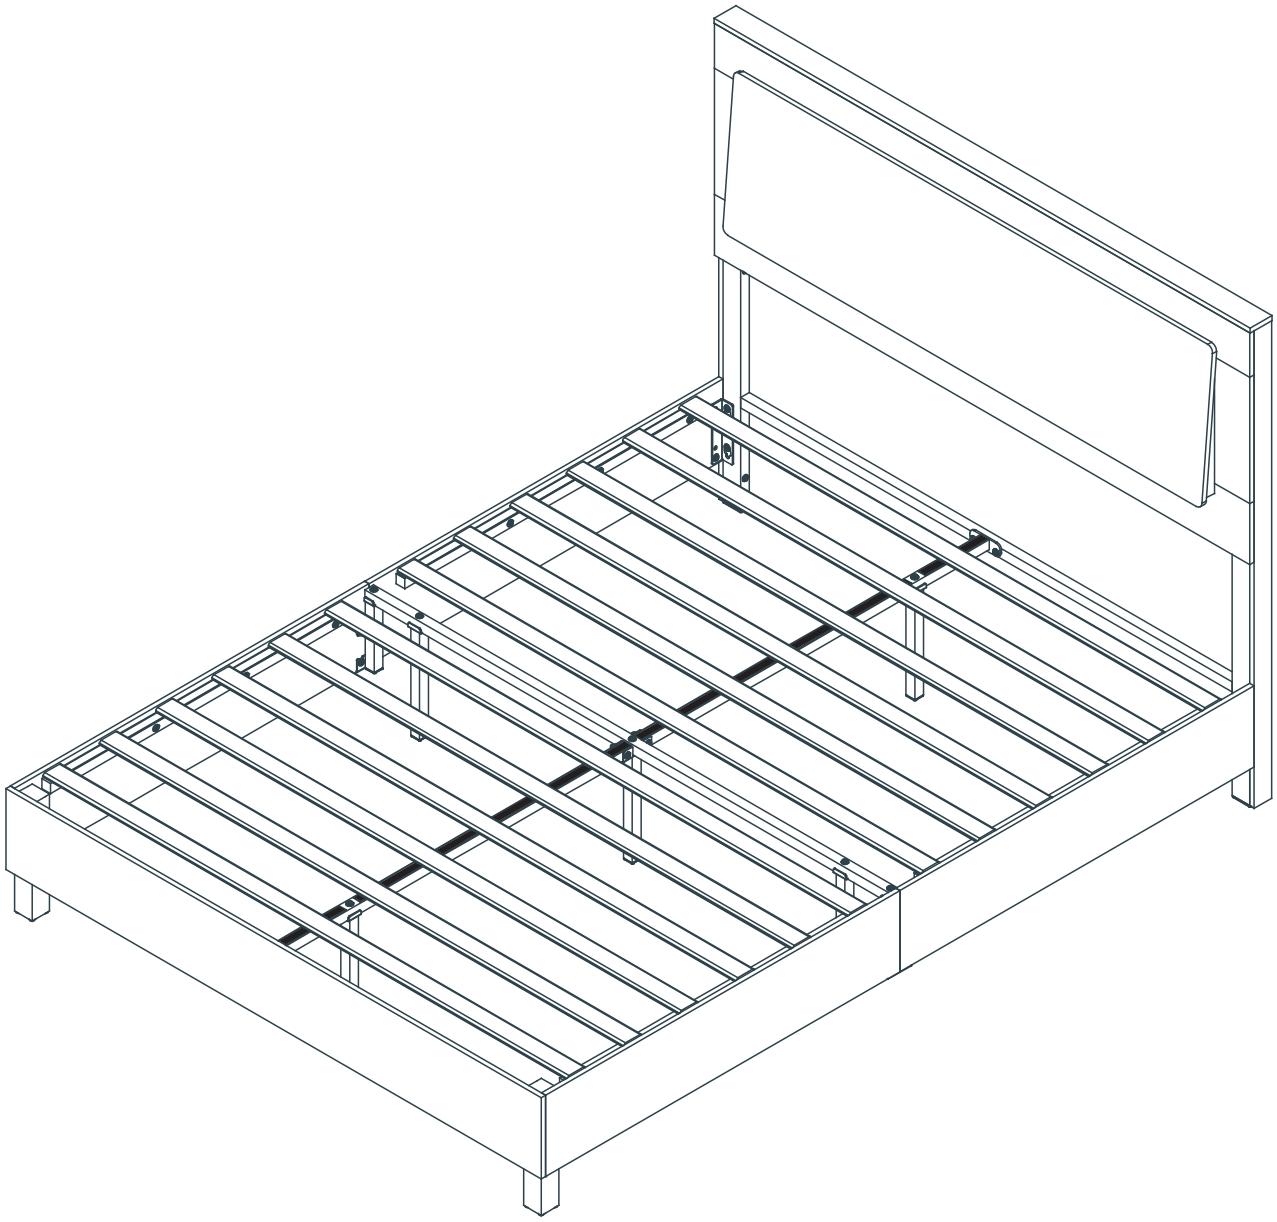
Panel Bed

Assembly Instructions



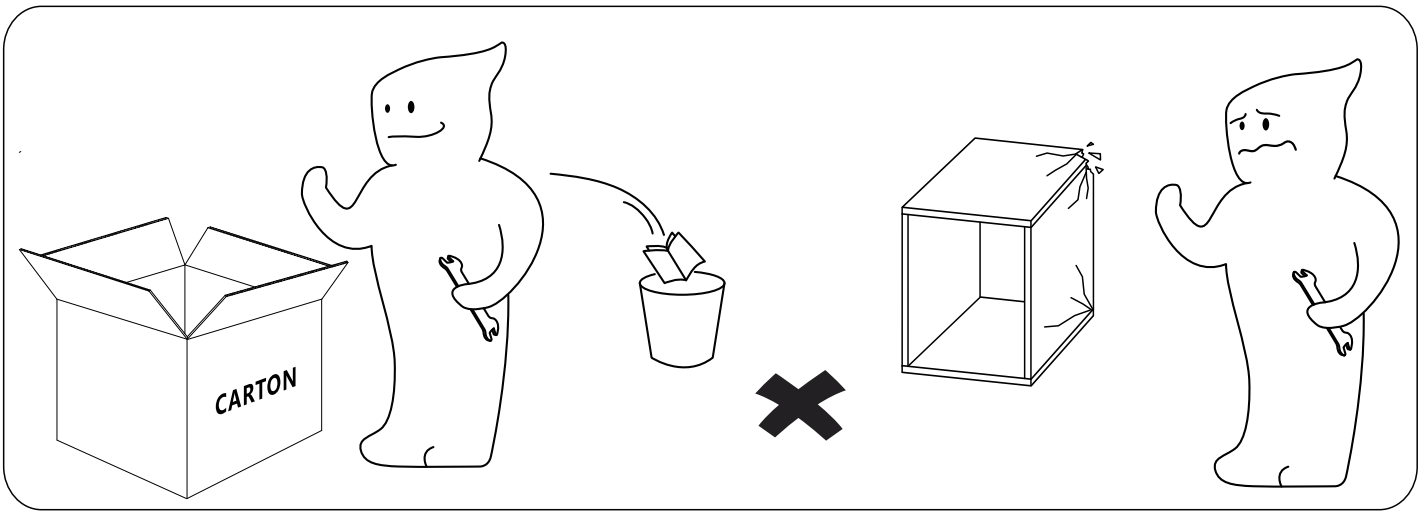
Dear Customers,

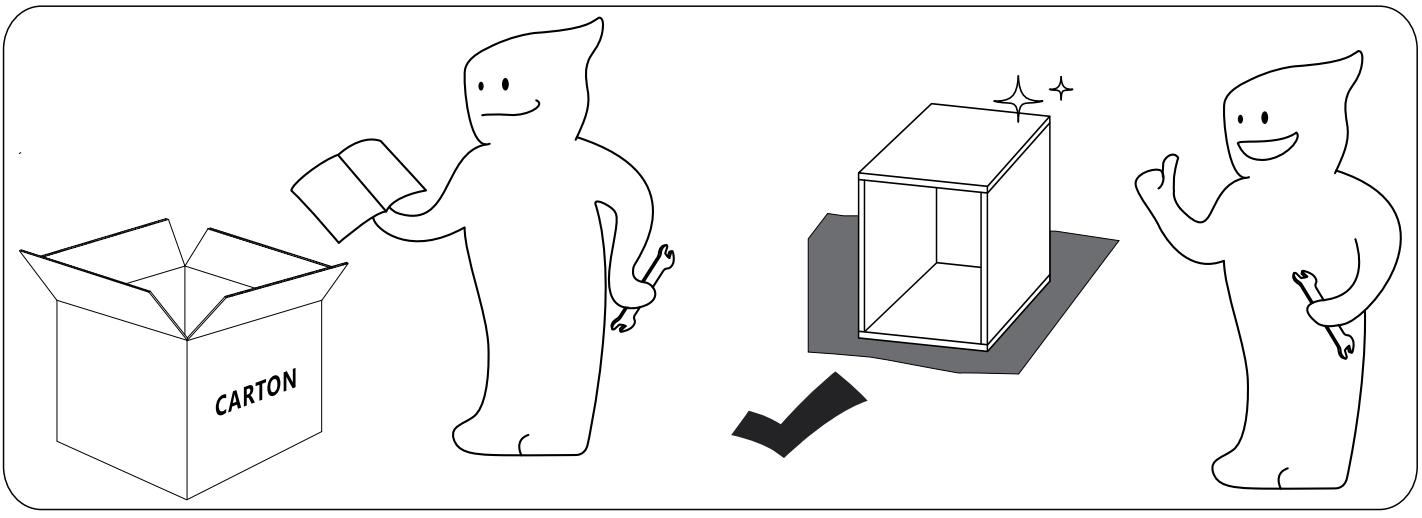
Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.

MADE IN CHINA

IMPORTANT


Please follow the instruction manuals and use a pad to protect the product during your assembly.


































Note:
1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

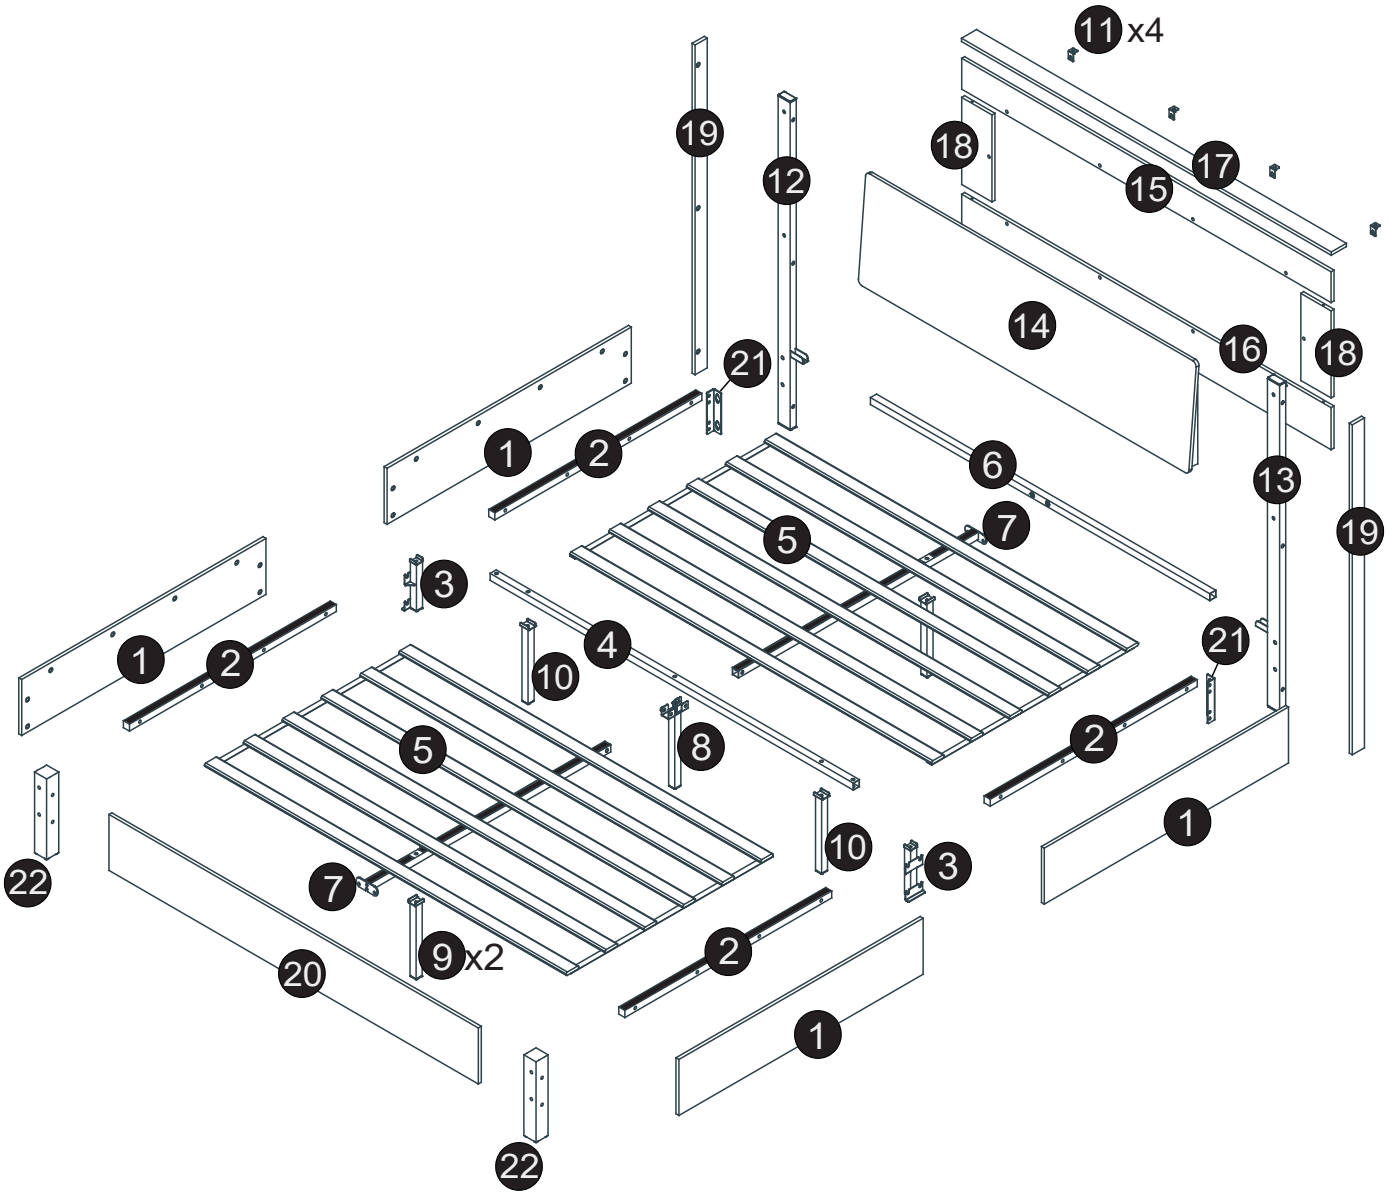For easier and better assembly, **2** or more adults are required.


11 x4
19
12
18
17
15
14
16
18
21
1
2
6
13
19
5
7
3
4
21
10
1
2
5
8
2
1
22
10
3
7
9 x2
2
20
1
22

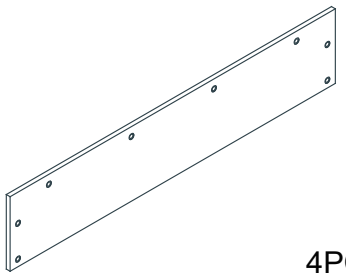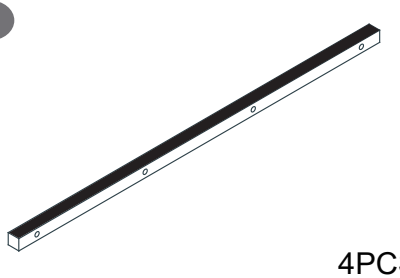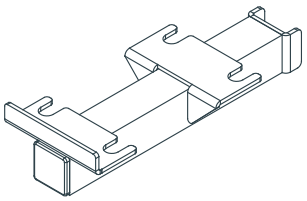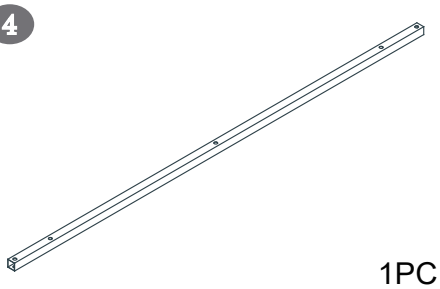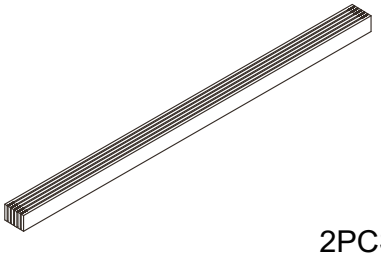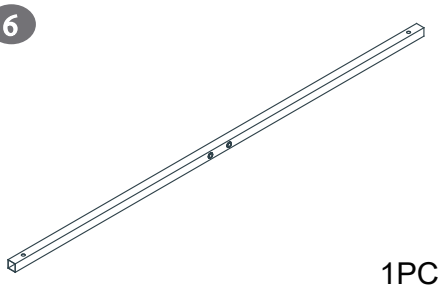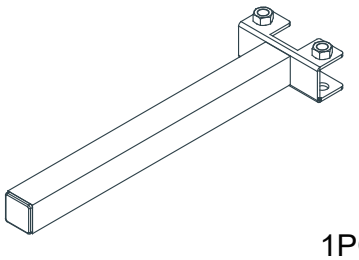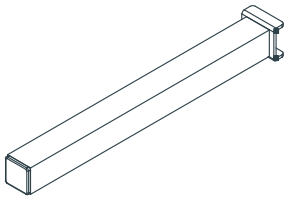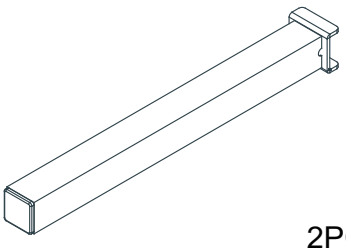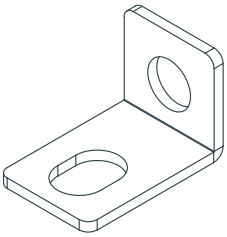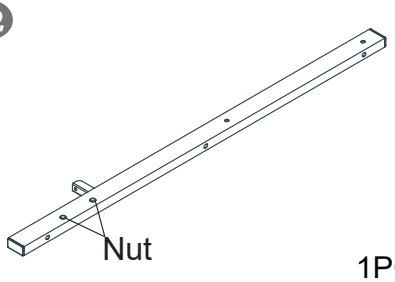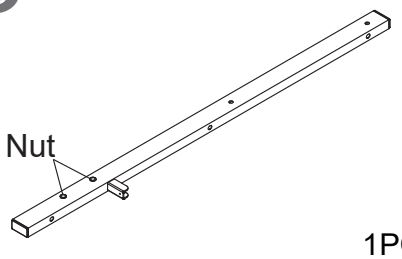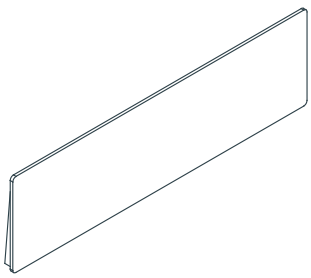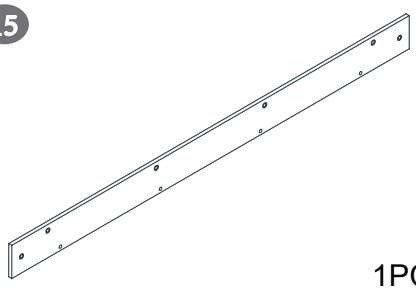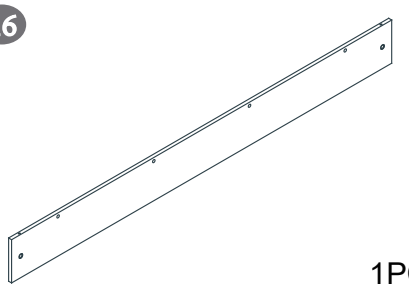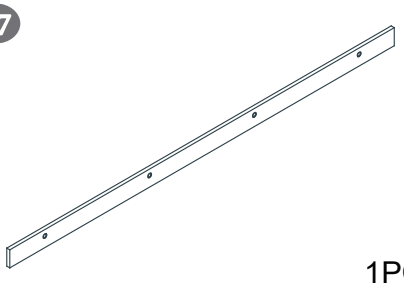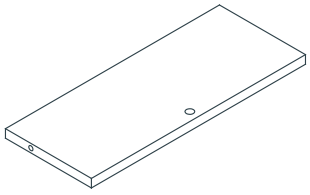
ASSEMBLY INSTRUCTIONS

1  4PCS	2  4PCS	3  2PCS
4  1PC	5  2PCS	6  1PC
7  2PCS	8  1PC	9  2PCS
10  2PCS	11  4PCS	12  1PC
13  1PC	14  1PC	15  1PC
16  1PC	17  1PC	18  2PCS

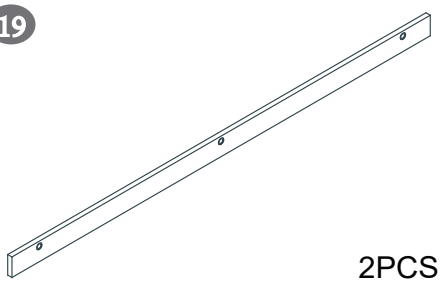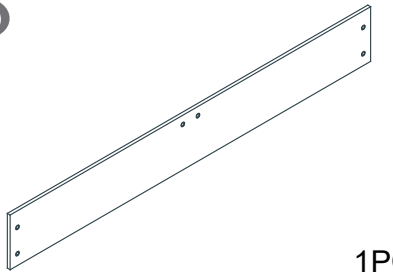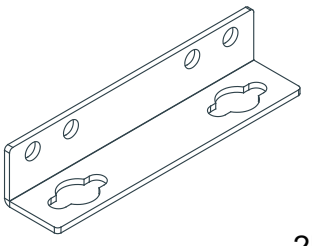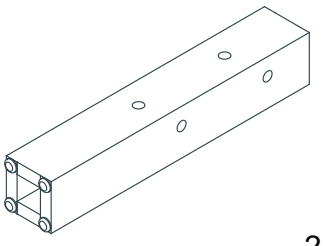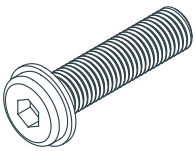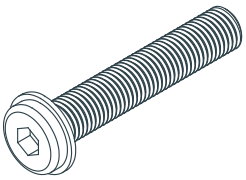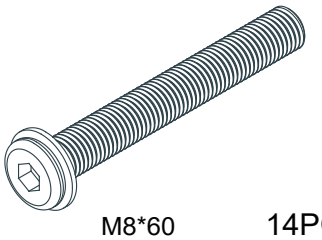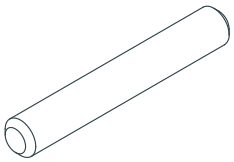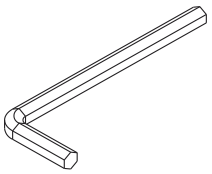19  2PCS	20  1PC	21  2PCS
22  2PCS	A  M8*12 22PCS	B  white zinc M8*14 2PCS
C  M8*20 12PCS	D  M8*33 30PCS	E  M8*45 3PCS
F  M8*60 14PCS	G  φ6*40 4PCS	H  5*5 1PC
K  1PC		


1

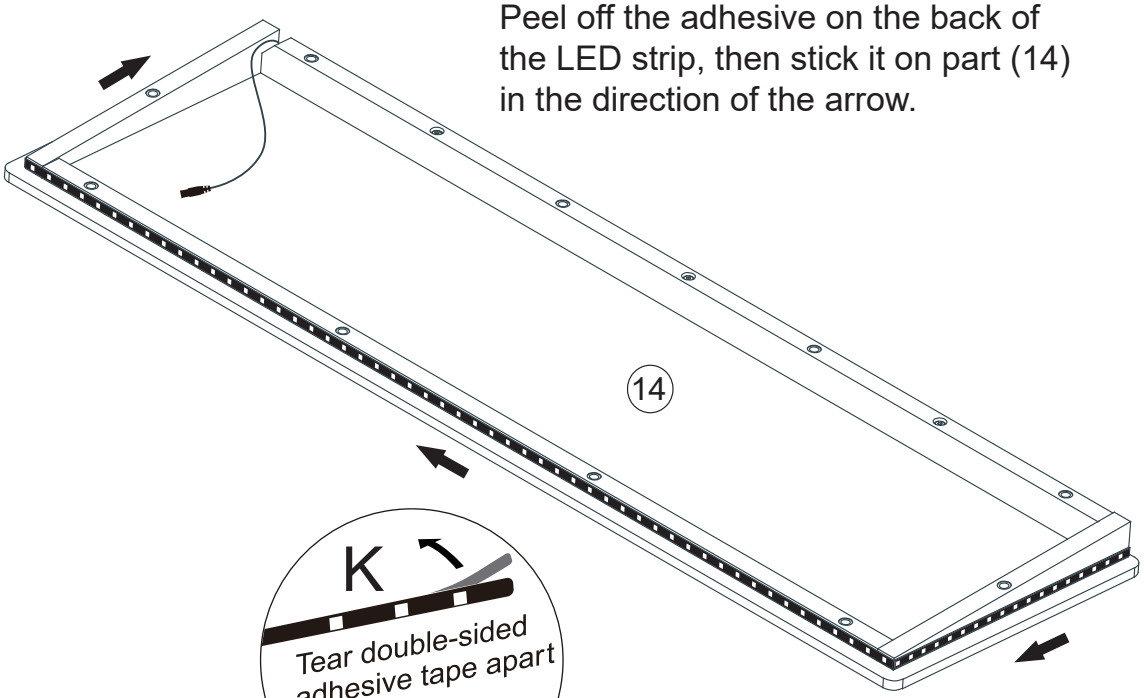Peel off the adhesive on the back of the LED strip, then stick it on part (14) in the direction of the arrow.




K		1pc

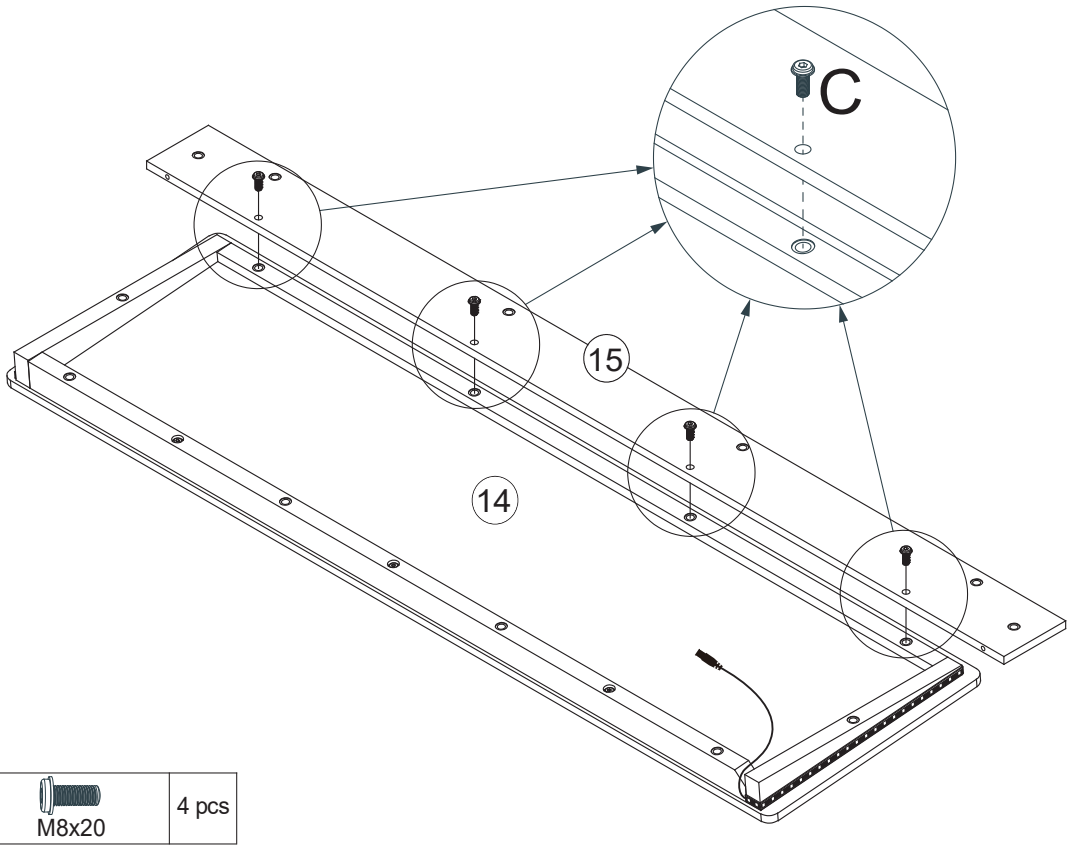2




C	M8x20	4 pcs

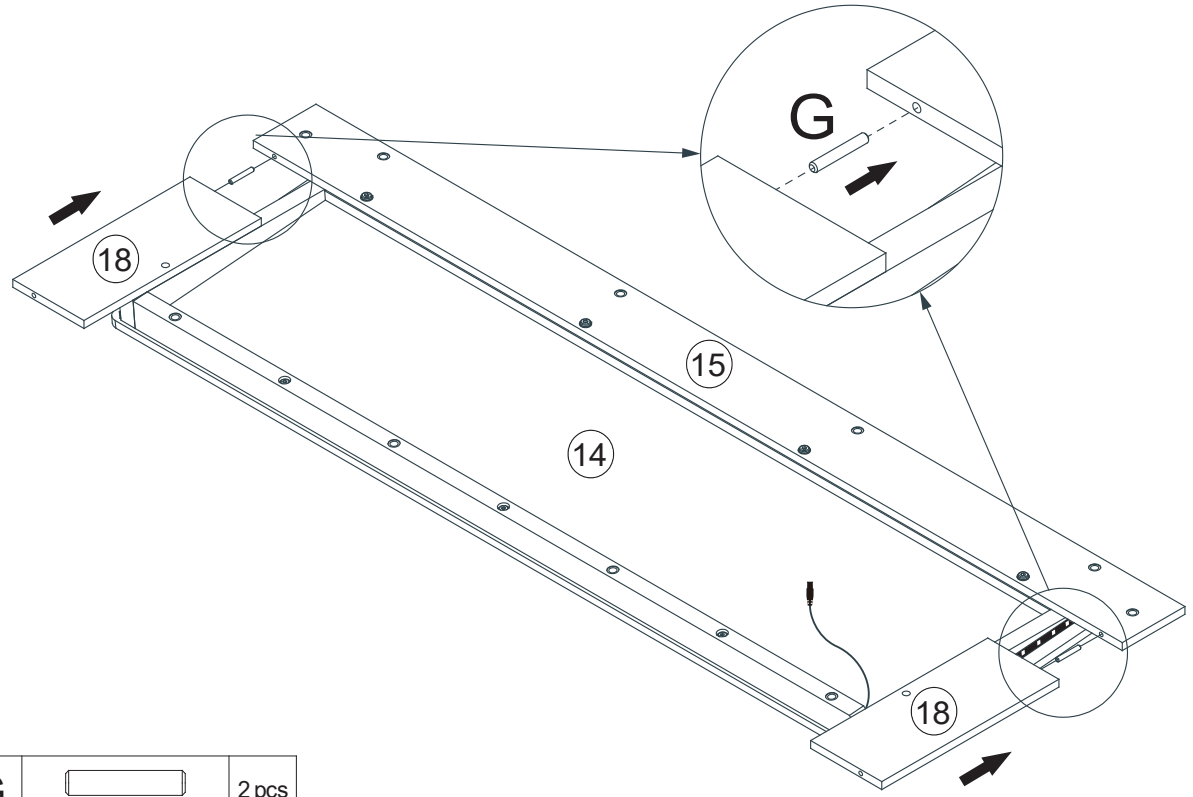3




G	φ6x40	2 pcs

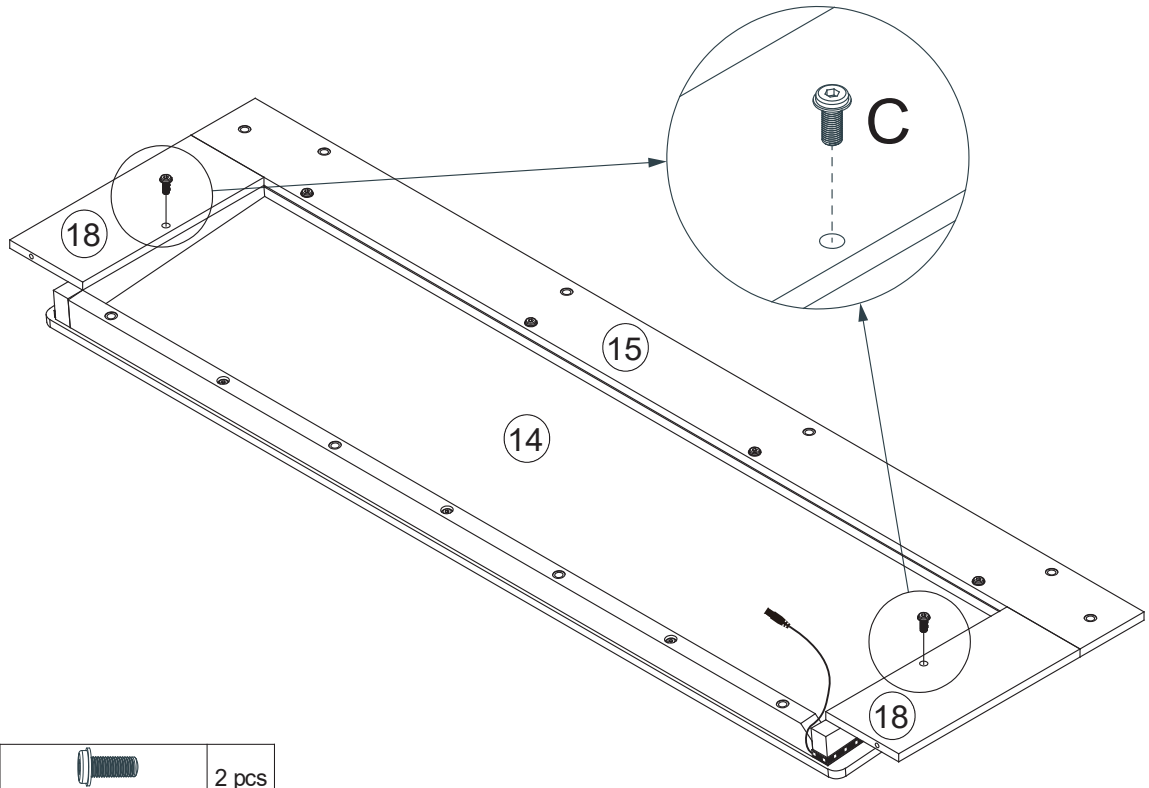4




C	M8x20	2 pcs

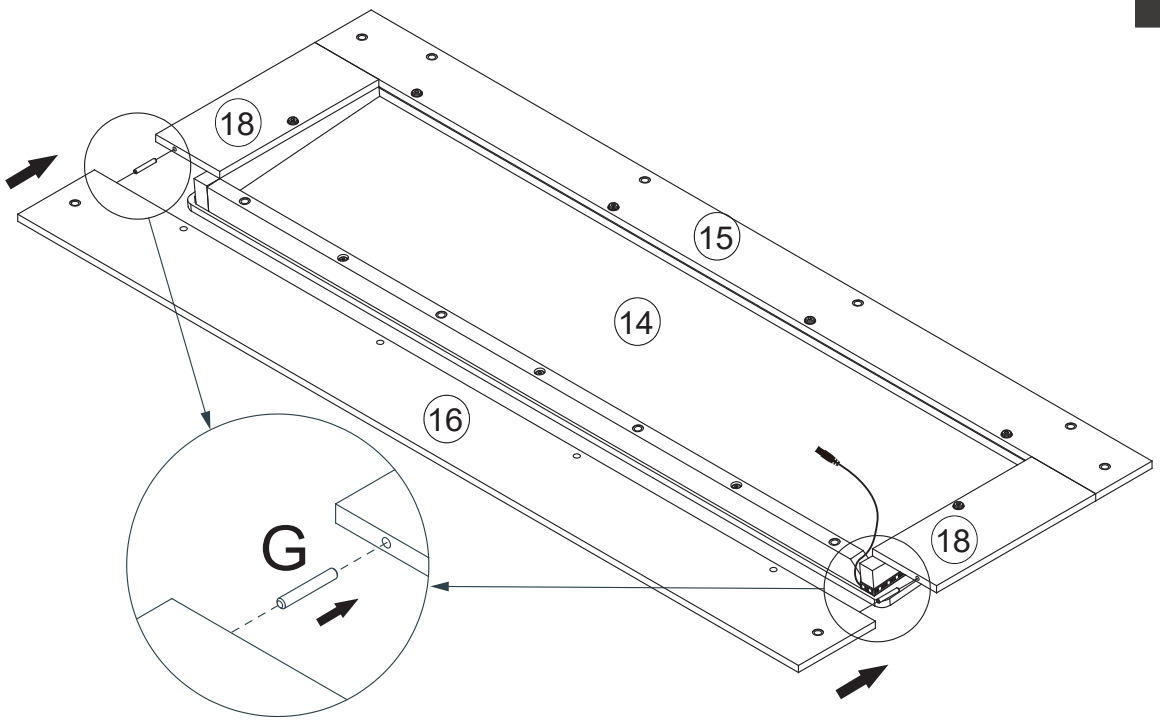5




G	φ6x40	2 pcs

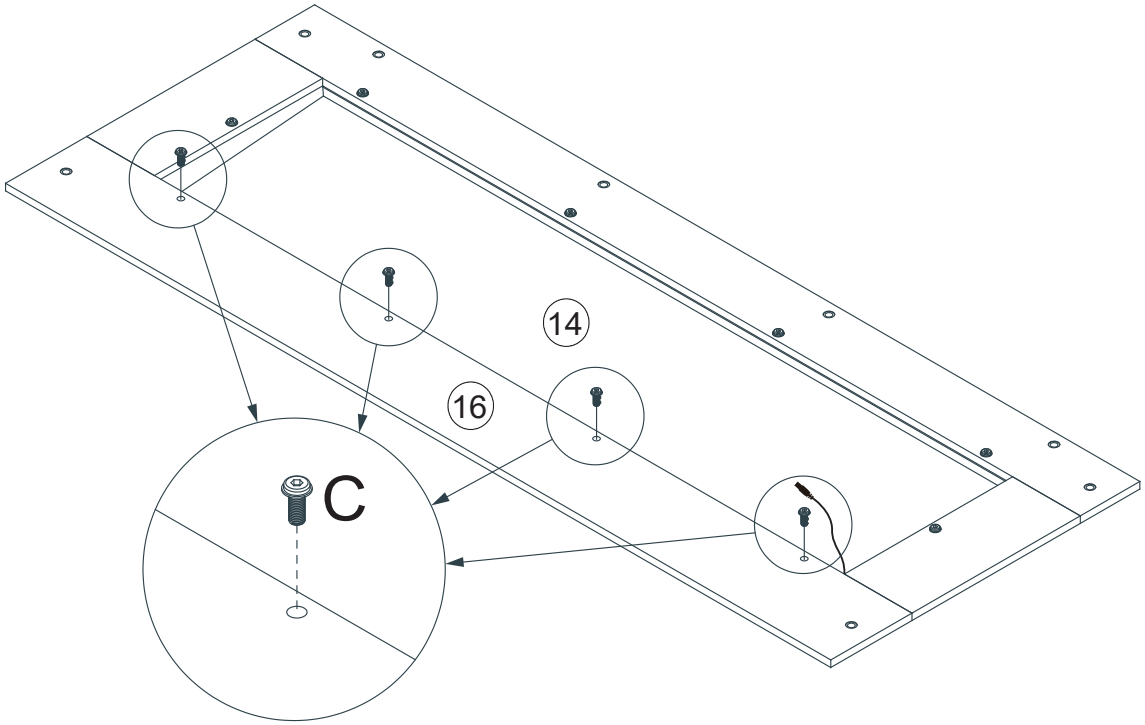6




C	M8x20	4 pcs

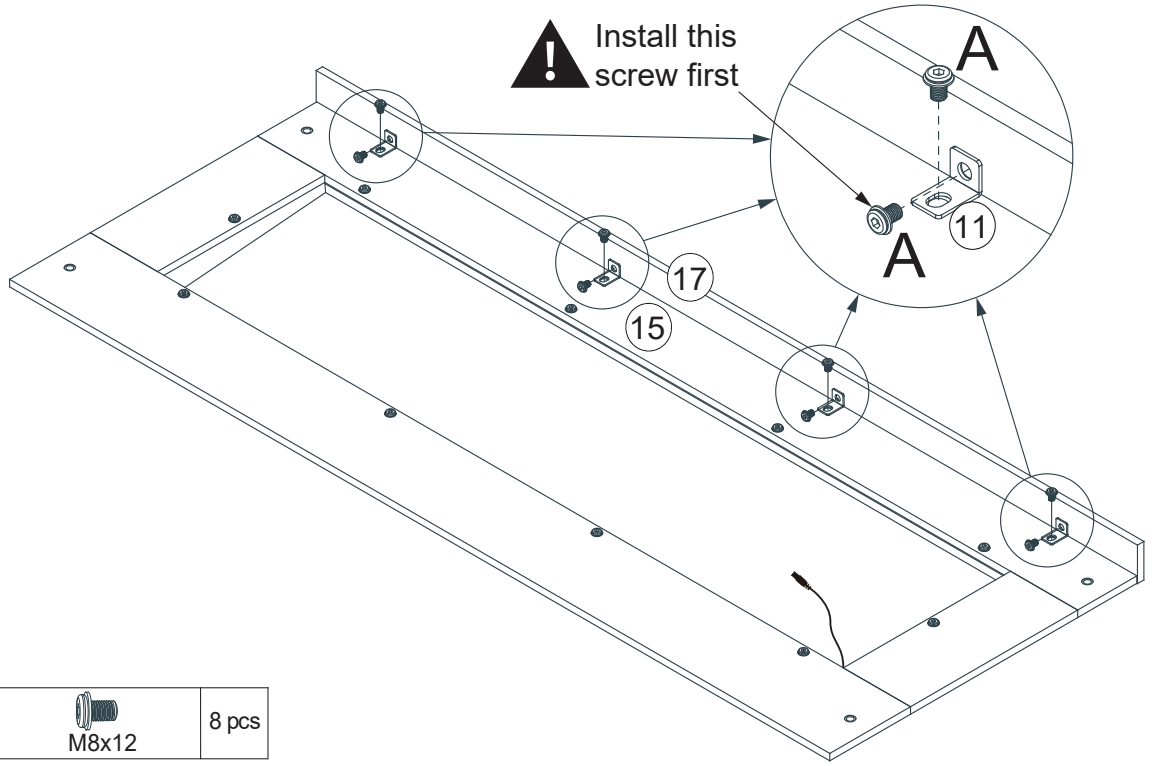7




A	M8x12	8 pcs

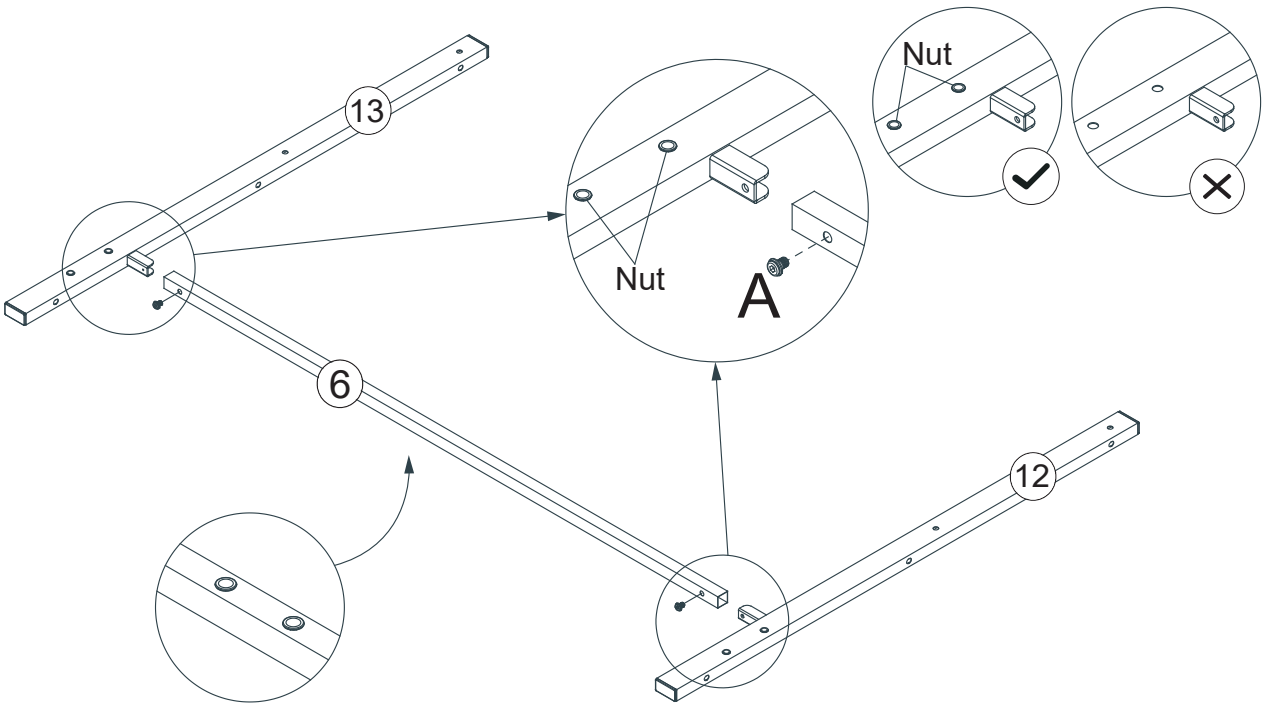8




A	M8x12	2 pcs

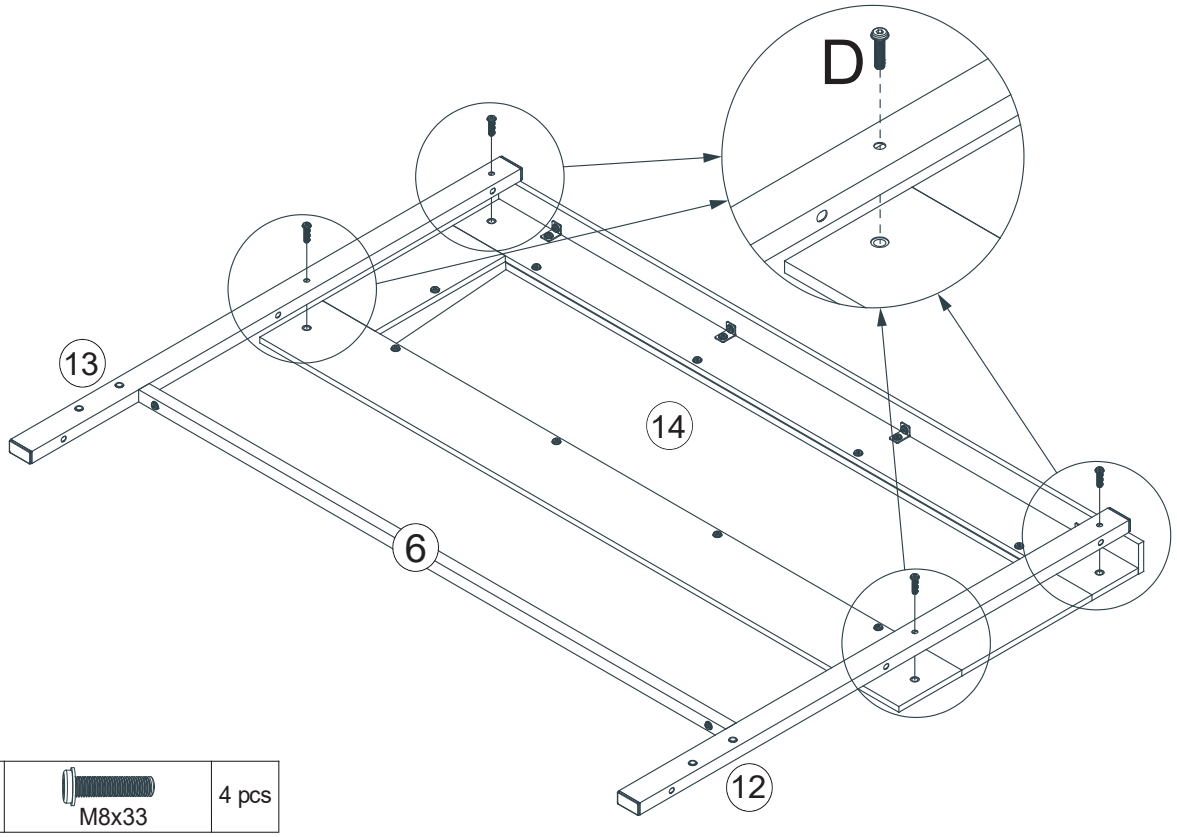9



D	M8x33	4 pcs

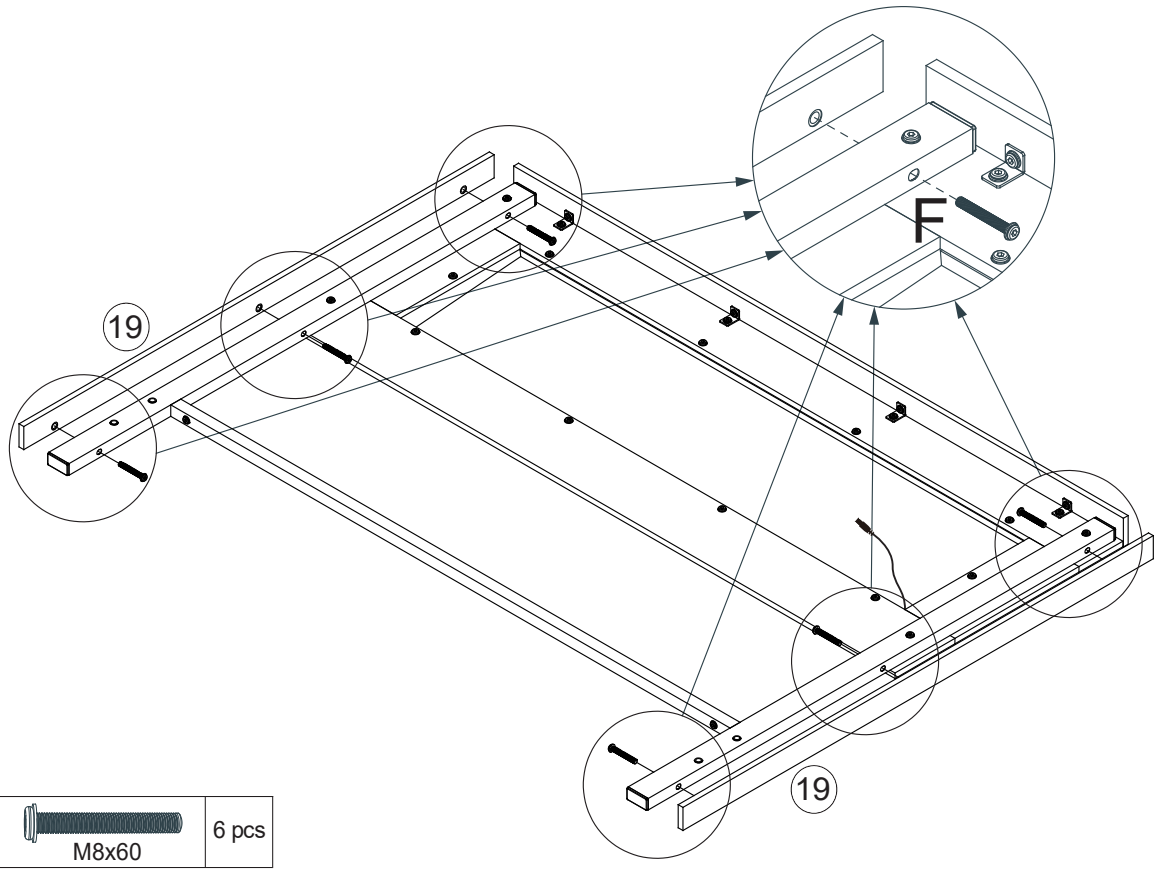
10



F	M8x60	6 pcs


11

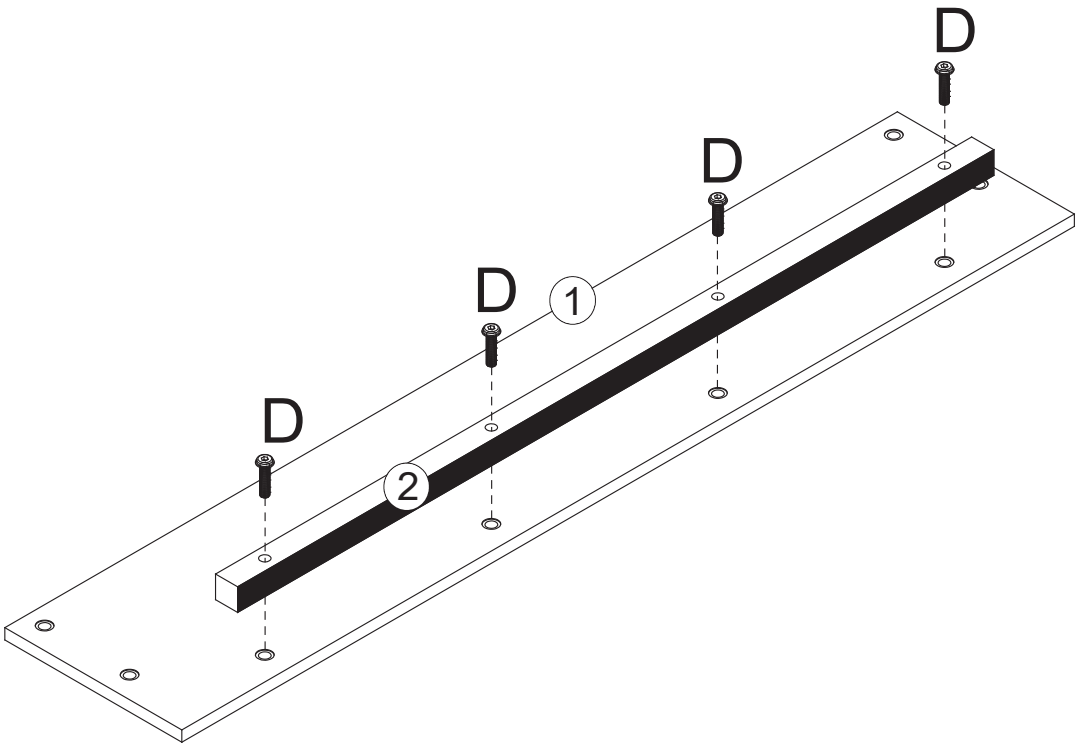x4




D	M8x33	16pcs

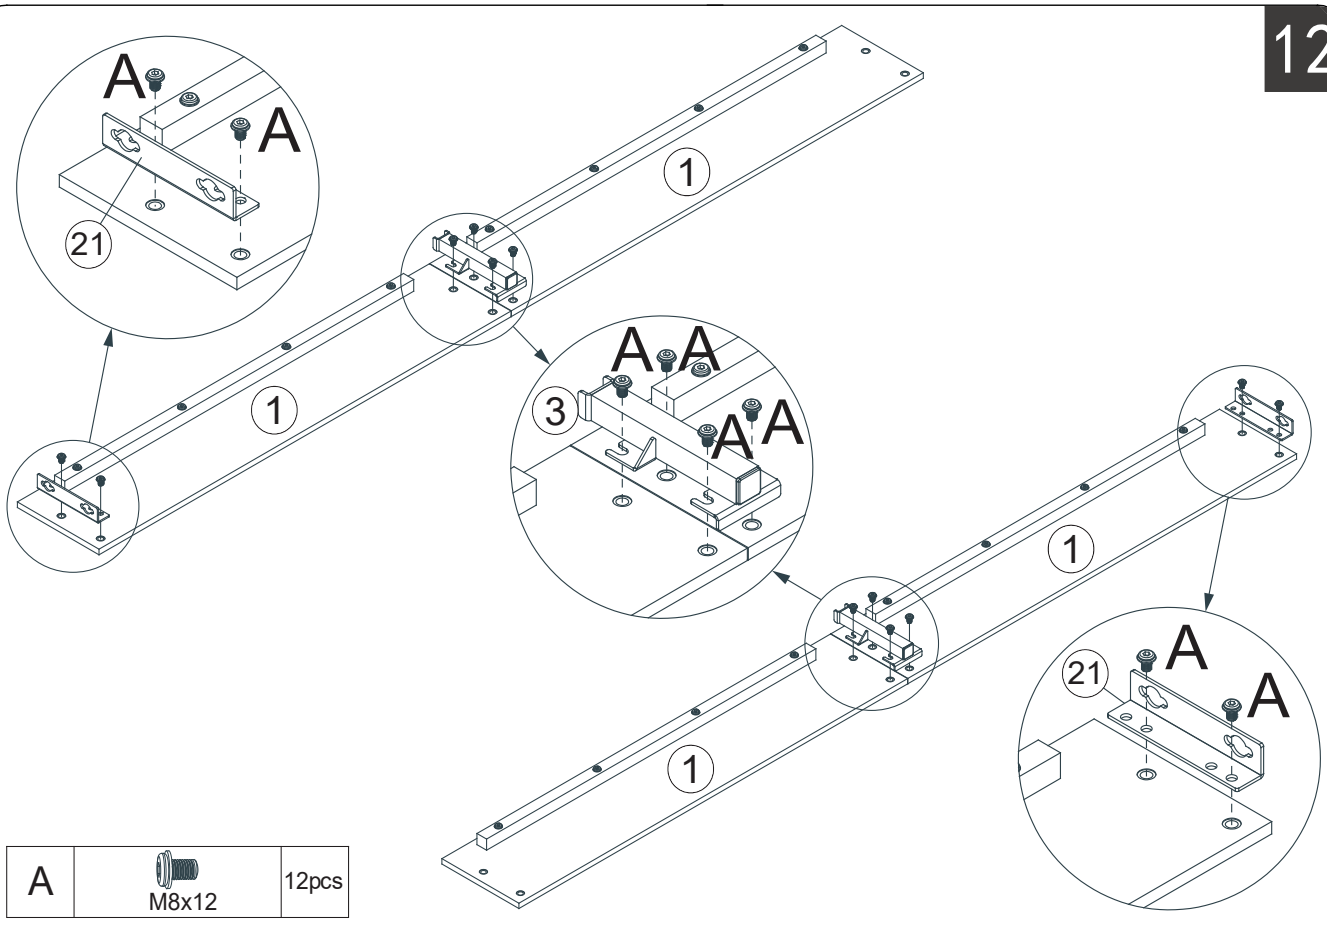12




A	M8x12	12pcs

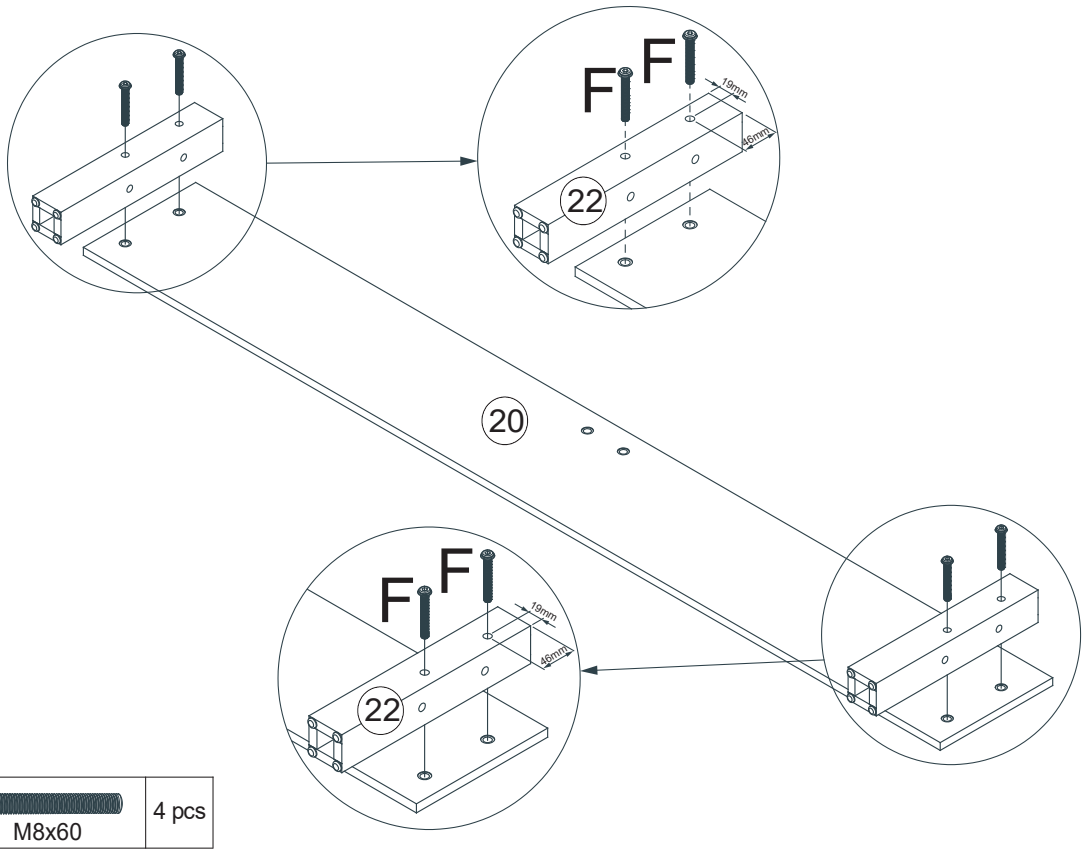13




F	M8x60	4 pcs

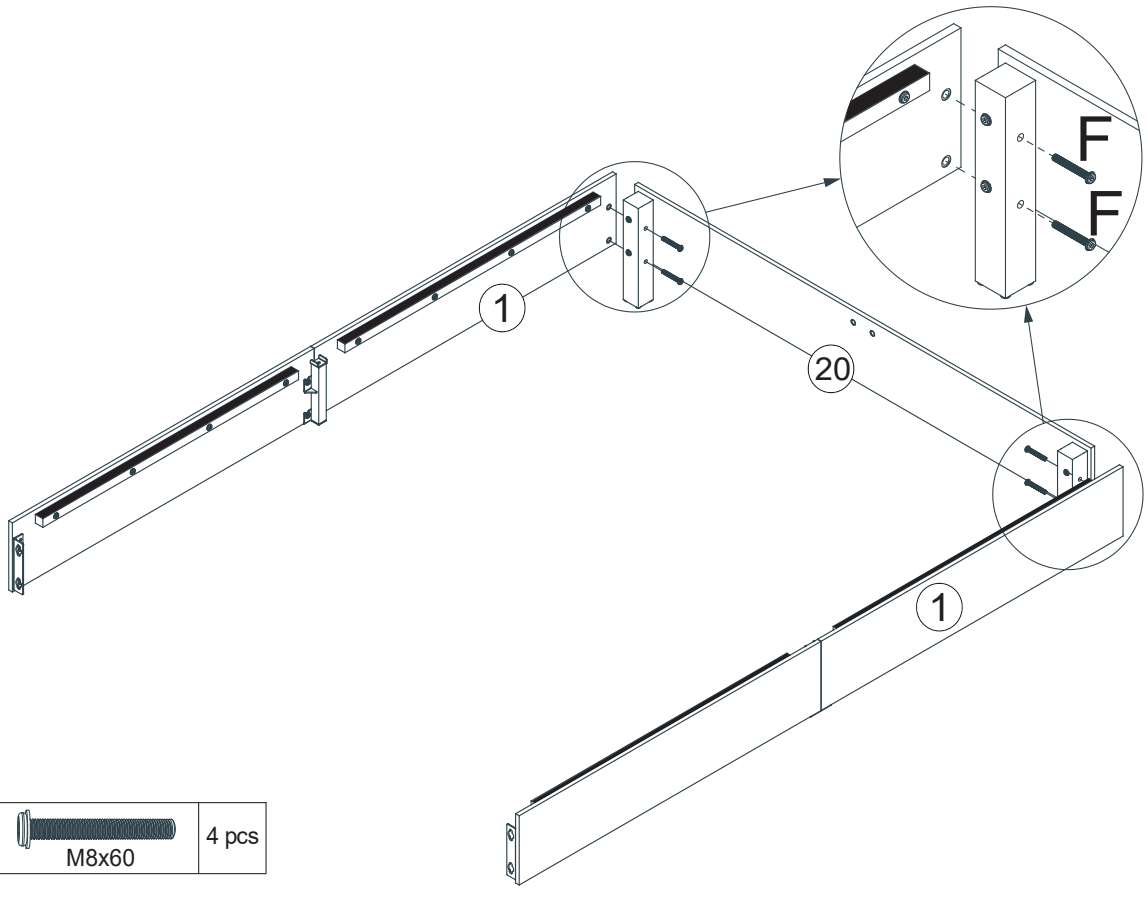14




F	M8x60	4 pcs

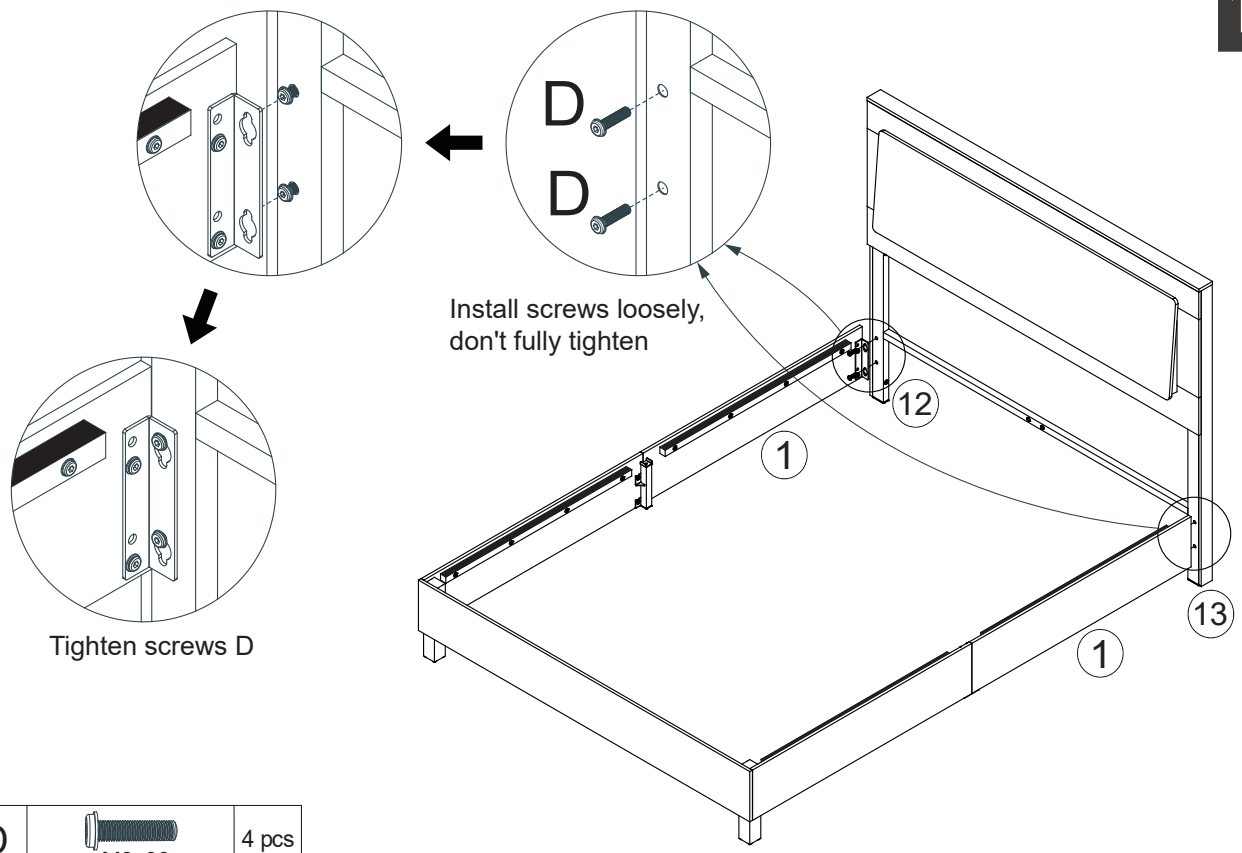15



D	M8x33	4 pcs

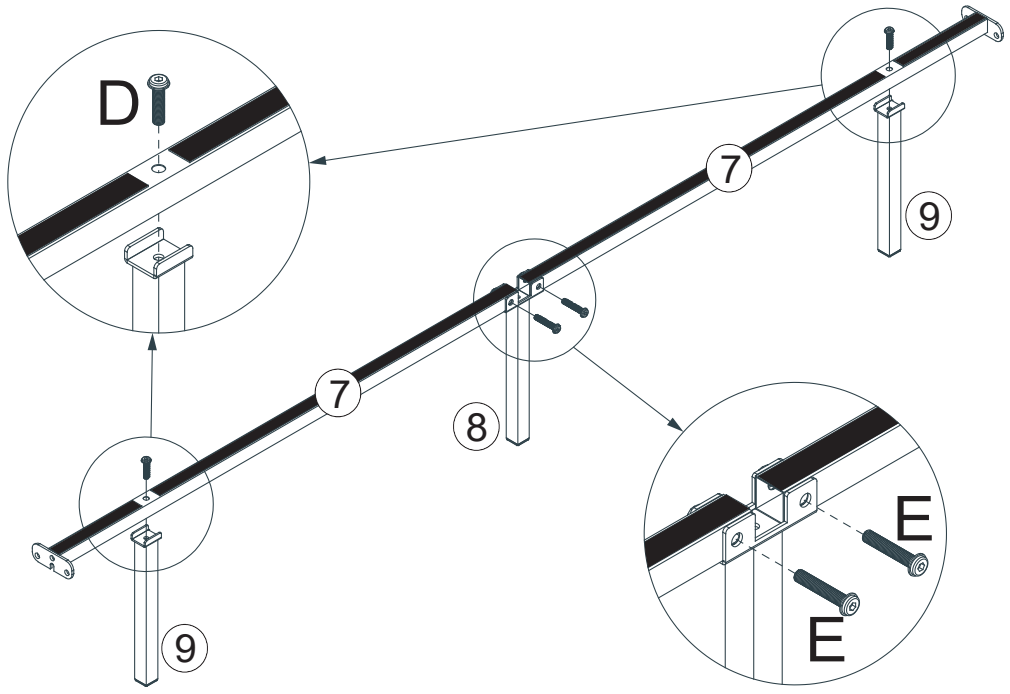
16



D	M8x33	2 pcs
E	M8x45	2 pcs

⚠ Do not fully tighten the screws yet.

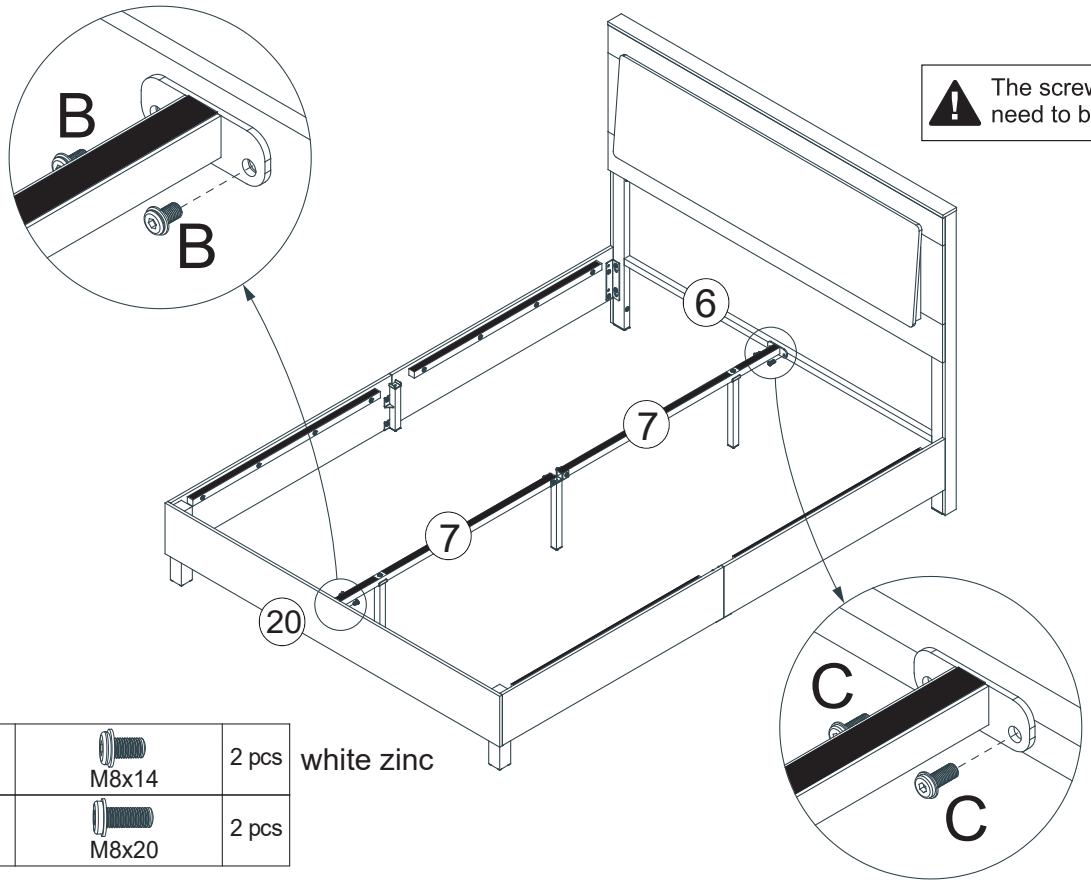
17



The screws in this step need to be tightened.


B	M8x14	2 pcs	white zinc
C	M8x20	2 pcs	

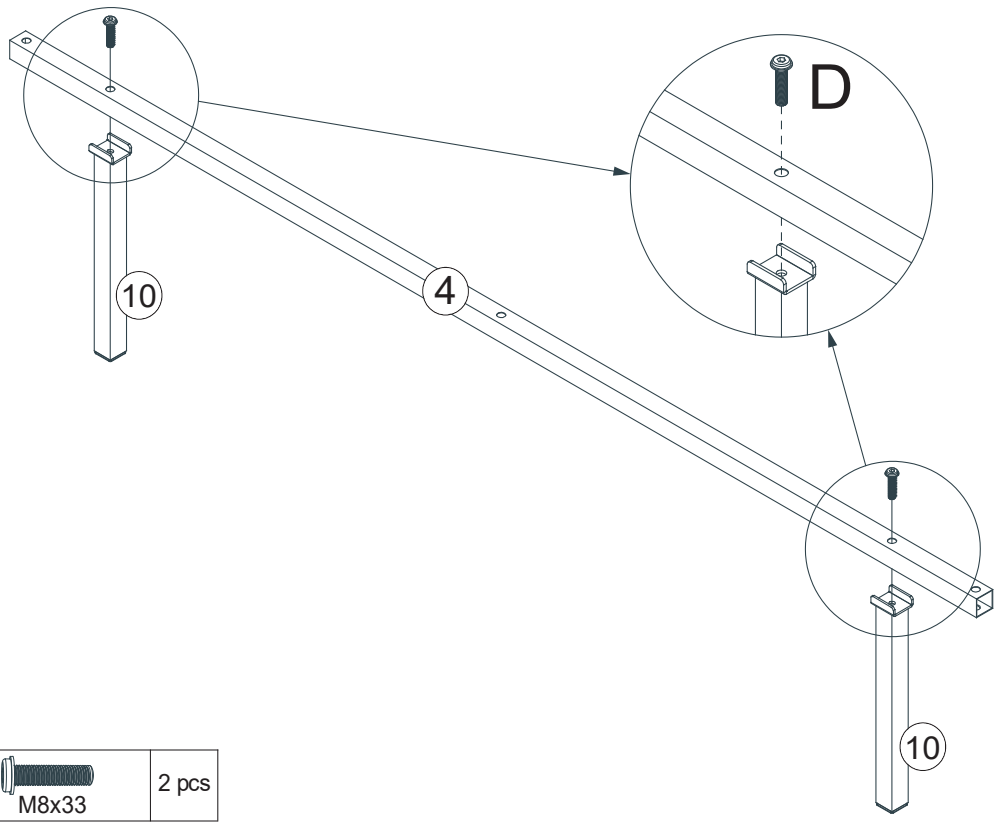18




D	M8x33	2 pcs

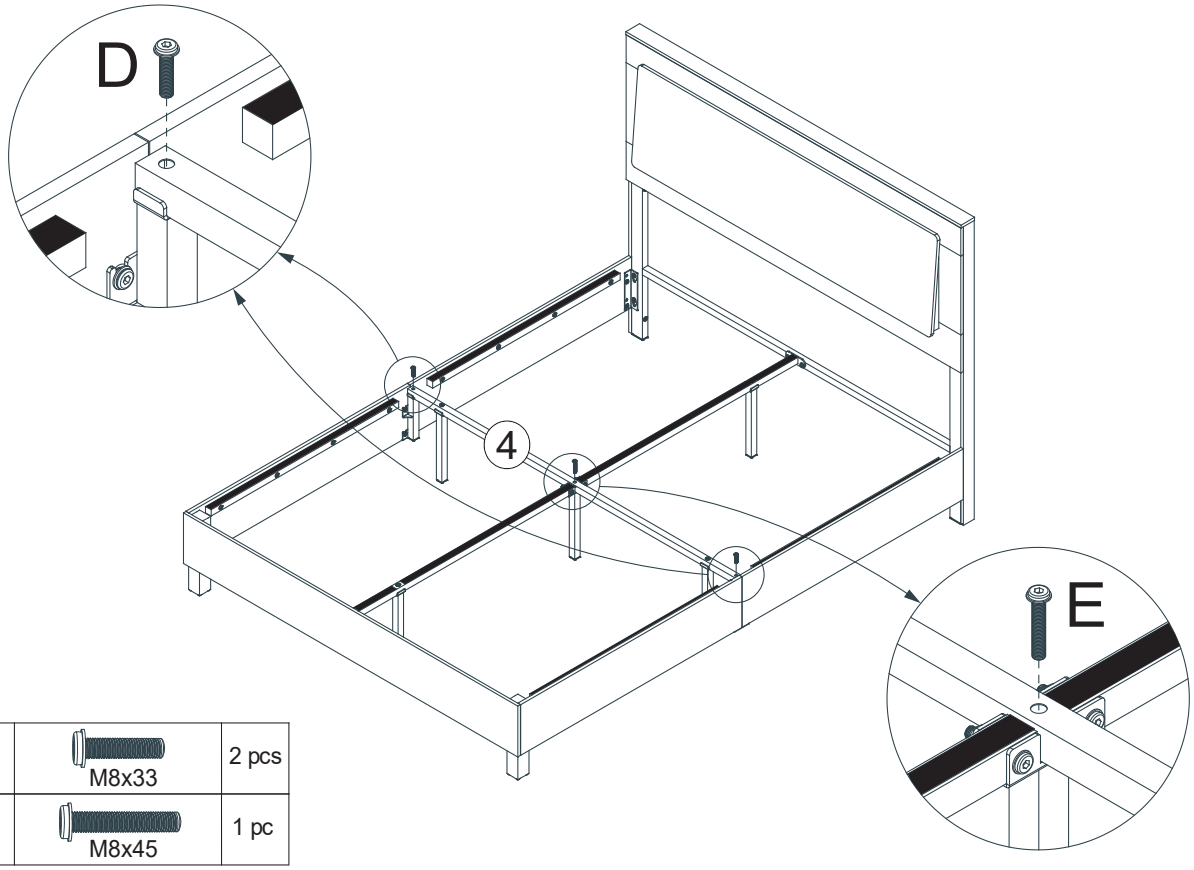19




D	M8x33	2 pcs
E	M8x45	1 pc

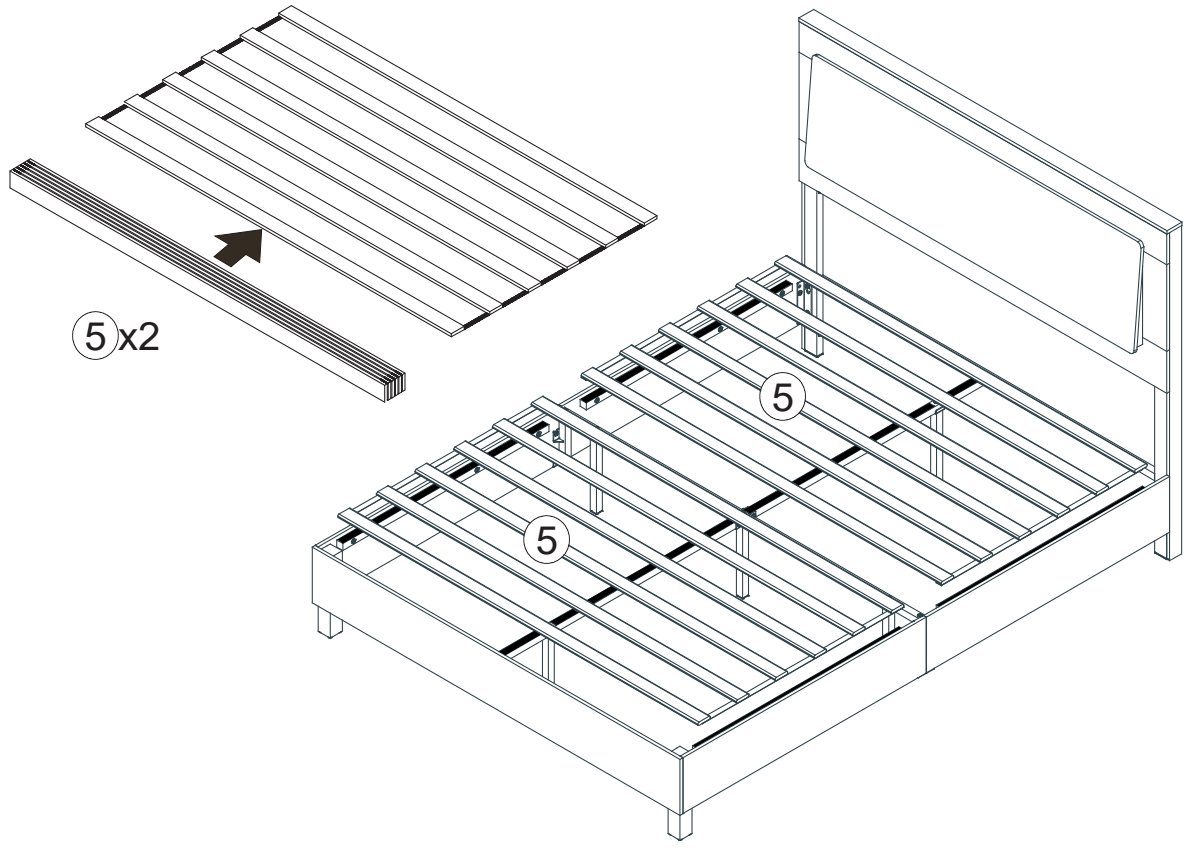20




21

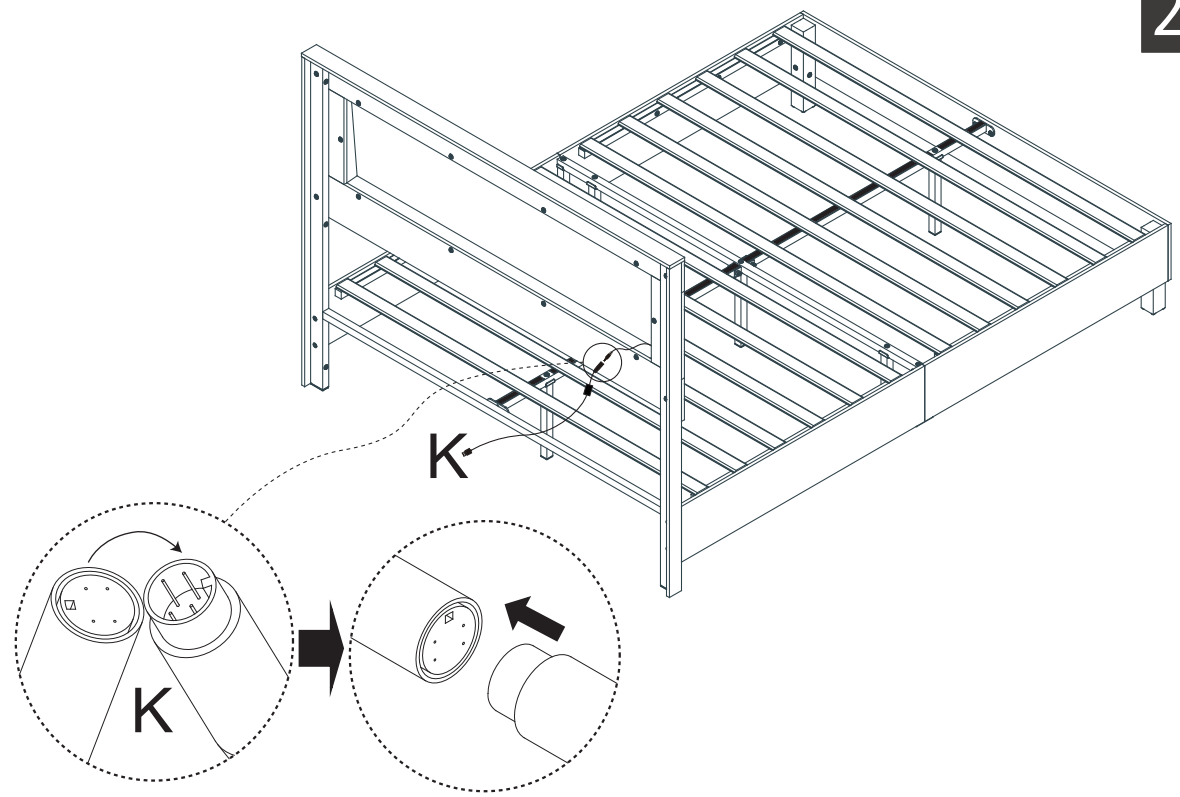

K		1pc

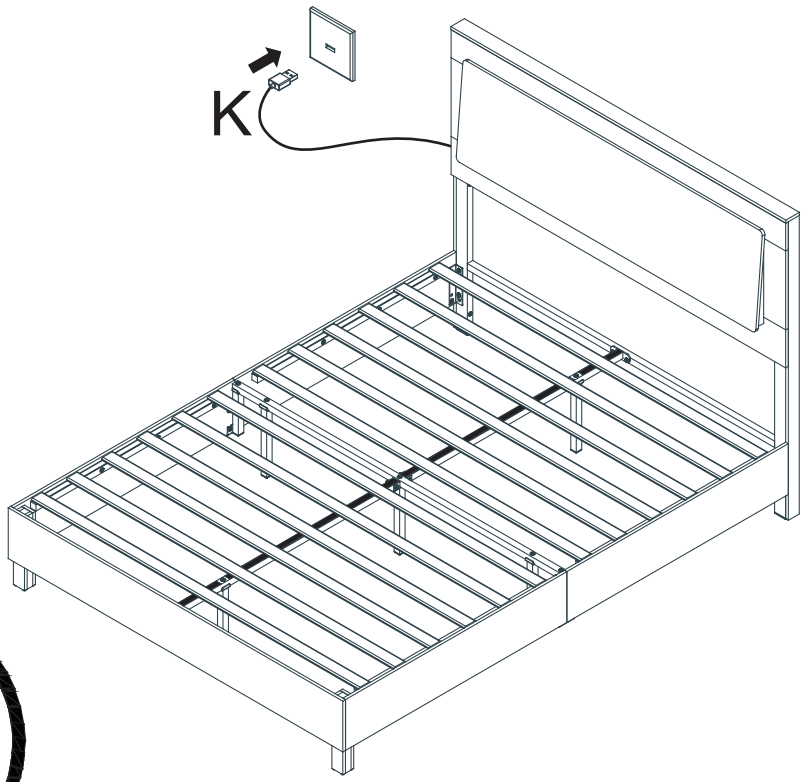22





Installation Complete