

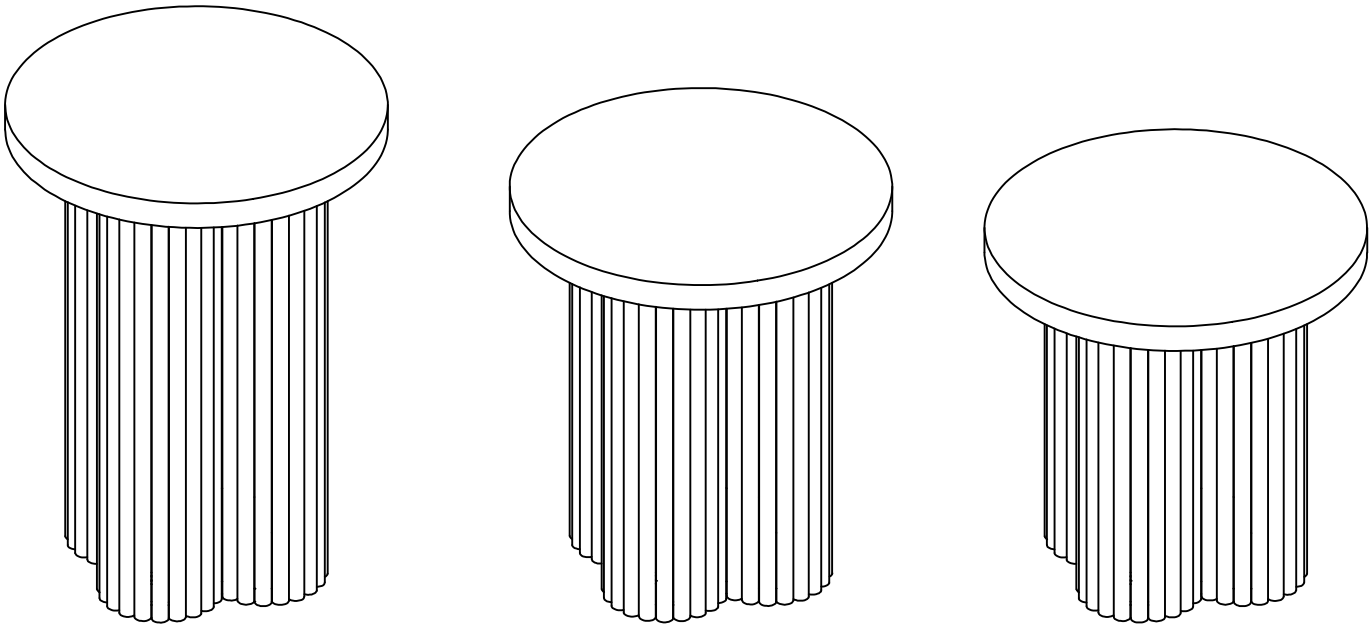
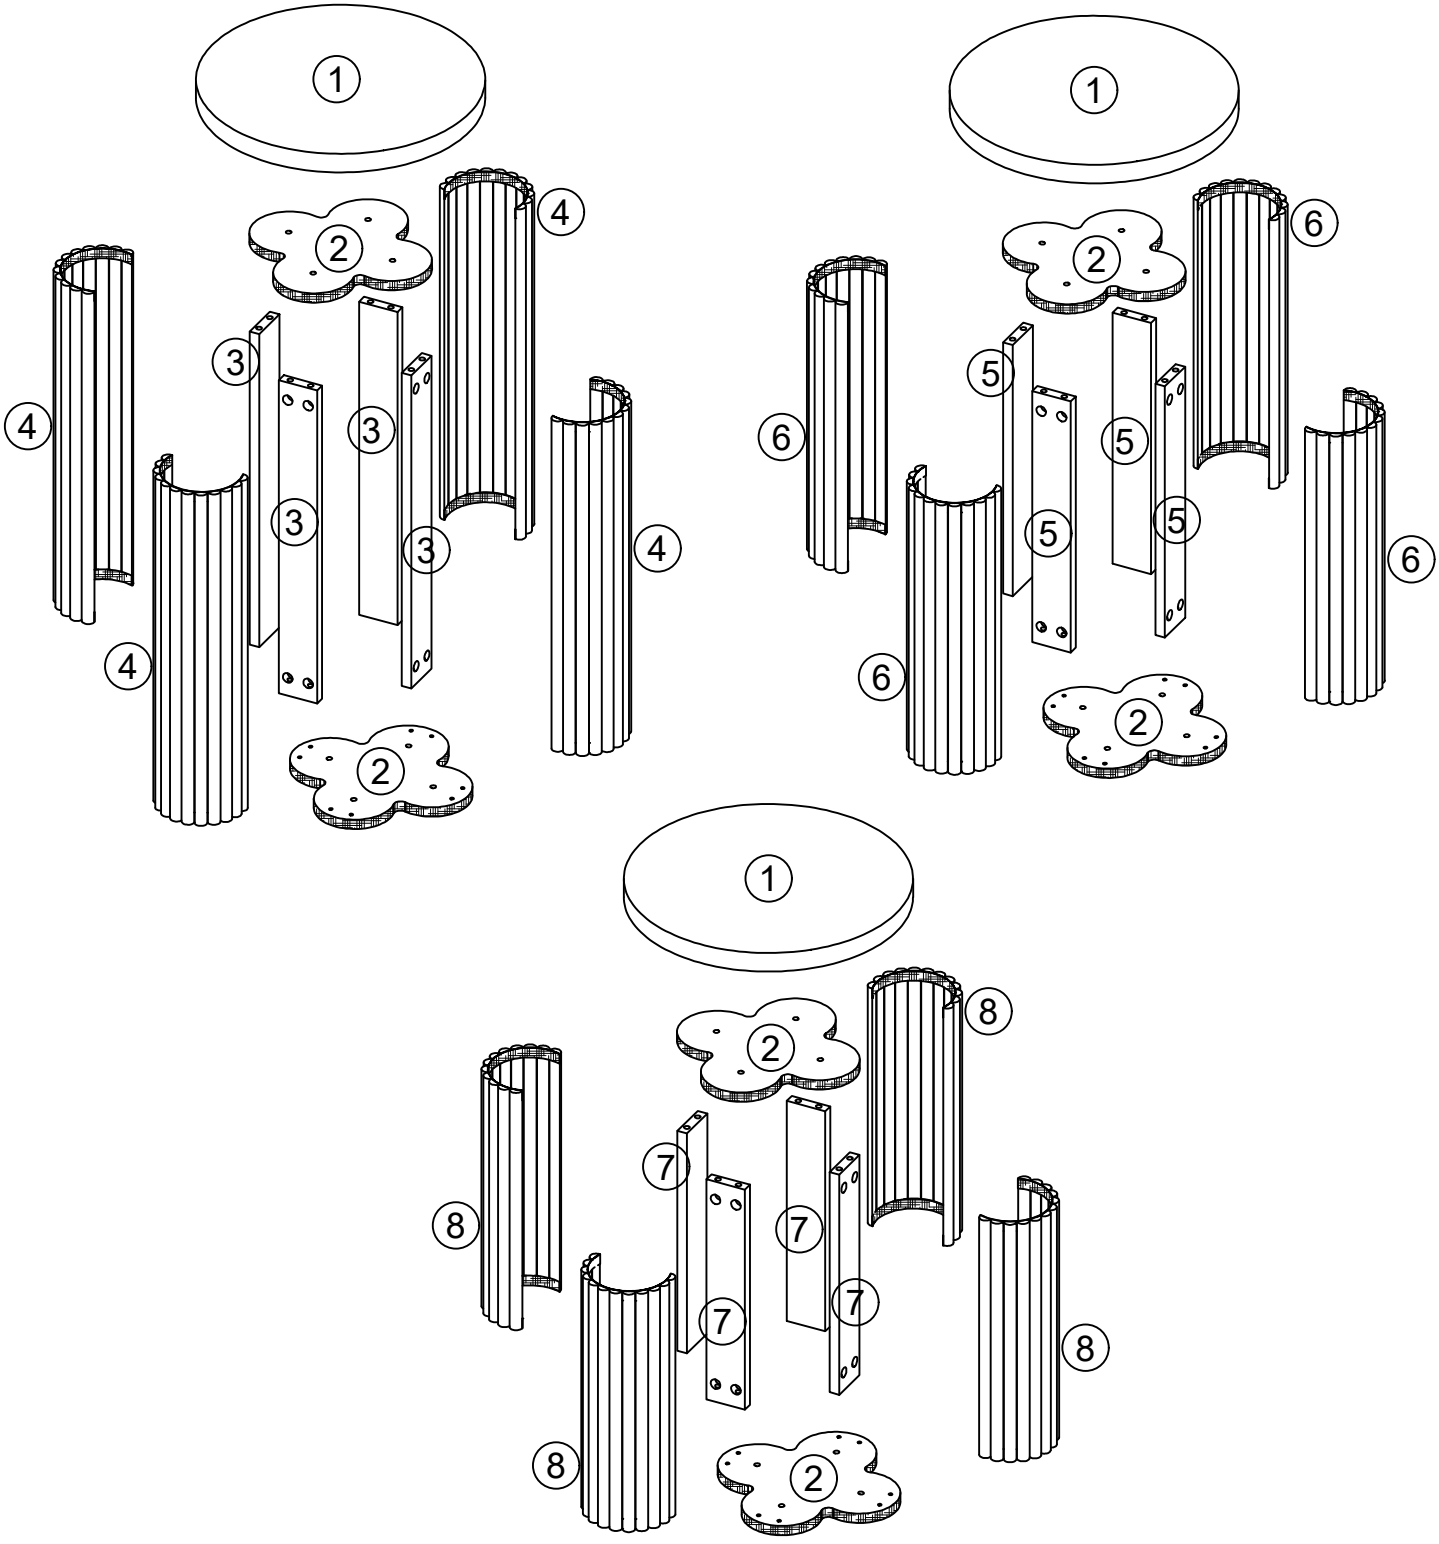






A×48PCS	B×48PCS	C×12PCS	D×12PCS	E×1PC
				
M6×35mm	Ø15×12mm	M6×25mm		M4mm


Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.


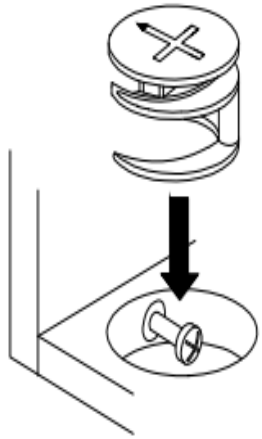


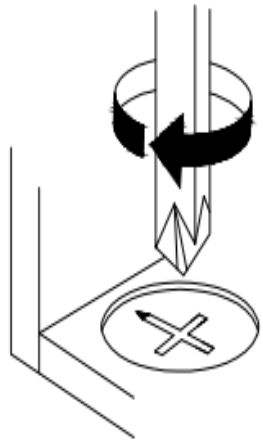


Turn cam lock clockwise to tighten.

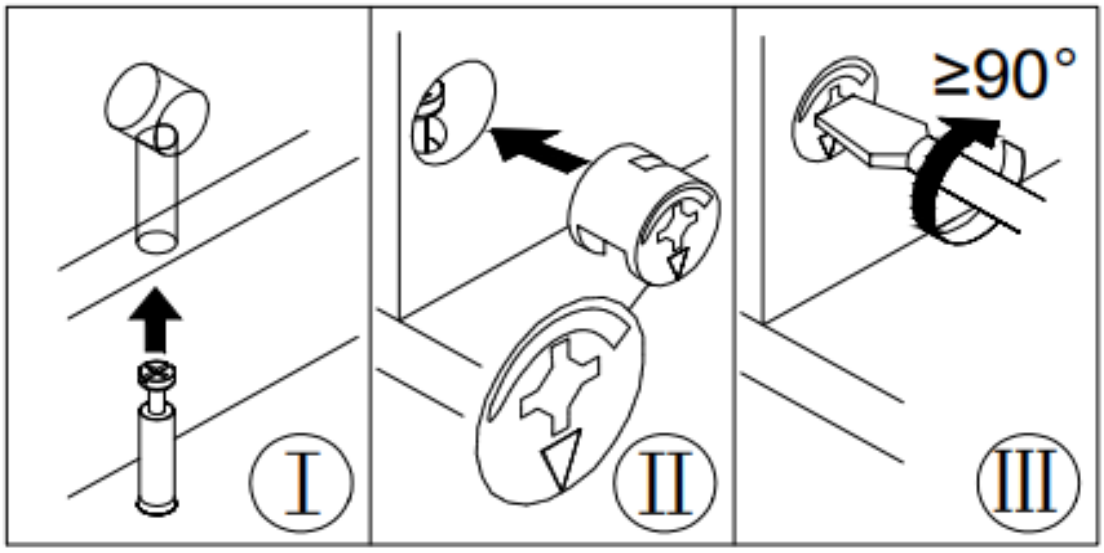


1.

A×48PCS	C×12PCS	E×1PC
		
M6×35mm	M6×25mm	M4mm

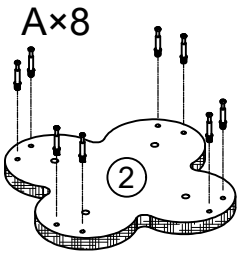

×6

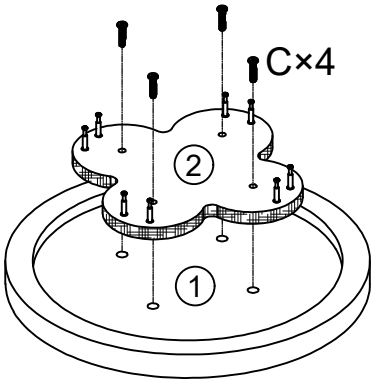



×3

B×16PCS	D×4PCS
	
Ø15×12mm	


2.

Note: The table may wobble slightly with floor protectors installed. Skip installation if floor protection is unnecessary.

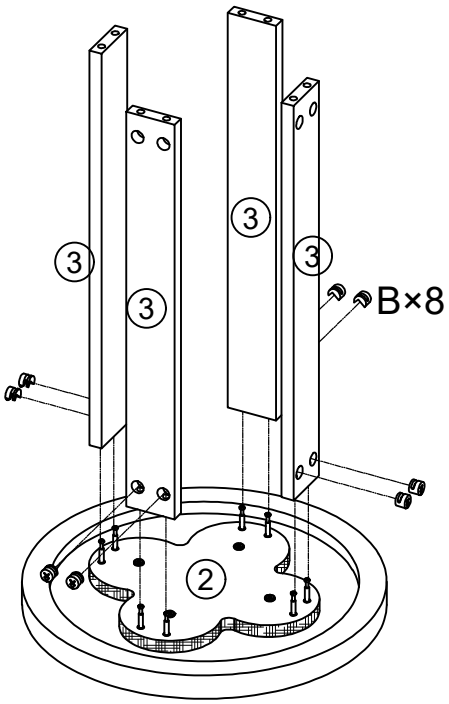

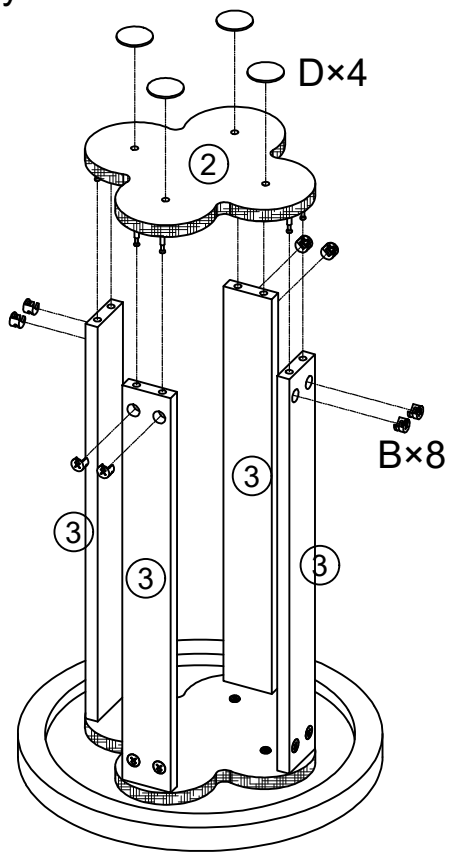



3.

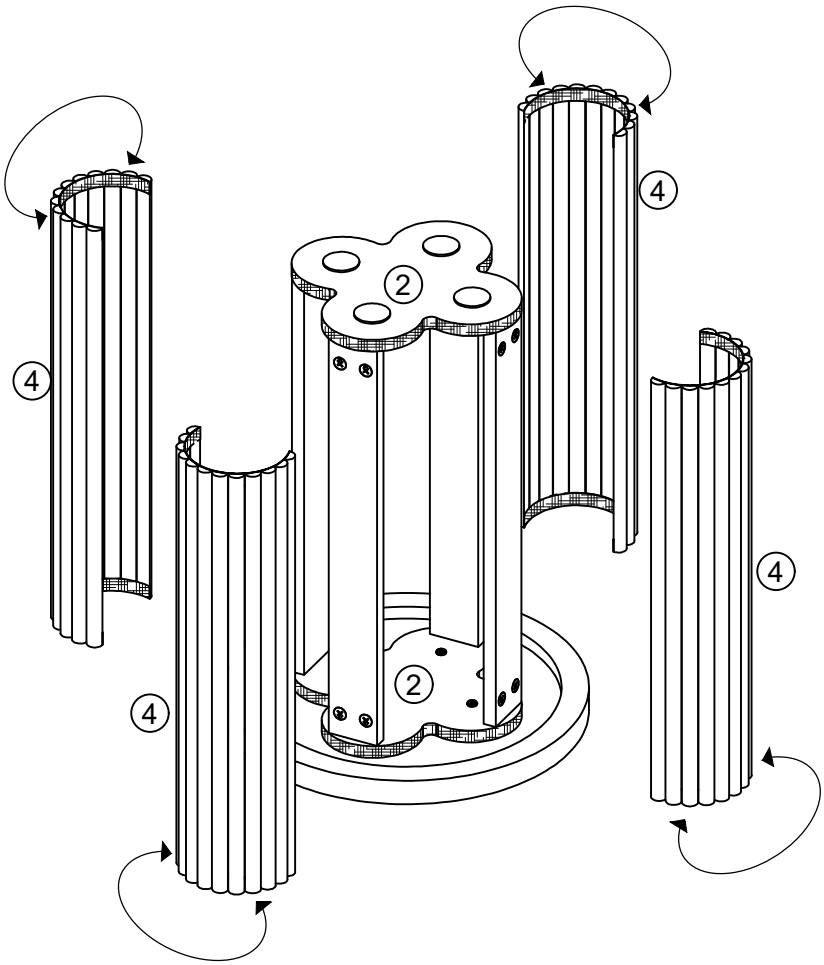


4.

B×16PCS	D×4PCS
 Ø15×12mm	

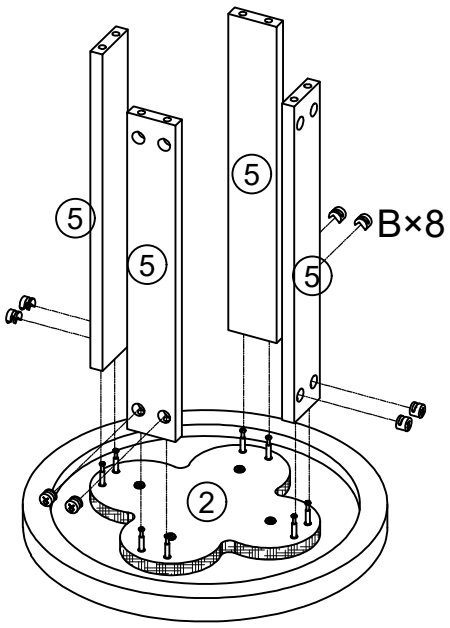

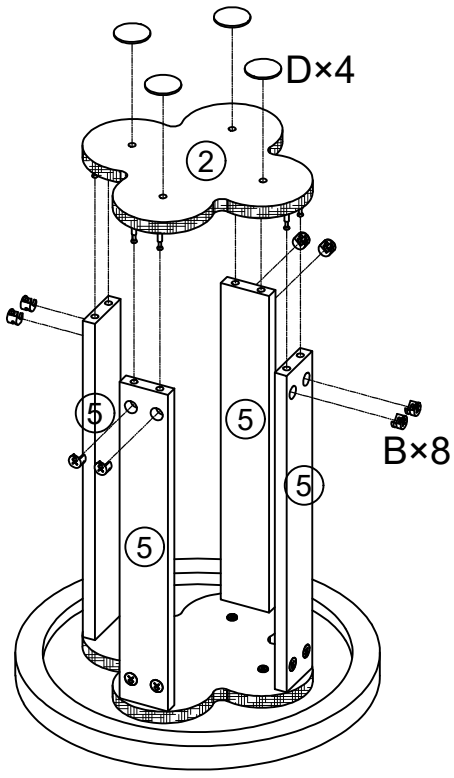



5.

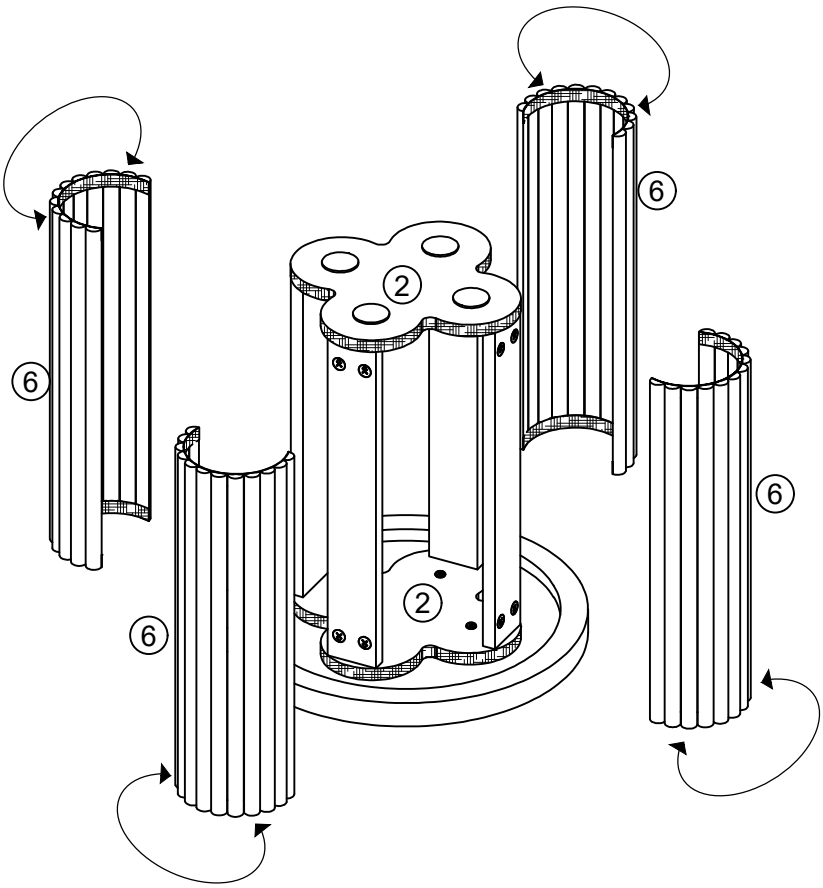

B×16PCS	D×4PCS
 Ø15×12mm	

6.

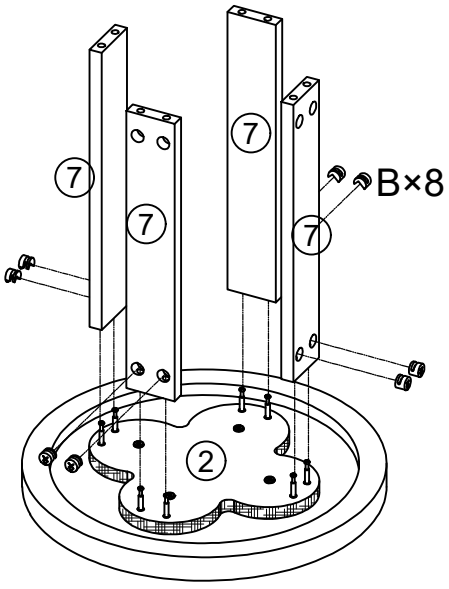

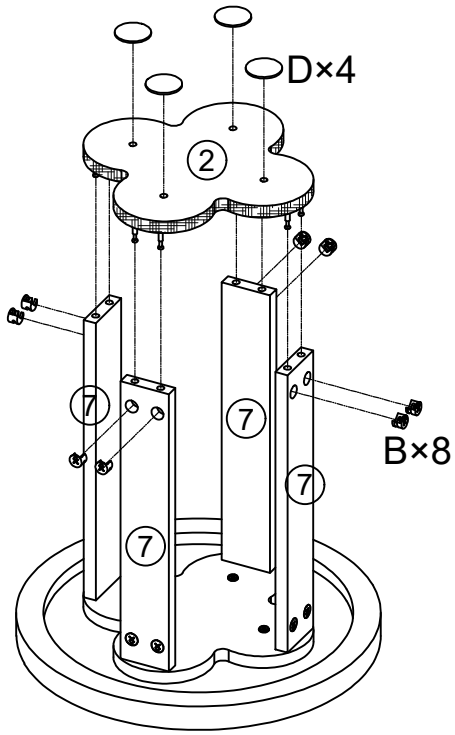

7.

