
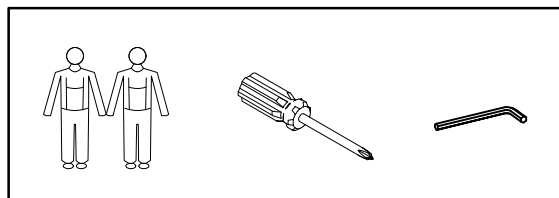


ASSEMBLY INSTRUCTION

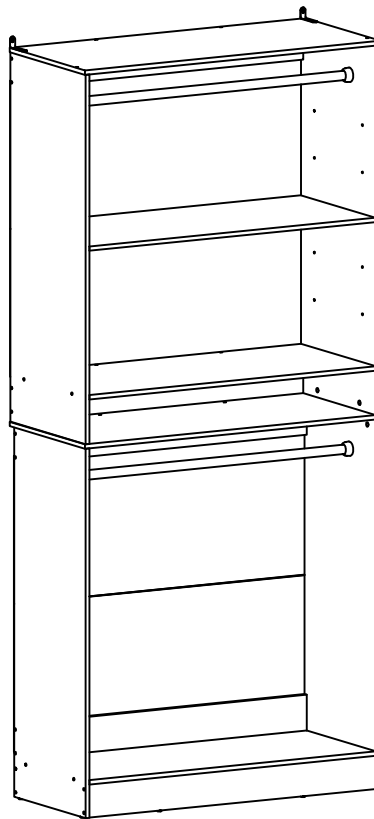

CAUTION

Put the screws in loosely until all pieces are together and then tighten them all.
It will save your time if you make a mistake while installing.

Dear Customers,

Thank you for purchasing our products.



As a reliable seller, we have been pursuing to provide customers with 100% satisfied products and services, so we hope that you will enjoy this shopping experience.

If you find any damage, missing parts, or dissatisfaction after receiving the product, please contact us freely at the first time. We will provide you with a 100% satisfactory solution.

Thanks again for your order. Please feel free to contact us from our store or homeycs@hotmail.com in case of any problem regarding assembling or the product itself. We will do everything we can to resolve it. Please call for replacement parts or assistance: 1-857-800-8808. Mon-Fri 9am-5pm (PST)



Please follow the instruction manuals and use a pad to protect the product during your assembly.

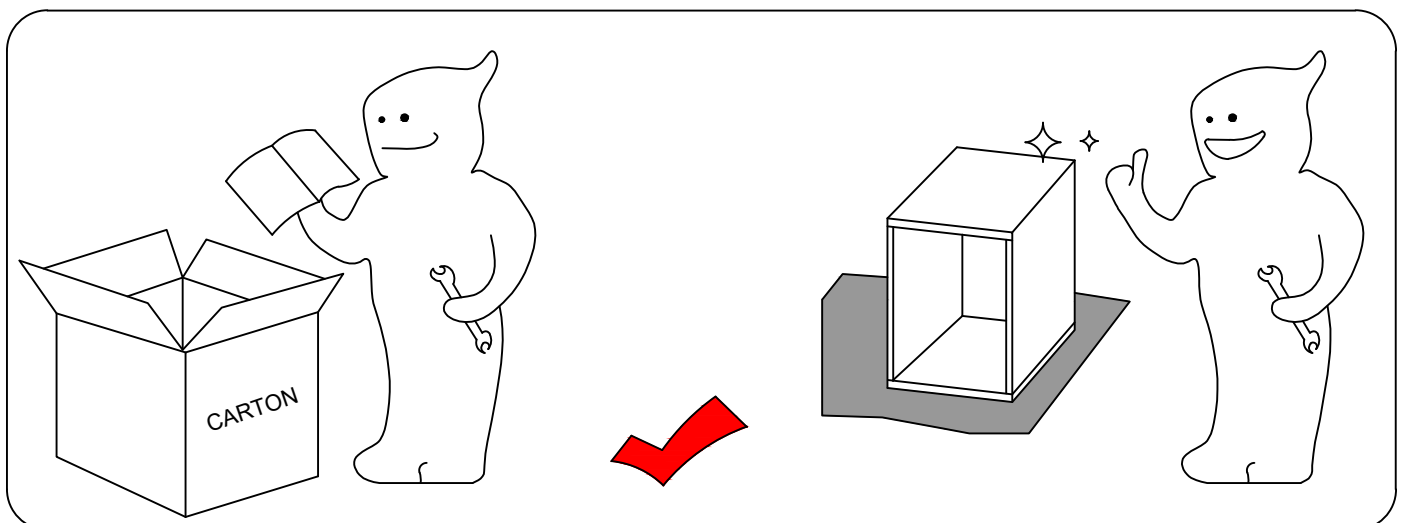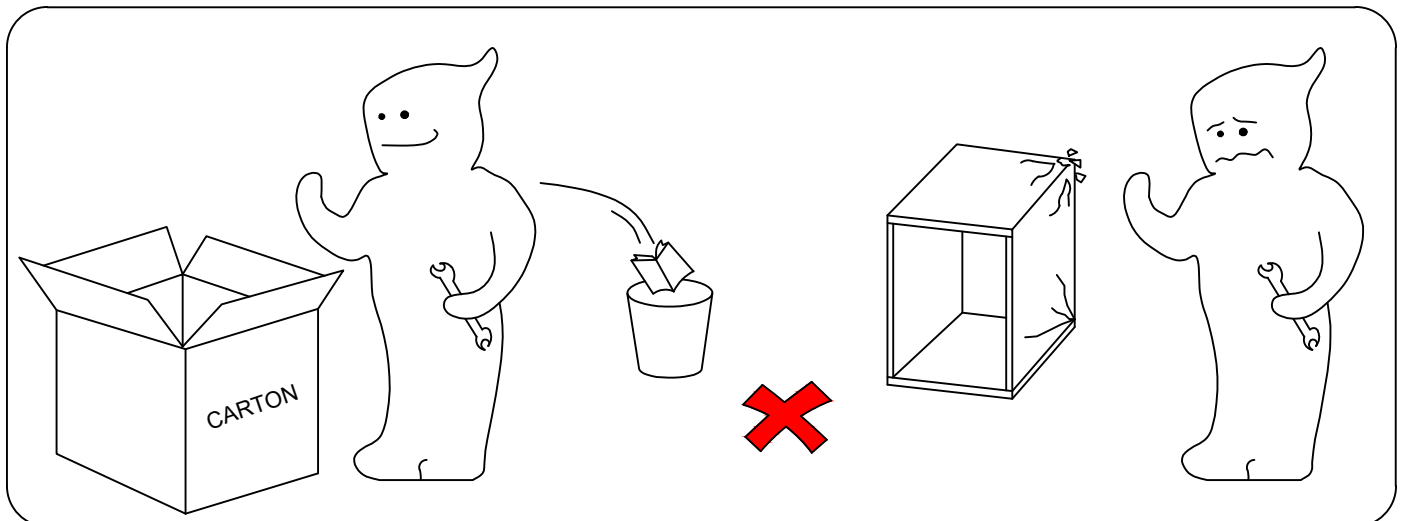


 homeycs@hotmail.com

Using Camlocks


Connect the male camlock as directed in the assembly instructions using a screwdriver.

1 DO NOT OVER TIGHTEN

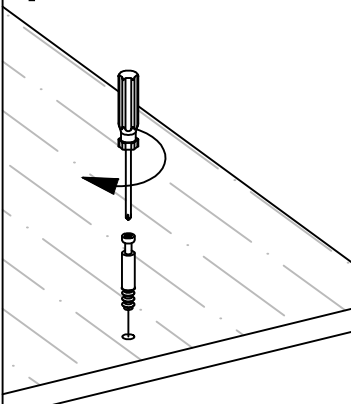

Push the male camlock into the entry hole.


2

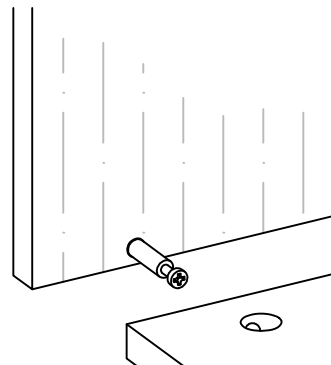

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

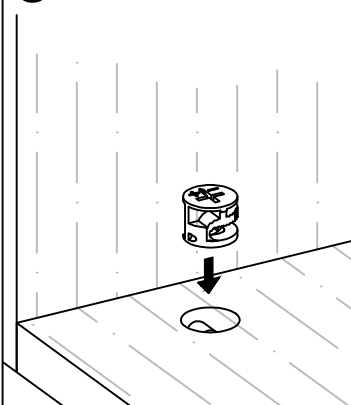



Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.














The joint is now secure.

4









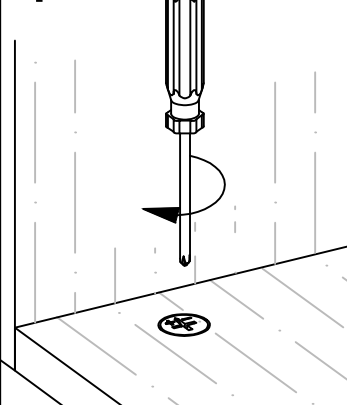


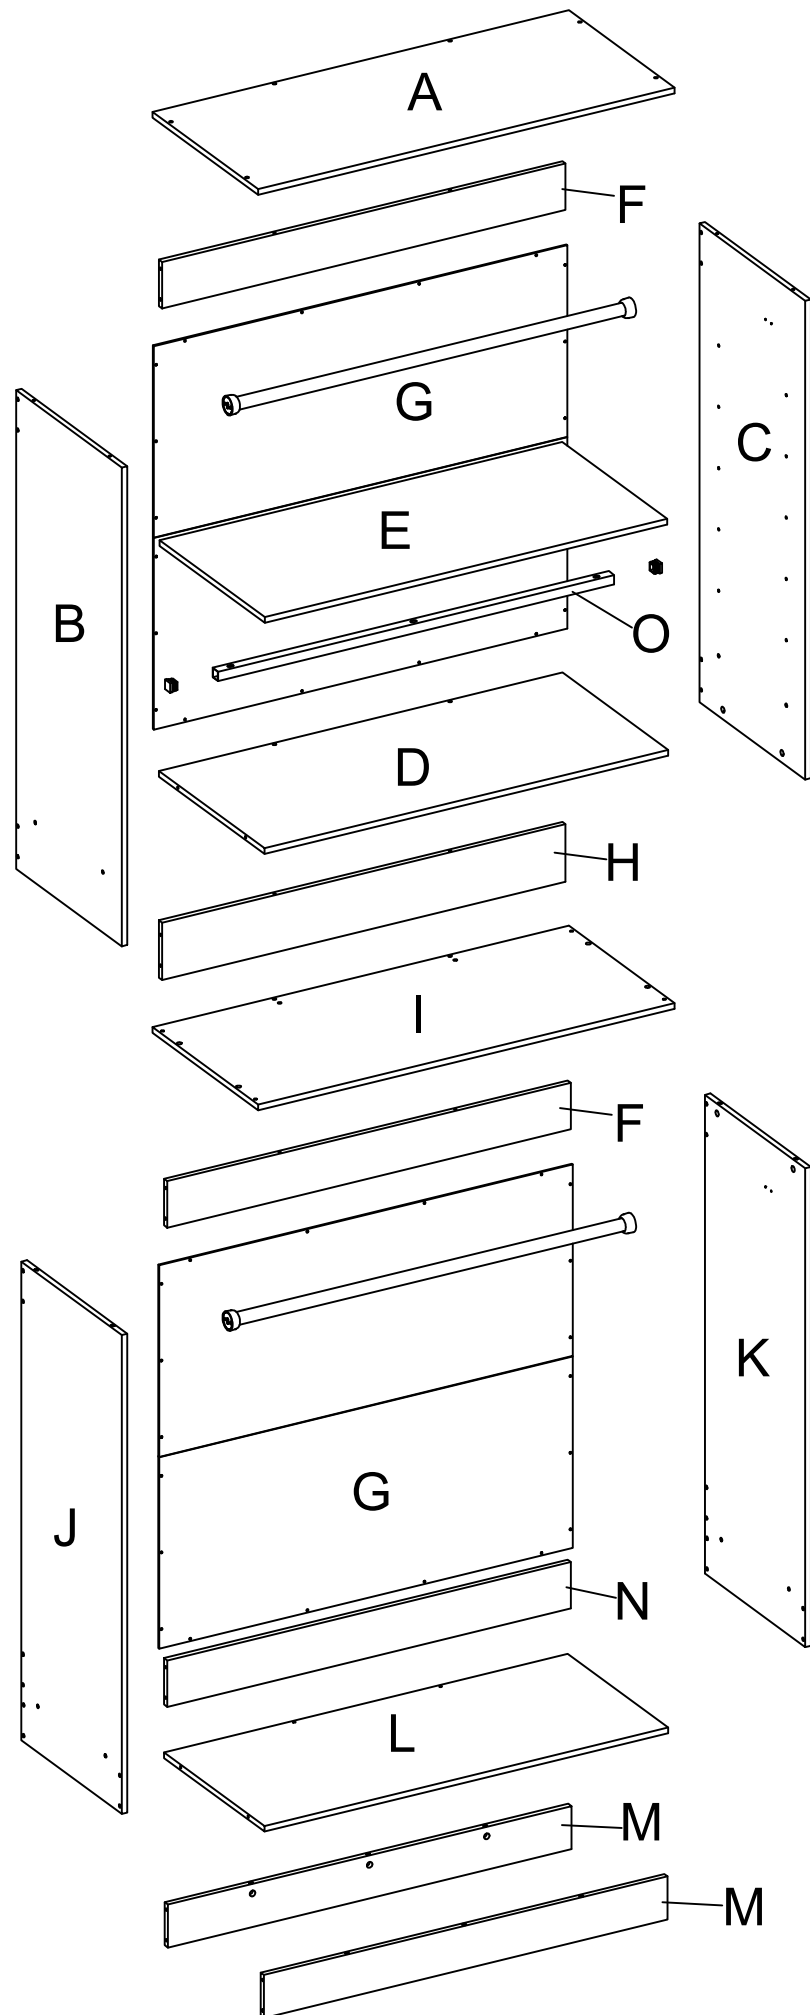


PART LIST

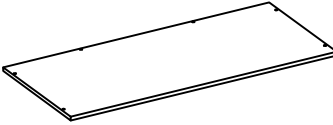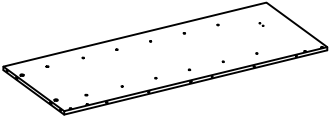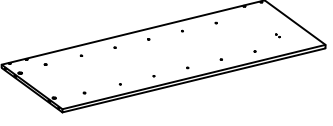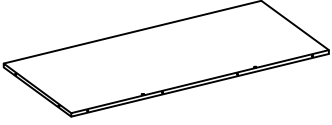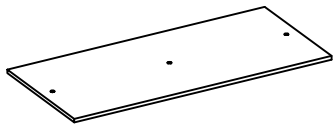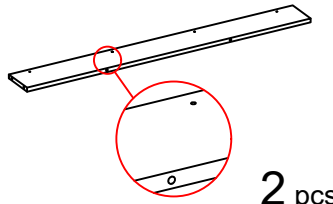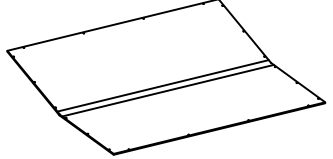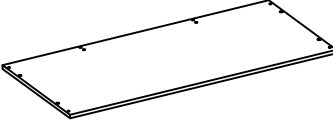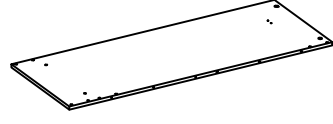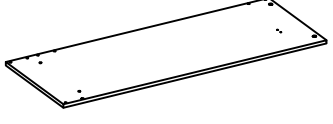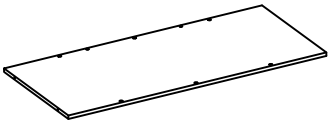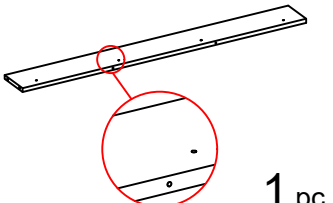A  1 pc	B  1 pc	C  1 pc	D  1 pc
E  1 pc	F  2 pcs	G  2 pcs	H  1 pc
I  1 pc	J  1 pc	K  1 pc	L  1 pc
M  2 pcs	N  1 pc	O  1 pc	


HARDWARE LIST

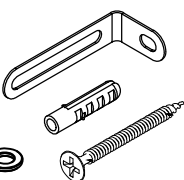①  M6x28 14 pcs	②  Ø12 14 pcs	③  M6x40 44 pcs	④  M4x30 2 pcs
⑤  M4x40 2 pcs	⑥  M3x16 40 pcs	⑦  20x20 2 pcs	⑧  M6x27 3 pcs
⑨  Ø25x869 2 pcs	⑩  4 pcs	⑪  4 pcs	⑫  M4x12 8 pcs
⑬  8 pcs	⑭  M6x19 4 pcs	⑮  M6x30 4 pcs	⑯  M4 1 pc
⑰  1 pc			



STEP 1





*Please use a hammer or solid tools
(not included) to knock the plastic pads
into the frame.*

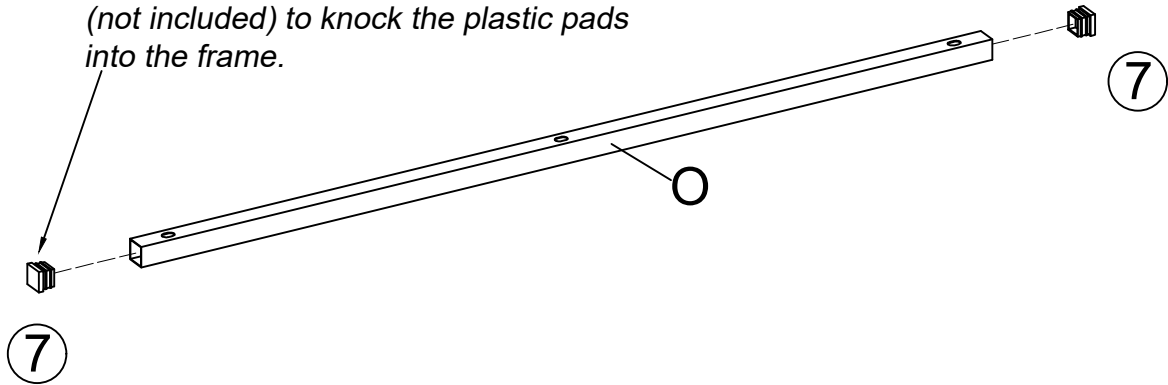


STEP 2

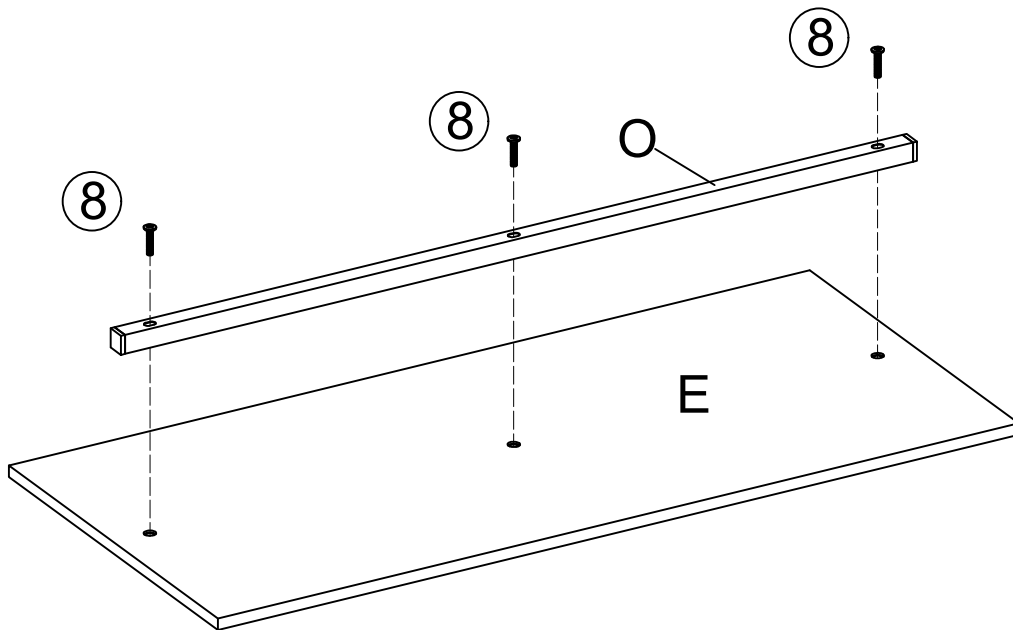


STEP 3

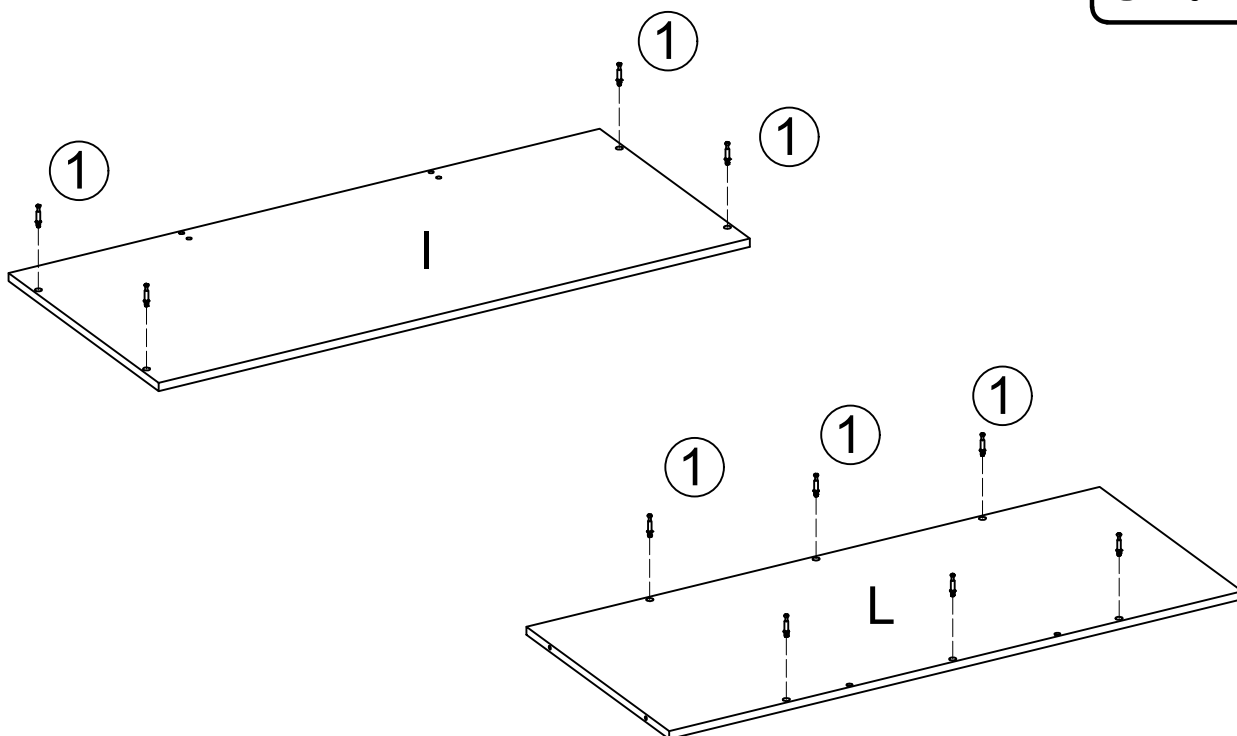

STEP 4




Keep the holes of the Part N
toward this direction as shown

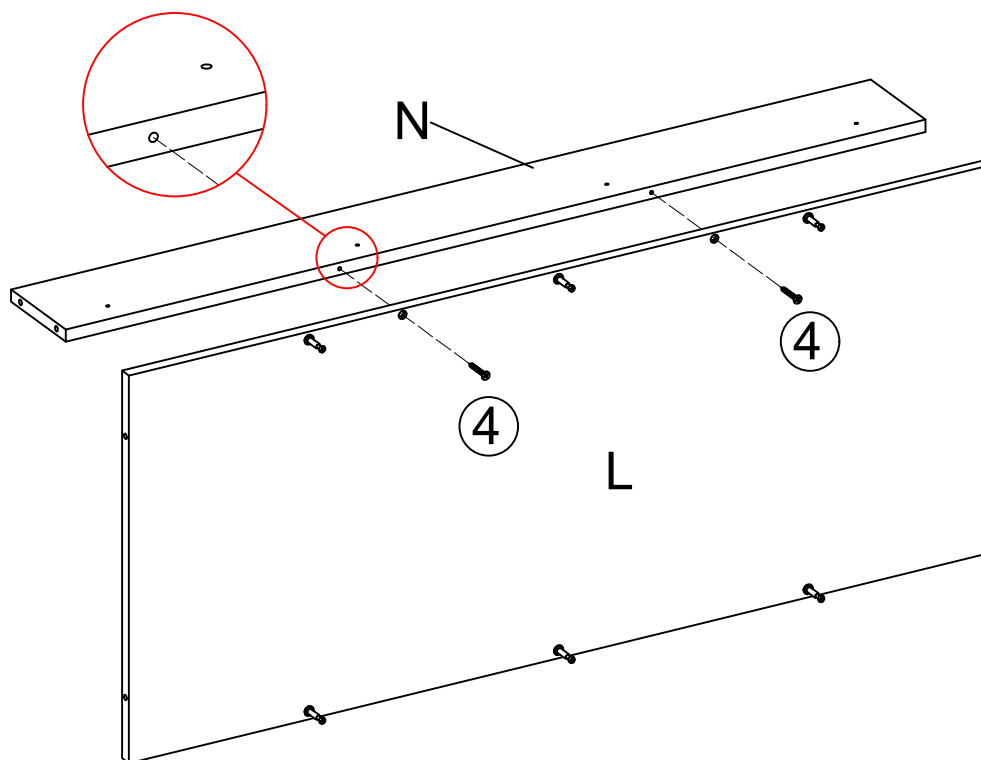


STEP 5

2  x6


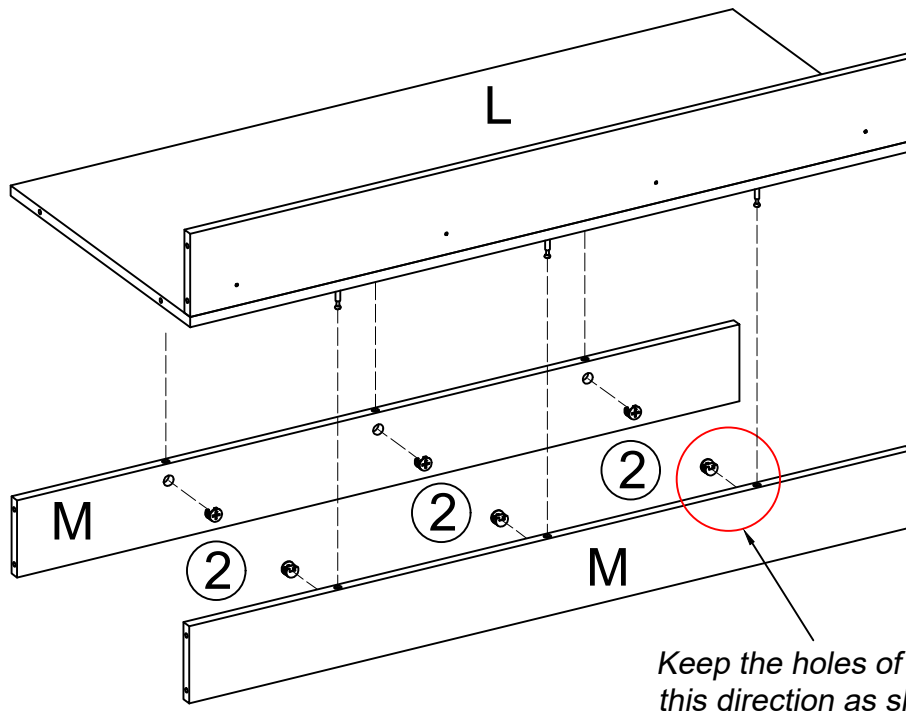


STEP 6

3  x20



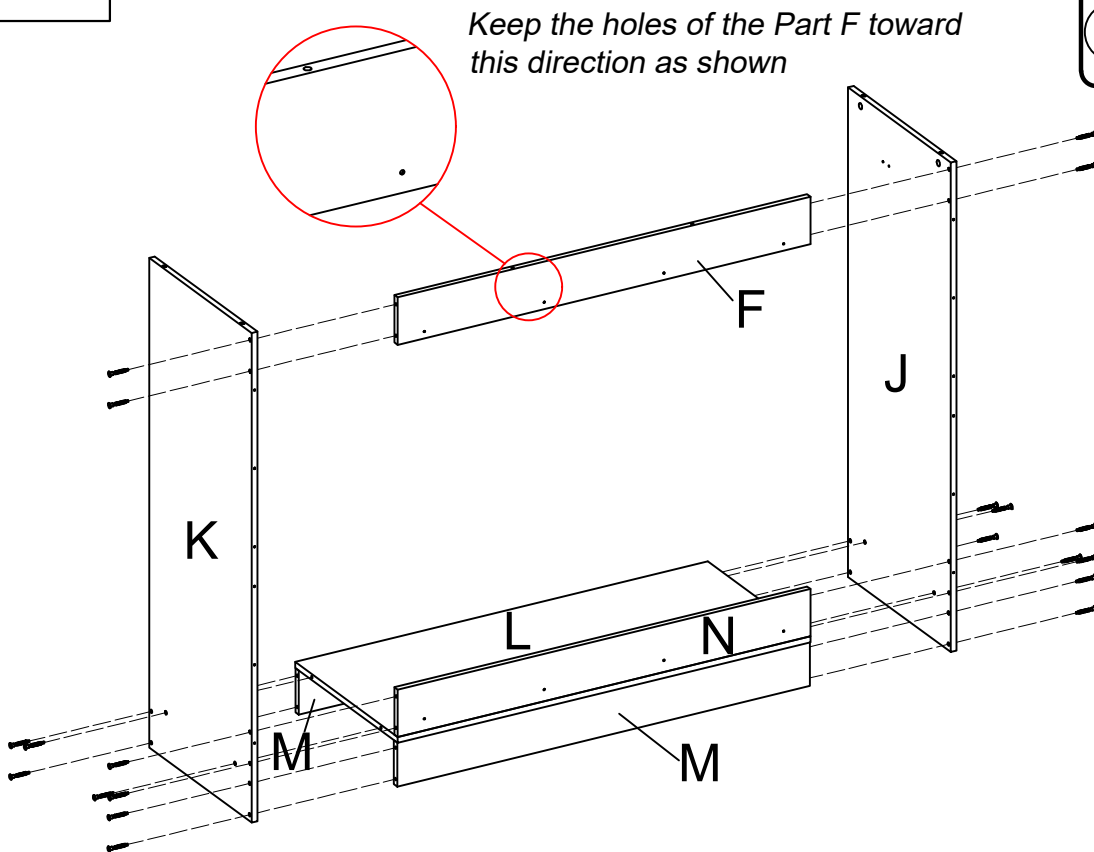


STEP 7

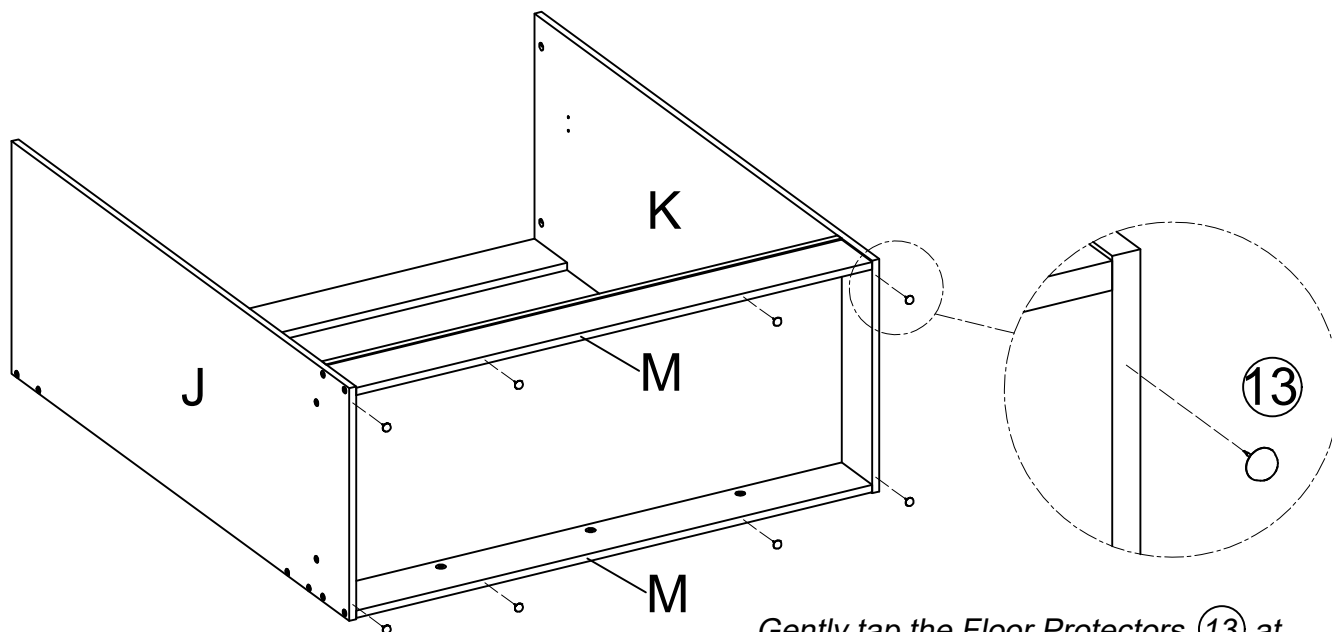


Gently tap the Floor Protectors (13) at the bottom of side panels avoiding crack or damage of side panel.


STEP 8

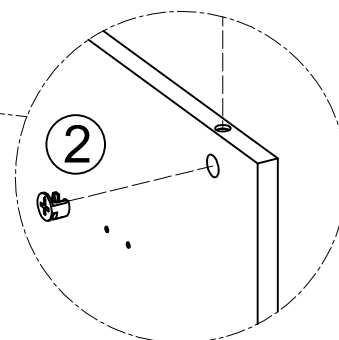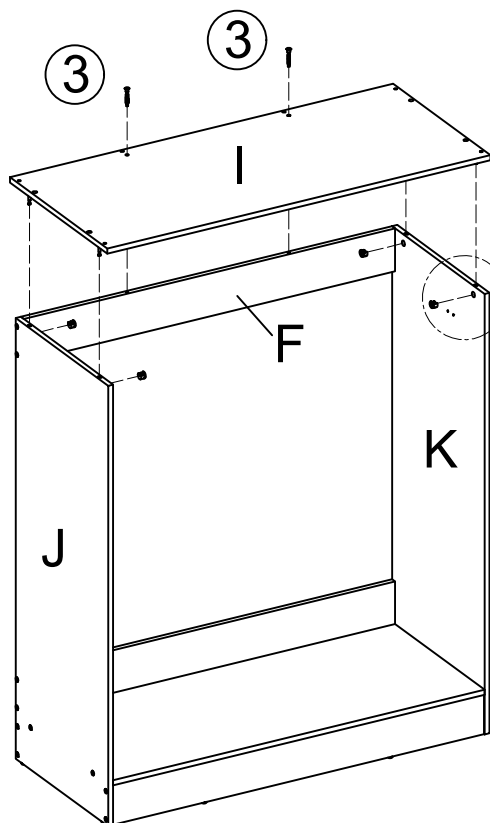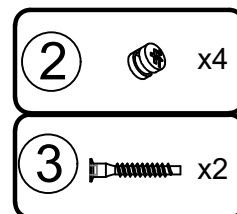



STEP 9

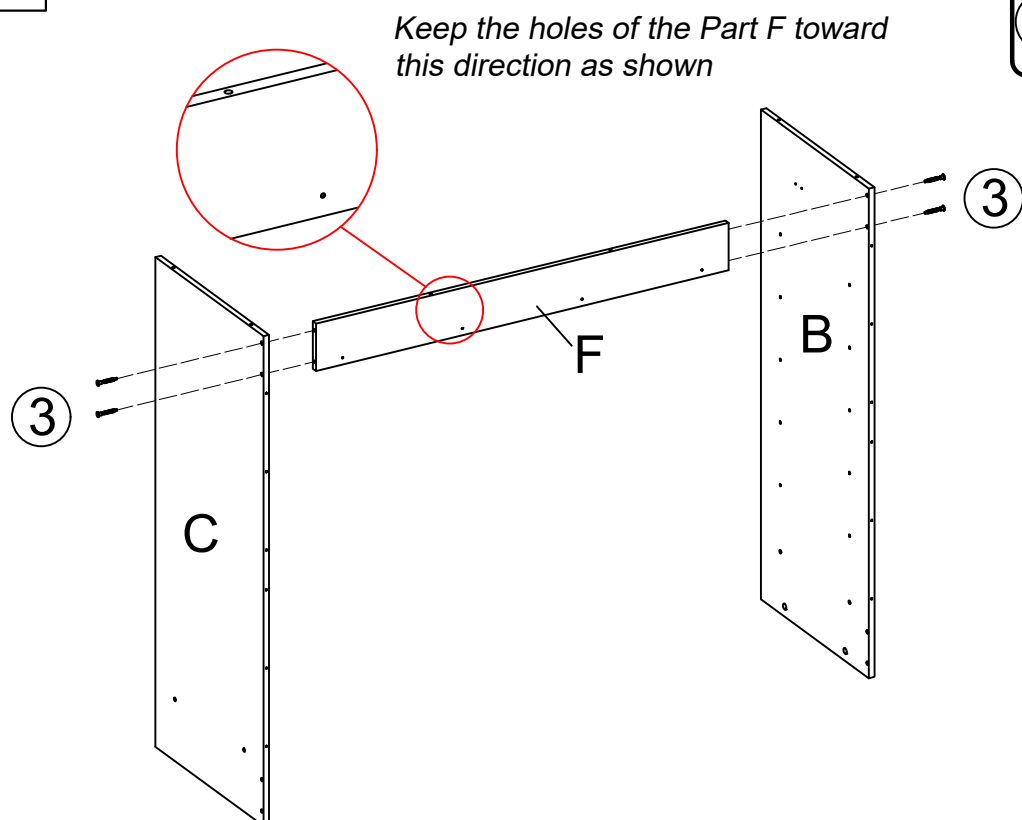




STEP 10

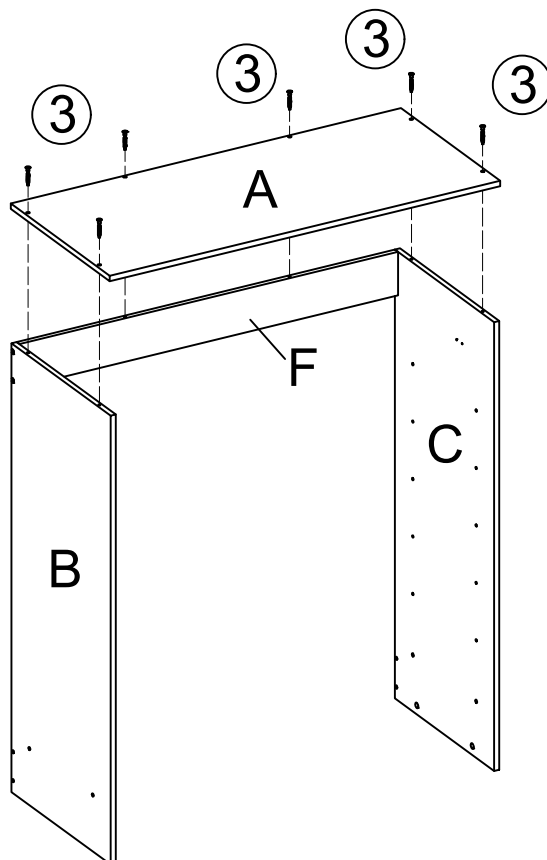



STEP 11

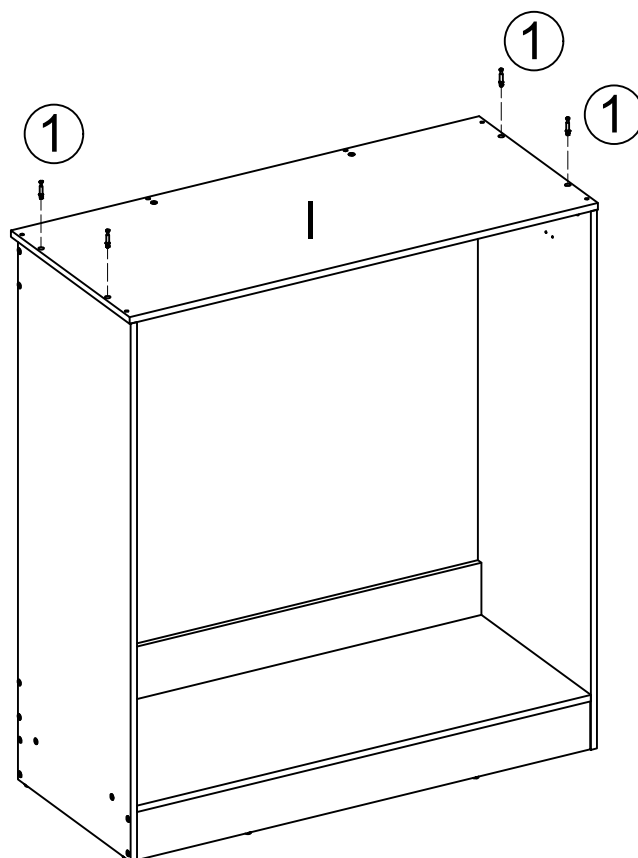



STEP 12

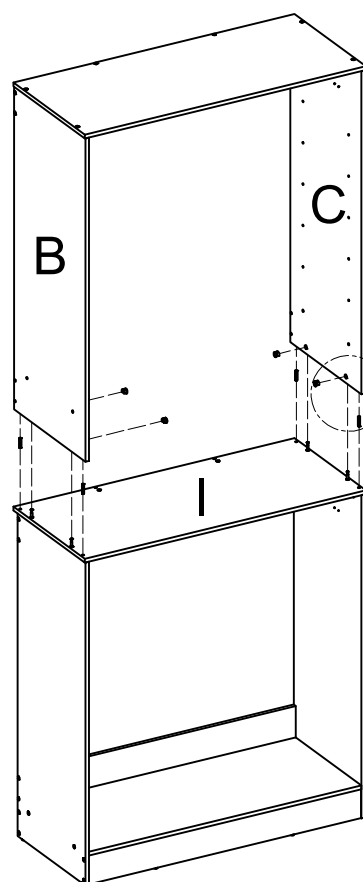


STEP 13

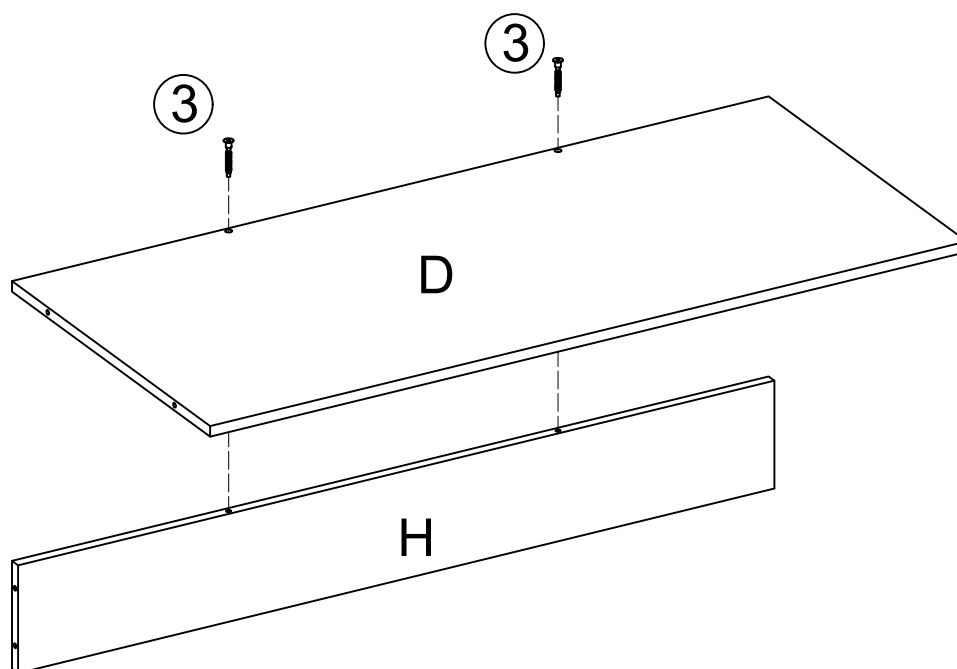

STEP 14


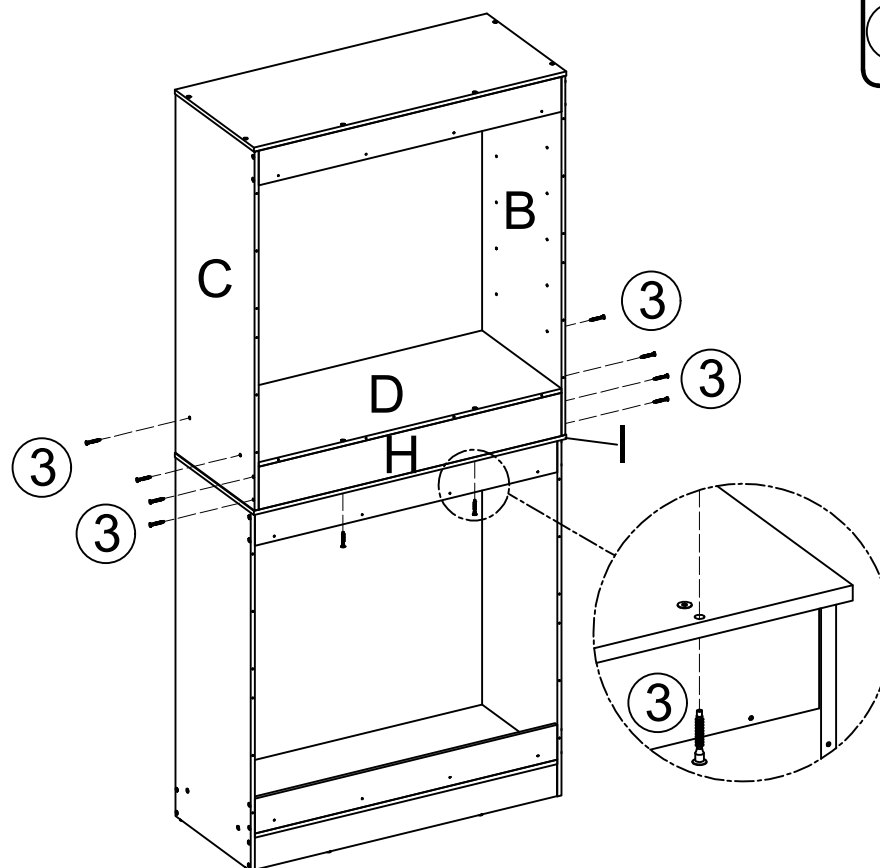



STEP 15

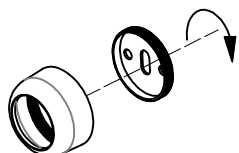



Please rotate and remove parts ⑩ and ⑪ as instructed.

Note: If necessary, please wear protective gloves during this step to avoid hand injuries.

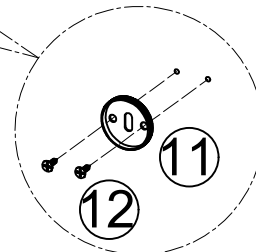
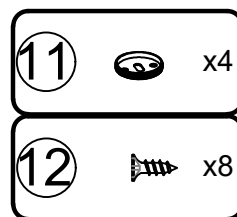
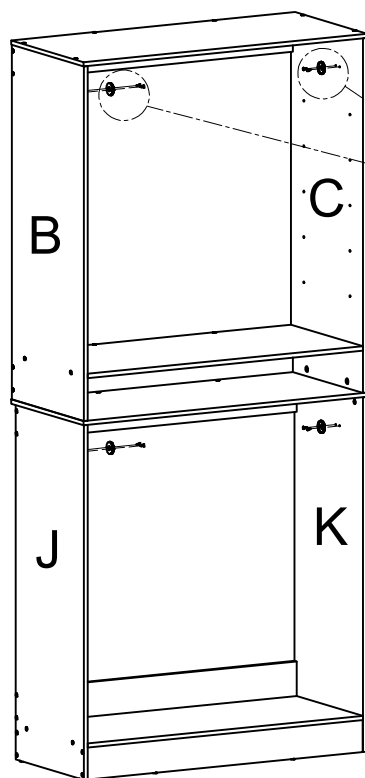


STEP 16


Please slide part ⑩ onto the rod part ⑨ with the threads facing outwards.

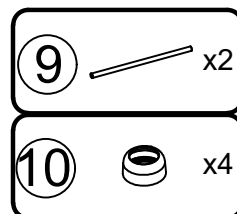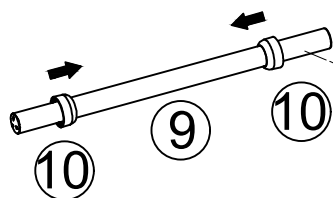


reinstall part ⑩ to part ⑪.

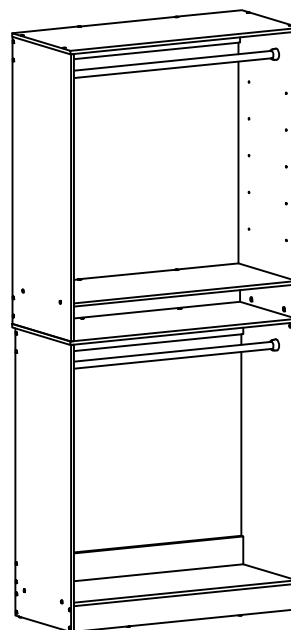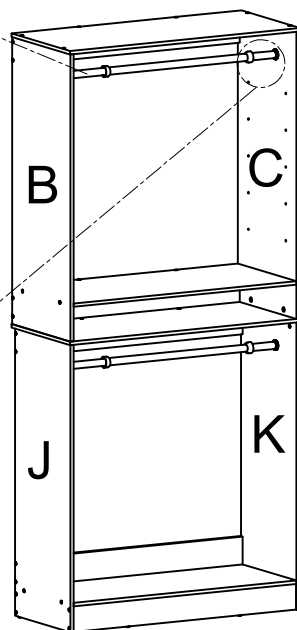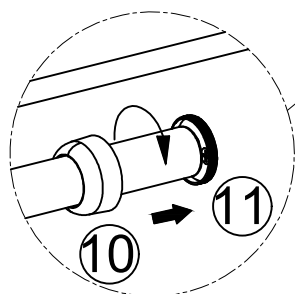


STEP 17

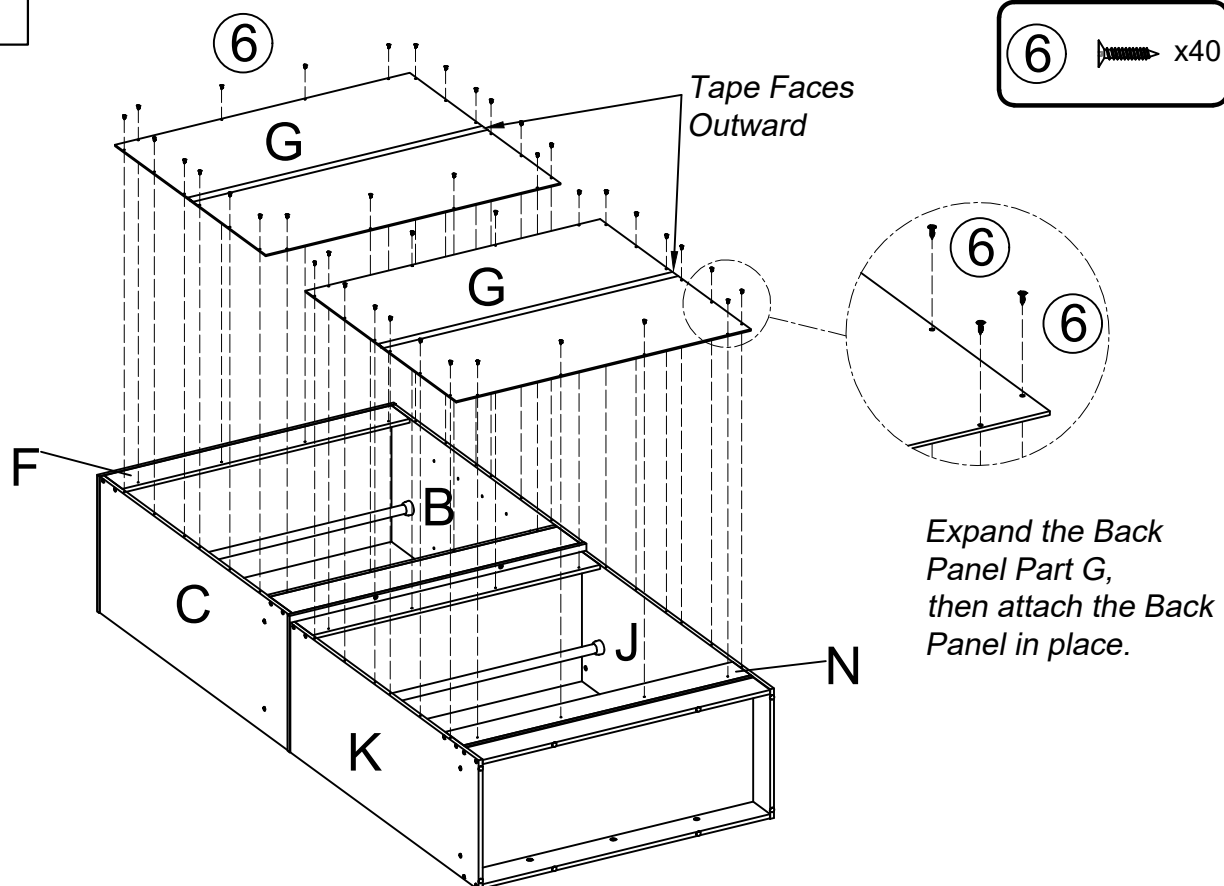

STEP 18

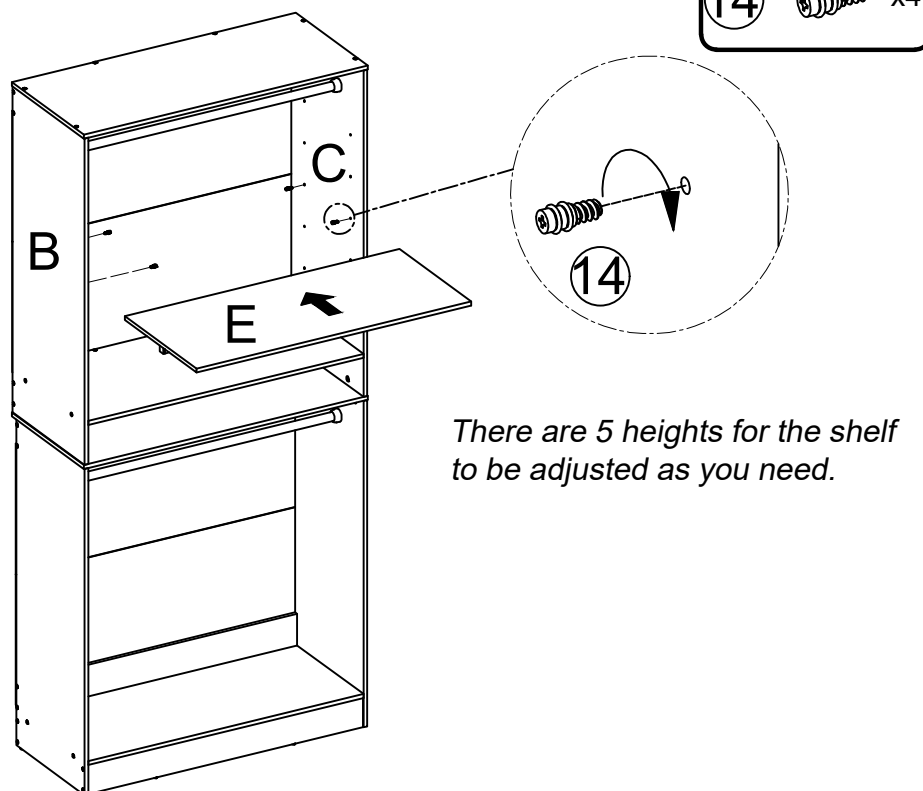

TIPPING RESTRAINT HARDWARE



Note: We have included two Tipping Restraint Hardware set for this Unit. When properly installed, this restraint can provide protection against the unexpected tipping of the Unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your Unit.

Note: You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit.

