
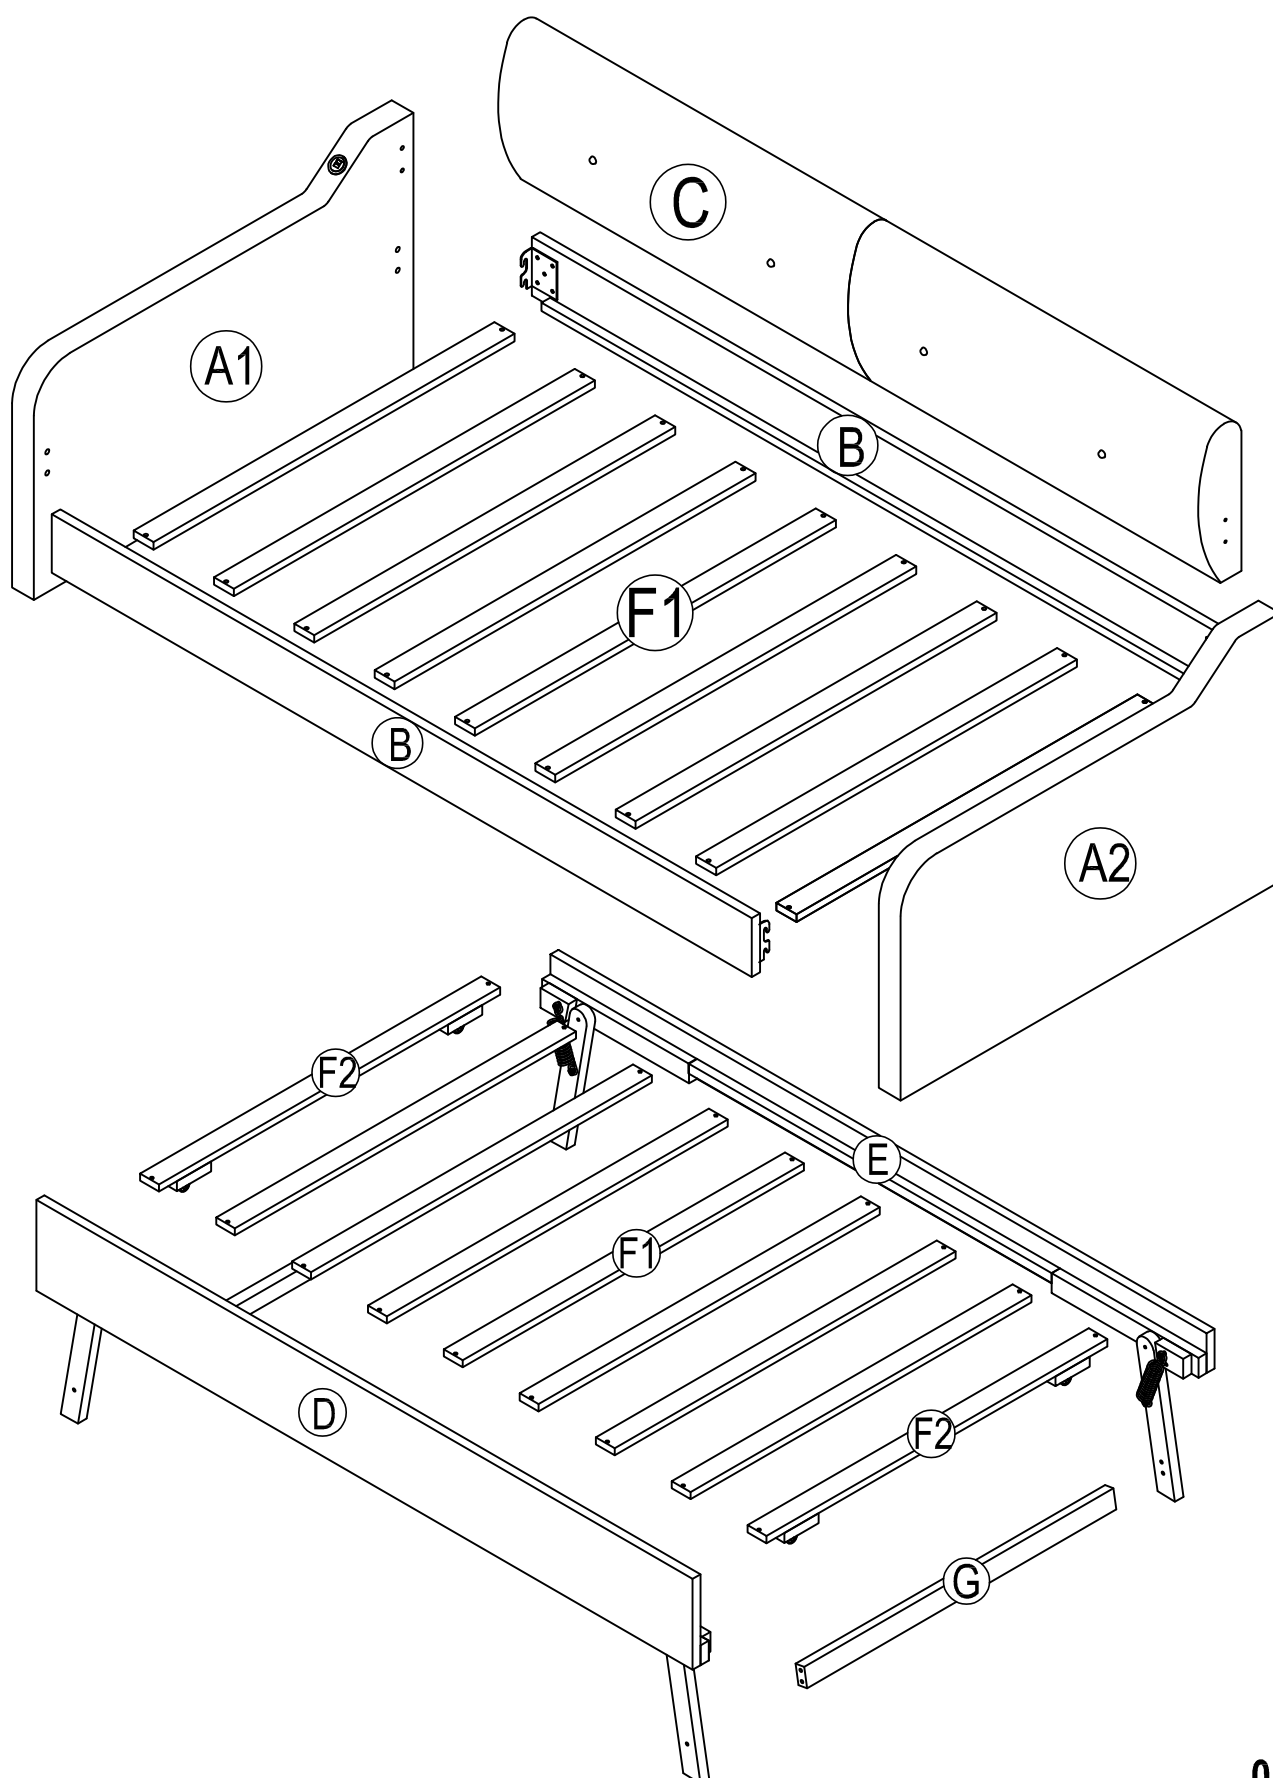
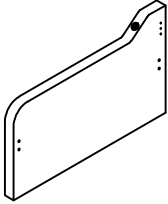
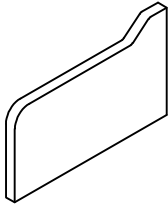
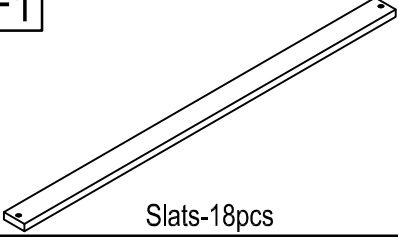







ASSEMBLY INSTRUCTION

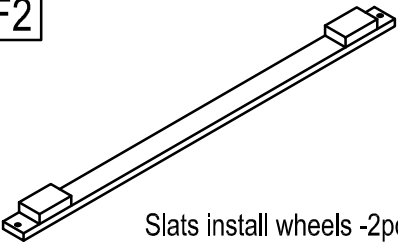






Part List


A1  HeadBoard-1pcs	A2  FootBoard-1pcs	F1  Slats-18pcs
F2  Slats install wheels -2pcs		

Hardware List

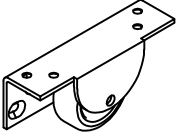1  Plastic Feet(Ø50x40) 4pcs	2  Ø1/4" x 30 mm Wood Screws 8pcs	3  Ø1/4" x 50 mm Wood Screws 8pcs
4  M4 x 30 mm Wood Screws 48pcs	5  Ø10 x 40 mm Wood dowel 4pcs	6  Wheels 4pcs
7  Allen Key 1pc	8  Steel Bracket 3pcs	9  M4 x 15 mm Wood Screws 12pcs

Part List

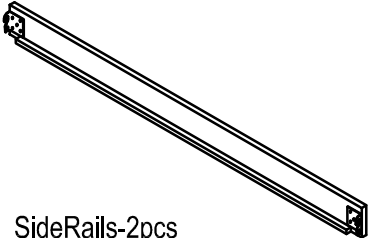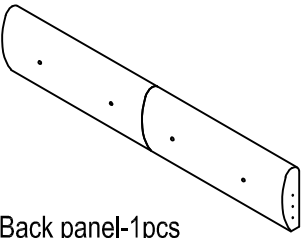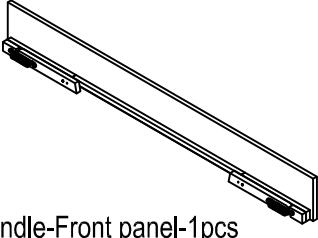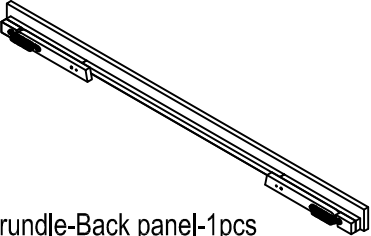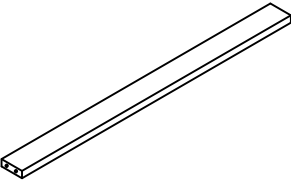
B  Side Rails-2pcs	C  Back panel-1pcs	D  Trundle-Front panel-1pcs
E  Trundle-Back panel-1pcs	G  Trundle Legs Bar-2pcs	





Assembly Tools Required (Not Included)

STEP 1: Following below illustration Assembly Plastic Feet(#1) With Headboard and Footboard use HW #2

1




4pcs

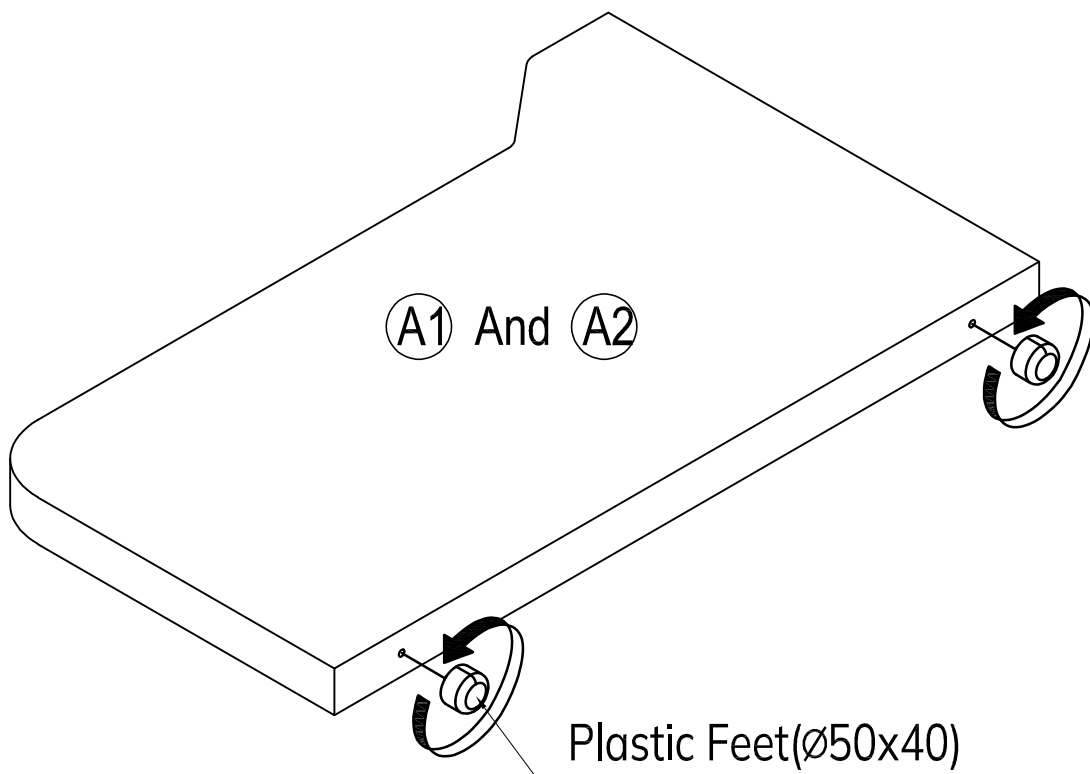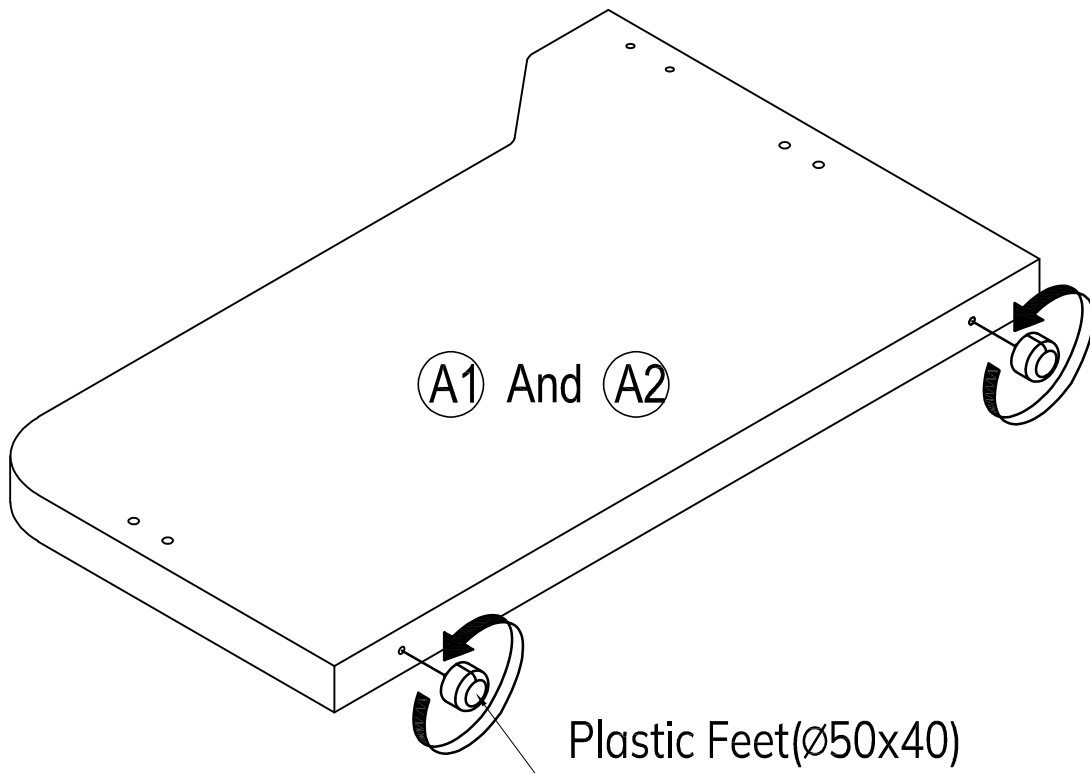


STEP 2: Following below illustration Using hardward #2 to Assembly Headboard and Footboard with siderail
B(x2).Look at detail view for more detail

2




8pcs

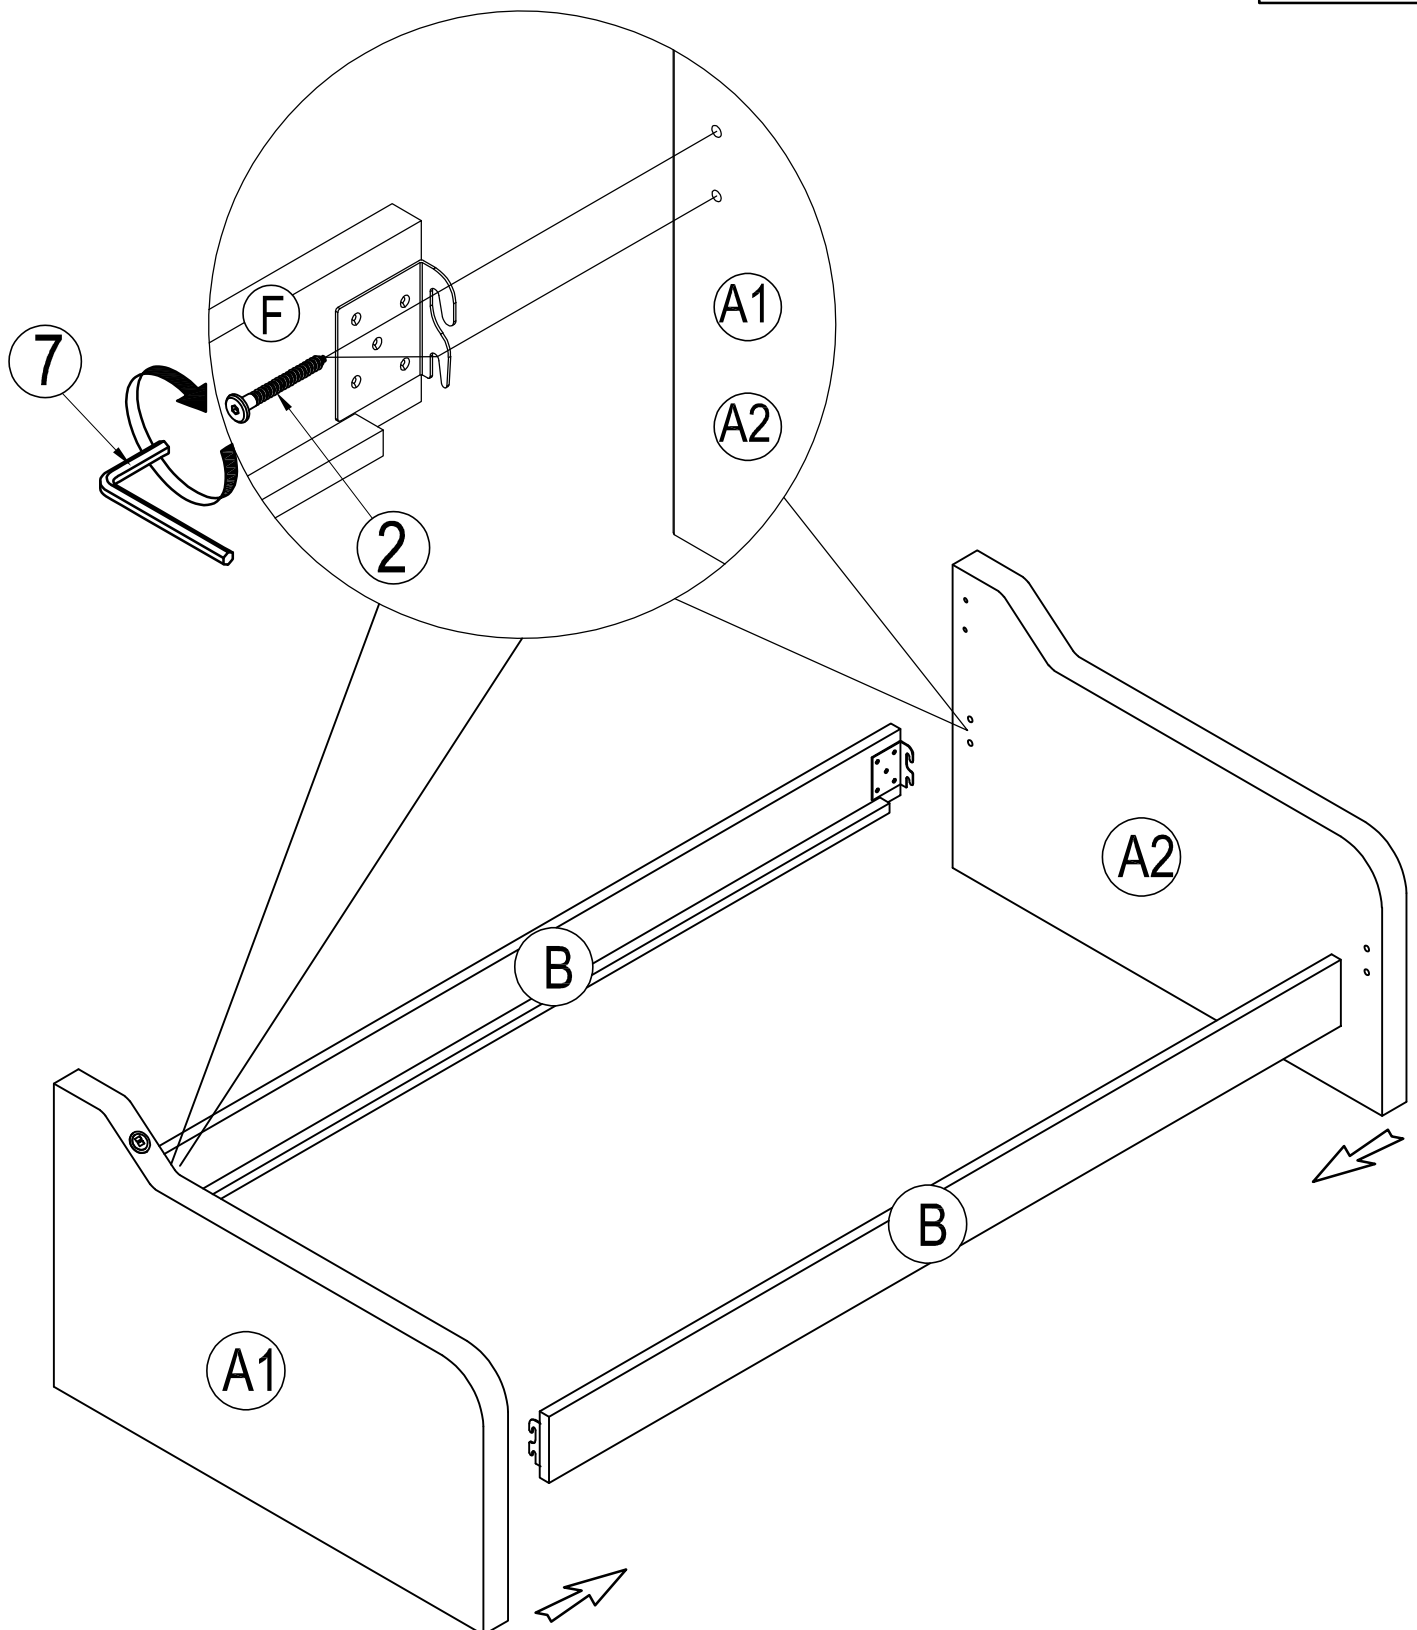



STEP 3: Following below illustration

-Using hardward #3 to Assembly Frame(completed on step 2) with Bach Frame C

8



6pcs

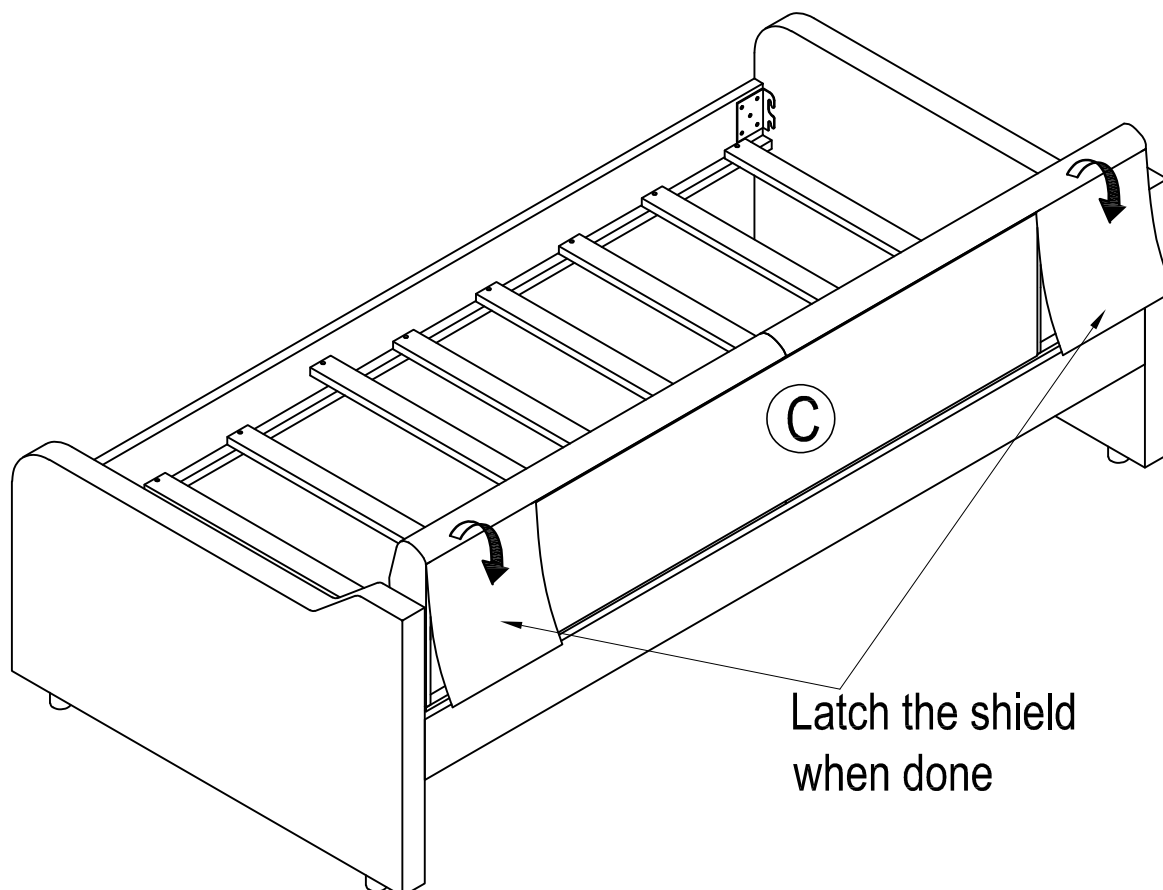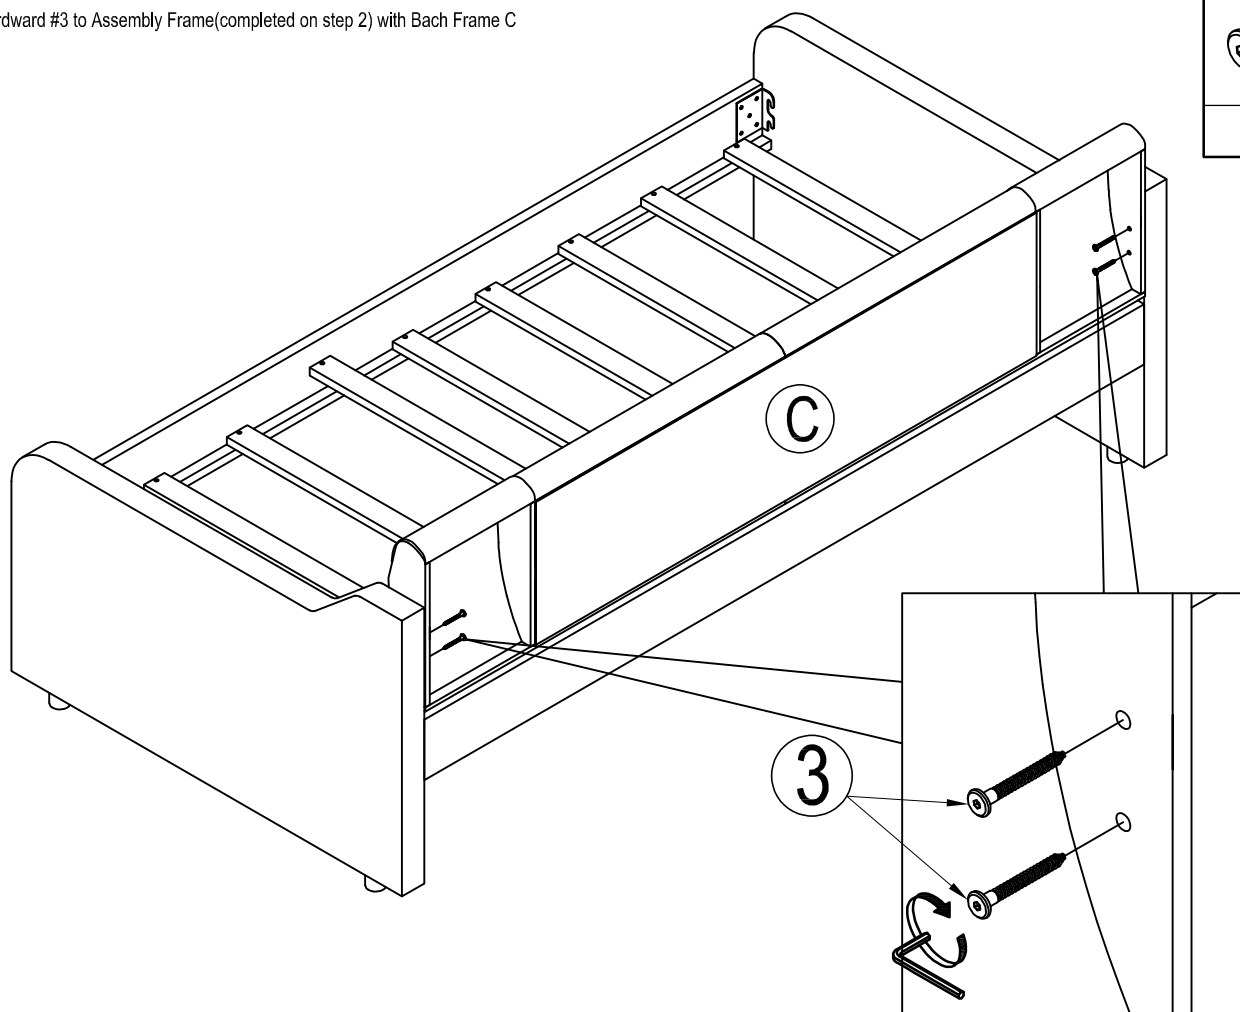

Latch the shield
when done

STEP 4: Following below illustration:


-Screw 10 slats F with Side Rail B by using hardware #4.

-Look at detail view for more detail


4




20pcs

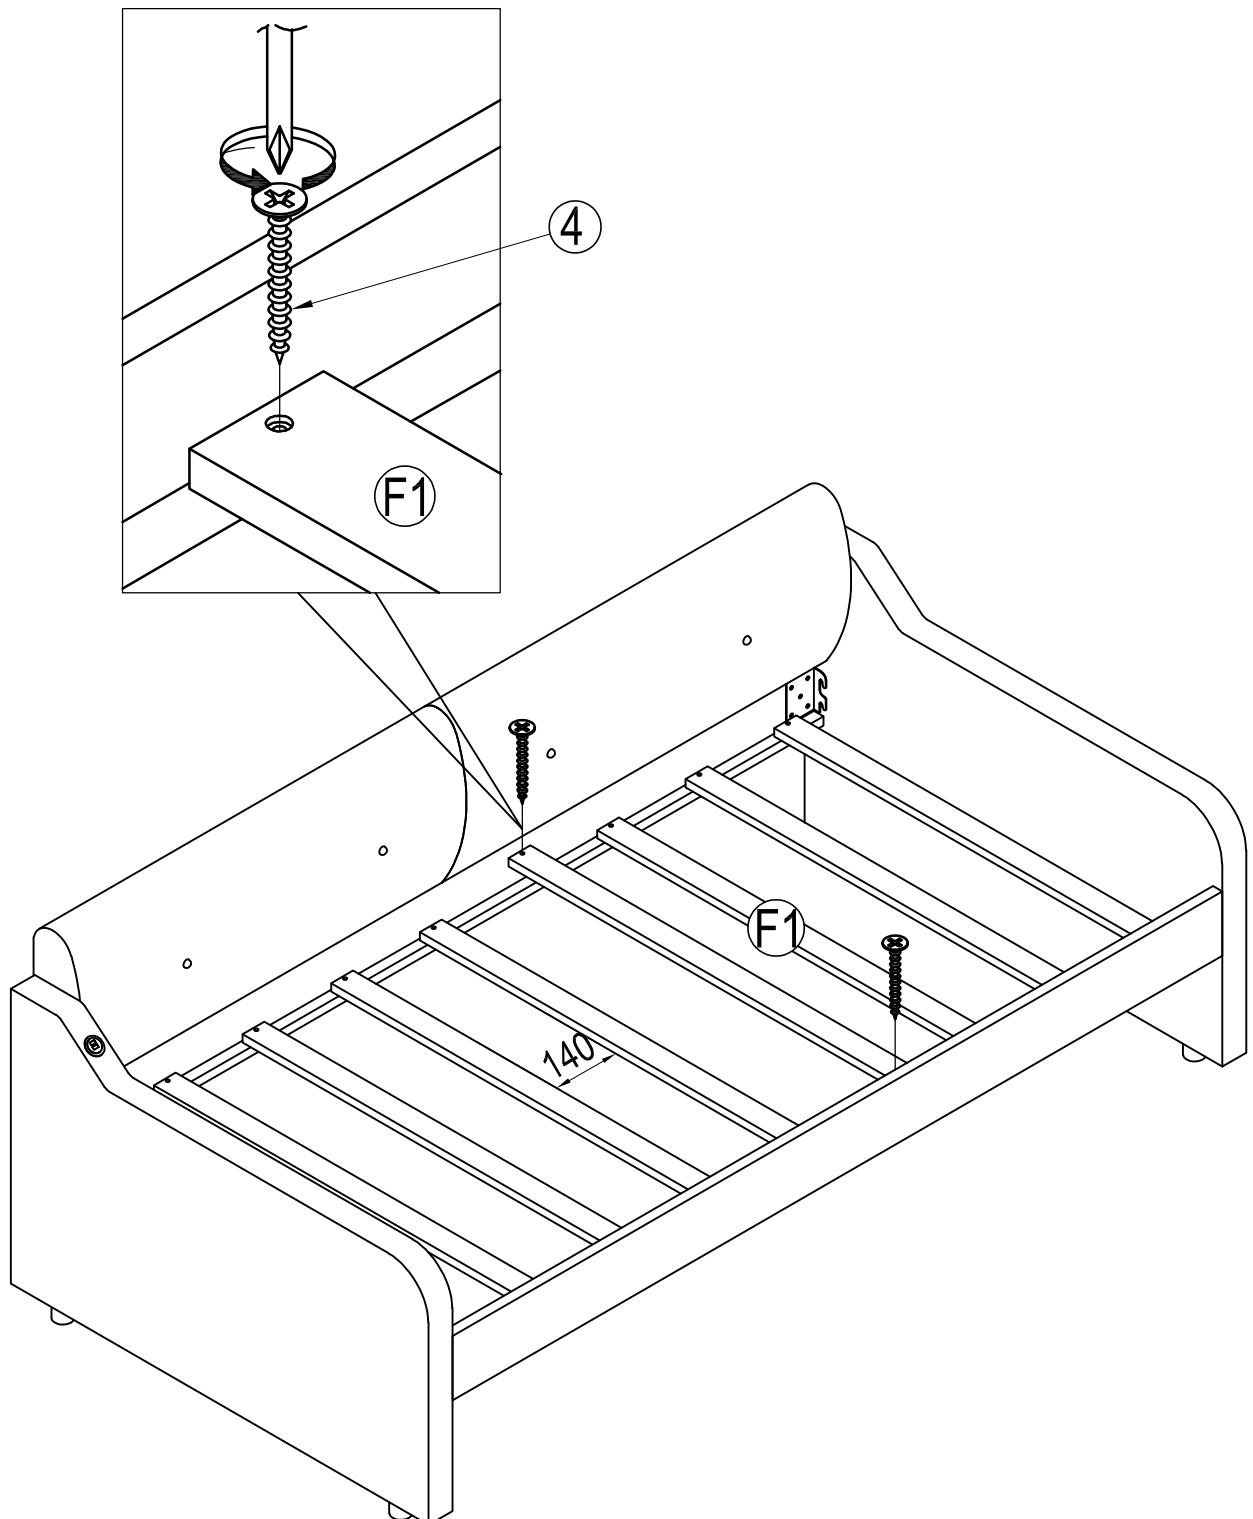



STEP 5-1: Following below illustration:

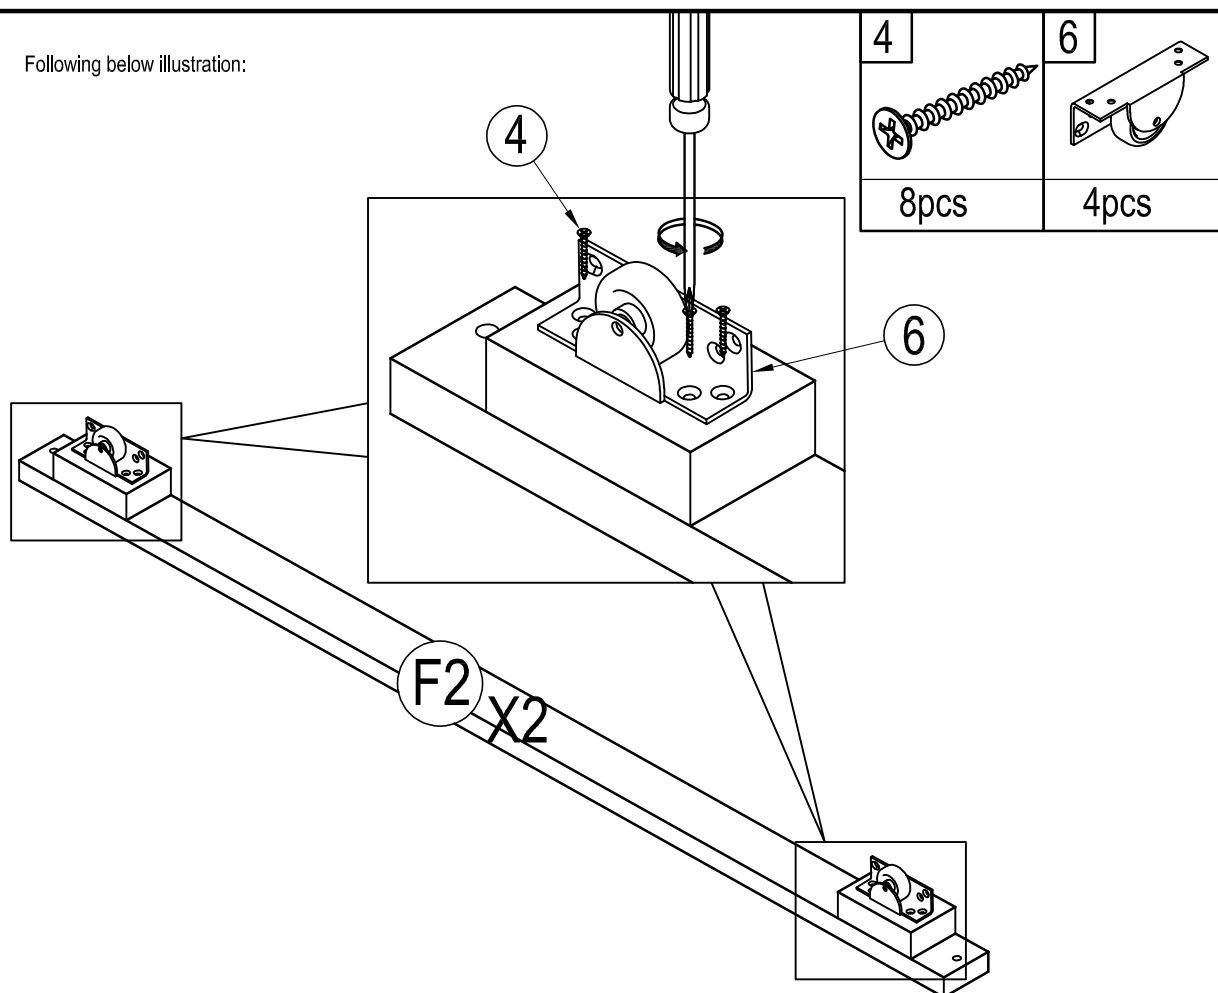


STEP 5-2: Loosen a screw number 4 and keep for step 6

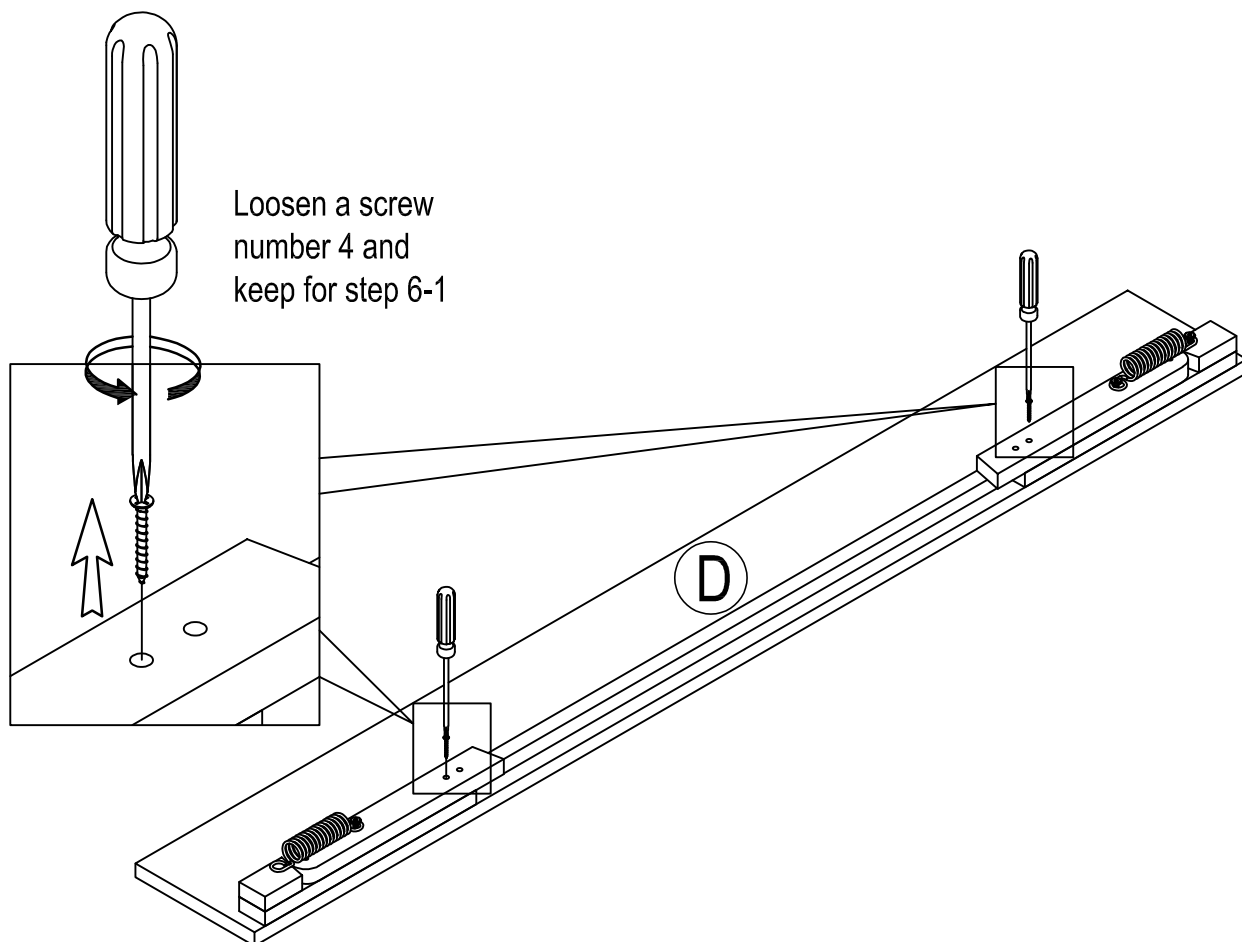

STEP 6-1: Following below illustration:


3	5
	
4pcs	4pcs

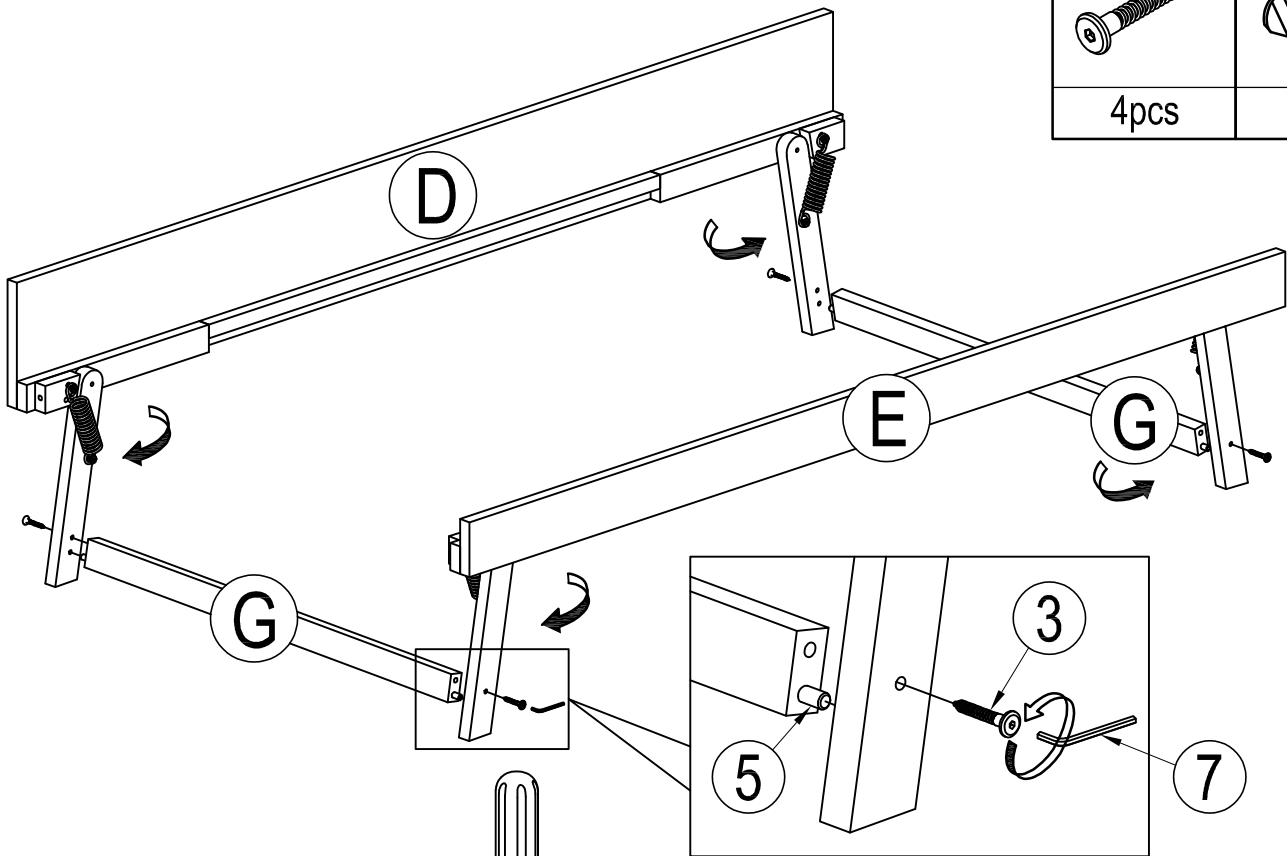

STEP 6-2: Following below illustration:


4

20pcs

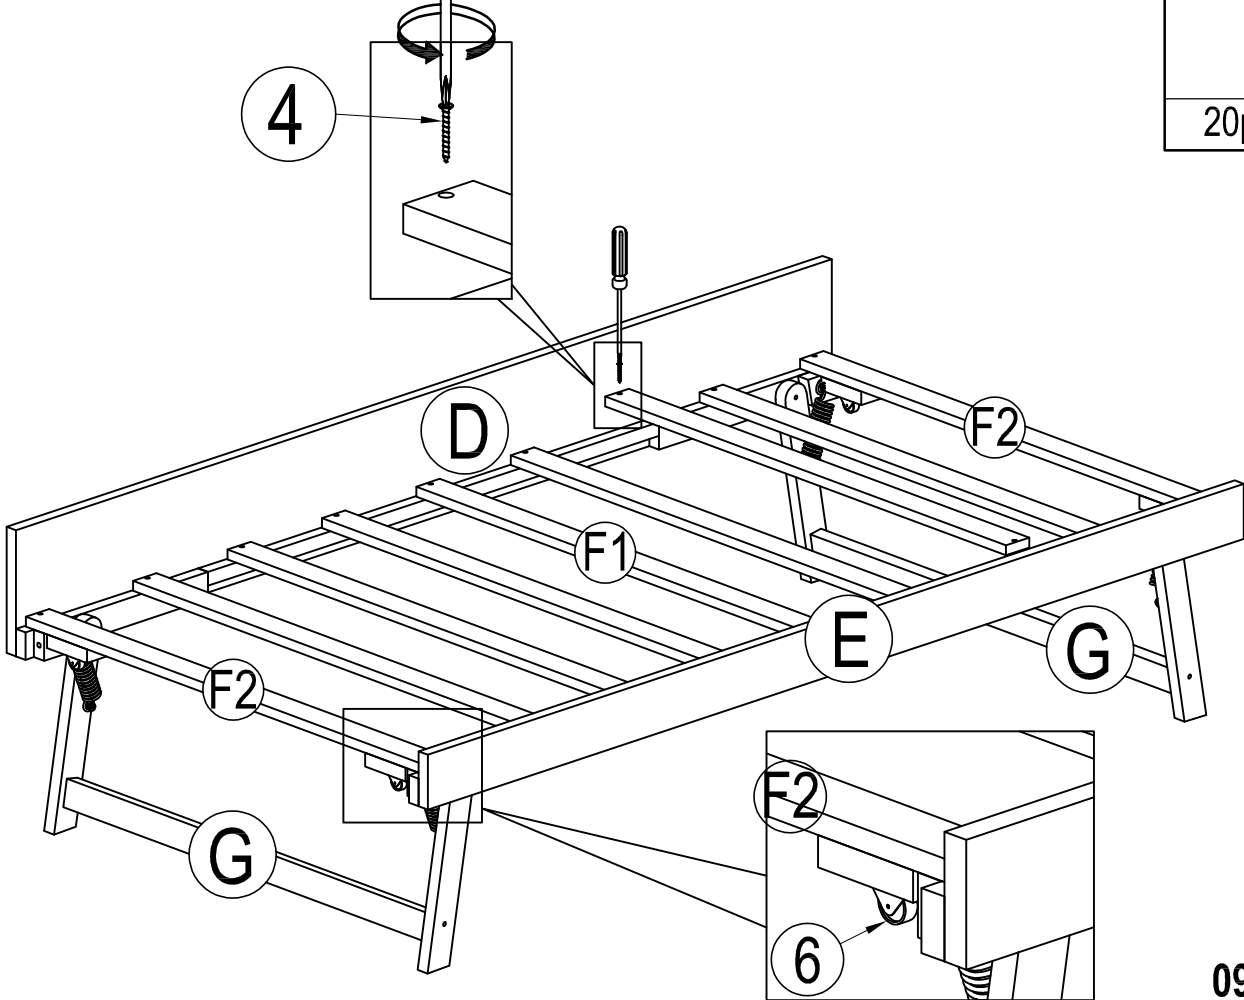

STEP 7: Following below illustration:

8		9	
3pcs		12pcs	

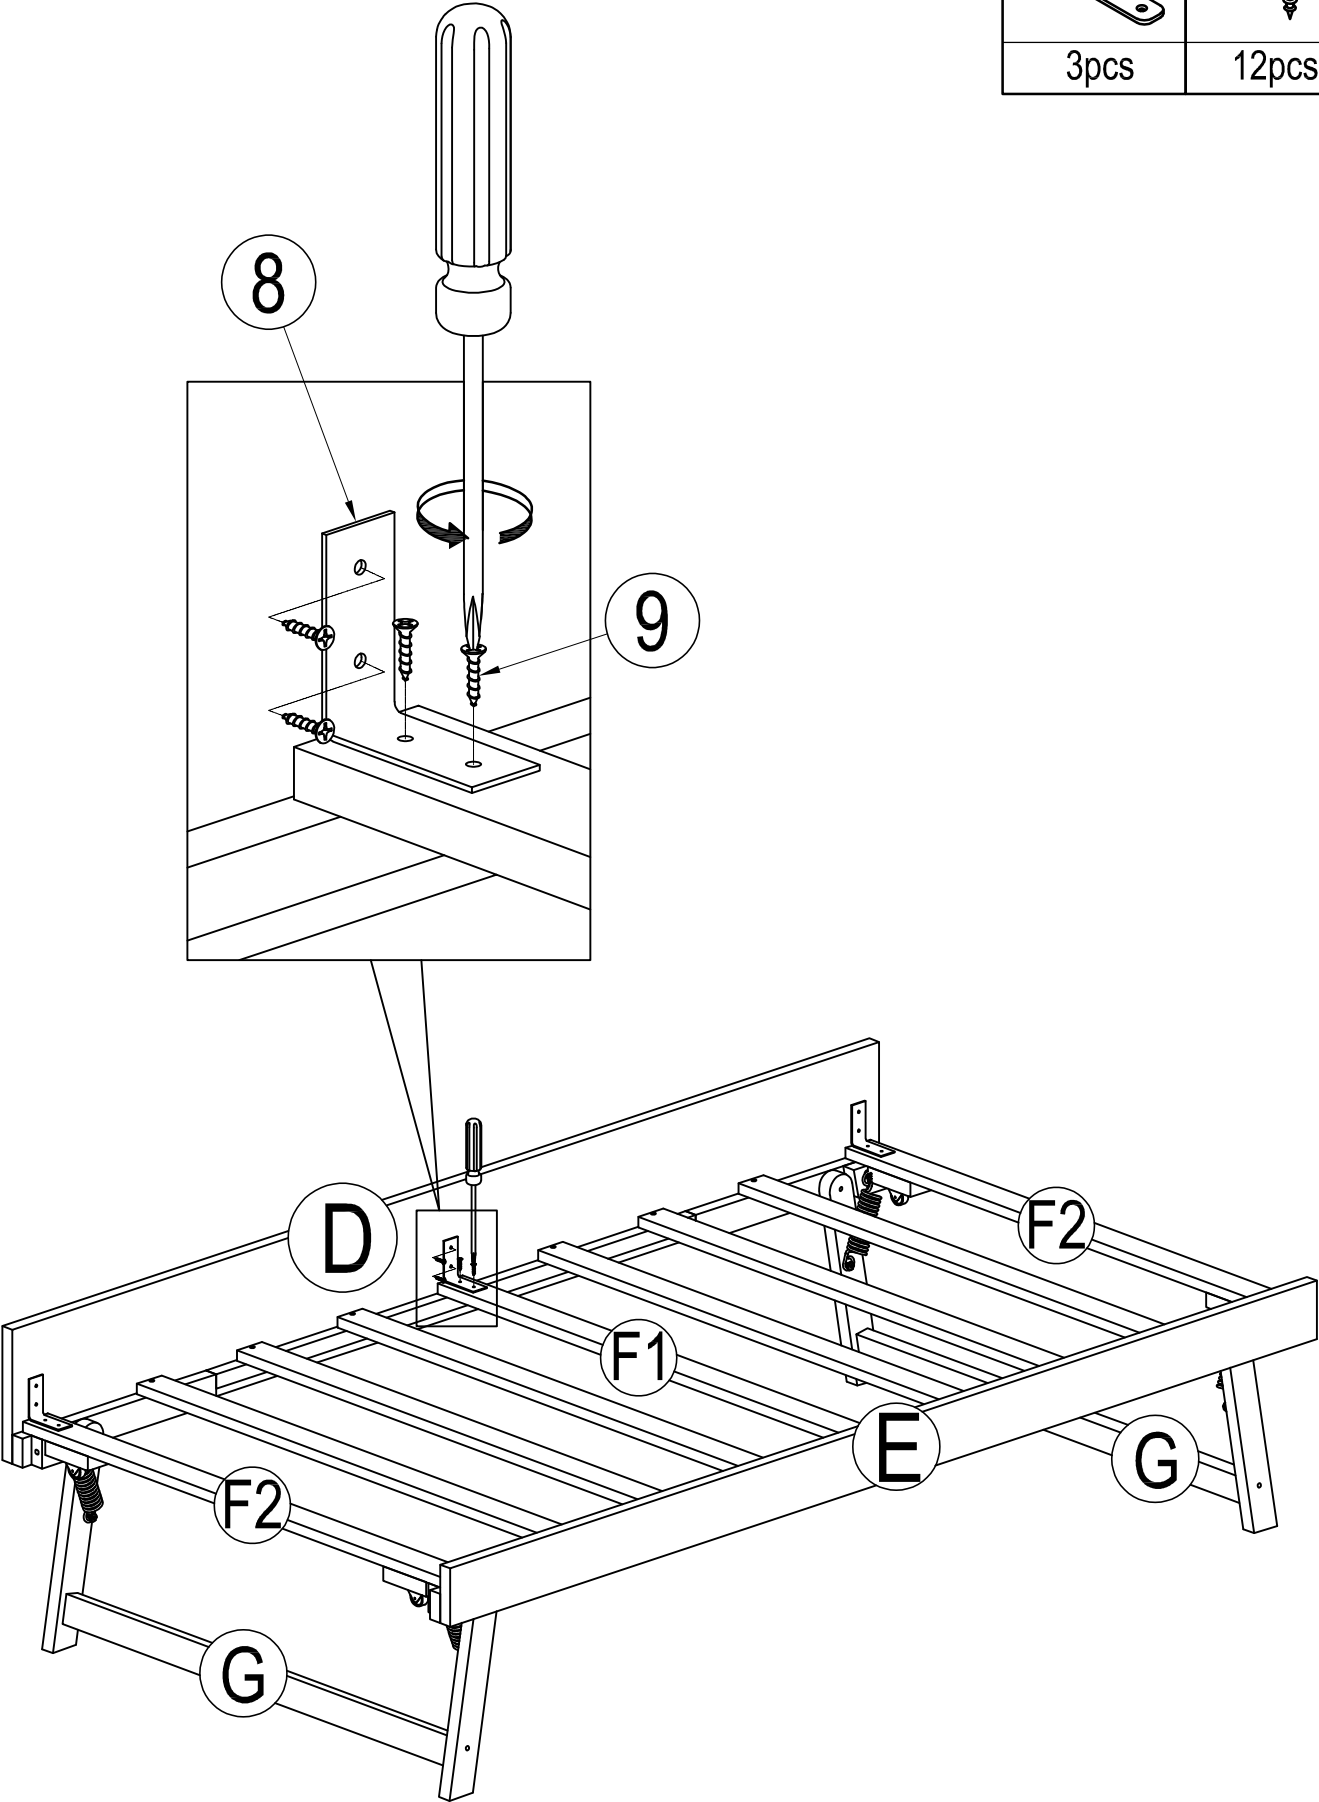

STEP 8: Following below illustration:

