
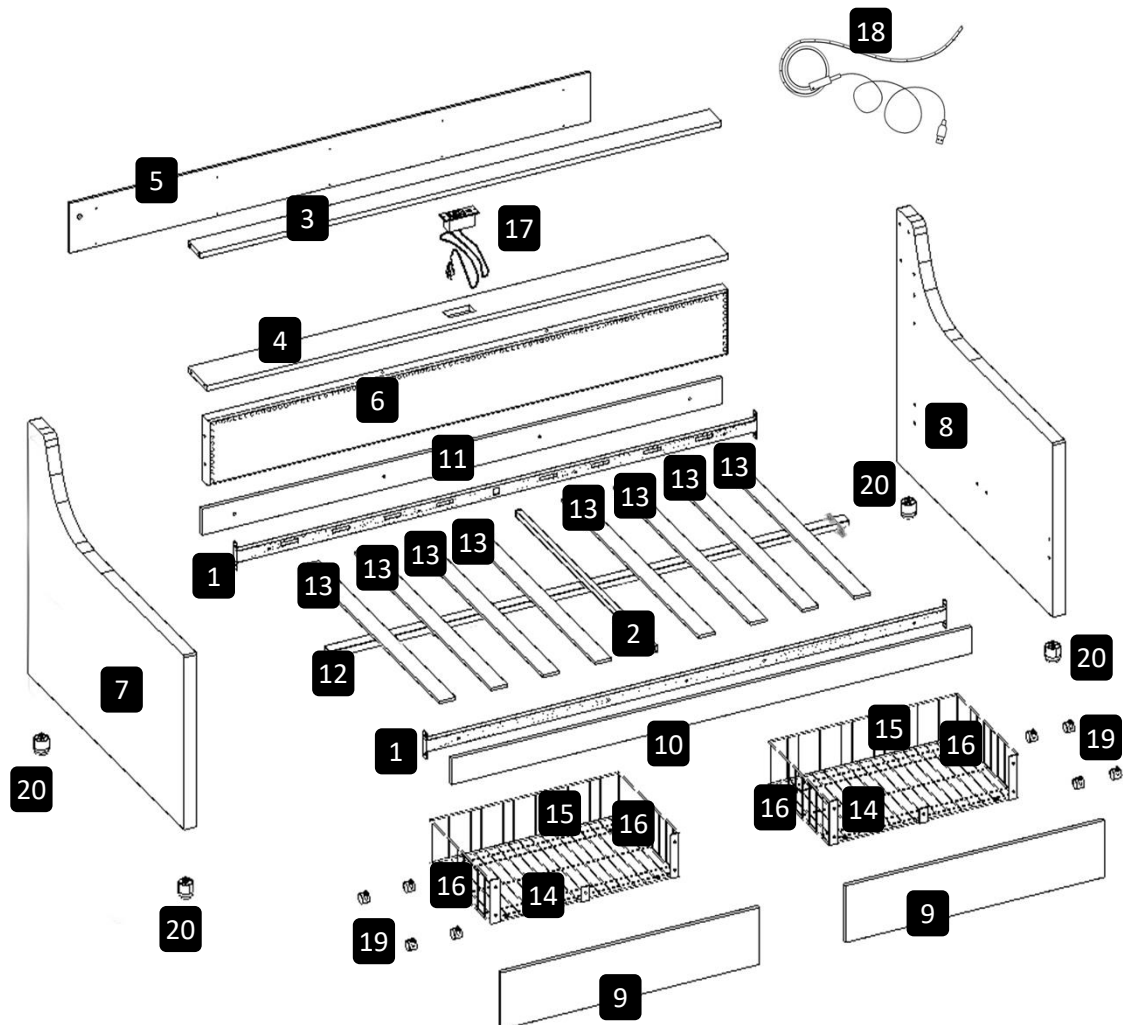
















ASSEMBLY INSTRUCTION

TIPS


1. This bed fit standard twin mattress 75" L x 39" W.
2. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
4. Do not use substitute part. Contact the manufacture or dealer for replacement part.

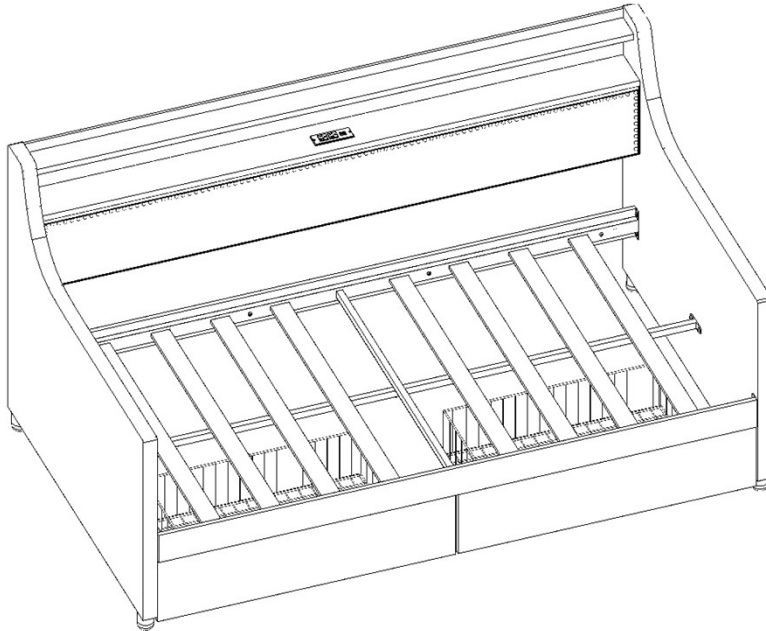



Part List

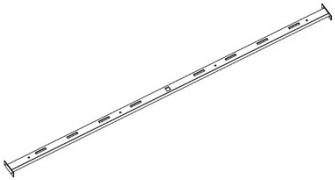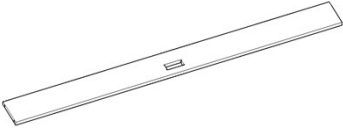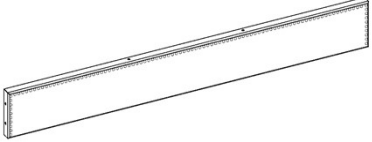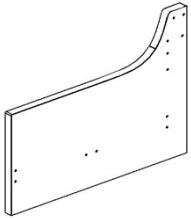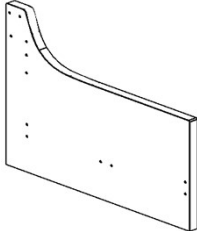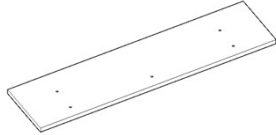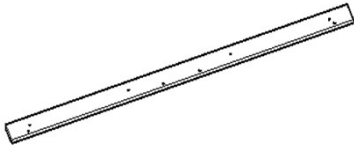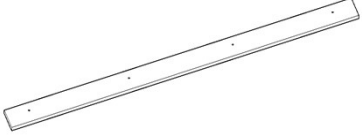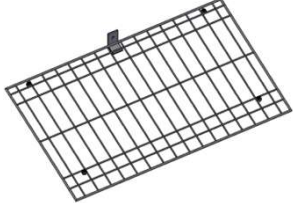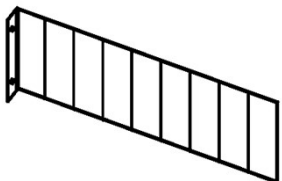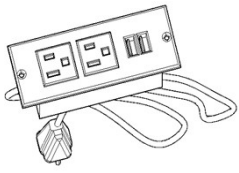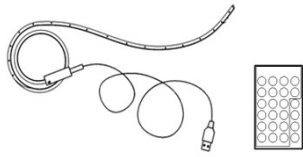1		2		3	
	Metal Slat Frame x2		Rail x1		Panel x1
4		5		6	
	Panel x1		Backboard x1		Headboard x1
7		8		9	
	Left Handrail x1		Right Handrail x1		Panels x2
10		11		12	
	Front Panel x1		Back Panel x1		Rail x1
13		14		15	
	Slats x8		Drawers Bottom Net x2		Side Net x2
16		17		18	
	Drawers Side Net x4		Socket X1		Lamp Strip Kit x1

Part List


19	
Caster x8	
20	
Plastic Feet x4	

Hardware List

A		B		C	
Bolts(M6X10mm) X14		Bolts(M6X16mm) X26		Bolts(M6X30mm) X8	
D		E		F	
Bolts(M6X35mm) X5		Angle iron x2		Angle iron x6	
G		H		I	
Allen Key X1		Flat Gasket X4		Screws (M3X12mm) X9	
J		K		L	
Screws (M4X25mm) X10		P-Shaped Iron Sheet x3		Iron Sheet x4	
M		N			
Clasp X22		Foam Pad X8			


Step1

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.

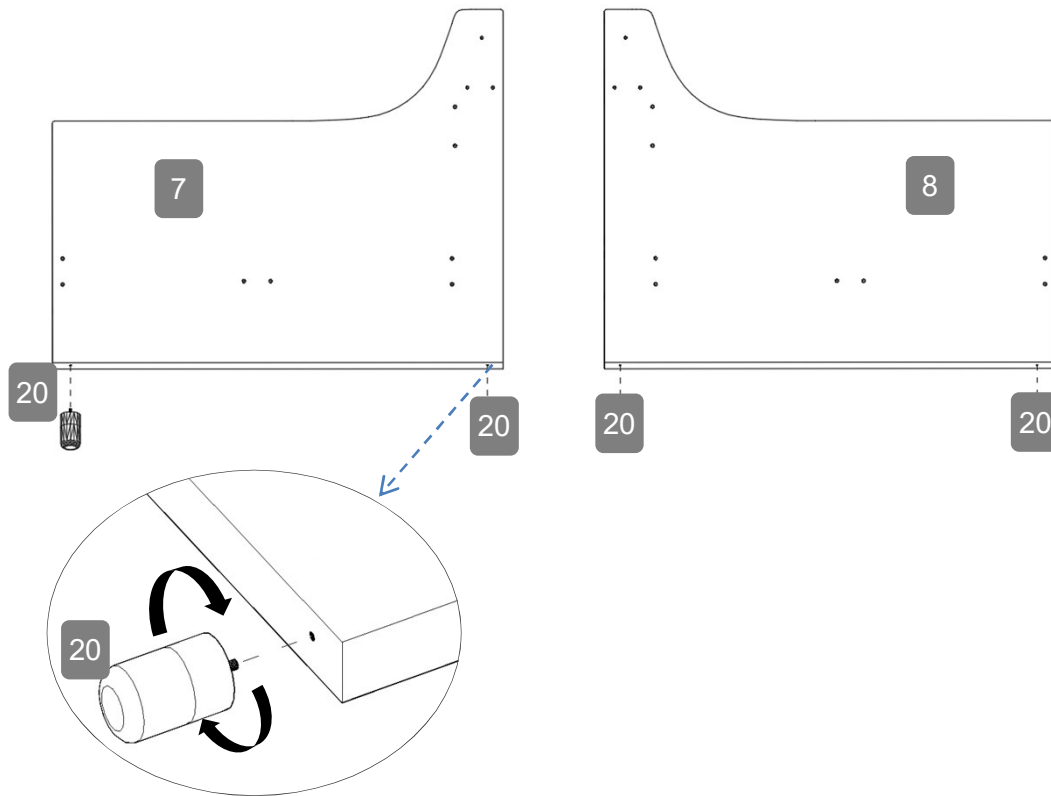

Step2

B	D	H
		
Bolts(M6X16mm) X8	Bolts(M6X35mm) X4	Flat Gasket X4

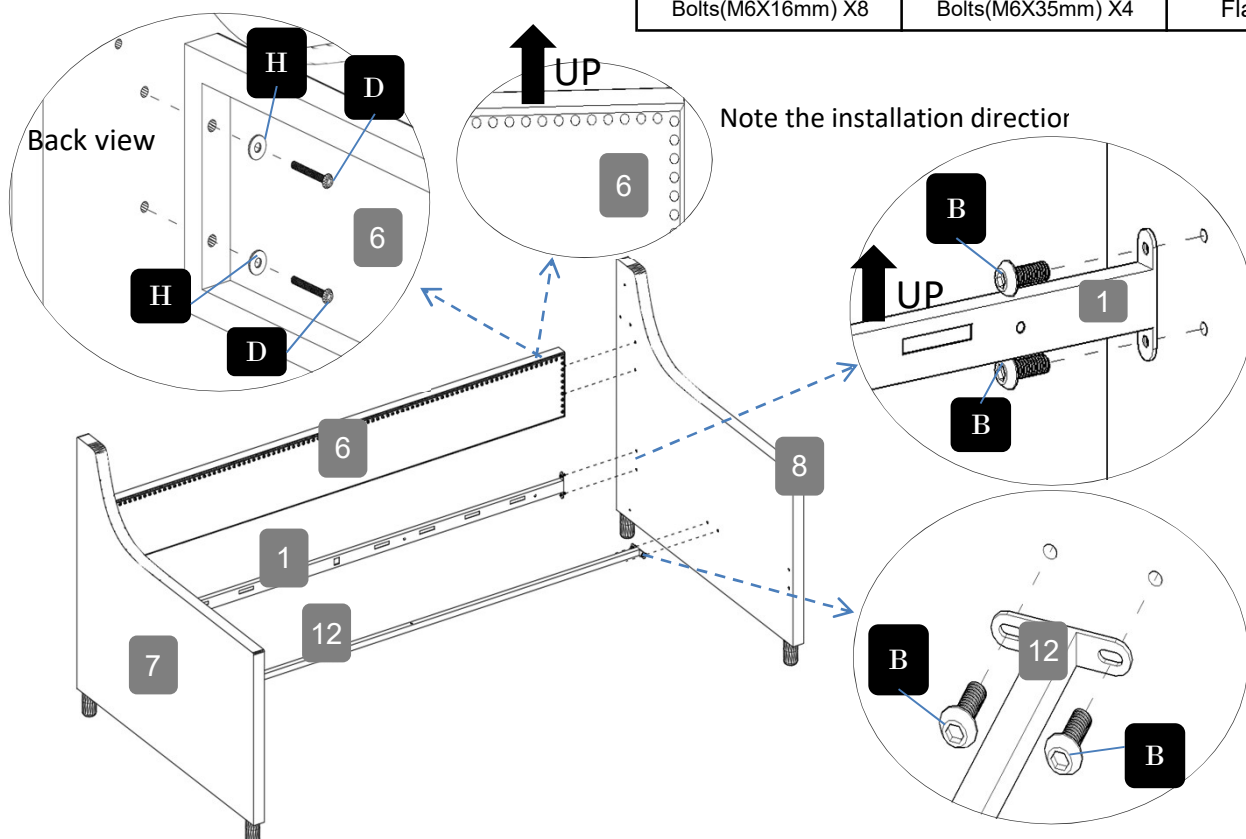

Step3

B



Bolts(M6X16mm) X2

F



Angle iron x2

I




Screws (M3X12mm) X3

K





P-Shaped Iron Sheet x3

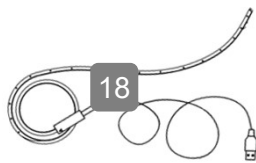

Paste the LED strip into the light slot



Watch the direction. There are screw holes on the edge of the board

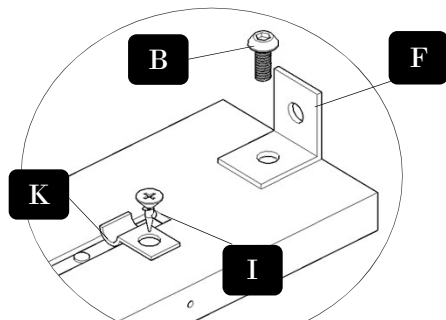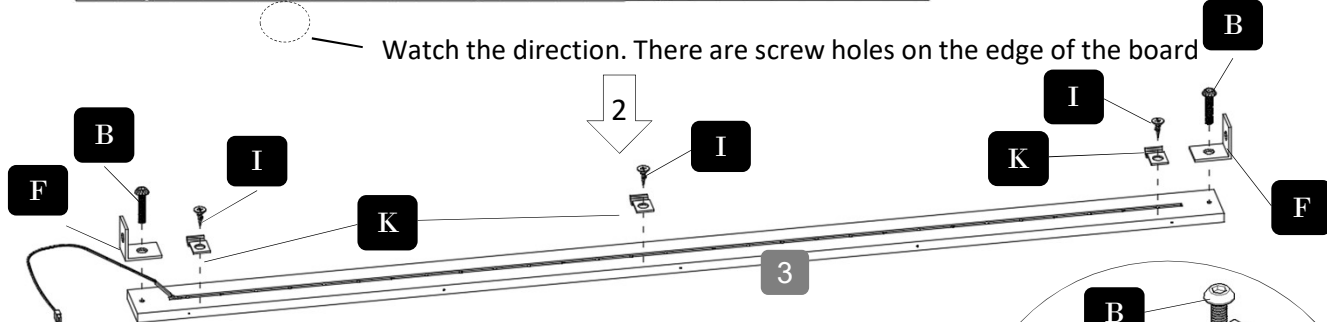

Be careful not to install on the LED

Step4

B



Bolts(M6X16mm) X4

F







Angle iron x4

I



Screws (M3X12mm) X2

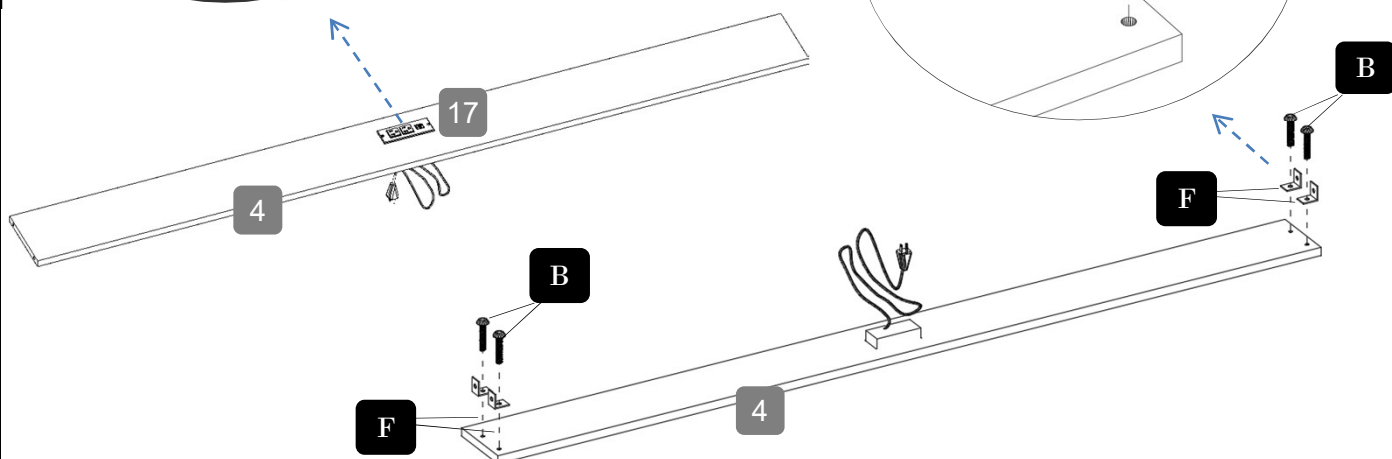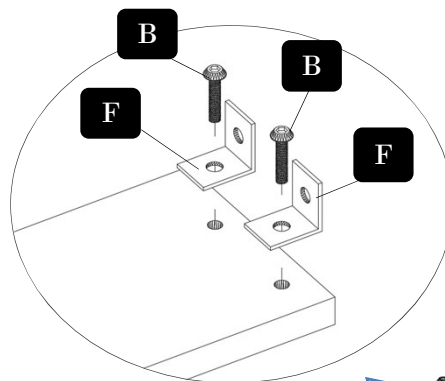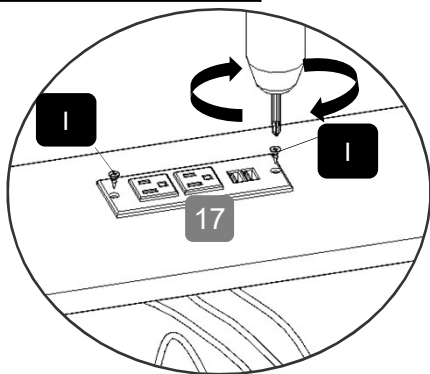

Assembly Tools Required(Not Included)

Page 5 of 10

Step5

B



Bolts(M6X16mm) X6

E




Angle iron x2

I



Screws (M3X12mm) X4

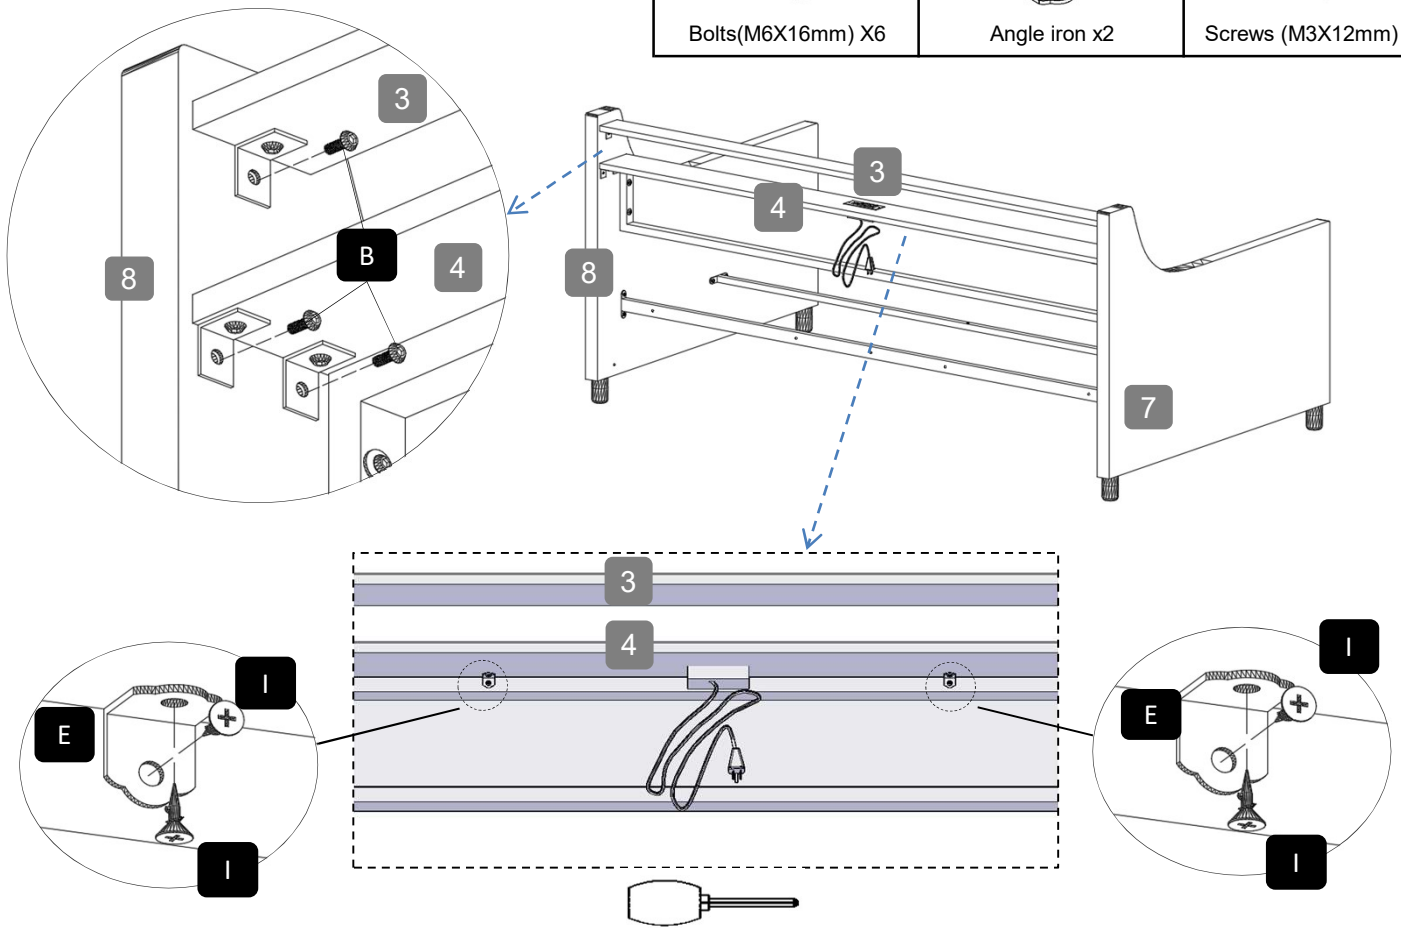


Assembly Tools Required(Not Included)

Step6

J



Screws (M4X25mm) X10

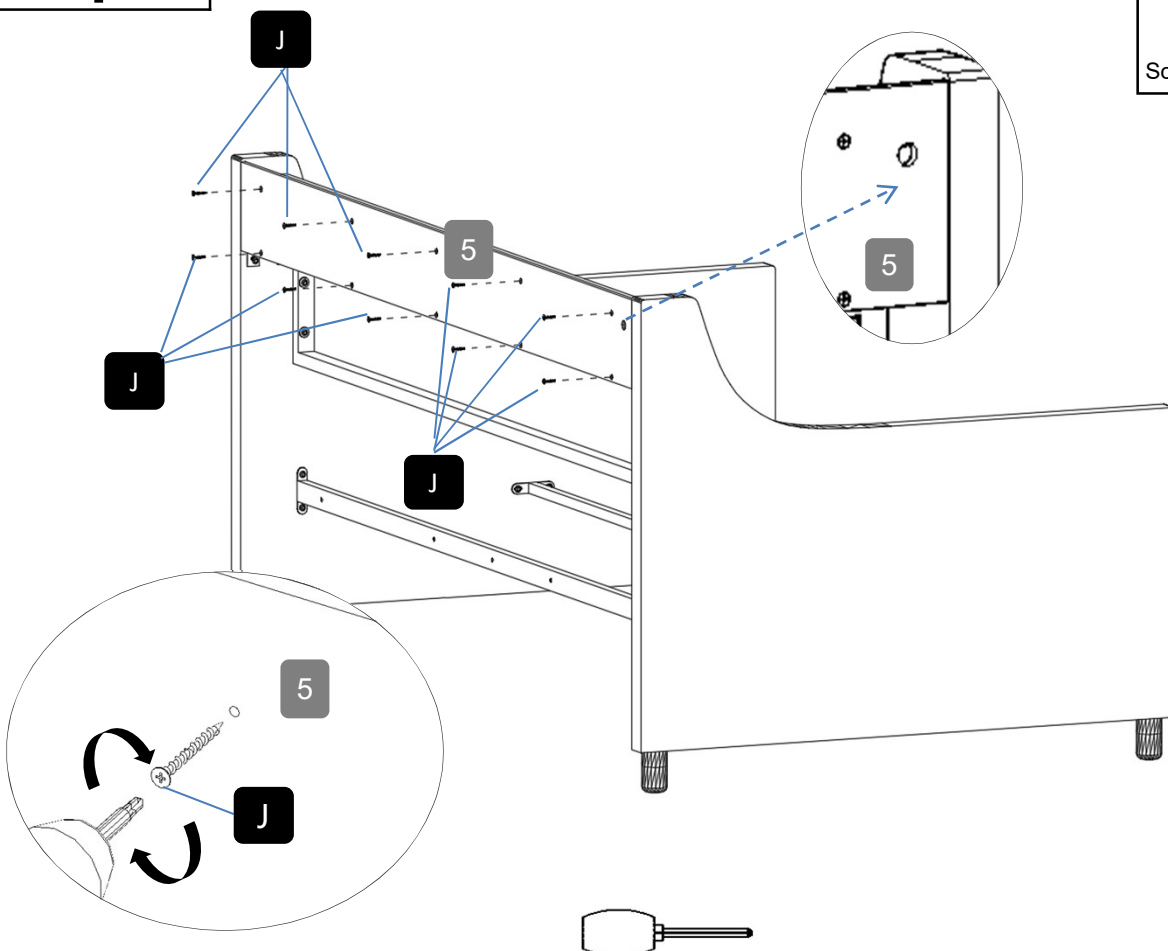

Step7

B




Bolts(M6X16mm) X1

D



Bolts(M6X35mm) X1

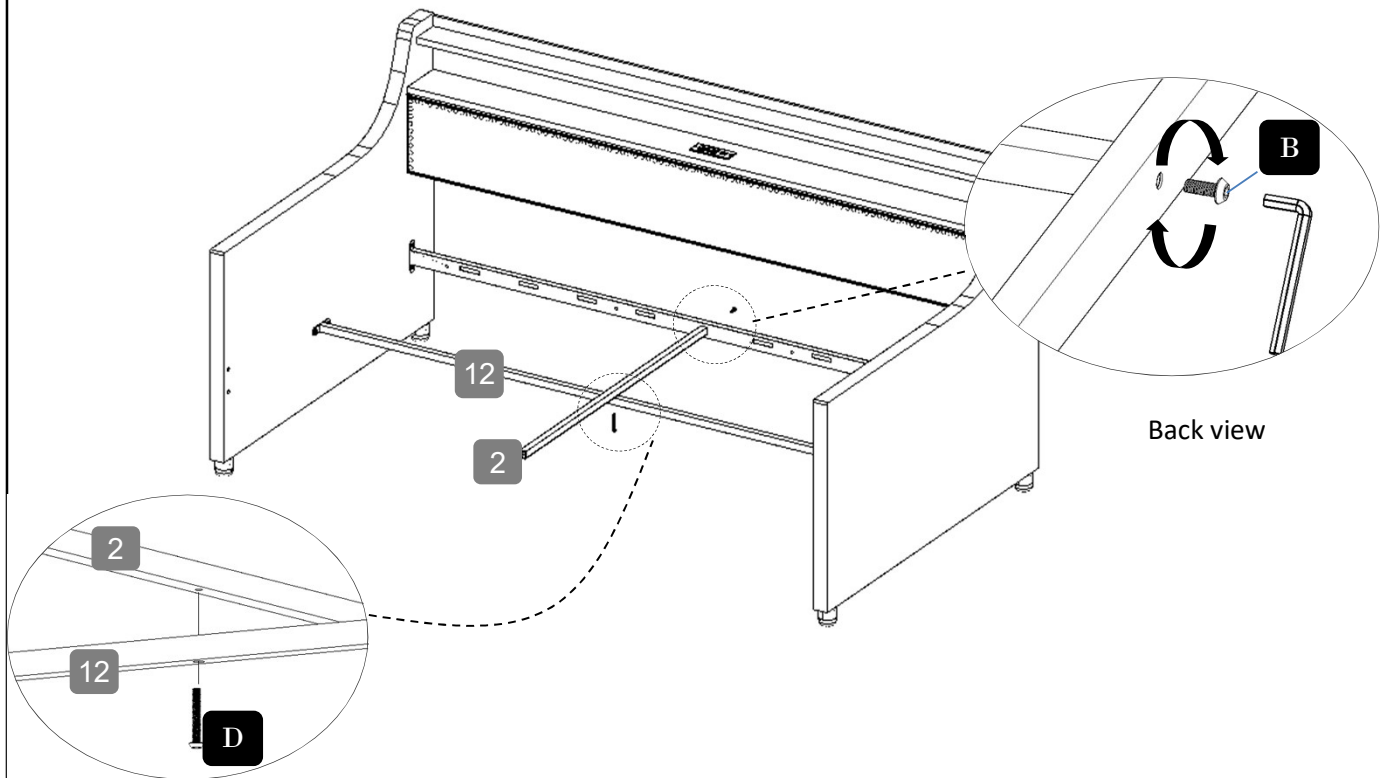

Back view

Bottom view


Step8

N



Foam Pad X8

Paste foam pad where the bed slats touch the r



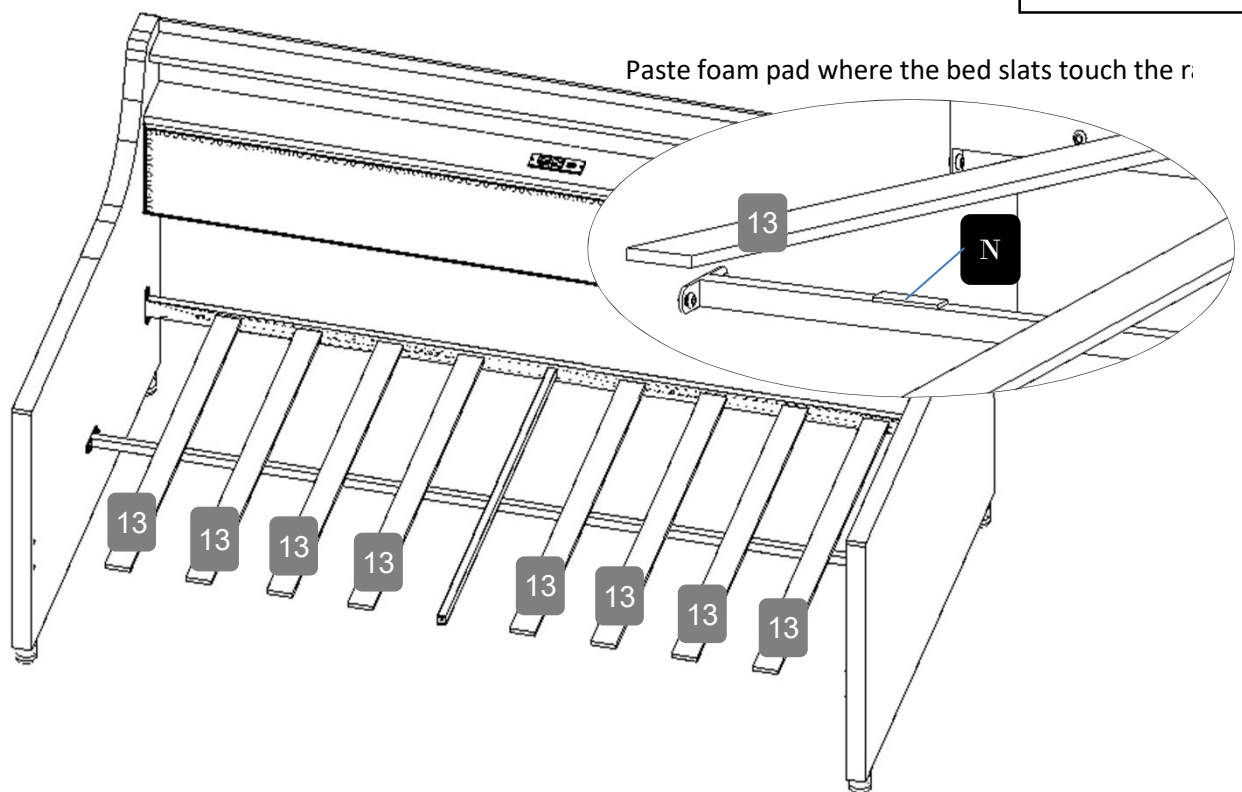


Step9



B



Bolts(M6X16mm) X5

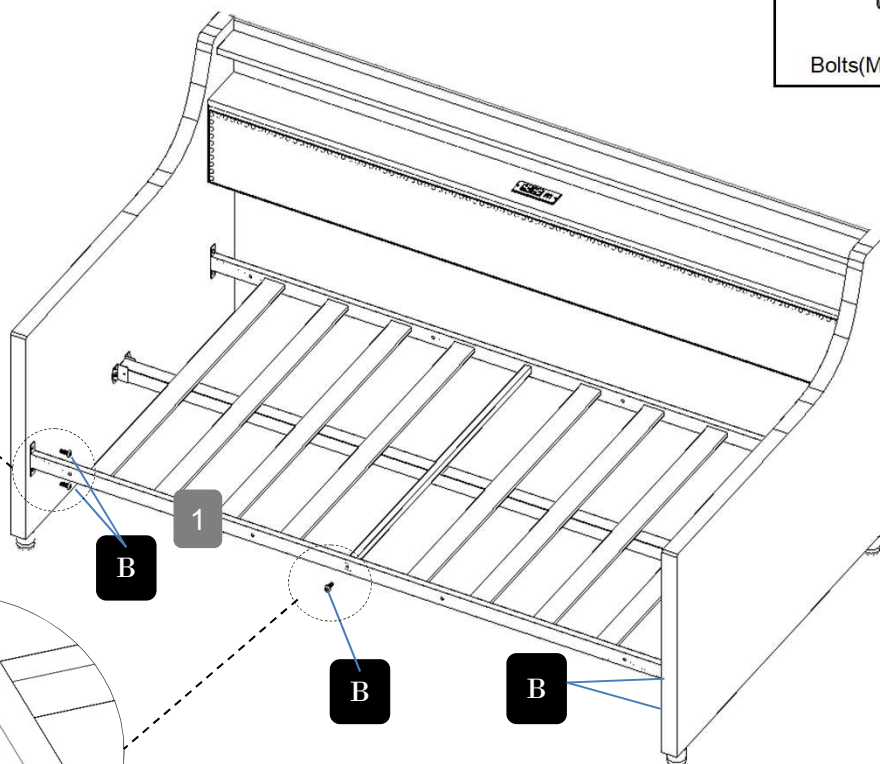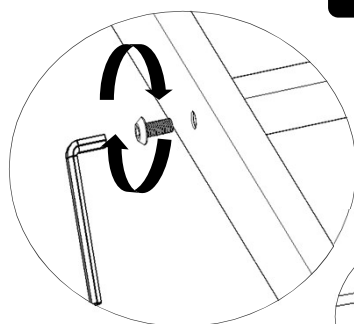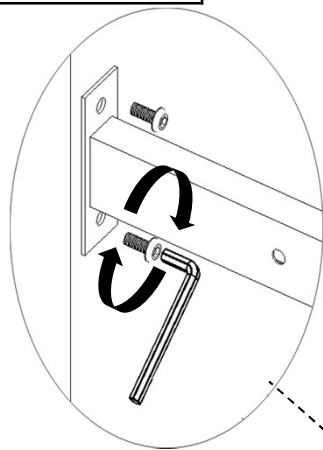

Note the installation direction of metal slat frame NO.1

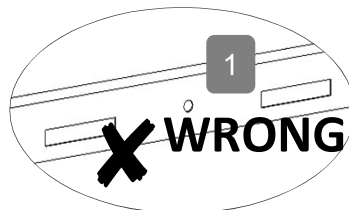
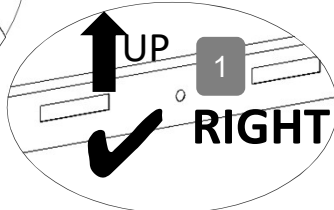


Step10


C




Bolts(M6X30mm) X8

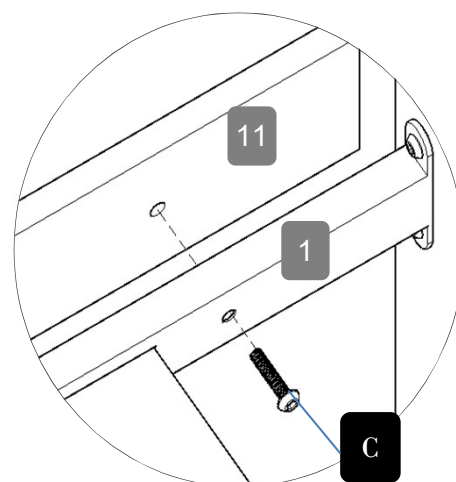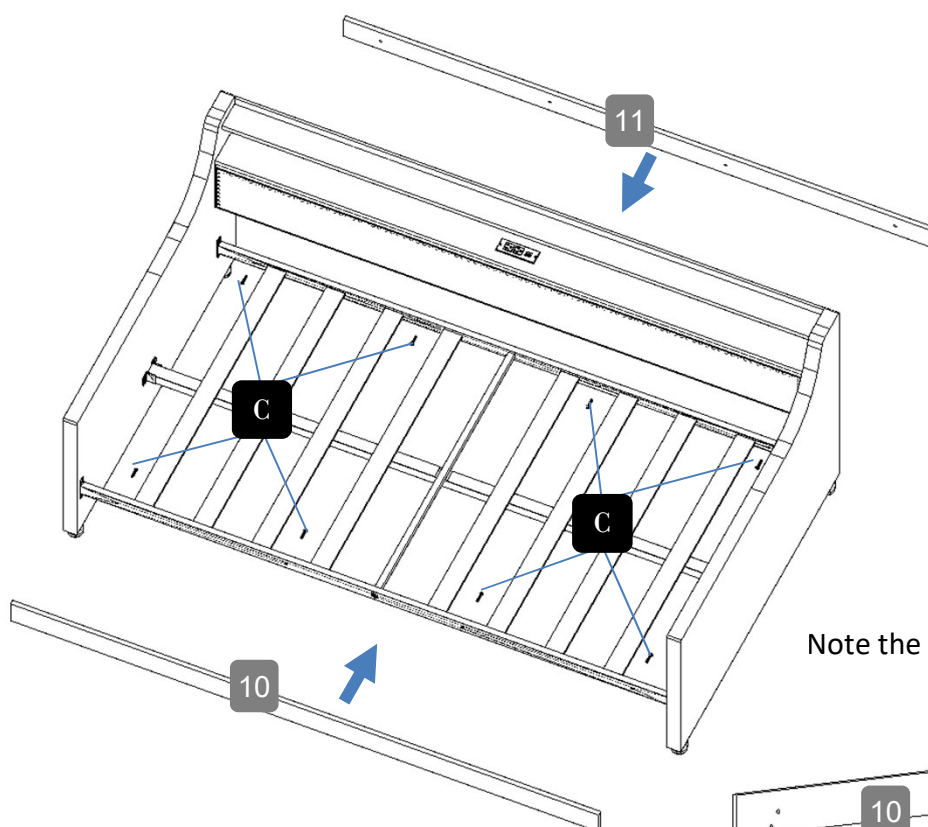

Note the installation direction of panel NO.10

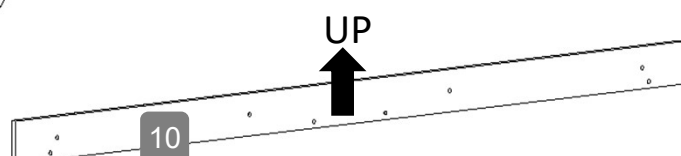

Step11

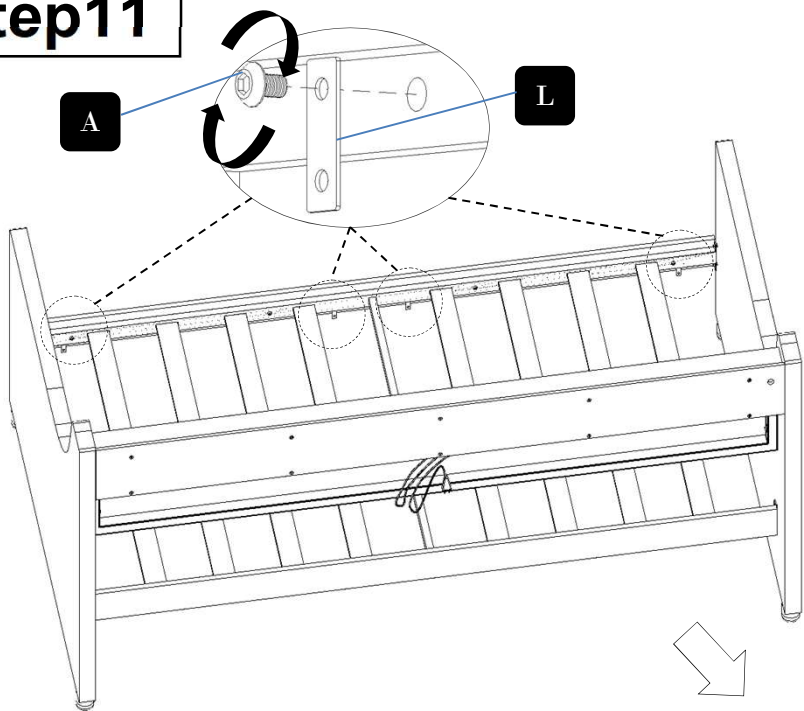


A




Bolts(M6X10mm) X4

L




Iron Sheet x4

After this step, you can lock the other bolts tight

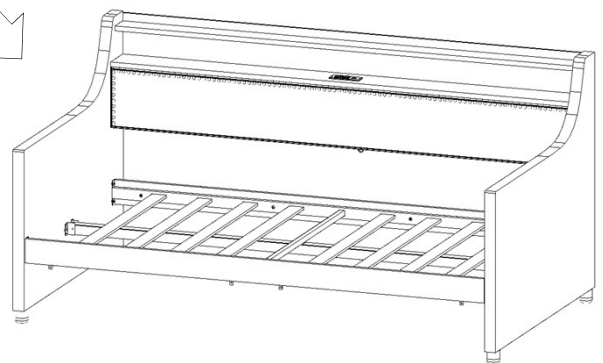

Step12

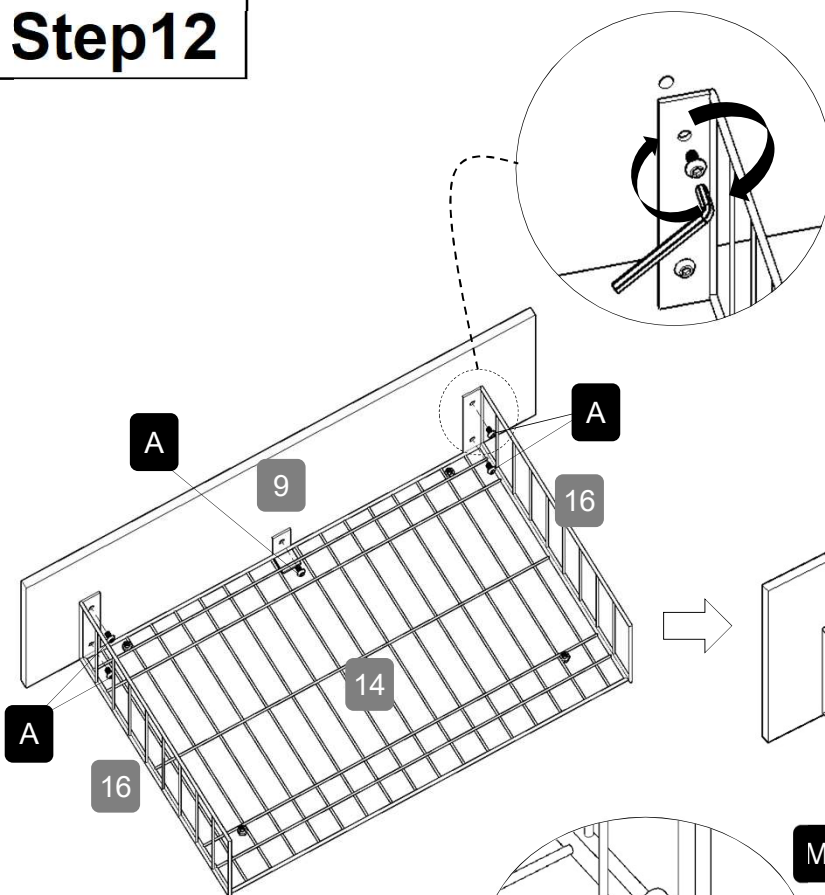

A




Bolts(M6X10mm) X5


M




Clasp X11

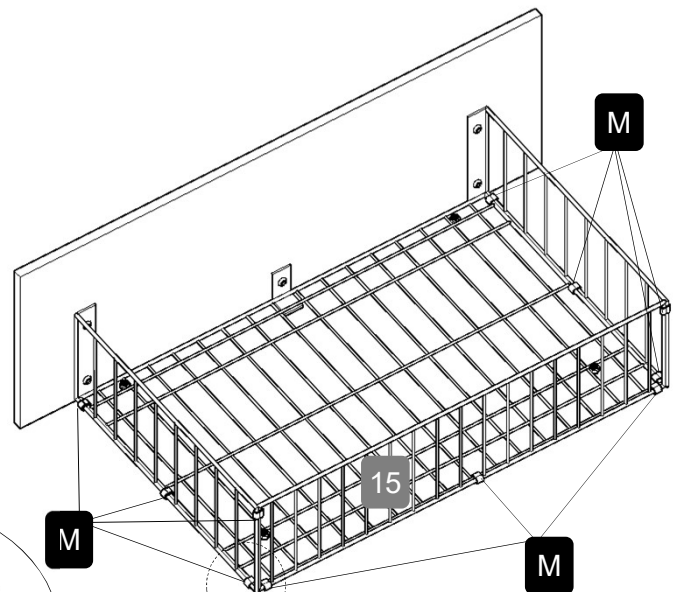

Step13

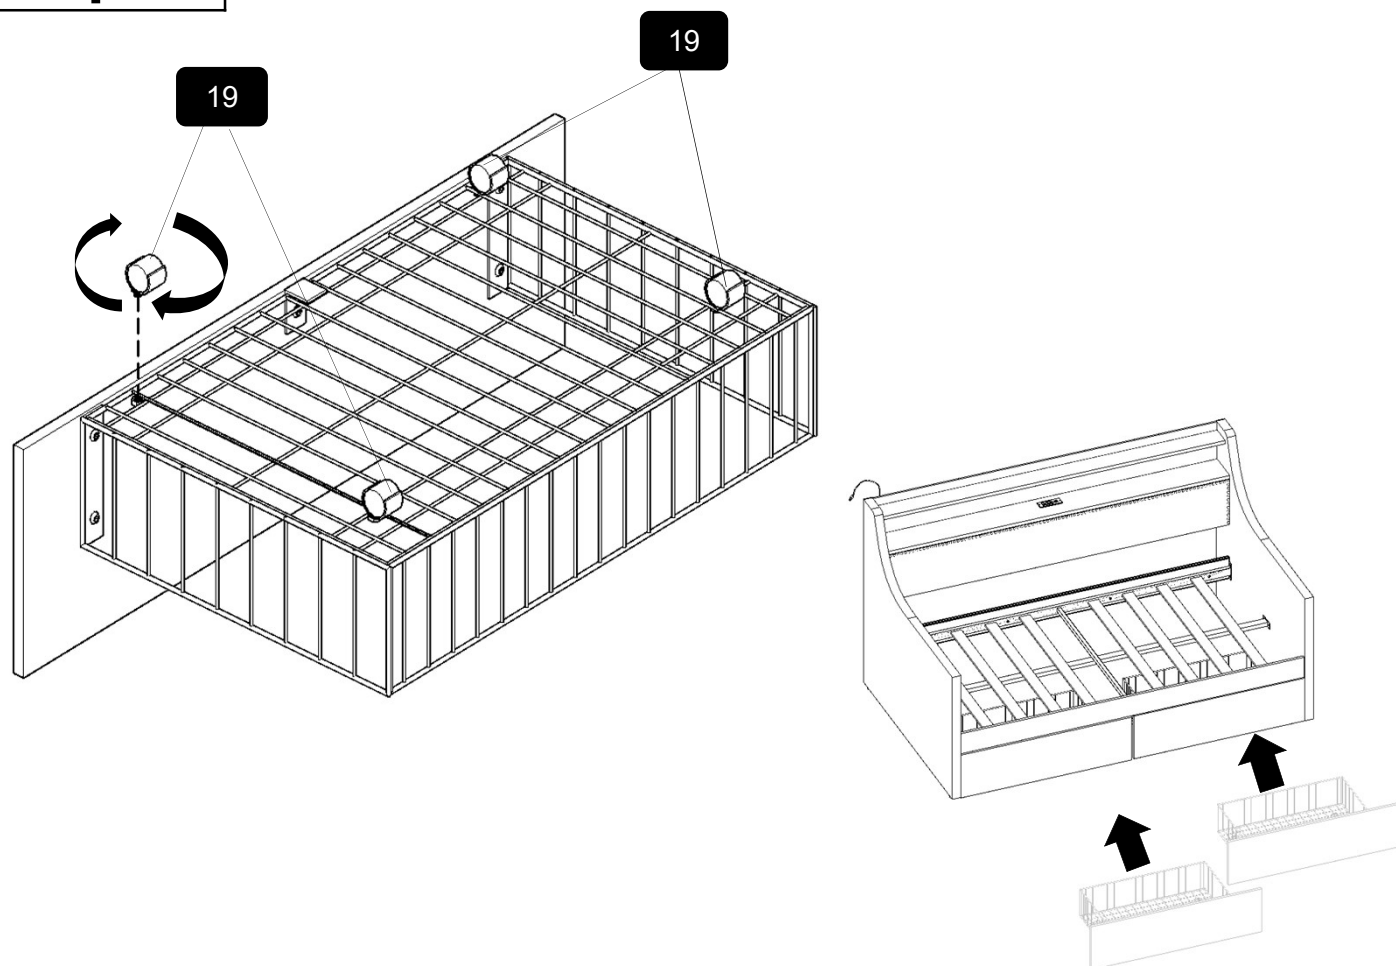

Step14

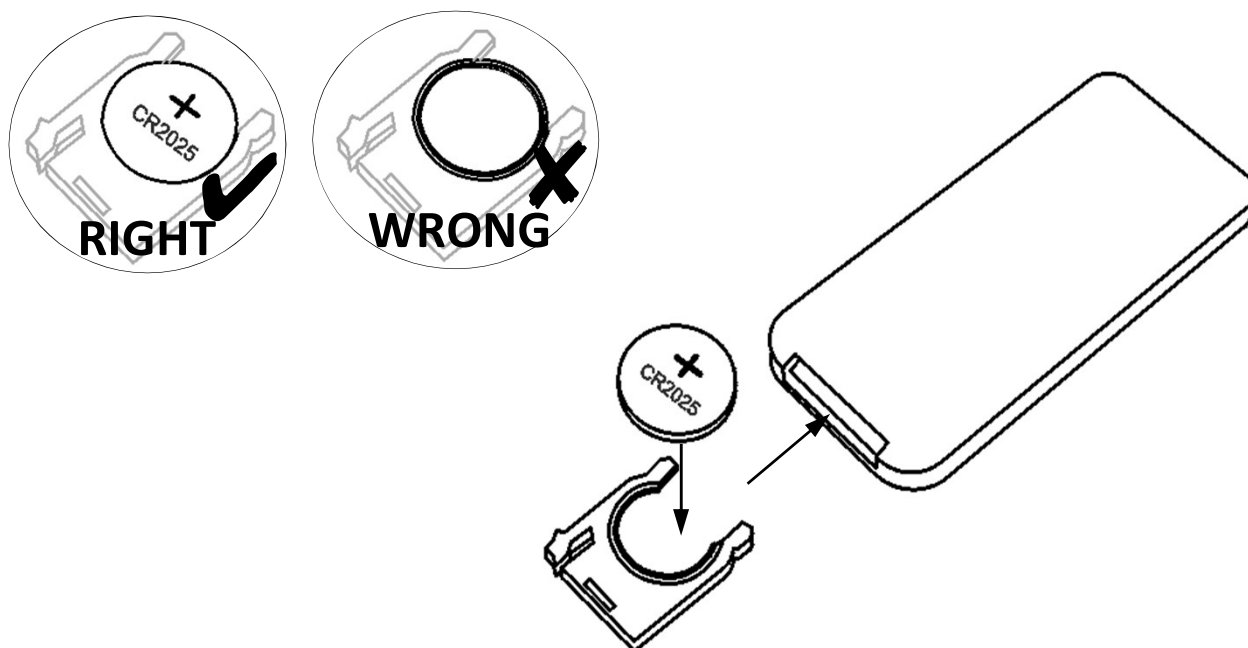

Remote control does not contain batteries, please buy your own a CR2025 button battery installed into the remote control