
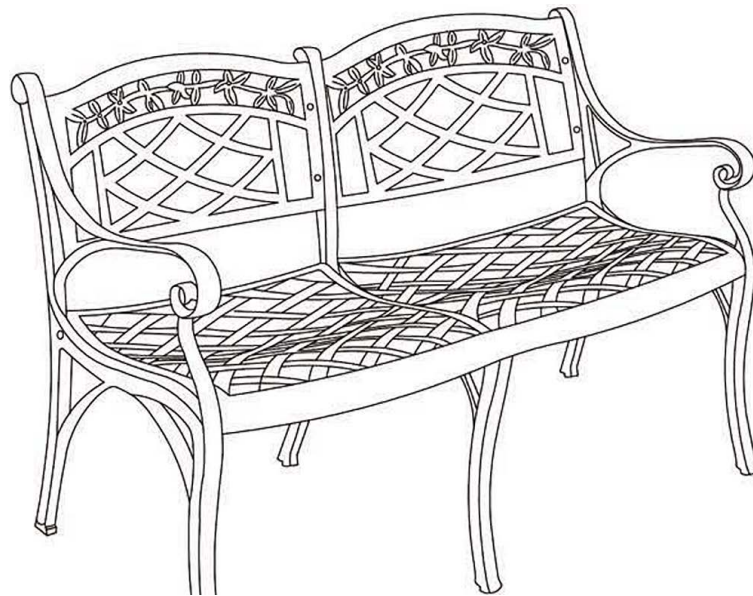





SOFA SEAT GROUPING




PARTS LIST

A	B	C	D	E
				
Back 2 PCS	Seat 2 PCS	Left Side Frame 1 PC	Middle Side Frame 1 PC	Right Side Frame 1 PC

HARDWARE LIST

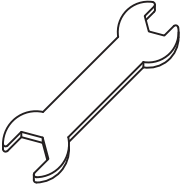1	2	3	4	5
				
Phillips Head Bolt (M6*30) 8 pcs	Spring Washer (M6) 8 pcs	Flat Washer (M6) 8 pcs	Nut (M6) 8 pcs	Nut Cap (M6) 8 pcs
6	7	8	9	10
				
Short Bolt (M8*30) 4 pcs	Spring Washer (M8) 6 pcs	Flat Washer (M8) 12 pcs	Nut (M8) 6 pcs	Nut Cap (M8) 6 pcs
11	12	13		
				
Wrench (M6 & M8) 1 pc	Long Bolt (M8*45) 2 pcs	Bolt Cap (M8) 4 pcs		

Step 1: Attach Frames (C,D&E) to Seats (B) With Short Bolts (Part #6),Long Bolts(Part #12), Flat Washers(Part #8),Spring Washers(Part #7) & Nuts (Part #9).Note- Long Bolts (Part #12) will be used to attach the Middle Frame (D) & Short Bolts (Part #6) will be used to attach the Left & Right Side Frames (C & E).Cover M8X30 mm bolts (Part #6) with bolt caps (Part #13).Note - Do not fully tighten bolts at this time.

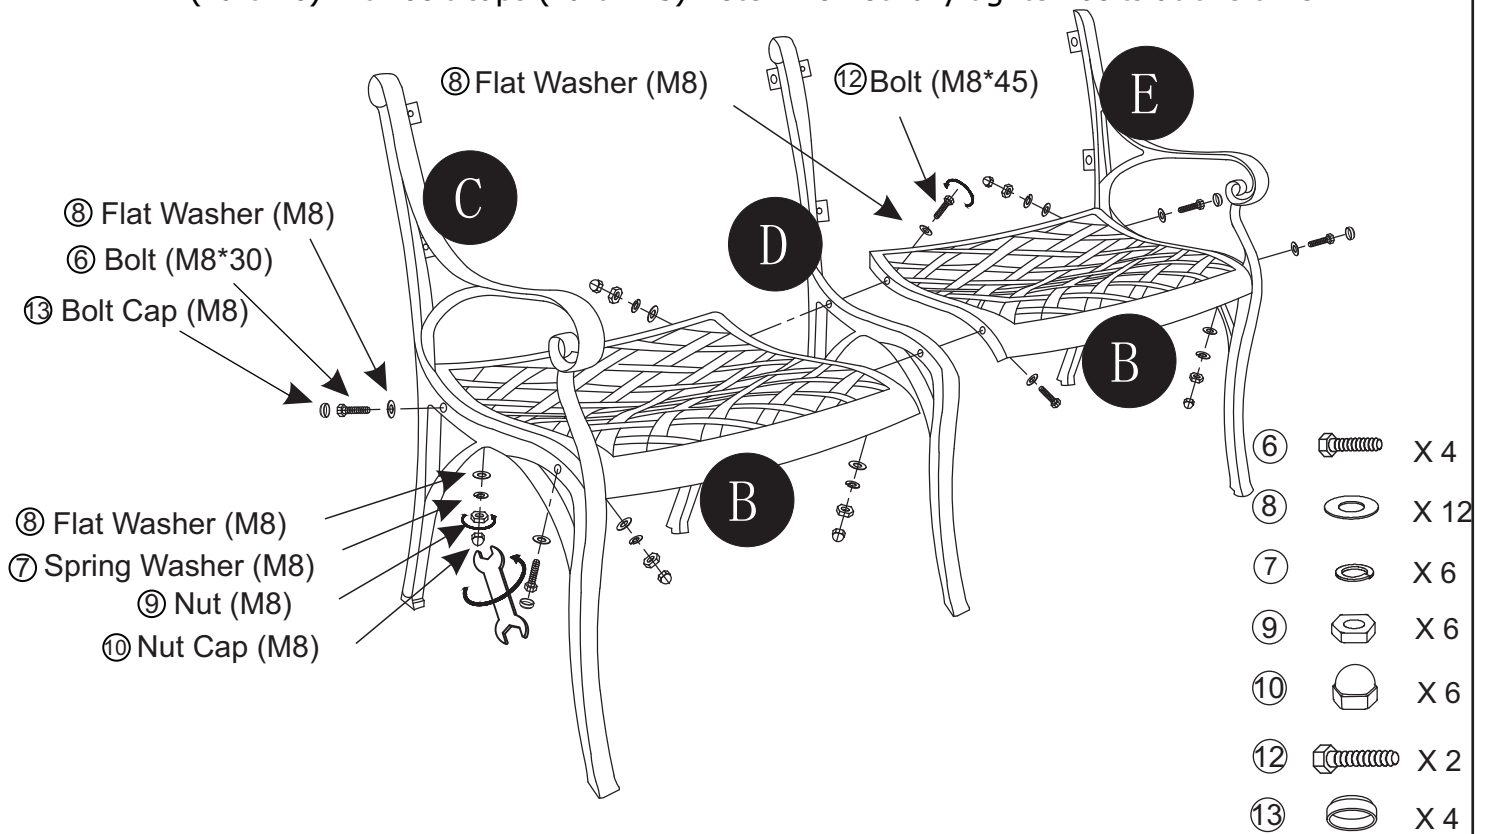

Step 2: Attach Back (A) to unit with Phillips Head Bolts (Part #1),Flat Washers (Part #3), Spring Washers (Part #2),and Nuts (Part #4).Tighten all bolts completely.Cover all Nuts (Part #'s 4) with Nut Caps (Part #'s 5).

