SAFETY INSTRUCTIONS

WARNING:

Read this material before using this product. Failure to do so may result in serious injury.

Assembly precautions


1. Assemble only according to these instructions. Improper assembly may create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep the assembly area clean and well-lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble if tired or when under the influence of alcohol, drugs or medication.
6. The product capabilities apply to properly and completely assembled products only.
7. Assemble on a flat, level, hard and smooth surface capable of safely supporting the Under Bed Storage.
8. If possible, you can use power tools to make assembly easier.
9. For additional information regarding the parts listed in the following pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area.

Use precautions


1. Do not exceed specified weight capacities.
2. Use only on a flat, level, hard, and smooth surface that can safely support a fully loaded Under Bed Storage.
3. Use as intended only.
4. Inspect before every use; do not use if parts are loose or damaged.

SAVE THIS MANUAL


PARTS LIST AND ASSEMBLY STEP

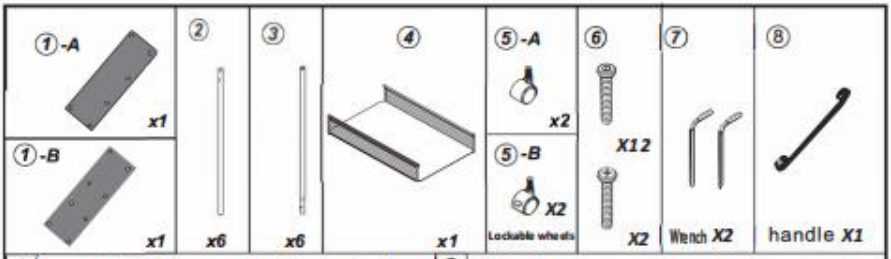

1 **STEP 1:** Connect the tubes and tubes one to one into 6 long pieces.

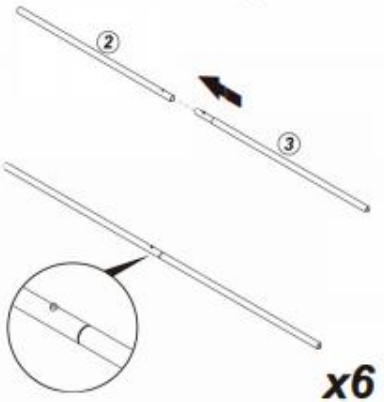


2 **STEP 2:** Connect the two sides of the board with four long tubes and tighten the screws by turning clockwise with a wrench.

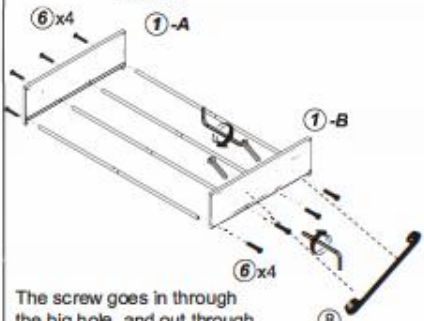


The screw goes in through the big hole, and out through the small hole to connect the handle.

3

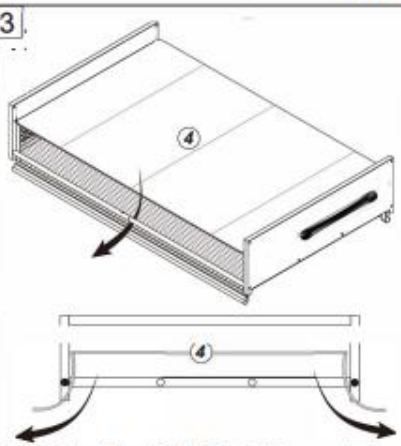

STEP 3: Install oxford cloth bottom and sides, the oxford cloth on both sides needs to go through the bottom of the tubes on both sides.


4

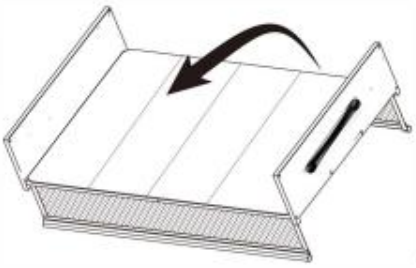

STEP 4: Place both sides of the oxford fabric upwards.


5

STEP 5: Turn over under bed storage container, insert long tubes on both sides of the oxford cloth.

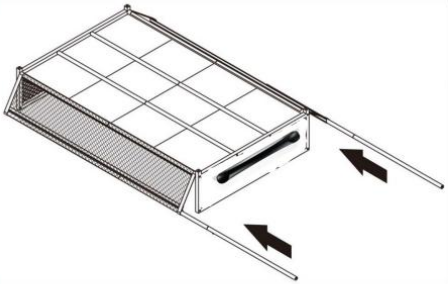


6

STEP 6: Move tubes to the holes at the top of the wire mesh and finally secure them with screws.

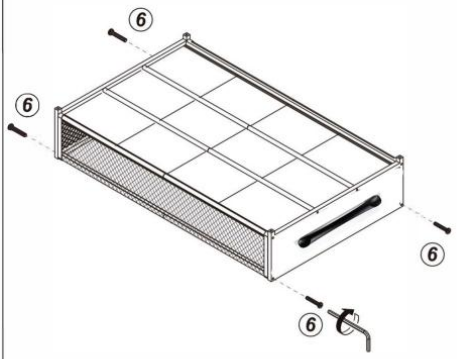


7

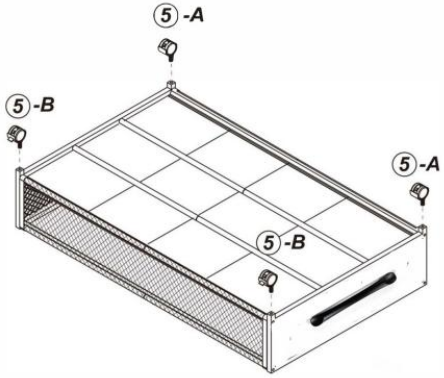

STEP 7:
Install the wheels, insert the wheels into the holes on the bottom of the board to complete the installation.

8

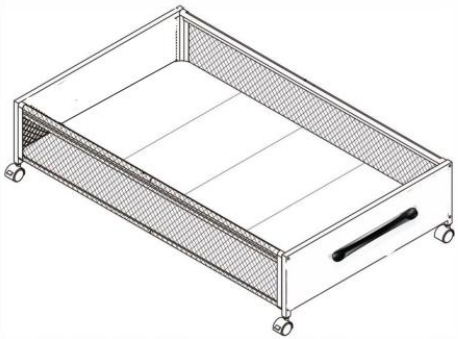

STEP 8: Install the transparent PE dust cover.

PRODUCT PARAMETER

Model	**MBCD-3001**
Main Color	Brown
Effective load-bearing	45 Pounds
Product Size(W×H×D)	650*460*180 mm
Net Weight	4.51 kg

* Products such as specifications, appearance, and design are subject to modification without prior notice.