

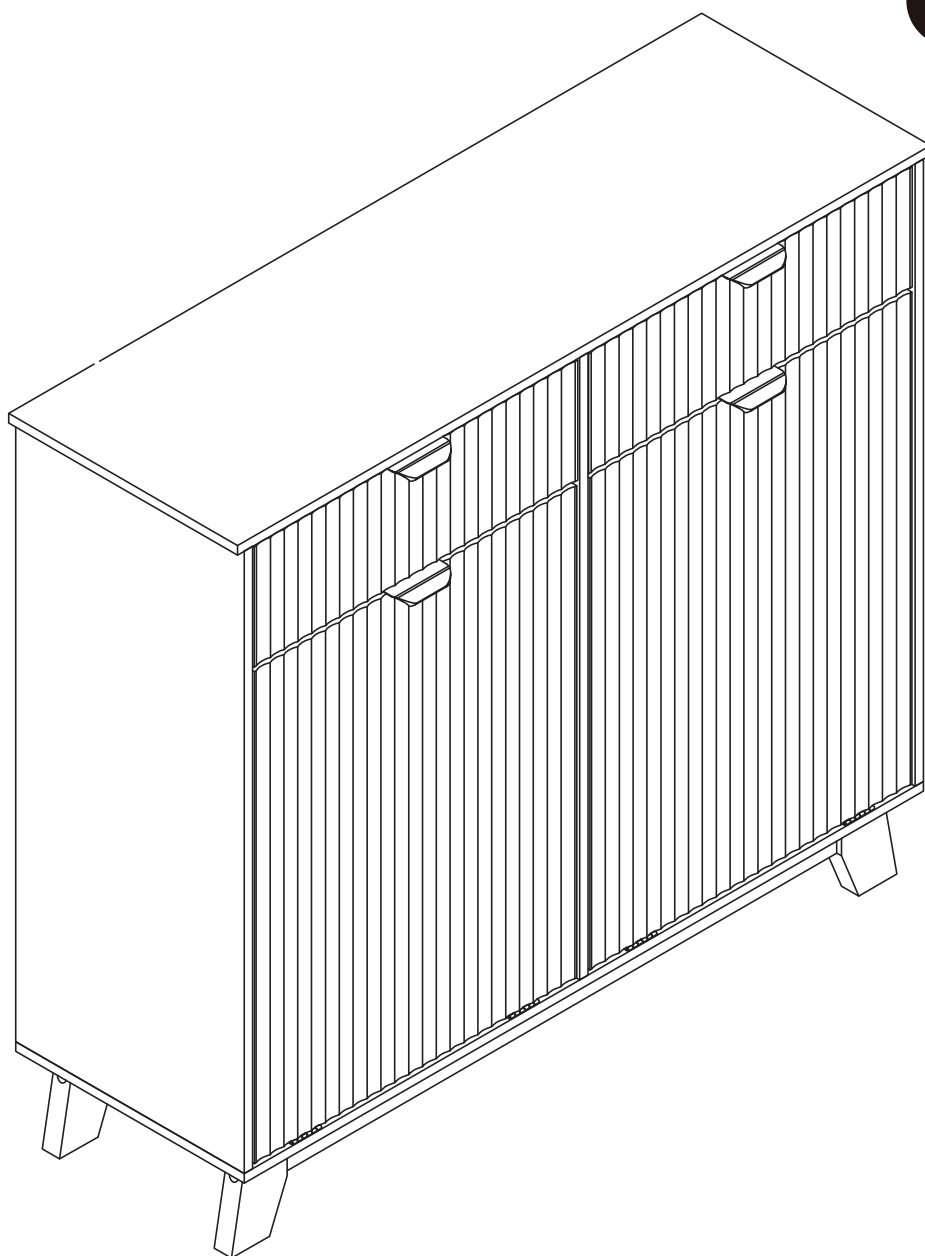
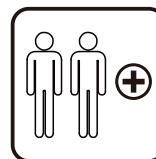
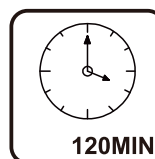


HLG125


Version:1.0

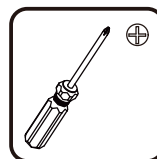


IT IS RECOMMENDED
TO USE POWER TOOLS

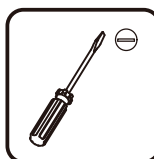


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

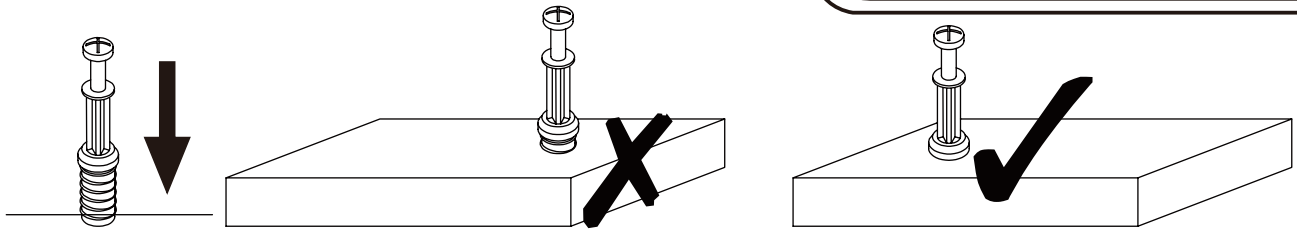


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

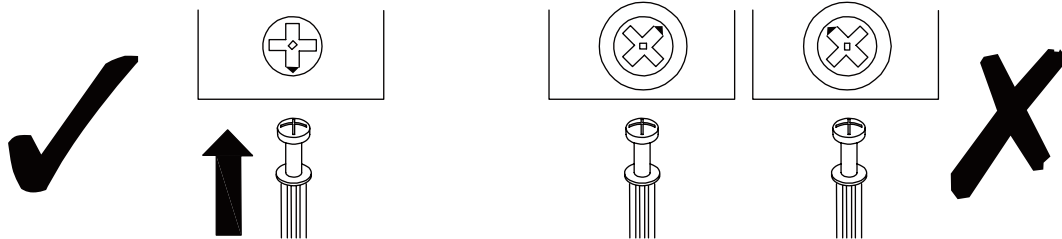










EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.











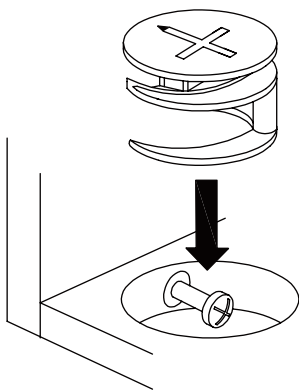






EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.


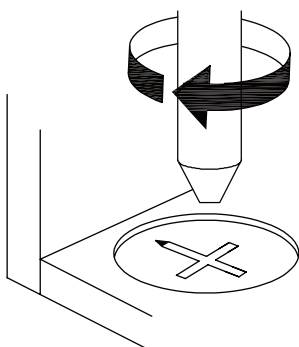









EN_Turn cam lock clockwise to tighten.

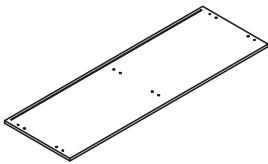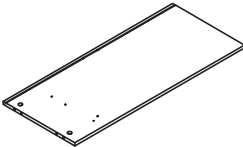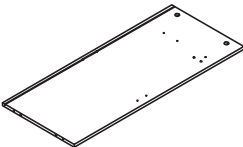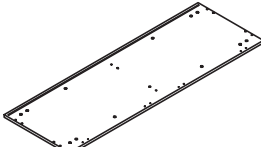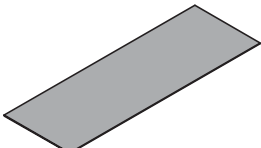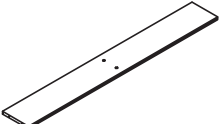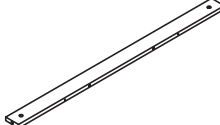NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x2	
⑤		x1	
⑥		x2	
⑦		x1	
⑧		x2	
⑨		x2	
⑩		x2	
⑪		x2	

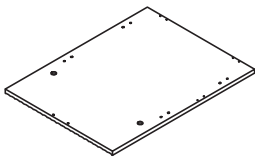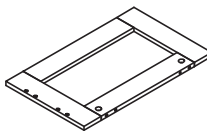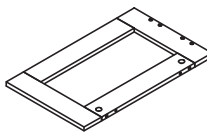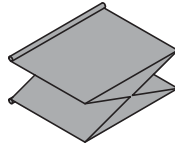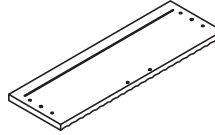
NO.	PARTS	QTY	SPARE
⑫		x2	
⑬		x2	
⑭		x2	
⑮		x2	
⑯		x2	
⑰		x4	
⑱		x2	
⑲		x4	
⑳		x2	
㉑		x2	
㉒		x2	

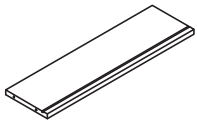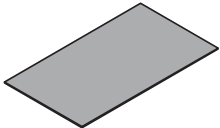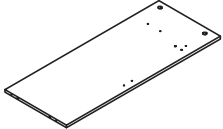NO.	PARTS	QTY	SPARE
②3		x2	
②4		x2	
②5		x1	
②6		x1	
	 Hardware Kit	x1	

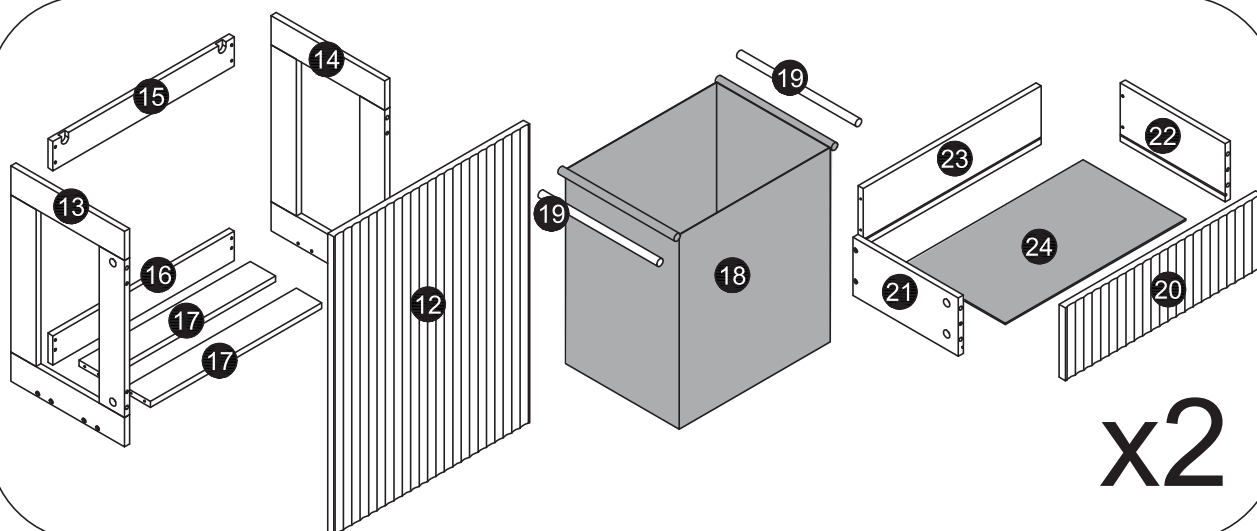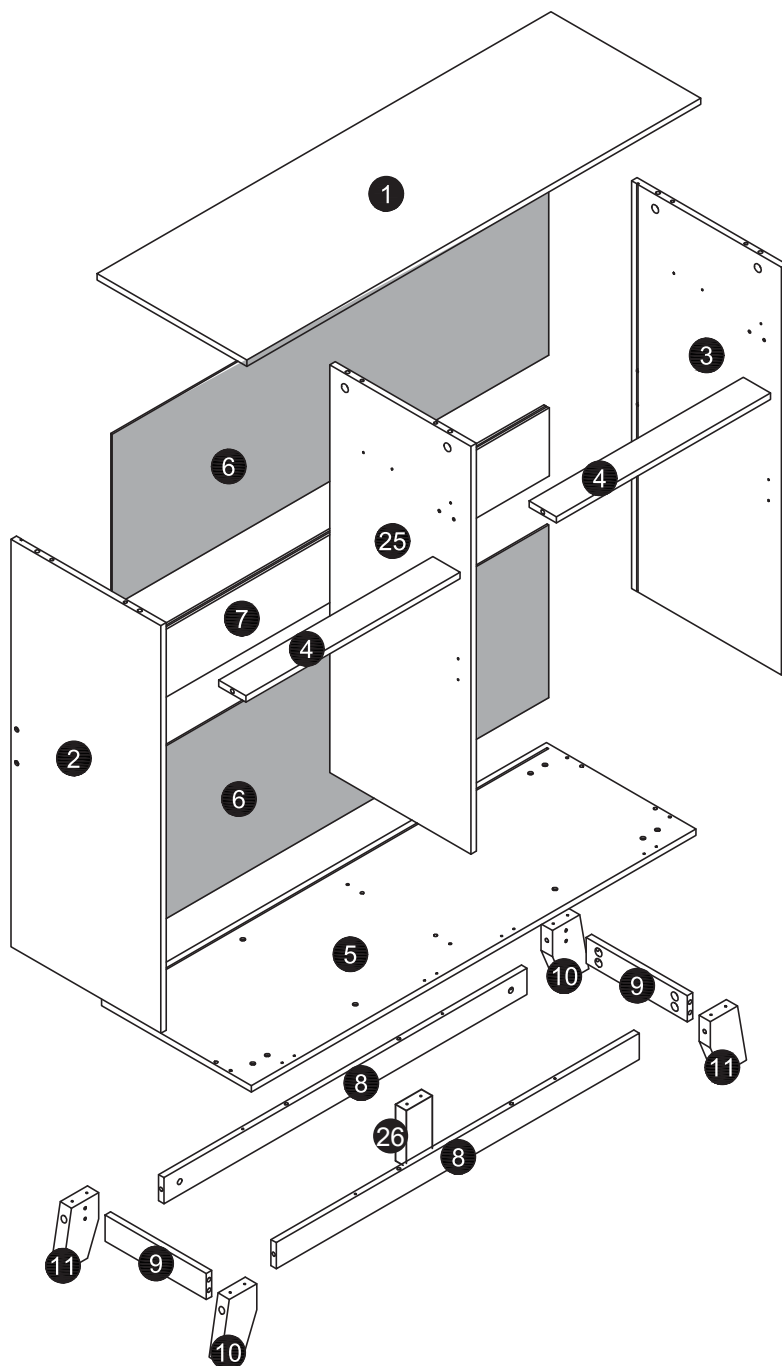

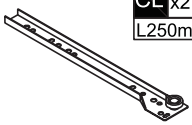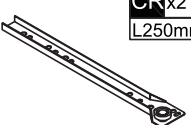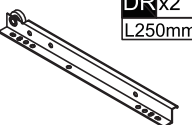 A x36 Ø6x35mm +3(spare)	 B x36 Ø15x10mm +3(spare)	 C x28 Ø6x30mm +2(spare)	 D x54 Ø4x35mm +5(spare)	 E x24 Ø3.5x12mm +2(spare)	 F x4
 G x4	 H x2	 I x14 Ø4x30mm +1(spare)	 J x4	 K x4	 L x4 Ø15mm
 M x2 Ø6x30mm	 N x2 Ø4x14mm N-1	 O x10 Ø3x16mm +1(spare) O-1	 P x4	 Q x28 Ø3.5x12mm +2(spare)	 R x1
 CL x2 L250mm	 CR x2 L250mm	 DL x2 L250mm	 DR x2 L250mm		

A x8



B x8





C x4





D x8



F x2

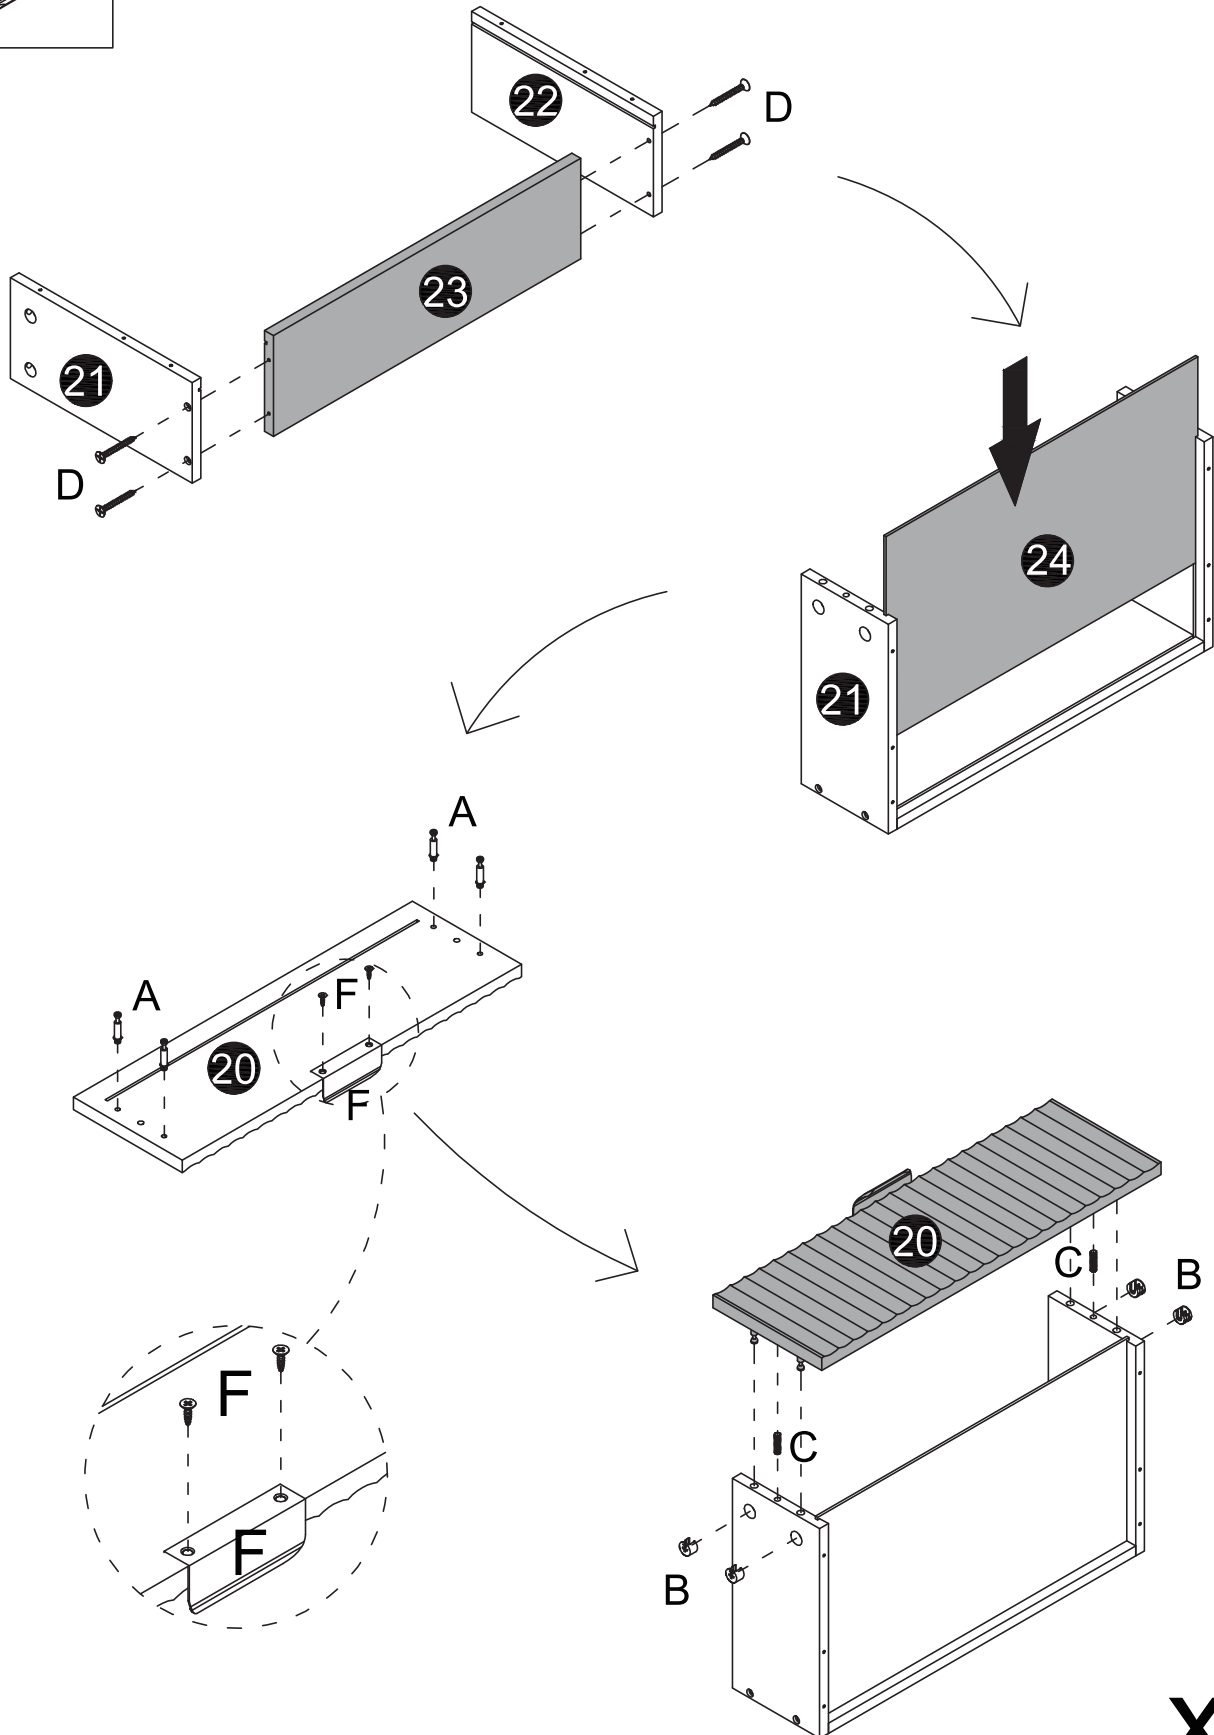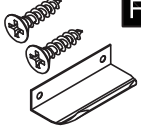


x2

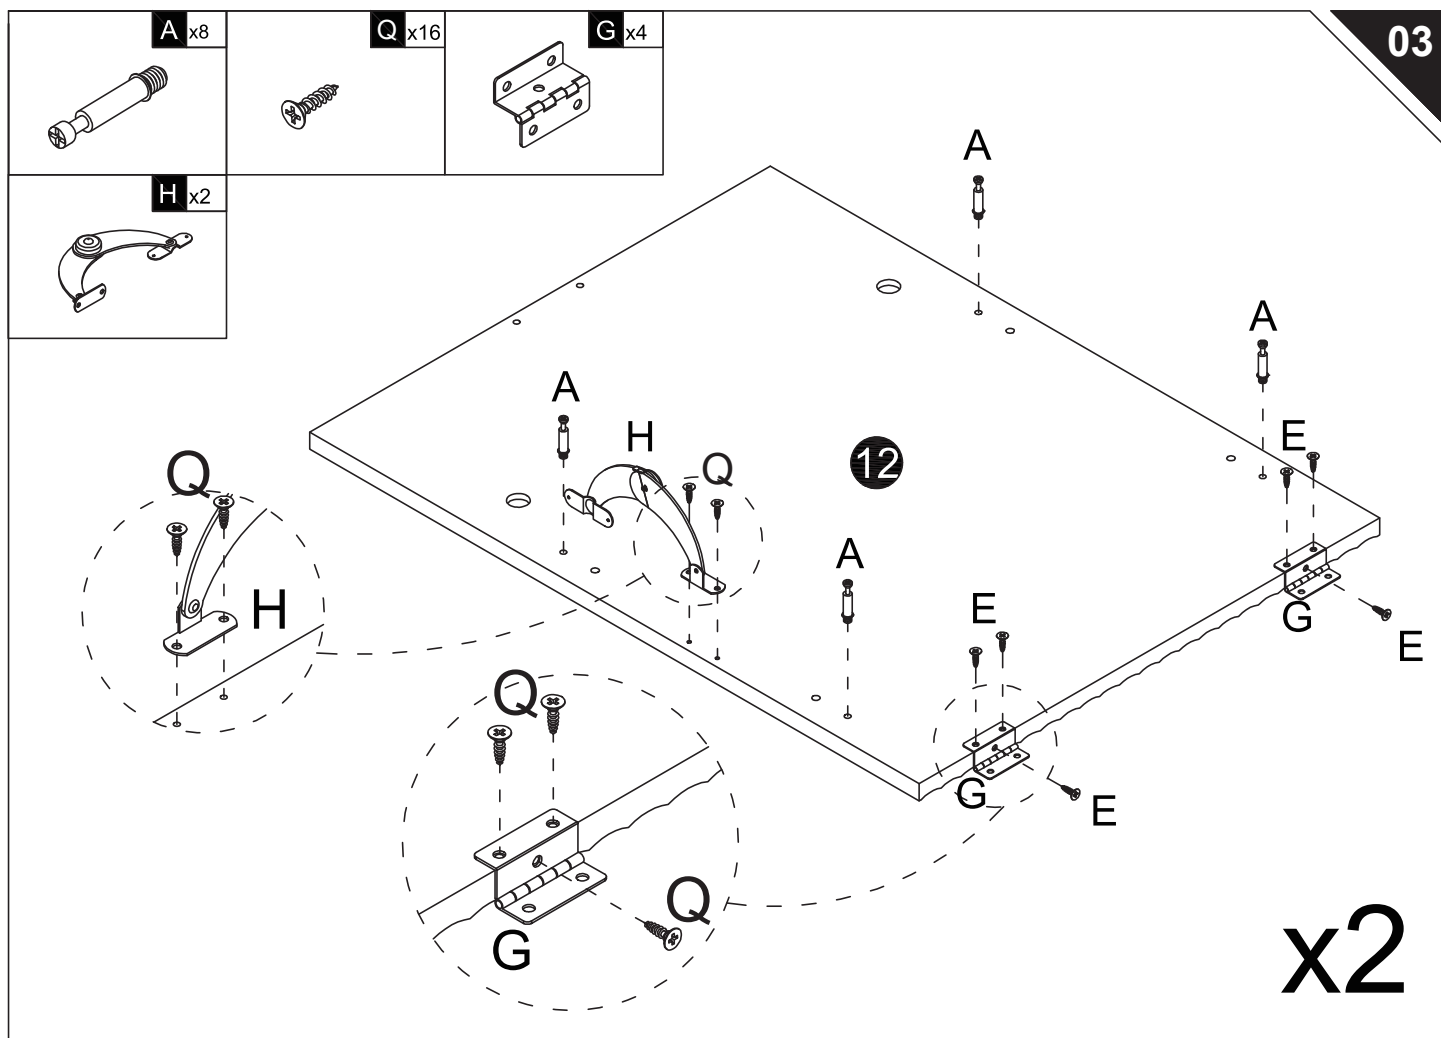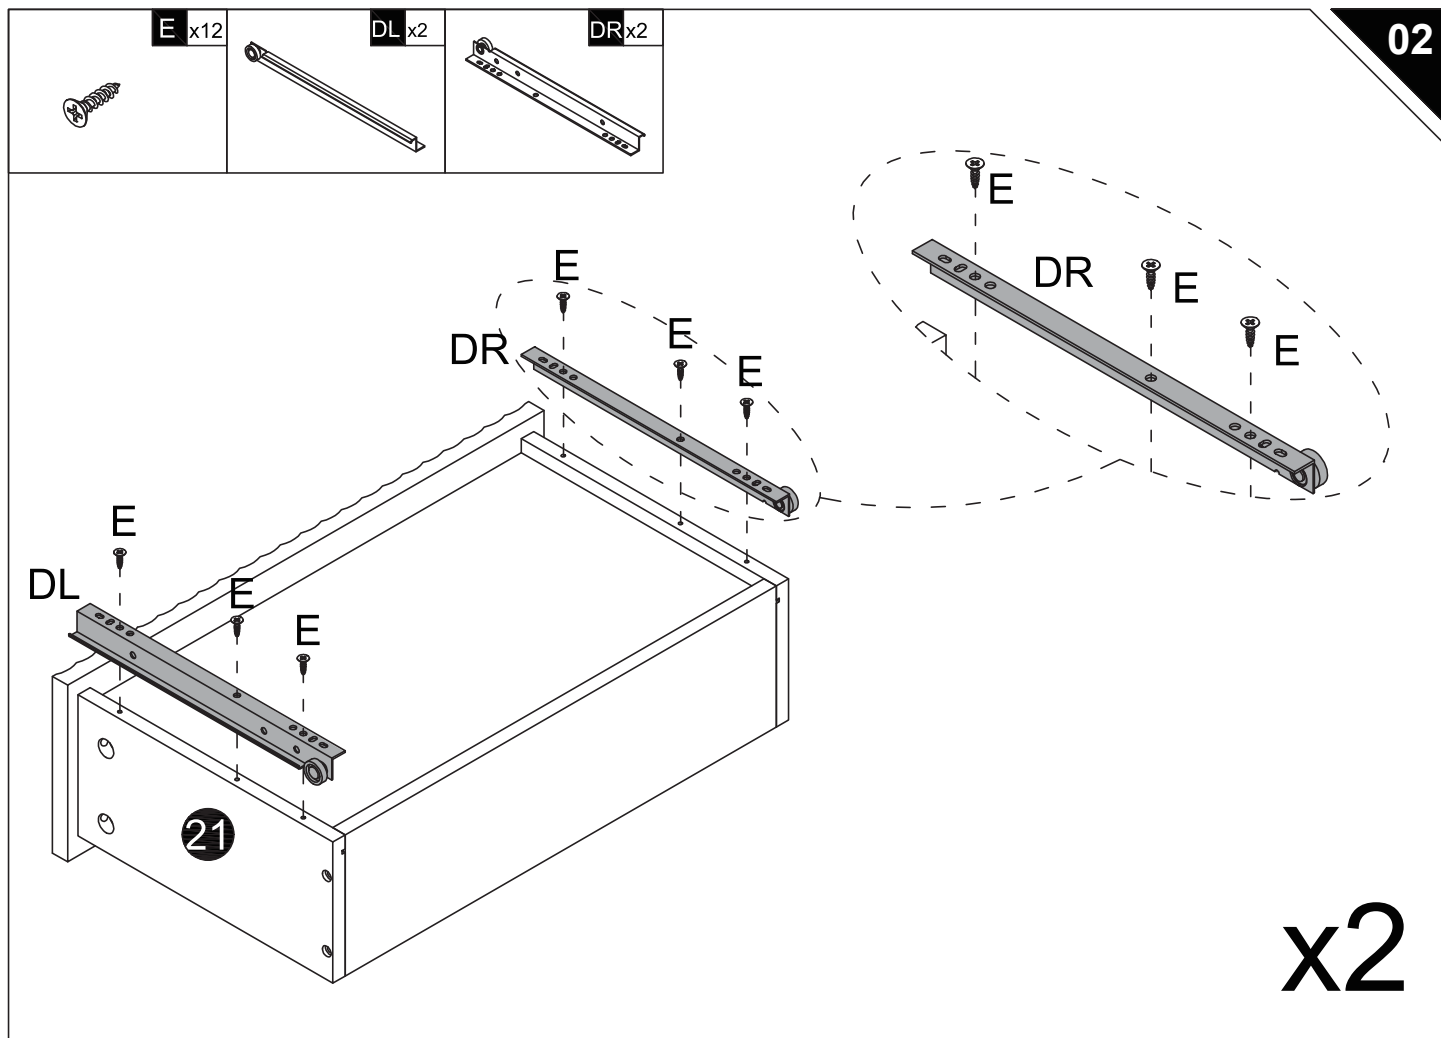

D x16



04

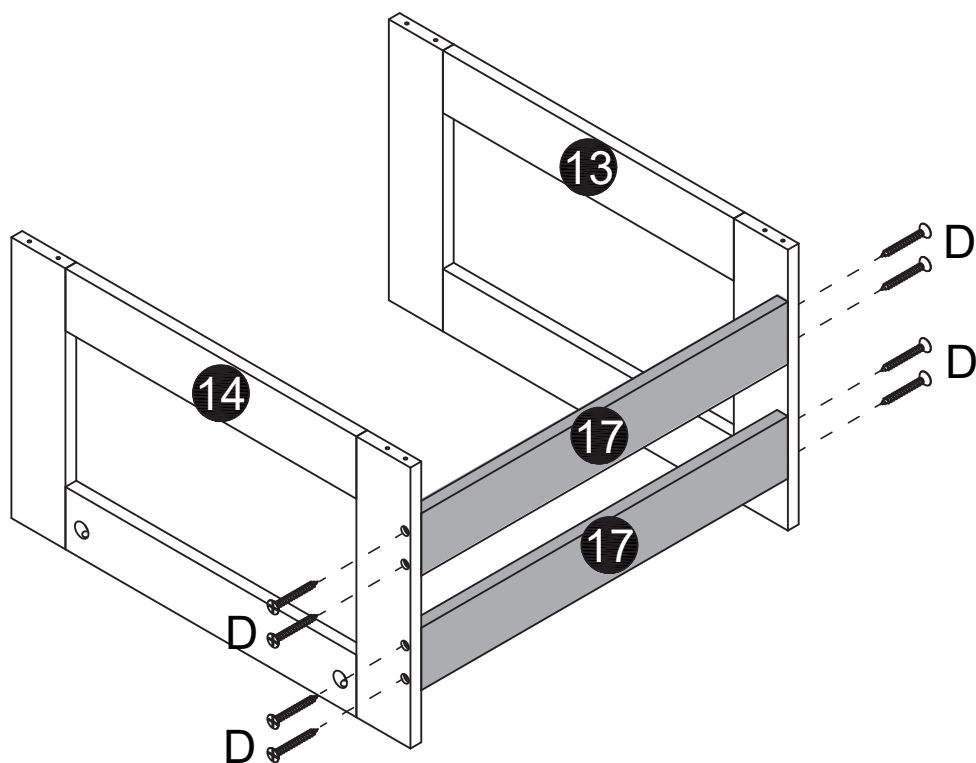

x2


B x8





C x8







05

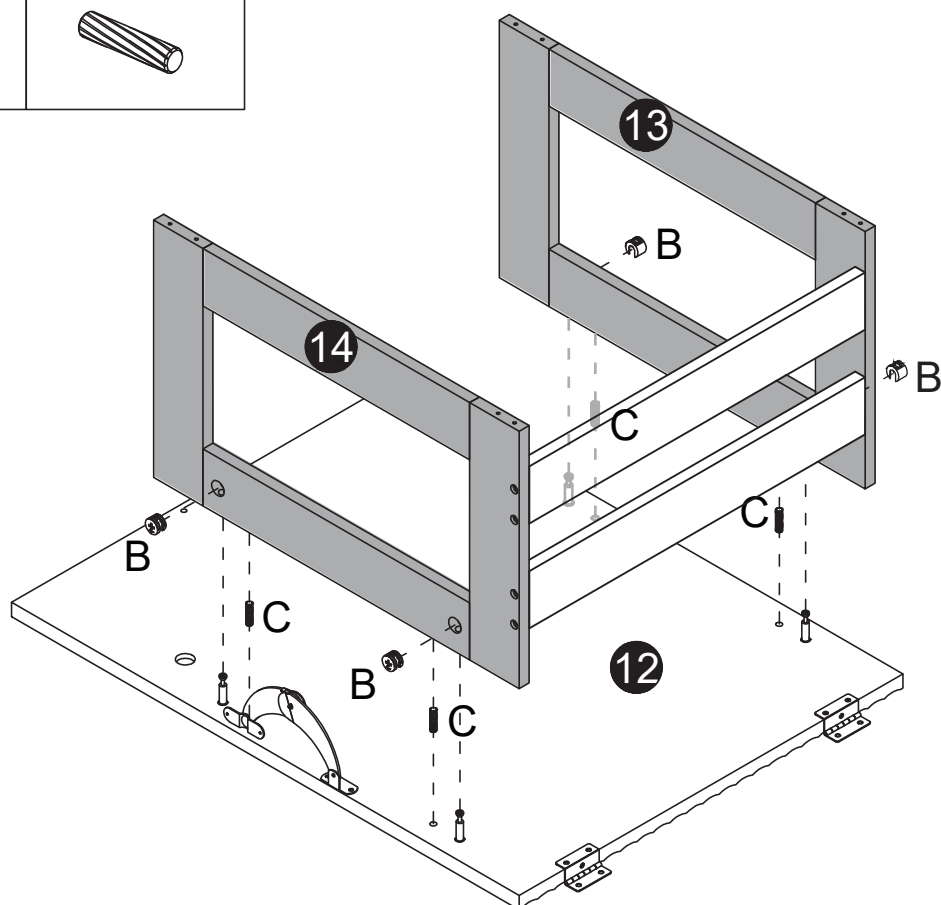




x2

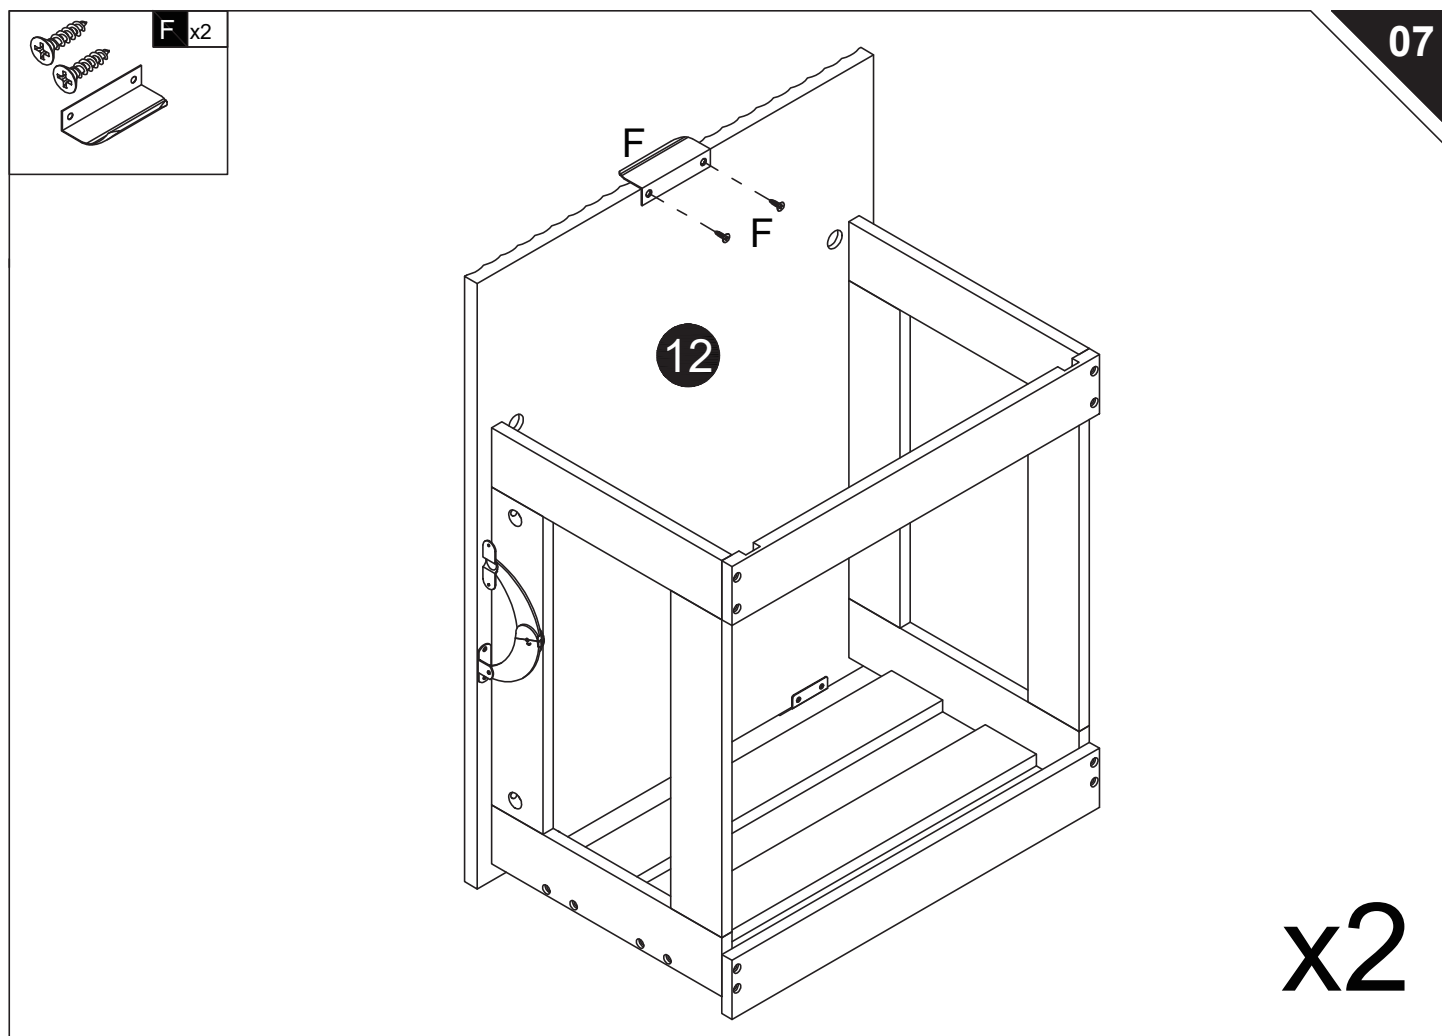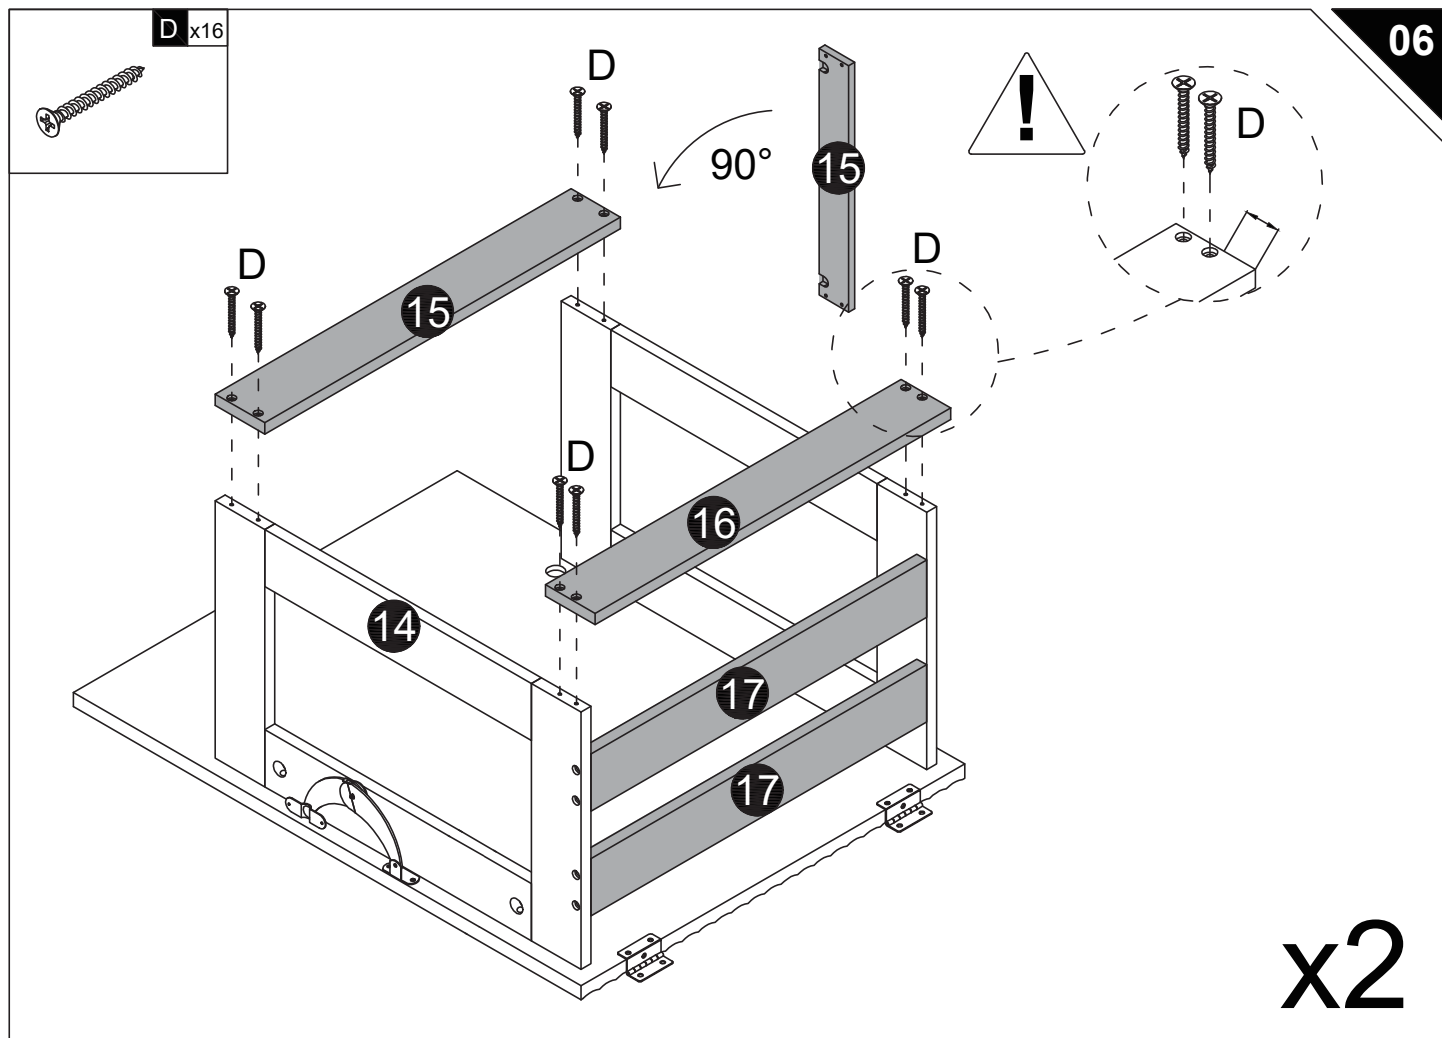

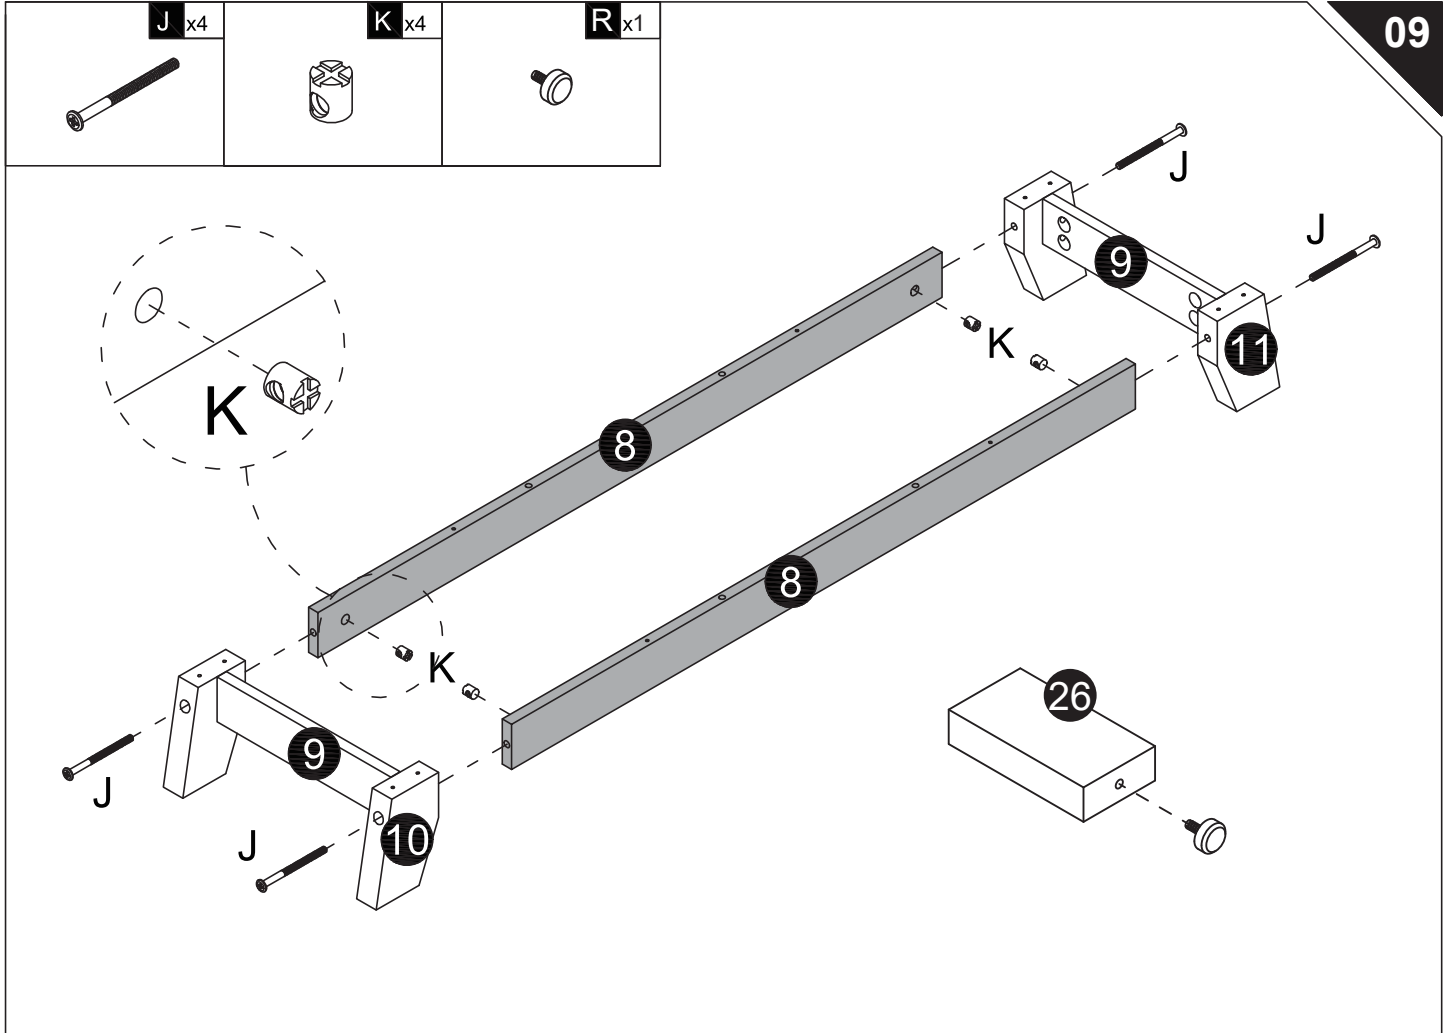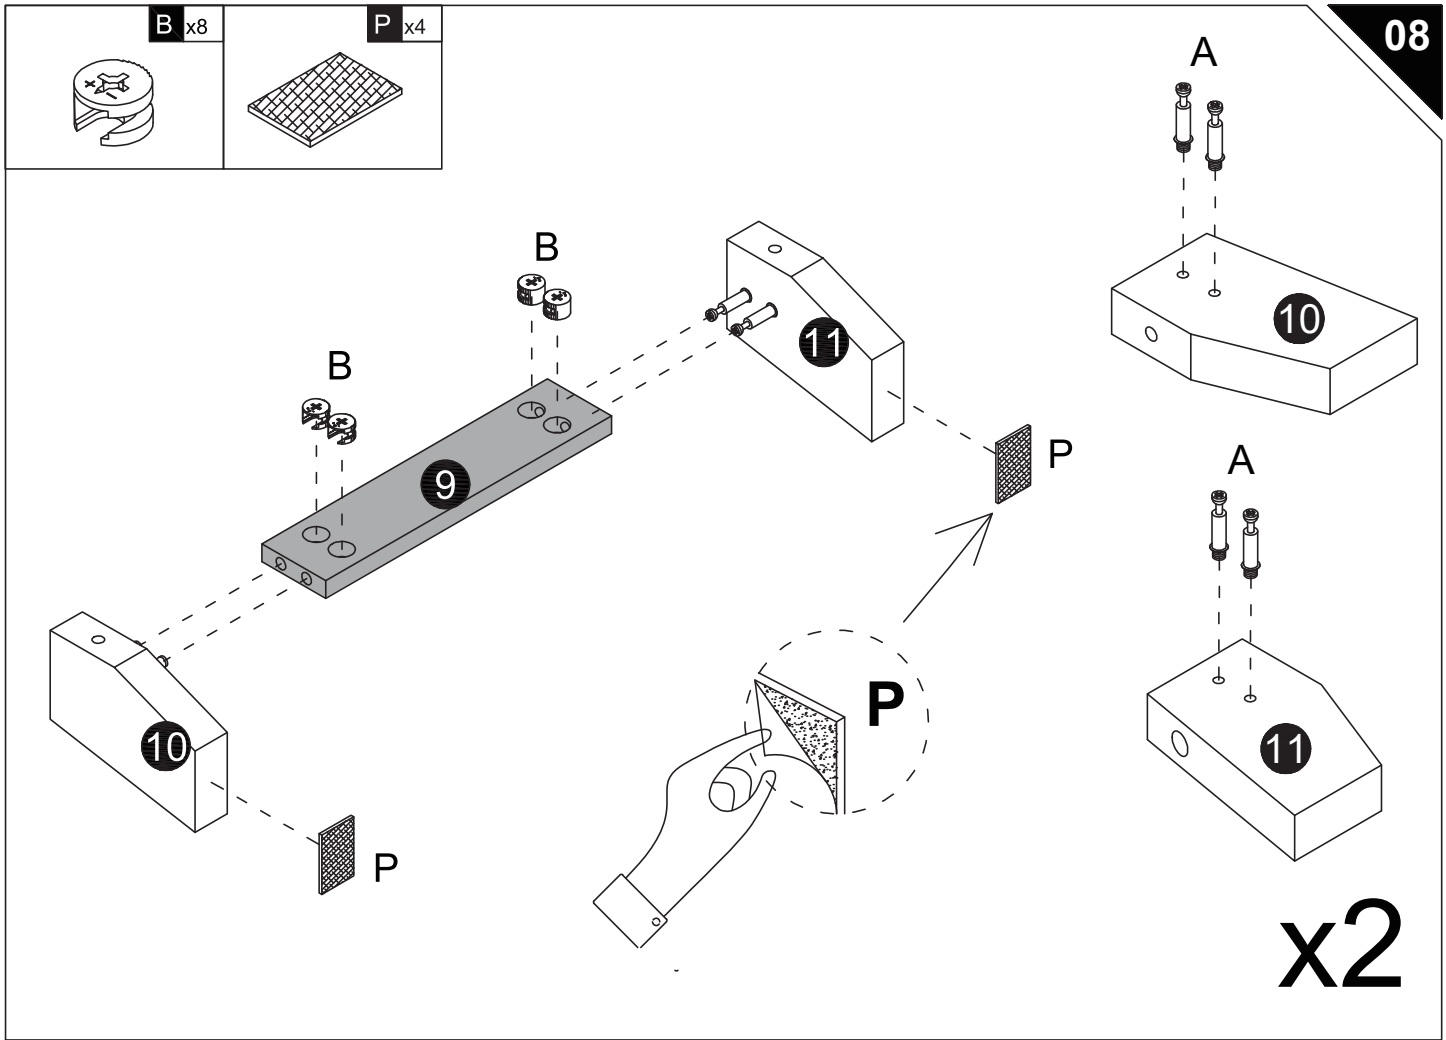

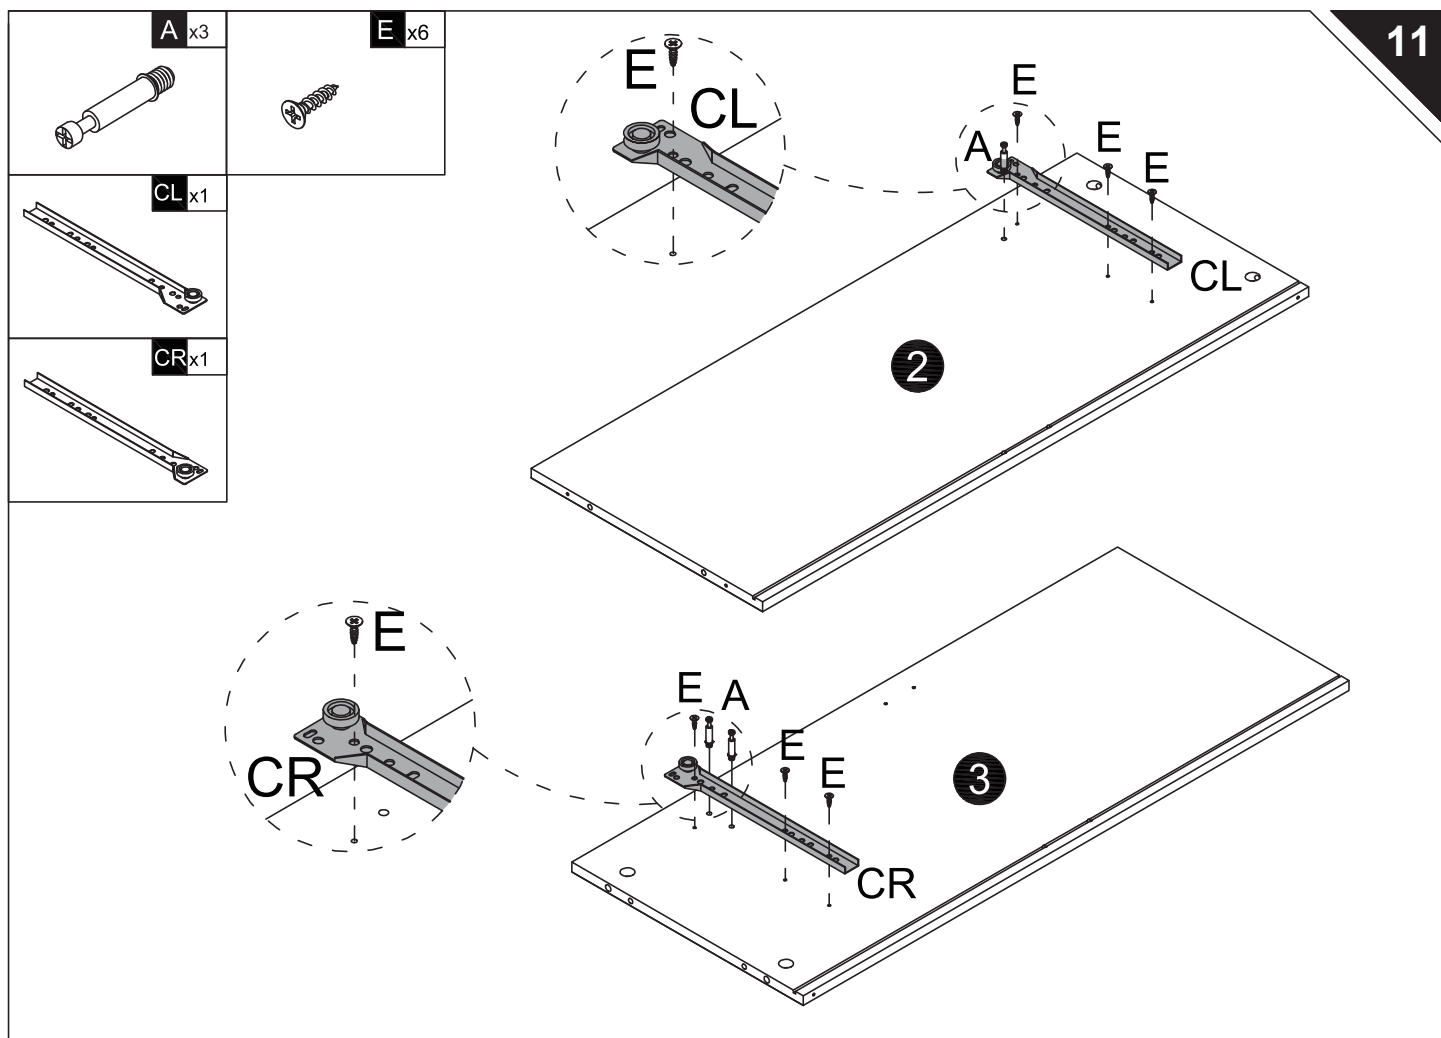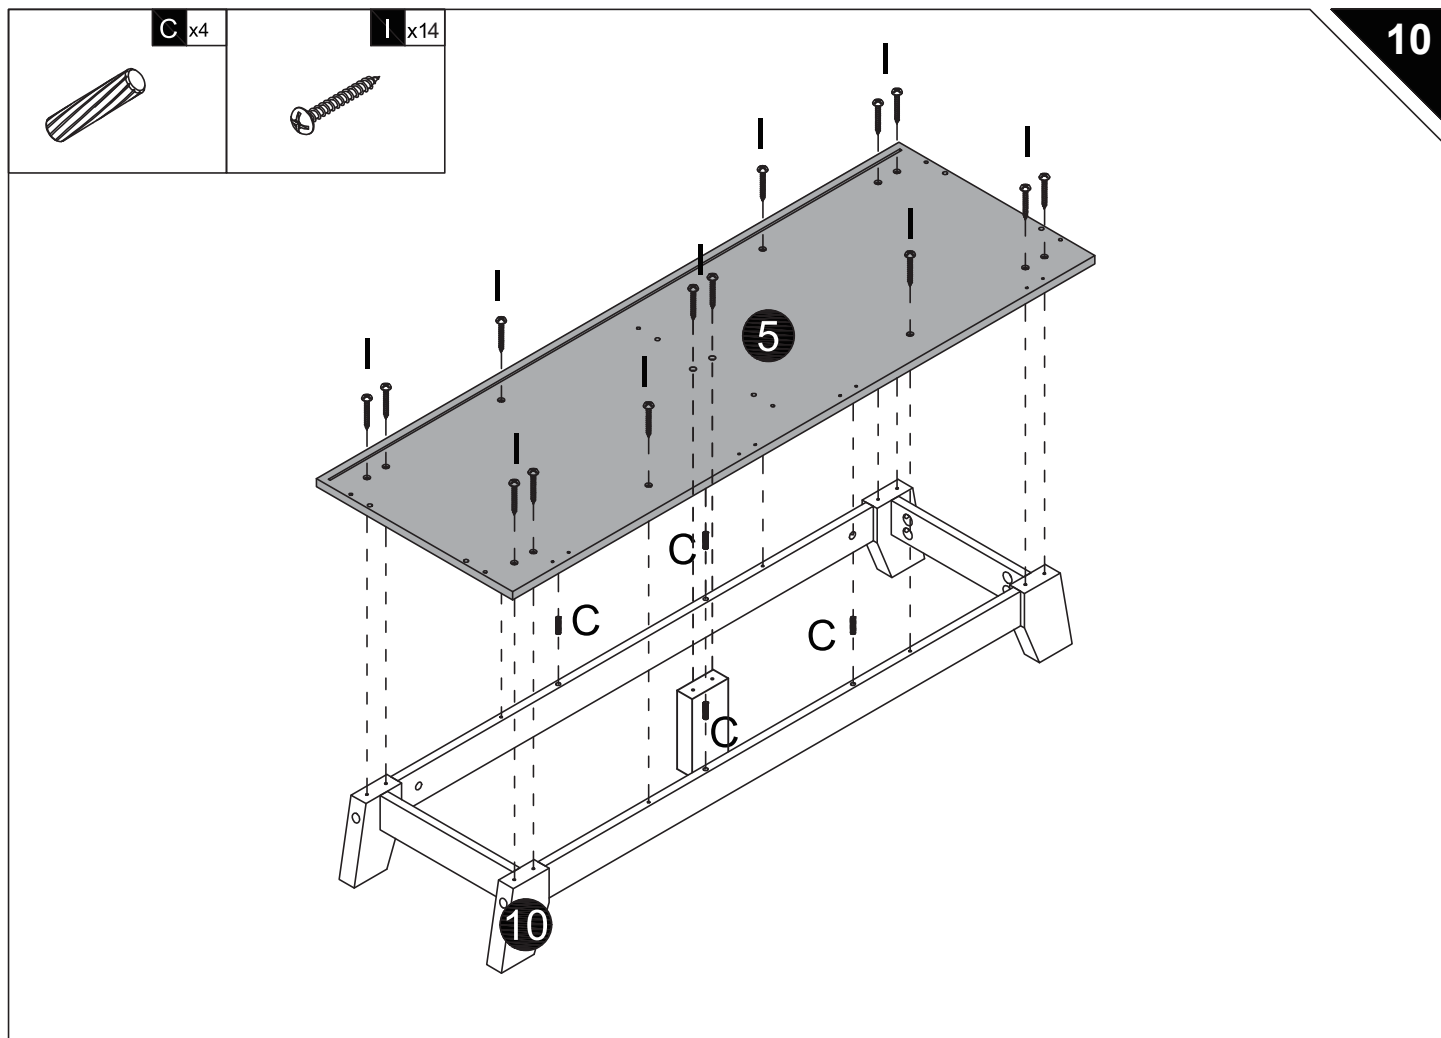

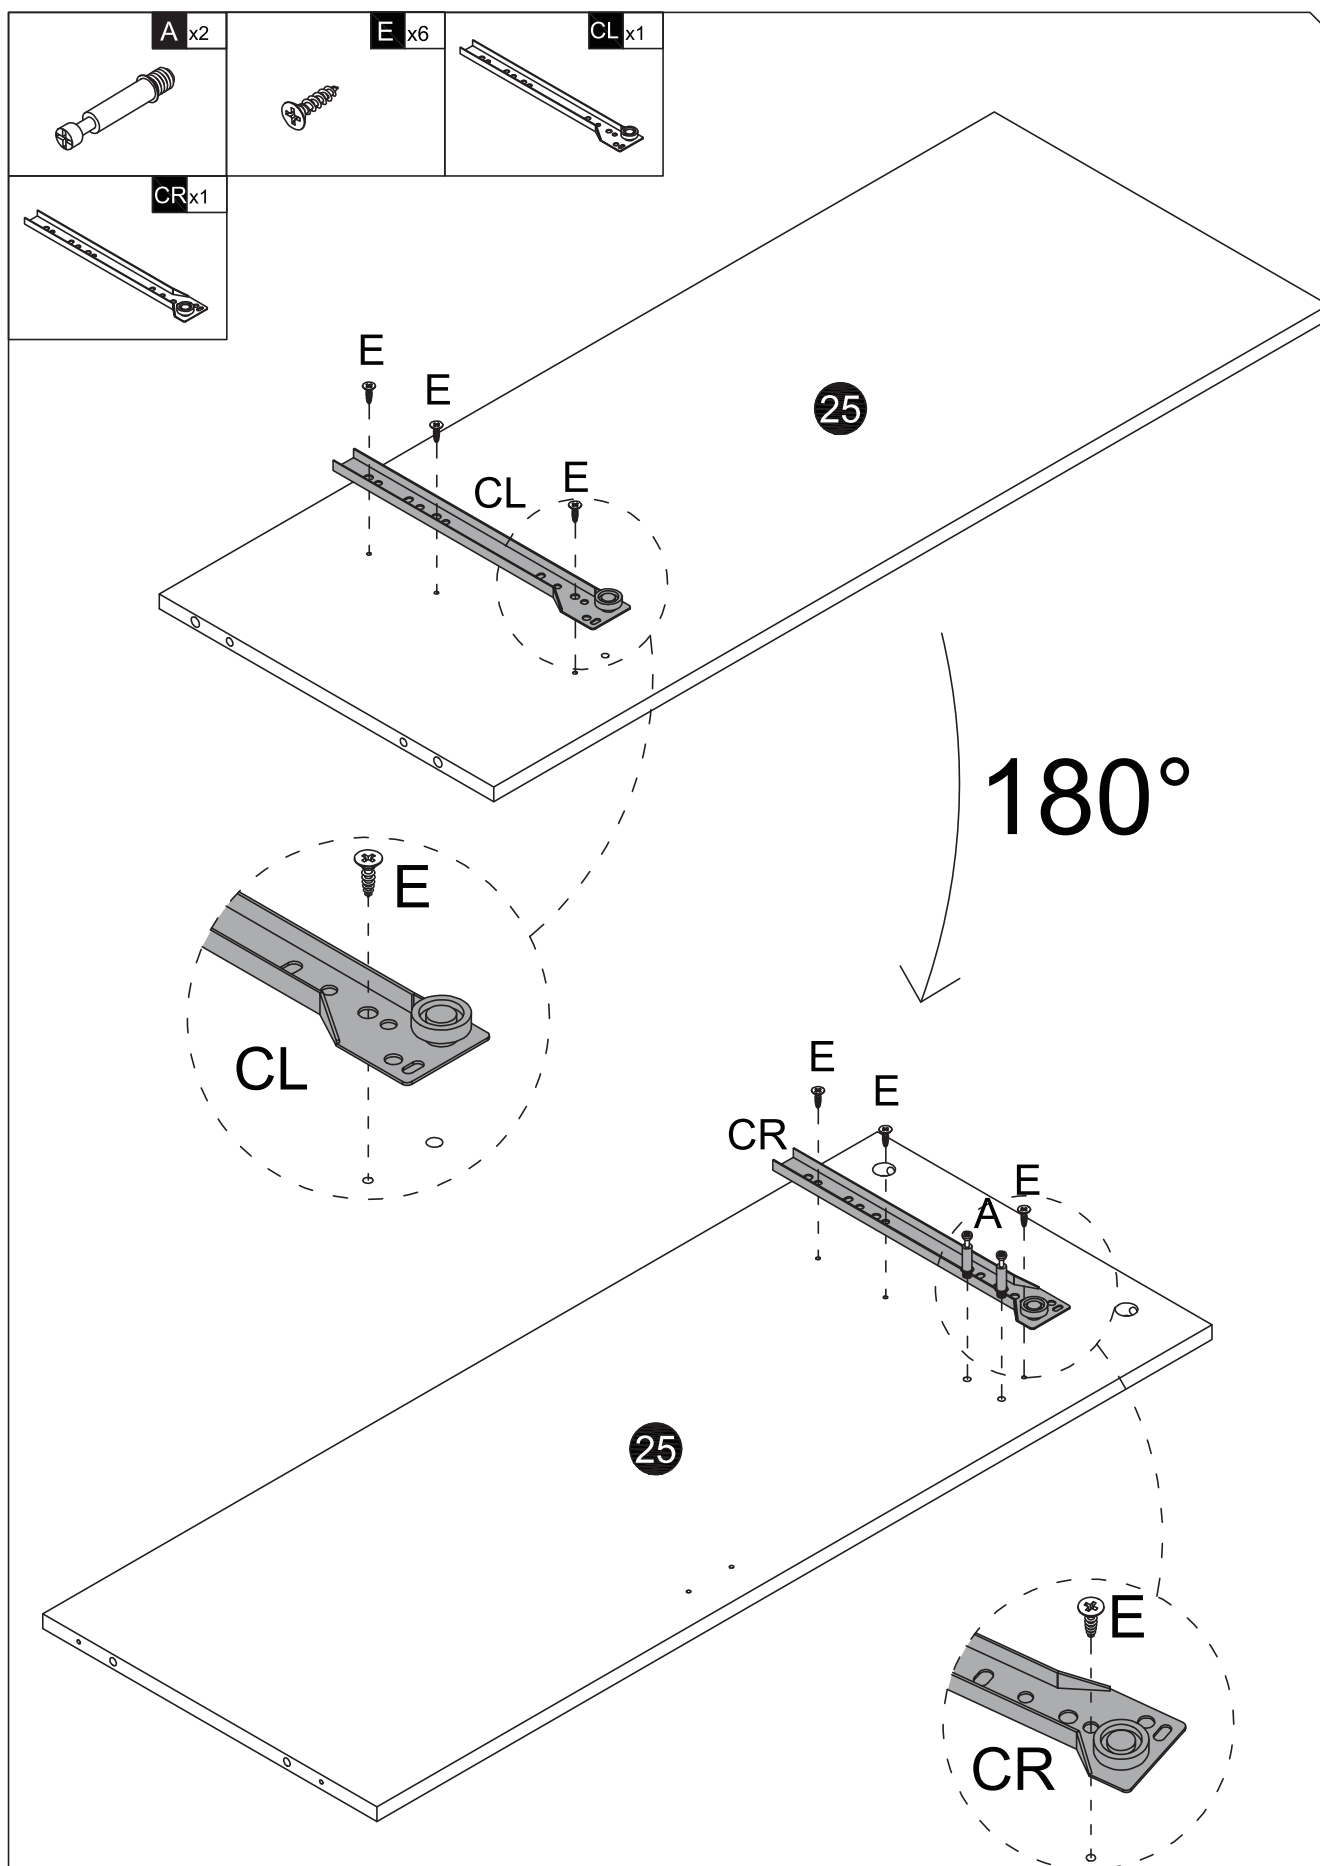



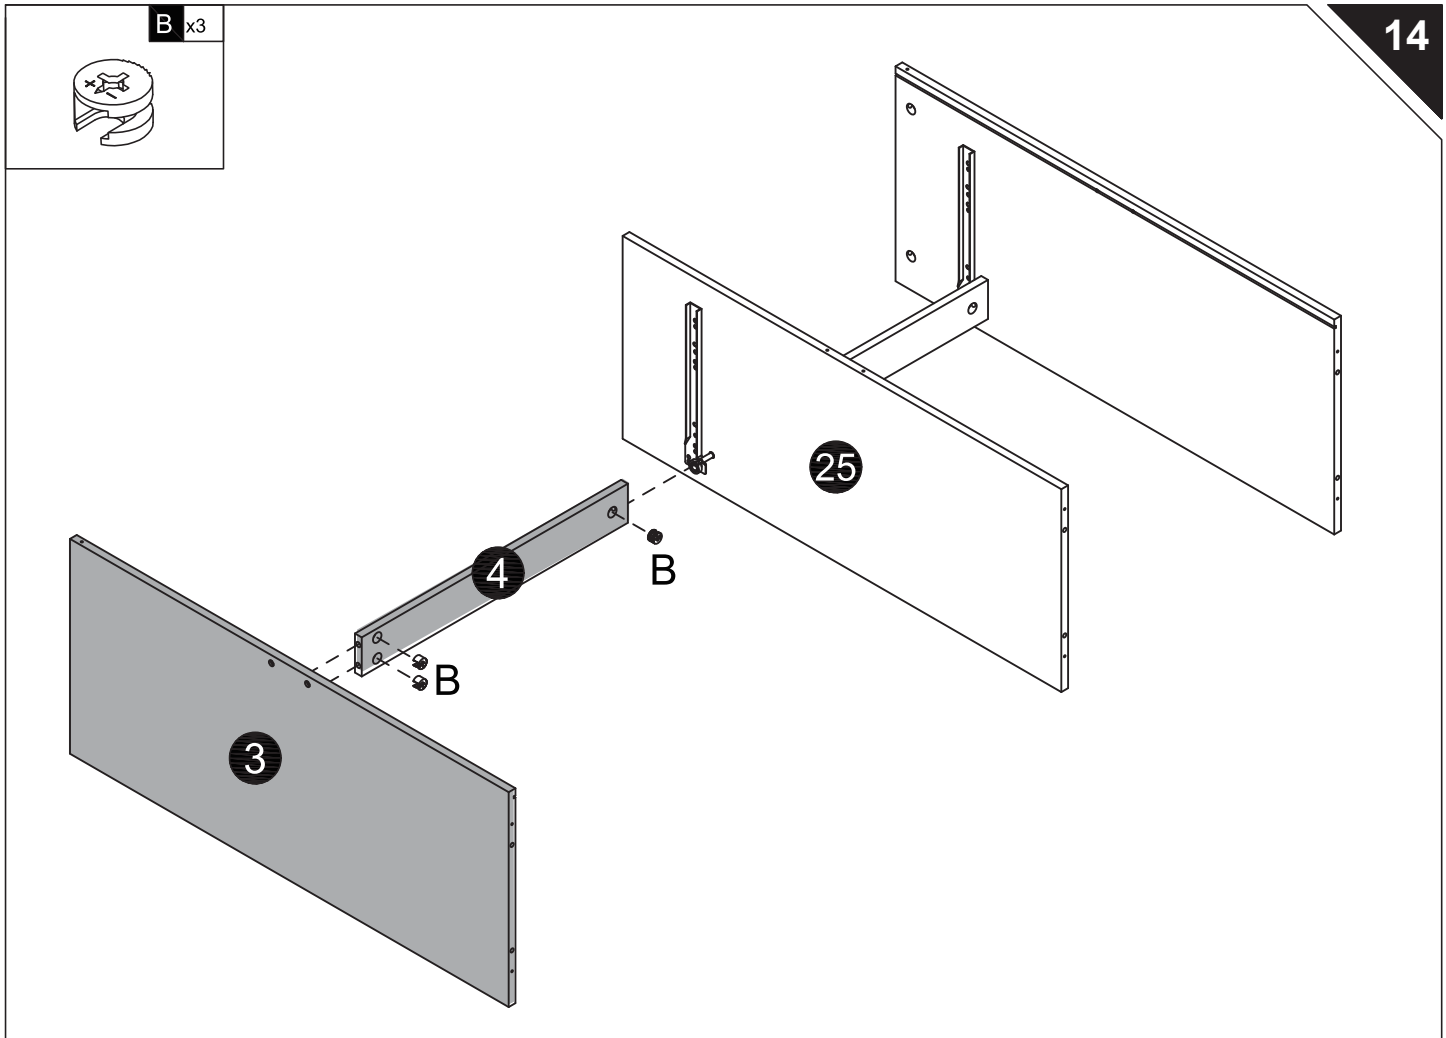
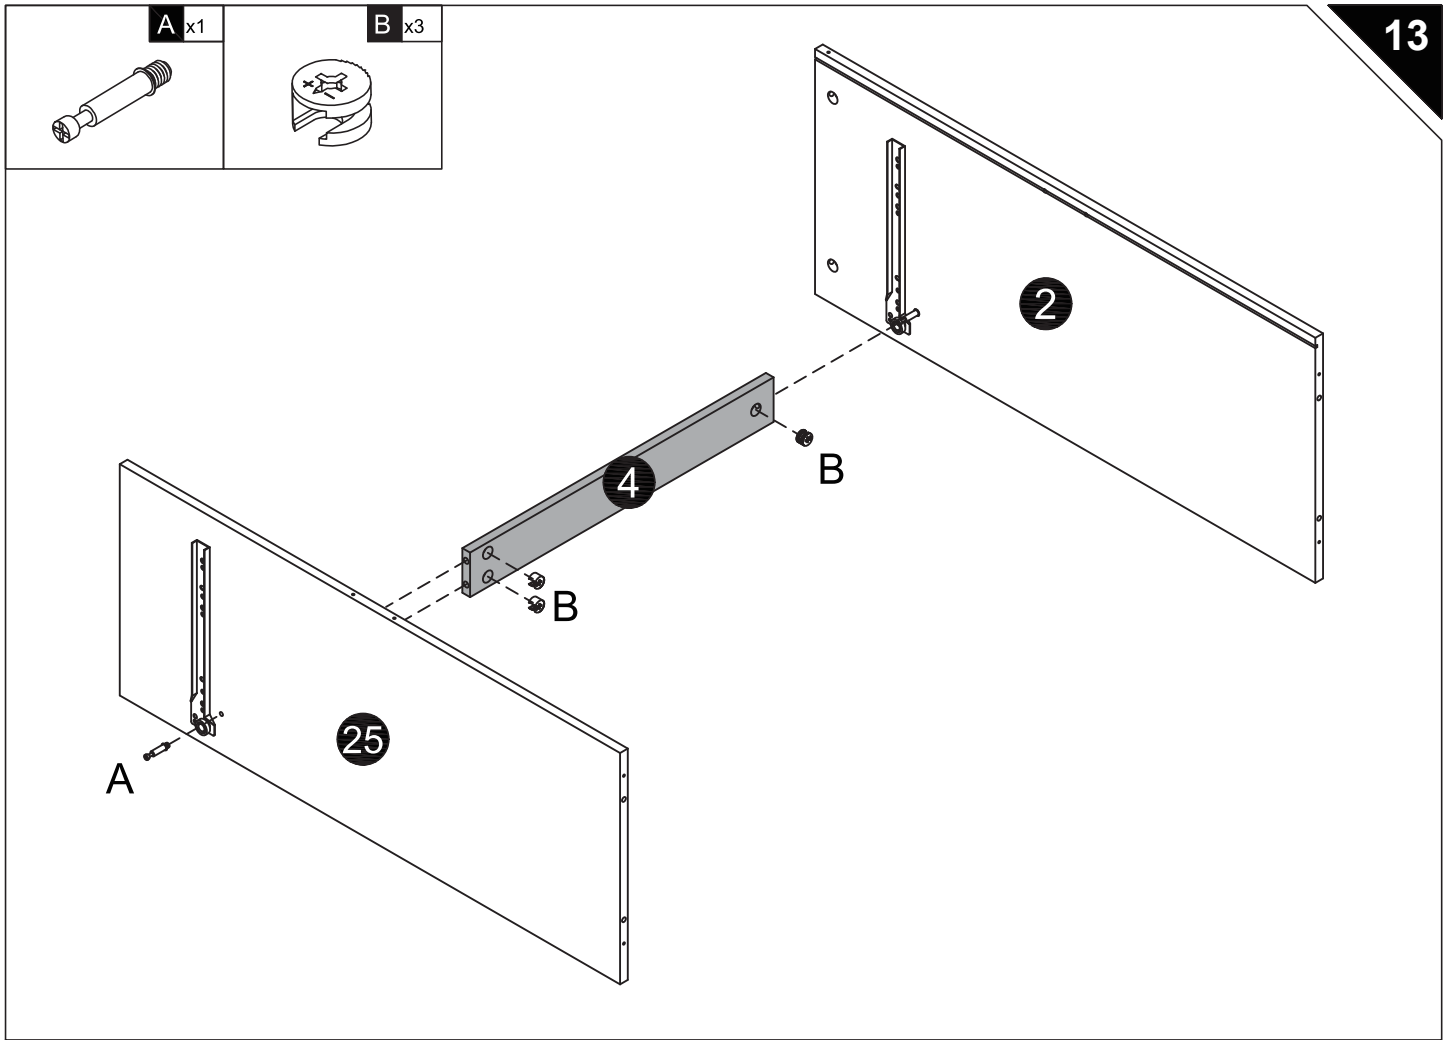



D x6





15

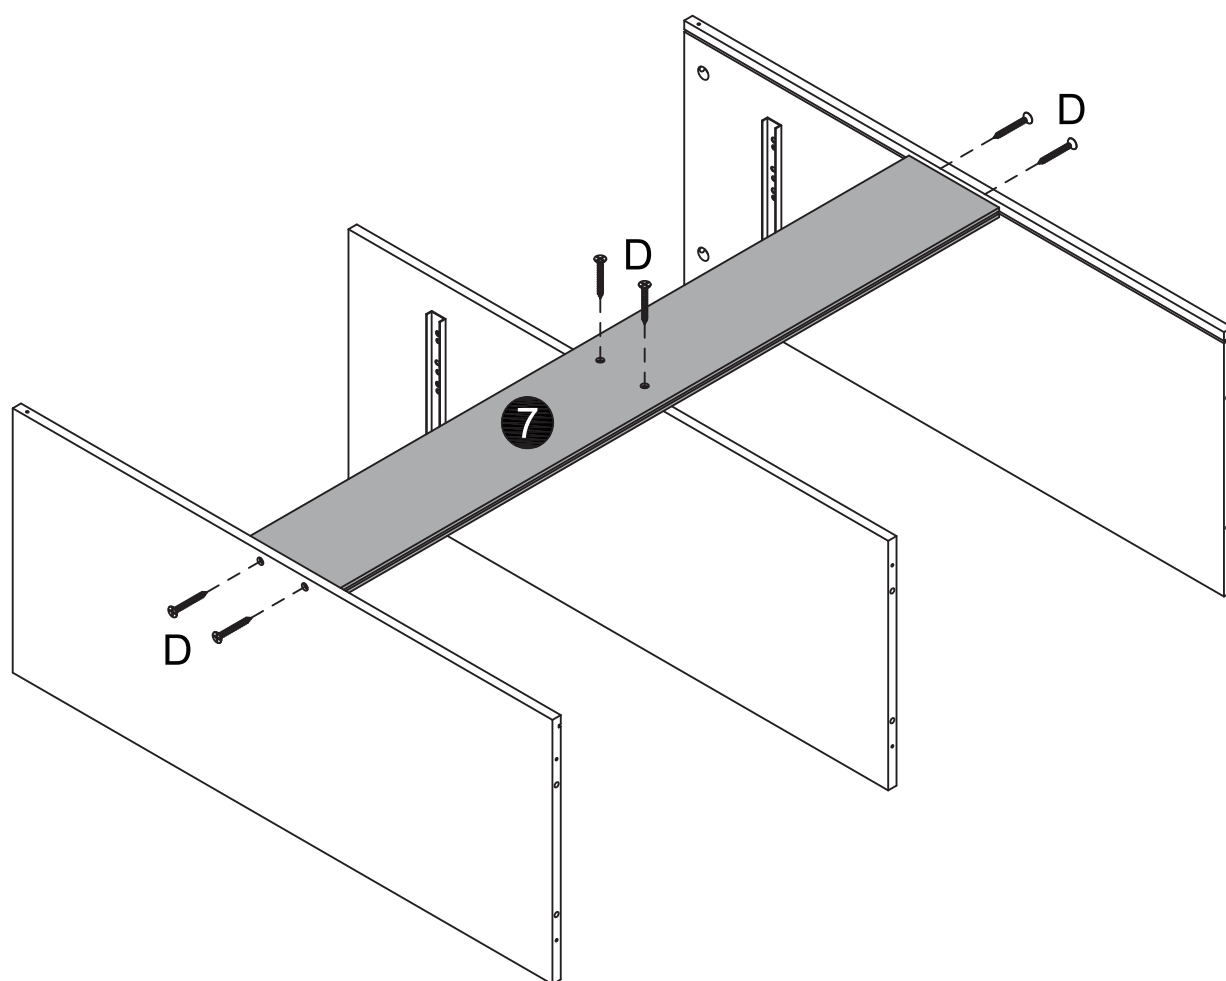

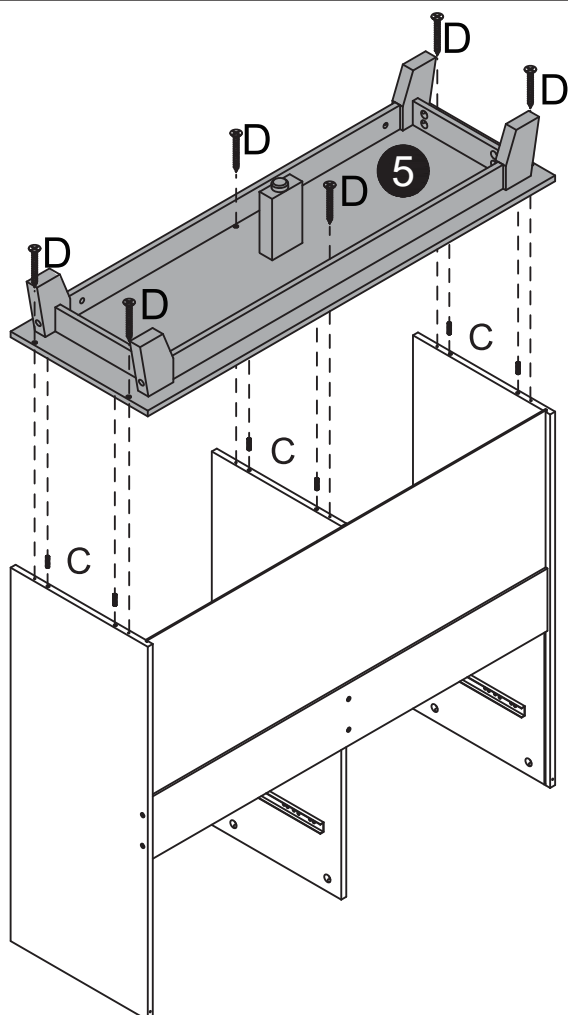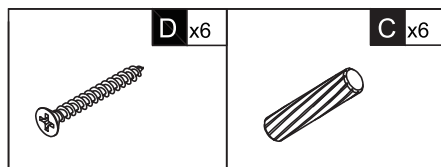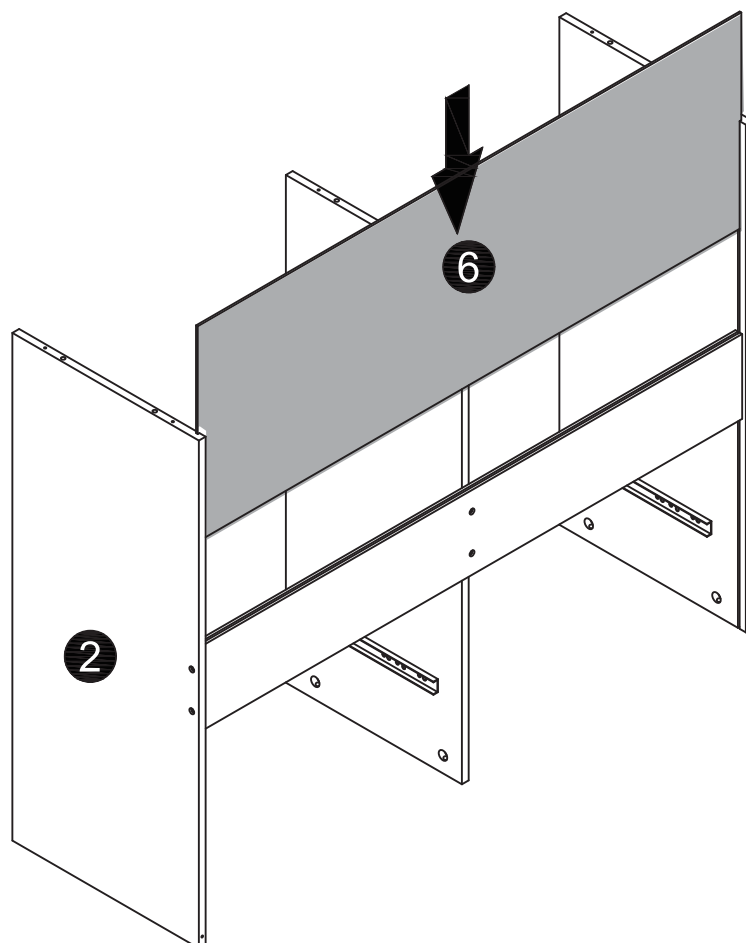

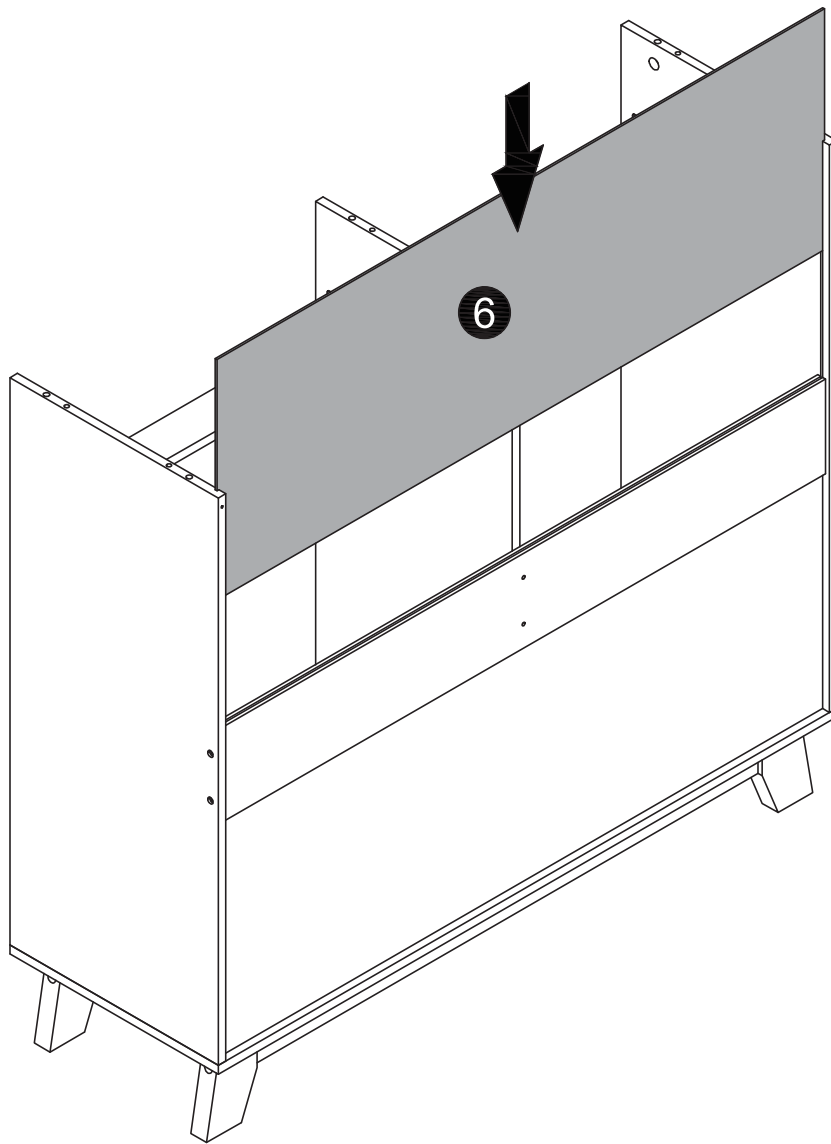



A x6

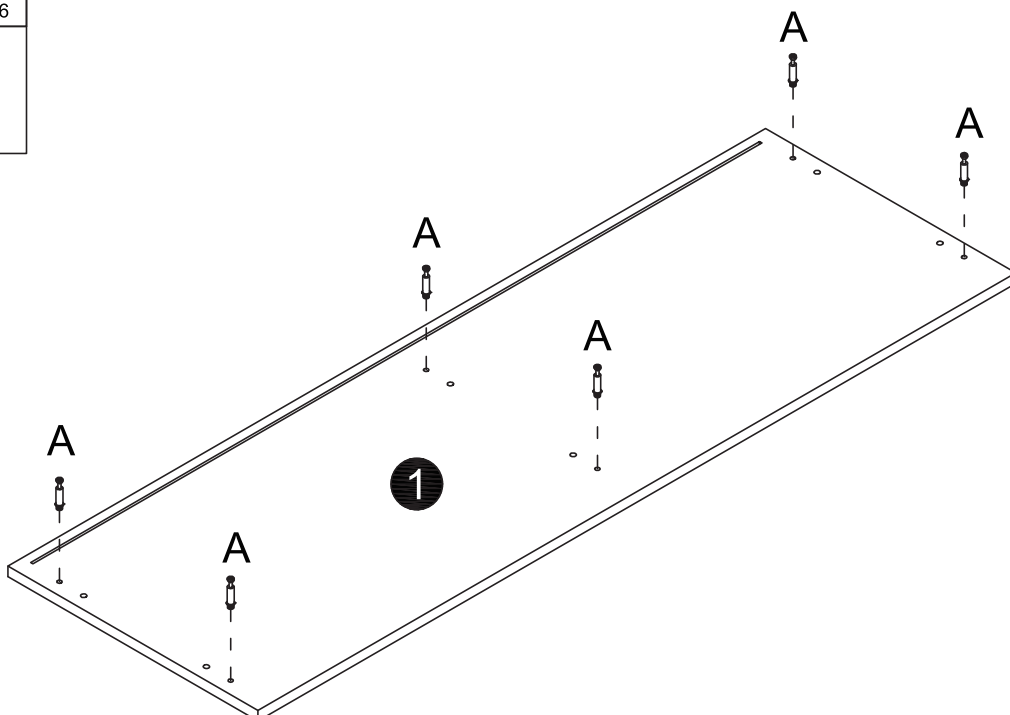

B x6









C x6

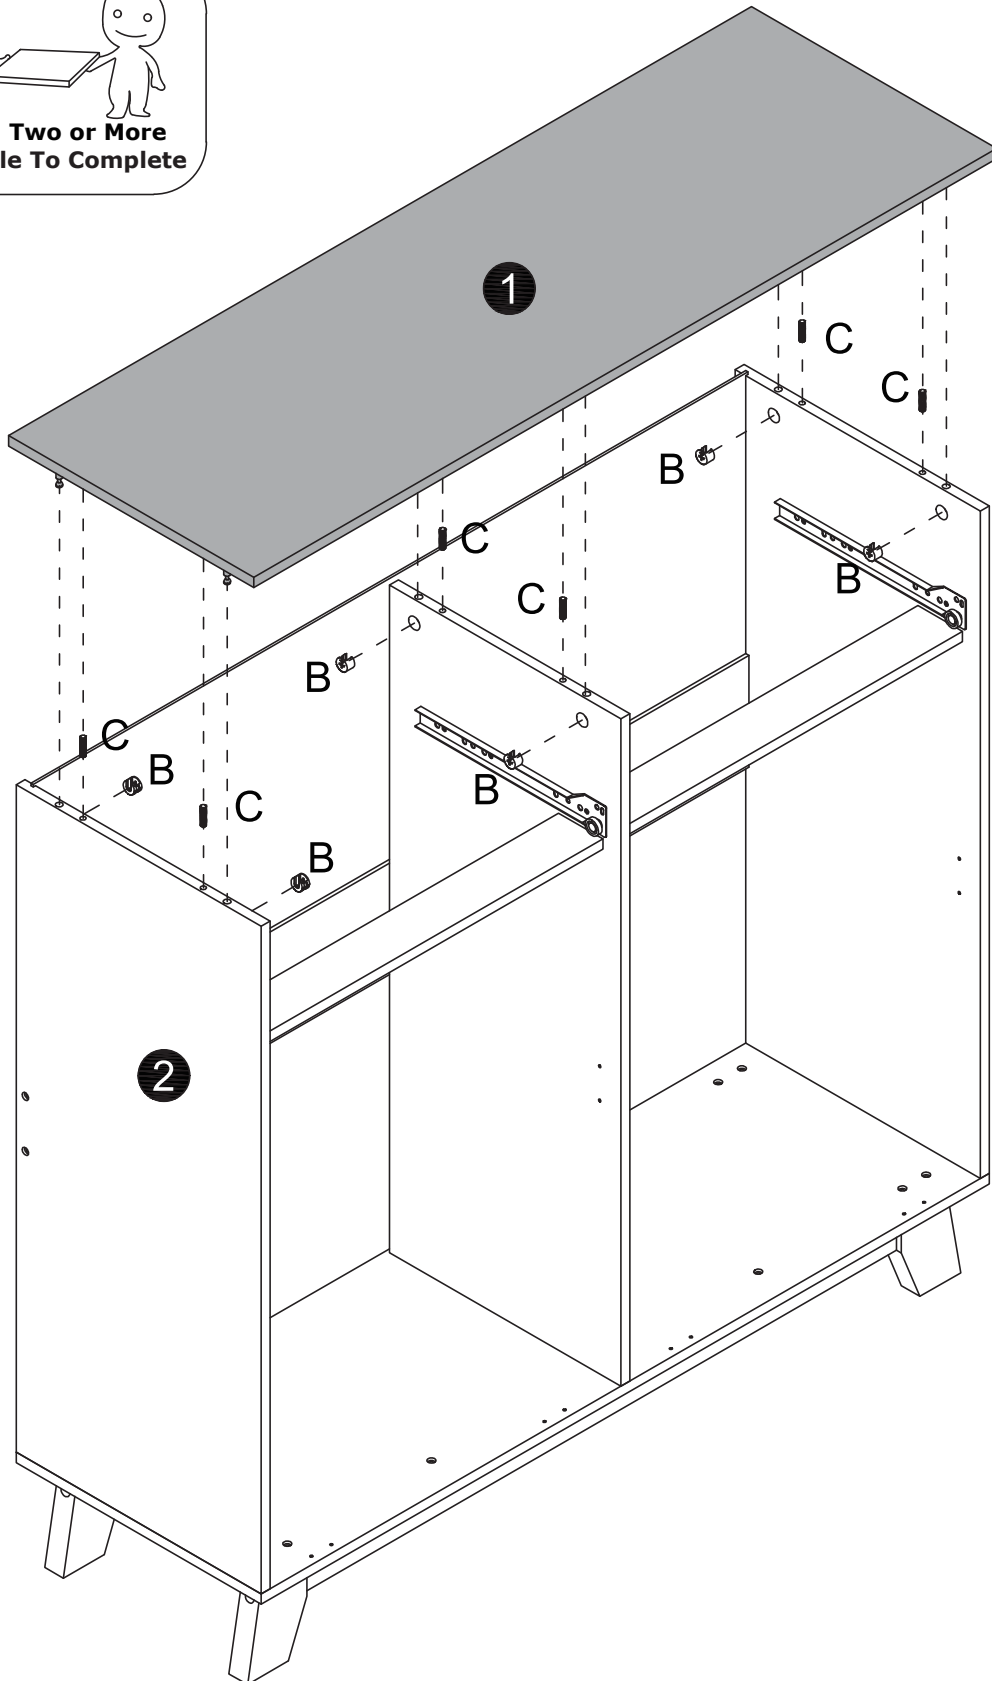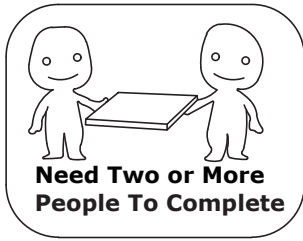




Q x8

21

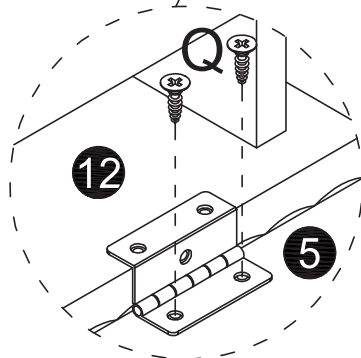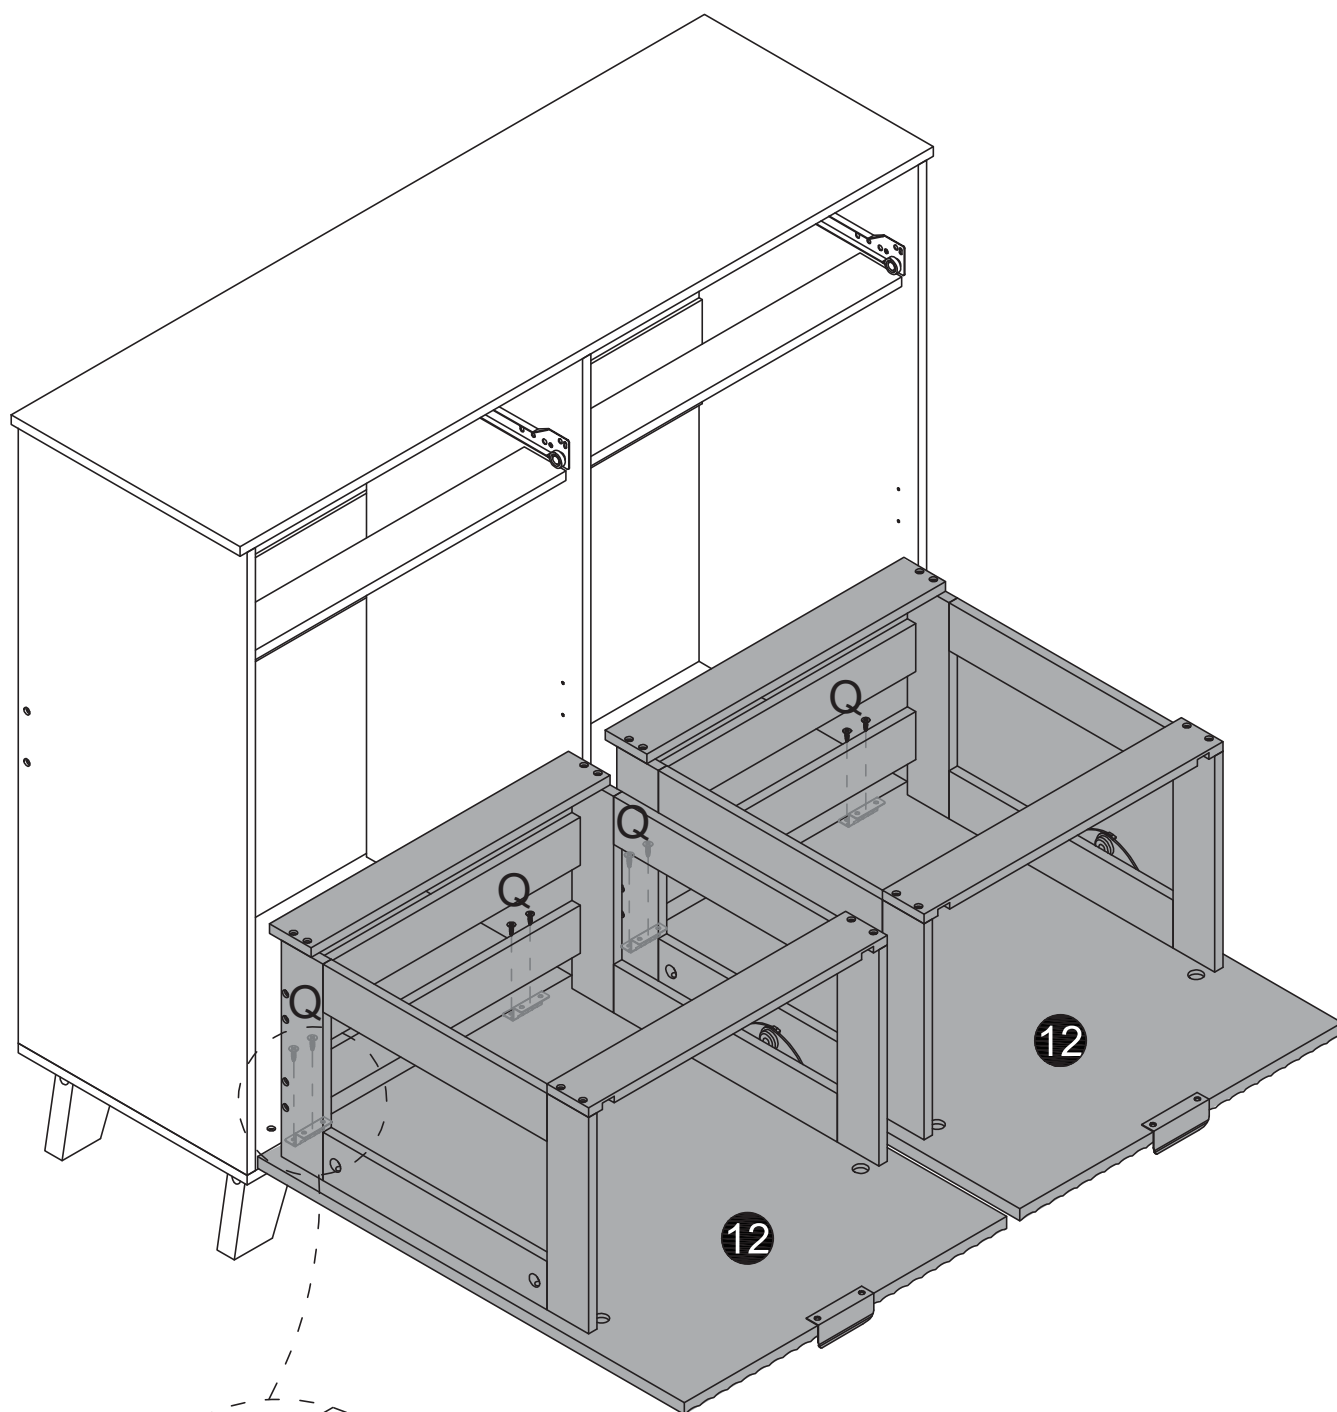

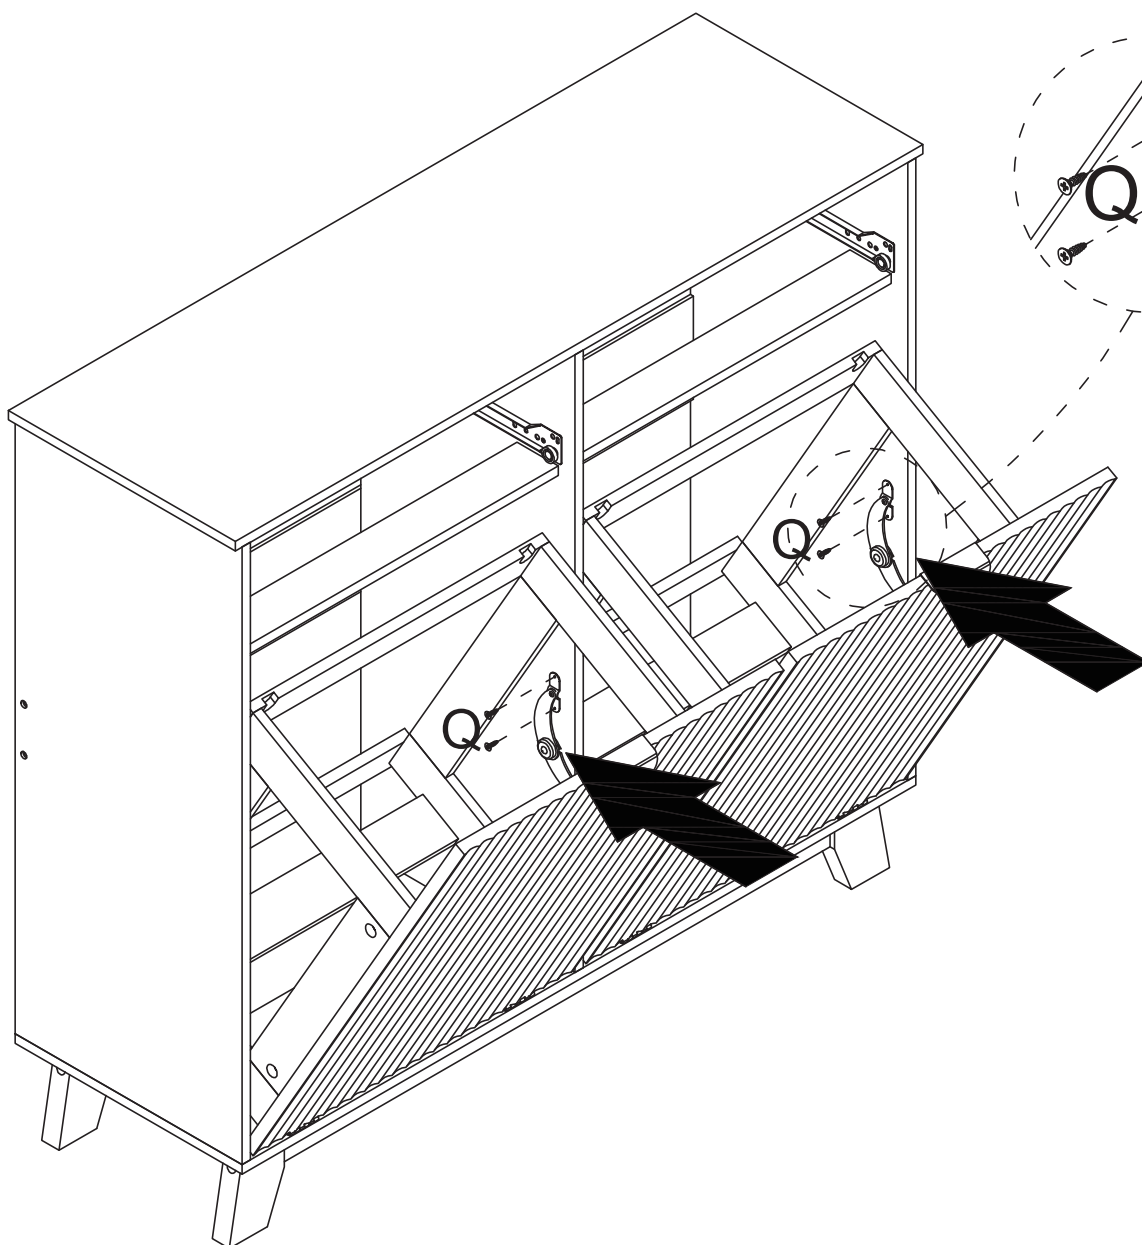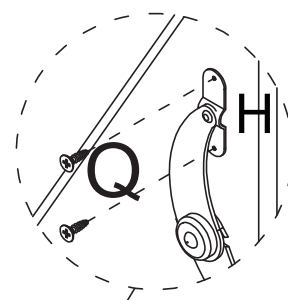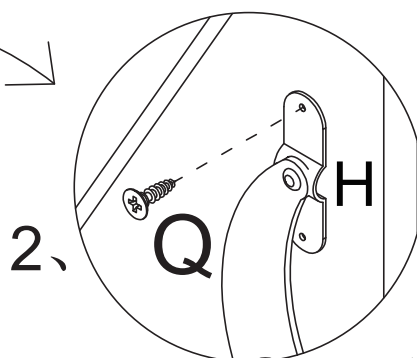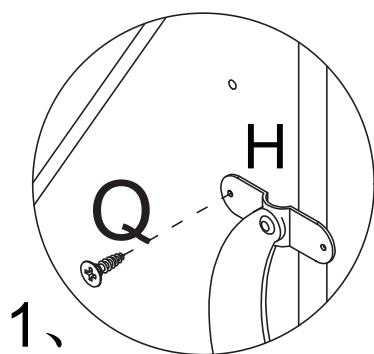

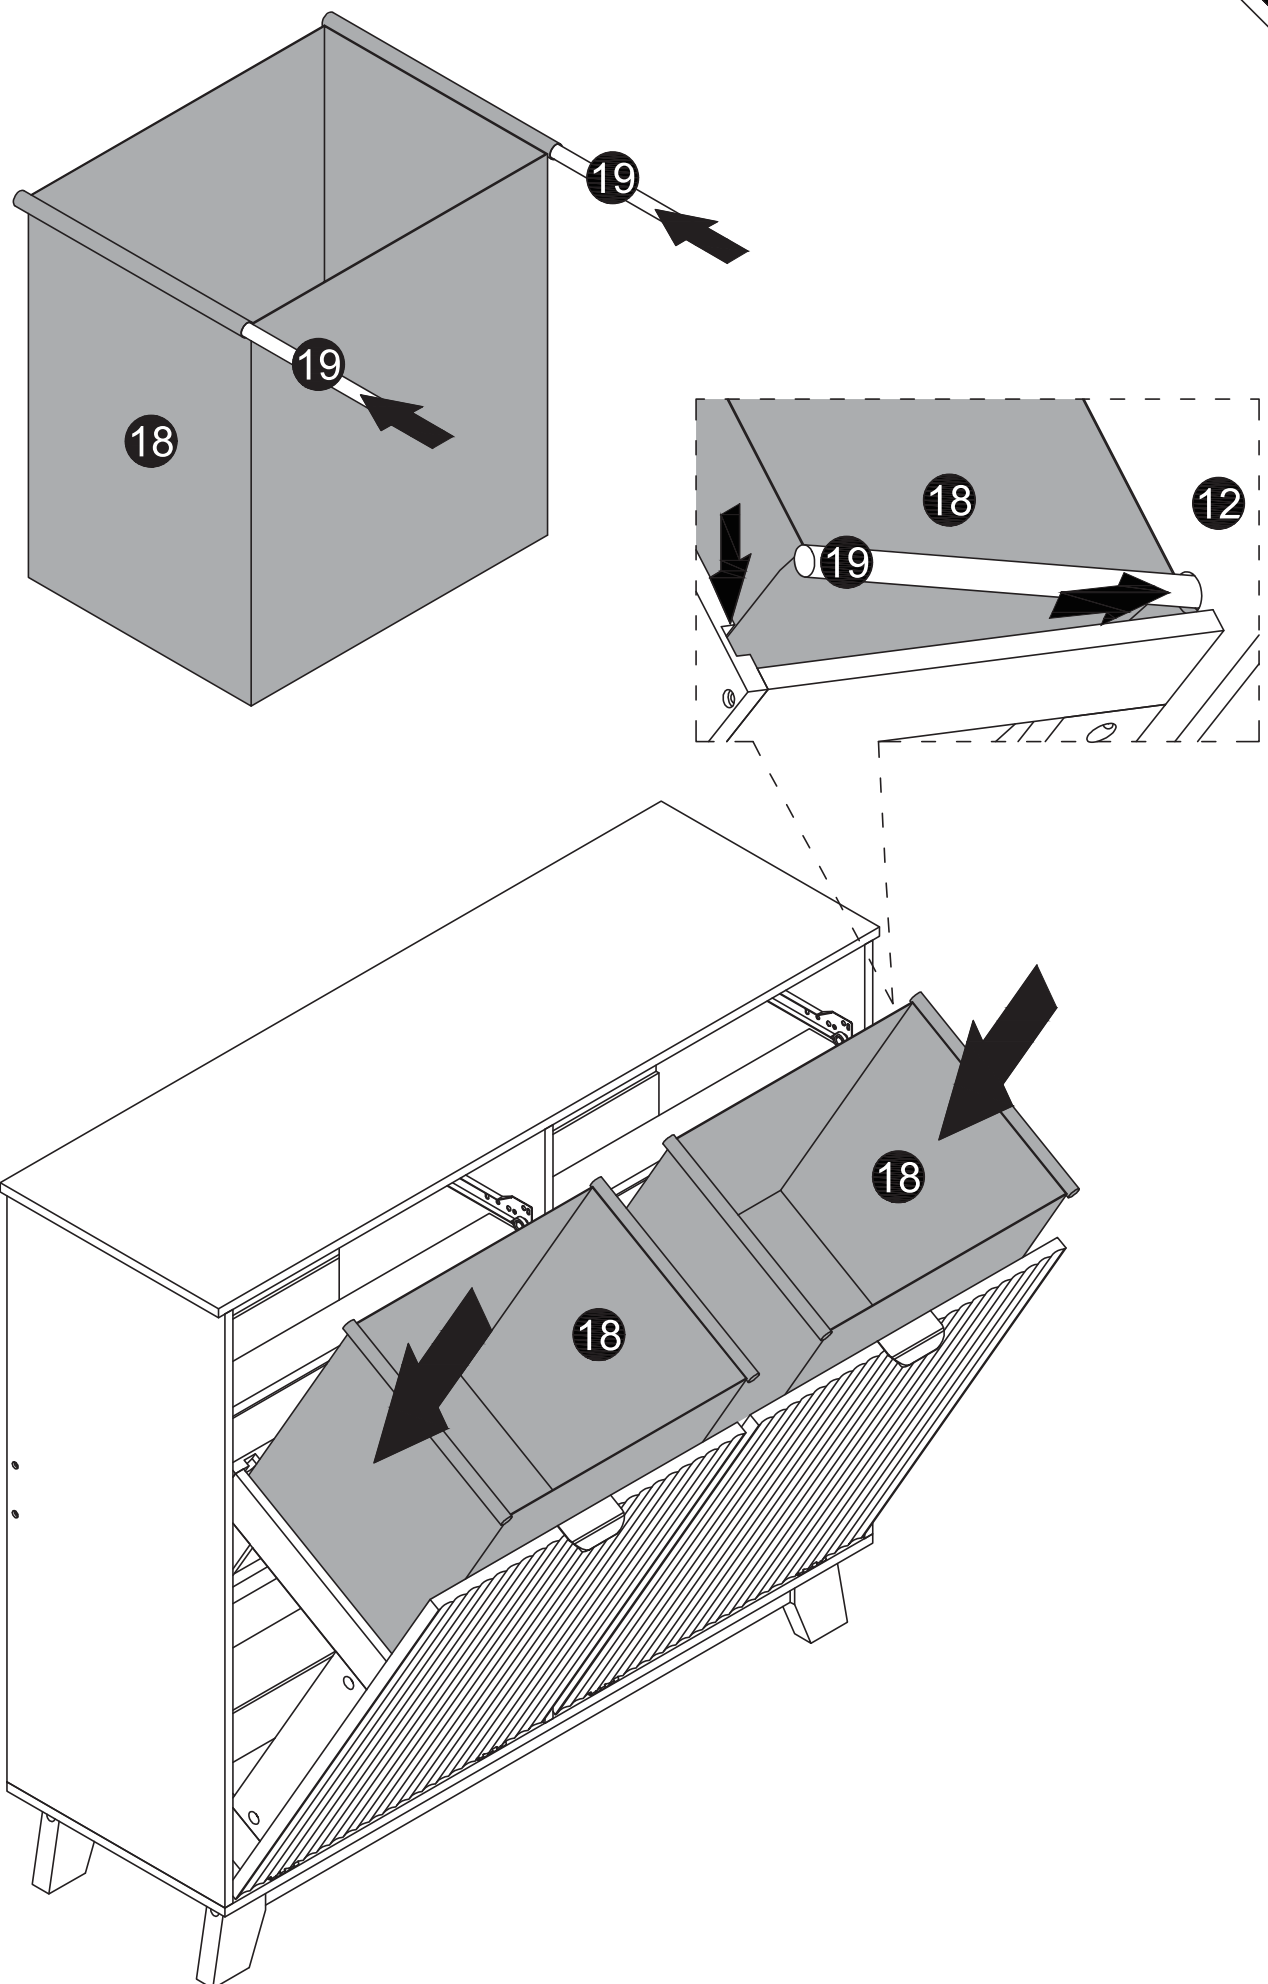

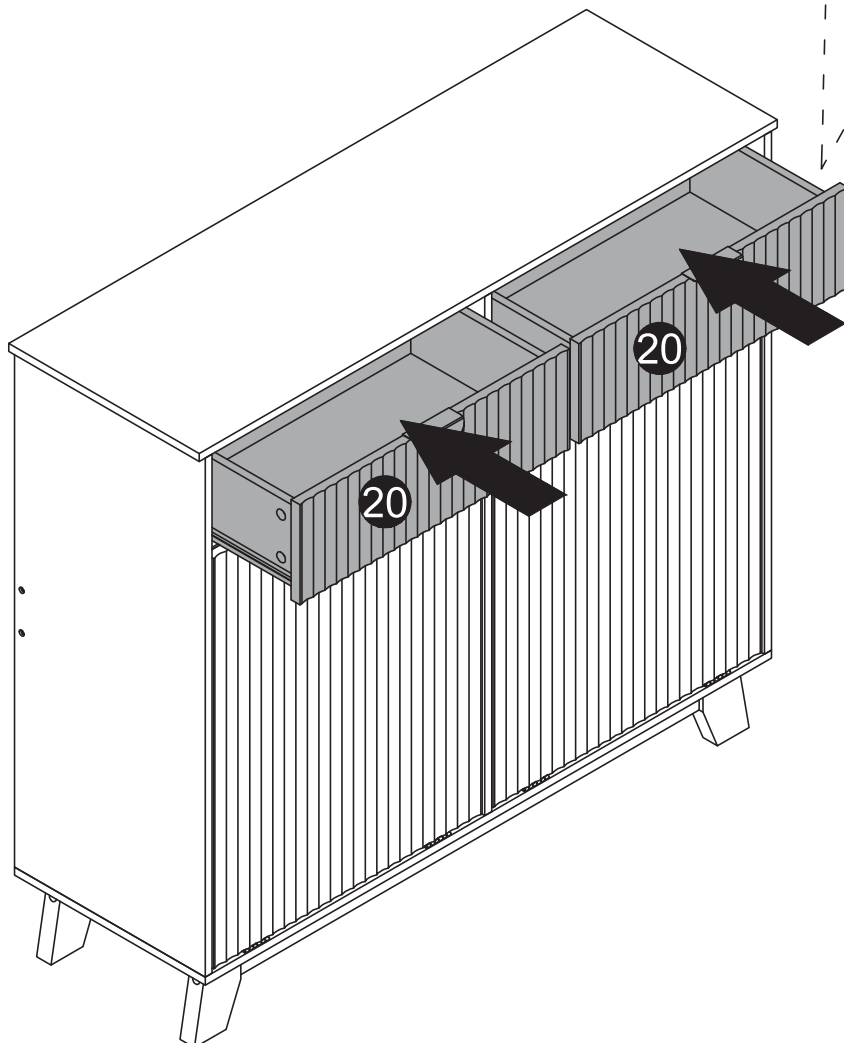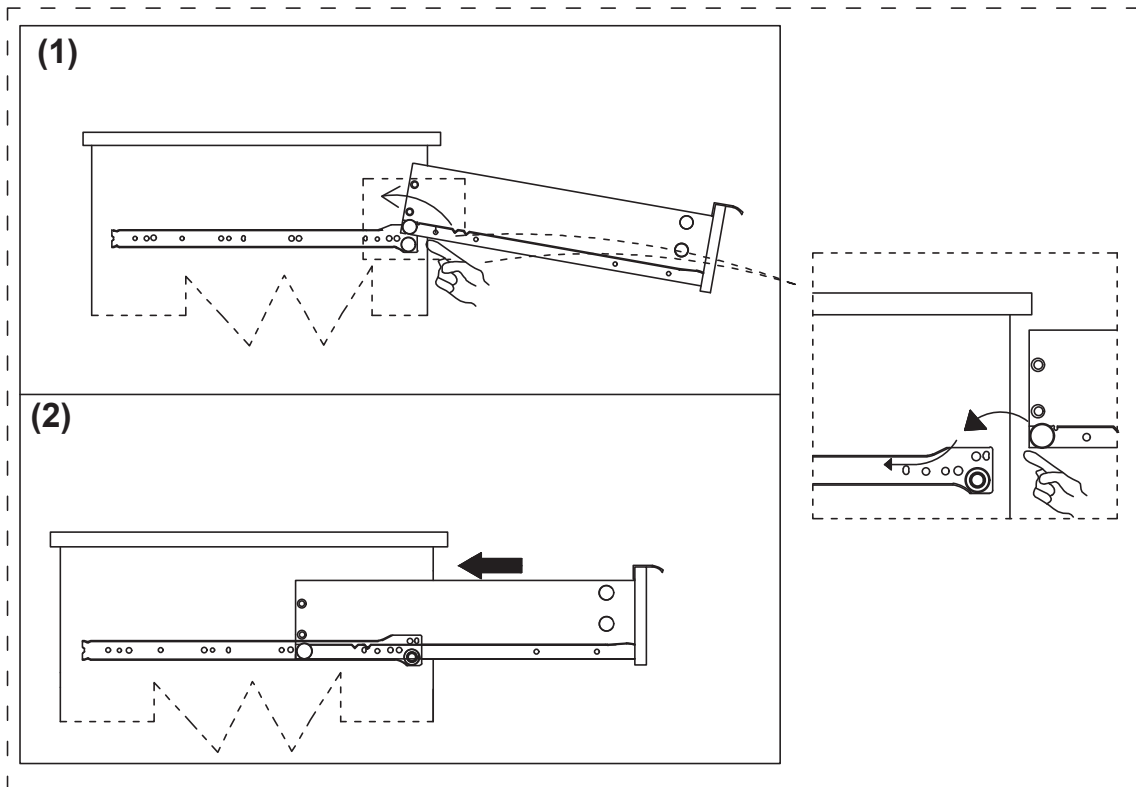

L x4




O x10



O-1




O-2

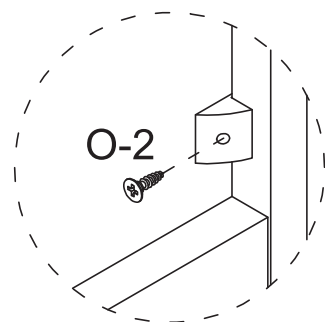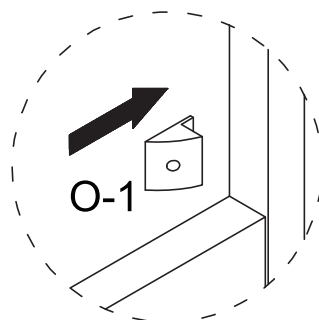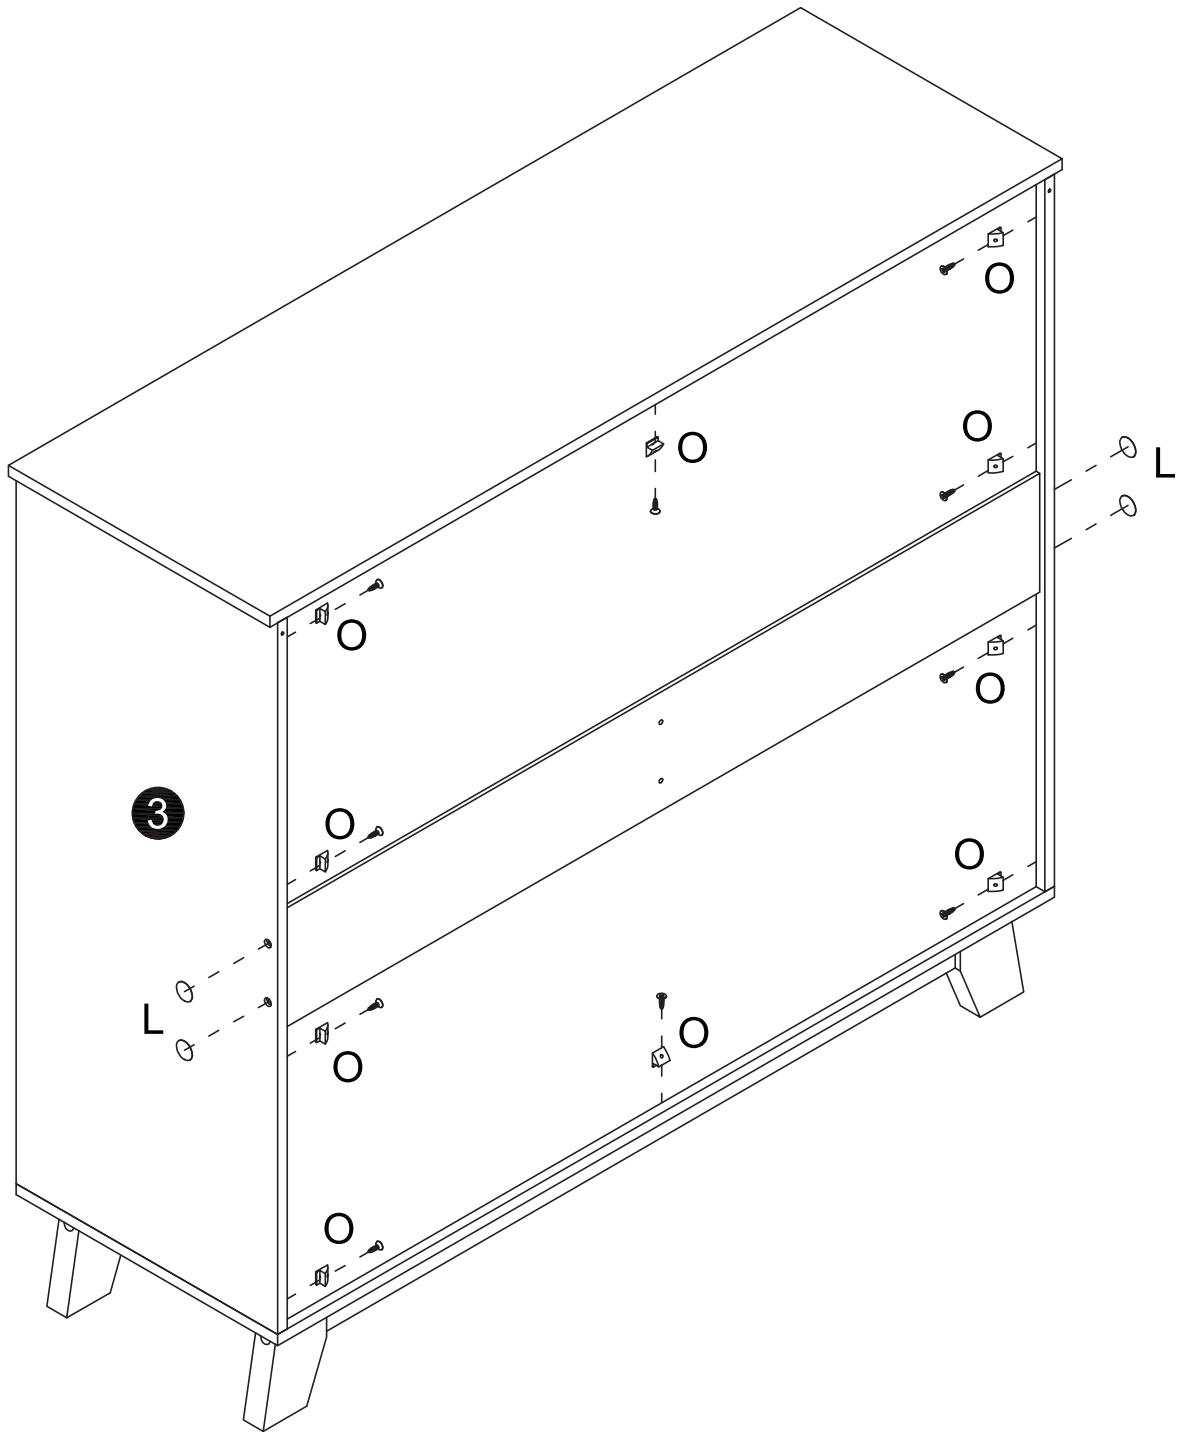

D x2



M x2



N x2




N-1




N-2

N-1

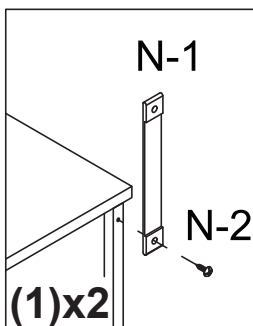

(1)x2

First fix the anti-rewind screw in the reserved hole of the product.

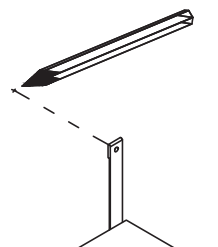

(2)x2

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

WALL



(3)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.


WALL



(4)x2


Then, put the expansion bolt into the hole

WALL

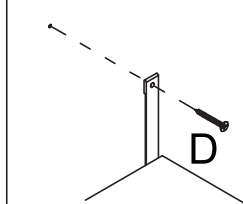


(5)x2

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

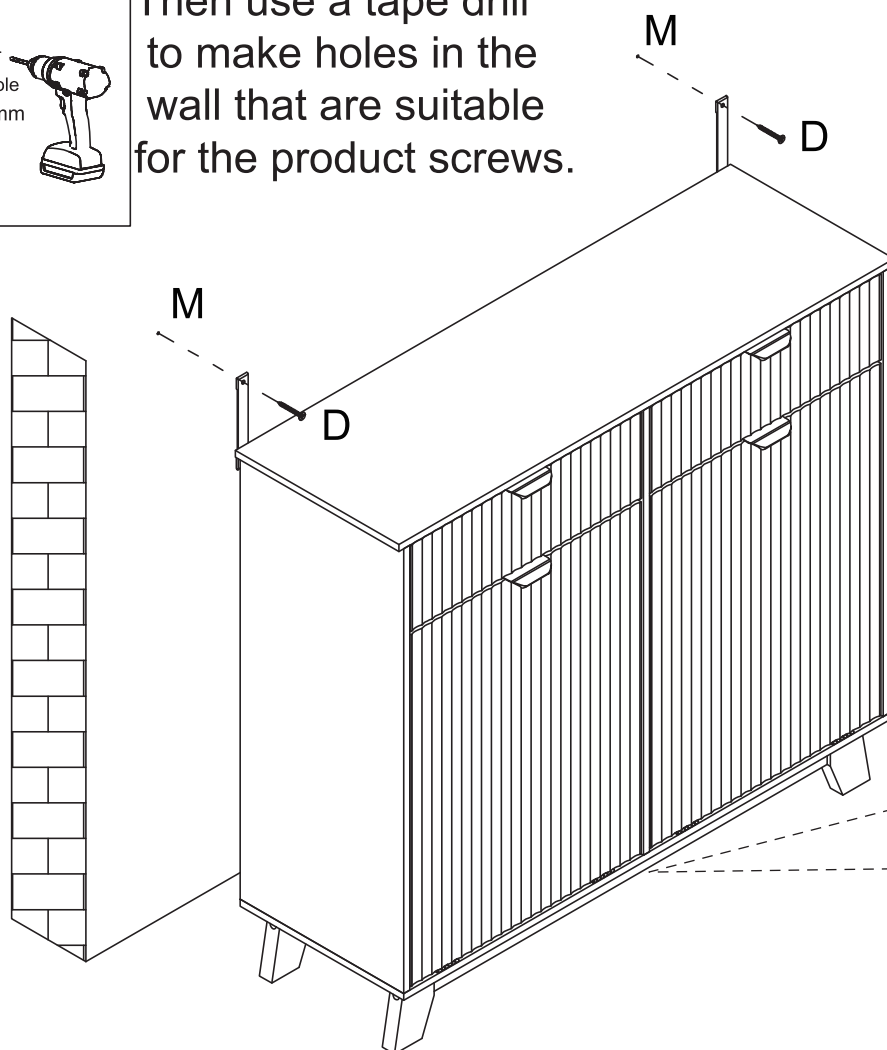

R

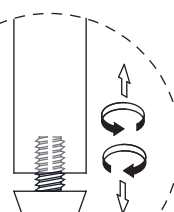

R

