


# INSTALLATION INSTRUCTION

x4

x16

x1

x2

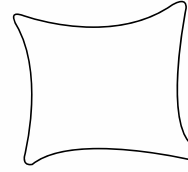

NOTE,PUT ALL THE SCREWS INTO THE  
HOLE SITE, AND THEN TIGHTEN THEM,  
DO NOT TIGHTEN ONE BY ONE

